

CYBER-SHOT® ACCESSORIES (Jan. '02)		DSC-P20	DSC-P30/P50	DSC-P3/P5	DSC-S75/ DSC-S85	DSC-F707
Starter Kit	ACC-KITFM50					X
	ACC-CSS				X	
	ACC-CSPW	X	X			
Carrying Case	LCS-VA1	X	X	X	X	X
	LCS-VA3	X	X	X	X	X
	LCS-VA2	X	X	X	X	X
Just Fit/Leather	LCS-FX					X
Just Fit/Leather	LCS-LSX				X	
	LCS-CSC				X	
Just Fit	LCM-PX			X		
Just Fit	LCM-SX				X	
	LCS-CP1	X	X	X		
Charger	AC-VQ11	X	X			
	DC-VQ11	X	X			
Dual Charger "C"	BC-VC10			X		
	AC-LS1	X	X	X		
	AC-VQ850D				X	X
	BC-V615				X	X
	BC-VM50				X	X
DC power supply	DCC-L50				X	X
Battery	NP-FM50				X	X
	NP-FS11	X	X			
	NP-FC10			X		
Lenses & Filter	VCL-0637H		X			
	VCL-R2037		X			
	VCL-HG0737X		X			
	VCL-HG2037X		X			
	VCL-MHG07A		X		X**	X
	VCL-ES06A		X			
	VF-R37K		X			
	VF-37PKS		X			
	VAD-S70				X**	
	VF-R52K				X**	
Lens Shade	LSF-H58					X
	VF-58CPK S					X
Flash DSC	HVL-F1000				X	X

		DSC-P20	DSC-P30/P50	DSC-P3/P5	DSC-S75/ DSC-S85	DSC-F707
Tripods	VCT-870RM				X	X
	VCT-R610	X	X	X	X	X
	VCT-D480RM				X	X
	VCT-D580RM				X	X
	VCT-D680RM				X	X
	VCT-TK1	X	X	X	X	X
ACC remote for DSC	RM-DR1				X	X
Marine Housing	MPK-P5			X		
	VF-MP5K			X		
Memory Stick® Digital Media	MSA-128A	X	X	X	X	X
	MSA-64A	X	X	X	X	X
	MSA-32A	X	X	X	X	X
	MSA-16A	X	X	X	X	X
	MSA-8A	X	X	X	X	X
	MSAC-FD2MA	X	X	X	X	X
	MSAC-PC2	X	X	X	X	X
	MSAC-US1A	X	X	X	X	X
	MSAC-US5	X	X	X	X	X
Digital Photo Printer	DPP-SV55	X	X	X	X	X
	DPP-SV77	X	X	X	X	X
	SVM-25LS	X	X	X	X	X
	SVM-25LW	X	X	X	X	X
	SVM-30SS	X	X	X	X	X
	SVM-30SW	X	X	X	X	X
	SVM-30SW09	X	X	X	X	X
**Requires VADS70						