

Sony Electronics

Customer Information Services Center

Fax-On-Demand

1-800-222-7669

Document Description	Revision Date	Doc Number	# of Pages
----------------------	---------------	------------	------------

Fax-on-Demand Index

Fax Index #502

March 15, 2001

Hookup Tips And Diagrams			
Video			
Connecting a Camcorder to your TV for Playback Using the RFU Adapter	Apr 1995	201	1
Connecting a Camcorder to a VCR using the RFU Adapter	Aug 1999	50015	1
Connecting a Camcorder to a TV using Audio/Video Cables	Aug 1999	52002	1
Dubbing a Tape from a Camcorder to a VCR	Apr 1995	204	1
Editing from a Sony Camcorder to a VCR	Aug 1999	50014	2
Recording a Television Program on a Camcorder using Monitor Output	Aug 1999	50016	1
How To Play Back A VCR In Stereo Hook Up Diagram	Aug 1999	55001	1
Connecting a VCR to a TV with RFU Input only	Aug 1999	55004	1
Connecting A VCR And Cable Hook Up Diagram	Aug 1999	52005	1
How To Connect A Cablebox, VCR, And TV Using RF Input Only Hook Up Diagram	Aug 1999	55002	1
How To Connect To A TV Without Video/Audio Input Jacks Hook Up Diagram	Aug 1999	50052	1
Using a Cablebox, VCR and TV to Record Programs and Playback Video Tapes	Apr 1995	210	1
To Record a TV Show on a VCR without a Tuner	Apr 1995	211	1
How To Setup Timer Activated Recording When Using A Cablebox Hook Up Diagram	Aug 1999	55003	2
How To Hookup A Sony Cable Box To A VCR And A Television.	Feb 2001	52084	2
Connecting One Cable Box, 2 VCR's and a Television	Apr 1995	213	1
Connecting Two Cable Boxes/Two Video Cassette Recorders and a TV	Apr 1995	214	1
Connecting a Cable Box, Two VCR's and a TV using Monitor Out	Apr 1995	215	1
How To Hookup A Sony Cable Box To A Television.	Feb 2001	52083	1
To Dub and Playback using 2 VCR's	Apr 1995	216	1
Using a Cable Box, 2 VCR's and a TV with 75 OHM Input Only	Apr 1995	217	1
Cable Mouse Control Set Up	Apr 1995	218	2
VCR Plus Setup	Apr 1995	219	4
VCR+ when only some Cable Stations are Scrambled	Apr 1995	220	1
VCR+ when all Cable Stations are Scrambled	Apr 1995	221	1
To Record and Playback using a VCR with a Cable Mouse	Apr 1995	222	1
Understanding Loop Outputs on a Monitor/Receiver	Apr 1995	223	2
Picture In Picture			
Connecting a TV and VCR for 1 Tuner PIP	Apr 1995	224	2
Connecting a Cable Box, VCR and TV for 1 Tuner PIP - If only Premium Channels are Scrambled	Apr 1995	225	2
Connecting 2 Cable Boxes, VCR and TV for 1 Tuner PIP - If all Cable Channels are Scrambled	Apr 1995	226	2
Connecting a VCR and TV to utilize 2 Tuner PIP	Apr 1995	227	2

Sony Electronics

Customer Information Services Center

Fax-On-Demand

1-800-222-7669

Document Description	Revision Date	Doc Number	# of Pages
Connecting a Cable Box, VCR and TV for 2 Tuner PIP - If only Premium Channels are Scrambled	Apr 1995	228	2
Connecting 2 Cable Boxes, VCR and TV for 2 Tuner PIP - If all Cable Channels are Scrambled	Apr 1995	229	2
Connecting 2-Line Cable Box, VCR and TV for 1 Tuner PIP - If only Premium Channels are Scrambled	Apr 1995	230	1
Editing			
To utilize the Edit Monitor Feature on selected VCRs	Apr 1995	231	1
Using the RME300/RME700 with a Camcorder and VCR with Control L	Apr 1995	232	1
To Dub from One VCR to Another	Apr 1995	233	1
Connecting Three VCRs and a TV for Dubbing	Apr 1995	234	2
Using Control L with an Editing Board	Apr 1995	235	1
Synchro Edit Feature	Apr 1995	236	1
Synchro Edit with VCR using Control S	Apr 1995	237	1
Synchro Edit using Control S	Apr 1995	238	1
Advanced Synchro Edit (EVS3000)	Apr 1995	239	1
Audio Insert	Apr 1995	240	1
Audio Dub	Apr 1995	241	1
RME100/V/VA at a Glance	Apr 1995	242	1
RME100/V/VA using Control L	Apr 1995	243	1
RME100/V/VA using Control S	Apr 1995	244	1
Using RME100V with Optional RMTE1VA	Apr 1995	245	1
RME100VA	Apr 1995	246	1
Audio			
Using your TV as a Center Speaker	Apr 1995	247	1
To Listen to a TV broadcast through HiFi Speakers	Aug 1999	52001	1
Hi-Fi General Surround Sound Hook Up Diagram	Aug 1999	54001	1
Enjoying Surround Sound	Apr 1995	249	1
Connecting a TV and VCR to a Surround Sound Receiver	Apr 1995	250	1
Connecting Dolby Surround Sound using your TV as a Center Speaker	Apr 1995	251	1
Connecting a Receiver to Passive Subwoofer	Apr 1995	252	1
Connecting a Receiver to an Active Subwoofer	Apr 1995	253	1
Using the SAVA3 with the TV as a Center Channel	Apr 1995	254	1
Connecting Personal Speakers	Apr 1995	255	1
Connecting Wireless Infrared Headphones	Apr 1995	256	1
Connecting the MDR1F510K or MDR1F710K	Apr 1995	257	1
About the AN1	Apr 1995	258	1
Connecting the AN1 to a Receiver without an External Antenna Input	Apr 1995	259	1
Improving Longwave and Mediumwave Reception	Apr 1995	260	1
DVD			
Connecting A DVD Player To A TV Hook Up Diagram	Aug 1999	52003	1

Sony Electronics
Customer Information Services Center
Fax-On-Demand
1-800-222-7669

Document Description	Revision Date	Doc Number	# of Pages
Television			
Connecting a VHF/UHF Antenna To A TV Hook Up Diagram	Aug 1999	52004	1
How To Connect A Camcorder To A VCR?	Sep 1999	55005	1
Digital Broadcast System (DBS) & Digital Satellite System (DSS)			
How To Connect A DBS (Satellite) Receiver To A TV Hook Up Diagram	Aug 1999	62008	1
How To Connect A DBS (Satellite) Receiver With A VCR Hook Up Diagram	Aug 1999	62007	1