


Video Camera Recorder **8**

CCD-F402

Operating Instructions


Before operating the unit, please read this manual thoroughly and retain it for future reference.

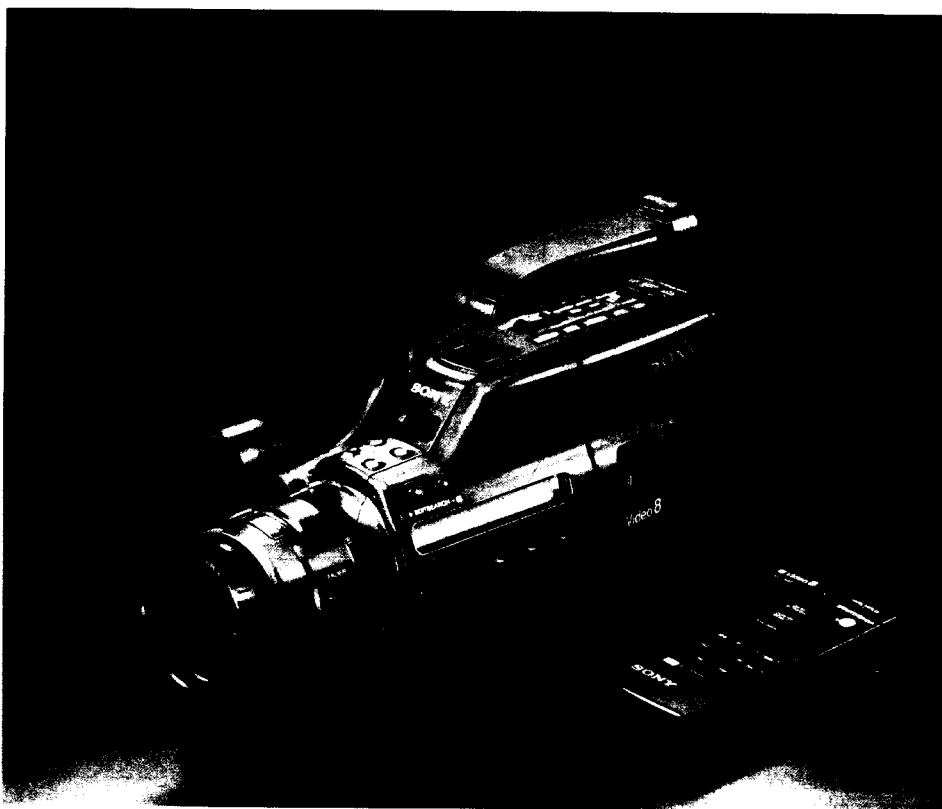

Video 8 Handycam

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

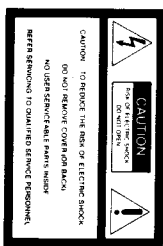

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided on the right hand. Refer to the serial number for service and repair. Sorry dealer regarding this product.









Model No. CCD-F-402
Serial No.

Table of Contents

Before You Begin	4
Introduction	4
About this manual	4
Check the included accessories	4
Before you start	5
Getting Started	6
Charging and installing the battery pack	6
Inserting the lithium battery	6
Setting the up and end	6
Inserting a tape	6
Adjusting the viewfinder lens	6
Setting the BEEP switch	6
How to record	12
How to play back & tape	12
Using the Remote Commander	16
How to get the most out of your battery pack	18
Connecting alternative power source	20
Using alkaline batteries	20
Using house current	21
Using car battery	21
Camera recording	22
Recording the date or time	22
Recording in a strong wind	22
Recording in a noisy area	22
Checking the last portion of a scene you just recorded (EDIT/SEARCH)	22
Hints for recording	23
Re-recording on a previously recorded portion (EDIT/SEARCH)	24
Inserting scene in the middle of a recorded tape	25
Checking recording in the viewfinder (EDIT/SEARCH)	26
Recording with an external microphone	27
Connecting a wired remote control unit	27
Pre-recording adjustment	27
Making manual adjustments	27
Focusing manually	28
Adjusting the white balance	31
Keeping the white balance setting (HOLD mode)	31
Compensating backlighting	32
Using the high-speed shutter	33
Using the portrait mode	34
Using the night scene	35
Using the special effects	36
Zooming	37
Close-up (Autocoupling in macro)	38
Flash in and fade out	40
Superimposing text	41
Playing back	50
Editing	54
Maintenance information	60
Tips to better camera recording	62
Using the remote commander	65
Indications inside the viewfinder and the display window	65
Troubleshooting	71
Specifications	75
Index	75
back cover	

Checking Supplied Accessories

Please check that the following accessories are supplied with your camcorder:

• Wireless Remote Commander (1)	• Size AA (R6) battery for Remote Commander (2)	• Battery pack NP-66H (1)
		
• AC power adapter AC-VID60A (1)	• Lithium battery CR2025 (1)	• RFU adapter RFU-90UC (1)
		
• Shoulder strap (1)	• Lens cap (1) (attached to the camcorder)	
		

Introduction

Thank you for purchasing a Sony Handycam® camcorder. With this product, you can produce home videos that are as clear as superior picture and sound quality. Your Handycam is designed with advanced features, but at the same time it is very easy to use. You will soon be producing home video that you can enjoy for years to come.

About This Manual

This manual will show you how to operate the unit. To get the most out of the features of the camcorder, please read this manual carefully. If you want to shoot immediately, please read the chapters, **Getting Started** and **Basic Camera Operation**. Once you are familiar with basic operations, you may want to proceed to the chapter, **Advanced Camera Operation**.

- When you are reading through this manual, please remember that buttons and settings on the camcorder are in capital letters.
e.g. Set POWER to CAMERA.
- Use "Identifying the Parts" as an index to looking for a function and operation according to the indication printed on the camcorder itself.

Before You Start

Before you can start recording, you need to:

 
1. Charge and install the battery pack.
2. Charge the lithium battery.
3. Set the date and time.
4. Insert a tape.
5. Adjust the viewfinder lens to your eyes.
6. Set the BEEP switch.

Let's go through these procedures step by step!

Charging and Installing the Battery Pack

Before you can use this camcorder, you need to charge and install the battery pack.

Charging the Battery Pack



- 1 Plug the AC power adaptor into a wall outlet.
- 2 Align the flat side of the battery pack with the line on the AC power adaptor.
- 3 Push down and slide the battery pack with the line on the AC power adaptor.
- 4 Set the CHARGE/VIEW switch to CHARGE.

Required charging time:

Type of battery pack	NP-60H (supplied)	NP-77H	NP-77	NP-55
Required charging time	100	140	120	60

(approx. minutes using AC voltage)

When charging is finished, the charge indicator will go out.


Important!

Use the battery completely before charging!

Before you recharge the battery, make sure the battery has been used at least once. Otherwise, the battery may not charge properly and may be damaged by excessive charging.

To use up the battery, remove the video cassette and simply slide POWER to CAMERA with the battery attached, and leave the camcorder until the CTJ mark appears blinking and a red lamp blinks in the viewfinder.

Installing the Battery Pack

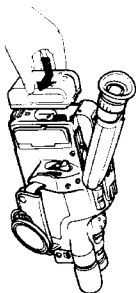

When you have finished charging the battery, install the battery pack as follows:

- 1 Align the flat side of the battery pack with the line on the camcorder.
- 2 Make sure that the arrow on the battery pack is close to the top of the camcorder.
- 3 Push down and slide the battery pack in the direction of the arrow.

Note

Make sure the battery is securely installed so that it does not fall. If the battery is not installed properly, the camcorder will not record accurately.

A fully charged battery pack lasts for:


Type of battery pack	NP-60H (supplied)	NP-77H	NP-77	NP-55
Battery life	85	110	90	50

(approx. minutes continuous recording when used normally)

When the battery becomes weak, the CTJ indication and red lamp blink in the viewfinder. Wait until they blink rapidly, then replace the battery pack with a fully charged one.



To remove the battery pack Slide BATT up, and at the same time, slide out the battery pack to the left.

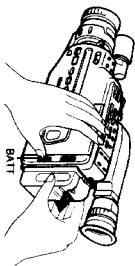

Installing the Lithium Battery

To keep a date and birth dates in the camcorder's memory as well as to activate the clock, lithium battery must be installed.

- 1 Use your fingernail to open the cover of the lithium battery compartment on the bottom of the camcorder.
- 2 Install the supplied CR2025 lithium battery with the + side facing out.
- 3 Close the cover.

Lithium battery life
The battery will last for approximately 1 year in normal operation. When the lithium battery becomes weak, the camcorder will blink in the LCD screen. When the battery is weak, you will see POWER to CAMERA. In this case, replace the battery with a Sony CR2025 or Duracell DL-2025. Use of any other battery may present a risk of fire or explosion. When replacing the lithium battery, keep the battery pack or other power source attached. Otherwise, readjustments of the date, time, time and birth dates will be necessary. Press the side of the battery in the direction as indicated for installation.



Warning
Battery may explode if misused. Do not recharge, disassemble or dispose of in fire.

Setting the Date and Time

Now, let's adjust the clock. Inside the camcorder to be able to superimpose date and time on video. Make sure that power source and lithium battery are attached.




- 1 Press the small green button on POWER and slide POWER to CAMERA.
- 2 Push the cover of the red button up until it snaps into STANDBY.
- 3 Press DATE (+) and TIME (NEXT) simultaneously for more than one and a half seconds until the date indication appears in the viewfinder.
DATE (+) and TIME (NEXT) now functions as + (to advance numbers) and TIME button functions as NEXT (to set).
- 4 Adjust the flashing digits of the year, month, day, and hour using DATE (+), and press TIME (NEXT).
Notes
• When you keep DATE (+) pressed, the digits advance faster.
• The year is set in 1991 and 1992. The month is set in 1991 and 1992. The day is set in 1991 and 1992. The hour is set in 1991 and 1992.
1991 - 1999 - 2000 - 2020
- 5 Adjust the flashing digits of minute using DATE (+).
- 6 Press TIME (NEXT) to set the second to "00".
The clock starts operating.

To correct date and time setting Repeat steps 3 to 6.


Inserting a Tape

Make sure that the battery pack or other power source is attached.

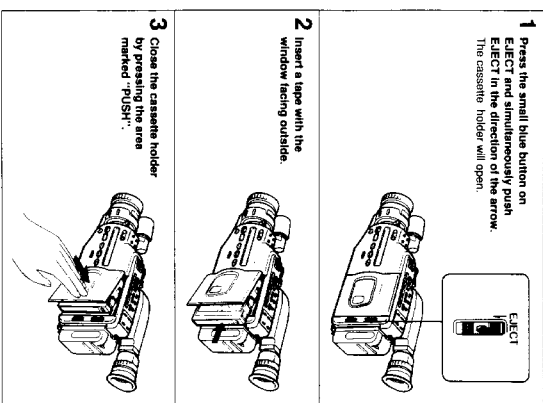


Adjusting the Viewfinder Lens

You may want to adjust the viewfinder lens to best fit your eyesight when you use this camcorder for the first time, or when you use it after someone else did. Make sure that a battery pack or other power source is attached to the camcorder.

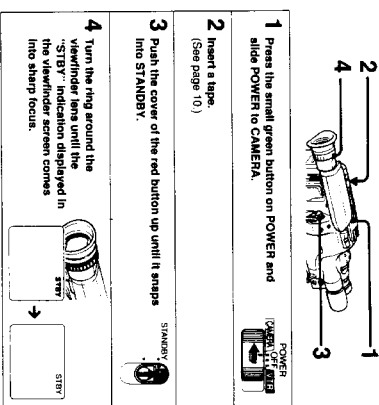

Setting the BEEP Switch

 This beep sound is to help you confirm when you start and stop recording. When BEEP is ON, the beep will sound once when you start recording and beep when you stop recording. It will also beep several times as a warning of any unusual conditions of the camcorder. If you want to deactivate the beep, set BEEP to OFF.




Notes

- Beep will not be recorded on the tape.
- For warning beep, see page 74.

Now it's ready for recording!

Before you record one-time events, make a trial recording to make sure that the camcorder is working perfectly.

When you use the camcorder as a still picture recorder, it is very easy to start recording scenes.

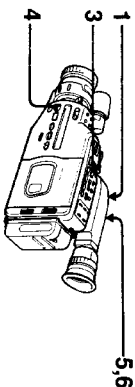

- 1 Hold the camcorder by putting your hand through the grip belt so that your thumb can easily press the red START/STOP button.
When you use the camcorder, press PUSH SLIDE and adjust the position and angle of the viewfinder.
- 2 Remove the lens cap and attach it to the grip belt.
- 3 Press the small green button on POWER and slide POWER to CAMERA.
This will put camcorder in camera recording mode.
- 4 Set AUTO LOCK to the green position.
This will make every adjustment automatic.



- 5 Push the cover of the red button up until it snaps into START/STOP.
When you use the camcorder, "AUTO LOCK" appears in the display window.



- 6 Press START/STOP (red button)

The camera is recording when the word "REC" appears on the viewfinder screen and the red lamps light in the viewfinder and on the camcorder. You can also confirm the start of recording with beep sound when you have the BEEP switch turned on.



Automatic recording

To stop recording momentarily

When you have finished recording

Ejecting the tape

About the sports finder

In the viewfinder you can see a black and white picture of what you are recording and information that indicates what the camcorder is now doing. With AUTO LOCK set to the green line, all the camera functions are on automatic (i.e. autofocus, auto iris, auto white balance) and the shutter speed is set at normal (1/60 second). Press START/STOP again, "STBY" appears in the viewfinder. It beeps twice when you have BEEP turned on.

- 1 Push the cover of the red button down to cover the START/STOP button.
- 2 Slide POWER to the center OFF position.

Make sure that you have attached the battery pack or other power source to the camcorder.

- 1 Press the small blue button on EJECT, and at the same time push EJECT in the direction of the arrow.
- 2 Take out the tape.
- 3 Press the PUSH mark on the cassette holder to close it.

This camcorder is equipped with the sports finder. As the focal length of this finder is long, you can monitor the picture while being away from the eyecup.

Caution

Please remember that you can only use 8-mm format video tapes with this camcorder, and that is not possible to use PCM recording/palbook available on some 8 mm recorders. The PCM sound recorded or after-recorded with other recorder cannot be played back with this camcorder. You will be able to record tapes in SP (standard play) mode only and play back tapes in both SP and LP (long play) modes.


How to Play Back a Tape

You can use this camcorder as a VCR by connecting it directly to your TV for playback. To use this feature, you must use the remote control for convenient control of the camcorder.

If Your TV Has Only an Antenna Input

There are several ways to connect the camcorder to your TV. Please check whether your TV has video/audio inputs. If your TV has only an antenna input, use the supplied RFU adaptor and AC power adaptor. The playback sound will be monaural. Make sure that the TV is turned off to prevent speaker damage before hooking up your camcorder.

If your TV has video/audio inputs, see page 90.

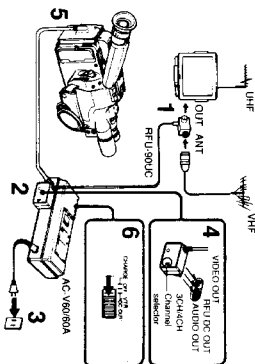


To add your camcorder connection to your TV which is already connected

- 1 Plug the supplied antenna cable into the antenna input of your TV.
- 2 Plug the tail end of the RFU adaptor marked ANT to the antenna input of your TV. Re-wire the antenna cable you unplugged to the RFU adaptor jack marked ANT. This way, you can switch between TV broadcasting and your home video playback without re-wiring.
- 3 Connect the RFU adaptor to the AC power adaptor.
- 4 Set the channel selector on the RFU adaptor (and your TV channel) to 3 or 4 CH or the VTR channel, whichever is not active (usually in your area).
- 5 Attach the connecting plate of the AC power adaptor to the camcorder.
- 6 Make sure the CHARGE/VTR selector on the AC power adaptor is set to VTR position.

You may want to keep the AC power adaptor and RFU adaptor connected to your TV once you have established the connection. This way you can easily connect your camcorder to your TV just by attaching the connecting plate of the AC power adaptor to the camcorder. (Steps 5 and 6)

When you want to switch to regular TV program, set the CHARGE/VTR selector to OFF or turn off the power of the camcorder.

How to Play Back a Tape

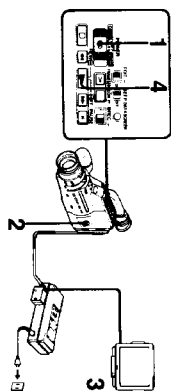

- 1 Press the small green button on POWER and slide POWER to VTR.

- 2 Insert a tape. (If it is not in the camcorder.)

- 3 Turn on the TV and select the channel that you adjusted the RFU adaptor (3 CH or 4 CH). If you are connecting with video/audio inputs, set TV's TV/VIDEO selector to VIDEO.

- 4 Press \blacktriangle .




To stop playback, press \square .
To rewind the tape, press \blacktriangleleft .
To advance the tape rapidly, press \blacktriangleright .

When you have finished playback

- 1 Slide POWER to the center OFF position.
- 2 Set CHARGE/VTR on the AC power adaptor to OFF.


Using the Remote Commander

By using the Remote Commander, you can record yourself with your friends or family, or conveniently control the playback of your tape from a distance.

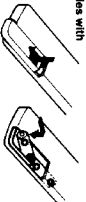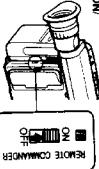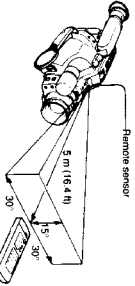- 1 Insert two size AA (R6) batteries with correct polarity.
 
- 2 Set **REMOTE COMMANDER ON/OFF** on the camcorder to ON.
 
- 3 **Set POWER on the camcorder as follows:**
 - When recording, 1) press the small green button on **POWER** and slide **POWER** to **CAMERA**, 2) push the cover of the red button up until it snaps into **STANDBY**.
 - When playing back, slide **POWER** to **VTR**.
- 4 Point the Commander to the remote sensor of the camcorder and press the appropriate button on the Commander.
 

(Maximum distance and angle for remote control)

Getting familiar with some buttons

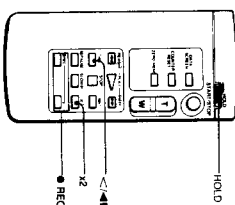

HOLD switch:

When you slide the switch in the direction of the arrow, all the buttons will become inoperable to prevent any misoperation when you accidentally press the buttons.

X2 (reverse direction/reverse frame) and **X2** (double speed playback) buttons

You can use the functions of these buttons only with the Commander.

REC buttons

When you record in the **VCR** mode, press these two buttons simultaneously. In normal operation, batteries will last up to six months. If the camcorder does not operate properly, the batteries might be exhausted. Replace both batteries with new ones.

Remove the batteries when you will not use the Commander for a long time.

When you connect the receiver of a remote control kit (not supplied) to the **REMOTE** **RECEIVER** connector, be sure to set **REMOTE COMMANDER ON/OFF** on the camcorder to **OFF**.

Battery life

To avoid damage from possible battery leakage

When you connect the receiver of a remote control kit

How to Get the Most out of Your Battery Pack

How to Prepare the Rechargeable Battery Pack

Have sufficient battery life. Battery life, indicated in this manual as recording time of the camcorder, is measured by the continuous times as much recording than you have planned.

Battery life is shorter in a cold climate. Battery efficiency is decreased and the battery will be used up more quickly.



 
Turn STANDBY of the camcorder off when not recording to save battery power.

A smooth transition between scenes can be made even if recording is stopped. While positioning the subject or selecting an angle, or looking through the viewfinder lens, the lens moves automatically and the battery is used. The battery is also used when a tape is inserted or removed.



When the Rechargeable Battery Pack Should Be Replaced

When the red mark and the viewfinder change from slow blinking to rapid blinking while you are recording.



Notes on Charging

Before using the battery pack, charge it sufficiently. Make sure you use up the battery before recharging.

- A brand new battery pack is not charged.
- If recording is completed before the red mark appears in the viewfinder, it is recommended to charge the battery pack. Press the cover of the red button up until it snaps into STANDBY, and leave the camcorder until the red mark blinks rapidly.
- Repeated charging without using up the battery may cause lowering of battery capacity. However, the original capacity can be recovered if you fully discharge (use up) and charge the battery again.



Recharge the battery pack after long storage.

If the battery pack is charged fully but not used for a long time (about 1 year), it becomes discharged. Charge it again but in this case the battery life will be shorter than normal. After several charging and discharging cycles, the battery life will recover its original capacity.

Keep the Terminals Clean

If the terminals (metal part on the back) are dirty, the battery connection will be shortened.

When the terminals are not clean or when the battery pack is not connected properly, the battery life will be shortened. This will improve the contact condition. Also, wipe the + and - terminals with a soft cloth or paper.



Notes on the Rechargeable Battery Pack

Why the battery pack heats up?

During charging or recording, the battery pack heats up. This means energy has been generated and chemical change has occurred inside the battery pack, and this is not dangerous.



How to care for the battery pack

- Remove the battery pack from the camcorder after using it, and keep it in a cool place. When the battery pack is in the camcorder, a small amount of current flows to the camcorder even if the CAMCORDER is turned off. It causes the battery pack to become warm. If the battery pack is left in the camcorder, it will become even warmer. The battery pack is always discharging even when it is not in use after charging.
- Thus, it is recommended you charge the battery right before using.

How to use the switch on the battery pack

This switch is provided so that you can prevent the charging condition. Set the switch to the "no mark" position when charging is completed. Set the switch to the "red mark" position when the battery is used up.



How many times can the battery pack be recharged?

It can be fully charged and discharged about 500 times under normal temperatures. If the red mark blinks rapidly just after turning on the camcorder with a fully charged battery pack, the battery pack should be replaced with a new fully charged one.

Recommended temperatures during charging

Lower temperatures require a longer charging time. Charging under temperatures ranging from 10°C to 30°C (50°F to 85°F) is recommended.

Connecting Alternative Power Sources


You can choose any of the following power sources for your camcorder: battery pack (see page 6), alkaline batteries, house current, and 12/24 V car battery. The appropriate power source for you to choose depends on the places where you want to use your camcorder.

Place	Power source	Accessory to be used
Outdoors	Battery pack	Battery pack NP 66H (supplied), NP 77H, NP 77 or NP 55
	Alkaline batteries	Battery case EBP-55
Indoors	House current	AC power adaptor AC-V60/60A (supplied), AC-V55 (optional), AC-V50 (optional)
In the car	12 V or 24 V car battery	DC pack DCP-77 or DCP-55

Note on power sources
Disconnecting the power source or removing the battery pack during recording or playback may damage the inserted tape. In this case, supply the power again immediately.

Using Alkaline Batteries

The EBP-55 battery case (not supplied) is required.

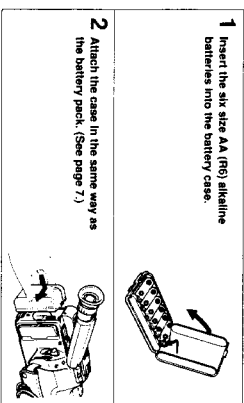

Battery life

The battery life is approx. 40 minutes (continuous recording when used indoors).

To remove the battery case


Proceed in the same way as the battery pack. See page 7.

Notes on battery life

- Batteries will not last as long in cold places.
- No indication appears in the viewfinder to warn of a weak battery.

Using House Current


The supplied AC-V60/60A AC power adaptor is required.

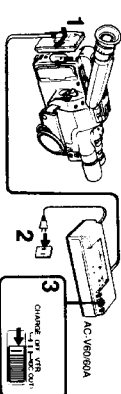

- Align the flat side of the connecting plate with the line on the camcorder, and push down and slide it in the direction of the arrow.
- Connect the AC power adaptor to a wall outlet.
- Set the CHARGE/VIEW selector of the AC power adaptor to VIEW. See the instruction manual of the AC power adaptor for details. Remove it the same way as you do with the battery pack. See page 7.

Using Car Battery

 The DCP-77 DC pack (not supplied) is required.



To remove the DC pack

Proceed in the same way as the battery pack. See page 7.


- AC-V55 AC power adaptor: You can charge two battery packs continuously using the adaptor and the house current. By connecting the adaptor with the DCC-16AN car battery cord, you can use your camcorder with the car battery.
- DCP-77 DC pack: You can charge a battery pack on 100-240 V AC.
- DC-V50 car battery charger: You can charge a battery pack through the cigarette lighter socket.

Camera Recording

In the previous chapter "Basic Camera Operation," you learned the basic recording operations. This section shows you how to record the date or time, record in a strong wind, re-record a picture, prevent accidental erasure, and more.

Recording the Date or Time

Date or time can be superimposed on your recording.

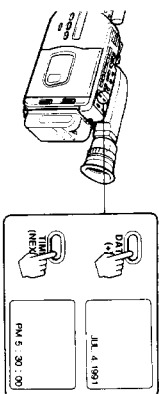

During camera recording or when in standby mode, press **DATE** for date

 
or **TIME** for time.

The date or time displayed in the viewfinder is recorded with the picture.

Press **DATE** or **TIME** again.

The picture recording continues.

Recording in a Strong Wind




Set **BUILT-IN WIND**. The wind noise will be reduced. Wind mark appears in the viewfinder.

After recording, return it to the green position.

For Low-position Recording

 You can also record from low position using separate **REC START/STOP** button to get an interesting recording angle.




Adjust the viewfinder (it can be turned 90 degrees up)

Press **REC START/STOP** in front of the camcorder.

To stop recording, press it again.

Checking the Last Portion of a Scene You Just Recorded (EDITSEARCH)

You can check the last portion of a scene you just recorded without changing the setting of the **POWER** switch using **EDITSEARCH**.

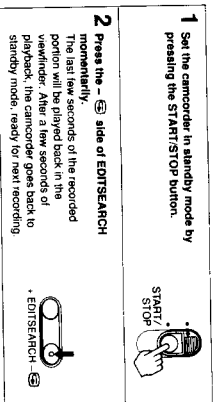

1 Set the camcorder in standby mode by pressing the **START/STOP** button.

2 Press the **EDITSEARCH** button.

The last few seconds of the recorded portion are played back in the viewfinder. After a few seconds of playback, the camcorder goes back to standby mode, ready for next recording.

Hints for Recording

If the tape reaches near the end during recording

Notes on recording

Note on standby mode

Note on light sources

The **DS** indication and the red lamp in the viewfinder and the camera recording battery lamp on the camcorder blink slowly when the tape reaches its end, blinking becomes rapid and beeps sound for about five seconds (if **BEF** is set to ON).

 
- To record from the beginning of the tape, run the beginning of the tape for about 15 seconds before recording. This will avoid missing the starting point when the tape is played back.
- When moving from indoors to outdoors or vice versa, push the cover of the viewfinder and flip it into **STANDBY** and point the camcorder at a whole object for about 10 seconds so that the white balance is properly adjusted.




If you leave the camcorder in standby mode for 5 minutes or more, the camcorder will be automatically powered off. To resume standby mode, push the cover of the viewfinder down once and push it up again. To start recording, press **START/STOP** directly.

If you are shooting a subject in bright conditions just after shooting in a dark place, the picture may not appear in the viewfinder. In this case, point the camcorder to the other direction.

Re-recording on a Previously Recorded Portion (EDITSEARCH)

You can re-record a scene over the last recorded portion using EDITSEARCH. The previously recorded portion will be erased.



 
- 1** Push the cover of the red button up until it snaps into **STANDBY**.

- 2** Look in the viewfinder and find the point from where you want to begin re-recording.
Keep pressing the + side of **EDITSEARCH** continuously to advance the picture at a normal playback speed, or the - side to reverse the picture.

- 3** At the desired point, release **EDITSEARCH**.
- 4** Press **START/STOP**.
Re-recording begins at the point you released **EDITSEARCH**.
A smooth transition between scenes can be made after the pre-recorded portion even if the cover of the red button is pushed down and pushed up, or even if the power is turned off and on again, provided that the tape is not removed.






 



To pause recording

Press **START/STOP** again.
Push the cover of the red button down to cover **START/STOP**.

Inserting Scene in the Middle of a Recorded Tape

 You can insert a scene in the middle of a recorded tape by setting the starting point and ending point. A previously recorded portion will be erased.



- 1** Press the small green button and slide **POWER** to **CAMERA**.

- 2** Push the cover of the red button up until it snaps into **STANDBY**.

- 3** While looking in the viewfinder, keep pressing the + or - side of **EDITSEARCH** and release the button where you want to end the insertion. The camcorder is set to standby mode.

- 4** Press **COUNTER RESET**.
The counter is reset to zero.


- 5** While looking in the viewfinder, keep pressing the - side of **EDITSEARCH** and release the button at the point where you want to start the insertion.

- 6** Press **ZERO MEM**.
The inserting point is stored in memory.



(To be continued)

7 Press START/STOP

Insert recording begins. The insert recording stops automatically at the counter zero point.



Press ZERO MEM


To cancel the ZERO MEM

The picture may be distorted at the ending point when played back.

Note

Checking Recording in the Viewfinder (EDITSEARCH)

You can check the recorded picture in the viewfinder using EDITSEARCH. Sound cannot be monitored.

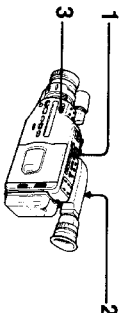

1 Press the small green button, and slide POWER to CAMERA.



2 Push the cover of the red button up until it snaps into STANDBY.



3 Keep pressing the + or - side of EDITSEARCH to view the playback picture:
+ side for the playback picture - side for the playback picture in reverse.



 
Release EDITSEARCH.

1. Connect an earphone to the ϕ (earphone) jack.
2. Press the small green button and slide POWER to VTR.
3. Press \blacktriangleleft to rewind the tape and press \square where you want to stop.
4. Press \blacktriangleright to start playback.

To stop playback while viewing the playback picture in the viewfinder


Recording with an External Microphone

You can connect an external microphone (not supplied) to the MIC jack. This jack is located on the side of the camcorder. The microphone has two plugs: connect the DC IN plug to the DC OUT jack. Attach the microphone to the accessory shoe of the camcorder.



Connecting a Wired Remote Control Unit

 When you connect a wired remote control unit or editing controller (not supplied) to the ϕ REMOTE control connector, you can operate your camcorder from a distance.



About ϕ (LANC)

ϕ stands for Local Application Control Bus System. The ϕ connector is used for controlling the tape transport of video equipment and peripherals connected to it. This connector has the same function as the connectors indicated as CONTROL L or REMOTE.

Preventing Accidental Erasure

Slide the tab on the cassette to expose the red mark. This will prevent accidental recording. To re-record on this tape, slide the tab back out covering the red mark. If you try to record with the red mark exposed, the SQ and A indications blink in the viewfinder and you will hear beep sound about five seconds.



Never insert anything in the small holes on the rear of the cassette. These holes are for the tape and in their cases and keep them in an upright position to prevent intrusion of dust and uneven winding.

Making Manual Adjustments

The camcorder's automatic functions offer you worry-free operation under most shooting conditions. But in some circumstances, manual adjustment is better for effective recording. You can manually adjust the following items with this camcorder:

- Focus
- White balance
- Back light compensation
- Shutter speed

In addition, when you use the PROGRAM AE (Auto Exposure) function under the manual mode, you can get a portrait or clear picture in the still and slow motion playback.

What is PROGRAM AE (Auto Exposure)?

Program A6 automatically selects just the right combination of shutter and aperture settings and gives you creative control of depth of field (distance range of object that will be in sharp focus). There are two preprogrammed modes: Portrait and Sports. (See pages 35 and 36.)

Function of the AUTO LOCK switch

When you set **AUTO LOCK** to the green position, while brake, back light and starter speed is returned to the normal setting regardless of the control setting. And focus is returned to auto focusing. Turning on the **AUTO LOCK** switch disables these control buttons. Turning off (at the lower white position) the **AUTO LOCK** switch does not automatically result in setting all of these items to manual. This merely enables the control buttons to be set manually. Some shooting situations may call for using some items manually, while others call for using them automatically.

As long as you do not remove the battery, even if you set **POWER** to **OFF**, the previous manual settings are retained.

Focusing Manually

In the following cases you would obtain better results by adjusting the focus manually.



Insufficient light



Too much brightness



Subjects with little contrast-wall, sky, etc.



One subject is close; the other is in the center, but at a distance.



subjects beyond this. In
or another subject passed
in front of the camcorder



Horizontal stripes



Subject through frosted glass



Bright subject
reflecting light



High contrast behind the subject (The background may be focused.)

 
When you use conversion lenses or effect filters
When shooting in close-up (Macro)







**When shooting a stationary subject using a tripod
To save battery wear**

- The shutter speed is changed, or the back light adjustment is changed to manual mode.
 - Lighting conditions change quickly.
 - Zooming is done from wide-range to telephoto.
- This camcorder keeps in focus by referring to the picture contrast, which is weak in the above situations.

How to focus manually

When adjusting focus manually, best way is to first adjust at telephoto position before recording, then set the desired zoom angle. Let's go through step by step.



- 1 Set AUTO LOCK to the lower position.**

- 2 Press FOCUS.**
The  indication appears in the viewfinder.

- 3 Turn the manual zoom lever fully to the telephoto position.**

- 4 Turn the focus ring to achieve sharp focus.**

- 5 Set the desired shot length using the manual zoom lever, while pressing the grey button for wide-angle.**


Shooting with autofocus momentarily

While shooting with manual focusing, press **PUSH AUTO**. The autofocus functions **while you are pressing the button**. When you release the button, manual focusing will be resumed. Use this button when you change the focus from one subject to another. The focusing performs naturally.


 













 - The previous settings except for focusing are retained.
- When shooting in relatively dark places such as indoors, the depth of field in proper focus is very shallow. For best results, shoot at wide angles after focusing in telephoto.
- When shooting a scene with lots of movement in bright light, set the zoom lever to the wide angle position and the focus ring to 2 to 3 m (7 to 10 ft).

Some helpful hints


Adjusting the White Balance

What is white balance?

White balance adjustment means to get most natural color temperature under certain lighting condition. In some shooting cases, you would obtain better results by adjusting the white balance manually.

Conditions	Indication in the viewfinder
 Lighting conditions change quickly	 (indoor)
 Too bright, such as in photograph studios	
 Monochromatic subject or background	HOLD
 Under a sodium lamp	
 Under a mercury lamp	
 Under a color matching fluorescent lamp	 (outdoor)
 Recording outdoors: a night view, neon signs or fireworks	
 Recording outdoors: scenes after sunset or before sunrise	

How to adjust the white balance

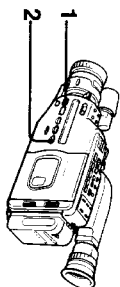

1 Set AUTO LOCK to the lower position.

AUTO LOCK

2 Select the desired white balance mode by pressing WHT BAL.
Each time you press the button, the indication in the viewfinder and the display window changes as follows:
No indication → HOLD → * → →

WHT BAL

*

Note on manual adjustments

When moving from indoors to outdoors, or vice versa, set AUTO LOCK to the green position and adjust the white balance in auto mode, then reset the white balance manually.

Keeping the White Balance Setting (HOLD Mode)

What is the HOLD mode?

 
In the HOLD mode, the camcorder automatically adjusts the white balance according to the color temperature of the subject's light source and keeps that setting during recording. When recording some subjects with different color temperatures (when lighting condition changes often), use the HOLD mode. Then, you can achieve a recording with natural colors without being affected by the surroundings.

- 1 Set AUTO LOCK to the lower position and press WHT BAL to set to Auto (no indication).
- 2 Point at and record a white, flat object such as a white wall, or paper, if you cannot find a white object, you may want to attach the lens cap and direct the camcorder to light sources.
- 3 Press WHT BAL.

The HOLD mark appears in the viewfinder.
When you change the battery pack or setting of the white balance, or the light source is changed, you need to set to the HOLD mode again. In this case, follow the procedures above again.

Compensating Backlighting

In this camcorder, the exposure is automatically controlled. However, when shooting a subject that is backlit, that is, if the light source is coming in from the back of the subject, use the BACK LIGHT button to get natural exposure.



1 Set AUTO LOCK to the lower position.

AUTO LOCK

2 Press BACK LIGHT.
The "L" indication appears. If it does not appear, press the button again.

BACK LIGHT

Subject is too dark because of backlight.

With backlight compensation

→

Be sure to release this adjustment condition by pressing BACK LIGHT again. [The "L" indication goes out.]
Otherwise, picture will be too bright under normal lighting condition.

Using the High-Speed Shutter

When you record a fast moving subject, choose a higher shutter speed. The movement will look clearer when played back in the pause mode. Remember that you need enough lighting to use high speed shutter.



How to select the shutter speed



- 1 Set AUTO LOCK to the lower position.**
Make sure that neither nor appears in the display window.
- 2 Press SHUTTER SPEED repeatedly until the desired shutter speed indication appears.**
SHUTTER SPEED
300
[No indication (1/60) → 100 (1/100) → 250 (1/250) → 4000 (1/4000) → 2000 (1/2000) → 1000 (1/1000)]

Example use	Recommended shutter speed
• On clear days, recording golf or tennis swing (To view the hit)	1/4000 or faster
• Ball clearly in the still picture mode, still (1/4000)	1/2000
• On overcast days, recording a moving carpool or other coaster	1/1000 or faster
• Recording outdoors from inside a moving vehicle (or stable shooting)	1/250
• Reduced of the ND2 filter (To reduce the exposure level to about 1/100)	1/100
• Recording motor sports (for stable shooting)	

Notes

- When you select shutter speed 1/250 or faster, record under sunlight or use a video light.
- When you record a TV screen with certain shutter speeds, the brightness of the screen will be reduced.
- When you shoot a very bright subject at a faster shutter speed, a light vertical, belt like line ("smear") may appear on the screen.
- When you record at certain shutter speeds under a light discharged tube, such as a fluorescent lamp, sodium lamp or mercury lamp, the brightness of the recorded picture may vary.

Using the Portrait Mode

In the portrait mode, the object is in focus and the background is out of focus. Therefore, you can use this mode to highlight the subject. The opening of the lens and the shutter speed is automatically adjusted to maintain the appropriate exposure according to the subject. The portrait mode is most effective to be used outdoors.

You may want to use the portrait mode when shooting the following subjects:

- a still subject such as person or flower
- zooming in a subject in the telephoto mode
- subjects behind such obstacles as net

How to set to portrait mode



- 1 Push the cover of the red button up until it snaps into STANDBY.**
STANDBY
- 2 Set AUTO LOCK to the lower position.**
AUTO LOCK
- 3 Press PROGRAM AE until appears in the display window.**
PROGRAM AE
- 4 Press START/STOP.**
Recording with the portrait mode starts.
START/STOP

To resume the automatic mode
Hit for effective camera work

Press PROGRAM AE until neither nor appears in the display window or set AUTO LOCK to the green position.

Use of the portrait mode in the following method will gradually bring the background out of focus while keeping the object in focus.

- 1 Press PROGRAM AE until appears in the display window.
- 2 Set AUTO LOCK to the green position and start recording.
- 3 The camcorder will enter the portrait mode and brings the background out of focus.

When recording under fluorescent, sodium, or mercury lamp, the brightness of the recorded picture may vary, or the color of the recorded picture may become unnatural.

Using the Sports Mode

In the sports mode, you can record subjects moving at high speed clearly, providing a high quality picture even when the subject is in motion. The shutter speed and the opening of the iris is automatically adjusted to maintain the appropriate exposure according to the speed of the object. The sports mode provides more effective recording than you can achieve by using the SHUTTER SPEED button.

- You may want to use the sports mode when shooting the following subjects:
- outdoor sports scene such as football, tennis, or golf
 - recording a landscape in a moving car



- 1 Push the cover of the red button up until it snaps into **STANDBY**.
- 2 Set **AUTO LOCK** to the lower position.
- 3 Press **PROGRAM AE** until **AE** appears in the display window.
- 4 Press **START/STOP**. Recording with the sports mode starts.

To resume the automatic mode

Hint for effective camera work

Notes

 
- The sports mode is effective under sufficient lighting, such as under sunlight. When used under extremely dark conditions, the shutter speed may not be shifted to high speeds.
- When recording under fluorescent, sodium, or mercury lamp, the brightness of the recorded picture may vary, or the color of the recorded picture may become unnatural.

Using the Special Effects

You can get a professional-looking home video using these special effects: zoom, close-up, fade-in and fade-out.


Zooming

You can change the size of the subject in the scene. Use zooming to focus manually or to decide the shooting angle. Also use "zoom-in (Telephoto)" for dramatic close-ups. Use "zoom-out (Wide angle)" for panoramic long shots. Most common mistake, however, is using zoom-in or zoom-out too often during recording. For natural recording, you may want to set the zoom first and then start recording.




Power zooming

You can zoom using motorized power zoom or manually with zoom lever. Use the power zoom for smooth and constant zooming. Press the T side of the power zoom button for telephoto (subject appears closer) and the W side for wide angle (subject appears farther away).

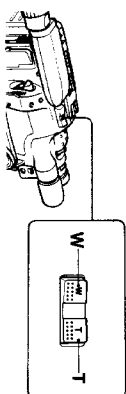

Zooming manually

 Use the manual zoom to create a dramatic effect or to change zoom angle quickly. Turn the manual zoom lever upward for telephoto and downward for wide angle. Be sure to keep pressing the gray button on the lever when turning it downward.




Focal length of this camcorder

The focal length is 8.5 mm to 88 mm (1/2 to 2 1/4 inches). This means that the distance from the lens to the subject is converted into the focal length of a 35 mm still camera.


Close-up (Autofocusing in Macro)

Even small subjects, such as flowers, insects and photographs can fill the screen with autofocusing in macro.

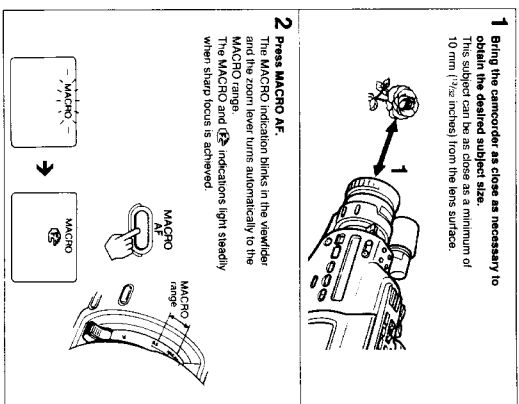

To release this adjustment setting

 Press the T side of the power zoom button or return the zoom lever to the ordinary range



If the MACRO indication lights steadily, if sharp focus cannot be achieved within 30 seconds. In this case, press MACRO AF again to re-function autofocusing sharply.

The MACRO indication lights steadily if sharp focus cannot be achieved within 30 seconds. In this case, press MACRO AF again to re-function autofocusing in macro. If you still do not get a sharp focus, manual focusing is recommended (see page 30). Adjust it after the MACRO indication lights steadily.

To keep autofocus functioning

Keep MACRO AF pressed. Contrary to the normal autofocusing, autofocusing in macro is released each time the sharp focus is achieved.

Notes

- This function has no connection with the AUTO LOCK switch. You can use autofocusing in macro while manually adjusting the ordinary focus, etc.
- Do not press the power zoom button while the zoom lever is moving for autofocusing in macro. Otherwise, autofocusing is released.

Manual focusing in macro


1 Turn the zoom lever to the MACRO range without pressing the gray button on the zoom lever.

The MACRO indication lights up in the viewfinder.

2 Turn the zoom lever within the MACRO range to focus sharply.

Remove the lens hood. Hold the focus ring and turn the hand by pressing it. The focus ring is the same when attaching/removing a filter or conversion lens (not supplied).

If the lens hood touches the subject

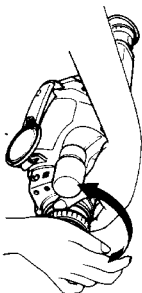

Recommended accessory

 
When shooting in macro, the depth of field is very shallow, so pay attention to focusing. To keep the subject in focus, use a tripod.

Using the Special Effects


Fade-In and Fade-Out

You can fade-in or fade-out to give your recording a professional appearance. When fading-in, the picture will gradually appear from black. The sound will also be gradually increased. When fading-out, the picture will gradually fade to black. The sound will be decreased.

FADE
IN




FADE
OUT

 

To fade-In

1 Push the cover of the red button up until it snaps into STANDBY .	
2 Press FADER .	
3 Press START/STOP . Fade-in is performed and recording will start.	

 To fade-out



1 While recording, press FADER .	
2 Press START/STOP to stop recording. Fade-out is performed and then recording stops.	

To cancel the fade-in/out function

If you want to use the fade-in/out function repeatedly

When the **datetime** (page 22), **title** (page 44), or **age** (page 49) is displayed

Start from step 1 each time.

The **title**, **datetime**, or **age** does not fade-in or fade-out.

SuperImposing Text

You can superimpose your own hand-written message or graphics over the scene during recording or playback. You can also superimpose how many years and months have passed since your child's birthday, or the date of a memorable occasion. Remember that information you want to superimpose must first be stored in the camcorder.

Title superimposing




Superimposing Text

Storing a Title in Your Camcorder

You can choose from eight colors for your title. Before you store the title, make a title card. Use pen, white card and write a title with a dark-colored marker in thick letters. Before you begin, make sure that the lithium battery is installed.

How to store

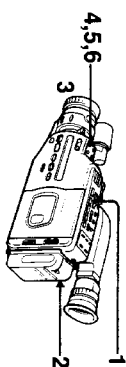

1	Press the small green button on POWER and slide POWER to CAMERA .	
2	Push the cover of the red button up until it snaps into STANDBY .	
3	Point the camcorder to the title card and adjust the focus.	
4	Press MEMORY to store the title.	
5	Press COLORMODE to select the title color. Each time you press the button, the indication changes as follows: WHITE (white) → BLUE → GRN (green) → CYAN → RED → BLK (black) → YEL (yellow) → MAG (magenta)	
6	Press ON/OFF to turn off the title.	

To check the title
Press **ON/OFF** in the standby mode. To turn off the title, press the button again.

Putting a Title on Your Tape

What you can do with the title

Various display modes of the title


- You can scroll your title like scrolling credits in a movie.
- You can reverse the title.
- You can record the title on the connected VCR when you edit a tape.
- In addition to superimposing a title at the point you want, you can automatically display or clear the title. The easiest way to use this method is at the beginning or at the end of the tape. (Auto-superimposing)

Display mode	Indication in the viewfinder
Scrolling up the title The title scrolls up and stops at the center.	+
Scrolling down the title The title scrolls down and stops at the center.	+
Reversing the title with the picture	B
Scrolling up the reversed title	B+
Scrolling down the reversed title	B+
Normal display mode Auto-superimposing	No indication L AUTO

Superimposing Text

How to superimpose

 The following shows how to superimpose text using an example in which the title in cyan scrolls up.



- 1 Press COLORMODE to select the display mode of the title in the standby or playback pause mode.**
(For display modes, see page 43.)
- 2 Press ON/OFF at the point you want to insert the title in the standby mode, during recording, in the playback pause mode or during playback.**
You can choose the title color by pressing COLORMODE. Each time you press the button, the color indication changes.
- 3 Wait for a while and press ON/OFF again.**
The title will go out.

The color and the display mode indications in the viewfinder are not recorded.

The title goes out. After performing the editsearch or recording review function, the title appears again.

You can scroll the title only when the camcorder is in the recording standby, playback pause or playback mode. In the other modes (see "Playing Back a Tape in Various Speeds" on page 32), the title scrolls up in the normal display mode. Also scrolling will be cancelled when you set the camcorder in the other modes after selecting scrolling.

The camcorder uses the lithium battery on the bottom to keep the title in memory. The lithium battery life is approximately 1 year.

About the color and the display mode indications
If you press EDIT/SEARCH in standby mode
Note on scrolling

About memory back up

Function of the COLOR MODE button

This button has a double function. One is to select the title color and the other is to select the title display mode. Its function depends on if the title is displayed or not.



To select the color

- 1 Press ON/OFF to display the title.
- 2 Press COLORMODE.
Each time you press the button, the color indication changes as follows:
WHIT (white) → BLUE → GRN (green) → CYAN → RED
BLK (black) → YEL (yellow) → VIO (violet) →
- 1 If the title is displayed, press ON/OFF so that the title disappears.
- 2 Press COLORMODE.

Each time you press the button, the display mode indication changes as follows:

- No indication (normal mode) → +
- ← B ← B+ ← B- → +
- ↑ : Title scroll up mode
- ↓ : Title scroll down mode
- B+ : Title reverse and scroll up mode
- B- : Title reverse and scroll down mode

Superimposing a title at the beginning
You can clear the title automatically after displaying it for a few seconds (Auto-superimposing).



- 1 Press COLORMODE to select the display mode of the title in the standby or playback pause mode.**
- 2 Press AUTO.**
- 3 Start recording or playback.**
The title is displayed in the selected mode and disappears after a few seconds automatically.

Superimposing Text

Superimposing a title before the tape stops

You can display the title automatically for a few seconds after pressing START/STOP or **II** PAUSE to stop recording or playback. (Auto superimposing)



- 1 Press **COLOR/PAUSE** to select the display mode of the title in the standby or playback pause mode.
- 2 Start recording or playback.
- 3 Press **AUTO**.
- 4 Press **START/STOP** or a **PAUSE** at the point which you want to stop recording or playback. After the title is displayed for a few seconds, recording or playback stops.

The auto-superimposing is performed once.

- You press **AUTO** again before the superimposing is performed.
- The auto-superimposing is performed in the standby or playback pause mode.
- You press **ON/OFF** before superimposing is performed.

 
Storing a Birth Date in Your Camcorder

When you preset your child's birth date in the camcorder, you can put your child's age in the viewfinder. The camcorder will automatically update age of your child. You can superimpose the age anytime on your recording. You can preset up to three birth dates or events.

Before you store a birth date in your camcorder, make sure that power source is connected, that the lithium battery is installed and that the date is correctly set.

How to store birth date


To store a birth date in your camcorder, see the following example and procedure.
Example: Store "Aug. 3, 1987" in memory 2.



- 1 Press the small green button on **POWER** and slide **POWER** to **CAMERA**.
- 2 Press the cover of the red button up until it snaps to **STANDBY**.
- 3 Press **TIME (NEXT)** and **AGE** simultaneously for more than one and a half seconds until the "1900" indication appears in the viewfinder.
- 4 Press **DATE (+)** to select **3**. Each time you press **DATE (+)**, the display in the viewfinder changes as follows:
1 BIRTHDAY → 2 BIRTHDAY → 3 EVENT
* Although "EVENT" is displayed on **3**, you can use it for age as well. **1** and **2** can also be used for event.
- 5 Press **TIME (NEXT)**. The "1900" indication blinks.

6

Enter the birth date of your child. First adjust the blinking digits with (DATE (-)); and then press TIME. The age (year and month) appears when all the items are adjusted.

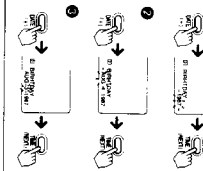

If you missed the correct number with DATE (+)

Keep pressing DATE (+). The indication changes as follows:
Year: 1900 → 1901 → Current year
Current year - (minus) 99 ↓

Month: JAN → FEB → ... → DEC → ...

Day: 1 → 2 → ... → 31

To correct/change the setting

To advance the digits faster

To present the year before 1900

Follow the procedures from step 1 again.

 
Keep DATE (+) pressed.

- 1 After step 5 on page 47, keep pressing DATE (+) until the current year is displayed.
 - 2 Press DATE (+) again. The year goes back 99 years. (example: 1990 → 1891)
 - 3 Go to step 6 above.
- ...1901... is displayed in step 3 on page 47. After that, it advances every year as 1902, 1903, ...

When in 2000

Putting an Age on Your Tape

You cannot add the age later during playing back or editing. Be sure to follow the procedure below.



- 1 During recording, press START/STOP at the point where you want to insert the age of a person or the elapsed time. The camcorder is set in standby mode.

- 2 Press AGE to select the indication you want to record. Each time you press AGE, the indication changes as follows:

- No indication → [1] The first age
- [1] The 1st age → [2] The second age
- [2] The 2nd age → [3] The third age

- An item with no presetting is skipped. The [1], [2], or [3] indication goes out after one second.

- 3 Press START/STOP. Recording starts again.

The indication in the viewfinder is recorded with the picture.

Press AGE until the indication goes out.

Press AGE until the indication you want to record is displayed. Recording of the indicator you select starts when [1], [2], or [3] goes out.

- 1 Perform steps 1 to 4 in "Storing a birth date in you camcorder" to select the memory number to be canceled.
- 2 Press DATE (-) until "..." appears.
- 3 Press DATE (+) until "..." appears.
- 4 Press TIME (NEXT). The birth date is deleted from the memory and is not displayed when you press AGE.

The camcorder uses the lithium battery on the bottom to keep the birth date in memory. The lithium battery life is approximately 1 year.

If you do not use the data-screen function, the age indicator will appear on the TV screen when the [1], [2], or [3] indicator goes out in the viewfinder and recording starts.

In the earlier section (page 14), we've explained the basic connection to your TV.


Here, we will talk about several other ways of connection to TV depending on the type of TV you have.

You can easily make a proper connection of camcorder and TV by using the supplied AC-V6060A AC power adaptor.

If you connect a TV not equipped with video/audio inputs, see page 14.

Connecting a TV with video/audio inputs

How to connect a TV
Use the supplied AC-V6060A AC power adaptor and AV connecting cable to connect to the TV. Make sure that the TV is turned off to prevent damage to the speaker.

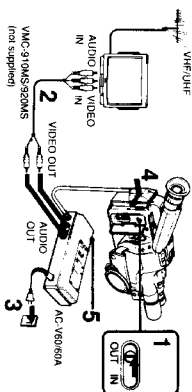

- 1 Set the IN/OUT selector to OUT.
- 2 Connect Video and Audio using the AV cable between TV and AC power adaptor.
- 3 If your TV is a monaural type, use the VMC-710M/720M AV connecting cable (not supplied).
- 4 Connect the AC power adaptor to a wall outlet.
- 5 After the connecting plate of the AC power adaptor to the camcorder.
- 6 Set the CHANGE/VTR selector on the AC power adaptor to VTR (DC OUT).

 
Note

Perform only steps 4 and 5 when playing back a tape. You can keep the AC power adaptor and the TV connected when playing back a tape.

Connecting to a TV via a VCR


If your TV has no VIDEO/AUDIO input jacks

Disconnect the antenna connection between the TV and the VCR, and connect the VCR to the VHF/UHF input of the TV and VHF/UHF output of the VCR.



If your TV has VIDEO/AUDIO input jacks

 Connect Video and Audio from the AC power adaptor to the VCR instead of to the TV. Set the input selector of the VCR to LINE, if available.




Playing Back a Tape in Various Speeds

The supplied wireless Remote Commander is used to control the camcorder from a distance. When you want to set the **REMOTE COMMANDER ON/OFF** switch to ON.

Press DATA SCREEN.

To turn the indicators off, press 1 again.
To turn DATA ON SCREEN on TV will tell you which playback mode you are using.

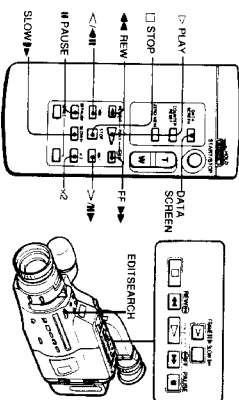

To view the still picture (playback pause)

Press **PAUSE** during playback.
II appears in the viewfinder.
To resume normal playback, press **II** or **II**.

Note

When the still picture mode lasts for 5 minutes or more, the camcorder automatically enters the stop mode.

To change the playback direction

Press **<II** for the reverse or **>II** for the forward direction during playback. **>** or **<** appears in the viewfinder.

To view the picture at 1/3 speed (slow playback)

Select the playback direction with **<II** or **>II**, and then press **SLOW II** during playback.
SLOW II appears in the viewfinder.

To resume normal playback, press **II**.

When slow playback lasts for 1 minute or more, the forward or reverse playback at the normal speed starts automatically, depending on the tape direction.

To view the picture at double speed (only on the Commander)

Select the playback direction with **<II** or **>II**, and then press **x2** on the Commander.

To view the picture frame-by-frame

To locate the desired scene (picture search)

To locate the desired scene quickly (skip scene)

About the playback picture

About the sound during playback in the various playback mode

If the still picture, frame-by-frame picture, or slow playback picture is noisy

If the still picture shakes

In the still picture mode, press **<II** or **>II**. Each time you press the button, the picture shifts one frame. **<II** or **>II** appears in the viewfinder.
If you keep pressing **<II** or **>II**, playback at 1/20 speed starts.
To resume normal playback, press **II**.

Keep pressing **<II** or **>II** during playback or in the still picture mode. **II** or **II** appears in the viewfinder.
To resume normal playback, release the button.

Press **<<II** during rewinding or **>>II** during advancing the tape rapidly. **<<II** or **>>II** appears in the viewfinder.
To resume normal playback, press **II**.

During the various playback modes, streaks appear on the screen.

The sound can be heard during playback at double speed in forward direction, but sound may not be clear as normal speed playback.

Set the camcorder into the slow playback mode, and press **"** or **"** side of EDITSEARCH on the camcorder until you get the best picture.


Press **"** or **"** side of EDITSEARCH on the camcorder until the most stable picture appears.

Recording

Recording from a VCR or TV

You can record a tape from another VCR or a TV program from the TV both equipped with video/audio outputs.

Disconnect the FTU adapter from the A/C power adapter if it is connected. Make connection using the appropriate AV cable (such as Sony VMC-210M/720M for monaural equipment or VMC-910MS/920MS for stereo equipment).

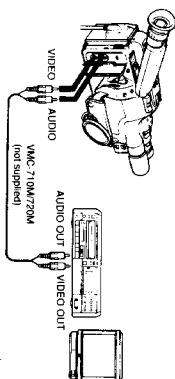

How to record

- 1 Set the IN/OUT selector on the camcorder to IN.
- 2 Turn on the VCR or TV.
- 3 Play back the tape or select the TV channel to be recorded.
- 4 Set POWER of the camcorder to VTR.
- 5 Insert a tape and slide ● REC. Recording starts. You can monitor the picture being recorded in the viewfinder.


Using the Tape Counter

During recording or playback, the digits on the counter indicate the actual recording or playback time.

To count the whole tape

Press COUNTER RESET at the beginning of the tape so that the counter shows "0:00:00". While down the counter reading at a particular point so that you can easily find that point later by referring to the tape counter.

To return to a pre-registered point

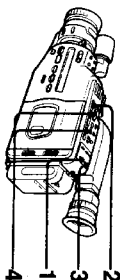


- 1 During playback, press COUNTER RESET at the point where you wish to start. The counter shows "0:00:00".
- 2 Press [] when the playback has finished, as usual.
- 3 Press ZERO MEM. The "ZERO MEM" indication blinks in the viewfinder. When you press ZERO MEM after you stop the tape, it does not function during recording or playback.
- 4 Press ◀ or ▶. The tape counter advances and stops automatically when the counter reaches approximately zero.

Notes on the tape counter and the ZERO MEM button

- Something must be recorded on the tape in order for the tape counter to function.
- Tape counter will not work on blank tape.
- The counter stops at a certain point of the tape may not correspond exactly. Use the counter as a guide.
- There will be a time lag of several seconds especially when you repeat fast-forward running/rewinding and play back the tape recorded in LP and SP modes mixed.
- The ZERO MEM mode is cancelled automatically once the tape is rewound or sent forward to the point where you pre-registered.


Editing Tapes with a VCR

You can edit a tape with an additional **B** item, **B** Betamax or **MS** VHS format VCR. Also you can superimpose and record the titles.

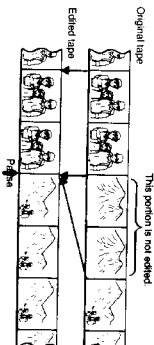


How to connect

Make connections using the appropriate AV cable (such as Sony VMC-710M/720M for monaural VCR or VMC-910MS/920MS for stereo VCR) and set the VCR to the appropriate mode. Do not turn off the AC power adaptor to VTR. Set the input selector of the VCR to LINE 1 available.

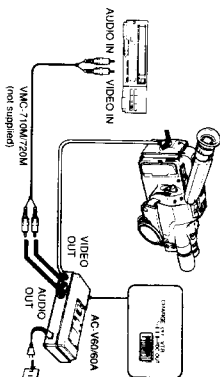

How to edit

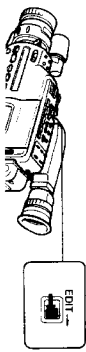- 1 Insert a tape to be recorded into recording VCR.
- 2 Slide EDIT on the camcorder to the direction of the arrow.
 
- 3 Set POWER of the camcorder to VTR, then insert the recorded tape.
- 4 Play back a tape on the camcorder until you locate the point where you want to start editing, then set the camcorder to the playback pause mode.
- 5 On the recording VCR, locate the recording starting point and set the VCR to the recording pause mode.
- 6 Press II PAUSE of the camcorder and VCR simultaneously to start editing.

When performing synchronized editing using the **II** connector, you cannot superimpose a title at the end of the editing by pressing AUTO.

Repeat steps 4 to 6.

Press II on the recording VCR.

Press ☐ on both VCRs.

You can superimpose and record the titles on the picture while editing.


For details, refer to pages 41 to 46.

The indicators displayed on the TV screen will also be recorded.


When you set EDIT to the direction of the arrow (EDIT ON), you can keep picture and sound deteriorations resulting from editing to the minimum. Avoid editing the still picture and the still picture generators of editing. Be sure to set the switch in the opposite direction of the arrow (EDIT OFF).

Replacing Recordings on a Tape (Insert Editing)

You can insert a new scene from a VCR on your originally recorded tape by setting the starting point and ending point.

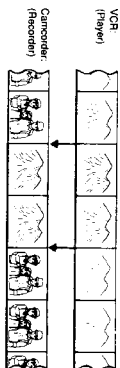

Connections are the same as in "Recording from a VCR on TV (page 54)". Before you begin replacing recordings, set the VCR to the playback mode at the beginning of the scene to be recorded. Set the CHARGE/VTR selector on the AC power adaptor to VTR.

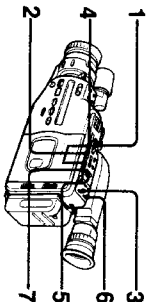

- 1 Press the small green button on the POWER and slide POWER to VTR. The counter appears in the viewfinder.
- 2 Locate the end point where the insert should end by pressing <<< or >>> during playback.
- 3 At the end point, press COUNTER RESET. The counter is reset to "0:00:00".

- 4 Locate the start point where the insert should begin by pressing <<<.
- 5 At the start point, set the camcorder into recording pause mode.
- 6 Press ZERO MEM.
The start point of the insert is stored in memory.
- 7 Press II of both units to start insert editing.
You can monitor the picture being inserted in the viewfinder screen.

The insert recording will stop automatically near the zero point on the counter.


To change the end point Press ZERO MEM so that the ZERO MEM indication disappears, and operate again from step 2.

Maintenance Information

Moisture Condensation

If the camcorder is brought directly from a cold place to a warm place, moisture may condense inside the camcorder, on the surface of the tape or on the lens. In this condition, the tape may stick to the head drum and be damaged to the unit may not operate correctly. To prevent possible damage, do not use the camcorder until the moisture has evaporated. However, take the following precautions.

If moisture condenses inside the unit

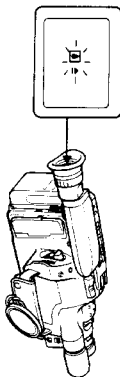

Moisture is present inside the camcorder when:

- The camcorder is brought from a cold place to a warm place.
 - When the tape is inserted, the **▲** indication also blinks.
 - Several beeps sound continuously for five seconds when the BEEP switch is set to ON and the tape is inserted.
- In such cases, no function except for tape ejection will work.
- Eject the tape, turn off the camcorder and leave it with the cassette holder open for at least 1 hour.**
- The camcorder can be used again if the **▲** indication does not appear when the power is turned on again.

If moisture condenses on the surface of the tape



Moisture is present on the surface of the tape when:

- The **▲** indication blinks inside the viewfinder when the tape is inserted and a tape transport button (F, **◀**, etc.) is pressed.
 - Several beeps sound continuously for about five seconds when the BEEP switch is set to ON.
- In such cases, no function except for tape ejection will work.
- Eject the tape and let the camcorder stand for at least 1 hour.**
- The tape can be used again if the **▲** indication does not appear when the tape is inserted and a tape transport button is pressed.

If moisture condenses on the lens

No caution indications will appear, but the picture becomes dim.

Turn off the power and leave the camcorder unused for at least 1 hour.

60 Additional Information

Video Head Cleaning



Slight contamination → Critical contamination

To ensure clear picture, clean the video heads periodically

When playback pictures become noisy or hardly visible, the video heads may be contaminated.

- 1 Clean the video heads with the Sony VS-25CUH cleaning cassette (not available in some areas).
- 2 After cleaning, check if the picture is clear by recording or playing back with an ordinary tape.
- 3 If the picture is still noisy, repeat cleaning. (Do not repeat cleaning more than 5 times.)

Do not use a commercially available wet-type cleaning cassette. It may damage the video heads.

 
If the VS-25CUH cleaning cassette is not available in your area, consult your Sony service facility.

Caution

Note

Viewfinder Cleaning

Detach the eyecup as illustrated and clean the surface of the screen with a commercially available blower.



Maintenance Information


Additional Information 61

Tips for Better Camera Recording

How to Achieve Better Camera Recording

Take a good posture for shooting

- For hand-held shots, it's important to hold the camcorder properly
- Hold the camcorder firmly and secure it with the grip belt so that you can easily manipulate the camcorder against your side
- Place your right elbow firmly against your side
- Place your left hand under the camcorder to support it. When adjusting the focus manually, make sure the camcorder does not move.
- Stand opposite to the subject and let your feet take a comfortable stance.
- Place your eye firmly against the viewfinder eyepiece.

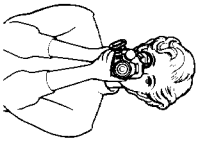


Use a tripod

If you have a tripod for a still camera, you can also use it with the camcorder. If a tripod is not available, try placing the camcorder on a tabletop or any other flat surface of suitable height.


Caution

 When attaching a tripod not manufactured by Sony, the length of the camera mounting screw must be less than 6.5 mm. Otherwise the screw may damage the inner part of the camera.



Keep the horizontal plane level

 You can easily determine the horizontal plane by using the viewfinder frame as a reference.



Plan ahead

Lighting

Use video light in the dark

Brightness levels

If you are going to edit the tape after recording, shoot the scene a little longer to make the editing easier.

If you are not going to edit the tape after recording, first record a still and then use the STILL/ISO TOP button to make a smooth recording.

- Shoot with the sun behind you. When the light source is behind the subject, or in the following situations, the subject will be recorded too dark and the background too light.
 - The subject is indoors and there is a window behind the subject.
 - The subject is outdoors and the sun is shining directly on the subject.
- If you are shooting a person wearing white or shiny clothes in front of a white background.

In this case, the face will be recorded too dark. To get the best colors, you must maintain a sufficient light level. Photography lamps or halogen lamps are recommended. For best results, use of Sony video lights are recommended since their weight and low heat output levels allow safe and direct connection to the camcorder. Do not point the light at the camcorder. The light heat from the light may warp the casing of the camcorder. For detailed instructions on proper use of the light, read its instruction manual. Using the following chart as a reference, take a few minutes to familiarize yourself with brightness levels to improve your recording technique.

Situation	Brightness Unit: lux	Condition
Shade-covered mountains Snow-covered mountains Sunny beach, clear day in summer		ND filter recommended
Clear day, mid day (100,000 lux) Clear day, mid day (50,000 lux) Overcast day, mid day (32,000)	100,000 50,000 10,000	
Overcast day, one hour after sunrise (2,000) Office full by fluorescent lamps, near window (1,000) Overcast day, one hour before sunset (1,000)	1,000	Normal recording
Department store counter (500 - 700) Office full by fluorescent lamps (400 - 500)	500 300	
Room lit by two 30 W fluorescent lamps (150 - 200) Subway station platform (300)	100	
Accide at night (150 - 200)	10	Video light recommended
Thinner lobby (15 - 35) Candlelight (10 - 15)		

Tips for Better Camera Recording

Using Your Camcorder Abroad

Each country has its own electricity system and TV color system. Before using your camcorder abroad, check the following points:

Power Sources

You can use your camcorder in any country with the supplied AC power adaptor within 110 V to 240 V AC, 50/60 Hz.

Differences in Color System

You can view the playback picture in the viewfinder. However, if you want to view the playback picture on a TV, it must be an NTSC system based TV. Check the following list (in alphabetical order).

NTSC system countries

Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, The Philippines.

PAL system countries

Australia, Austria, Belgium, China, Denmark, Finland, Germany (former West Germany), Great Britain, Holland, Hong Kong, Italy, Kuwait, New Zealand, Norway, Portugal, Singapore, Spain, Sweden, Switzerland, Thailand, etc.

PAL-M system country

Brazil

PAL-N system countries

Argentina, Indonesia, Italy

SECAM system countries

Bulgaria, France, Guinea, Hungary, Iran, Iraq, Morocco, Poland, Soviet Union, etc.

Precautions

• Operate the camcorder on 6.0 V (battery pack), 7.5 V AC power adaptor, or 9.0 V (alkaline batteries). Use the accessories recommended in this manual.

• Should any fault appear, stop using the camcorder and have it checked by qualified personnel before operating it any further.

• Do not hold the camcorder by the viewfinder or the microphone.

• Avoid rough handling or mechanical shock. Be particularly careful of the

• Keep the lens cap on the lens when not using the camera.

• Do not wrap up the camcorder and operate it since heat may build up internally.

• Keep the camcorder away from strong magnetic fields or mechanical

• **Do not let sand get into the camcorder.** When you use the camcorder on a sandy beach or dusty place, protect it from the sand or dust. Sand or dust may cause the camcorder to malfunction and sometimes the malfunction cannot be repaired.

• Do not use the camcorder in rain or in sea water. It may cause malfunction and sometimes the malfunction cannot be repaired.

• When the unit will not be used for a long time, disconnect the power source and remove the tape. Periodically turn on the power, operate the camera section and player section and play back a tape for about 3 minutes.

• Clean the lens with a soft brush to remove dust. If there are fingerprints on the lens, clean them with a dry, soft cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent which may damage the finish.


• Television programs, films, video tapes and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provision of the copyright laws.

• Note on copyright

64 Additional Information

Identifying the Parts

For details on the use of each part, refer to the pages indicated in the circle.

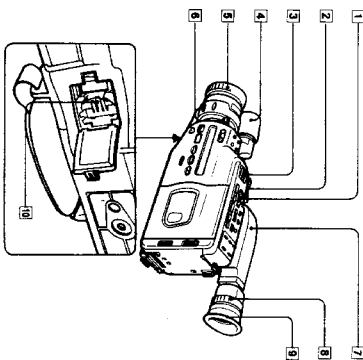

1 Power switch

CAMERA: for camera recording
VTR: for playing back or editing tapes
OFF: power off

2 Power zoom button

3 Accessory shoe

4 Built-in microphone

5 Lens hood/focus ring


6 Zoom lever

7 Viewfinder


8 Viewfinder lens adjustment ring

9 Eyecup


10 Lithium battery compartment

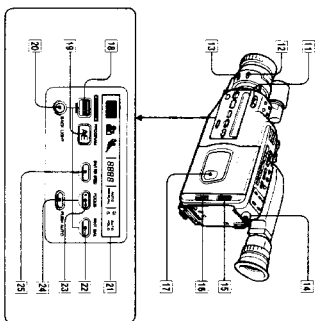


- 11 EDIT/SEARCH (and recording review) buttons
- 12 FADER button
- 13 MACRO AF (macro autofocus) button
- 14 Camera recording battery lamp
- 15 EJECT (cassette eject) knob
- 16 BATT (battery elec) knob
- 17 Cassette holder
- 18 AUTO LOCK switch
- 19 PROGRAM AE (program auto exposure) button
- 20 BACK LIGHT button
- 21 Display window
- 22 WHT BAL (white balance) button
- 23 FOCUS button
- 24 PUSH AUTO button
- 25 SHUTTER SPEED button

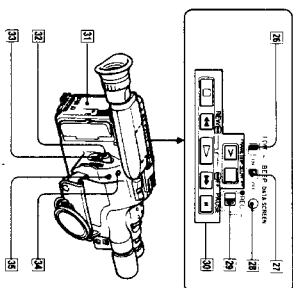

- 26 EDIT switch
- 27 BEEP ON/OFF switch
- 28 DATA SCREEN button
- 29 REC (recording) switch
- 30 Tape transport buttons
 - PAUSE (pause)
 - FF (fast-forward)
 - REW (rewind)
 - STOP (stop)
 - F.F.W (forward direction/frame by-frame in forward direction)
 - SLOW (slow playback)
- 31 Battery mounting surface
- 32 STANDBY switch
- 33 START/STOP button
- 34 REMOTE control connector (stereo mini-jack)
- 35 (earphone) jack (mini-jack)

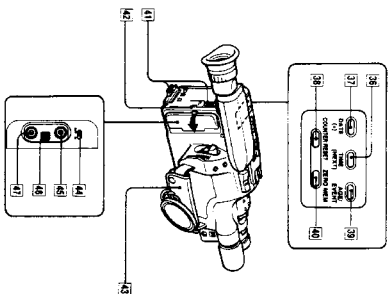


- 36 TIME (NEXT) button ● ● ●
- 37 DATE (+) button ● ● ●
- 38 COUNTER RESET button ● ●
- 39 AGE/EVENT button ●
- 40 ZERO MEM (memory) button ● ●
- 41 Hooks for shoulder strap
- 42 REMOTE COMMANDER ON/OFF switch ●
- 43 Grip belt ●
- 44 IN/OUT (video and audio input/output) selector ● ●
- 45 AUDIO input/output jack (phone jack) ●
- 46 RFU DC OUT (RFU adapter DC output) jack (special mini) jack
- 47 VIDEO input/output jack (phone jack) ●

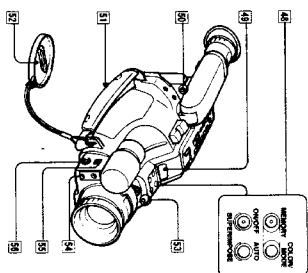

- 48 SUPERIMPOSE buttons ●
MEMORY button
COLORMODE button
AUTO button
ON/OFF button
- 49 Remote control sensor ●
- 50 PUSH SLIDE (viewfinder positioning) button ●
- 51 Tripod receptacle (bottom)
- 52 Lens cap
- 53 Camera recording battery lamp ●
- 54 MIC (microphone) jack (mini) jack and DC OUT (power output) jack (mini-mini) jack
- 55 BUILT-IN MIC (microphone) switch ●
- 56 REC (recording) START/STOP button (for low-position recording) ●

Wireless Remote Commander

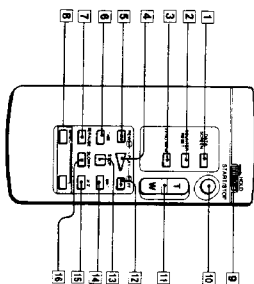


- 1 DATA SCREEN button
- 2 COUNTER RESET button
- 3 ZERO MEM (memory) button
- 4 ▷ PLAY (playback) button
- 5 ◀◀ REW (rewind) button
- 6 ◀◀ (reverse direction/reverse frame) button* ②
- 7 II PAUSE button
- 8 ● REC (Recording) buttons
- 9 HOLD switch ②
- 10 START/STOP button
- 11 Power zoom button
- 12 ►► FF (fast forward) button
- 13 □ STOP button
- 14 ► (forward direction/forward frame) button ②
- 15 x2 (double speed playback) button* ②
- 16 SLOWT (slow playback) button ②


Note

The * indicates the functions which are operable only with the Commander.

Inside the Viewfinder

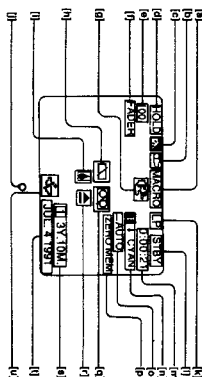

- (a) MACRO AF is pressed. (MACRO)
- (b) WIND is selected. (x>)
- (c) BACK LIGHT is pressed. (L)
- (d) White balance mode. (•, ◊, HOLD)
- (e) PROGRAM AE setting. (B, /) or Shutter speed
- (f) PADER is pressed. (E)
- (g) Macro Focus (E)
- (h) "Exchange battery." (CX)
- (i) Moisture has condensed. (B)
- (j) Lights up during recording
- When blinking, "Exchange battery or tape."
- (k) Playback mode (LP)
- (l) Tape Transport mode
- (m) Tape coating
- (n) Temperature and color
- (o) Auto superimpose (AUTO)
- (p) ZERO MEM is pressed
- (q) "Exchange tape or no tape inside." (EX)
- (r) "Trouble has occurred" (A) or "Clean video heads." (C)
- (s) Age
- (t) Date or time
- (u) "Replace lithium battery" (SL)

 

- (a) Appears in automatic adjustment mode
- (b) Appears in portrait mode
- (c) Appears in sports mode
- (d) Focus mode
- (e) White balance mode

Troubleshooting

If any difficulty should arise during operation, go through the following table. Should the difficulty persist, consult the unit and contact your Sony dealer or local authorized Sony service facility.

Symptom	Cause	Corrective actions
The power does not turn on.	The battery is not attached. The battery is used up. The AC power adaptor is not connected to a wall outlet.	Attach the battery. Use a charged battery. Connect the adaptor to a wall outlet.
The power turns off.	While being operated in the CAMERA mode, the camcorder has been in the standby mode for more than 5 minutes. The battery is used up.	Push down the STANDBY switch, and turn it up again. Use a charged battery.
The battery pack is quickly discharged.	The ambient temperature is too low. The battery pack has not been charged fully.	Change the battery pack again.
The START/STOP button does not operate.	The tape is affixed to the drum.	Remove the tape with the cassette eject button.
The tape cannot be removed from the camcorder.	The tape is at its end. The POWER switch is set to VTR. The tape is not loaded (No). The battery is used up.	Remove the tape or use a new one. Set the POWER switch to CAMERA. Use a new tape or slide the tape adaptor. Remove the tape and leave the camcorder for at least an hour. Set it to VTR.
No function except for tape ejection works.	Module condensation has occurred. (See page 65).	Remove the tape or use a new one.
The tape does not move when the START/STOP button is pressed.	The tape is at its end. The POWER switch is set to VTR.	Remove the tape or use a new one. Set the POWER switch to CAMERA.
The auto-focusing function does not work.	AUTO LOCK was not set to the green position when recording. Shooting conditions are not suitable for auto-focusing operation. (See page 29).	Set AUTO LOCK to the green position. Set AUTO LOCK to the lower position and press FOCUS to adjust the focus.
The image on the viewfinder screen is not clear.	The viewfinder lens is not adjusted. The contrast between the subject and background is too high; the camera is not auto-focusing.	Adjust the viewfinder lens.
A vertical band appears when a subject such as light or a dark object is not against a dark background.	The color of the playback is not appropriate.	Set AUTO LOCK to the green position when recording.
The playback picture is not clear.	Shooting conditions are not suitable for auto white balance operation. (See page 29). EDT is set in the direction of the arrow.	Set AUTO LOCK to the lower position and press WB to adjust the white balance. Set EDT in the opposite direction of the arrow.
The picture is noisy.	The channel or input for the camcorder is not selected on the TV.	Check correctly.
When the TV is connected to the camcorder using the VIDEO/AUDIO jacks, the video picture is not clear or moves vertically.	The video heads may be contaminated. The IN/OUT selector is set to OUT.	Clean the video heads using the Sony VHS-2001 (See page 8). Set it to IN.

Troubleshooting

If an indication blinks in the viewfinder screen or a caution lamp on the main unit blinks, check the following table.

	Symbol	Cause	Corrective actions
Camera operation VTR operation	CL		
	Battery lamp	The battery is weak.	Recharge or change one.
	CL	The battery is used up.	Use a charged battery.
	Battery lamp	The tape is at its end.	Use a new tape.
Camera operation	Beeps		
	Beeps	The tape is near its end.	Prepare a new one.
	Beeps	No tape is inserted.	Insert a tape.
	Beeps	The tab on the tape is out (red).	Slide the tab.
Camera operation VTR operation	Beeps	Moisture condensation has occurred.	Remove the tape and leave the camcorder for at least an hour.
	Beeps	The gap of the head is clogged.	Run the head cleaning tape.
	Beeps	The gap of the head is clogged.	Run the head cleaning tape.
	Beeps	Other troubles may occur.	Contact your nearest Sony dealer.
Camera operation VTR operation	Caution lamp		
	Caution lamp	The lithium battery is not recharged.	Recharge the battery.
	Caution lamp	The lithium battery is not recharged.	Recharge the battery.
	Caution lamp	The lithium battery is not recharged.	Recharge the battery.
Camera operation VTR operation	Caution lamp		
	Caution lamp	The lithium battery is not recharged.	Recharge the battery.
	Caution lamp	The lithium battery is not recharged.	Recharge the battery.
	Caution lamp	The lithium battery is not recharged.	Recharge the battery.

Specifications

System

Video recording system

Format: Two heads, Helical scanning

FM system

Audio recording system

Video signal

NTSC color, EIA standards

Usable cassette

8 mm video format cassette

Tape speed

SP mode: Approx. 1.43 cm

LP mode: Approx. 0.72 cm

(1 inch/sec)

Recording time

SP mode: 2 hours (PS 120)

LP mode: 4 hours (PS 120)

Playback time

SP mode: 2 hours (PS 120)

LP mode: 4 hours (PS 120)

Fast forward/rewind time

Approx. 6 sec. (PS 120)

Image device

Electron-coupled device (CCD)

Viewfinder

(Black and white)

Lens

Combined 8 x power zoom lens

f=4.5 to 36 mm (1/4 to 2 1/4 inches)

Filter diameter: 46 mm (1 3/4 inches)

Auto focus system

TTL

Color temperature

AUTO, 1000 K

Minimum illumination

2 lux

Illuminator range

0.3 to 100,000 lux

Recommended illumination

More than 100 lux

Aperture correction

With daylight adjustment

Input and output connector

Video input/output

Photo jack, 1 VP-P, 75 ohms

Audio input/output

Photo jack, stereo, 1/8 inch, 600 ohms

Input: -7.5 dBs, input

impedance more than

General

Power requirements

On battery mounting surface

6.0 V (AC power jack)

5.0 V (AC power jack)

9.0 V (alkaline batteries)

Power consumption

6.2 W (camera recording)

including the viewfinder

Installation

Orientation: vertically, horizontally

Operating temperature

0°C to 40°C (32°F to 104°F)

Storage temperature

-20°C to 60°C (-4°F to 140°F)

Dimensions

Approx. 111 x 138 x 330 mm

Weight

Approx. 1.2 kg (2 lb 10 oz)

Microphone

Electret condenser microphone

unidirectional, modular type

Wireless Remote Commander

Remote control system

Command mode

VTR 12

Power requirements

3 V DC, 2 size AA (R6) batteries

Dimensions

Approx. 57 x 20 x 120 mm (WxHxD)

Weight

Approx. 82 g (2.9 oz)

(excluding batteries)

Design and specifications are subject to change without notice.

Index

	Eject	13	Rewind	15	
	Exposure	28	RFU Adaptor	14	
AC Adaptor	6, 21	External Microphone Jack	27		
Accessory Shoe	27	Eyecup	61	S	
Adjusting Viewfinder	11			Scroll	43
Age Button	49	F,G,H		Shoulder Strap	5
Audio Output	50	Fade in/Fade out	40	Skip-scan	52
Audio/Video Cable	50	Fast-Forward	15	Slow	52
Auto Focus	13	Frame-by-Frame	52	Specifications	75
Auto Lock	28	High Speed Shutter	36	Sports Mode	36
Auto Superimposing	46	Hold Switch	17	Standby	13
Auto White Balance	13			Still Picture	52
				Stop	15
B	I,J,K,L			Superimpose	41
Back Light	33	Indoor	20	Supplied Accessories	5
Battery	6	Insert	25, 58		
Battery lamp	74	LANC	27	T,U,V	
Battery Pack	6	LCD Display	72	Tape Counter	55
Beep	11	Lens Cap	12	Tape Speed	71
Built-in Microphone	22	Lens Hood	39	Title	42
		Lithium Battery	8	Title Memory	42
C	M,N,O,P			Tripod Mounting	62
Camera Mode	12	Macro AF	38	Troubles	73
Camera Recording Lamp	13	Manual Focus	29	VCR Mode	15
Car battery operation	21	Memory Button	42	VHF Antenna	14
Charging Battery	6	Pause Button	52	Video Cassette Tapes	10, 27
Cleaning Video Head	61	Play	15	Viewfinder Indication	71
Clock Set	9	Playback on TV	14, 50		
Close-up	38	Portrait Mode	35	W,X,Y,Z	
Connection	14, 50	Power Sources	20	Warning	74
Counter Reset	25, 55	Power Zoom	37	White Balance	31
		Program AE	28	White Balance Hold	32
D,E		Push Auto	30	Wind Switch	22
Data Screen	52	Push/Slide	12	Wireless Remote	
Date/Time	22			Commander	16
DC Output	27	R		Zero Mem	26, 59
Dew Indication	60	Rec Review	23	Zoom	37
Earphone Jack	26	Record/Pause	13	Zoom Lever	30, 37
Edit Switch	57	Remote Commander	16		
Editing	56	Remote Control Jack	27		
Editsearch	23				

If you have any question about this product, you may call: or write to:

Sony Customer Information Center

East Coast : 201-930-7669 (SONY) NJ
Central : 708-250-7669 (SONY) IL
West Coast : 714-821-7669 (SONY) CA

Sony Customer Information Center

Sony Drive, Mail Drop #T1-11,
Park Ridge, NJ 07656