

**SONY**

3-856-122-42 (1)

# ***FM/AM Compact Disc Player***

---

Operating Instructions \_\_\_\_\_ **EN**

## **Owner's Record**

The model and serial numbers are located on the bottom of the unit.

Record the serial number in the space provided below.

Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. CDX-C610 Serial No. \_\_\_\_\_

For installation and connections, see the supplied installation/connections manual.



## **CDX-C610**

© 1995 by Sony Corporation

---

## Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

## CAUTION

The use of optical instruments with this product will increase eye hazard.

---

## Welcome !

Thank you for purchasing the Sony Compact Disc Player. This unit lets you enjoy a variety of features by using either a rotary remote or a wireless remote.

In addition to the CD playback and the radio operations, you can expand your system by connecting an optional CD/MD changer.

EN

## Table of Contents

### This Unit Only

#### Getting Started

Resetting the unit .....	4
Detaching the front panel .....	4
Setting the clock .....	5

#### CD Player

Listening to a CD .....	5
Playing a CD in various modes .....	6
Creating a program .....	6
— CD Program Memory .....	6

#### Radio

Memorizing stations automatically .....	
— Best Tuning Memory (BTM) .....	8
Memorizing only the desired stations .....	8
Receiving the memorized stations .....	9
Storing the station names .....	
— Station Memo .....	9
Locating a station by name .....	
— List-up .....	10

#### Other Functions

Adjusting the sound characteristics .....	10
Muting the sound .....	10
Changing the sound and display settings .....	11

### With Optional Equipment

#### CD/MD Changer

Playing a CD or MD .....	11
Scanning the tracks .....	
— Intro Scan .....	12
Playing tracks repeatedly .....	
— Repeat Play .....	12
Playing tracks in random order .....	
— Shuffle Play .....	12
Labeling a CD .....	
— Disc Memo .....	13
Locating a disc by name .....	
— List-up .....	13
Selecting the specific tracks for playback .....	
— Bank .....	14
Creating a program .....	
— CD Program Memory .....	14

EN

#### Additional Information

 
Precautions .....	17
Maintenance .....	17
Dismounting the unit .....	18
Attaching the label to the rotary remote .....	18
Location of controls .....	19
Specifications .....	21
Troubleshooting guide .....	22
Index .....	Back cover

## Getting Started

### Resetting the unit

Before operating the unit for the first time or after replacing the car battery, you must reset the unit.

Press the reset button with a pointed object, such as a ball-point pen.



Reset button

#### Note


When you connect the power supply cord to the unit or reset the unit, wait for about 10 seconds before you insert a disc. Do not insert a disc within these 10 seconds, otherwise, the unit will not be reset.

EN

### Detaching the front panel

You can detach the front panel of this unit to prevent the unit from being stolen.

- 1 Press **OFF**.
- 2 Press **RELEASE** to open up the front panel. Then slide the front panel a little to the left, and pull it off towards you.

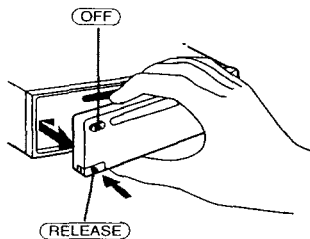


#### Notes

- Be sure not to drop the panel when detaching it from the unit.
- If you press **RELEASE** to detach the panel while the unit is still on, the unit will turn off automatically to prevent the speakers from being damaged.

### Attaching the front panel

Align part **(A)** of the front panel to part **(B)** of the unit as illustrated, and push until it clicks.

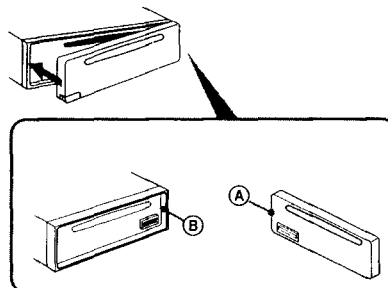

#### Notes

- Be sure not to attach the front panel upside down.
- Do not press the front panel hard against the unit when attaching it. Press it lightly against the unit.
- When you carry the front panel with you, put it in the supplied front panel case.
- Do not press hard or put excessive pressure on the display windows of the front panel.
- Do not expose the front panel to direct sunlight, heat sources such as hot air ducts, and do not leave it in a humid place. Never leave it on the dashboard of a car parked in direct sunlight where there may be a considerable rise in temperature.

### Caution alarm

 
If you turn the ignition key switch to the OFF position without removing the front panel, the caution alarm will beep for a few seconds (only when the POWER SELECT switch is set to the **(A)** position).

## Setting the clock


The clock has a 12-hour digital indication.

Example: Set the clock to 10:08

- 1 Press **(SHIFT)**, then press **(2)** (SET UP).





- 1 Press **(4)** (→).

 


The hour digit flashes.

  - 2 Set the hour.





- 3 Press **(4)** (→).

 


The minute digits flash.

  - 4 Set the minute.



- 2 Press **(SHIFT)**.

 

The clock starts.

### Note

If the POWER SELECT switch on the bottom of the unit is set to the **(B)** position, turn the power on first, then set the clock.


## CD Player

### Listening to a CD

**Simply insert the CD.**


Playback starts automatically.

Labeled side up

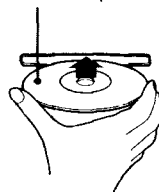

If a CD is already inserted, press **(SOURCE)** repeatedly until "CD" appears.

 Elapsed playing time



Track number

### Note

To play back an 8 cm (3 in.) CD, use the optional Sony compact disc single adapter (CSA-8).

To	Press
Stop playback	<b>(▲)</b> or <b>(OFF)</b>
Eject the CD	<b>(▲)</b>

### Changing the displayed items

Each time you press **(DSPL)**, the item changes as follows:

Track number ↔ Clock

### Locating a specific track

— Automatic Music Sensor (AMS)

During playback, press either side of **(SEEK/AMS)** momentarily.



To locate succeeding tracks

To locate previous tracks

 
EN

Getting Started/CD Player

## Locating a specific point in a track

### — Manual Search

During playback, press and hold either side of (SEEK/AMS). Release the button when you have found the desired point.



#### Note

If "LLLL" or "TTTT" appears in the display, that means you have reached the beginning or the end of the disc and you cannot go any further.

## Playing a CD in various modes

 
EN

You can play CDs in various modes:

- **INTRO** (Intro Scan) lets you play the first 10 seconds of all the tracks.
- **REPEAT** (Repeat Play) repeats the current track.
- **SHUFFLE** (Shuffle Play) plays all the tracks in random order.

### 1 Press (SHIFT).


Every time you press (SHIFT), only the items you can select light up.




### 2 Press (3) (PLAY MODE) repeatedly until the desired play mode appears.

Each time you press (3) (PLAY MODE), the item changes as follows:

 INTRO → REP → SHUF



### 3 Press (4) (→) to select "ON." Playback starts.

 


To go back to the normal playback mode, select "OFF" in step 3 above.

## Creating a program
 
### — CD Program Memory

You can play the tracks in the order you want by making your own program. You can make two programs: Program 1 and Program 2. You can select up to 12 tracks in each program. You can store the programs in memory.

### 1 Press (SHIFT), then press (3) (PLAY MODE) for two seconds.





"P 1" shows Program 1 is selected.

To select Program 2, press (4) (→) repeatedly until "P 2" appears.

### 2 Press either side of (SEEK/AMS) to select the track you want.
  
### 3 Press (5) (ENTER) momentarily.



### 4 To continue entering tracks, repeat steps 2 and 3.

### 5 When you finish selecting tracks, press (3) (PLAY MODE) for two seconds.

#### Notes

- "WAIT" appears in the display while the unit is reading the data.
- "FULL" appears in the display when you try to enter more than 12 tracks into a program at one time.

## Playing the stored program

 
 
 
 
You can select:

- PGM 1 to play Program 1.
- PGM 2 to play Program 2.
- PGM 1+2 to play Programs 1 and 2.

### 1 Press (SHIFT).

### 2 Press (3) (PLAY MODE) repeatedly until "PGM" appears.

- 3 Press (4) (→) repeatedly until the desired program appears.



Program Play starts.


To go back to the normal playback mode, select "PGM-OFF" in step 3 above.

**Note**

 "NO DATA" appears in the display if no track is stored in the program.


**Erasing the entire program**

- 1 Press (SHIFT), then press (3) (PLAY MODE) for two seconds.




"P 1" shows Program 1 is selected.

 - 2 Press (1) (←) repeatedly until "DEL" appears.



To delete Program 2, press (4) (→) repeatedly until "PGM 2" appears.

 - 3 Press (5) (ENTER) for two seconds.



The entire program is erased.

- 4 When you finish erasing programs, press (3) (PLAY MODE) for two seconds.

**Adding tracks to the program**

 
- 1 Press (SHIFT), then press (3) (PLAY MODE) for two seconds.



"P 1" shows Program 1 is selected.

To select Program 2, press (4) (→) repeatedly until "P 2" appears.

- 2 Press (1) (←) or (4) (→) to select the track slot number where you want to insert a track.



- 3 Press either side of (SEEK/AMS) to select the track you want to insert.

- 4 Press (5) (ENTER) momentarily to enter the track.

The current track in that slot number and the succeeding tracks shift down. To continue inserting tracks, repeat steps 2 through 4.

**Note**

Once all 12 slots have been filled, "FULL\*" appears in the display, and you cannot insert tracks.

- 5 When you finish inserting tracks, press (3) (PLAY MODE) for two seconds.

 
continue to next page →

EN

CD Player

## Erasing the tracks in the program

- 1 Press **(SHIFT)**, then press **(3)** (PLAY MODE) for two seconds.




"P 1" shows Program 1 is selected.

To select Program 2, press **(4)** (→) repeatedly until "P 2" appears.



- 2 Press **(1)** (←) or **(4)** (→) to select the track you want to erase.

 Track slot number



The track currently registered in slot 6 of Program 1.

  - 3 Press **(5)** (ENTER) for two seconds. When you erase a track from a slot number, the succeeding tracks shift up to fill the gap.



- 4 To continue erasing tracks, repeat steps 2 and 3.

- 5 When you finish erasing tracks, press **(3)** (PLAY MODE) for two seconds.

EN

## Radio

### Memorizing stations automatically

#### — Best Tuning Memory (BTM)

The unit selects the stations with the strongest signals and memorizes them in the order of their frequencies. You can store up to 10 stations on each band (FM1, FM2 and AM).

#### Caution

When tuning in the station while driving, use Best Tuning Memory to prevent accidents.

- 1 Press **(SOURCE)** repeatedly to select the desired band (FM1, FM2 or AM).

- 2 Press **(SHIFT)**, then press **(6)** (BTM). The unit stores stations in the order of their frequencies on the number buttons.

#### Notes

- The unit does not store stations with weak signals. If only a few stations are received, some number buttons remain empty.
- When a number is indicated in the display, the unit starts storing stations from the one currently displayed.

### Memorizing only the desired stations

You can store up to 10 stations on each band (20 for FM1 and FM2, 10 for AM) in the order of your choice.

- 1 Press **(SOURCE)** repeatedly to select the desired band.

- 2 Press either side of **(SEEK/AMS)** to tune in the station that you want to store on the number button.

- 3 Keep the desired number button (**(1)** to **(10)**) pressed for two seconds until you hear a beep tone.

The number button indication appears in the display.

#### Note

If you try to store another station on the same number button, the previously stored station will be erased.



## Receiving the memorized stations

- 1 Press **(SOURCE)** repeatedly to select the desired band.
- 2 Press the number button **(1)** to **(10)** momentarily where the desired station is stored.

### If you cannot tune in a preset station

Press either side of **(SEEK/AMS)** momentarily to search for the station (automatic tuning).

Scanning stops when the unit receives a station. Press either side of **(SEEK/AMS)** repeatedly until the desired station is received.

#### Note

If the automatic tuning stops too frequently, press **(SHIFT)**, then press **(3)** (PLAY MODE) repeatedly until "LOCAL" (local seek mode) is displayed. Then press **(4)** (→) to select "ON."

Only the stations with relatively strong signals will be tuned in.

#### Tip

If you know the frequency of the station you want to listen to, press and hold either side of **(SEEK/AMS)** for two seconds until the desired frequency appears (manual tuning).

### If FM stereo reception is poor

#### — Monaural Mode

- 1 Press **(SHIFT)**, then press **(3)** (PLAY MODE) repeatedly until "MONO" appears.
- 2 Press **(4)** (→) repeatedly until "MONO-ON" appears.  
The sound improves, but becomes monaural ("ST" disappears).

To go back to the normal mode, select "MONO-OFF" in step 2 above.

### Changing the displayed items

Each time you press **(DSPL)**, the items alternate between the frequency and time.

## Storing the station names

 
### —Station Memo

You can assign a name to each radio station and store it in memory. The name of the station currently tuned in appears in the display. You can store up to eight characters for a station.

### Storing the station names


- 1 Tune in a station whose name you want to store.

- 2 Press **(LIST)** for two seconds.



- 3 Enter the characters.

 
- 1 Press **(+)** to select the desired characters.  
(A → B → C → ... Z → 0 → 1 → 2 → ... 9 → + → - → \* → / → \ → > → < → . → \_)



If you press **(-)**, the characters appear in the reverse order.

If you want to put a blank space between characters, select **"\_"** (under-bar).

 - 2 Press **(4)** (→) after locating the desired character.  
The flashing cursor moves to the next space.



If you press **(1)** (←), the flashing cursor moves to the left.

- 3 Repeat steps 1 and 2 to enter the entire name.

- 4 To return to the normal radio reception, press **(LIST)** for two seconds.

#### Tip

To erase/correct a name, enter **"\_"** (under-bar) for each character.

 
EN

CD Player/Radio


continue to next page →

### Displaying the station name

Press **(DSPL)** during radio reception.



 Each time you press **(DSPL)**, the item changes as follows:



\* If the station name is not stored, "NO NAME" appears in the display for one second.

### Erasing the station name

- 1 Tune in any station and press **(LIST)** for two seconds.
- 2 Press **(DSPL)** for two seconds.
- 3 Press **(+)** or **(-)** to select the name that you want to erase.
- 4 Press **(5)** (ENTER) for two seconds.  
The name is erased.  
Repeat steps 3 and 4 if you want to erase other names.
- 5 Press **(LIST)** for two seconds.  
The unit returns to the normal radio reception mode.

EN

### Locating a station by name — List-up

- 1 Press **(LIST)** momentarily.  
The name assigned to the station currently playing appears in the display.
- 2 Press **(LIST)** repeatedly until you find the desired station.
- 3 Press **(5)** (ENTER) to tune in the desired station.

#### Note

Once the station name or frequency has been displayed for five seconds, the display goes back to its normal mode.  
To turn off the display, Press **(DSPL)**.

## Other Functions

### Adjusting the sound characteristics

You can adjust bass, treble, balance and fader. Each source can store the bass and treble level respectively.

- 1 Select the item you want to adjust by pressing **(SOUND)** repeatedly.  
VOL (volume) → BAS (bass) → TRE (treble) → BAL (balance) → FAD (fader)
- 2 Adjust the selected item by pressing **(+)** or **(-)**.  
Adjust within three seconds after selecting. (After three seconds, the buttons work as volume control buttons.)

### Muting the sound

Press **(MUTE)**.  
"MUTE-ON" flashes.

To restore the previous volume level, press **(MUTE)** again.

## Changing the sound and display settings

You can set:

- AMBER/GREEN to change the illumination color to amber or green.
- BEEP to turn on or off the beeps.
- DIM (Dimmer) to change the brightness of the display.
- D.INFO (dual information) to display the clock and the play mode at the same time (ON) or to display the information alternately (OFF).
- LOUD (Loudness) to enjoy bass and treble even at low volume. Bass and treble will be reinforced.
- RM (Rotary Remote) to change the operative direction of the controls of the optional rotary remote.
  - Select "NORM" to use the rotary remote as the factory preset position.
  - Select "REV" when you mount the rotary remote on the right of the steering column.

1 Press **(SHIFT)**, then press **(2)** (SET UP).

2 Press **(2)** (SET UP) repeatedly until the desired setting mode appears.

Each time you press **(2)** (SET UP), the item changes as follows:

CLOCK → AMBER/GREEN → BEEP → DIM → D.INFO\* → LOUD\* → RM

\* When you have not tune the station or there is no CD/MD being played, these items will not appear.

3 Press **(4)** (→) to select the desired setting (for example: ON or OFF).

4 Press **(SHIFT)**.

When the mode setting is complete, the normal playback mode appears.

## With Optional Equipment CD/MD Changer

You can control up to 10 CD changers and MD changers with this unit.

## Playing a CD or MD


Press **(SOURCE)** until the desired changer appears.

CD/MD playback starts.

When a CD or MD changer is connected, all the tracks play from the beginning.

## Changing the displayed items

Each time you press **(DSPL)** during CD/MD playback, the item changes as follows:

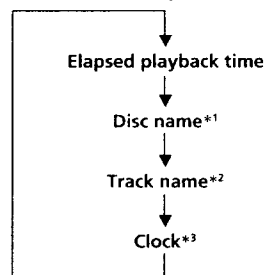

\*1 If there is no prerecorded name for a CD or MD, "NO NAME" appears in the display.

\*2 If the track name of an MD is not prerecorded, "NO NAME" appears in the display.

\*3 If the dual information is on, clock does not appear in the display.

### Tip

If the name of the MD is too long, you can scroll it across the display window by pressing **(SHIFT)**, then **(1)** (←).

## Automatically scrolling a disc name

### — Auto Scroll

The Auto Scroll function automatically scrolls the disc name of the MD when the title length exceeds eight characters when you press **(DSPL)**.

1 Press **(SHIFT)**, then press **(2)** (SET UP) repeatedly until "A.SCRL" appears.

2 Press **(4)** (→) to select "A.SCRL-ON."

To cancel Auto Scroll, select "A.SCRL-OFF" in step 2 above.

EN

Radio/Other Functions/CD/MD Changer

## Displaying the recording date of the currently selected MD

Press **(DSPL)** for two seconds during MD playback.  
The recording date of the track is displayed for about three seconds.

## Locating a specific track

### — Automatic Music Sensor (AMS)

During playback, press either side of **(SEEK/AMS)** once for each track you want to skip.



To locate succeeding tracks

To locate previous tracks

## Locating a specific point in a track

### — Manual Search

During playback, press and hold either side of **(SEEK/AMS)**. Release the button when you have found the desired point.



To search forward

To search backward

## Locating a disc by disc number

### — Direct Disc Selection

Press the number button that corresponds with the desired disc number.

The desired disc in the currently selected changer begins playback.

## Scanning the tracks

### — Intro Scan

You can play the first 10 seconds of all the tracks on the currently selected disc.

**1** During playback, press **(SHIFT)**, then press **(3)** (PLAY MODE) repeatedly until "INTRO" appears.

**2** Press **(4)** (→) to select "INTRO-ON."  
Intro Scan starts.

To go back to the normal playback mode, select "INTRO-OFF" in step 2 above.

## Playing tracks repeatedly

### — Repeat Play

You can select:

- REP 1 to repeat a track.
- REP 2 to repeat a disc.
- REP 3 to repeat all the discs in the current changer.

**1** During playback, press **(SHIFT)**, then press **(3)** (PLAY MODE) repeatedly until "REP" appears.

**2** Press **(4)** (→) repeatedly until the desired setting appears.



Repeat Play starts.

To go back to the normal playback mode, select "REP-OFF" in step 2 above.

## Playing tracks in random order

 
### — Shuffle Play

You can select:

- SHUF 1 to play the tracks on the current disc in a random order.
- SHUF 2 to play the tracks in the current changer in a random order.
- SHUF 3 to play all tracks in a random order.

**1** During playback, press **(SHIFT)**, then press **(3)** (PLAY MODE) repeatedly until "SHUF" appears.

**2** Press **(4)** (→) repeatedly until the desired setting appears.



Shuffle Play starts.


To go back to the normal playback mode, select "SHUF-OFF" in step 2 above.

## Labeling a CD — Disc Memo

 (CD changer with custom file function)

You can label each disc with a personalized name. You can enter up to eight characters for a disc. If you label a CD, you can locate a disc by name and select the specific tracks for playback (page 14).


- 1 Play the CD and press **(LIST)** for two seconds.



- 2 Enter the characters.

- 1 Press **(+)** to select the desired characters.

 (A → B → C → ... Z → 0 → 1 → 2 → ... 9 → + → - → \* → / → \ → > → < → . → \_)




If you press **(-)**, the characters appear in the reverse order.

If you want to put a blank space between characters, select **"\_"** (under-bar).

- 2 Press **(4) (→)** after locating the desired character.

 The flashing cursor moves to the next space.



If you press **(1) (←)**, the flashing cursor moves to the left.

- 3 Repeat steps 1 and 2 to enter the entire name.


- 3 To return to the normal CD playback mode, press **(LIST)** for two seconds.

### Tip

 
To erase/correct a name, enter **"\_"** (under-bar) for each character.

## Displaying the disc memo

Press **(DSPL)** during CD playback.



 Each time you press **(DSPL)** during CD playback, the item changes as follows:



## Erasing the disc memo

- 1 Press **(SOURCE)** to select the CD changer (for example CD2 or CD3).

- 2 Press **(LIST)** for two seconds.

- 3 Press **(DSPL)** for two seconds.

- 4 Press **(+)** or **(-)** to select the name that you want to erase.

- 5 Press **(5) (ENTER)** for two seconds.

The name is erased.

Repeat steps 4 and 5 if you want to erase other names.

- 6 Press **(LIST)** for two seconds.

The unit returns to the normal CD playback mode.

EN

CD/MD Changer

 
## Locating a disc by name

— List-up (CD changer with custom file function or MD changer)

You can use this function for the discs that have been assigned a custom name. For more information on disc names, refer to "Labeling a CD."

- 1 Press **(LIST)** momentarily.

The name assigned to the disc currently playing appears in the display.



continue to next page →

2 Press **(LIST)** repeatedly until you find the desired disc.

3 Press **(5)** (ENTER) to play back the disc.

#### Notes

- Once a disc name has been displayed for five seconds, the display goes back to its normal playback mode. To turn off the display, press **(DSPL)**.
- The track names are not displayed during MD playback.
- If there are no discs in the magazine, "NO DISC" appears in the display.
- If a disc has not been assigned a custom file, "\*\*\*\*\*" appears in the display.
- If the disc information has not been read by the unit, "NOT READ" appears in the display. To load the disc, first press the number button, then choose the disc that has not been loaded.
- The information is displayed only in upper cases. There are also some letters which cannot be displayed (during MD playback).

EN

## Selecting the specific tracks for playback

 
— Bank

(CD changer with custom file function)

If you label the disc, you can set the unit to skip tracks and play only the tracks you want.

1 Start playing the disc and press **(SHIFT)**. Then press **(3)** (PLAY MODE) for two seconds.


Bank edit mode



#### Note

If you have not labeled the disc, the bank edit mode does not appear and the program edit mode appears. To go back to the normal playback mode, press **(SHIFT)**.

 2 Press either side of **(SEEK/AMS)** to select the track number you want to skip and press **(5)** (ENTER).



The indication changes from "PLAY" to "SKIP." If you want to return to "PLAY," press **(5)** (ENTER) again.

3 Repeat step 2 to set the "PLAY" or "SKIP" mode on all the tracks.

4 Press **(3)** (PLAY MODE) for two seconds. The unit returns to the normal CD playback mode.

#### Notes

- You can set the "PLAY" and "SKIP" mode on up to 24 tracks.
- You cannot set the "SKIP" mode on all the tracks.

## Playing the specific tracks only

You can select:

- BANK-ON to play the tracks with the "PLAY" setting.
- BANK-INV (Inverse) to play the tracks with the "SKIP" setting.

1 During playback, press **(SHIFT)**, then press **(3)** (PLAY MODE) repeatedly until "BANK" appears.

2 Press **(4)** (→) repeatedly until the desired setting appears.

→ BANK-ON → BANK-INV → BANK-OFF



Playback starts from the track following the current one.

To go back to the normal playing mode, select "BANK-OFF" in step 2 above.

 
## Creating a program

— CD Program Memory (CD changer with program memory function)

You can play the tracks in the order you want by making your own program. You can make two programs: Program 1 and Program 2. You can select up to 12 tracks in each program. You can store the programs in memory.

1 Press **(SHIFT)**, then press **(3)** (PLAY MODE) for two seconds.

Program edit mode



"P 1" shows Program 1 is selected.


If you have labeled the disc, the bank edit mode appears. Press (3) (PLAY MODE) to display "P 1" above.

To select Program 2, press (4) (→) repeatedly until "P 2" appears.

## 2 Select the track you want.

- 1 Press (SOURCE) repeatedly to select the changer.
- 2 Press (SHIFT), then press the number button to select the disc.
- 3 Press (SHIFT).
- 4 Press either side of (SEEK/AMS) to select the track.

## 3 Press (5) (ENTER) momentarily.

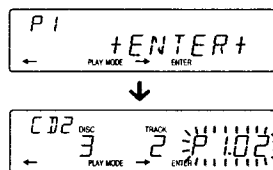

## 4 To continue entering tracks, repeat steps 2 and 3.

## 5 When you finish entering tracks, press (3) (PLAY MODE) for two seconds.

### Notes

- "WAIT\*" appears in the display while the unit is reading the data, or when a disc has not been put into the unit.
- "FULL\*" appears in the display when you try to enter more than 12 tracks into a program at one time.

### Playing the stored program

Changing the disc order in the changer will not affect program memory play.

 
You can select:

- PGM 1 to play Program 1.
- PGM 2 to play Program 2.
- PGM 1+2 to play Programs 1 and 2.

## 1 Press (SHIFT).

## 2 Press (3) (PLAY MODE) repeatedly until "PGM" appears.

## 3 Press (4) (→) repeatedly until the desired program appears.



Program Play starts.


To go back to the normal playback mode, select "PGM-OFF" in step 3 above.

### Notes

 - If you press the number button during program memory play, program memory play is interrupted, and playback of the selected disc starts.
- "NO DATA" appears in the display if no track is stored in the program.
- If a track stored into the program memory is not in the disc magazine, the track will be skipped.
- When the disc magazine contains not a single track stored into the program memory, or when the program information has not been loaded yet, "NO READY" appears.

### Erasing the entire program


## 1 Press (SHIFT), then press (3) (PLAY MODE) for two seconds.



"P 1" shows Program 1 is selected.


If you have labeled the disc, the bank edit mode appears. Press (3) (PLAY MODE) to display "P 1" above.

## 2 Press (1) (←) repeatedly until "DEL" appears.

 

To erase Program 2, press (4) (→) repeatedly until "PGM 2" appears.

## 3 Press (5) (ENTER) for two seconds.

 

The entire program is erased.


## 4 When you finish erasing programs, press (3) (PLAY MODE) for two seconds.

 EN

CD/MD Changer

### Adding tracks to the program

- 1 Press (SHIFT), then press (3) (PLAY MODE) for two seconds.




"P 1" shows Program 1 is selected.

If you have labeled the disc, the bank edit mode appears. Press (3) (PLAY MODE) to display "P 1" above.

To select Program 2, press (4) (→) repeatedly until "P 2" appears.

- 2 Press (1) (←) or (4) (→) to select the track slot number where you want to insert a track.

 track slot number



EN

- 3 Press either side of (SEEK/AMS) to select the track you want to insert.

- 4 Press (5) (ENTER) momentarily to enter the track.

The current track in that slot number and the succeeding tracks shift down. To continue inserting tracks, repeat steps 2 through 4.


#### Note

 Once all 12 slots have been filled, "FULL" appears in the display, and you cannot insert tracks.

- 5 When you finish inserting tracks, press (3) (PLAY MODE) for two seconds.

### Erasing the tracks in the program

- 1 Press (SHIFT), then press (3) (PLAY MODE) for two seconds.




"P 1" shows Program 1 is selected.

If you have labeled the disc, the bank edit mode appears. Press (3) (PLAY MODE) to display "P 1" above.

To select Program 2, press (4) (→) repeatedly until "P 2" appears.



- 2 Press (1) (←) or (4) (→) to select the track you want to erase.

 Track slot number



The track currently registered in slot 6 of Program 1.

  - 3 Press (5) (ENTER) for two seconds. When you erase a track from a slot number, the succeeding tracks shift up to fill the gap.



- 4 To continue erasing tracks, repeat steps 2 and 3.

- 5 When you finish erasing tracks, press (3) (PLAY MODE) for two seconds.



## Additional Information

### Precautions

 
- If your car was parked in direct sunlight resulting in a considerable rise in temperature inside the car, allow the unit to cool off before operating it.
- If no power is being supplied to the unit, check the connections first. If everything is in order, check the fuse.
- If no sound comes from the speakers of two-speaker systems, set the fader control to the center position.
- If your car is equipped with a power antenna, note that it will extend automatically while the unit is operating.

If you have any questions or problems concerning your unit that are not covered in this manual, please consult your nearest Sony dealer.


#### Notes on handling CDs



A dirty or defective disc may cause sound dropouts while playing. To enjoy optimum sound, handle the disc as follows. Handle the disc by its edge. To keep the disc clean, do not touch the surface.



Do not stick paper or tape on the labeled surface.

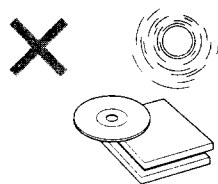

Do not expose the discs to direct sunlight or heat sources such as hot air-ducts, or leave them in a car parked in direct sunlight where there can be a considerable rise in the temperature inside the car.



Before playing, clean the discs with an optional cleaning cloth. Wipe each disc from the center out.

Do not use solvents such as benzine, thinner, commercially available cleaners or antistatic spray intended for analog discs.

#### Notes on moisture condensation

On a rainy day or in a very damp area, moisture may condense on the lenses inside the CD player. Should this occur, the unit will not operate properly. In this case, remove the disc and wait for about an hour until the moisture evaporates.


#### When you play 8 cm (3 in.) CDs

Use the optional Sony compact disc single adapter (CSA-8) to protect the CD player from being damaged.

### Maintenance

#### Fuse replacement

When replacing the fuse, be sure to use one that matches the amperage described on the fuse. If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In such a case, consult your nearest Sony dealer.

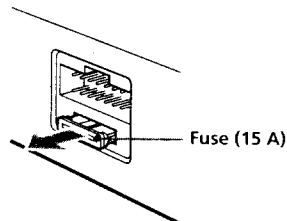

#### Warning


Never use a fuse with an amperage rating exceeding the one supplied with the unit as this could damage the unit.

EN


CD/MD Changer/Additional Information

### Cleaning the connectors

The unit may not function properly if the connectors between the unit and the front panel are not clean. To prevent this, open the front panel by pressing **(RELEASE)**, then detach it and clean the connectors with a cotton swab dipped in alcohol. Do not apply too much force. Otherwise, the connectors may be damaged.

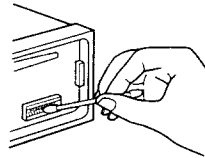


Main unit

 

Back of the front panel

EN

### Dismounting the unit


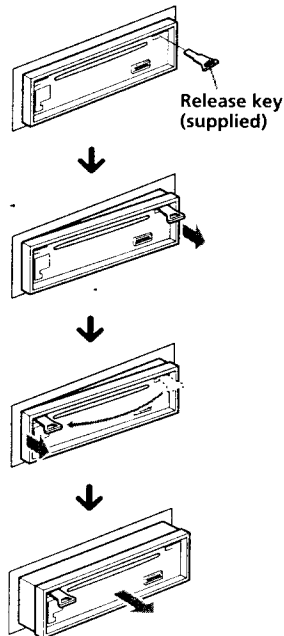


### Attaching the label to the rotary remote


You can control this unit with the optional rotary remote (RM-X2S).

Several labels are supplied with the rotary remote. Attach the label that match the functions of this unit and the mounting position of the rotary remote.

After you mount the rotary remote, attach the label in the illustration below.

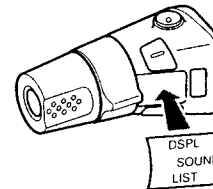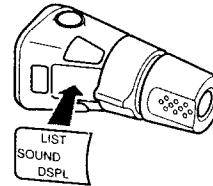

## Location of controls

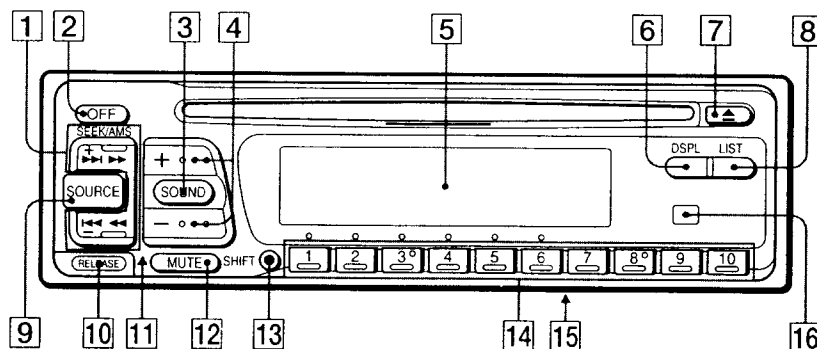

Refer to the pages for details.


- |   |  |
|---|--|
| <p><b>1</b> SEEK/AMS (seek/Automatic Music Sensor/manual search) button 5, 6, 7, 8, 9, 12, 14, 15, 16</p> <p><b>2</b> OFF button 4, 5</p> <p><b>3</b> SOUND button 10</p> <p><b>4</b> <math>\oplus</math> <math>\ominus</math> (volume/sub output level/bass/treble/balance/fader control) buttons 5, 9, 10, 13</p> <p><b>5</b> Display window</p> <p><b>6</b> DSPL (display mode change) button 5, 9, 10, 11, 12, 13</p> <p><b>7</b> <math>\blacktriangle</math> (eject) button 5</p> <p><b>8</b> LIST button<br/>Disc Memo 13<br/>List-up 10, 13, 14<br/>Station Memo 9, 10</p> <p><b>9</b> SOURCE (source select) button 5, 8, 9, 11, 13, 15</p> <p><b>10</b> RELEASE (front panel release) button 4, 18</p> | <p><b>11</b> Reset button (located on the front side of the unit hidden by the front panel) 4</p> <p><b>12</b> MUTE button 10</p> <p><b>13</b> SHIFT button<br/>BTM 8<br/>PLAY MODE 6, 7, 8, 9, 12, 14, 15, 16<br/>SET UP 5, 11</p> <p><b>14</b> During radio reception:<br/>Number buttons 8, 9<br/>During CD/MD playback:<br/>Direct disc selection buttons 12</p> <p><b>15</b> POWER SELECT switch (located on the bottom of the unit)<br/>See "POWER SELECT Switch" in the installation/Connections manual.</p> <p><b>16</b> Receptor for the optional wireless remote</p> |
|---|--|

EN

Additional Information

## Location of controls

**Optional wireless remote (RM-X41)**

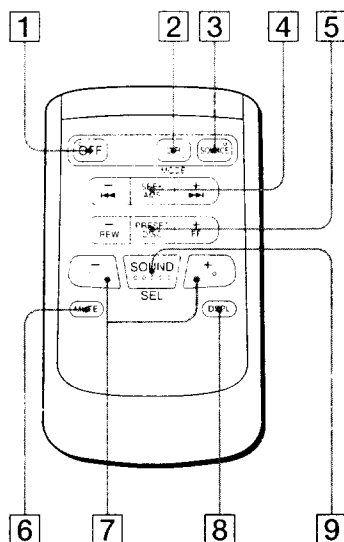

EN

**The buttons of the wireless remote work the same functions as those on this unit.**

1 OFF button

2 DIR button

(DIR) does not work with this unit.

3 SOURCE button

4 SEEK/AMS button

5 PRESET/DISC button

*You cannot do the manual search and manual tuning with the remote.*

6 MUTE button

7 - + buttons

8 DSPL button

9 SOUND button

When the POWER SELECT switch is set to the **Ⓟ** position, the unit cannot be operated with the wireless remote unless (SOURCE) on the unit is pressed or a CD is inserted to activate the unit first.

## Specifications

### AUDIO POWER SPECIFICATIONS

#### POWER OUTPUT AND TOTAL HARMONIC DISTORTION

15 watts per channel minimum continuous average power into 4 ohms, 4 channels driven from 20 Hz to 20 kHz with no more than 1 % total harmonic distortion.

### Other specifications

#### CD player section

System	Compact disc digital audio system
Signal-to-noise ratio	90 dB
Frequency response	10 – 20,000 Hz
Wow and flutter	Below measurable limit
Laser Diode Properties	
Material	GaAlAs
Wavelength	780 nm
Emission Duration	Continuous
Laser output power	Less than 44.6 $\mu$ W*

\* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

#### Tuner section

##### FM

Tuning range	87.5 – 107.9 MHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz
Usable sensitivity	8 dBf
Selectivity	75 dB at 400 kHz
Signal-to-noise ratio	62 dB (stereo), 65 dB (mono)
Harmonic distortion at 1 kHz	0.9 % (stereo), 0.3 % (mono)
Separation	35 dB at 1 kHz
Frequency response	30 – 15,000 Hz
Capture ratio	2 dB

##### AM

Tuning range	530 – 1,710 kHz
Antenna terminal	External antenna connector
Intermediate frequency	10.71 MHz/450 kHz
Sensitivity	30 $\mu$ V

#### Power amplifier section

Outputs	Speaker outputs (sure seal connectors)
Speaker impedance	4 – 8 ohms
Maximum power output	35 W $\times$ 4 (at 4 ohms)

#### General

Output lead	Power antenna relay control lead Power amplifier control lead
Tone controls	Bass $\pm$ 8 dB at 100 Hz Treble $\pm$ 8 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 188 $\times$ 58 $\times$ 177 mm (7 $\frac{1}{2}$ $\times$ 2 $\frac{1}{8}$ $\times$ 7 in.) (w/h/d)
Mounting dimensions	Approx. 178 $\times$ 50 $\times$ 154 mm (7 $\frac{1}{8}$ $\times$ 2 $\times$ 6 $\frac{1}{8}$ in.) (w/h/d)
Mass	Approx. 1.5 kg (3 lb. 4.9 oz.)
Supplied accessories	Parts for installation and connections (1 set) Front panel case (1)
Optional accessories	Rotary remote RM-X2S Wireless remote RM-X41 BUS cable (supplied with an RCA pin cord) RC-61 (1 m), RC-62 (2 m) RCA pin cord RC-63 (1 m), RC-64 (2 m), RC-65 (5 m) Cleaning cloth XP-CD1 Compact disc single adapter CSA-8
Optional equipment	CD changer CDX-71 (10 discs), CDX-72 (10 discs), CDX-81 (10 discs), CDX-91 (10 discs), CDX-T60 (6 discs), CDX-T62 (6 discs) MD changer MDX-40, MDX-60 Source selector XA-U20, etc.

EN

Additional Information

Design and specifications are subject to change without notice.

## Troubleshooting guide

The following check will help you remedy the problems that you may encounter with your unit. Before going through the checklist below, check the connection and operating procedures.

### General

Problem	Cause/Solution
No sound.	<ul style="list-style-type: none"><li>• Adjust the volume with (+).</li><li>• Set the fader control to the center position for two-speaker systems.</li></ul>
The contents of the memory have been erased.	<ul style="list-style-type: none"><li>• The power cord or battery has been disconnected.</li><li>• The reset button has been pressed. → Store again into the memory.</li></ul>
Indications do not appear in the display.	Remove the front panel and clean the connectors. See "Cleaning the connectors" (page 18) for details.

### CD/MD playback

Problem	Cause/Solution
A disc cannot be loaded.	<ul style="list-style-type: none"><li>• Another CD is already loaded.</li><li>• The CD is forcibly inserted upside down or in the wrong way (MD).</li></ul>
Play does not begin.	Defective MD or dusty CD.
A disc is automatically ejected.	The ambient temperature exceeds 50°C (122°F).
The operation buttons do not function.	Press the reset button.
The sound skips due to vibration.	<ul style="list-style-type: none"><li>• The unit is installed at an angle of more than 20°.</li><li>• The unit is not installed in a sturdy part of the car.</li></ul>

### Radio reception

Problem	Cause/Solution
Preset tuning is not possible.	<ul style="list-style-type: none"><li>• Memorize the correct frequency.</li><li>• The broadcast signal is too weak.</li></ul>
Automatic tuning is not possible.	<p>The broadcast signal is too weak. → Use manual tuning.</p>
The "ST" indication flashes.	<ul style="list-style-type: none"><li>• Tune in the frequency correctly.</li><li>• The broadcast signal is too weak. → Set to the MONO mode (page 9).</li></ul>

### Error displays (when the optional CD/MD changer is connected)

The following indications will flash for about five seconds, and an alarm sound will be heard.

Display	Cause	Solution
NO MAG	The disc magazine is not inserted in the CD/MD changer.	Insert the disc magazine with discs into the CD/MD changer.
NO DISC	No disc is inserted in the CD/MD changer.	Insert the discs in the CD/MD changer.
ERROR <sup>*1</sup>	A CD is dirty or inserted upside down. <sup>*2</sup>	Clean or insert the CD correctly.
	An MD does not play because of some problem. <sup>*2</sup>	Insert another MD.
BLANK <sup>*1</sup>	No tracks have been recorded on an MD. <sup>*2</sup>	Play an MD with recorded tracks on it.
RESET	The CD/MD changer cannot be operated because of some problem.	Press the reset button of the unit.
NO READY	The lid of the MD changer is open or MDs are not inserted properly.	Close the lid or inserted the MDs properly.
HI TEMP	The ambient temperature is more than 50°C (122°F).	Wait until the temperature goes down below 50°C (122°F).

<sup>\*1</sup> When an error occurs during playback of an MD or CD, the disc number of the MD or CD does not appear in the display.

<sup>\*2</sup> The disc number of the disc causing the error appears in the display.

If the above-mentioned solutions do not help improve the situation, consult your nearest Sony dealer.

EN

Additional Information

# Index

## A

Automatic Music Sensor (AMS) 5, 12  
Automatic tuning 9  
Auto Scroll 11

## B

Balance 10  
Bass 10  
Bank Play 14  
Beep tone 11  
Best Tuning Memory (BTM) 8

## C

Caution alarm 4  
CD playback 5, 11  
CD program memory 6, 14  
Clock 5

EN

## D, E

Direct disc selection 12  
Disc Memo 13  
Disc Scan 12  
Display 5, 9, 10, 11, 13  
Dual information 11

## F, G, H

Fader 10  
Front panel 4  
Fuse 17

## I, J, K

Illumination color 11  
Intro Scan 6, 12

## L

List-up 10, 13  
Local seek 9  
Locating  
    a disc 12, 13  
    a specific point 6, 12  
    a specific track 5, 12  
    a station 10  
Loudness 11

## M, N, O

Manual search 6, 12  
Manual tuning 9  
MD playback 11  
Memorizing a station 8  
Monaural mode 9  
Mute 10

## P, Q

PLAY MODE  
    BANK 14  
    INTRO 6, 12  
    MONO 9  
    PGM 6, 14  
    REP 6, 12  
    SHUF 6, 12  
Program 6, 14

## R

Radio 8  
Repeat Play 6, 12  
Reset 4  
Rotary remote 11, 18

## S

SET UP  
    AMBER 11  
    A.SCRL 11  
    BEEP 11  
    CLOCK 5  
    DIM 11  
    D.INFO 11  
    GREEN 11  
    LOUD 11  
    RM 11  
Shuffle Play 6, 12  
Station Memo 9

## T, U

Treble 10

## V

Volume 10

## W, X, Y, Z

Wireless remote 20