

SONY

FM/AM Compact Disc Player

Operating Instructions _____

EN

Owner's Record

The model and serial numbers are located on the bottom of the unit.
Record the serial number in the space provided below.
Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. CDX-C880 Serial No. _____

For installation and connections, see the supplied installation/connections manual.



CDX-C880

© 1998 by Sony Corporation

Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Welcome !

Thank you for purchasing the Sony Compact Disc Player. This unit lets you enjoy a variety of features by using either a supplied remote commander or an optional wireless remote.

In addition to the CD playback and radio operations, you can expand your system by connecting an optional CD/MD unit*. If you operate this unit or connect an optional CD unit with the CD TEXT function, the CD TEXT information will appear in the display when you play back a CD TEXT disc.

* You can connect to a CD changer and an MD changer.

* A CD TEXT disc is an audio CD that includes information such as the disc name, artist name, and track names. This information is recorded on the disc.

Voice guide for safe driving

This unit has a voice guide function*. When the voice guide function is on, the unit gives vocalized comments on functions corresponding to the relevant button push.


* Some optional power amplifiers may cause a break at the beginning of vocalized comments. When you connect an optional MD changer, the sound from the first MD may continue for a short time even after the vocalized comments about the second MD are announced.

BBE*

With the BBE, you can obtain edged bass which naturally makes the sound clear. When reproducing an original sound, the treble may be masked with the bass as the treble tends to be delayed compared with the bass, resulting in unclear sound. The BBE reproduces almost original sound by adjusting the sound balance.

* The BBE is manufactured by Sony Corporation under license from BBE Sound, Inc. It is covered by U.S. Patent No. 4,638,258 and No. 4,482,866. The word "BBE" and the BBE Symbol are the trademarks of BBE Sound, Inc.

Location of controls

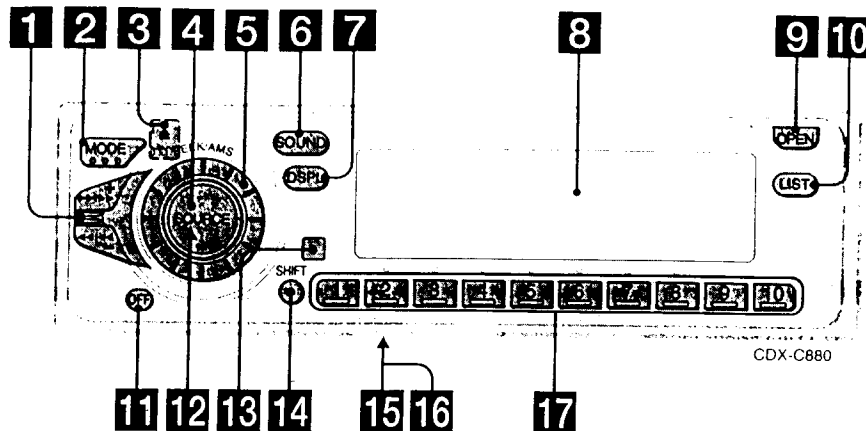

EN

Refer to the pages for details.

- 1** SEEK/AMS (seek/Automatic Music Sensor/manual search) control
9, 10, 12, 13, 14, 20, 21, 22, 25, 31
- 2** MODE (band/unit select) button
13, 19, 21, 24, 31
- 3** Δ (eject) button (located on the front side of the unit hidden by the front panel) 8
- 4** SOURCE (TUNER/CD/MD/TV) button
8, 13, 18, 19, 21, 24, 26, 27, 29, 30, 31, 33
- 5** Dial (volume/subwoofer volume/bass/treble/left-right/rear-front control)
7, 15, 17, 23, 24, 26, 27, 28, 29, 30
- 6** SOUND button 17, 26, 27, 28, 29, 30
- 7** DSPL (display mode change) button
8, 9, 14, 15, 19, 24, 25
- 8** Display window
- 9** OPEN button 6, 8, 34
- 10** LIST button
Station Memo 14, 15, 32
Disc Memo 23, 24
List-up 15, 25
DSP Custom File 27
- 11** OFF button 6, 8
- 12** Reset button (located on the front side of the unit behind by the front panel)
- 13** Receptor for the optional wireless remote
- 14** SHIFT button
PLAY MODE 9, 10, 11, 12, 13, 14, 20, 22, 23, 25, 26, 27, 31
REP 10, 20
SET UP 7, 9, 18, 19, 30
SHUF 10, 20
- 15** POWER SELECT switch (located on the bottom of the unit)
See "POWER SELECT Switch" in the Installation/Connections manual.
- 16** LINE-OUT/IN SELECT switch (located on the bottom of the unit)
See "LINE-OUT/IN SELECT switch" in the Installation/Connections manual.
- 17** During radio reception:
Number buttons 13
During CD/MD playback:
Direct disc selection buttons 20, 21
During TV reception:
Number buttons 31

Table of Contents

This Unit Only

Location of controls	4
----------------------------	---

Getting Started

Resetting the unit	6
Detaching the front panel	6
Preparing the rotary commander	7
Setting the clock	7

CD Player

Listening to a CD	8
Playing a CD in various modes	9
Creating a program	10
— CD Program Memory	10

Radio

Memorizing stations automatically	13
— Best Tuning Memory (BTM)	13
Memorizing only the desired stations	13
Receiving the memorized stations	13
Storing the station names	14
— Station Memo	14
Locating a station by name	15
— List-up	15

Other Functions

Using the rotary commander	16
Adjusting the sound characteristics	17
Attenuating the sound	17
Changing the sound and display settings	18
Adjusting the frequency of the subwoofer(s)	18

With Optional Equipment

CD/MD Unit

Playing a CD or MD	19
Scanning the tracks	20
— Intro Scan	20
Playing tracks repeatedly	20
— Repeat Play	20
Playing tracks in random order	20
— Shuffle Play	20
Creating a program	21
— Program Memory	21
Labeling a CD	23
— Disc Memo	23
Locating a disc by name	25
— List-up	25
Selecting specific tracks for playback	25
— Bank	25

DSP

Selecting a surround menu	26
Storing a surround effect onto CDs	27
— Digital Signal Processor (DSP) Custom	27
File	27
Selecting the listening position	28
Adjusting the fader (FAD)	29
Adjusting the volume of the subwoofer(s)	29
Adjusting the volume of the bass and treble	30
Listening to each program source in its registered surround menu	30
— Last Sound Memory (LSM)	30
Changing the line output level	30

TV/Video


Watching the TV	31
Watching a video	31
Memorizing TV channels automatically	31
Memorizing only the desired TV channels	31
Storing the TV channel names	32
Displaying the information stored on discs	32
Watching the TV or video while listening to a CD or MD	33
— Simultaneous Play	33

Additional Information

Precautions	33
Maintenance	34
Dismounting the unit	35
Specifications	36
Troubleshooting guide	37

EN

**Optional wireless
remote (RM-X47)**

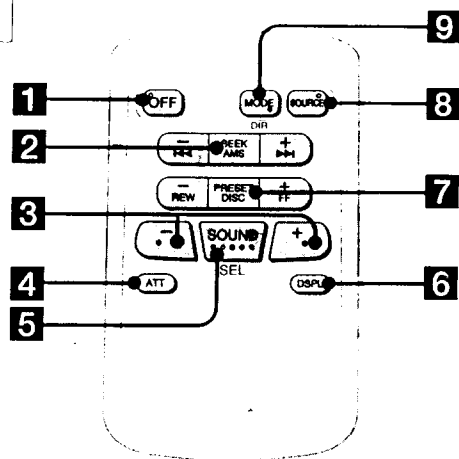

EN

The buttons of the wireless remote work the same functions as those on this unit.

- | | |
|--|--|
| <p>1 OFF button</p> <p>2 SEEK/AMS button</p> <p>3 - + buttons</p> <p>4 ATT button</p> <p>5 SOUND/SEL button</p> <p>6 DSPL button</p> | <p>7 PRESET/DISC button
<i>You cannot do manual search and manual tuning with the remote.</i></p> <p>8 SOURCE button</p> <p>9 MODE/DIR button
(MODE) controls the same function on this unit.</p> |
|--|--|

 
When the POWER SELECT switch is set to the **B** position, the unit cannot be operated with the wireless remote unless (SOURCE) on the unit is pressed or a CD is inserted to activate the unit first.

Getting Started

Resetting the unit

Before operating the unit for the first time or after replacing the car battery, you must reset the unit.

Press the reset button with a pointed object, such as a ballpoint pen.



Reset button

Notes

- Pressing the reset button will erase the clock and some memorized functions.
- When you connect the power supply cord to the unit or reset the unit, wait for about 10 seconds before you insert a disc. If you insert a disc within these 10 seconds, the unit will not be reset, and you will have to press the reset button again.


EN

Detaching the front panel

You can detach the front panel of this unit to prevent the unit from being stolen.

1 Press **OFF**.

2 Press **OPEN** to open the front panel, then slide the front panel to the right side, and pull out the left side of the front panel.


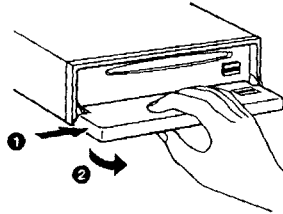


Notes

- Do not put anything on the inner surface of the front panel.
- Be sure not to drop the panel when detaching it from the unit.
- If you detach the panel while the unit is still on, the power will turn off automatically to prevent the speakers from being damaged.
- When you carry the front panel with you, put it in the supplied front panel case.

6

Place the hole (a) in the front panel or spindle (b) on the unit as illustrated, if the left side in.

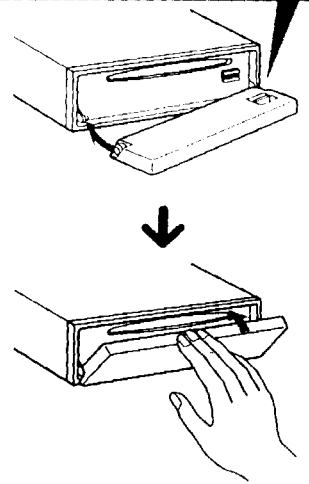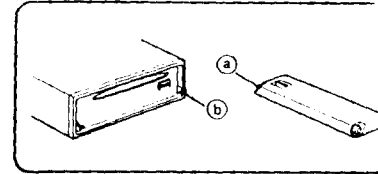

Notes



- Be sure not to attach the front panel upside down.
- Do not press the front panel hard against the unit when attaching it. Press it lightly against the unit.
- Do not press hard or put excessive pressure on the display windows of the front panel.
- Do not expose the front panel to direct sunlight, heat sources such as hot air ducts, and do not leave it in a humid place. Never leave it on the dashboard of a car parked in direct sunlight where there may be a considerable rise in temperature.

Caution alarm

If you turn the ignition key switch to the **OFF** position without removing the front panel, the caution alarm will beep for a few seconds (only when the POWER SELECT switch is to the **A** position).

Preparing the rotary commander

When you mount the rotary commander, attach the label shown in the illustration below.

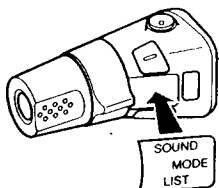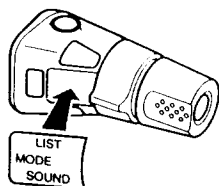


Setting the clock


The clock uses a 12-hour digital indication.

Example: Set the clock to 10:08

 1 Press **(SHIFT)**, then press **(3)** (SET UP).




1 Press **(5)** (→).

 


The hour digit flashes.

2 Set the hour.

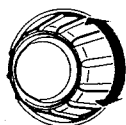


to go backward

 to go forward




3 Press **(5)** (→).

 


The minute digits flash

4 Set the minute.

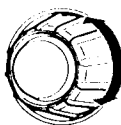


to go backward

 to go forward



2 Press **(SHIFT)**.

 

The clock starts.

3 Press **(SHIFT)**.

After the mode setting is complete, the display goes back to normal playback mode.

Note

If the **POWER SELECT** switch on the bottom of the unit is set to the **(1)** position, turn the power on first, then set the clock.


EN

Getting Started

CD Player

Listening to a CD


- 1 Press **(OPEN)** and insert the CD.
Labelled side up

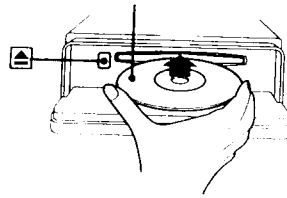

- 2 Close the front panel.
Playback starts automatically.

EN

If a CD is already inserted, press **(SOURCE)** repeatedly until "CD" appears.

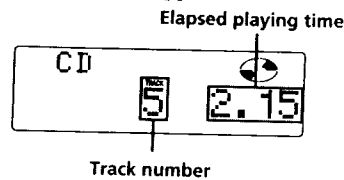


Note

To play back an 8 cm (3 in.) CD, use the optional Sony compact disc single adapter (CSA-8).

To	Press
Stop playback	(OFF)
Eject the CD	(OPEN) then ▲

Changing the displayed item

Each time you press **(DSPL)**, the item changes as follows:

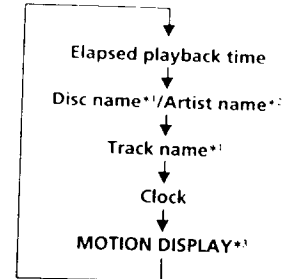

*1 If you inserted a non-CD TEXT disc, "NO D.Name" or "NO T.Name" appears in the display.

*2 If you play a CD TEXT disc, the artist name appears in the display after the disc name. (C for CD TEXT discs with the artist name.)

*3 All the items above are scrolled in the display, one by one in order.

You can label CD and CD TEXT discs with a personalized name using the disc memo function, refer to "Labeling a CD" (page 23). However, if you use personalized labels, they will always take priority over the original CD TEXT information when such information is displayed.

Tips

- If the name of the CD TEXT disc is too long, you can scroll it across the display by pressing **(SHIFT)**, then **(2)** (←).
- If you want to display the original CD TEXT information after labelling the CD TEXT disc with a personalized name, press **(SHIFT)**, then **(5)** (→).

Playing a CD in various modes

You can play CDs in various modes:


- Intro (Intro Scan) lets you play the first 10 seconds of all the tracks.
- Repeat (Repeat Play) repeats the current track.
- Shuf (Shuffle Play) plays all the tracks in random order.

Searching for the desired track

— Intro scan

- 1 Press **(SHIFT)**.

Every time you press **(SHIFT)**, only the items you can select light up.

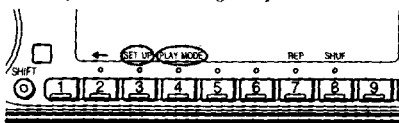

- 2 Press **(4)** (PLAY MODE) repeatedly until "Intro" appears.

Each time you press **(4)** (PLAY MODE), the item changes as follows:

Intro ↔ PGM



- 3 Press **(5)** (→) to select "Intro on."



Intro Scan starts.

- 4 Press **(SHIFT)**.

To go back to normal playback mode, select "Intro off" in step 3 above.

If the disc name/artist name or track name on a CD TEXT disc exceeds 10 characters and the Auto Scroll function is on, automatically scrolls on the display as follows:

- The disc name appears when the disc has changed (if the disc name is selected).
- The track name appears when the track has changed (if the track name is selected).

If you press **(DSPL)** to change the display item, the disc or track name of the CD TEXT disc is scrolled automatically whether you set the function on or off.

- 1 During playback, press **(SHIFT)**.
- 2 Press **(3)** (SET UP) repeatedly until "A.Scl" appears.
- 3 Press **(5)** (→) to select "A.Scl on."
- 4 Press **(SHIFT)**.

To cancel Auto Scroll, select "A.Scl off" in step 3 above.

Note

For some CD TEXT discs with extremely many characters, the following cases may happen:

- Some of the characters are not displayed.
- Auto Scroll does not work.

Locating a specific track

— Automatic Music Sensor (AMS)

During playback, push the SEEK/AMS control up or down momentarily.

To locate succeeding tracks

To locate preceding tracks



Locating a specific point in a track

— Manual Search

During playback, push the SEEK/AMS control up or down and hold. Release when you have found the desired point.

To search forward

To search backward



Note

If "LLLLL" or "RRRRR" appears in the display, that means you have reached the beginning or the end of the disc and you cannot go any further.

EN

 
CD Player

Playing tracks repeatedly

— Repeat Play

1 During playback, press (SHIFT).

2 Press (7) (REP) repeatedly until "Repeat 1" appears.



Repeat Play starts.

3 Press (SHIFT).

To go back to normal playback mode, select "Repeat off" in step 2 above.


Playing tracks in random order

— Shuffle Play

EN

1 During playback, press (SHIFT).

2 Press (8) (SHUF) repeatedly until "Shuf 1" appears.

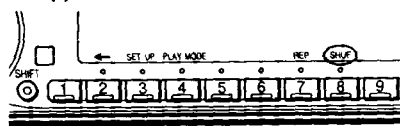

Shuffle Play starts.

3 Press (SHIFT).

 
To go back to normal playback mode, select "Shuf off" in step 2 above.

Creating a program

— CD Program Memory

You can play the tracks in the order you by making your own program. You can two programs: Program 1 and Program. can select up to 12 tracks for each progra You can store the programs in memory.

1 Press (SHIFT), then press (4) (PLAY MODE) for two seconds.





"P 1" indicates Program 1 is selected.

To select Program 2, press (5) (→) repeatedly until "P 2" appears.

2 Push the SEEK/AMS control up or do to select the track you want.

 3 Press (6) (ENTER) momentarily.

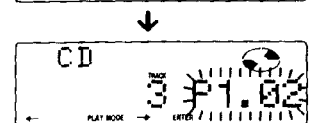

4 To continue entering tracks, repeat st 2 and 3.

5 When you finish selecting tracks, pres (4) (PLAY MODE) for two seconds.

6 Press (SHIFT).

Notes

- "Wait" appears in the display while the un reading the data.
- "Mem Full" appears in the display when yo try to enter more than 12 tracks into a progr

Playing the stored program

You can select:

 
- PGM 1 to play Program 1.
- PGM 2 to play Program 2.
- PGM 1+2 to play Programs 1 and 2.

1 Press **(SHIFT)**.


2 Press **(4)** (PLAY MODE) repeatedly until "PGM" appears.

3 Press **(5)** (→) repeatedly until the desired program appears.


Program 1 playback




Program 2 playback

 

Programs 1 and 2 playback

 

Normal playback

 

Program Play starts.

4 Press **(SHIFT)**.

 
To go back to normal playback mode, select "PGM off" in step 3 above.

Note

"Not ready" appears in the display if no track is stored in the program.

Erasing an entire program

1 Press **(SHIFT)**, then press **(4)** (PLAY MODE) for two seconds.




"P 1" indicates Program 1 is selected.

2 Press **(2)** (←) repeatedly until "DEL" appears.



To delete Program 2, press **(5)** (→) repeatedly until "PGM 2" appears.

 3 Press **(6)** (ENTER) for two seconds.



The entire program is erased.

4 When you finish erasing programs, press **(4)** (PLAY MODE) for two seconds.

5 Press **(SHIFT)**.

EN

CD Player

Adding tracks to a program

- 1 Press **(SHIFT)**, then press **(4)** (PLAY MODE) for two seconds.

 


"P 1" indicates Program 1 is selected.

To select Program 2, press **(5)** (**→**) repeatedly until "P 2" appears.

- 2 Press **(2)** (**←**) or **(5)** (**→**) to select the track slot number where you want to insert a track.

Track slot number



- 3 Push the SEEK/AMS control up or down to select the track you want to insert.

- 4 Press **(6)** (ENTER) momentarily to enter the track.

The current track in that slot number and the succeeding tracks shift down.

- 5 To continue inserting tracks, repeat steps 2 through 4.

Note

 
Once all 12 slots have been filled, "Mem Full*" appears in the display, and you cannot insert tracks.

- 6 When you finish inserting tracks, press **(4)** (PLAY MODE) for two seconds.

- 7 Press **(SHIFT)**.

Erasing tracks in a program

- 1 Press **(SHIFT)**, then press **(4)** (PLAY MODE) for two seconds.




"P 1" indicates Program 1 is selected.

To select Program 2, press **(5)** (**→**) repeatedly until "P 2" appears.



- 2 Press **(2)** (**←**) or **(5)** (**→**) to select the track you want to erase.

 Track slot number



The track currently registered in slot 6 of Program 1.

  - 3 Press **(6)** (ENTER) for two seconds. When you erase a track from a slot number, the succeeding tracks shift up to fill the gap.



- 4 To continue erasing tracks, repeat steps 2 and 3.

- 5 When you finish erasing tracks, press **(4)** (PLAY MODE) for two seconds.

- 6 Press **(SHIFT)**.

Radio

Memorizing stations automatically

— Best Tuning Memory (BTM)

The unit selects the stations with the strongest signals and memorizes them in the order of their frequencies. You can store up to 10 stations on each band (FM1, FM2 and AM).

Caution

When tuning in stations while driving, use Best Tuning Memory to prevent accidents.

- 1 Press **(SOURCE)** repeatedly to select the tuner.
Each time you press **(SOURCE)**, the source changes as follows:
CD ↔ TUNER

- 2 Press **(MODE)** repeatedly to select the band.
Each time you press **(MODE)**, the band changes as follows:



- 3 Press **(SHIFT)**, then press **(4)** (PLAY MODE) repeatedly until "B.T.M" appears.
- 4 Press **(5)** (→).
The unit stores stations in the order of their frequencies on the number buttons.
A beep sound and the setting is stored.
- 5 Press **(SHIFT)**.

Notes

- The unit does not store stations with weak signals. If only a few stations are received, some number buttons will retain their former setting.
- When a number is indicated in the display, the unit starts storing stations from the one currently displayed.

Memorizing only the desired stations

You can store up to 10 stations on each band (20 for FM1 and FM2, 10 for AM) in the order of your choice.

- 1 Press **(SOURCE)** repeatedly to select the tuner.
- 2 Press **(MODE)** repeatedly to select the band (FM1, FM2 or AM).
- 3 Push the SEEK/AMS control up or down to tune in the station you want to store on the number button.
- 4 Press and hold the desired number button (**(1)** to **(10)**) until "MEM" appears.
The number button indication appears in the display.

Note

If you try to store another station on the same number button, the previously stored station will be erased.

Receiving the memorized stations

- 1 Press **(SOURCE)** repeatedly to select the tuner.
- 2 Press **(MODE)** repeatedly to select the band (FM1, FM2 or AM).
- 3 Press the number button (**(1)** to **(10)**) momentarily where the desired station is stored.

EN

CD Player/Radio

station

Push the SEEK/AMS control up or down momentarily to search for the station (automatic tuning).

Scanning stops when the unit receives a station. Push the SEEK/AMS control up or down repeatedly until the desired station is received.

Note

If the automatic tuning stops too frequently, press (SHIFT), then press (4) (PLAY MODE) repeatedly until "Local" (local seek mode) is displayed. Then press (5) (→) to select "Local on." Press (SHIFT). Only the stations with relatively strong signals will be tuned in.

Tip

If you know the frequency of the station you want to listen to push the SEEK/AMS control up or down and hold until the desired frequency appears (manual tuning).

EN

If FM stereo reception is poor — Monaural Mode

1 Press (SHIFT), then press (4) (PLAY MODE) repeatedly until "Mono" appears.

2 Press (5) (→) repeatedly until "Mono on" appears.
The sound improves, but becomes monaural ("ST" disappears).

3 Press (SHIFT).

To go back to normal mode, select "Mono off" in step 2 above.

 
reception

If there is interference from neighboring stations, follow the steps below and select "Narrow". If interference is not a problem select "Wide" to maximize signal reception and improve sound quality or "IF Auto" switch between "Narrow" and "Wide" automatically.

1 Press (SHIFT) during FM reception.

2 Press (4) (PLAY MODE) repeatedly "IF Auto" appears.


3 Press (5) (→) repeatedly to select desired setting.



4 Press (SHIFT).

Changing the displayed items

 Each time you press (DSPL), the item changes as follows:



* All the items above are scrolled in the display one by one in order.

Storing the station name

 
—Station Memo

You can assign a name to each radio station and store it in memory. The name of the current station appears in the display. You can store up to eight characters for each station.

Storing the station names


1 Tune in a station whose name you want to store.

2 Press (LIST) for two seconds.



- 1 Rotate the dial clockwise to select the desired characters.

 
(A → B → C → ... Z → 0 → 1 → 2 → ... 9 → + → - → * → / → \ → > → < → . → _)



If you rotate the dial counterclockwise, the characters appear in the reverse order.

If you want to put a blank space between characters, select "_" (under-bar).

 - 2 Press (→) after locating the desired character.
The flashing cursor moves to the next space.




If you press (←), the flashing cursor moves to the left.

- 3 Repeat steps 1 and 2 to enter the entire name.
- 4 To return to normal radio reception, press (LIST) for two seconds.


Tip
To erase/correct a name, enter "_" (under-bar) for each character.

Displaying the station name

 Press (DSPL) during radio reception.



 Each time you press (DSPL), the item changes as follows:



*1 If the station name is not stored, "NO Name" appears in the display for one second.

*2 All the items above are scrolled in the display one by one in order.

Erasing the station name

- 1 Tune in any station and press (LIST) for two seconds.
- 2 Press (DSPL) for two seconds.
The station name appears in the display.
- 3 Rotate the dial to select the name you want to erase.
- 4 Press (ENTER) for two seconds.
The name is erased.
Repeat steps 3 and 4 if you want to erase other names.
- 5 Press (LIST) for two seconds.
The unit returns to normal radio reception mode.

Locating a station by name — List-up

- 1 Press (LIST) momentarily.
The name assigned to the current station appears in the display.
- 2 Press (LIST) repeatedly until you find the desired station.
- 3 Press (ENTER) to tune in the desired station.



Note

After the station name or frequency has been displayed for five seconds, the display goes back to normal mode. To turn off the display, press (DSPL).

EN


Radio

Other Functions

Using the rotary commander

The rotary commander works by pressing buttons and/or rotating controls. You can control an optional CD or MD unit with the rotary commander.

By pressing buttons (the SOURCE and MODE buttons)

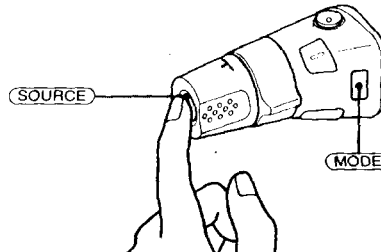

Each time you press **(SOURCE)**, the source changes as follows:

TUNER → CD → MD* → TV*

* When an optional MD unit, TV tuner or Video is connected.


Pressing **(MODE)** changes the operation in the following ways;

- Tuner: FM1 → FM2 → AM
- CD unit: CD1 → CD2 → ...
- MD unit: MD1 → MD2 → ...
- TV/Video: TV → Video1 → Video2 → ...

Tip

When the **POWER SELECT** switch is set to position **ⓐ**, you can turn on this unit by pressing **(SOURCE)** on the rotary commander.


By rotating the control (the ST
AMS control)

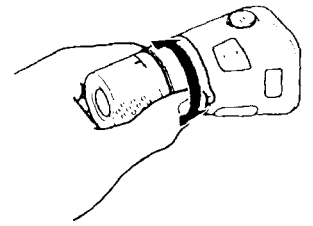

Rotate the control momentarily and release it to:

- Locate a specific track on a disc. Rotate and hold the control until you locate a specific point in a track, then release to start playback.
- Tune in stations automatically. Rotate and hold the control to tune in a specific station.

By pushing in and rotating the control (the PRESET/DISC control)

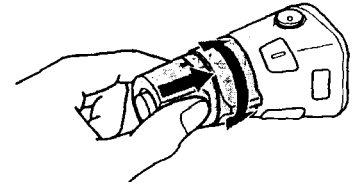


Push in and rotate the control to:


- Receive the stations memorized on the number buttons.
- Change the disc.

Other operations

Rotate the VOL control to adjust the volume.

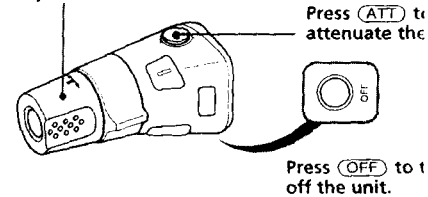

Press (SOUND) to adjust the volume and sound menu.

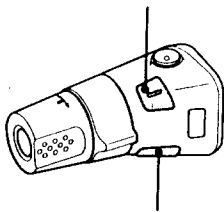


Press (LIST) to display the memorized names.

Changing the operative direction


The operative direction of controls is factory-set as in the illustration below.

To increase

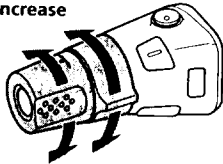

To decrease

If you need to mount the rotary commander on the right side of the steering column, you can reverse the operative direction.

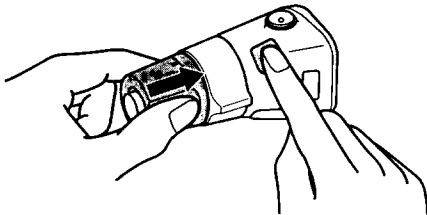

Press (SOUND) for two seconds while pushing the VOL control.

Tip
You can control the operative direction of controls with the unit (page 18).

Adjusting the sound characteristics

You can adjust the bass, treble, balance and fader.

Each source can store the bass and treble levels respectively.

- 1 Select the item you want to adjust by pressing (SOUND) repeatedly.

VOL (volume) → SUB (subwoofer volume)
→ BAS (bass) → TRE (treble)
→ BAL (left-right) → FAD (rear-front)

- 2 Adjust the selected item by rotating the dial.

Adjust within three seconds after selecting the item. (After three seconds, the dial functions as the volume control.)

Attenuating the sound

Press (ATT) on the rotary commander or optional wireless remote.

"ATT on" flashes momentarily.

To restore the previous volume level, press (ATT) again.

Tip

The unit decreases the volume automatically when a telephone call comes in (Telephone ATT function).

EN

Other Functions

Changing the sound and display settings

You can set:

- Clock (page 7).
- D.Info (Dual Information) - to display the clock and the play mode at the same time (ON) or to display the information alternately (OFF).
- Amber/Green - to change the illumination color to amber or green.
- Dimmer - to change the brightness of the display.
 - Select "Auto" to dim the display only when you turn the lights on.
 - Select "on" to dim the display.
- Contrast to adjust the contrast if the indications in the display are not recognizable because of the unit's installed position.
- Voice guide function for vocalized comments.
 - Select "Voice 1" to turn the voice guide to minimum volume.
 - Select "Voice 2" to turn the voice guide to middle volume.
 - Select "Voice 3" to turn the voice guide to maximum volume.
 - Select "Voice off" to cancel the voice guide function.
- Beep to turn on or off the beeps.
- RM (Rotary Commander) - to change the operative direction of the controls of the rotary commander.
 - Select "norm" to use the rotary commander as the factory-set position.
 - Select "rev" when you mount the rotary commander on the right side of the steering column.
- BBE to - enjoy bass and treble even at low volume. The bass and treble will be reinforced.
 - Select "BBE 1" to reinforce the bass and treble.
 - Select "BBE 2" to reinforce the bass and treble more effective than "BBE 1."
 - Select "BBE off" to deactivate BBE.
- DF (Digital Filter) - to select the type of filter you want, you can adjust the sound to much your unit, your speaker, the music source, etc.
 - The digital filter appear its presetted when you select "normal."
 - The pre-ringing and post-ringing will be minimize when you select "slow."
- LPF (Low Pass Filter).
- A.Scr1 (Auto Scroll) (page 9, 19).

1 Press (SHIFT).

18

2 Press (3) (SET UP) repeatedly until the desired item appears.

Each time you press (3) (SET UP), the changes as follows:

Clock → D.Info*1 → Amber/Green → Dimmer*1
 • Contrast → Voice*1 → Beep → RM → LPF*2 → DF*2 → LPF*1 → A.Scr1*1

*1 When you have not tune the station or is no CD/MD being played, these items do not appear.

*2 DF does not work when the disc playback optional CD/MD changer.

Notes

- The displayed item will differ depending on source.
- If an optional digital preamplifier is connected, the unit, BBE and Voice guide function does work.

3 Press (5) (→) to select the desired setting (for example: on or off).

For the "Contrast" setting, pressing (5) (→) makes the contrast higher, and pressing (2) (←) makes the contrast low.

4 Press (SHIFT).

After the mode setting is complete, the display goes back to normal playback mode.

Adjusting the frequency of the subwoofer(s)

To match the characteristics of the connected subwoofer(s), you can cut out the unwanted high and middle frequency signals entering the subwoofer(s). By setting the cut-off frequency, the subwoofer(s) will output on low frequency signals so you can get a clear sound image.

1 Press (SOURCE) to select a source (rad CD or MD).

2 Press (SHIFT), then press (3) (SET UP) repeatedly until "LPF" appears.

3 Press (5) (→) or (2) (←) repeatedly to select desired setting.

Set
 LPF 120Hz

Each time you press (5) (→) or (2) (←), the cut-off frequency in the display changes as follows:

LPF off ↔ LPF 80 Hz ↔ LPF 120 Hz

4 Press (SHIFT).

When the frequency setting is complete, the display goes back to the normal playback mode.

With Optional Equipment

CD/MD Unit

You can control up to 7 CD and MD units with this unit.

If you connect an optional CD unit with the CD TEXT function, the CD TEXT information will appear in the display when you play back a CD TEXT disc.

Playing a CD or MD


1 Press **(SOURCE)** repeatedly to select the CD or MD.

2 Press **(MODE)** until the desired unit appears.
CD/MD playback starts.

When a CD/MD unit is connected, all the tracks play from the beginning.

Changing the displayed item

Each time you press **(DSPL)** during CD, CD TEXT or MD playback, the item changes as follows:

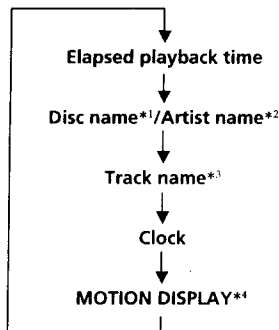

*¹ If you have not labeled the disc or there is no disc name prerecorded on the MD, "NO D.Name" appears in the display.

*² If you play a CD TEXT disc, the artist name appears in the display after the disc name. (Only for CD TEXT discs with the artist name.)

*³ If the track name of a CD TEXT disc or MD is not prerecorded, "NO T.Name" appears in the display.

*⁴ All the items above are scrolled in the display one by one in order.

You can label CD and CD TEXT discs with a personalized name using the disc memo function, refer to "Labeling a CD" (page 23). However, if you use personalized labels, they will always take priority over the original CD TEXT information when such information is displayed.

Tips

- If the name of the MD or CD TEXT disc is too long, you can scroll it across the display by pressing **(SHIFT)**, then **(2)** (←→).
- If you want to display the original CD TEXT information after labelling the CD TEXT disc with a personalized name, press **(SHIFT)**, then **(5)** (←→).

Automatically scrolling a disc name

— Auto Scroll

If the disc name/artist name or track name on a CD TEXT disc or MD exceeds 10 characters and the Auto Scroll function is on, automatically scrolls on the display as follows:

- The disc name appears when the disc has changed (if the disc name is selected).
- The track name appears when the track has changed (if the track name is selected).

If you press **(DSPL)** to change the display item, the disc or track name of the MD or CD TEXT disc is scrolled automatically whether you set the function on or off.

1 During playback, press **(SHIFT)**.

2 Press **(3)** (SET UP) repeatedly until "A.Scr1" appears.

3 Press **(5)** (→) to select "A.Scr1 on."

4 Press **(SHIFT)**.

To cancel Auto Scroll, select "A.Scr1 off" in step 3 above.

Note

For some CD TEXT discs with a lot of characters, the following cases may happen:

- Some of the characters are not displayed.
- Auto Scroll does not work.

EN

Other Functions/CD/MD Unit

 
Locating a specific track

— Automatic Music Sensor (AMS)

During playback, push the SEEK/AMS control up or down once for each track you want to skip.

To locate succeeding tracks

To locate preceding tracks




Locating a specific point in a track

— Manual Search

During playback, push the SEEK/AMS control up or down and hold. Release when you have found the desired point.

To search forward

 To search backward



EN

Locating a disc by disc number

— Direct Disc Selection

Press the number button that corresponds with the desired disc number.

The desired disc in the current unit begins playback.

Scanning the tracks

— Intro Scan

You can play the first 10 seconds of all the tracks on the current disc.

1 During playback, press (SHIFT), then press (4) (PLAY MODE) repeatedly until "Intro" appears.

2 Press (5) (→) to select "Intro on." Intro Scan starts.

3 Press (SHIFT).

To return to normal playback mode, select "Intro off" in step 2 above.

Playing tracks repeatedly

 
— Repeat Play

You can select:

- Repeat 1 - to repeat a track.
- Repeat 2 - to repeat a disc.

1 During playback, press (SHIFT).

2 Press (7) (REP) repeatedly until the desired setting appears.



Repeat Play starts.

3 Press (SHIFT).

To go back to normal playback mode, select "Repeat off" in step 2 above.

 
Playing tracks in random order — Shuffle Play

You can select:

- Shuf 1 - to play the tracks on the current disc in random order.
- Shuf All - to play all the tracks in random order.

1 During playback, press (SHIFT).

2 Press (8) (SHUF) repeatedly until the desired setting appears.



Shuffle Play starts.

3 Press (SHIFT).

To return to normal playback mode, select "Shuf off" in step 2 above.

 
Creating a program

— Program Memory (CD/MD unit with the program memory function)

You can play tracks in the order you want by making your own program. You can make two programs: Program 1 and Program 2. You can select up to 12 tracks for each program. You can store the programs in memory.

- 1 Press **(SHIFT)**, then press **(4)** (PLAY MODE) for two seconds.

Program edit mode



"P 1" shows Program 1 is selected.

 
 
If you have labelled the disc, the bank edit mode appears. Press **(4)** (PLAY MODE) to display "P 1" above.

To select Program 2, press **(5)** (→) repeatedly until "P 2" appears.

- 2 Select the track you want.

- ① Press **(SOURCE)** repeatedly to select CD or MD.
- ② Press **(MODE)** repeatedly to select the unit.
- ③ Press **(SHIFT)**, then press the number button to select the disc.
- ④ Press **(SHIFT)**.
- ⑤ Push the SEEK/AMS control up or down to select the track.

- 3 Press **(6)** (ENTER) momentarily.



- 4 To continue entering tracks, repeat steps 2 and 3.

- 5 When you finish entering tracks, press **(4)** (PLAY MODE) for two seconds.

- 6 Press **(SHIFT)**.

Notes

- **"*Wait*"** appears in the display while the unit is reading the data, or when a disc has not been put into the unit.
- **"*Mem Full*"** appears in the display when you try to enter more than 12 tracks into a program.

Playing the stored program

Changing the disc order in the unit will not affect program memory play.

 
You can select:

- PGM 1 - to play Program 1.
- PGM 2 - to play Program 2.
- PGM 1+2 - to play Programs 1 and 2.

- 1 Press **(SHIFT)**.

- 2 Press **(4)** (PLAY MODE) repeatedly until "PGM" appears.

- 3 Press **(5)** (→) repeatedly until the desired program appears.



Program Play starts.

- 4 Press **(SHIFT)**.

To go back to normal playback mode, select "PGM off" in step 3 above.

Notes

- If you press a number button during program memory play, program memory play is interrupted, and playback of the selected disc starts.
- **"NO Data"** appears in the display if no track is stored in the program.
- If a track stored into the program memory is not in the disc magazine, the track will be skipped.
- When the disc magazine contains no tracks stored into the program memory, or when the program information has not been loaded yet, **"Not ready"** appears.

EN

CD/MD Unit

Erasing an entire program

- 1 Press (SHIFT), then press (4) (PLAY MODE) for two seconds.



"P 1" indicates Program 1 is selected.

If you have labelled the disc, the bank edit mode appears. Press (4) (PLAY MODE) to display "P 1" above.

 
- 2 Press (2) (←) repeatedly until "DEL" appears.



To erase Program 2, press (5) (→) repeatedly until "PGM 2" appears.

EN

- 3 Press (6) (ENTER) for two seconds.




The entire program is erased.

- 4 When you finish erasing programs, press (4) (PLAY MODE) for two seconds.

- 5 Press (SHIFT).

Adding tracks to a program

 - 1 Press (SHIFT), then press (4) (PLAY MODE) for two seconds.




"P 1" indicates Program 1 is selected.

If you have labelled the disc, the bank edit mode appears. Press (4) (PLAY MODE) to display "P 1" above.

To select Program 2, press (5) (→) repeatedly until "P 2" appears.

- 2 Press (2) (←) or (5) (→) to select the track slot number where you want to insert a track.

 Track slot number



- 3 Push the SEEK/AMS control up or down to select the track you want to insert.

- 4 Press (6) (ENTER) momentarily to enter the track.

The current track is inserted in that slot number and the succeeding tracks shift down.

To continue inserting tracks, repeat step through 4.

Note

 
Once all 12 slots have been filled, "Mem Full" appears in the display, and you cannot insert tracks.

- 5 When you finish inserting tracks, press (4) (PLAY MODE) for two seconds.

- 6 Press (SHIFT).

Erasing tracks in a program

- 1 Press **(SHIFT)**, then press **(4)** (PLAY MODE) for two seconds.




"P 1" indicates Program 1 is selected.

If you have labelled the disc, the bank edit mode appears. Press **(4)** (PLAY MODE) to display "P 1" above.

To select Program 2, press **(5)** (→) repeatedly until "P 2" appears.

- 2 Press **(2)** (←) or **(5)** (→) to select the track you want to erase.


 
Track slot number



The track currently registered in slot 6 of Program 1.

- 3 Press **(6)** (ENTER) for two seconds.

  When you erase a track from a slot number, the succeeding tracks shift up to fill the gap.



- 4 To continue erasing tracks, repeat steps 2 and 3.

- 5 When you finish erasing tracks, press **(4)** (PLAY MODE) for two seconds.

 
- 6 Press **(SHIFT)**.

Labeling a CD

— Disc Memo (CD unit with the custom file function)

You can label each disc with a personalized name. You can enter up to eight characters for a disc. If you label a CD, you can locate the disc by name (page 25) and select the specific tracks for playback (page 25).


- 1 Play the CD and press **(LIST)** for two seconds.



- 2 Enter the characters.

- 1 Rotate the dial clockwise to select the desired characters.

 
(A → B → C → ... Z → 0 → 1 → 2 → ... 9 → + → - → * → / → \ → > → < → . → _)



If you rotate the dial counterclockwise, the characters appear in the reverse order.

If you want to put a blank space between characters, select "_" (under-bar).

 - 2 Press **(5)** (→) after locating the desired character. The flashing cursor moves to the next space.



If you press **(2)** (←), the flashing cursor moves to the left.

- 3 Repeat steps 1 and 2 to enter the entire name.

- 3 To return to normal CD playback mode, press **(LIST)** for two seconds.

Tip

 
To erase/correct a name enter "_" (under-bar) for each character.

EN


CD/MD Unit

Displaying the disc memo name

Press (DSPL) during CD or CD TEXT disc playback.



Each time you press (DSPL) during CD or CD TEXT disc playback, the item changes as follows:

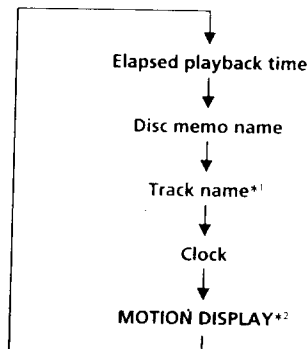

EN

*1 If you connect an optional CD unit with the CD TEXT function, the CD TEXT information will appear in the display when you playback a CD TEXT disc.

*2 All the items above are scrolled in the display one by one in order.

Erasing the disc memo

- 1 Press (SOURCE) repeatedly to select the unit.
- 2 Press (MODE) repeatedly to select the unit.
- 3 Press (LIST) for two seconds.
- 4 Press (DSPL) for two seconds.
- 5 Rotate the dial to select the name you want to erase.
- 6 Press (6) (ENTER) for two seconds. The name is erased. Repeat steps 5 and 6 if you want to erase other names.
- 7 Press (LIST) for two seconds. The unit returns to normal CD playback mode.

Note

When the personalized label is erased, the original CD TEXT information will appear in the display.

Labeling a disc by name

— List-up (CD unit with the custom file function or MD unit)

You can use this function for discs that have been assigned a custom name. For more information on disc names, refer to "Labeling a CD" (page 23).

1 Press **(LIST)** momentarily.

The name assigned to the current disc appears in the display.



When you assign a disc memo label to a CD TEXT disc, it takes priority over the original CD TEXT information.

2 Press **(LIST)** repeatedly until you find the desired disc.

3 Press **(6) (ENTER)** to play back the disc.

Notes

- After a disc name has been displayed for five seconds, the display goes back to normal playback mode. To turn off the display, press **(DSPL)**.
- The track names are not displayed during MD or CD TEXT disc playback.
- If there are no discs in the magazine, "NO Disc" appears in the display.
- If a disc has not been assigned a custom file, "*****" appears in the display.
- If the disc information has not been read by the unit, "?" appears in the display. To load the disc, first press the number button, then choose the disc that has not been loaded.
- The information appears only in upper case. There are also some letters which cannot be displayed (during MD or CD TEXT disc playback).

 
Selecting specific tracks for playback

— Bank (CD unit with the custom file function)

If you label the disc, you can set the unit to skip tracks and play only the tracks you want.

1 Start playing the disc and press **(SHIFT)**. Then press **(4) (PLAY MODE)** for two seconds.


Bank edit mode.



Note

If you have not labeled the disc, the bank edit mode does not appear and the program edit mode appears. To go back to normal playback mode, press **(SHIFT)**.

 2 Push the SEEK/AMS control up or down to select the track number you want to skip and press **(6) (ENTER)**.



The indication changes from "Play" to "Skip." If you want to return to "Play," press **(6) (ENTER)** again.

3 Repeat step 2 to set the "Play" or "Skip" mode on all the tracks.

4 Press **(4) (PLAY MODE)** for two seconds.

The unit returns to normal CD playback mode.

5 Press **(SHIFT)**.

Notes

- You can set the "Play" and "Skip" mode on up to 24 tracks.
- You cannot set the "Skip" mode on all the tracks.

EN

CD/MD Unit

Playing the specific tracks only

 
You can select:

- Bank on - to play the tracks with the "Play" setting.
- Bank inv (Inverse) - to play the tracks with the "Skip" setting.

1 During playback, press **(SHIFT)**, then press **(4)** (PLAY MODE) repeatedly until "Bank" appears.

2 Press **(5)** (→) to repeatedly until the desired setting appears.

→ Bank on → Bank inv → Bank off



Playback starts from the track following the current one.

3 Press **(SHIFT)**.

To go back to normal playing mode, select "Bank off" in step 2 above.

EN

With Optional Equipment

DSP

The optional XDP-U50D lets you add some effects to the sound field of the currently selected source.

Note

If you connect the optional digital preamplifier XDP-U50D/210EQ, the voice guide function will work.

Selecting a surround menu


You can select a desired surround menu to best fit the audio source. The following menu can simulate different sound fields and enhance the sound so that you can feel as if you are in a live concert.

Surround menu

HALL	Concert hall
JAZZ	Jazz club
DISCO	Disco with thick walls
THEATER	Movie theater
PARK	Big open space
LIVE	Live concert
OPERA	Opera house
CHURCH	Church/chapel with a lot of reverberation
STADIUM	Open-air concert in a stadium
CELLAR	Cellar with a lot of reverberation
DEFEAT	Normal sound without any DSP effects

1 Press **(SOURCE)** to select a source (turn CD or MD).

 2 Press **(SOUND)** repeatedly until "SUR" appears.



3 Rotate the dial to select the desired surround menu.

 
The surround menu appears in the order shown above.

After three seconds, the display goes back to the normal playback mode.

Adjusting the effect level

1 Press **(SOURCE)** to select a source (tuner, CD or MD).


2 Press **(SOUND)** for two seconds.




3 Rotate the dial to select until the desired surround menu appears.



 4 Press **(5) (→)**.



 5 Rotate the dial to adjust the level.
You can adjust the level from 0 to 100%.
Increase the level to enhance the effect.



6 Press **(SOUND)** for two seconds.

Storing a surround effect onto CDs

 
— Digital Signal Processor (DSP) Custom File (CD unit the with custom file function)

Once you have registered the desired surround menu onto the discs, you can enjoy the same surround menu every time you play them. (Only when you have labeled a disc by the Custom File function.)

↑ Press **(LIST)** for two seconds.

2 Press **(LIST)** until the surround menu appears.

DSP custom file mode



3 Rotate the dial to select the desired surround menu.

4 Press **(LIST)** for two seconds.

After the effect setting is complete, the display goes back to the normal playback mode.

Playing the disc with the stored surround menu

1 Press **(SHIFT)**, then press **(3) (PLAY MODE)** repeatedly until "D.File" appears.

2 Press **(5) (→)** to select "D.File on."
After five seconds, the display goes back to normal playback mode.

3 Press **(SHIFT)**.

To cancel to play the disc with stored surround menu, select "D.File off" in step 2 above.

Changing the stored surround effect

Play the disc whose surround mode you want to change, and follow the steps of "Storing the surround effect onto the CDs."

Erasing the stored surround effect


Select "DEFEAT" in step 3 of "Storing the surround effect onto the CDs."

EN

CD/MD Unit/DSP

Selecting the listening position


You can set the time for the sound to reach the listeners from the speakers. The unit can simulate a natural sound field so that you can feel as if you are in the center of the sound field wherever you sit in the car.

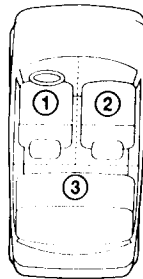

Display window	Center of sound field
LP1 All	Normal setting (① + ② + ③)
LP2 Front	Front part (① + ②)
LP3 Front R	Right front (②)
LP4 Front L	Left front (①)
LP5 Rear	Rear part (③)

EN

 - 1 Press **(SOUND)** momentarily until "LP1" appears.



- 2 Rotate the dial to select the desired listening position.

The listening positions appear in the order shown above.

After three seconds, the display goes back to the normal playback mode.

Adjusting the listening position

- 1 Press **(SOUND)** for two seconds.
- 2 Press **(SOUND)** repeatedly until the desired listening position appears.
- 3 Press **(5) (→)**.



 
- 4 Rotate the dial to adjust the center of the sound field to the left or right. T set the center of the sound field.




Center moves to the L (left)

Center moves to the R (right)

- 5 Press **(5) (→)**.



- 6 Rotate the dial to adjust the center of the sound field to the front or rear.

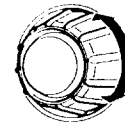

Center moves to the R (rear)


Center moves to the F (front)

- 7 Press **(SOUND)** for two seconds. When the effect setting is complete, the normal playback mode appears.

Adjusting the fader (FAD)

Normally, with the DSP mode on, the volume of the output sound from the rear speakers is lowered automatically to improve the efficiency of the listening position setting. If you want to raise the rear speaker volume, adjust the fader.

- 1 Follow steps 1 to 3 of "Selecting a surround menu" (page 26).
- 2 Press **(SOUND)** repeatedly until "FAD" appears.
- 3 Rotate the dial to adjust the fader.

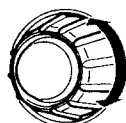

Decreases front speaker volume

Increases front speaker volume

After three seconds, the display goes back to the normal playback mode.

Adjusting the volume of the subwoofer(s)


- 1 Press **(SOURCE)** to select a source (tuner, CD or MD).
- 2 Press **(SOUND)** repeatedly until "SUB" appears.
- 3 Rotate the dial to adjust the volume.
After three seconds, the display goes back to the normal playback mode.

Tip


When you rotate the dial to turn the volume all the way down, "Sub mute" appears and the cutout frequency of the subwoofer is disabled.

Adjusting the frequency of the subwoofer(s)

To match the characteristics of the connected subwoofer(s), you can cut out the unwanted high and middle frequency signals entering the subwoofer(s). By setting the cut-off frequency (see the diagram below), the subwoofer(s) will output only low frequency signals so you can get a clearer sound image.

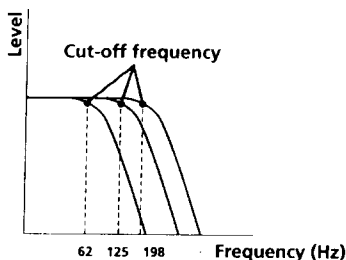

 - 1 Press **(SOURCE)** to select a source (tuner, CD or MD).
- 2 Press **(SOUND)** for two seconds.
- 3 Press **(SOUND)** repeatedly until "SUB" appears.



- 4 Rotate the dial to select the desired cut-off frequency.

The cut-off frequency in the display changes.

62 → 78 → 99 → 125* → 157 → 198 Hz

* Factory-set frequency

- 5 Press **(SOUND)** for two seconds.
After the frequency setting is complete, the display goes back to the normal playback mode.

EN

DSP


Adjusting the volume of the bass and treble

You can adjust the volume of the bass and treble to best fit the acoustic characteristics inside your car.

- 1 Press **(SOURCE)** to select a source (tuner, CD or MD).
- 2 Press **(SOUND)** repeatedly until "BAS" or "TRE" appears.
- 3 Rotate the dial to adjust the volume. After three seconds, the display goes back to the normal playback mode.

Adjusting the turn-over frequency

You can adjust the bass and treble turn-over frequencies.

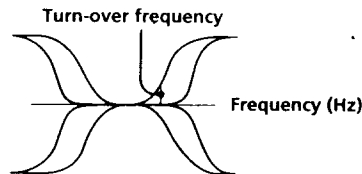

- 1 Press **(SOURCE)** to select a source (tuner, CD or MD).
- 2 Press **(SOUND)** for two seconds.
- 3 Press **(SOUND)** repeatedly until "BAS" or "TRE" appears.

Bass adjusting mode

BAS
→ 314 Hz

Treble adjusting mode

TRE
→ 3.1kHz

- 4 Rotate the dial to select the turn-over frequency.

The turn-over frequencies change as follows:

Bass:

198 Hz → 250 Hz → 314 Hz* → 396 Hz

Treble:

2.0 kHz → 3.1 kHz* → 4.0 kHz → 5.0 kHz

* Factory-set frequency

- 5 Press **(SOUND)** for two seconds. The display goes back to the normal playback mode.

Listening to each program source in its registered surround menu

— Last Sound Memory (LSM)

You can listen to the same source always same surround menu even after changing program source or turning the unit on and again.

Changing the line output level

You can change the line output level if you hear distortion or other noise.

- 1 Press **(SHIFT)**, then press **(3)** (SET UP) until "L.out" appears.
- 2 Press **(5)** (→) to select the desired setting (-10 dB or -16 dB).
- 3 Press **(SHIFT)**.

TV/Video

You can connect an optional TV tuner and TV monitor with this unit.

Watching the TV

- 1 Press **(SOURCE)** repeatedly until "TV" appears.
- 2 Push the SEEK/AMS control up or down to select the desired TV band.

Watching a video

- 1 Press **(SOURCE)** repeatedly until "TV" appears.
- 2 Press **(MODE)** repeatedly to select "Video 1."
Play back the video.

Note
"Video 2" appears if the VIDEO 2 terminal of the TV monitor is selected.

Memorizing TV channels automatically

The unit selects the TV channels with the strongest signals and memorizes them in the order of their frequency.

Caution

When tuning in a station while driving, use Best Tuning Memory to prevent accidents.

- 1 Press **(SOURCE)** repeatedly until "TV" appears.
- 2 Press **(SHIFT)**, then press **(4)** (PLAY MODE) repeatedly until "Auto mem" appears.

- 3 Press **(5)** (→).

The unit stores TV channels in the order of their frequencies on the number buttons. A beep sound and the setting is stored.

- 4 Press **(SHIFT)**.

Notes

- The unit does not store TV channels with weak signals. If only a few TV channels are received, some number buttons will remain empty.
- When a preset number is indicated in the display, the unit starts storing TV channels from the one currently displayed.

Memorizing only the desired TV channels

You can store up to 10 channels on the number buttons in the order of your choice.

- 1 Press **(SOURCE)** repeatedly until "TV" appears.
- 2 Push the SEEK/AMS control up or down to tune in the TV program you want to store on the number button.
- 3 Press and hold the desired number button (**(1)** to **(10)**) until you hear a beep tone.
The number button indication appears in the display.

Note

If you try to store another program on the same number button, the previously stored program will be erased.

EN

DSP/TV/Video


Storing the TV channel names

Follow the steps in "Storing the station names" (page 14).

Displaying the TV or radio station names

Press **(LIST)** momentarily during TV or radio reception.

Example: When receiving the FM1 band

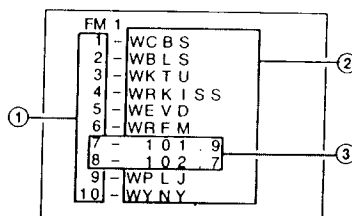

EN

- ① Preset number
- ② Stored station names
- ③ Frequencies*

* If the name of a station is not stored, the frequency of that station will be displayed instead.

Notes

- It may take some time before all indications appear in the display.
- The TV monitor does not appear during list display.
- The contents of the preset memory cannot be listed when the unit is in the simultaneous play mode (page 33).

Turning off the display


During radio reception, press **(LIST)** again.

During TV reception, the list display on the TV monitor will automatically turn off after a few seconds.

Displaying the information stored on discs

Press **(LIST)** momentarily during CD/M playback.

Example: When CD unit 1 is selected.

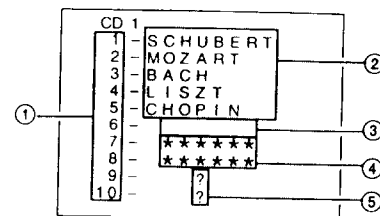

- ① Disc numbers
- ② Titles stored as custom files
- ③ No disc is loaded*¹
- ④ No stored titles*²
- ⑤ TOC information has not been identified yet*³

*¹ A blank space is displayed next to a disc numbers representing empty slots in the disc magazine.

*² If a title is not registered in the custom file, "*****" is displayed.

*³ If the disc information has not been read yet, "?" is displayed.

Notes

- It may take some time until all indications appear in the display.
- The TV program does not appear during list display.
- The contents of the preset memory cannot be listed when the unit is in the simultaneous play mode.

 
Turning off the display

Press **(LIST)** again.


Watching the TV or video while listening to a CD or MD — Simultaneous Play

The simultaneous play function does not work while you are listening to the radio.


- 1 Press **(SOURCE)** for two seconds.




- 2 Press **(2) (←)**.

 

 
- 3 Press **(SOURCE)** repeatedly to select a CD or MD.



- 4 Press **(5) (→)**.

 

 - 5 Press **(SOURCE)** repeatedly to select a TV or video.



- 6 Press **(SOURCE)** for two seconds. Simultaneous Play starts.

If you want to change the sound to CD or MD while watching the TV or video with its sound, please follow the steps, but press **(5) (→)** in step 2 and press **(2) (←)** in step 4.

Returning to normal mode

To cancel the CD or MD, follow the steps above and select "--" in step 3.

To cancel the TV or video, follow the steps above and select "--" in step 5.

Note

If you press the **EJECT** button on a CD/MD unit while the unit is in simultaneous play mode, Simultaneous Play is canceled.

Additional Information

Precautions

- If your car was parked in direct sunlight resulting in a considerable rise in temperature inside the car, allow the unit to cool off before operating it.
- If no power is being supplied to the unit, check the connections first. If everything is in order, check the fuse.
- If no sound comes from the speakers of two-speaker systems, set the fader control to the centre position.
- If your car is equipped with a power antenna, it will extend automatically while the unit is operating.

 
If you have any questions or problems concerning your unit that are not covered in this manual, please consult your nearest Sony dealer.

Notes on handling CDs

A dirty or defective disc may cause sound dropouts while playing. To enjoy optimum sound, handle the disc as follows. Handle the disc by its edge. To keep the disc clean, do not touch the surface.



Do not stick paper or tape on the labelled surface.




continue to next page →

EN

TV/Video/Additional Information

Do not expose the discs to direct sunlight or heat sources such as hot air ducts, or leave them in a car parked in direct sunlight where there can be a considerable rise in the temperature inside the car.

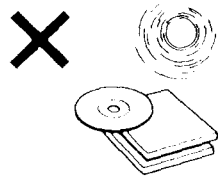

Before playing, clean the discs with an optional cleaning cloth. Wipe each disc from the center out.

Do not use solvents such as benzine, thinner, commercially available cleaners or antistatic spray intended for analog discs.



EN

Note on moisture condensation

On a rainy day or in a very damp area, moisture may condense on the lenses inside the CD player. Should this occur, the unit will not operate properly. In this case, remove the disc and wait for about an hour until the moisture evaporates.


When you play 8 cm (3 in.) CDs

Use the optional Sony compact disc single adapter (CSA-8) to protect the CD player from being damaged.

Maintenance

Fuse replacement

When replacing the fuse, be sure to use one that matches the amperage described on the fuse. If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In such a case, consult your nearest Sony dealer.

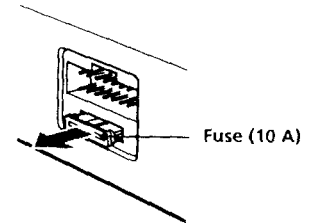


Warning


Never use a fuse with an amperage rating exceeding the one supplied with the unit as this could damage the unit.

Cleaning the connectors

The unit may not function properly if the connectors between the unit and the front panel are not clean. To prevent this, open the front panel by pressing **OPEN**, then detach and clean the connectors with a cotton swab dipped in alcohol. Do not apply too much force. Otherwise, the connectors may be damaged.

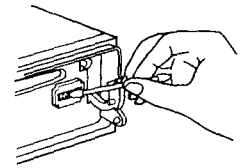

Main unit

 


Back of the front panel

Notes


- For safety, before cleaning the connectors, turn off the engine and remove the key from the ignition switch.
- Never touch the connectors directly with your fingers or any metal device.

Dismounting the unit


- 1 Press the clip inside the front cover with a thin screwdriver, and lever the front cover free.

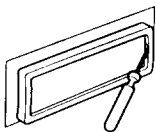


- 2 Repeat step 1 on the left side.
The front cover is removed.

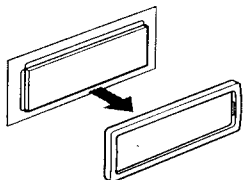


- 3 Use a thin screwdriver to push in the clip on the left side of the unit, then pull out the left side of the unit until the catch clears the mounting.

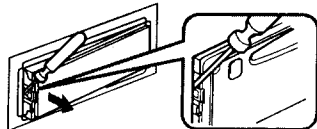

- 4 Repeat step 3 on the right side.

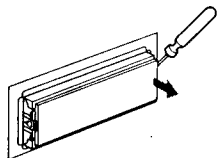

- 5 Slide the unit out of the mounting.

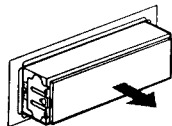

EN

Additional Information

Specifications

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION

19 watts per channel minimum continuous average power into 4 ohms, 4 channels driven from 20 Hz to 20 kHz with no more than 1 % total harmonic distortion.

Other specifications

CD player section

System	Compact disc digital audio system
Signal-to-noise ratio	100 dB
Frequency response	10 - 20,000 Hz
Wow and flutter	Below measurable limit
Laser Diode Properties	
Material	GaAlAs
Wavelength	780 nm
Emission Duration	Continuous
Laser output power	Less than 44.6 μ W*

* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

Tuner section

FM

Tuning range	87.5 - 107.9 MHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz
Usable sensitivity	8 dBf
Selectivity	75 dB at 400 kHz 50 dB at 200 kHz
Signal-to-noise ratio	65 dB (stereo), 68 dB (mono)
Harmonic distortion at 1 kHz	0.7 % (stereo), 0.4 % (mono)
Separation	35 dB at 1 kHz
Frequency response	30 - 15,000 Hz

AM

Tuning range	530 - 1,710 kHz
Antenna terminal	External antenna connector
Intermediate frequency	10.71 MHz/450 kHz
Sensitivity	30 μ V

Power amplifier section

Outputs	Speaker outputs (sure seal connectors)
Speaker impedance	4 - 8 ohms
Maximum power output	45 W \times 4 (at 4 ohms)

General

Outputs	EQ output Line outputs (3) Power antenna relay control lead Power amplifier control lead Telephone ATT control lead Illumination control
Tone controls	Bass \pm 8 dB at 100 Hz Treble \pm 8 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 178 \times 50 \times 110 mm (7 $\frac{1}{8}$ \times 2 \times 7 $\frac{1}{4}$ in.) (w/h/d)
Mounting dimensions	Approx. 182 \times 53 \times 110 mm (7 $\frac{1}{4}$ \times 2 $\frac{1}{8}$ \times 6 $\frac{1}{2}$ in.) (w/h/d)
Mass	Approx. 1.4 kg (3 lb.)
Supplied accessories	Rotary commander (1) Parts for installation connections (1 set) Front panel case (1) Wireless remote RM-BUS cable (supplied with an RCA pin cord)
Optional accessories	RC-61 (1 m), RC-62 (2 m) Compact disc single adapter CSA-8
Optional equipment	CD changer CDX-805 (10 discs), CDX-715 (10 discs), CDX-T65 (6 discs), CDX-T62 (6 discs) MD changer MDX-62 Digital equalizer preamp XDP-210EQ Source selector XA-C30 TV tuner XT-40V, etc.

Design and specifications are subject to change without notice.

Troubleshooting guide

The following checklist will help you remedy the problems you may encounter with your unit. Before going through the checklist below, check the connection and operating procedures.

General

Problem	Cause/Solution
No sound.	<ul style="list-style-type: none">• Cancel the ATT function.• Set the fader control to the center position for two-speaker systems.• Rotate the dial in a clockwise direction to adjust the volume.
The contents of the memory have been erased.	<ul style="list-style-type: none">• The power cord or battery has been disconnected.• The reset button has been pressed. → Store again into the memory.
Indications do not appear in the display.	Remove the front panel and clean the connectors. See "Cleaning the connectors" (page 34) for details.

CD/MD playback

Problem	Cause/Solution
A disc cannot be loaded.	<ul style="list-style-type: none">• Another CD is already loaded.• The CD is forcibly inserted upside down or in the wrong way (MD).
Playback does not begin.	Defective MD or dusty CD.
A disc is automatically ejected.	The ambient temperature exceeds 50°C (122°F).
The operation buttons do not function.	Press the reset button.
The sound skips due to vibration.	<ul style="list-style-type: none">• The unit is installed at an angle of more than 60°.• The unit is not installed in a sturdy part of the car.

EN

Additional Information

Radio reception

Problem	Cause/Solution
Preset tuning is not possible.	<ul style="list-style-type: none">• Memorise the correct frequency.• The broadcast signal is too weak.
Automatic tuning is not possible.	The broadcast signal is too weak. → Use manual tuning.
The "ST" indication flashes.	<ul style="list-style-type: none">• Tune in the frequency accurately.• The broadcast signal is too weak. → Set to the MONO mode (page 14).

DSP functions

Problem	Cause/Solution
No sound, or sound is too low.	The volume of the rear speakers may have been automatically lowered in order to maximize the effect of the listening position adjustment. → Rotate the dial in a clockwise direction to adjust the balance. The speaker balance can be set separately for DSP on mode and DSP off mode (page 28).

Error displays (when an optional CD/MD unit is connected)

The following indications will flash for about five seconds, and an alarm sound will be heard.

Display	Cause	Solution
NO Mag	The disc magazine is not inserted in the CD/MD unit.	Insert the disc magazine in the CD/MD unit.
NO Disc	No disc is inserted in the CD/MD unit.	Insert discs in the CD/MD unit.
NG Discs	A CD/MD cannot play because of some problem.	Insert another CD/MD.
Error* ¹	A CD is dirty or inserted upside down.* ²	Clean or insert the CD correctly.
	An MD does not play because of some problem.* ²	Insert another MD.
Blank* ¹	No tracks have been recorded on an MD.* ²	Play an MD with tracks recorded on it.
PushReset	The CD/MD unit cannot be operated because of some problem.	Press the reset button of the unit.
Not Ready	The lid of the MD unit is open or MDs are not inserted properly.	Close the lid or insert the MDs properly.
HighTemp	The ambient temperature is more than 50°C (122°F).	Wait until the temperature goes down below 50°C (122°F).

*¹ When an error occurs during playback of an MD or CD, the disc number of the MD or CD does not appear in the display.

*² The disc number of the disc causing the error appears in the display.

If the above-mentioned solutions do not help improve the situation, consult your nearest Sony dealer.