

aiwa

COMPACT DISC STEREO RADIO CASSETTE RECORDER
RADIOCASSETE ESTÉREO CON REPRODUCTOR DE DISCOS COMPACTOS
RADIO-CASSETTE LECTEUR DE CD STEREO

CSD-A110 CSD-A170

OPERATING INSTRUCTIONS

See page 2.

En
(English)

MANUAL DE INSTRUCCIONES

Ver la página 8.

E
(Español)


MODE D'EMPLOI

Voir page 14.

F
(Français)

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

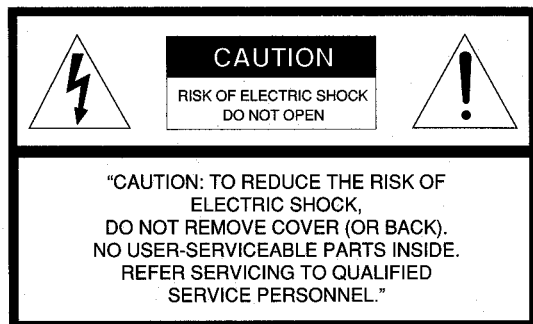

Explanation of Graphical Symbols:



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

OWNER'S RECORD

For your convenience, record the model number (you will find it at the bottom of the unit) and serial number (you will find it in the battery compartment) in the space provided below. Please refer to them when you contact your AIWA dealer in case of difficulty.

Model No.

Serial No.

Precautions

Read the Operating Instructions carefully and completely before operating the unit. Be sure to keep the Operating Instructions for future reference. All warnings and cautions in the Operating Instructions and on the unit should be strictly followed, as well as the safety suggestions below.

Installation

- 1 Water and moisture** - Do not use this unit near water, such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, swimming pool, or the like.
- 2 Heat** - Do not use this unit near sources of heat, including heating vents, stoves, or other appliances that generate heat.
It also should not be placed in temperatures less than 5°C (41°F) or greater than 35°C (95°F).
- 3 Mounting surface** - Place the unit on a flat, even surface.
- 4 Ventilation** - The unit should be situated with adequate space around it so that proper heat ventilation is assured. Allow 10 cm (4 in.) clearance from the rear and the top of the unit and 5 cm (2 in.) from each side.
 - Do not place the unit on a bed, rug, or similar surface that may block the ventilation openings.
 - Do not install the unit in a bookcase, cabinet, or airtight rack where ventilation may be impeded.

- 5 Objects and liquid entry** - Take care that objects or liquids do not get inside the unit through the ventilation openings.

- 6 Carts and stands** - When placed or mounted on a stand or cart, the unit should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the unit or cart to overturn or fall.



- 7 Condensation** - Moisture may form on the CD pickup lens when:
 - The unit is moved from a cold spot to a warm spot
 - The heating system has just been turned on
 - The unit is used in a very humid room
 - The unit is cooled by an air conditionerWhen this unit has condensation inside, it may not function normally. Should this occur, leave the unit for a few hours, then try to operate again.
- 8 Wall or ceiling mounting** - The unit should not be mounted on a wall or ceiling, unless specified in the Operating Instructions.

Electric Power

- 1 Power sources** - Use on batteries or AC house current, as specified in the Operating Instructions and marked on the unit.
- 2 Polarization** - As a safety feature, some units are equipped with polarized AC power plugs which can only be inserted one way into a power outlet. If it is difficult or impossible to insert the AC power plug into an outlet, turn the plug over and try again. If it still does not easily insert into the outlet, please call a qualified service technician to service or replace the outlet. To avoid defeating the safety feature of the polarized plug, do not force it into a power outlet.
- 3 AC power cord**
 - When disconnecting the AC power cord, pull it out by the AC power plug. Do not pull the cord itself.
 - Never handle the AC power plug with wet hands, as this could result in fire or shock.
 - Power cords should be firmly secured to avoid being bent, pinched, or walked upon. Pay particular attention to the cord from the unit to the power socket.
 - Avoid overloading AC outlets and extension cords beyond their capacity, as this could result in fire or shock.
- 4 Extension cord** - To help prevent electric shock, do not use a polarized AC power plug with an extension cord, receptacle, or other outlet unless the polarized plug can be completely inserted to prevent exposure of the blades of the plug.
- 5 When not in use** - Unplug the AC power cord from the AC outlet or remove all the batteries if the unit will not be used for several months or more. When the cord is plugged in, a small amount of current continues to flow to the unit, even when the power is turned off.

Maintenance

Clean the unit only as recommended in the Operating Instructions.


Damage Requiring Service

Have the units serviced by a qualified service technician if:

- The AC power cord or plug has been damaged
- Foreign objects or liquid have got inside the unit
- The unit has been exposed to rain or water
- The unit does not seem to operate normally
- The unit exhibits a marked change in performance
- The unit has been dropped, or the cabinet has been damaged

DO NOT ATTEMPT TO SERVICE THE UNIT YOURSELF.


Power Supply

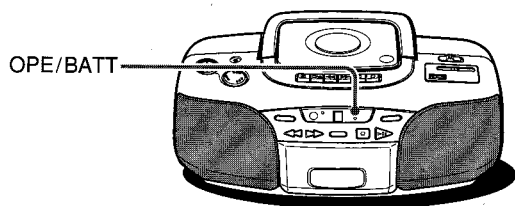

The OPE/BATT indicator lights up while the power is on.

Using on AC House Current

Connect the AC cord as illustrated below.

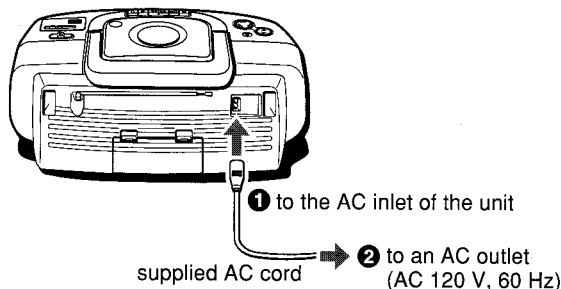


CAUTION

Use only the supplied AC cord. Use with other cords may result in the risk of fire.

Using on Batteries

Open the lid of the battery compartment on the rear and insert eight R14 (size C) batteries, not supplied, with the \oplus and \ominus marks correctly aligned. Then close the lid.

To switch from AC power supply to battery power supply, disconnect the AC cord from the AC inlet.

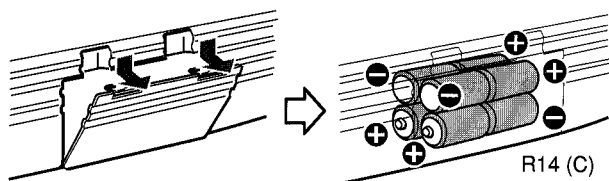

When to replace the batteries

The OPE/BATT indicator becomes dim, the tape speed slows down, volume decreases, or sound is distorted during operation.

Notes on batteries


- Do not mix different types of batteries or old batteries with new ones.
- When the unit is not to be used for a long period, remove the batteries to prevent needless battery wear.
- Never recharge the batteries, apply heat to them or take them apart.
- Remove dead batteries.

If liquid leaks from the batteries, wipe thoroughly to remove.

Remote Control

(CSD-A170 only)

Insert two R6 (size AA) batteries.

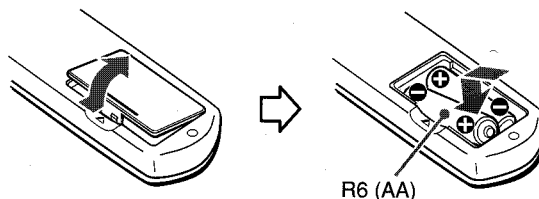

When the reach of the remote control signal is less than 5 meters (16 feet), replace the batteries.

The remote control may not operate correctly when:

- The unit is exposed to intense light, such as direct sunlight
- Objects block the remote control signal to the unit

To use the buttons on the remote control

Buttons on the remote control and the main unit with identical indications have the same functions.

To turn the power on

Press POWER to turn on the display.

When using the unit on the batteries, this button will not turn the power on.

To turn the power off

Press POWER to turn off the display.


When one of the deck operation buttons is pressed, this button will not turn the power off.

To use the FUNCTION button


Each time FUNCTION is pressed while the power is on, the function is selected cyclically.



* applicable when one of the deck operation buttons is pressed

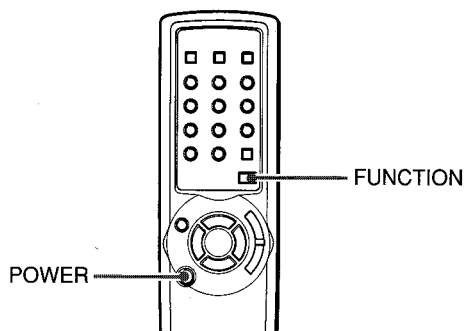

En

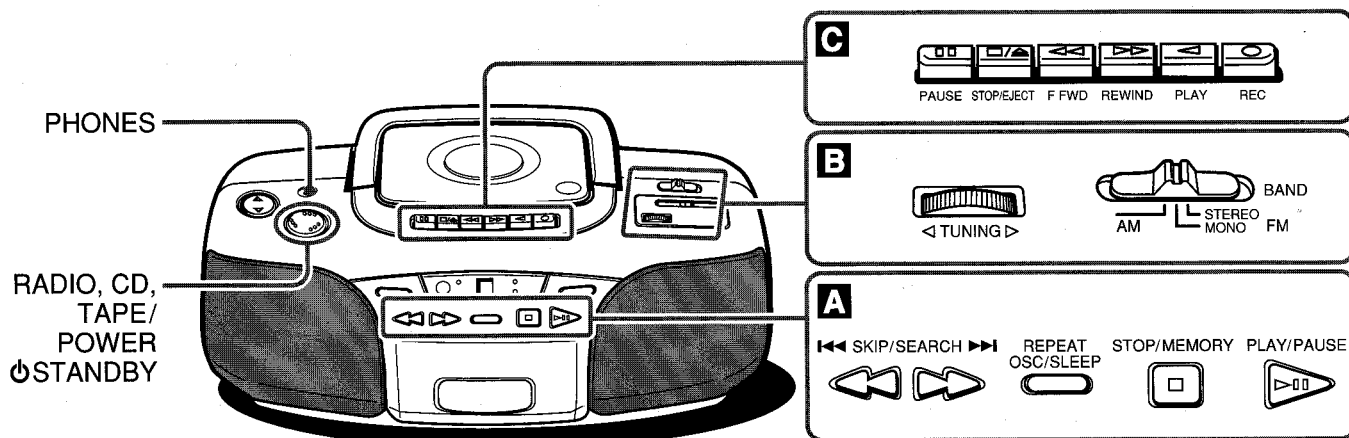


A CD OPERATION

1 Press CD.

The power is turned on and the CD indicator lights up.

2 Press CD OPEN to open the disc compartment. Place a disc with the printed side up and close the disc compartment.

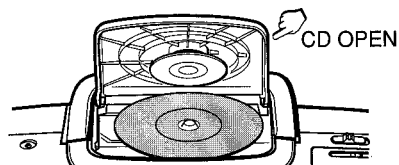

The total number of tracks is displayed. It will take about 15 seconds when loading a CD-RW disc. "1" indicates the 1st track, and "• 1" indicates the 11th track. "1" and a flashing "•" indicate the 21st, 31st ... 91st track.

3 Press *►II PLAY/PAUSE to start play.

The number of the track being played is displayed.
* or ► PLAY on the remote control (CSD-A170 only)

■ STOP/MEMORY – Stops play.

*►II PLAY/PAUSE – Pauses play. To resume play, press again.
* or II PAUSE on the remote control (CSD-A170 only)

◀◀, ▶▶ SKIP/SEARCH – Searches for a particular point during playback. Keep ◀◀ or ▶▶ pressed and then release it.

– Skips to the beginning of a track. Press ◀◀ or ▶▶ repeatedly.

*REPEAT/OSC/SLEEP – Repeats a single track or all tracks. Select as follows.

The REPEAT indicator flashes: A single track is played repeatedly. Select a track with ◀◀ or ▶▶.

The REPEAT indicator lights up: All tracks are played repeatedly.

* or REPEAT on the remote control (CSD-A170 only)

To start play when the power is off, press CD. The power is turned on and play of the loaded disc begins (Direct Play Function).

If you load a disc while the CD indicator flashes in step 2, play starts without pressing ►II.

To select a track directly with the remote control (CSD-A170 only), press the numbered buttons 0 - 9 and +10. CD play starts from the selected track and continues to the last track.

Example:

To select number 25, press +10, +10 and 5.

To select number 10, press +10 and 0.

The selected track starts to play and play continues to the end of the disc.

After listening, press TAPE/POWER ◻ STANDBY to turn the power off.

NOTE

- Do not use irregular shape CDs (example: heart-shaped, octagonal ones). It may result in malfunctions.
- Do not place more than one disc in the disc compartment.
- Do not try to open the disc compartment during play.
- Do not touch the lens. Doing so may cause malfunctions.

PROGRAMMED PLAY

Up to 20 tracks can be programmed from the disc.

1 In stop mode, keep *■ STOP/MEMORY pressed until program number flashes in the display.

* or ■ on the remote control (CSD-A170 only)



Program number

2 Press *◀◀, ▶▶ to select a track, then press ■ STOP/MEMORY to store it.

The next program number starts flashing.

* or 0-9, +10 on the remote control (CSD-A170 only)

3 Repeat step 2 to program other tracks.


To return to stop mode in steps 1 to 3, keep ■ pressed.

4 Press ►II to start play.

To check the program, press ◀◀ or ▶▶ in stop mode.

To clear the program, press ■ once in stop mode so that ◻ disappears in the display. The display returns to the CD play.

To change the programmed tracks, clear the program and repeat all the steps again.

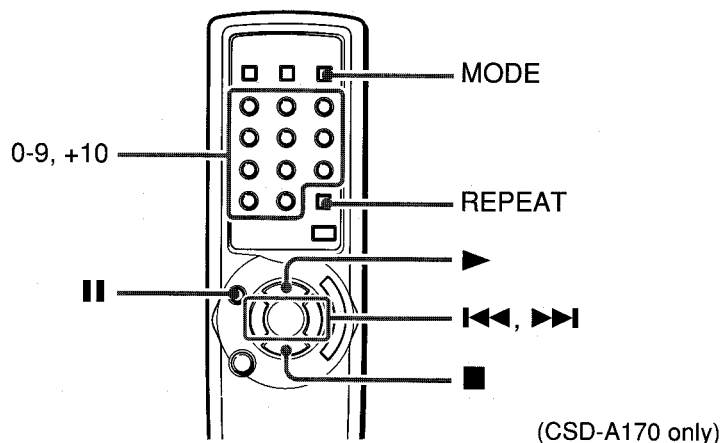

B TUNER OPERATION

1 Press RADIO.

The power is turned on.
The RADIO indicator lights up and the volume level is displayed.

2 Select a band (AM or STEREO FM) with BAND.

3 Tune to a station with TUNING.

After listening, press TAPE/POWER \odot STANDBY to turn the power off.


For better reception

FM



Extend the rod antenna and orient it for the best reception.

AM

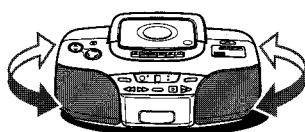

The antenna is inside the unit. Position the unit for the best reception.

If an FM stereo broadcast contains noise

Select MONO FM with BAND.

Noise is reduced although reception is monaural. To restore stereo reception, select STEREO FM.

*REPEAT/OSC/SLEEP

- If a high-pitched sound is heard during recording from AM, press the button repeatedly until the noise is reduced.
- If a high pitched sound is heard when listening to a radio broadcast, press the button repeatedly until the noise is reduced.

* or MODE on the remote control (CSD-A170 only)

NOTE


If the unit picks up noise from other electrical appliances nearby, like a TV or fluorescent lights, move the unit away.

C TAPE PLAYING

Use Type I (normal) tapes only.

INSERTING A TAPE

Press $\blacksquare/\blacktriangle$ STOP/EJECT to open the cassette holder and insert a tape with the exposed side up and the side to be played facing out.

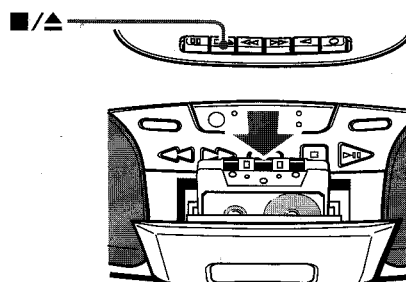

Push the cassette holder to close.

PLAYING A TAPE

Press \blacktriangleleft PLAY while the power is off.

The power is turned on and play of the inserted tape begins.

The volume level is displayed during tape operation.


$\blacksquare/\blacktriangle$ STOP/EJECT – Stops play. The power will be automatically turned off.

II PAUSE – Pauses play. To resume play, press again.

$\blacktriangleleft\blacktriangleleft$ F FWD/ $\blacktriangleright\blacktriangleright$ REWIND – Fast forwards/rewinds. To stop the winding, press $\blacksquare/\blacktriangle$.

To listen with the headphones

Connect headphones with a stereo mini plug to the PHONES jack.

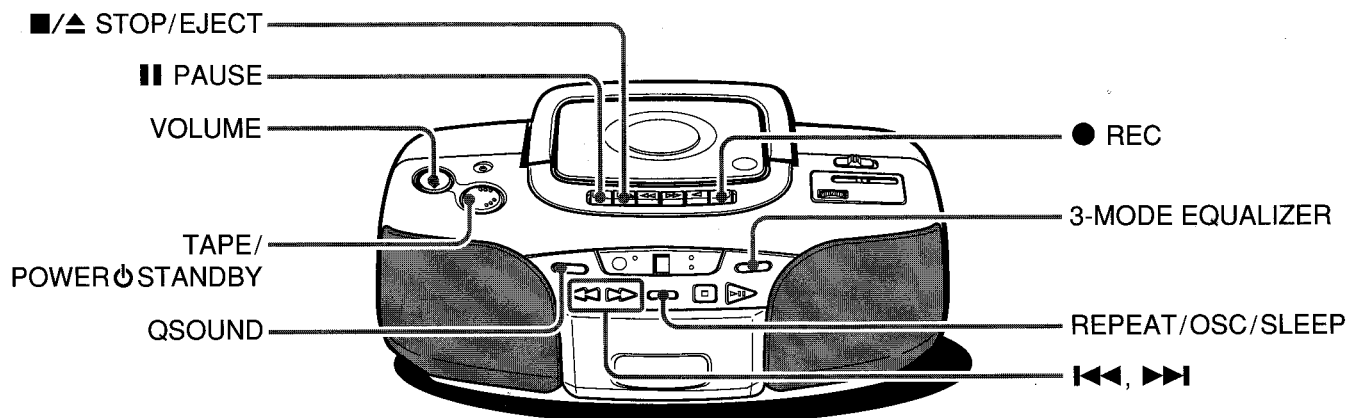

RECORDING

- Use Type I (normal) tapes only.
- Note that recording is done on only one side of the tape.

- 1 Insert a tape with the side to be recorded facing out.**
- 2 Get ready to record from the source.**
To record from a CD, press CD and load the disc.
To record from a radio broadcast, press RADIO and tune to a station.
- 3 Press ● REC to start recording.**
◀ PLAY is pressed simultaneously.
When the selected function is CD, CD play and recording starts simultaneously.

To record only the selected tracks of a CD

- 1 Follow steps 1 to 3 of PROGRAMMED PLAY on page 4 to program tracks.
- 2 Press ● REC.

To stop recording, press ■/▲ STOP/EJECT.

To stop CD play, press ■ STOP/MEMORY.

To pause recording, press || PAUSE. To resume recording, press again.

To erase recording, press ● REC while the power is off.

After recording, press TAPE/POWER ⏻ STANDBY to turn the power off.

To prevent accidental erasure

Break off the plastic tabs on the cassette tape with a screwdriver or other pointed tool after recording.

To record on the tape again

Cover the tab openings with adhesive tape, etc.



GENERAL

SOUND ADJUSTMENT

VOLUME

Press VOLUME ▲ or ▼. The volume level is changed from 0 to 19.

"1" in the display indicates the level 1 and "• 1" indicates the level 11.

- The volume level is automatically set to 9 if the power is turned off when the volume level is set to 10 or more. (except when turning the power back on within 4 seconds)

To display the volume level when CD function is selected

Press VOLUME ▲ or ▼. The volume level is displayed for 4 seconds.

DISPLAY on the remote control (CSD-A170 only) is also available.

3-MODE EQUALIZER

Press *3-MODE EQUALIZER until one of the indicators lights up.

The equalizer mode changes to ROCK, POP, JAZZ or no equalization, cyclically.



ROCK - Emphasizes the high and low range of music.

POP - Emphasizes voice and midrange of music.

JAZZ - Emphasizes the low range of music.

* or EQ on the remote control (CSD-A170 only)

QSOUND system

This system provides a rich, three dimensional sound area for stereo sources.

You can enjoy more enhanced sound.

Press QSOUND and the QSOUND indicator lights up.


- At higher volumes, turning QSOUND on may cause sound distortion. In this case, make the volume down.

If an erroneous display or malfunction occurs

Make sure that none of the deck operation buttons is pressed.

Press ■ while pressing TAPE/POWER ⏻ STANDBY.

If the unit cannot be reset in the way above, disconnect the AC cord and remove all the batteries to turn off the display. Leave the unit for a while and turn the power back on.

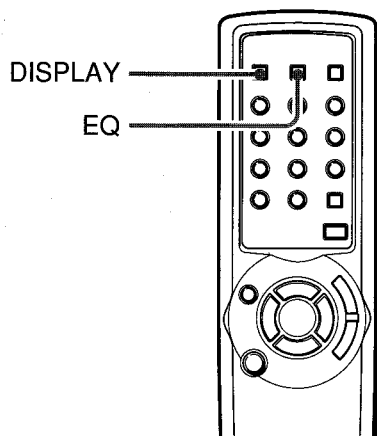

(CSD-A170 only)

SETTING THE SLEEP TIMER

The unit can be turned off automatically at a specified time.

- 1** Keep REPEAT/OSC/SLEEP pressed until “• 1” flashes in the display.



The dot and number flash.

- 2** Within 4 seconds, press ◀◀ or ▶▶ to specify the time until the power is turned off.

Each time it is pressed, the time changes between 10 and 90 minutes in 10-minute steps.

Example: The unit will turn off after 30 minutes.



→ 1 → 2 → 3 9 → 0 (off)



While the sleep timer works the dot keeps flashing.



The volume level or a CD track number

To check the time remaining until the power is turned off

Repeat step 1 shown above. The remaining time is displayed for 4 seconds.

To cancel the sleep timer

Display the remaining time and press ◀◀ or ▶▶ repeatedly until [off] is displayed.

NOTE

If the unit is turned off during tape playback, ◀ on the deck will not be released. Press ■/▲ to release ◀.

Notes on CD-R/RW discs

- The unit may not play a CD-R/RW disc that is recorded on personal computers or some kinds of CD-R/RW recorders because of differences in recording platforms.
- Do not attach any seal or label to either side (the recordable side or the labeled side) of a CD-R/RW disc. It may cause malfunction.
- Do not load an unrecorded CD-R/RW disc. It will take over 30 seconds to read the disc. The disc may be damaged if you try to open the disc compartment while reading the disc.

Maintenance

To clean the cabinet

Use a soft cloth lightly moistened with mild detergent solution. Do not use strong solvents such as alcohol, benzene or thinner.

To clean the heads

When the tape heads are dirty;

- high frequency sound is not emitted
- the sound is not adequately high
- the sound is off-balance
- the tape cannot be erased
- the tape cannot be recorded on


After every 10 hours of use, clean the tape heads with a head cleaning cassette.

Use separately sold dry-type or wet-type cleaning cassette.

Refer to the instructions of the cleaning cassette for details.

To clean the lens

Use a cotton swab slightly moistened with cleaning fluid. Wipe gently from the center to the edge.

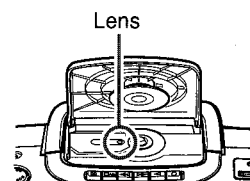

Specifications

Tuner section

Frequency range, antenna — FM: 87.5 - 108.0 MHz Rod antenna,
AM: 530 - 1,710 kHz Ferrite bar antenna

Deck section

Track format — 4 tracks, 2 channels / Frequency range — Normal tape:
50 - 12,500 Hz (EIAJ) / Recording system — AC bias / Erasing system —
Magnet erase / Heads — Recording/playback head (1), Erasure head (1)

CD player section

Disc — Compact disc / Scanning method — Non-contact optical scanner
(semiconductor laser)

General

Speaker — 100 mm cone type (2) / Output — Headphones jack (stereo
mini-jack) / Power output — 2.5 W + 2.5 W (EIAJ 7 ohms, T.H.D. 10%) /
Power requirements — DC 12 V using eight size C (R14) batteries, AC
120 V, 60 Hz / Power consumption — 15 W / Dimensions — 420 (W) ×
185 (H) × 250 (D) mm (16⁵/₈ × 7³/₈ × 9⁷/₈ in.) / Weight — 3.45 kg (7 lbs.
10 oz.) (excluding batteries) / Accessory — Remote control (1, CSD-
A170 only), AC cord (1)

- Specifications and external appearance are subject to change without notice.

COPYRIGHT

Please check the copyright laws relating to recordings from disc,
radio or external tape for the country in which the machine is being
used.

Spécifications

Section tuner

Plage de fréquence, antenne — FM : 87,5 MHz - 108,0 MHz, antenne à
tige - AM : 530 kHz - 1,710 kHz, antenne à barre de ferrite

Section magnétocassette

Format de piste — 4 pistes, 2 canaux / Plage de fréquence — Cassette
normale : 50 Hz - 12,500 Hz (EIAJ) / Système d'enregistrement —
Polarisation CA / Système d'effacement — Effacement magnétique /
Têtes — 1 tête d'enregistrement/lecture, 1 tête d'effacement

Section lecteur de disques compacts

Disque — Disque compact / Méthode d'analyse — Scanner optique sans
contact (laser à semi-conducteurs)

Généralités

Haut-parleurs — A cône de 100 mm (2) / Sortie — Prise de casque
(minifiche stéréo) / Puissance de sortie — 2,5 W + 2,5 W (EIAJ 7 ohms,
DHT 10%) / Alimentation électrique — CC 12 V avec huit piles de taille C
(R14), alimentation secteur 120 V, 60 Hz / Consommation — 15 W /
Dimensions — 420 (L) × 185 (H) × 250 (P) mm / Poids — 3,45 kg (sans
les piles) / Accessoires — Télécommande (1, modèle CSD-A170
seulement), Cordon secteur (1)

- Les spécifications et l'aspect extérieur sont sujets à modification sans
préavis.

DROITS D'AUTEUR

Vérifier les lois sur les droits d'auteur relatives à l'enregistrement de
disques, d'émissions de radio ou de cassettes du pays dans lequel
l'appareil est utilisé.

Especificaciones

Sección del sintonizador

Gama de frecuencias, antena — FM: 87,5 - 108,0 MHz, antena de varilla.
AM: 530 - 1,710 kHz, antena de barra de ferrita

Sección de la platina

Formato de pistas — 4 pistas, 2 canales / Gama de frecuencias — Cinta
normal: 50 - 12,500 Hz (EIAJ) / Sistema de grabación — Polarización de
CA / Sistema de borrado — Borrado magnético / Cabezas — 1 de
reproducción/grabación, 1 de borrado

Sección del lector de CD

Disco — Disco compacto / Método de lectura — Lector óptico sin contacto
(láser de semiconductor)

General

Altavoces — 2 cónicos de 100 mm / Salida — Toma para auriculares
(minitoma estéreo) / Potencia — 2,5 W + 2,5 W (EIAJ 7 ohmios, DAT
10%) / Alimentación — 12 V CC usando ocho pilas de tamaño C (R14),
120 V CA, 60 Hz / Consumo de energía — 15 W / Dimensiones — 420
(an) × 185 (al) × 250 (pr) mm / Peso — 3,45 kg (sin pilas) / Accesorios —
1 control remoto (CSD-A170 solamente), 1 cable de alimentación

- Las especificaciones y el aspecto externo están sujetos a cambios sin
previo aviso.

COPYRIGHT

Rogamos compruebe las leyes sobre "copyright" relacionadas con la
grabación de discos, programas de radio o cintas externas vigentes
en el país en el que se va a utilizar este aparato.

NOTE

This equipment has been tested and found to comply with the limits for
a Class B digital device, pursuant to Part 15 of the FCC Rules. These
limits are designed to provide reasonable protection against harmful
interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency
energy and, if not installed and used in accordance with the instruc-
tions, may cause harmful interference to radio communications. How-
ever, there is no guarantee that interference will not occur in a particular
installation. If this equipment does cause harmful interference to radio
or television reception, which can be determined by turning the equip-
ment off and on, the user is encouraged to try to correct the interference
by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that
to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Modifications or adjustments to this product, which are not expressly
approved by the manufacturer, may void the user's right or authority to
operate this product.

AIWA CO.,LTD.

Printed in China