

Correction

Please make the following corrections to the supplied operating instructions (see the underlined parts).

Playing a disc (page 17)

Incorrect

Select	To play
PGM (<u>Shuffle</u> Play)	The tracks on all discs in the order you want them to be played (see “Creating your own program” on page 22).



Correct

Select	To play
PGM (<u>Program</u> Play)	The tracks on all discs in the order you want them to be played (see “Creating your own program” on page 22).

Playing a disc with MP3 audio tracks



Other operations (page 20)

Incorrect

To	Do this
Select an album of MP3 tracks	<ol style="list-style-type: none"> 1 Press DVD DISPLAY. The Control Menu appears in the on-screen display. 2 Press \blacktriangle or \blacktriangledown repeatedly to <u>select</u> (ALBUM), then press ENTER or \blackrightarrow. The list of albums contained in the disc appears. 3 Press \blacktriangle or \blacktriangledown repeatedly to select an album you want to play, then press ENTER. You can select an album by pressing \blacktriangleleft or \blacktriangleright while pressing SHIFT, or by pressing ALBUM + or -. 4 Press \blacktriangle or \blacktriangledown repeatedly to <u>select</u>, then press ENTER. The list of tracks contained in the disc appears. 5 Press \blacktriangle or \blacktriangledown repeatedly to select a track, then press ENTER.



Correct

To	Do this
Select an album of MP3 tracks	<ol style="list-style-type: none"> 1 Press DVD DISPLAY. The Control Menu appears in the on-screen display. 2 Press \blacktriangle or \blacktriangledown repeatedly to <u>select</u>  (ALBUM), then press ENTER or \blackrightarrow. The list of albums contained in the disc appears. 3 Press \blacktriangle or \blacktriangledown repeatedly to select an album you want to play, then press ENTER. You can select an album by pressing \blacktriangleleft or \blacktriangleright while pressing SHIFT, or by pressing ALBUM + or -. 4 Press \blacktriangle or \blacktriangledown repeatedly to <u>select</u>  (TRACK), then press ENTER. The list of tracks contained in the disc appears. 5 Press \blacktriangle or \blacktriangledown repeatedly to select a track, then press ENTER.

Hooking up optional components (page 57)

Incorrect

A COMPONENT VIDEO OUT jacks
Use video cables (supplied) to connect an optional component (such as a TV) to this jack.



Correct

A COMPONENT VIDEO OUT jacks
Use video cables (not supplied) to connect an optional component (such as a TV) to this jack.