

# CD/DVD Player

## Operating Instructions

### For customers in the U.S.A Owner's Record

The model and serial numbers are located at the rear of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. DVP-NS725P

Serial No. \_\_\_\_\_

### For Customers in Canada

If this product is not working properly, please call 1-877-602-2008 for **Peace of Mind Warranty Replacement service.**

For other product related questions please contact our **Customer Information Service Centre** at 1-877-899-7669 or write to us at: Customer Information Service 115 Gordon Baker Road, Toronto, Ontario, M2H 3R6



## DVP-NS725P


# WARNING

**To prevent fire or shock hazard, do not expose the unit to rain or moisture. To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.**

## CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.

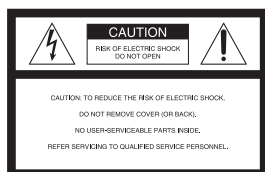

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## CAUTION:

**TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

## CAUTION

You are cautioned that any change or modifications not expressly approved in this manual could void your authority to operate this equipment.

## Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Welcome!

Thank you for purchasing this Sony CD/DVD Player. Before operating this player, please read this manual thoroughly and retain it for future reference.

# Precautions

- The power requirements and power consumption of this player are indicated on the back of the player. Check that the player's operating voltage is identical with your local power supply.

**Power requirements and power consumption →**



## On safety

- Caution – The use of optical instruments with this product will increase eye hazard.
- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.

## On power sources

 
- The player is not disconnected from the AC power source as long as it is connected to the wall outlet, even if the player itself has been turned off.
- If you are not going to use the player for a long time, be sure to disconnect the player from the wall outlet. To disconnect the AC power cord, grasp the plug itself; never pull the cord.
- Should the AC power cord need to be changed, have it done at a qualified service shop only.

## On placement

- Place the player in a location with adequate ventilation to prevent heat build-up in the player.
- Do not place the player on a soft surface such as a rug that might block the ventilation holes.
- Do not place the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.

## For the model supplied with the AC plug adaptor

If the AC plug of your unit does not fit into the wall outlet, attach the supplied AC plug adaptor.

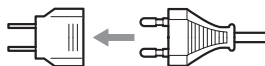

## On operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.
- When you move the player, take out any discs. If you don't, the disc may be damaged.

## On adjusting volume

Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level section is played.

## On cleaning

Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

## On cleaning discs

Do not use a commercially available cleaning disc. It may cause a malfunction.

## IMPORTANT NOTICE

Caution: This player is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Plasma Display Panel televisions and projection televisions are susceptible to this.

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.





# Table of Contents

WARNING .....	2
Welcome! .....	2
Precautions .....	3
About this Manual .....	6
This Player Can Play the Following Discs .....	6
Notes about the Discs .....	7
Index to Parts and Controls .....	8
Guide to the Control Menu Display .....	12
<b>Hookups .....</b>	<b>15</b>
Hooking Up the Player .....	15
Step 1: Unpacking .....	15
Step 2: Inserting Batteries into the Remote .....	15
Step 3: Connecting the Video Cords .....	16
Step 4: Connecting the Audio Cords .....	19
Step 5: Connecting the Power Cord .....	24
Step 6: Quick Setup .....	24
<b>Playing Discs .....</b>	<b>26</b>
Playing Discs .....	26
Resuming Playback from the Point Where You Stopped the Disc (Multi-disc Resume) .....	28
Using the DVD's Menu .....	29
Playing VIDEO CDs with PBC Functions (PBC Playback) .....	29
Playing an MP3 Audio Track .....	30
Various Play Mode Functions (Program Play, Shuffle Play, Repeat Play, A-B Repeat Play) .....	32
<b>Searching for a Scene .....</b>	<b>37</b>
Searching for a Particular Point on a Disc (Search, Scan, Slow-motion Play, Freeze Frame) .....	37
Searching for a Title/Chapter/Track/Scene, etc. ....	38
Searching by Scene (PICTURE NAVIGATION) .....	40
<b>Viewing Information About the Disc .....</b>	<b>41</b>
Checking the Playing Time and Remaining Time .....	41
Checking the Play Information .....	43
<b>Sound Adjustments .....</b>	<b>45</b>
Changing the Sound .....	45
TV Virtual Surround Settings (TVS) .....	46

<b>Enjoying Movies</b> . . . . .	<b>48</b>
Changing the Angles . . . . .	48
Displaying the Subtitles . . . . .	48
Adjusting the Picture Quality (BNR) . . . . .	49
Adjusting the Playback Picture (CUSTOM PICTURE MODE) . . . . .	50
Enhancing the Playback Picture (DIGITAL VIDEO ENHANCER) . . . . .	51
<b>Using Various Additional Functions</b> . . . . .	<b>53</b>
Locking Discs (CUSTOM PARENTAL CONTROL, PARENTAL CONTROL) . . . . .	53
Controlling Your TV with the Supplied Remote . . . . .	57
<b>Settings and Adjustments</b> . . . . .	<b>58</b>
Using the Setup Display . . . . .	58
Setting the Display or Sound Track Language (LANGUAGE SETUP) . . . . .	59
Settings for the Display (SCREEN SETUP) . . . . .	60
Custom Settings (CUSTOM SETUP) . . . . .	61
Settings for the Sound (AUDIO SETUP) . . . . .	62
<b>Additional Information</b> . . . . .	<b>64</b>
Troubleshooting . . . . .	64
Self-diagnosis Function (When letters/numbers appear in the display) . . . . .	66
Glossary . . . . .	67
Specifications . . . . .	69
Language Code List . . . . .	70
Index . . . . .	71




## About this Manual

- Instructions in this manual describe the controls on the remote. You can also use the controls on the player if they have the same or similar names as those on the remote.
- The meaning of the icons used in this manual is described below:

Icon	Meaning
	Functions available for DVD VIDEOS and DVD-RWs/ DVD-Rs in video mode or DVD+RWs/DVD+Rs
	Functions available for VIDEO CDs, Super VCDs, or CD-Rs/ CD-RWs in video CD format or Super VCD format
	Functions available for DATA CDs (CD-ROMs/CD-Rs/CD-RWs containing MP3* audio tracks)
	Functions available for music CDs or CD-Rs/CD-RWs in music CD format

\* MP3 (MPEG 1 Audio Layer 3) is a standard format defined by ISO/MPEG which compresses audio data.

## This Player Can Play the Following Discs

Format of discs	
DVD VIDEO (page 67)	
VIDEO CD	
Music CD	

The “DVD VIDEO” logo is a trademark.

## Region code

Your player has a region code printed on the back of the unit and only will play DVD VIDEO discs (playback only) labeled with

identical region codes. This system is used to protect copyrights.

DVDs labeled  will also play on this player.

If you try to play any other DVD, the message “Playback prohibited by area limitations.” will appear on the TV screen. Depending on the DVD, no region code indication may be labeled even though playing the DVD is prohibited by area restrictions.



## Example of discs that the player cannot play

The player cannot play the following discs:

- All CD-ROMs (including PHOTO CDs)/ CD-Rs/CD-RWs other than those recorded in the following formats:
  - music CD format
  - video CD format
  - MP3 format that conforms to ISO9660\* Level 1/Level 2, or its extended format, Joliet
- Data part of CD-Extras
- DVD-RWs in VR mode
- DVD-ROMs
- DVD Audio discs
- HD layer on Super Audio CDs
- \* A logical format of files and folders on CD-ROMs, defined by ISO (International Standard Organization).

Also, the player cannot play the following discs:

- A DVD with a different region code.
- A disc recorded in a color system other than NTSC, such as PAL or SECAM (this player conforms to the NTSC color system).
- A disc that has a non-standard shape (e.g., card, heart).
- A disc with paper or stickers on it.
- A disc that has the adhesive of cellophane tape or a sticker still left on it.

## Notes

- **Notes about DVD-RWs/DVD-Rs, DVD+RWs/DVD+Rs or CD-Rs/CD-RWs**

Some DVD-RWs/DVD-Rs, DVD+RWs/DVD+Rs, or CD-Rs/CD-RWs cannot be played on this player due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software.

The disc will not play if it has not been correctly finalized. For more information, see the operating instructions for the recording device. Note that discs created in the Packet Write format cannot be played.

- **Music discs encoded with copyright protection technologies**

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

## Note on playback operations of DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the instructions supplied with the DVDs or VIDEO CDs.

## Copyrights

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents, other intellectual property rights owned by Macrovision Corporation, and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

## Notes about the Discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.



- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.
- Clean the disc with a cleaning cloth. Wipe the disc from the center out.




- Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.

# Index to Parts and Controls

For more information, refer to the pages indicated in parentheses.

## Front panel

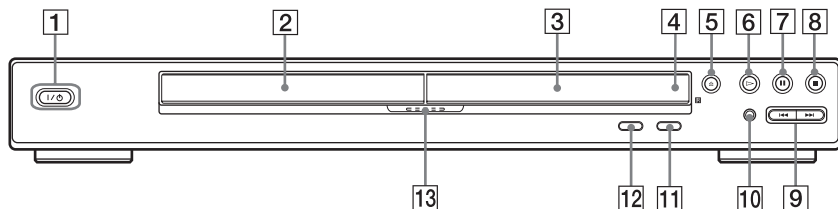


- 1** I/O (on/standby) button (26)
- 2** Disc tray (26)
- 3** Front panel display (9)
- 4** (remote sensor) (15)
- 5** (open/close) button (26)
- 6** (play) button (26)
- 7** (pause) button (27)
- 8** (stop) button (27)

- 9** (previous/next) buttons (37)
- 10** PROGRESSIVE button (18, 24)
- 11** SURROUND button (46)
- 12** PICTURE MODE button (50)
- 13** PROGRESSIVE indicator (17)  
Lights up when the player outputs progressive signals.




# Front panel display


## When playing back a DVD

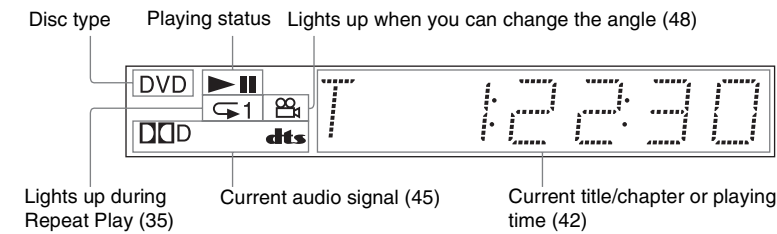


## When playing back a VIDEO CD with Playback Control (PBC) (29)

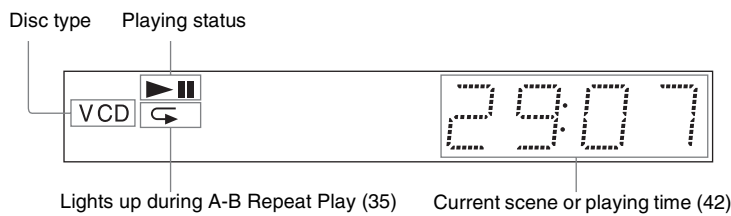

## When playing back a CD, DATA CD (MP3 audio), or VIDEO CD (without PBC)

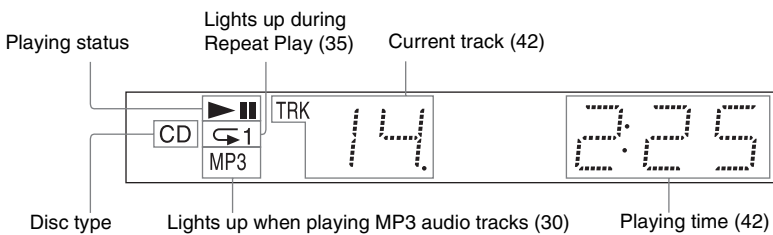


## Rear panel

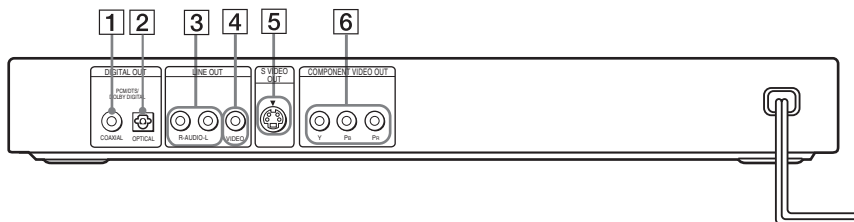

- 1** DIGITAL OUT (COAXIAL) jack (21) (22) (23)
- 2** DIGITAL OUT (OPTICAL) jack (21) (22) (23)
- 3** LINE OUT L/R (AUDIO) jack (20) (21) (22)
- 4** LINE OUT (VIDEO) jack (16)
- 5** S VIDEO OUT jack (16)
- 6** COMPONENT VIDEO OUT jacks (16)

## Remote

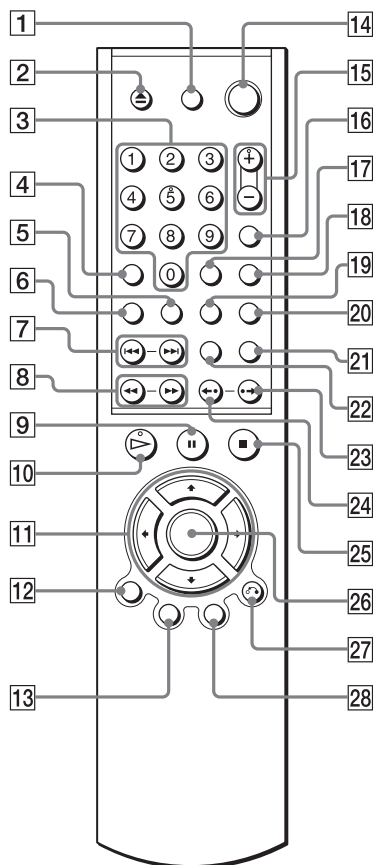


- 1** TV (on/standby) button (57)
- 2** OPEN/CLOSE button (26)
- 3** Number buttons (29)  
The number 5 button has a tactile dot.\*
- 4** CLEAR button (32)
- 5** SUBTITLE button (48)
- 6** AUDIO button (45)
- 7** PREV/NEXT (previous/next) buttons (27)
- 8** SCAN/SLOW buttons (37)
- 9** PAUSE button (27)
- 10** PLAY button (26)  
The button has a tactile dot.\*
- 11** buttons (29)
- 12** DISPLAY button (12)
- 13** TOP MENU button (29)
- 14** (on/standby) button (26)
- 15** VOL (volume) +/- buttons (57)  
The + button has a tactile dot.\*
- 16** TV/VIDEO button (57)
- 17** TIME/TEXT button (41)
- 18** PICTURE MODE button (50)
- 19** ANGLE button (48)
- 20** SUR (surround) button (46)
- 21** PICTURE NAVI (picture navigation) button (40)
- 22** REPEAT button (35)
- 23** INSTANT SEARCH/STEP button (27, 37)
- 24** INSTANT REPLAY/STEP button (27, 37)
- 25** STOP button (27)
- 26** ENTER button (27)
- 27** RETURN button (27)
- 28** MENU button (29) (30)

\* Use the tactile dot as a reference when operating the player.

# Guide to the Control Menu Display

Use the Control Menu to select a function and to view related information. Press DISPLAY repeatedly to turn on or change the Control Menu display as follows:

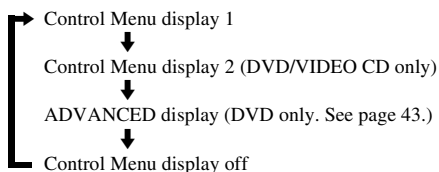


## Hint

You can skip the ADVANCED display by setting “OFF” under “ADVANCED” in the Control Menu (page 43).

## Control Menu Display

The Control Menu display 1 and 2 will show different items depending on the disc type. For details about each item, please refer to the pages in the parentheses.

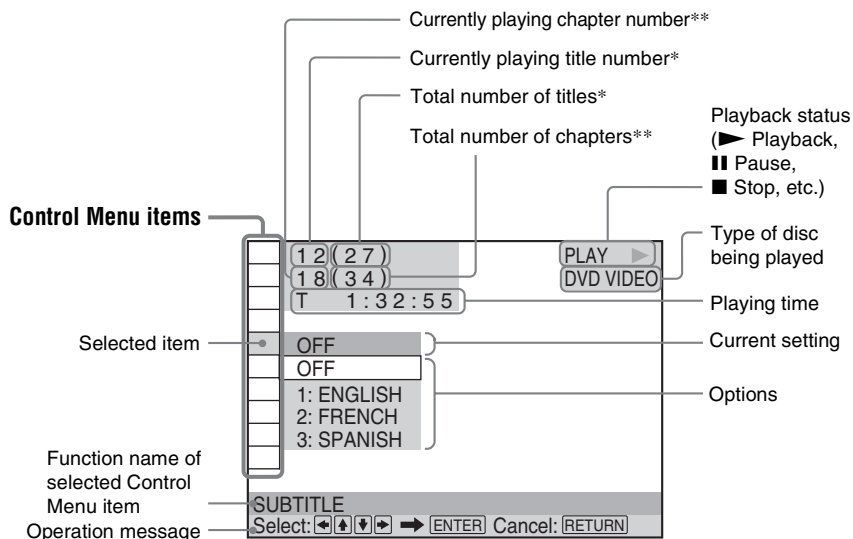


 











Example: Control Menu display 1 when playing a DVD.









\* Displays the scene number for VIDEO CDs (PBC is on), track number for VIDEO CDs/CDs, album number for DATA CDs.

\*\* Displays the index number for VIDEO CDs/CDs, MP3 audio track number for DATA CDs.



## List of Control Menu Items

Item	Item Name, Function, Relevant Disc Type
	<b>TITLE (page 38)/SCENE (page 38)/TRACK (page 38)</b> Selects the title, scene, or track to be played. <b>DVD VCD</b>
	<b>CHAPTER (page 38)/INDEX (page 38)</b> Selects the chapter or index to be played. <b>DVD VCD</b>
	<b>ALBUM (page 30)</b> Selects the album to be played. <b>DATA CD</b>
	<b>TRACK (page 38)</b> Selects the track to be played. <b>CD DATA CD</b>
	<b>INDEX (page 38)</b> Selects the index to be played. <b>CD</b>
	<b>TIME/TEXT (page 38)</b> Checks the elapsed time and the remaining playback time. Input the time code for picture and music searching. Displays the DVD/CD text or the DATA CD's track name. <b>DVD VCD CD DATA CD</b>
	<b>AUDIO (page 45)</b> Changes the audio setting. <b>DVD VCD CD DATA CD</b>
	<b>SUBTITLE (page 48)</b> Displays the subtitles. Changes the subtitle language. <b>DVD</b>
	<b>ANGLE (page 48)</b> Changes the angle. <b>DVD</b>
	<b>TVS (TV Virtual Surround) (page 46)</b> Selects the surround functions. <b>DVD</b>
	<b>ADVANCED (page 43)</b> Displays the information (bit rate or layer) of the disc currently playing. <b>DVD</b>
	<b>PARENTAL CONTROL (page 53)</b> Set to prohibit playback on this player. <b>DVD VCD CD</b>
	<b>SETUP (page 58)</b> QUICK Setup (page 24) Use Quick Setup to choose the desired language of the on-screen display, the aspect ratio of the TV and the audio output signal. CUSTOM Setup In addition to the Quick Setup setting, you can adjust other various settings. RESET Returns the settings in "SETUP" to the default setting. <b>DVD VCD CD DATA CD</b>
	<b>PROGRAM (page 32)</b> Selects the title, chapter, or track to play in the order you want. <b>DVD VCD CD</b>
	<b>SHUFFLE (page 34)</b> Plays the title, chapter, or track in random order. <b>DVD VCD CD</b>

	<b>REPEAT (page 35)</b> Plays the entire disc (all titles/all tracks/all albums) repeatedly or one title/chapter/track/album repeatedly. <div>DVD VCD CD DATA CD</div>
	<b>A-B REPEAT (page 35)</b> Specifies the parts you want to play repeatedly. <div>DVD VCD CD</div>
	<b>BNR (page 49)</b> Adjusts the picture quality by reducing the “block noise” or mosaic like patterns that appear on your TV screen. <div>DVD VCD</div>
	<b>CUSTOM PICTURE MODE (page 50)</b> Adjusts the video signal from the player. You can select the picture quality that best suits the program you are watching. <div>DVD VCD</div>
	<b>DIGITAL VIDEO ENHANCER (page 51)</b> Exaggerates the outline of the image to produce a sharper picture. <div>DVD VCD</div>
	<b>PICTURE NAVIGATION (page 40)</b> Divides the screen into 9 subscreens to help you find the scene you want quickly. <div>DVD VCD</div>

#### Hint

The Control Menu icon indicator lights up in green

 →  when you select any item except “OFF,” (“TVS,” “PROGRAM,” “SHUFFLE,” “REPEAT,” “A-B REPEAT,” “BNR,” “DIGITAL VIDEO ENHANCER” only).

The “ANGLE” indicator lights up in green only when the angles can be changed. The “CUSTOM PICTURE MODE” indicator lights up in green when any setting other than “STANDARD” is selected.

## Hooking Up the Player

Follow Steps 1 to 6 to hook up and adjust the settings of the player.

### Notes


- Plug cords securely to prevent unwanted noise.
- Refer to the instructions supplied with the components to be connected.
- You cannot connect this player to a TV that does not have a video input jack.
- Be sure to disconnect the power cord of each component before connecting.


## Step 1: Unpacking

Check that you have the following items:

- Audio/video cord (pinplug  $\times$  3  $\longleftrightarrow$  pinplug  $\times$  3) (1)
- Remote commander (remote) (1)
- Size AA (R6) batteries (2)
- A plug adapter is included with some models.

## Step 2: Inserting Batteries into the Remote

You can control the player using the supplied remote. Insert two Size AA (R6) batteries by matching the  $\oplus$  and  $\ominus$  ends on the batteries to the markings inside the compartment. When using the remote, point it at the remote sensor  on the player.

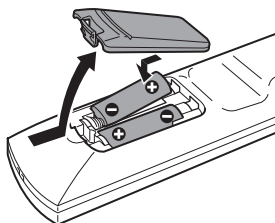


### Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct light from the sun or a lighting apparatus. Doing so may cause a malfunction.
- If you do not use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

## Step 3: Connecting the Video Cords

Connect this player to your TV monitor, projector, or AV amplifier (receiver) using a video cord. Select one of the patterns **A** through **C**. In order to view progressive signal (480p) pictures with a compatible TV, projector, or monitor, you must use connection **C**, according to the input jack on your TV monitor, projector, or AV amplifier (receiver).

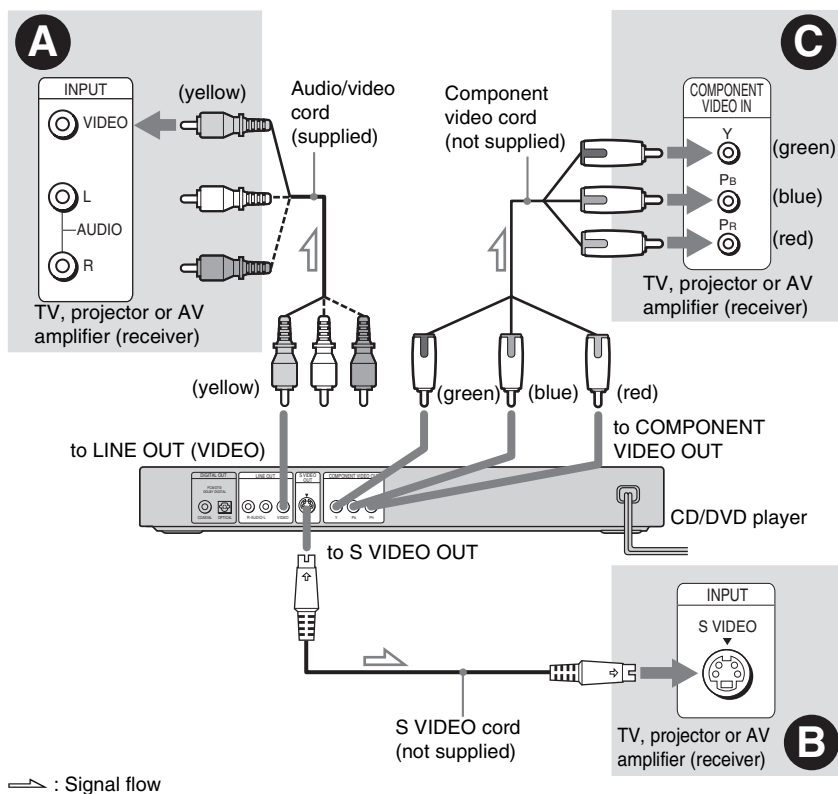

### **A** If you are connecting to a video input jack

Connect the yellow plug of the audio/video cord (supplied) to the yellow (video) jacks. You will enjoy standard quality images.



Use the red and white plugs to connect to the audio input jacks (page 20). (Do this if you are connecting to a TV only.)



## B If you are connecting to an S VIDEO input jack

Connect an S VIDEO cord (not supplied). You will enjoy high quality images.



## C If you are connecting to a monitor, projector, or AV amplifier (receiver) having component video input jacks (Y, P<sub>B</sub>, P<sub>R</sub>)

Connect the component via the COMPONENT VIDEO OUT jacks using a component video cord (not supplied) or three video cords (not supplied) of the same kind and length. You will enjoy accurate color reproduction and high quality images. If your TV accepts progressive (480p) format signals, you must use this connection and then press PROGRESSIVE on the front panel to accept progressive video signals. The PROGRESSIVE indicator lights up in blue when the player outputs progressive signals. See “Using the PROGRESSIVE button” on the next page for more information.




### When connecting to a wide screen TV

Depending on the disc, the image may not fit your TV screen. If you want to change the aspect ratio, please refer to page 60.

### Notes

- Do not connect the player to a VCR. If you pass the player signals via the VCR, you may not receive a clear image on the TV screen.

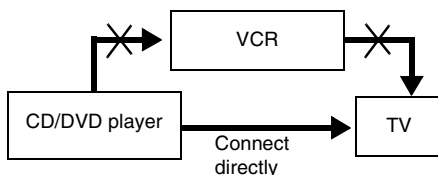

- Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In the case of 480 progressive scan picture problems, it is recommended that you switch the connection to the standard definition output. If there are questions regarding your Sony TV set's compatibility with this model 480p DVD player, please contact our customer service center.

## Using the PROGRESSIVE button


You can fine-tune the Progressive 480p video signal output when you press PROGRESSIVE on the front panel (the PROGRESSIVE indicator lights up in blue) and connect the player using the COMPONENT VIDEO OUT jacks to a TV that is able to accept the video signal in progressive format.

### ◆ Conversion Modes

DVD software can be divided into two types: film based software and video based software. Video based software is derived from the TV, such as dramas and sit-coms, and displays images at 30 frames/60 fields per second. Film based software is derived from film and displays images at 24 frames per second. Some DVD software contains both Video and Film.

In order for these images to appear natural on your screen when output in PROGRESSIVE mode (60 frames per second), the progressive video signal needs to be converted to match the type of DVD software that you are watching.

Press PROGRESSIVE repeatedly to turn or change the displays as follows:

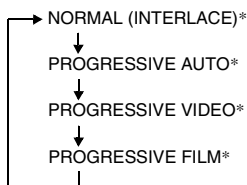

\* Appears as NORMAL, P AUTO, P VIDEO, or P FILM on the front panel display

- **NORMAL (INTERLACE)**

Select this when you are connected to a standard (Interlace format) TV.

- **PROGRESSIVE AUTO**

Select this when you are connected to a progressive TV. This will automatically detect if you are playing Film based or Video based software and convert the signal to the appropriate conversion mode. Normally select this position when you are connected to a progressive TV.

- **PROGRESSIVE VIDEO**

Select this when you are connected to a progressive TV. This will set the conversion mode for Video based software, regardless of the type of software that you are playing.

- **PROGRESSIVE FILM**

Select this when you are connected to a progressive TV. This will set the conversion mode for Film based software, regardless of the type of software that you are playing.

### Notes





- When you select PROGRESSIVE FILM, the progressive format images may become unclear or unnatural. If this happens, select PROGRESSIVE VIDEO.
- When you play video based software with progressive signals, sections of some types of images may appear unnatural due to the conversion process when output through the COMPONENT VIDEO OUT jacks. Images from the S VIDEO OUT and LINE OUT (VIDEO) jacks are unaffected as they are output in the normal (interlace) format.

## Step 4: Connecting the Audio Cords

Refer to the chart below to select the connection that best suits your system. Be sure to also read the instructions for the components you wish to connect.

### Select a connection

Select one of the following connections, **A** through **D**.

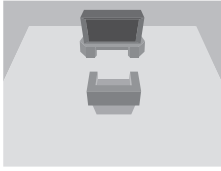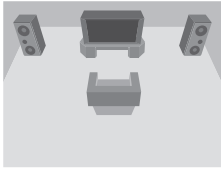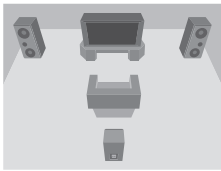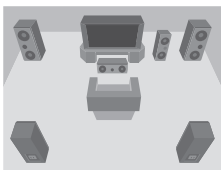
Components to be connected	Connection	Your setup (example)
<b>TV</b> • Surround effects: TVS DYNAMIC (page 46), TVS WIDE (page 46)	<b>A</b> (page 20)	
<b>Stereo amplifier (receiver) and two speakers</b> • Surround effects: TVS STANDARD (page 46) or <b>MD deck/DAT deck</b> • Surround effects: TVS STANDARD (page 46).	<b>B</b> (page 21)	
<b>AV amplifier (receiver) having a Dolby* Surround (Pro Logic) decoder and 3 to 6 speakers</b> • Surround effects: Dolby Surround (Pro Logic) (page 67)	<b>C</b> (page 22)	
<b>AV amplifier (receiver) with digital input jacks having a Dolby Digital or DTS** decoder and 6 speakers</b> • Surround effects: – Dolby Digital (5.1ch) (page 67) – DTS (5.1ch) (page 67)	<b>D</b> (page 23)	

\* Manufactured under license from Dolby Laboratories. "Dolby," "Pro Logic," and the double-D symbol are trademarks of Dolby Laboratories.

\*\* "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

## A Connecting to your TV

This connection will use your TV speakers for sound.

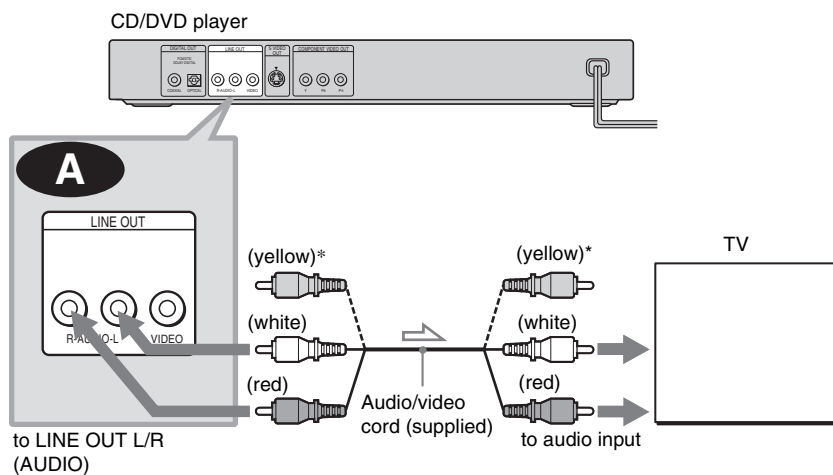


\* The yellow plug is used for video signals (page 16).

### Hint

When connecting to a monaural TV, use a stereo-mono conversion cord (not supplied). Connect the LINE OUT L/R (AUDIO) jacks to the TV's audio input jack.

## B Connecting to a stereo amplifier (receiver) and 2 speakers/Connecting to an MD deck or DAT deck

If the stereo amplifier (receiver) has audio input jacks L and R only, use **B-1**. If the amplifier (receiver) has a digital input jack, or when connecting to an MD deck or DAT deck, use **B-2**. In this case, you can also connect the player directly to the MD deck or DAT deck without using your stereo amplifier (receiver).

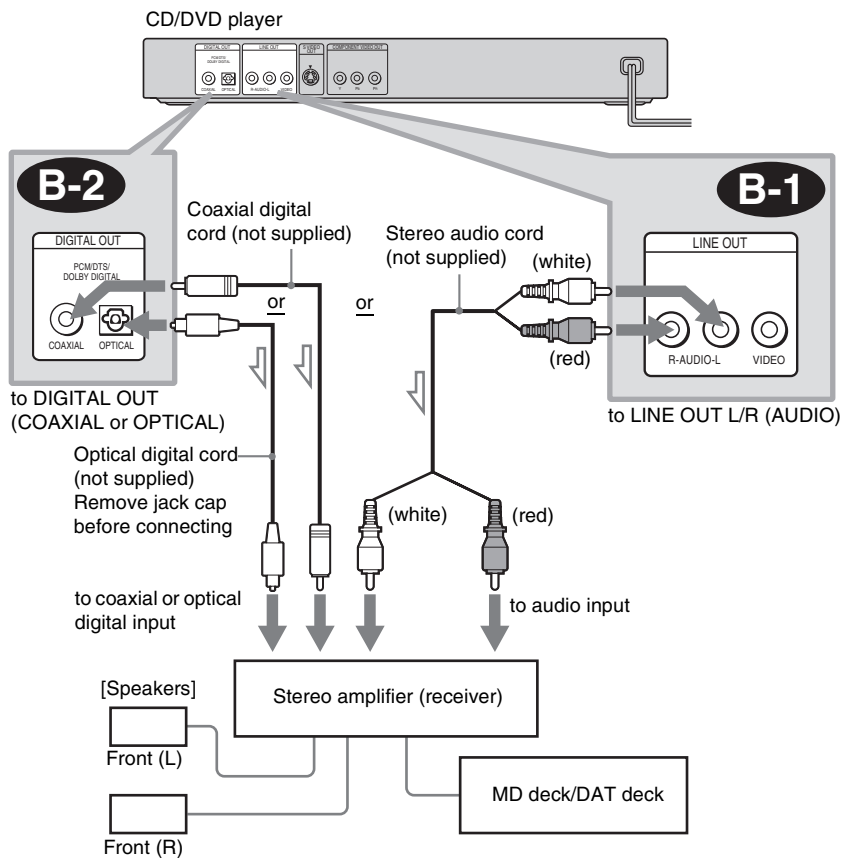


→: Signal flow

## **C Connecting to an AV amplifier (receiver) having a Dolby Surround (Pro Logic) decoder and 3 to 6 speakers**

You can enjoy the Dolby Surround effects only when playing Dolby Surround audio or multi-channel audio (Dolby Digital) discs.

If your amplifier (receiver) has L and R audio input jacks only, use **C-1**. If your amplifier (receiver) has a digital input jack, use **C-2**.

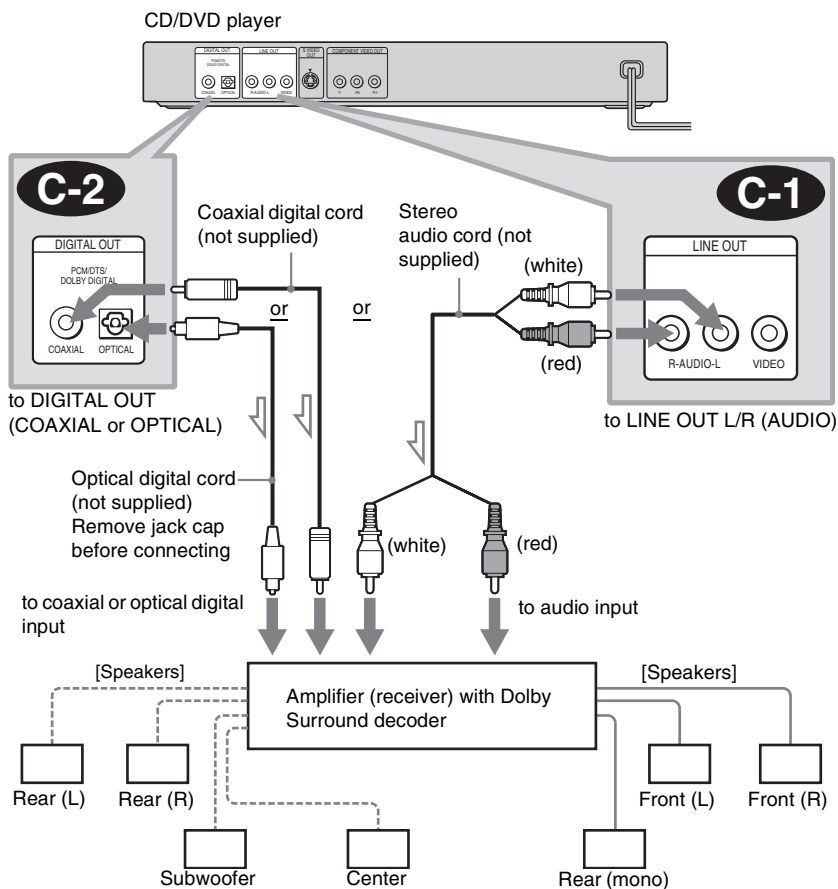


⇒: Signal flow

### **Note**

When connecting 6 speakers, replace the monaural rear speaker with a center speaker, 2 rear speakers and a subwoofer.

## **D** Connecting to an AV amplifier (receiver) with a digital input jack having a Dolby Digital or DTS decoder and 6 speakers

This connection will allow you to use the Dolby Digital or DTS decoder function of your AV amplifier (receiver).

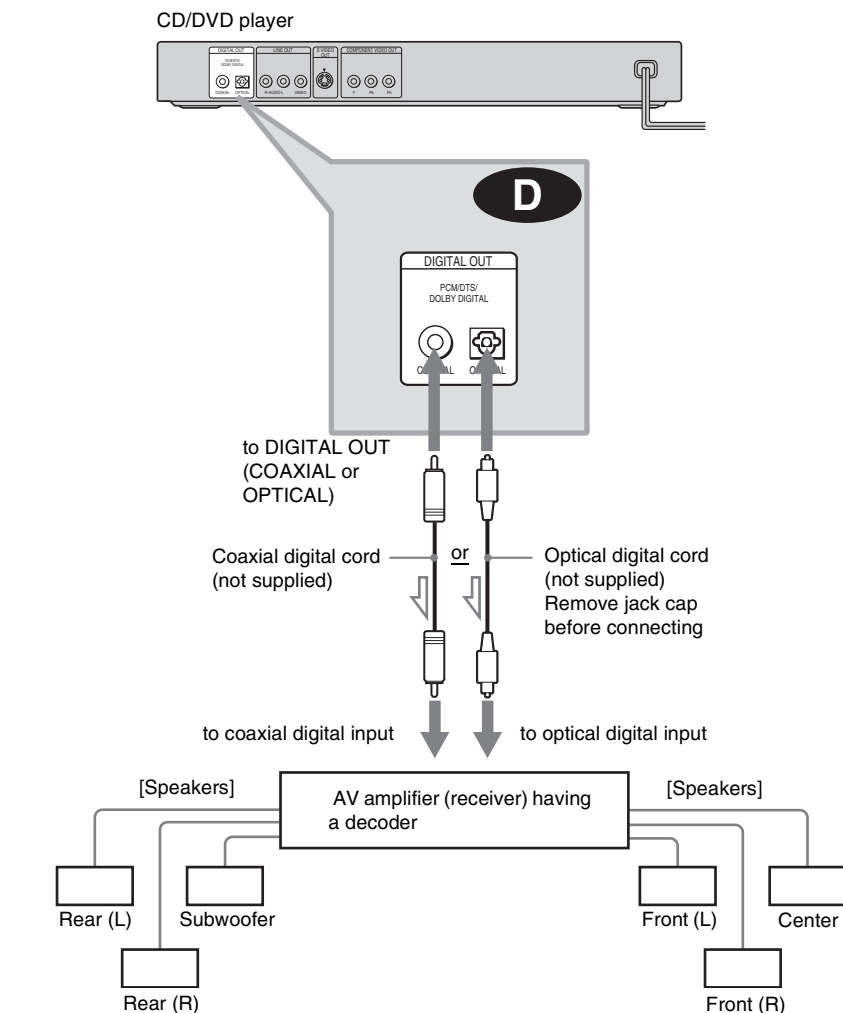

⇒: Signal flow

### **Note**


After you have completed the connection, be sure to set “DOLBY DIGITAL” to “DOLBY DIGITAL” and “DTS” to “ON” in Quick Setup (page 24).

## Step 5: Connecting the Power Cord

Plug the player and TV power cords into an AC outlet.

## Step 6: Quick Setup

Follow the steps below to make the minimum number of basic adjustments for using the player. To skip an adjustment, press **▶▶I**. To return to the previous adjustment, press **I◀◀**.

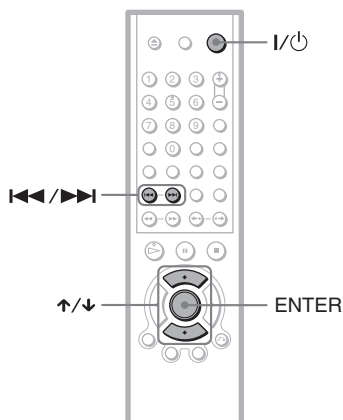

### 1 Turn on the TV.

### 2 Press I/O.


Press **PROGRESSIVE** on the front panel only if you have made video connection **C** (page 16) and wish to view progressive video signals. The **PROGRESSIVE** indicator lights up in blue when the player outputs progressive signals.

### 3 Switch the input selector on your TV so that the signal from the player appears on the TV screen.

“Press [ENTER] to run QUICK SETUP” appears at the bottom of the screen. If this message does not appear, select “QUICK” under “SETUP” in the Control Menu to run Quick Setup (page 59).

### 4 Press ENTER without inserting a disc.

The Setup Display for selecting the language used in the on-screen display appears.

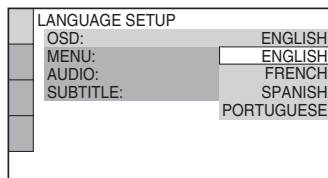


### 5 Press ↑/↓ to select a language.

The player uses the language selected here to display the menu and subtitles as well.

### 6 Press ENTER.

The Setup Display for selecting the aspect ratio of the TV to be connected appears.

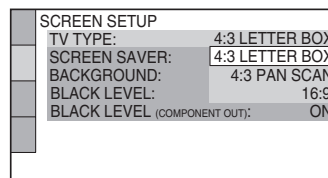

### 7 Press ↑/↓ to select the setting that matches your TV type.

- ◆ If you have a 4:3 standard TV
  - 4:3 LETTER BOX or 4:3 PAN SCAN (page 60)
- ◆ If you have a wide-screen TV or a 4:3 standard TV with a wide-screen mode
  - 16:9 (page 60)

### 8 Press ENTER.

The Setup Display for selecting the type of jack used to connect your amplifier (receiver) appears.



Is this player connected to an amplifier (receiver)? Select the type of jack you are using.

YES

LINE OUTPUT L/R (AUDIO)

DIGITAL OUTPUT

NO

“DTS” is selected.

#### AUDIO SETUP

AUDIO ATT: OFF

AUDIO DRC: STANDARD

DOWNMIX: DOLBY SURROUND

DIGITAL OUT: ON

DOLBY DIGITAL: D-PCM

DTS: OFF

OFF

ON

## 9 Press $\uparrow/\downarrow$ to select the type of jack (if any) you are using to connect to an amplifier (receiver), then press ENTER.

Choose the item that matches the audio connection you selected on pages 20 to 23 ( **A** through **D** ).

**A**

- If you connect just a TV and nothing else, select “NO.” Quick Setup is finished and connections are complete.

**B-1 C-1**

- Select “LINE OUTPUT L/R (AUDIO).” Quick Setup is finished and connections are complete.

**B-2 C-2 D**

- Select “DIGITAL OUTPUT.” The Setup Display for “DOLBY DIGITAL” appears.

## 10 Press $\uparrow/\downarrow$ to select the type of Dolby Digital signal you wish to send to your amplifier (receiver).

Choose the signal that matches the audio connection you selected on pages 21 to 23 ( **B** through **D** ).

#### AUDIO SETUP

AUDIO ATT: OFF

AUDIO DRC: STANDARD

DOWNMIX: DOLBY SURROUND

DIGITAL OUT: ON

DOLBY DIGITAL: D-PCM

DTS: D-PCM

DOLBY DIGITAL

**B-2 C-2**

- D-PCM (page 63)

**D**

- DOLBY DIGITAL (only if the amplifier (receiver) has a Dolby Digital decoder) (page 63)

## 11 Press ENTER.

## 12 Press $\uparrow/\downarrow$ to select whether or not you wish to send a DTS signal to your amplifier (receiver).

Choose the item that matches the audio connection you selected on pages 21 to 23 ( **B** through **D** ).

**B-2 C-2**

- OFF (page 63)

**D**

- ON (only if the amplifier (receiver) has a DTS decoder) (page 63)

## 13 Press ENTER.

Quick Setup is finished. All connections and setup operations are complete.

## Enjoying the surround sound effects

To enjoy the surround sound effects of this player or your amplifier (receiver), set the following items as described below for the audio connection you selected on pages 21 to 23 ( **B** through **D** ). Each of these is the default setting and does not need to be adjusted when you first connect the player. Refer to page 58 for using the Setup Display.

### Audio Connection (pages 20 to 23)

**A**

- No additional settings are needed.

**B-1 C-1**

- Set “DOWNMIX” to “DOLBY SURROUND” (page 63)
- If the sound distorts even when the volume is turned down, set “AUDIO ATT” to “ON” (page 62)

**B-2 C-2 D**

- Set “DOWNMIX” to “DOLBY SURROUND” (page 63)
- Set “DIGITAL OUT” to “ON” (page 63)

## Playing Discs

# Playing Discs


 
DVD

VCD

CD

## DATA CD

Depending on the DVD or VIDEO CD, some operations may be different or restricted. Refer to the operating instructions supplied with your disc.

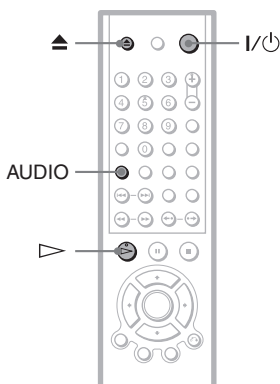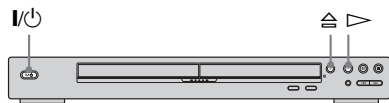

**1** Turn on your TV.

**2** Press I/⏻.


The player turns on.

**3** Switch the input selector on your TV so that the signal from the player appears on the TV screen.

◆ **When using an amplifier (receiver)**

Turn on the amplifier (receiver) and select the appropriate channel so that you can hear sound from the player.

**4** Press ◀ on the player, and place a disc on the disc tray.

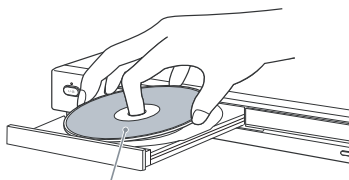

With the playback side facing down

**5** Press ▶.

The disc tray closes, and the player starts playback (continuous play). Adjust the volume on the TV or the amplifier (receiver).

Depending on the disc, a menu may appear on the TV screen. For DVDs, see page 29. For VIDEO CDs, see page 29.

## To turn off the player

Press I/⏻. The player enters standby mode.

## Hint

You can have the player turn off automatically whenever you leave it in stop mode for more than 30 minutes. To turn on this function, set "AUTO POWER OFF" in "CUSTOM SETUP" to "ON" (page 61).

## Notes on playing DTS sound tracks on a CD

- When playing DTS-encoded CDs, excessive noise will be heard from the analog stereo jacks. To avoid possible damage to the audio system, the consumer should take proper precautions when the analog stereo jacks of the player are connected to an amplification system. To enjoy DTS Digital Surround™ playback, an external 5.1-channel decoder system must be connected to the digital jack of the player.
- Set the sound to "STEREO" using the AUDIO button when you play DTS sound tracks on a CD (page 45).
- Do not play DTS sound tracks without first connecting the player to an audio component having a built-in DTS decoder. The player outputs the DTS signal via the DIGITAL OUT (COAXIAL or OPTICAL) jack even if "DTS" in "AUDIO SETUP" is set to "OFF" in the Setup Display (page 63), and may affect your ears or cause your speakers to be damaged.

## Notes on playing DTS sound tracks on a DVD

- DTS audio signals are output only through the DIGITAL OUT (COAXIAL or OPTICAL) jack.
- When you play a DVD with DTS sound tracks, set “DTS” to “ON” in “AUDIO SETUP” (page 63).
- If you connect the player to audio equipment without a DTS decoder, do not set “DTS” to “ON” in “AUDIO SETUP” (page 63). A loud noise may come out from the speakers, affecting your ears or causing the speakers to be damaged.

\* For DVD VIDEOS and the DVD-RWs/DVD-Rs only

\*\*For DVD VIDEOS and the DVD-RWs/DVD-Rs or DVD+RWs only


### Hints

- The Instant Replay function is useful when you want to review a scene or dialog that you missed.
- The Instant Search function is useful when you want to pass over a scene that you don't want to watch.

### Note

You may not be able to use the Instant Replay or Instant Search function with some scenes.


## Additional operations

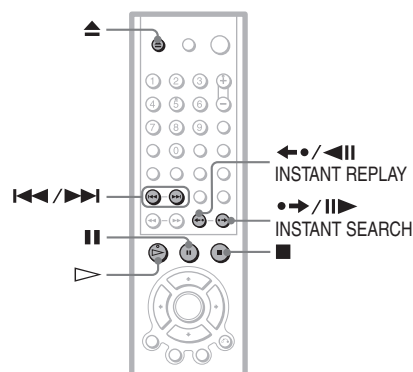


To	Operation
Stop	Press ■
Pause	Press
Resume play after pause	Press    or ▷
Go to the next chapter, track, or scene in continuous play mode	Press ►►
Go back to the previous chapter, track, or scene in continuous play mode	Press ◀◀
Stop play and remove the disc	Press ▲
Replay the previous scene*	Press ◀◀/◀◀ INSTANT REPLAY during playback
Briefly fast forward the current scene**	Press ►►/►► INSTANT SEARCH during playback

## Locking the disc tray (Child Lock)

You can lock the disc tray to prevent children from opening it.

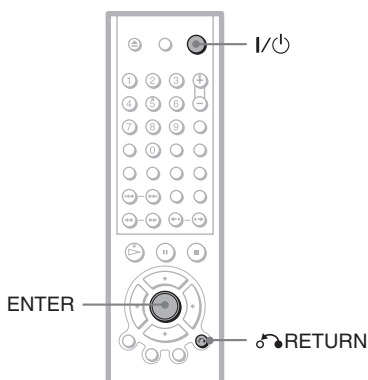


**When the player is in standby mode, press  RETURN, ENTER, and then I/⏻ on the remote.**

The player turns on and “LOCKED” appears on the front panel display.

The ▲ button on the player or the remote does not work while the Child Lock is set.
 
### To unlock the disc tray

When the player is in standby mode, press  RETURN, ENTER, and then I/⏻ again.


### Note

Even if you select “RESET” under “SETUP” in the Control Menu (page 59), the disc tray remains locked.

# Resuming Playback from the Point Where You Stopped the Disc (Multi-disc

Resume) **DVD** **VCD**

The player stores the point where you stopped the disc for up to 6 discs and resumes playback the next time you insert the same disc. When you store a resume playback point for the seventh disc, the resume playback point for the first disc is deleted.

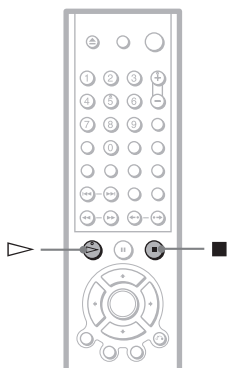

## 1 While playing a disc, press ■ to stop playback.

“RESUME” appears on the front panel display.

## 2 Press ▷.

The player starts playback from the point where you stopped the disc in Step 1.

### Notes


- “MULTI-DISC RESUME” in “CUSTOM SETUP” must be set to “ON” (default) for this function to work (page 62).
- The resume playback point for the current disc is cleared when:
  - you change the play mode.
  - you change the settings on the Setup Display.
- This function may not work with some discs.
- Resume Play does not work during Shuffle Play and Program Play.
- If “MULTI-DISC RESUME” in “CUSTOM SETUP” is set to “ON” and you playback a recorded disc such as DVD-RW, the player may playback other recorded discs from the same resume point. To play from the beginning, press ■ twice and then press ▷.

### ⚙ Hints

- To play from the beginning of the disc, press ■ twice, then press ▷.
- For CDs and DATA CDs, the player remembers the resume playback point for the current disc unless the disc tray is opened, the power cord is disconnected, or only for DATA CDs, the player enters standby mode.

## Using the DVD's Menu DVD

A DVD is divided into long sections of a picture or a music feature called "titles." When you play a DVD which contains several titles, you can select the title you want using the TOP MENU button. When you play DVDs that allow you to select items such as the language for the subtitles and the language for the sound, select these items using the MENU button.

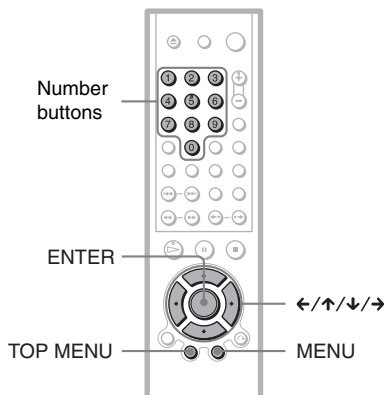

### 1 Press TOP MENU or MENU.

 
The disc's menu appears on the TV screen.

The contents of the menu vary from disc to disc.

### 2 Press $\leftarrow/\uparrow/\downarrow/\rightarrow$ or the number buttons to select the item you want to play or change.

If you press the number buttons, the following display appears.

Press the number buttons to select the item you want.

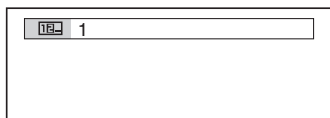


### 3 Press ENTER.

## Playing VIDEO CDs with PBC Functions (PBC Playback) VCD

**VCD**

PBC (Playback Control) allows you to play VIDEO CDs interactively by following the menu on the TV screen.

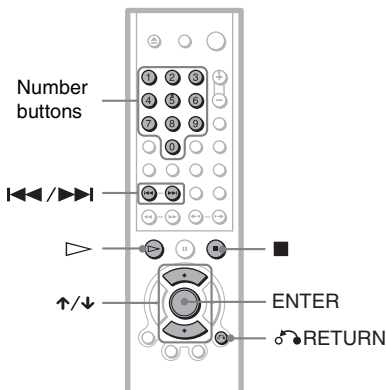

### 1 Start playing a VIDEO CD with PBC functions.

The menu for your selection appears.

### 2 Select the item number you want by pressing $\uparrow/\downarrow$ or the number buttons.

### 3 Press ENTER.

### 4 Follow the instructions in the menu for interactive operations.

Refer to the instructions supplied with the disc, as the operating procedure may differ depending on the VIDEO CD.

**To return to the menu**

Press  $\hookrightarrow$  RETURN.

### Hint

To play without using PBC, press **⏮/⏭** or the number buttons while the player is stopped to select a track, then press **▷** or ENTER.

“Play without PBC” appears on the TV screen and the player starts continuous play. You cannot play still pictures such as a menu.


To return to PBC playback, press **■** twice then press **▷**.

### Notes

- Depending on the VIDEO CD, “Press ENTER” in Step 3 may appear as “Press SELECT” in the instructions supplied with the disc. In this case, press **▷**.
- The PBC functions of Super VCDs do not work with this player. Super VCDs are played in continuous play mode only.

## Playing an MP3 Audio Track **DATA CD**

You can play back DATA CDs (CD-ROMs/CD-Rs/CD-RWs) recorded in MP3 (MPEG1 Audio Layer 3) format.

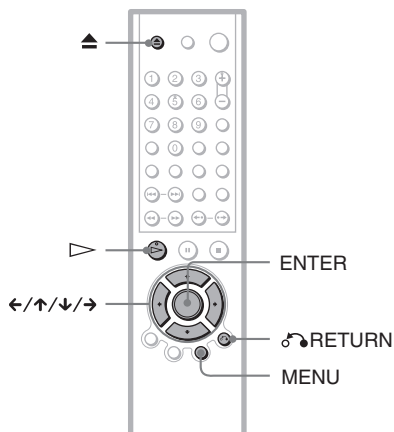

**1** Press **⏏** and place a DATA CD on the disc tray.

**2** Press **▷**.

The disc tray closes, and the player starts to play the first MP3 audio track in the first album on the disc.


### Notes

- The player can play MP3 audio tracks recorded in the following sampling frequencies: 32 kHz, 44.1 kHz, 48 kHz.
- The playback order may be different from the edited order. See “The Playback order of MP3 audio tracks” on the next page for details.

## Selecting an album and track


**1** Press **MENU**.

The list of MP3 albums recorded on the DATA CD appears.

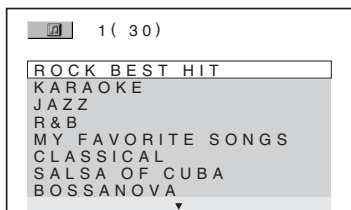

## 2 Select an album using ↑/↓ and press ENTER.

The list of tracks contained in the album appears.

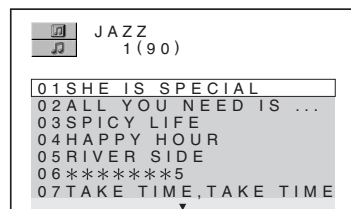

## 3 Select a track using ↑/↓ and press ENTER.

The selected track starts playing.  
When a track or album is being played, its title is shaded.

### To go to the next or previous page

Press → or ←.

### To return to the previous display

Press ⏮ RETURN.

### To turn off the display

Press MENU.

### Notes

- Only the letters in the alphabet and numbers can be used for album or track names. Anything else is displayed as “\*”.
- ID3 tags cannot be displayed.

## About MP3 audio tracks

You can play MP3 audio tracks on CD-ROMs or CD-Rs/CD-RWs. However, the discs must be recorded according to ISO9660 level 1, level 2, or Joliet format for the player to recognize the tracks.

You can also play discs recorded in Multi Session.

See the instructions of the CD-R/CD-RW device or recording software (not supplied) for details on the recording format.

### To play a Multi Session CD

This player can play Multi Session CDs when an MP3 audio track is located in the first session. Any subsequent MP3 audio tracks, recorded in the later sessions, can also be played back.

When audio tracks and images in music CD format or video CD format are recorded in the first session, only the first session will be played back.

### Notes


- If you put the extension “.MP3” to data not in MP3 format, the player cannot recognize the data properly and will generate a loud noise which could damage your speaker system.
- The player cannot play audio tracks in MP3PRO format.


### The Playback order of MP3 audio tracks

The playback order of albums and tracks recorded on a DATA CD is as follows.

#### ◆Structure of disc contents

Tree 1   Tree 2   Tree 3   Tree 4   Tree 5

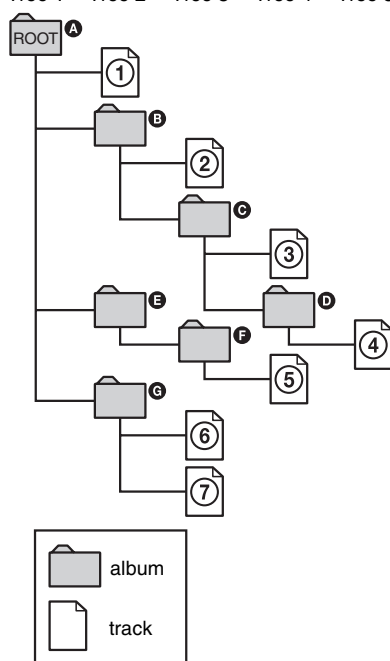

When you insert a DATA CD and press , the numbered tracks are played sequentially, from ① through ⑦. Any sub-albums/tracks contained within a currently selected album take priority over the next album in the same tree. (Example: **C** contains **D** so ④ is played before ⑤.)

When you press MENU and the list of MP3 albums appears (page 30), the albums are arranged in the following order: **A** → **B** → **C** → **D** → **F** → **G**. Albums that do not contain tracks (such as album **E**) do not appear in the list.

### Hints

- If you add numbers (01, 02, 03, etc.) to the front of the track file names, the tracks will be played in that order.
- Since a disc with many trees takes longer to start playback, it is recommended that you create albums of no more than two trees.

### Notes

- Depending on the software you use to create the DATA CD, the playback order may differ from the illustration above.
- The playback order above may not be applicable if there are more than a total of 200 albums and tracks in the DATA CD.
- The player can recognize up to 100 albums (the player will count just albums, including albums that do not contain MP3 audio tracks). The player will not play any albums beyond the first 100 albums. Of the first 100 albums, the player will play no more than a combined total of 200 albums and tracks.

 
## Various Play Mode Functions (Program Play, Shuffle Play, Repeat Play, A-B Repeat Play)

You can set the following play modes:

- Program Play (page 32)
- Shuffle Play (page 34)
- Repeat Play (page 35)
- A-B Repeat Play (page 35)


### Note

The play mode is canceled when:

- you open the disc tray.
- the player enters standby mode by pressing .



## Creating your own program (Program Play) **DVD** **VCD** **CD**

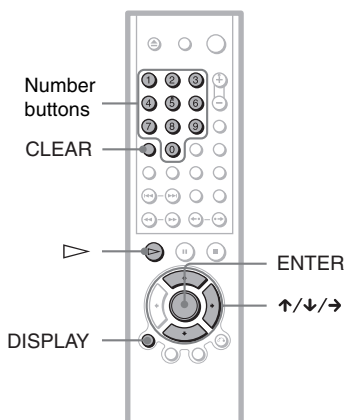You can play the contents of a disc in the order you want by arranging the order of the titles, chapters, or tracks on the disc to create your own program. You can program up to 99 titles, chapters, and tracks.




**1** Press **DISPLAY** twice (when playing a CD, press once).

The Control Menu appears.

**2** Press  to select  (PROGRAM), then press **ENTER**.


The options for “PROGRAM” appear.



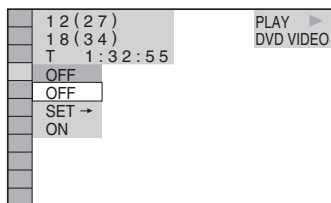

### 3 Press $\uparrow/\downarrow$ to select “SET →,” then press ENTER.


“TRACK” is displayed when you play a VIDEO CD or CD.

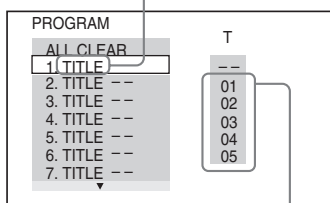

Titles or tracks recorded on a disc

### 4 Press →.

The cursor moves to the title or track row “T” (in this case, “01”).

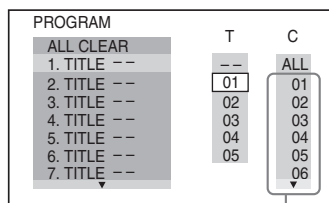


Chapters recorded on a disc

### 5 Select the title, chapter, or track you want to program.


#### ◆ When playing a DVD

For example, select chapter “03” of title “02.”

Press  $\uparrow/\downarrow$  or the number buttons to select “02” under “T,” then press ENTER.

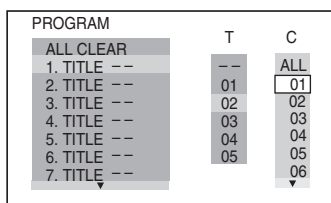

Next, press  $\uparrow/\downarrow$  or the number buttons to select “03” under “C,” then press ENTER.

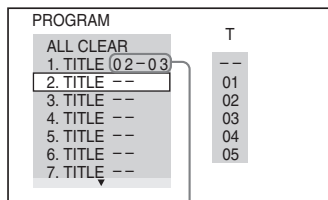


Selected title and chapter

#### ◆ When playing a VIDEO CD or CD

For example, select track “02.”

Press  $\uparrow/\downarrow$  or the number buttons to select “02” under “T,” then press ENTER.

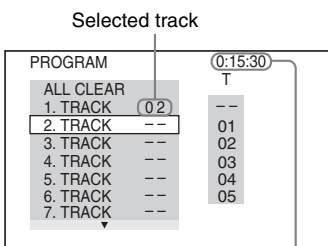

Selected track

Total time of the programmed tracks

### 6 To program other titles, chapters, or tracks, repeat Steps 4 to 5.

The programmed titles, chapters, and tracks are displayed in the selected order.

### 7 Press $\triangleright$ to start Program Play.

Program Play begins.

When the program ends, you can restart the same program again by pressing  $\triangleright$ .

#### To return to normal play

Press CLEAR, or select “OFF” in Step 3. To play the same program again, select “ON” in Step 3 and press ENTER.

#### To turn off the display

Press DISPLAY repeatedly until the display is turned off.

#### To change or cancel a program

- 1 Follow Steps 1 through 3 of “Creating your own program (Program Play).”
- 2 Select the program number of the title, chapter, or track you want to change or

cancel using  $\uparrow/\downarrow$  or the number buttons, and press  $\rightarrow$ .

- 3 Follow Step 5 for new programming. To cancel a program, select "--" under "T," then press ENTER.

### To cancel all the titles, chapters, or tracks in the programmed order

- 1 Follow Steps 1 through 3 of "Creating your own program (Program Play)."
- 2 Press  $\uparrow$  and select "ALL CLEAR."
- 3 Press ENTER.

#### Hint


You can do Repeat Play or Shuffle Play of the programmed titles, chapters, or tracks. During Program Play, follow the Steps of "Repeat Play" (page 35) or "Shuffle Play" (page 34).


#### Notes

- When playing Super VCDs, the total time of the programmed tracks does not appear on the screen.
- You cannot use this function with VIDEO CDs with PBC playback.


## Playing in random order (Shuffle Play) **DVD VCD CD**

You can have the player "shuffle" titles, chapters, or tracks. Subsequent "shuffling" may produce a different playing order.

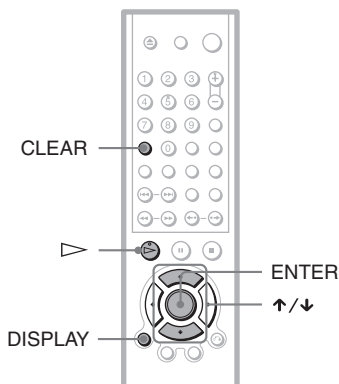

- 1 Press DISPLAY twice during playback (when playing a CD, press once). The Control Menu appears.
- 2 Press  $\uparrow/\downarrow$  to select  (SHUFFLE), then press ENTER.

The options for "SHUFFLE" appear.

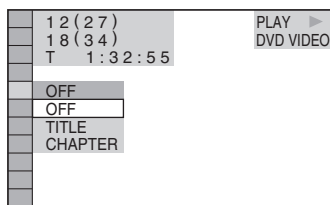

- 3 Press  $\uparrow/\downarrow$  to select the item to be shuffled.

#### ◆ When playing a DVD

- TITLE
- CHAPTER

#### ◆ When playing a VIDEO CD or CD

- TRACK

#### ◆ When Program Play is activated

- ON: shuffles titles, chapters, or tracks selected in Program Play.

- 4 Press ENTER.

Shuffle Play starts.

### To return to normal play

Press CLEAR, or select "OFF" in Step 3.

### To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.

#### Hints

- You can set Shuffle Play while the player is stopped. After selecting the "SHUFFLE" option, press  $\rightarrow$ . Shuffle Play starts.
- Up to 200 chapters in a disc can be played in random order when "CHAPTER" is selected.

#### Note


You cannot use this function with VIDEO CDs with PBC playback.

## Playing repeatedly (Repeat Play)

**DVD VCD CD DATA CD**


You can play all of the titles or tracks on a disc or a single title, chapter, or track repeatedly.

You can use a combination of Shuffle or Program Play modes.

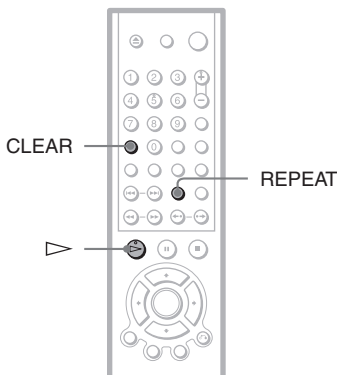

### 1 Press REPEAT during playback.

 The following display appears.

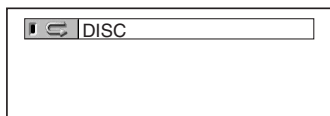

### 2 Press REPEAT repeatedly to select the item to be repeated.

#### ◆ When playing a DVD

- DISC: repeats all of the titles.
- TITLE: repeats the current title on a disc.
- CHAPTER: repeats the current chapter.

#### ◆ When playing a VIDEO CD or CD

- DISC: repeats all of the tracks.
- TRACK: repeats the current track.

#### ◆ When playing a DATA CD (MP3 audio)

- DISC: repeats all of the albums.
- ALBUM: repeats the current album.
- TRACK: repeats the current track.

#### ◆ When Program Play or Shuffle Play is activated

- ON: repeats Program Play or Shuffle Play.

## To return to normal play

Press CLEAR, or select "OFF" in Step 2.

### ⚡ Hints


- You can set Repeat Play while the player is stopped. After selecting the "REPEAT" option, press . Repeat Play starts.
- You can also select "REPEAT" from the Control Menu (page 12).

### Note

You cannot use this function with VIDEO CDs with PBC playback.

## Repeating a specific portion (A-B Repeat Play) **DVD VCD CD**

You can play a specific portion of a title, chapter or track repeatedly. (This function is useful when you want to memorize lyrics, etc.)

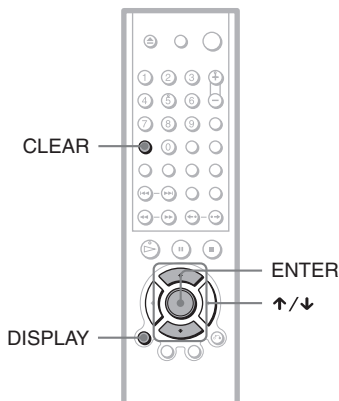


### 1 Press DISPLAY twice during playback (when playing a CD, press once).

The Control Menu appears.


### 2 Press to select (A-B REPEAT), then press ENTER.

The options for "A-B REPEAT" appear.

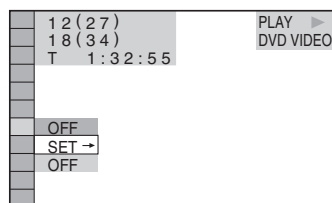


### 3 Press $\uparrow/\downarrow$ to select “SET $\rightarrow$ ,” then press ENTER.

The “A-B REPEAT” setting display appears.

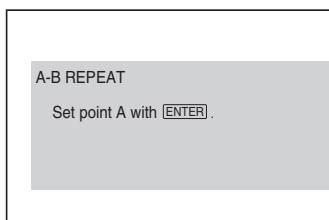


### 4 During playback, when you find the starting point (point A) of the portion to be played repeatedly, press ENTER.

The starting point (point A) is set.

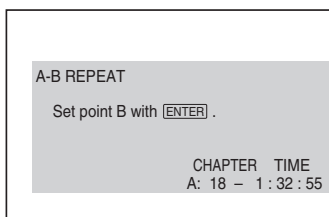

### 5 When you reach the ending point (point B), press ENTER again.

The set points are displayed and the player starts repeating this specific portion.

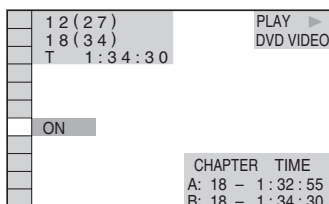

### To return to normal play

Press CLEAR, or select “OFF” in Step 3.

### To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.


### Note

When you set A-B Repeat Play, the settings for Shuffle Play, Repeat Play, and Program Play are canceled.

## Searching for a Scene

### Searching for a Particular Point on a Disc (Search, Scan, Slow-motion Play, Freeze Frame)

You can quickly locate a particular point on a disc by monitoring the picture or playing back slowly.

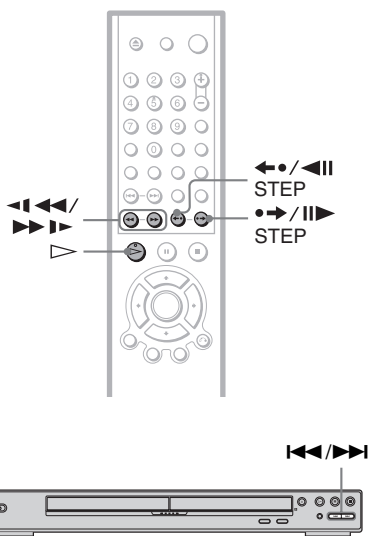

#### Note

Depending on the DVD/VIDEO CD, you may not be able to do some of the operations described.

### Locating a point quickly using the PREV (previous)/NEXT (next) buttons (Search) DVD VCD CD

#### DATA CD

You can search for a particular point on a disc using **◀◀/▶▶** on the player. During playback, press and hold **▶▶** to locate a point in the playback direction or press and hold **◀◀** to locate a point in the opposite direction. When you find the point

you want, release the button to return to normal playback speed.

### Locating a point quickly by playing a disc in fast forward or fast reverse (Scan) DVD VCD CD

#### DATA CD

Press **◀◀** or **▶▶** while playing a disc. When you find the point you want, press **▷** to return to normal speed. Each time you press **◀◀** or **▶▶** during scan, the playback speed changes. With each press the indication changes as shown below. Actual speeds may differ with some discs.

#### Playback direction



#### Opposite direction



The “ $\times 2 \rightarrow \rightarrow \rightarrow$ ”/“ $\times 2 \leftarrow \leftarrow \leftarrow$ ” playback speed is about twice the normal speed.

 
The “ $\text{FF3} \rightarrow \rightarrow \rightarrow$ ”/“ $\text{FR3} \leftarrow \leftarrow \leftarrow$ ” playback speed is faster than “ $\text{FF2} \rightarrow \rightarrow \rightarrow$ ”/“ $\text{FR2} \leftarrow \leftarrow \leftarrow$ ” and the “ $\text{FF2} \rightarrow \rightarrow \rightarrow$ ”/“ $\text{FR2} \leftarrow \leftarrow \leftarrow$ ” playback speed is faster than “ $\text{FF1} \rightarrow \rightarrow \rightarrow$ ”/“ $\text{FR1} \leftarrow \leftarrow \leftarrow$ ”.

### Watching frame by frame (Slow-motion play) DVD VCD


Press **◀◀** or **▶▶** when the player is in pause mode. To return to the normal speed, press **▷**.

Each time you press **◀◀** or **▶▶** during Slow-motion play, the playback speed changes. Two speeds are available. With each press the indication changes as follows:

#### Playback direction

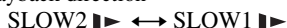

#### Opposite direction (DVD only)

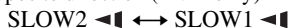 


The “SLOW2 ►►”/“SLOW2 ◀◀” playback speed is slower than “SLOW1 ►►”/“SLOW1 ◀◀.”

## Playing one frame at a time (Freeze Frame) **DVD VCD**

When the player is in the pause mode, press  
•►/II► STEP to go to the next frame. Press  
◀◀/◀II STEP to go to the preceding frame  
(DVD only). If you hold the button down, you  
can view the frames in succession. To return  
to normal playback, press ▷.

## Searching for a Title/ Chapter/Track/Scene, etc. **DVD VCD CD DATA CD**

You can search a DVD by title or chapter, and  
you can search a VIDEO CD/CD/DATA CD  
by track, index, or scene. As titles and tracks  
are assigned unique numbers on the disc, you  
can select the desired one by entering its  
number. Or, you can search for a scene using  
the time code.

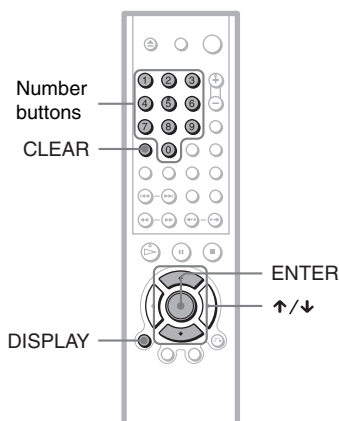



### 1 Press **DISPLAY**.

The Control Menu appears.



### 2 Press **↑/↓** to select the search method.

#### ◆ When playing a DVD

-  TITLE
-  CHAPTER
-  TIME/TEXT

Select “TIME/TEXT” to search for a starting  
point by inputting the time code.

#### ◆ When playing a VIDEO CD without PBC Playback

-  TRACK
-  INDEX

### ◆ When playing a VIDEO CD with PBC Playback

 SCENE

 INDEX

### ◆ When playing a CD


 TRACK

 INDEX

### ◆ When playing a DATA CD (MP3 audio)


 ALBUM

 TRACK

Example: when you select  CHAPTER


“\*\* (\*\*)” is selected (\*\* refers to a number).

The number in parentheses indicates the total number of titles, chapters, tracks, indexes or scenes.

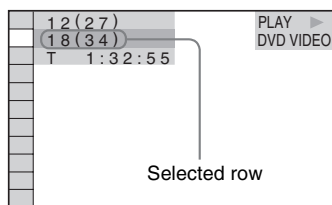

## 3 Press ENTER.

“\*\* (\*\*)” changes to “-- (\*).”

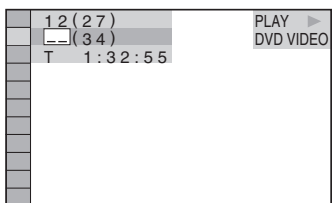

## 4 Press ↑/↓ or the number buttons to select the title, chapter, track, index, or scene number you want to search.

### If you make a mistake

Cancel the number by pressing CLEAR, then select another number.


## 5 Press ENTER.

The player starts playback from the selected number.

### To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.

### To search for a scene using the time code (DVD only)

- 1 In Step 2, select  TIME/TEXT. “T \*\*: \*\*: : \*\*” (playing time of the current title) is selected.
- 2 Press ENTER. “T \*\*: \*\*: : \*\*” changes to “T --: -: : --.”
- 3 Input the time code using the number buttons, then press ENTER. For example, to find the scene at 2 hours, 10 minutes, and 20 seconds after the beginning, just enter “2:10:20.”

### 💡 Hints

- When the Control Menu display is turned off, you can search for a chapter (DVD) or track (CD) by pressing the number buttons and ENTER.
- You can display the first scene of titles, chapters, or tracks recorded on the disc on a screen divided into 9 sections. You can start playback directly by selecting one of the scenes. For details, see “Searching by Scene (PICTURE NAVIGATION)” on the next page.


### Notes

- The title, chapter, or track number displayed is the same number recorded on the disc.
- You cannot search for a scene on a DVD+RW using the time code.

# Searching by Scene


(PICTURE NAVIGATION) **DVD** **VCD**

You can divide the screen into 9 subscreens and find the desired scene quickly.

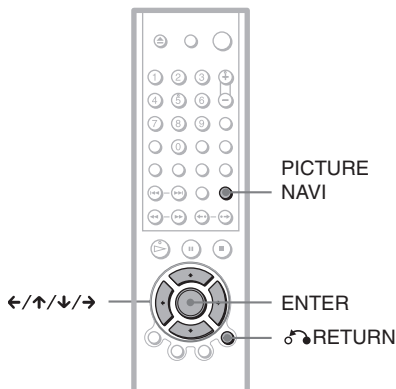

## 1 Press PICTURE NAVI during playback.

 The following display appears.

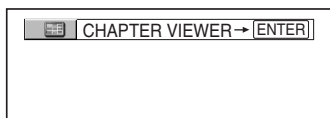

## 2 Press PICTURE NAVI repeatedly to select the item.

Refer to the explanations given for each item in the following sections.

- CHAPTER VIEWER (for DVD VIDEO only)
- TITLE VIEWER (for DVD VIDEO only)
- TRACK VIEWER (for VIDEO CD only)

## 3 Press ENTER.

**To return to normal play**

Press **RETURN**.

### Hint

You can also select "PICTURE NAVIGATION" from the Control Menu (page 12).

### **Notes**

- Depending on the disc, you may not be able to select all functions.
- The sound is muted when using this function.

## Scanning the title, chapter, or track (TITLE VIEWER, CHAPTER VIEWER, TRACK VIEWER) **DVD** **VCD**

You can divide the screen into 9 subscreens and display the first scene of titles, chapters, or tracks.

You can also play back from the selected title, chapter, or track. After performing Step 3 of "Searching by Scene (PICTURE NAVIGATION)" above, select the scene using **←/↑/↓/→** and press **ENTER**.

### Hint

If there are more than 9 titles, chapters, or tracks, ▼ is displayed at the bottom right.

To display the additional titles, chapters, or tracks, select the bottom right scene (the position 9) and press **↓**. To return to the previous scene, select the top left scene (the position 1) and press **↑**.


1	2	3	
4	5	6	
7	8	9	



## Viewing Information About the Disc


# Checking the Playing Time and Remaining Time DVD VCD CD DATA CD

You can check the playing time and remaining time of the current title, chapter, or track. Also, you can check the DVD/CD text or track name (MP3 audio) recorded on the disc.

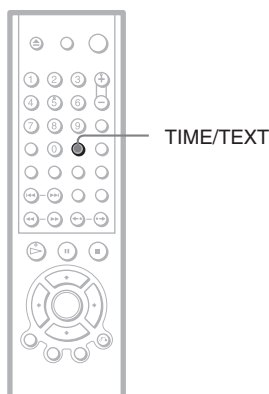

## 1 Press TIME/TEXT during playback.

 The following display appears.

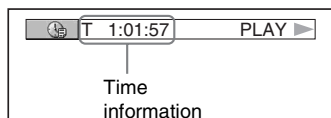

## 2 Press TIME/TEXT repeatedly to change the time information.

The display and the kinds of time that you can change depend on the disc you are playing.

### ◆ When playing a DVD

- T \*:\*: (hours: minutes: seconds)  
Playing time of the current title
- T- \*:\*:  
Remaining time of the current title
- C \*:\*:  
Playing time of the current chapter
- C- \*:\*:  
Remaining time of the current chapter

### ◆ When playing a VIDEO CD (with PBC functions)

- \*:\*: (minutes: seconds)  
Playing time of the current scene

### ◆ When playing a VIDEO CD (without PBC functions) or CD

- T \*:\*: (minutes: seconds)  
Playing time of the current track
- T- \*:\*:  
Remaining time of the current track
- D \*:\*:  
Playing time of the current disc
- D- \*:\*:  
Remaining time of the current disc

### ◆ When playing a DATA CD (MP3 audio)

- \*:\*: (minutes: seconds)  
Playing time of the current track


### ◆ When playing a Super VCD

- T \*:\*: (minutes: seconds)  
Playing time of the current track

## To check the DVD/CD text or track and album names (MP3 audio)

Press TIME/TEXT repeatedly in Step 2 to display text recorded on the DVD/CD/DATA CD.

The DVD/CD text appears only when text is recorded in the disc. You cannot change the text. If the disc does not contain text, "NO TEXT" appears.

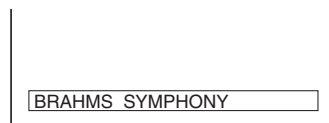

For DATA CDs, the track and album names of the MP3 audio track appears (page 44).

## Checking the information on the front panel display

You can view the time information and text displayed on the TV screen also on the front panel display. The information on the front panel display changes as follows when you change the time information on your TV screen.

### When playing a DVD

Playing time of the current title

T 10324



Remaining time of the current title

T- 11536



Playing time of the current chapter

C 02230



Remaining time of the current chapter

C-01320



Text

SONY HI



Current title and chapter number

T 16 8

(returns to top automatically)

### When playing a DATA CD (MP3 audio)

Playing time and number of the current track

6 225



Track name

01HAPPY

### When playing a VIDEO CD (without PBC functions) or CD

Playing time and number of the current track

3 225



Remaining time of the current track

3 - 150



Playing time of the disc

32:12



Remaining time of the disc

-20:18



Text

SONY HI



Current track and index number

3 1

(returns to top automatically)

#### Hints


- When playing VIDEO CDs with PBC functions, the scene number and the playing time are displayed.
- Long text that does not fit in a single line will scroll across the front panel display.
- You can also check the time information and text using the Control Menu (page 12).

#### Notes

- Depending on the type of disc being played, the DVD/CD text or track name may not be displayed.
- The player can only display the first level of the DVD/CD text, such as the disc name or title.
- Playing time of MP3 audio tracks may not be displayed correctly.


# Checking the Play Information

You can check information such as the bit rate or the disc layer that is being played.

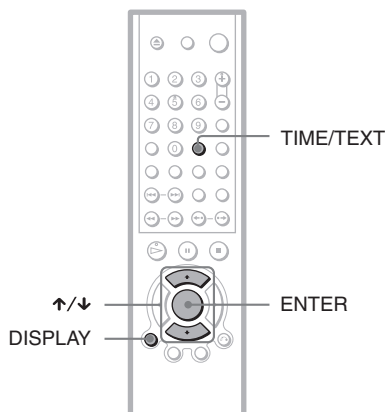

## Checking the play information of a DVD (ADVANCED) DVD

- 1 Press DISPLAY during playback.**  
The Control Menu is displayed.
- 2 Press ↑/↓ to select [BIT RATE] (ADVANCED), then press ENTER.**  
The options for “ADVANCED” appear.

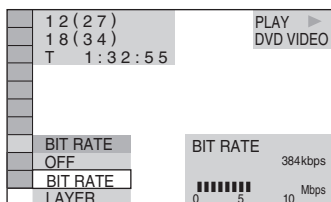

- 3 Press ↑/↓ to select items.**  
For each item, please refer to “Displays of each item.”
  - BIT RATE: displays the bit rate.
  - LAYER: displays the layer and the pick-up point.
- 4 Press ENTER.**

## To close the ADVANCED window

Select “OFF” in Step 3.

 
## To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.

## Displays of each item


By pressing DISPLAY repeatedly, you can display either “BIT RATE” or “LAYER,” whichever was selected in “ADVANCED.”

### ◆BIT RATE

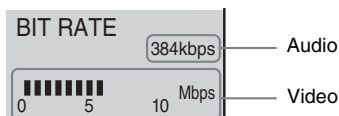

Bit rate refers to the amount of video/audio data per second in a disc. While playing a disc, an approximate bit rate of the playback picture is displayed as Mbps (Mega bit per second) and the audio as kbps (kilo bit per second). The higher the bit rate, the larger the amount of data. However, this does not always mean that you can get higher quality pictures or sounds.


### ◆LAYER

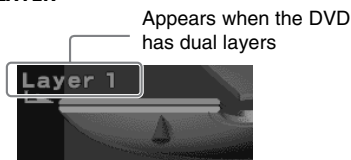

Indicates the approximate point where the disc is playing.  
If it is a dual-layer DVD, the player indicates which layer is being read (“Layer 0” or “Layer 1”).  
For details on the layers, see page 67 (DVD VIDEO).

# Checking the play information of a DATA CD

By pressing TIME/TEXT while playing MP3 audio tracks on a DATA CD, you can display the audio bit rate (the amount of data per second of the current audio).

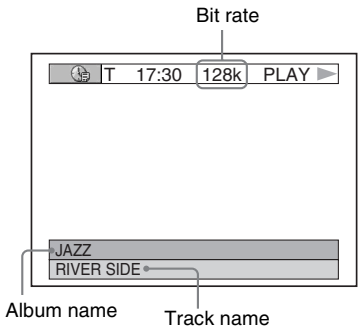


## Sound Adjustments

### Changing the Sound

**DVD VCD CD DATA CD**


When playing a DVD recorded in multiple audio formats (PCM, Dolby Digital, or DTS), you can change the audio format. If the DVD is recorded with multilingual tracks, you can also change the language.

With CDs, DATA CDs, or VIDEO CDs, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers. For example, when playing a disc containing a song with the vocals on the right channel and the instruments on the left channel, you can hear the instruments from both speakers by selecting the left channel.

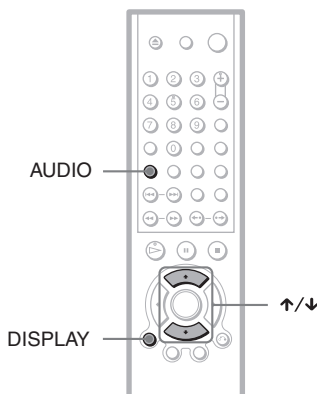

#### 1 Press AUDIO during playback.

 The following display appears.

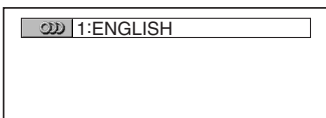

#### 2 Press AUDIO repeatedly to select the desired audio signal.

##### ◆ When playing a DVD

Depending on the DVD, the choice of language varies.

When 4 digits are displayed, they indicate a language code. Refer to “Language Code List” on page 70 to see which language the code represents. When the same language is displayed two or more times, the DVD is recorded in multiple audio formats.

##### ◆ When playing a VIDEO CD, CD, or DATA CD (MP3 audio)

The default setting is underlined.

- STEREO: The standard stereo sound
- 1/L: The sound of the left channel (monaural)
- 2/R: The sound of the right channel (monaural)

##### ◆ When playing a Super VCD

The default setting is underlined.

- 1:STEREO: The stereo sound of the audio track 1
- 1:1/L: The sound of the left channel of the audio track 1 (monaural)
- 1:2/R: The sound of the right channel of the audio track 1 (monaural)
- 2:STEREO: The stereo sound of the audio track 2
- 2:1/L: The sound of the left channel of the audio track 2 (monaural)
- 2:2/R: The sound of the right channel of the audio track 2 (monaural)

##### 💡 Hint

You can also select “AUDIO” from the Control Menu (page 12).


##### Note

While playing a Super VCD on which the audio track 2 is not recorded, no sound will come out when you select “2:STEREO,” “2:1/L,” or “2:2/R.”

### Displaying the audio information of the disc **DVD**

Press DISPLAY during playback to display the Control Menu. Select “AUDIO” using **↑/↓**. The channels being played are displayed on the screen.

For example, in Dolby Digital format, multiple signals ranging from monaural to 5.1 channel signals can be recorded on a DVD. Depending on the DVD, the number of the recorded channels may differ.

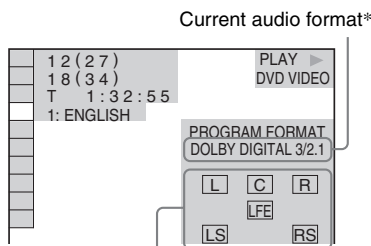


Currently playing program format\*\*

\*“PCM,” “DTS,” or “DOLBY DIGITAL” is displayed.

In the case of “DOLBY DIGITAL,” the channels in the playing track are displayed by numbers as follows:

For Dolby Digital 5.1 ch:

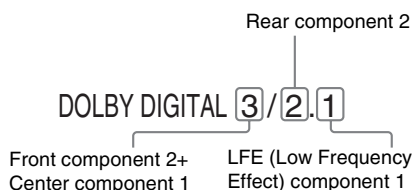

\*\*The letters in the program format display mean the following sound component:

- L: Front (left)
- R: Front (right)
- C: Center
- LS: Rear (left)
- RS: Rear (right)
- S: Rear (monaural): The rear component of the Dolby Surround processed signal and the Dolby Digital signal
- LFE: Low Frequency Effect signal

#### Hint

For Dolby Digital and DTS, “LFE” is always enclosed in a solid line regardless of the LFE signal component being output.


#### **Note**

If “DTS” is set to “OFF” in “AUDIO SETUP” (page 63) the DTS track selection option will not appear on the screen even if the disc contains DTS tracks.

## TV Virtual Surround Settings (TVS)


When you connect a stereo TV or 2 front speakers, TVS (TV Virtual Surround) lets you enjoy surround sound effects by using sound imaging to create virtual rear speakers from the sound of the front speakers (L: left, R: right) without using actual rear speakers. TVS was developed by Sony to produce surround sound for home use using just a stereo TV.

If the player is set up to output the signal from the DIGITAL OUT (OPTICAL or COAXIAL) jack, the surround effect will only be heard when “DOLBY DIGITAL” is set to “D-PCM” in “AUDIO SETUP” (page 63).

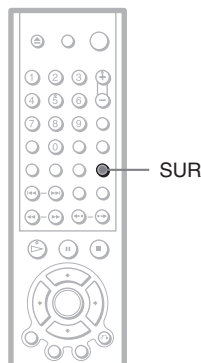

### 1 Press SUR during playback.

 The following display appears.

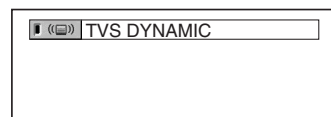

### 2 Press SUR repeatedly to select one of the TVS sounds.

Refer to the following explanations given for each item.

- TVS DYNAMIC
- TVS WIDE
- TVS NIGHT
- TVS STANDARD


## To cancel the setting

Select “OFF” in Step 2.

### ◆TVS DYNAMIC

Creates virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers (shown below).


This mode is effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.

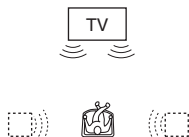

### ◆TVS WIDE

Creates virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The virtual speakers are reproduced as shown in the illustration below.

This mode is effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.

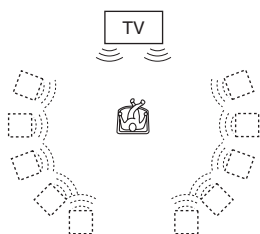


### ◆TVS NIGHT

Large sounds, such as explosions, are suppressed, but the quieter sounds are unaffected. This feature is useful when you want to hear the dialog and enjoy the surround sound effects of “TVS WIDE” at low volume.

### ◆TVS STANDARD

Creates virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The virtual speakers are reproduced as shown in the illustration below. Use this setting when you want to use TVS with 2 separate speakers.

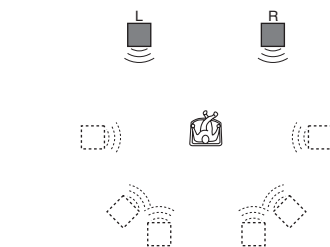

L: Front speaker (left)  
R: Front speaker (right)  
□: Virtual speaker


### 💡 Hints

 
- You can select “TVS” by pressing the SURROUND button on the player.
- You can also select “TVS” from the Control Menu (page 12).

### Notes

- When the playing signal does not contain a signal for the rear speakers, the surround effects cannot be heard.
- When you select one of the TVS modes, turn off the surround setting of the connected TV or amplifier (receiver).
- Make sure that your listening position is between and at an equal distance from your speakers, and that the speakers are located in similar surroundings.
- Not all discs will respond to the “TVS NIGHT” function in the same way.


## Changing the Angles DVD

If various angles (multi-angles) for a scene are recorded on the DVD, “” appears in the front panel display. This means that you can change the viewing angle.

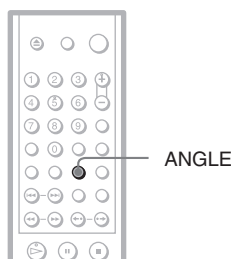

### 1 Press ANGLE during playback.

 The number of the angle appears on the display.

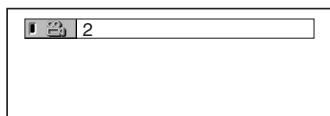

### 2 Press ANGLE repeatedly to select the angle number.

The scene changes to the selected angle.

#### Hint

You can also select “ANGLE” from the Control Menu (page 12).


#### Note

Depending on the DVD, you may not be able to change the angles even if multi-angles are recorded on the DVD.

## Displaying the Subtitles


### DVD

If subtitles are recorded on the discs, you can change the subtitles or turn them on and off whenever you want while playing a DVD.

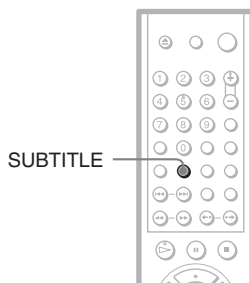

### 1 Press SUBTITLE during playback.

 The following display appears.

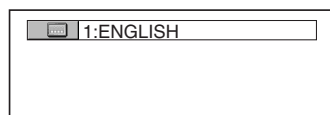

### 2 Press SUBTITLE repeatedly to select the setting.

#### When playing a DVD

Select the language.

Depending on the DVD, the choice of language varies.

When 4 digits are displayed, they indicate a language code. Refer to “Language Code List” on page 70 to see which language the code represents.

#### To turn off the subtitles

Select “OFF” in Step 2.

#### Hint

You can also select “SUBTITLE” from the Control Menu (page 12).


#### Note

Depending on the DVD, you may not be able to change the subtitles even if multilingual subtitles are recorded on it. You also may not be able to turn them off.



## Adjusting the Picture Quality (BNR) **DVD VCD**

The Block Noise Reduction (BNR) function adjusts the picture quality by reducing the “block noise” or mosaic like patterns that appear on your TV screen.

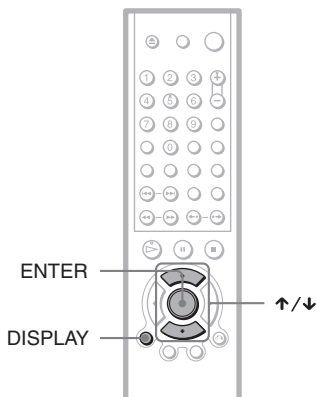


### 1 Press DISPLAY twice during playback.

The Control Menu appears.

### 2 Press $\uparrow/\downarrow$ to select **BNR** (BNR), then press ENTER.

The options for “BNR” appear.

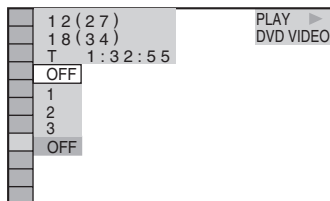

### 3 Press $\uparrow/\downarrow$ to select a level.

- 1: reduces the “block noise.”
- 2: reduces the “block noise” more than 1.
- 3: reduces the “block noise” more than 2.

### 4 Press ENTER.

The disc plays with the setting you selected.

### To cancel the “BNR” setting

Select “OFF” in Step 3.

### To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.


#### Notes

- If the outlines of the images on your screen should become blurred, set “BNR” to “OFF.”
- Depending on the disc or the scene being played, there may be no “BNR” effect, or it may be hard to discern.

# Adjusting the Playback Picture (CUSTOM PICTURE MODE)


**DVD VCD**

You can adjust the video signal of the DVD or VIDEO CD from the player to obtain the picture quality you want. Choose the setting that best suits the program you are watching. When you select “MEMORY,” you can make further adjustments to each element of the picture (color, brightness, etc.).

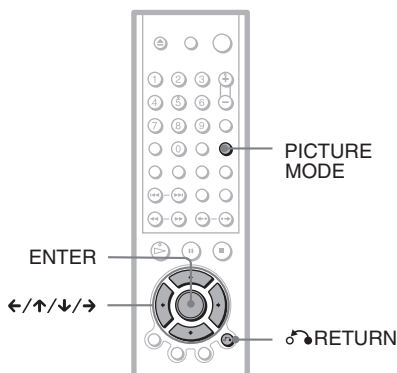

## 1 Press PICTURE MODE during playback.

 The following display appears.

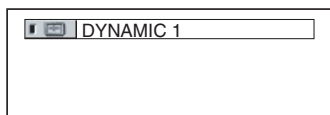

## 2 Press PICTURE MODE repeatedly to select the setting you want.

The default setting is underlined.

- **STANDARD:** displays a standard picture.
- **DYNAMIC 1:** produces a bold dynamic picture by increasing the picture contrast and the color intensity.
- **DYNAMIC 2:** produces a more dynamic picture than DYNAMIC 1 by further increasing the picture contrast and the color intensity.
- **CINEMA 1:** enhances details in dark areas by increasing the black level.

- **CINEMA 2:** White colors become brighter and black colors become richer, and the color contrast is increased.
- **MEMORY:** adjusts the picture in greater detail.

### Hints

- When you watch a movie, “CINEMA 1” or “CINEMA 2” is recommended.
- The picture can be adjusted by pressing the PICTURE MODE button on the player as well.
- You can also select “CUSTOM PICTURE MODE” from the Control Menu (page 12).

## Adjusting the picture items in “MEMORY”

You can adjust each element of the picture individually.

- **PICTURE:** changes the contrast
- **BRIGHTNESS:** changes the overall brightness
- **COLOR:** makes the colors deeper or lighter
- **HUE:** changes the color balance

### 1 Press PICTURE MODE repeatedly to select “MEMORY” then press ENTER. The “PICTURE” adjustment bar appears.




### 2 Press </> to adjust the picture contrast, then press ENTER.

The adjustment is saved, and “BRIGHTNESS” adjustment bar appears.

### 3 Repeat Step 2 to adjust “BRIGHTNESS,” “COLOR,” and “HUE.”

The Custom Picture Mode display appears. You can check each adjustment.

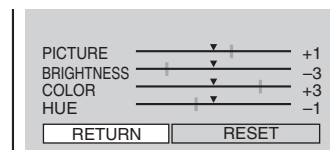

## To turn off the display

Press RETURN, or select "RETURN" in Step 3 and press ENTER.


### Hints

- To reset the picture items to the default values, press after Step 3 to select "RESET" and press ENTER.
- If you do not want to save the adjustment in Step 2, you can go to the next picture adjustment item by pressing without saving.

# Enhancing the Playback Picture (DIGITAL VIDEO

## ENHANCER)

The Digital Video Enhancer (DVE) function makes the picture appear clear and crisp by enhancing the outlines of images on your TV screen. Also, this function can soften the images on the screen.

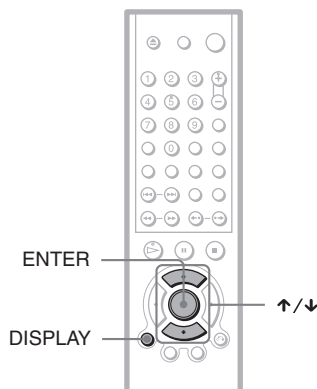


## 1 Press DISPLAY twice during playback.

The Control Menu appears.

## 2 Press to select (DIGITAL VIDEO ENHANCER), then press ENTER.

The options for "DIGITAL VIDEO ENHANCER" appear.

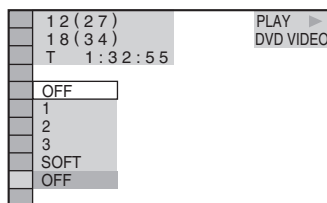

## 3 Press to select a level.

- 1: enhances the outline.
- 2: enhances the outline more than 1.
- 3: enhances the outline more than 2.
- SOFT: softens the image (DVD only).

## **4 Press ENTER.**

The disc plays with the setting you selected.

---

### **To cancel the “DIGITAL VIDEO ENHANCER” setting**

Select “OFF” in Step 3.

### **To turn off the Control Menu**

Press DISPLAY repeatedly until the Control Menu is turned off.

#### **Note**

Depending on the disc or the scene being played, noise found in the disc may become more apparent. If this happens, it is recommended that you use the BNR function (page 49) with the DVE function. If the condition still does not improve, reduce the Digital Video Enhancer level, or select “SOFT” (DVD only) in Step 3 above.

## Using Various Additional Functions

### Locking Discs (CUSTOM PARENTAL CONTROL, PARENTAL CONTROL)

You can set two kinds of playback restrictions for the desired disc.

- Custom Parental Control

You can set playback restrictions so that the player will not play inappropriate discs.

- Parental Control


Playback of some DVDs can be limited according to a predetermined level such as the age of the users. Scenes may be blocked or replaced with different scenes.

The same password is used for both Parental Control and Custom Parental Control.

### Custom Parental Control

**DVD VCD CD**

You can set the same Custom Parental Control password for up to 40 discs. When you set the 41st-disc, the first disc is canceled.

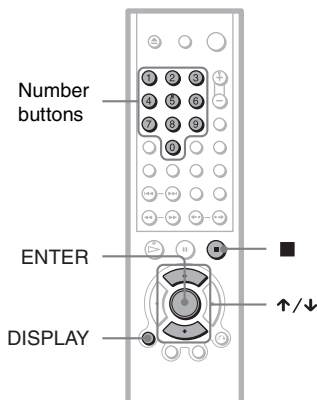

#### 1 Insert the disc you want to lock.


If the disc is playing, press to stop playback.

#### 2 Press DISPLAY while the player is in stop mode.

The Control Menu appears.

#### 3 Press to select (PARENTAL CONTROL), then press ENTER.


The options for “PARENTAL CONTROL” appear.

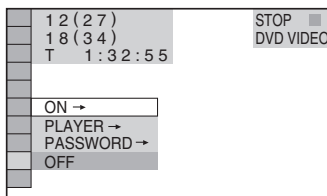

#### 4 Press to select “ON ->,” then press ENTER.

##### ◆ If you have not entered a password


The display for registering a new password appears.

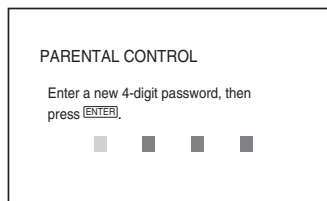

Enter a 4-digit password using the number buttons, then press ENTER. The display for confirming the password appears.

##### ◆ When you have already registered a password

The display for entering the password appears.

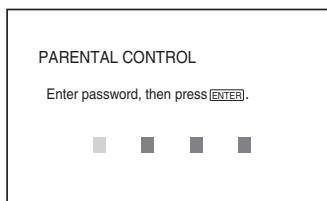

#### 5 Enter or re-enter your 4-digit password using the number buttons, then press ENTER.


“Custom parental control is set.” appears and then the screen returns to the Control Menu.

## To turn off the Custom Parental Control function

- 1 Follow Steps 1 through 3 of “Custom Parental Control.”
- 2 Press **↑/↓** to select “OFF →,” then press **ENTER**.
- 3 Enter your 4-digit password using the number buttons, then press **ENTER**.

## To play a disc for which Custom Parental Control is set

- 1 Insert the disc for which Custom Parental Control is set.  
The “CUSTOM PARENTAL CONTROL” display appears.

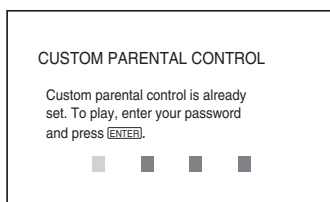

- 2 Enter your 4-digit password using the number buttons, then press **ENTER**.  
The player is ready for playback.

### Hint


If you forget your password, enter the 6-digit number “199703” using the number buttons when the “CUSTOM PARENTAL CONTROL” display asks you for your password, then press **ENTER**. The display will ask you to enter a new 4-digit password.

### Note

Once you set Custom Parental Control with a recorded disc such as a DVD-RW, the display for entering the password may appear again when you insert a different recorded disc. Input the password to play the disc.

## Parental Control (limited playback)

Playback of some DVDs can be limited according to a predetermined level such as the age of the users. The “PARENTAL CONTROL” function allows you to set a playback limitation level.

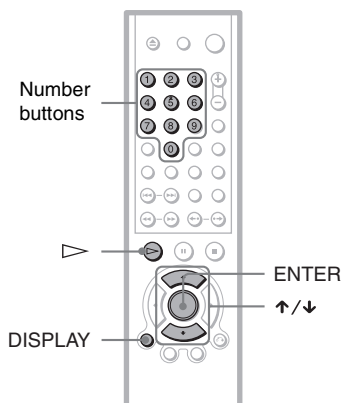


- 1 Press **DISPLAY** while the player is in stop mode.

The Control Menu appears.

- 2 Press **↑/↓** to select (PARENTAL CONTROL), then press **ENTER**.


The options for “PARENTAL CONTROL” appear.

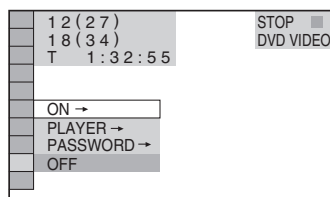

- 3 Press **↑/↓** to select “PLAYER →,” then press **ENTER**.

### ◆ If you have not entered a password



The display for registering a new password appears.

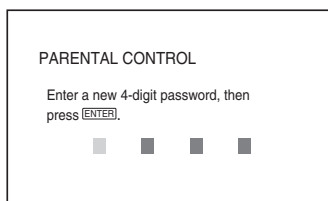

Enter a 4-digit password using the number buttons, then press **ENTER**. The display for confirming the password appears.


◆ **When you have already registered a password**

The display for entering the password appears.

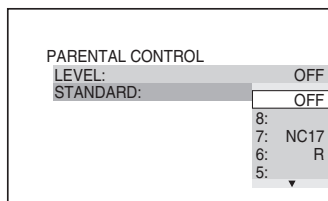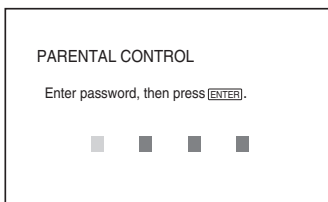

**8 Select the level you want using  $\uparrow/\downarrow$ , then press ENTER.**


Parental Control setting is complete.

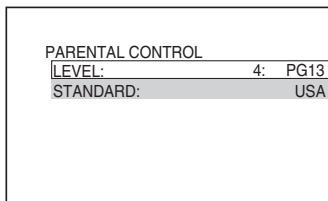

The lower the value, the stricter the limitation.


**4 Enter or re-enter your 4-digit password using the number buttons, then press ENTER.**

The display for setting the playback limitation level appears.

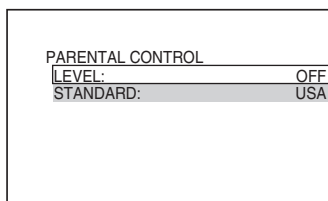

**5 Press  $\uparrow/\downarrow$  to select "STANDARD," then press ENTER.**

The selection items for "STANDARD" are displayed.

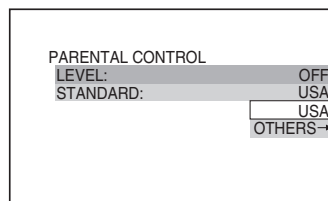

**6 Press  $\uparrow/\downarrow$  to select a geographic area as the playback limitation level, then press ENTER.**

The area is selected.

When you select "OTHERS  $\rightarrow$ ," select and enter a standard code in the table on page 56 using the number buttons.

**7 Press  $\uparrow/\downarrow$  to select "LEVEL," then press ENTER.**

The selection items for "LEVEL" are displayed.

**To turn off the Parental Control function**

Set "LEVEL" to "OFF" in Step 8.

**To play a disc for which Parental Control is set**

- 1 Insert the disc and press  $\triangleright$ .  
The display for entering your password appears.
- 2 Enter your 4-digit password using the number buttons, then press ENTER.  
The player starts playback.

**Hint**

If you forget your password, remove the disc and repeat Steps 1 to 3 of "Parental Control (limited playback)." When you are asked to enter your password, enter "199703" using the number buttons, then press ENTER. The display will ask you to enter a new 4-digit password. After you enter a new 4-digit password, replace the disc in the player and press  $\triangleright$ . When the display for entering your password appears, enter your new password.

**Notes**


- When you play discs which do not have the Parental Control function, playback cannot be limited on this player.

- Depending on the disc, you may be asked to change the parental control level while playing the disc. In this case, enter your password, then change the level. If the Resume Play mode is canceled, the level returns to the previous level.

## Area Code

Standard	Code number
Argentina	2044
Australia	2047
Austria	2046
Belgium	2057
Brazil	2070
Canada	2079
Chile	2090
China	2092
Denmark	2115
Finland	2165
France	2174
Germany	2109
India	2248
Indonesia	2238
Italy	2254
Japan	2276
Korea	2304
Malaysia	2363
Mexico	2362
Netherlands	2376
New Zealand	2390
Norway	2379
Pakistan	2427
Philippines	2424
Portugal	2436
Russia	2489
Singapore	2501
Spain	2149
Sweden	2499
Switzerland	2086
Thailand	2528
United Kingdom	2184

## Changing the password

- 1 Press DISPLAY while the player is in stop mode.**  
The Control Menu appears.
- 2 Press ↑/↓ to select  (PARENTAL CONTROL), then press ENTER.**  
The options for “PARENTAL CONTROL” appear.
- 3 Press ↑/↓ to select “PASSWORD →,” then press ENTER.**  
The display for entering the password appears.
- 4 Enter your 4-digit password using the number buttons, then press ENTER.**
- 5 Enter a new 4-digit password using the number buttons, then press ENTER.**
- 6 To confirm your password, re-enter it using the number buttons, then press ENTER.**

### If you make a mistake entering your password

Press ← before you press ENTER and input the correct number.

### If you make a mistake

Press ⏮ RETURN.


### To turn off the display

Press DISPLAY repeatedly until the display is turned off.



# Controlling Your TV with the Supplied Remote

You can control the sound level, input source, and power switch of your Sony TV with the supplied remote.

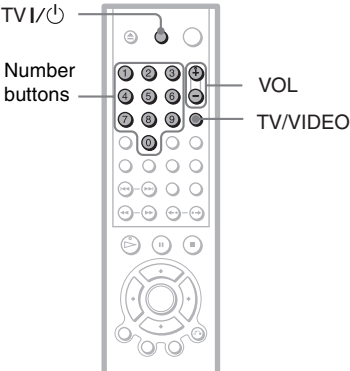

You can control your TV using the buttons below.

By pressing	You can
TV I/⏻	Turn the TV on or off
VOL +/-	Adjust the volume of the TV
TV/VIDEO	Switch the TV's input source between the TV and other input sources.

## Notes

Depending on the unit being connected, you may not be able to control your TV using some of the buttons.

# Controlling other TVs with the remote

You can control the sound level, input source, and power switch of non-Sony TVs as well. If your TV is listed in the table below, set the appropriate manufacturer's code.

- 1 While holding down TV I/⏻, press the number buttons to select your TV's manufacturer's code (see the table below).
- 2 Release TV I/⏻.

## Code numbers of controllable TVs

Manufacturer	Code number
Sony (default)	01
JVC	09
Panasonic	19
Philips	21
RCA	10
Samsung	20
Sanyo	11
Sharp	18
Toshiba	07
Zenith	15

## Notes

- If you enter a new code number, the code number previously entered will be erased.
- When you replace the batteries of the remote, the code number you have set may be reset to the default setting. Set the appropriate code number again.


## Settings and Adjustments

### Using the Setup Display

By using the Setup Display, you can make various adjustments to items such as picture and sound. You can also set a language for the subtitles and the Setup Display, among other things. For details on each Setup Display item, see pages from 59 to 63.


#### Note

Playback settings stored in the disc take priority over the Setup Display settings and not all the functions described may work.

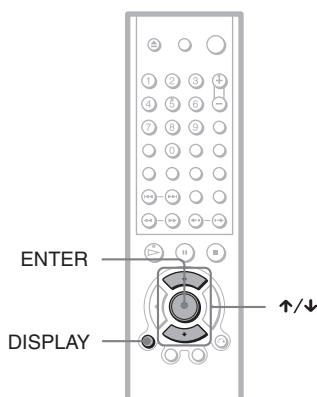


- 1 Press **DISPLAY** when the player is in stop mode.

The Control Menu appears.


- 2 Press **↕** to select  (**SETUP**), then press **ENTER**.

The options for “SETUP” appear.

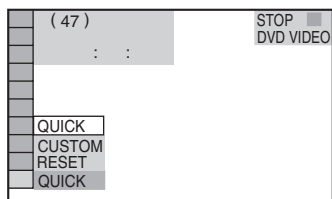

- 3 Press **↕** to select “CUSTOM,” then press **ENTER**.

The Setup Display appears.

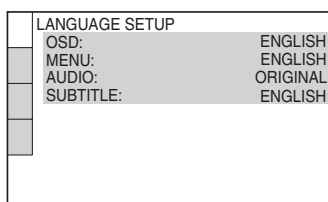


- 4 Press **↕** to select the setup item from the displayed list: “LANGUAGE SETUP,” “SCREEN SETUP,” “CUSTOM SETUP,” or “AUDIO SETUP.” Then press **ENTER**.

The Setup item is selected.

Example: “SCREEN SETUP”


Selected item

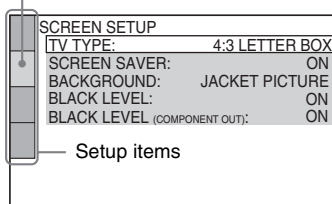

- 5 Select an item using **↕**, then press **ENTER**.

The options for the selected item appear.


Example: “TV TYPE”

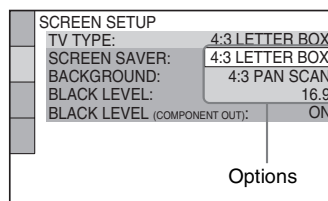

## 6 Select a setting using ↑/↓, then press ENTER.

The setting is selected and setup is complete.

Example: “16:9”

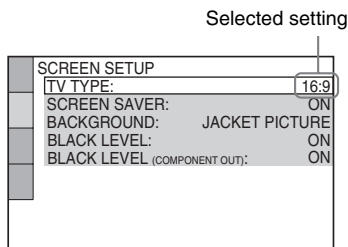

### To turn off the display

Press DISPLAY repeatedly until the display is turned off.

### To enter the Quick Setup mode

Select “QUICK” in Step 3. Follow from Step 5 of the Quick Setup explanation to make basic adjustments (page 24).

### To reset all of the “SETUP” settings


- 1 Select “RESET” in Step 3 and press ENTER.
- 2 Select “YES” using ↑/↓.  
You can also quit the process and return to the Control Menu by selecting “NO” here.
- 3 Press ENTER.  
All the settings explained on pages 59 to 63 return to the default settings. Do not press I/⏻ while resetting the player as it takes a few seconds to complete.

## Setting the Display or Sound Track Language

### (LANGUAGE SETUP)

“LANGUAGE SETUP” allows you to set various languages for the on-screen display or sound track.

Select “LANGUAGE SETUP” in the Setup Display. To use the display, see “Using the Setup Display” (page 58).

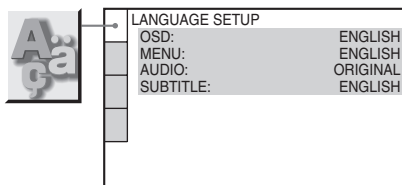

#### ◆ OSD (On-Screen Display)

Switches the display language on the screen.

#### ◆ MENU (DVD only)

You can select the desired language for the disc’s menu.

#### ◆ AUDIO (DVD only)

Switches the language of the sound track. When you select “ORIGINAL,” the language given priority in the disc is selected.

#### ◆ SUBTITLE (DVD only)

Switches the language of the subtitle recorded on the DVD.

When you select “AUDIO FOLLOW,” the language for the subtitles changes according to the language you selected for the sound track.

#### 🔔 Hint

If you select “OTHERS →” in “MENU,” “SUBTITLE,” and “AUDIO,” select and enter a language code from “Language Code List” on page 70 using the number buttons.

#### Note

When you select a language in “MENU,” “SUBTITLE,” or “AUDIO” that is not recorded on the DVD, one of the recorded languages will be automatically selected.


# Settings for the Display

## (SCREEN SETUP)

Choose settings according to the TV to be connected.

Select "SCREEN SETUP" in the Setup Display. To use the display, see "Using the Setup Display" (page 58).

The default settings are underlined.

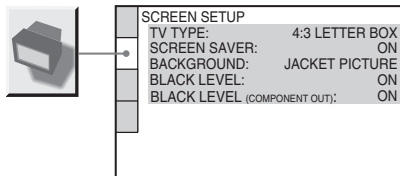

### ◆ TV TYPE

 
Selects the aspect ratio of the connected TV (4:3 standard or wide).

<u>4:3 LETTER BOX</u>	Select this when you connect a 4:3 screen TV. Displays a wide picture with bands on the upper and lower portions of the screen.
4:3 PAN SCAN	Select this when you connect a 4:3 screen TV. Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit.
16:9	Select this when you connect a wide-screen TV or a TV with a wide mode function.


4:3 LETTER BOX



4:3 PAN SCAN

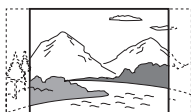

16:9

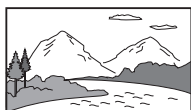 

## Note

Depending on the DVD, "4:3 LETTER BOX" may be selected automatically instead of "4:3 PAN SCAN" or vice versa.

### ◆ SCREEN SAVER

The screen saver image appears when you leave the player in pause or stop mode for 15 minutes, or when you play back a CD or DATA CD (MP3 audio) for more than 15 minutes. The screen saver will help prevent your display device from becoming damaged (ghosting). Press  $\triangleright$  to turn off the screen saver.

<u>ON</u>	Turns on the screen saver.
OFF	Turns off the screen saver.

### ◆ BACKGROUND

Selects the background color or picture on the TV screen in stop mode or while playing a CD or DATA CD (MP3 audio).

<u>JACKET PICTURE</u>	The jacket picture (still picture) appears, but only when the jacket picture is already recorded on the disc (CD-EXTRA, etc.). If the disc does not contain a jacket picture, the "GRAPHICS" picture appears.
GRAPHICS	A preset picture stored in the player appears.
BLUE	The background color is blue.
BLACK	The background color is black.

### ◆ BLACK LEVEL

Selects the black level (setup level) for the video signals output from the jacks other than COMPONENT VIDEO OUT.

<u>ON</u>	Sets the black level of the output signal to the standard level.
OFF	Lowens the standard black level. Use this when the picture becomes too white.

### ◆ BLACK LEVEL (COMPONENT OUT)

Selects the black level (setup level) for the video signals output from the COMPONENT VIDEO OUT jacks. You cannot select this when the player outputs progressive signal and the PROGRESSIVE indicator lights up in blue on the front panel.


<u>ON</u>	Sets the black level of the output signal to the standard level.
OFF	Lowers the standard black level. Use this when the picture becomes too white.

## Custom Settings (CUSTOM SETUP)

Use this to set up playback related and other settings.

Select “CUSTOM SETUP” in the Setup Display. To use the display, see “Using the Setup Display” (page 58).

The default settings are underlined.



CUSTOM SETUP	
AUTO POWER OFF:	<u>OFF</u>
AUTO PLAY:	<u>OFF</u>
DIMMER:	<u>BRIGHT</u>
PAUSE MODE:	<u>AUTO</u>
TRACK SELECTION:	<u>OFF</u>
MULTI-DISC RESUME:	<u>ON</u>

### ◆ AUTO POWER OFF

Switches the Auto Power Off setting on or off.

<u>OFF</u>	Switches this function off.
ON	The player enters standby mode when left in stop mode for more than 30 minutes.

### ◆ AUTO PLAY

Switches the Auto Play setting on or off. This function is useful when the player is connected to a timer (not supplied).

<u>OFF</u>	Switches this function off.
ON	Automatically starts playback when the player is turned on.

### ◆ DIMMER

Adjusts the lighting of the front panel display.

<u>BRIGHT</u>	Makes the lighting bright.
DARK	Makes the lighting dark.

### ◆ PAUSE MODE (DVD only)

Selects the picture in pause mode.

<u>AUTO</u>	The picture, including subjects that move dynamically, is output with no jitter. Normally select this position.
FRAME	The picture, including subjects that do not move dynamically, is output in high resolution.

### ◆ TRACK SELECTION (DVD only)

Gives the sound track which contains the highest number of channels priority when you play a DVD on which multiple audio formats (PCM, DTS, or Dolby Digital format) are recorded.

<u>OFF</u>	No priority given.
AUTO	Priority given.

### Notes

- When you set the item to “AUTO,” the language may change. The “TRACK SELECTION” setting has higher priority than the “AUDIO” settings in “LANGUAGE SETUP” (page 59).
- If you set “DTS” to “OFF” (page 63), the DTS sound track is not played even if you set “TRACK SELECTION” to “AUTO.”
- If PCM, DTS, and Dolby Digital sound tracks have the same number of channels, the player selects PCM, DTS, and Dolby Digital sound tracks in this order.

### ◆ MULTI-DISC RESUME (DVD/VIDEO CD only)


Switches the Multi-disc Resume setting on or off. Resume playback point can be stored in memory for up to 6 different DVD/VIDEO CD discs (page 28).

<u>ON</u>	Stores the resume settings in memory for up to six discs (The settings remain in memory even if you select OFF.)
OFF	Does not store the resume settings in memory. Playback restarts at the resume point only for the current disc in the player.

## Settings for the Sound (AUDIO SETUP)

“AUDIO SETUP” allows you to set the sound according to the playback and connection conditions.

Select “AUDIO SETUP” in the Setup Display. To use the display, see “Using the Setup Display” (page 58).  
The default settings are underlined.

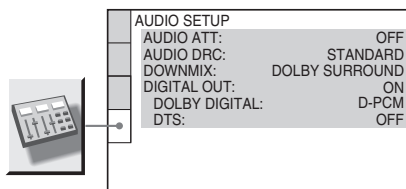

### ◆ AUDIO ATT (attenuation)

If the playback sound is distorted, set this item to “ON.” The player reduces the audio output level.

This function affects the output of the LINE OUT L/R (AUDIO) jacks.

<u>OFF</u>	Normally, select this position.
ON	Select this when the playback sound from the speakers is distorted.

### ◆ AUDIO DRC (Dynamic Range Control) (DVD only)

Makes the sound clear when the volume is turned down when playing a DVD that conforms to “AUDIO DRC.” This affects the output from the following jacks:

- LINE OUT L/R (AUDIO) jacks
- DIGITAL OUT (OPTICAL or COAXIAL) jack only when “DOLBY DIGITAL” is set to “D-PCM” (page 63).

<u>STANDARD</u>	Normally select this position.
TV MODE	Makes the low sounds clear even if you turn the volume down.
WIDE RANGE	Gives you the feeling of being at a live performance.

### ◆ DOWNMIX (DVD only)

Switches the method for mixing down to 2 channels when you play a DVD which has rear sound elements (channels) or is recorded in Dolby Digital format. For details on the rear signal components, see “Displaying the audio information of the disc” (page 45). This function affects the output of the following jacks:

- LINE OUT L/R (AUDIO) jacks
- DIGITAL OUT (OPTICAL or COAXIAL) jack when “DOLBY DIGITAL” is set to “D-PCM” (page 63).

<b>DOLBY SURROUND</b>	Normally, select this position. Multi-channel audio signals are output to two channels for enjoying surround sounds
<b>NORMAL</b>	Multi-channel audio signals are downmixed to two channels for use with your stereo.

### ◆ DIGITAL OUT

Selects if audio signals are output via the DIGITAL OUT (OPTICAL or COAXIAL) jack.

<b>ON</b>	Normally select this position. When you select “ON,” see “Setting the digital output signal” for further settings.
<b>OFF</b>	The influence of the digital circuit upon the analog circuit is minimal.

## Setting the digital output signal

Switches the method of outputting audio signals when you connect a component such as an amplifier (receiver) or MD deck with a digital input jack.

For connection details, see page 19.

Select “DOLBY DIGITAL” and “DTS” after setting “DIGITAL OUT” to “ON.”

AUDIO SETUP	
AUDIO ATT:	OFF
AUDIO DRC:	STANDARD
DOWNMIX:	DOLBY SURROUND
DIGITAL OUT:	ON
DOLBY DIGITAL:	D-PCM
DTS:	OFF

noise (or no sound) will come out from the speakers, damaging your ears or speakers.

### ◆ DOLBY DIGITAL (DVD only)

Selects the type of Dolby Digital signal.

<b>D-PCM</b>	Select this when the player is connected to an audio component without a built-in Dolby Digital decoder. You can select whether the signals conform to Dolby Surround (Pro Logic) or not by making adjustments to the “DOWNMIX” item in “AUDIO SETUP” (page 63).
<b>DOLBY DIGITAL</b>	Select this when the player is connected to an audio component with a built-in Dolby Digital decoder.

### ◆ DTS (DVD only)

Selects whether or not to output DTS signals.

<b>OFF</b>	Select this when the player is connected to an audio component without a built-in DTS decoder.
<b>ON</b>	Select this when the player is connected to an audio component with a built-in DTS decoder.

If you connect a component that does not conform to the selected audio signal, a loud

## Additional Information

# Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer (for customers in the USA only).

## Power

### The power is not turned on.

- ➔ Check that the AC power cord is connected securely.

## Picture

### There is no picture/picture noise appears.

- ➔ Re-connect the connecting cord securely.
- ➔ The connecting cords are damaged.
- ➔ Check the connection to your TV (page 16) and switch the input selector on your TV so that the signal from the player appears on the TV screen.
- ➔ The disc is dirty or flawed.
- ➔ If the picture output from your player goes through your VCR to get to your TV or if you are connected to a combination TV/VIDEO player, the copy-protection signal applied to some DVD programs could affect picture quality. If you still experience problems even when you connect your player directly to your TV, please try connecting your player to your TV's S VIDEO input (page 16).
- ➔ You have set the player to progressive format (the PROGRESSIVE indicator lights up in blue) even though your TV cannot accept the progressive signal. In this case, press the PROGRESSIVE button on the front panel until the progressive indicator turns off.
- ➔ Even if your TV is compatible with progressive format (480p) signals, the image may be affected when you set the player to progressive format. In this case, press the PROGRESSIVE button so that the PROGRESSIVE indicator turns off and the player is set to normal (interlace) format.

**Even though you set the aspect ratio in "TV TYPE" of "SCREEN SETUP," the picture does not fill the screen.**

- ➔ The aspect ratio of the disc is fixed on your DVD.

## Sound

### There is no sound.

- ➔ Re-connect the connecting cord securely.
- ➔ The connecting cord is damaged.
- ➔ The player is connected to the wrong input jack on the amplifier (receiver) (page 21, 22, 23).
- ➔ The amplifier (receiver) input is not correctly set.
- ➔ The player is in pause mode or in Slow-motion Play mode.
- ➔ The player is in fast forward or fast reverse mode.
- ➔ If the audio signal does not come through the DIGITAL OUT (OPTICAL or COAXIAL) jack, check the audio settings (page 63).
- ➔ While playing a Super VCD on which the audio track 2 is not recorded, no sound will come out when you select "2:STEREO," "2:1/L," or "2:2/R."

### Sound is noisy.

- ➔ When playing a CD with DTS sound tracks, noise will come from the LINE OUT L/R (AUDIO) jacks or DIGITAL OUT (OPTICAL or COAXIAL) jack (page 26).

### Sound distortion occurs.

- ➔ Set "AUDIO ATT" in "AUDIO SETUP" to "ON" (page 62).

### The sound volume is low.

- ➔ The sound volume is low on some DVDs. The sound volume may improve if you set "AUDIO DRC" to "TV MODE" (page 62).
- ➔ Set "AUDIO ATT" in "AUDIO SETUP" to "OFF" (page 62).

## Operation

### The remote does not function.

- ➔ There are obstacles between the remote and the player.
- ➔ The distance between the remote and the player is too far.



- ➔ The remote is not pointed at the remote sensor on the player.
- ➔ The batteries in the remote are weak.

---

### **The disc does not play.**

- ➔ The disc is turned over.  
Insert the disc with the playback side facing down on the disc tray.
- ➔ The disc is skewed.
- ➔ The player cannot play certain discs (page 6).
- ➔ The region code on the DVD does not match the player.
- ➔ Moisture has condensed inside the player (page 3).
- ➔ The player cannot play a recorded disc that is not correctly finalized (page 6).

---

### **The MP3 audio track cannot be played (page 31).**

- ➔ The DATA CD is not recorded in the MP3 format that conforms to ISO9660 Level 1/ Level 2 or Joliet.
- ➔ The MP3 audio track does not have the extension “.MP3.”
- ➔ The data is not formatted in MP3 even though it has the extension “.MP3.”
- ➔ The data is not MPEG1 Audio Layer 3 data.
- ➔ The player cannot play audio tracks in MP3PRO format.

---

### **The title of the MP3 audio album or track is not correctly displayed.**

- ➔ The player can only display numbers and alphabet. Other characters are displayed as “?”.

---

### **The disc does not start playing from the beginning.**

- ➔ Program Play, Shuffle Play, Repeat Play, or A-B Repeat Play has been selected (page 32).
- ➔ Resume play has taken effect (page 28).

---

### **The player starts playing the disc automatically.**

- ➔ The disc features an auto playback function.
- ➔ “AUTO PLAY” in “CUSTOM SETUP” is set to “ON” (page 61).

---

### **Playback stops automatically.**

- ➔ While playing discs with an auto pause signal, the player stops playback at the auto pause signal.

---

### **You cannot perform some functions such as Stop, Search, Slow-motion Play, Repeat Play, Shuffle Play, or Program Play.**

- ➔ Depending on the disc, you may not be able to do some of the operations above. See the operating manual that comes with the disc.

---

### **The language for the sound track cannot be changed.**

- ➔ Try using the DVD’s menu instead of the direct selection button on the remote (page 29).
- ➔ Multilingual tracks are not recorded on the DVD being played.
- ➔ The DVD prohibits the changing of the language for the sound track.

 
---

### **The subtitle language cannot be changed or turned off.**

- ➔ Try using the DVD’s menu instead of the direct selection button on the remote (page 29).
- ➔ Multilingual subtitles are not recorded on the DVD being played.
- ➔ The DVD prohibits the changing of the subtitles.

---

### **The angles cannot be changed.**

- ➔ Try using the DVD’s menu instead of the direct selection button on the remote (page 29).
- ➔ Multi-angles are not recorded on the DVD being played.
- ➔ The angle can only be changed when the “” indicator lights up on the front panel display (page 9).
- ➔ The DVD prohibits changing of the angles.

---

### **The player does not operate properly.**

- ➔ When static electricity, etc., causes the player to operate abnormally, unplug the player.

---

### **5 numbers or letters are displayed on the screen and on the front panel display.**

- ➔ The self-diagnosis function was activated.  
(See the table on page 66.)

---

**The disc tray does not open and “LOCKED” appears on the front panel display.**

➔ Child Lock is set (page 27).

---

**The disc tray does not open and “TRAY LOCKED” appears on the front panel display.**

➔ Contact your Sony dealer or local authorized Sony service facility.

---

**“Data error” appears on the TV screen when playing a DATA CD.**

➔ The MP3 audio track you want to play is broken.

➔ The data is not MPEG1 Audio Layer 3 data.


---

---

## Self-diagnosis Function

**(When letters/numbers appear in the display)**

When the self-diagnosis function is activated to prevent the player from malfunctioning, a five-character service number (e.g., C 13 50) with a combination of a letter and four digits appears on the screen and the front panel display. In this case, check the following table.

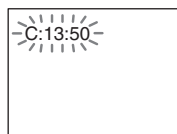

---

First three characters of the service number	Cause and/or corrective action
C 13	The disc is dirty. ➔ Clean the disc with a soft cloth (page 7).
C 31	The disc is not inserted correctly. ➔ Re-insert the disc correctly.
E XX (xx is a number)	To prevent a malfunction, the player has performed the self-diagnosis function. ➔ Contact your nearest Sony dealer or local authorized Sony service facility and give the 5-character service number. Example: E 61 10

---

---

# Glossary

## Chapter (page 9)

Sections of a picture or a music feature that are smaller than titles. A title is composed of several chapters. Depending on the disc, no chapters may be recorded.

---

## Dolby Digital (page 23, 63)

Digital audio compression technology developed by Dolby Laboratories. This technology conforms to 5.1-channel surround sound. The rear channel is stereo and there is a discrete subwoofer channel in this format. Dolby Digital provides the same 5.1 discrete channels of high quality digital audio found in Dolby Digital cinema audio systems. Good channel separation is realized because all of the channel data are recorded discretely and little deterioration is realized because all channel data processing is digital.

---

## Dolby Surround (Pro Logic) (page 22)

Audio signal processing technology that Dolby Laboratories developed for surround sound. When the input signal contains a surround component, the Pro Logic process outputs the front, center and rear signals. The rear channel is monaural.

---

## DTS (page 23, 63)

Digital audio compression technology that Digital Theater Systems, Inc. developed. This technology conforms to 5.1-channel surround sound. The rear channel is stereo and there is a discrete subwoofer channel in this format. DTS provides the same 5.1 discrete channels of high quality digital audio. Good channel separation is realized because all of the channel data is recorded discretely and little deterioration is realized because all channel data processing is digital.

---

## DVD (page 6)

A disc that contains up to 8 hours of moving pictures even though its diameter is the same as a CD.

The data capacity of a single-layer and single-sided DVD is 4.7 GB (Giga Byte), which is 7 times that of a CD. The data capacity of a double-layer and single-sided DVD is 8.5 GB, a single-layer and double-sided DVD is

9.4 GB, and double-layer and double-sided DVD is 17GB.

The picture data uses the MPEG 2 format, one of the worldwide standards of digital compression technology. The picture data is compressed to about 1/40 (average) of its original size. The DVD also uses a variable rate coding technology that changes the data to be allocated according to the status of the picture. Audio information is recorded in a multi-channel format, such as Dolby Digital, allowing you to enjoy a more real audio presence.

Furthermore, various advanced functions such as the multi-angle, multilingual, and Parental Control functions are provided with the DVD.

---

## DVD-RW (page 6)

A DVD-RW is a recordable and rewritable disc that is the same size as a DVD VIDEO. The DVD-RW has two different modes: VR mode and Video mode. DVD-RWs created in Video mode have the same format as a DVD VIDEO, while discs created in VR (Video Recording) mode allow the contents to be programmed or edited.

---

## DVD+RW (page 6)

A DVD+RW (plus RW) is a recordable and rewritable disc. DVD+RWs use a recording format that is comparable to the DVD VIDEO format.

---

## Film based software, Video based software (page 18)

DVDs can be classified as Film based or Video based software. Film based DVDs contain the same images (24 frames per second) that are shown at movie theaters. Video based DVDs, such as television dramas or sit-coms, displays images at 30 frames (or 60 fields) per second.

---

## Index (CD)/Video Index (VIDEO CD) (page 12)

A number that divides a track into sections to easily locate the point you want on a CD or VIDEO CD. Depending on the disc, no index may be recorded.

---

**Interlace format (page 18)**

Interlace format shows every other line of an image as a single “field” and is the standard method for displaying images on television. The even number field shows the even numbered lines of an image, and the odd numbered field shows the odd numbered lines of an image.

---

**Progressive format (page 18)**

Compared to the Interlace format that alternately shows every other line of an image (field) to create one frame, the Progressive format shows the entire image at once as a single frame. This means that while the Interlace format can show 30 frames/60 fields in one second, the Progressive format can show 60 frames in one second. The overall picture quality increases and still images, text, and horizontal lines appear sharper. This player is compatible with the 480 progressive format.

---

**Scene (page 9)**

On a VIDEO CD with PBC (playback control) functions, the menu screens, moving pictures and still pictures are divided into sections called “scenes.”

---

**Title (page 9)**

The longest section of a picture or music feature on a DVD, movie, etc., in video software, or the entire album in audio software.

---

**Track (page 9)**

Sections of a picture or a music feature on a CD or VIDEO CD (the length of a song).

# Specifications

## System

**Laser:** Semiconductor laser

**Signal format system:** NTSC

## Audio characteristics

**Frequency response:** DVD VIDEO (PCM 96 kHz): 2 Hz to 44 kHz ( $\pm 1.0$  dB)/DVD VIDEO (PCM 48 kHz): 2 Hz to 22 kHz ( $\pm 0.5$  dB)/CD: 2 Hz to 20 kHz ( $\pm 0.5$  dB)

**Signal-to-noise ratio (S/N ratio):** 115 dB (LINE OUT L/R (AUDIO) jacks only)

**Harmonic distortion:** 0.003 %

**Dynamic range:** DVD VIDEO: 103 dB/CD: 99 dB

**Wow and flutter:** Less than detected value ( $\pm 0.001\%$  W PEAK)

The signals from LINE OUT L/R (AUDIO) jacks are measured. When you play PCM sound tracks with a 96 kHz sampling frequency, the output signals from the DIGITAL OUT (OPTICAL or COAXIAL) jack are converted to 48 kHz sampling frequency.

## Outputs

**(Jack name:** Jack type/Output level/Load impedance)

**LINE OUT (AUDIO):** Phono jack/2 Vrms/10 kilohms

**DIGITAL OUT (OPTICAL):** Optical output jack/-18 dBm (wave length: 660 nm)

**DIGITAL OUT (COAXIAL):** Phono jack/0.5 Vp-p/75 ohms

**COMPONENT VIDEO OUT(Y, P<sub>B</sub>, P<sub>R</sub>):** Phono jack/Y: 1.0 Vp-p/P<sub>B</sub>, P<sub>R</sub>: 0.65 Vp-p/75 ohms

**LINE OUT (VIDEO):** Phono jack/1.0 Vp-p/75 ohms

**S VIDEO OUT:** 4-pin mini DIN/Y: 1.0 Vp-p, C: 0.286 Vp-p/75 ohms

## General

### Power requirements:

120 V AC, 60 Hz

110 to 240V AC, 50/60 Hz

See page 3 for further information.

### Power consumption: 13 W

### Dimensions (approx.):

430 × 55.5 × 237 mm ( $17 \times 2 \frac{3}{16} \times 9 \frac{3}{8}$  in.) (width/height/depth) incl. projecting parts

**Mass (approx.):** 2.15 kg ( $4 \frac{3}{4}$  lb)

**Operating temperature:** 5 °C to 35 °C (41 °F to 95 °F)

**Operating humidity:** 25 % to 80 %

## Supplied accessories

See page 15.

Specifications and design are subject to change without notice.

ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® Partner, Sony Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

# Language Code List

For details, see pages 45, 48, 59.

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code Language	Code Language	Code Language	Code Language
1027 Afar	1183 Irish	1347 Maori	1507 Samoan
1028 Abkhazian	1186 Scots Gaelic	1349 Macedonian	1508 Shona
1032 Afrikaans	1194 Galician	1350 Malayalam	1509 Somali
1039 Amharic	1196 Guarani	1352 Mongolian	1511 Albanian
1044 Arabic	1203 Gujarati	1353 Moldavian	1512 Serbian
1045 Assamese	1209 Hausa	1356 Marathi	1513 Siswati
1051 Aymara	1217 Hindi	1357 Malay	1514 Sesotho
1052 Azerbaijani	1226 Croatian	1358 Maltese	1515 Sundanese
1053 Bashkir	1229 Hungarian	1363 Burmese	1516 Swedish
1057 Byelorussian	1233 Armenian	1365 Nauru	1517 Swahili
1059 Bulgarian	1235 Interlingua	1369 Nepali	1521 Tamil
1060 Bihari	1239 Interlingue	1376 Dutch	1525 Telugu
1061 Bislama	1245 Inupiak	1379 Norwegian	1527 Tajik
1066 Bengali;	1248 Indonesian	1393 Occitan	1528 Thai
Bangla	1253 Icelandic	1403 (Afan)Oromo	1529 Tigrinya
1067 Tibetan	1254 Italian	1408 Oriya	1531 Turkmen
1070 Breton	1257 Hebrew	1417 Punjabi	1532 Tagalog
1079 Catalan	1261 Japanese	1428 Polish	1534 Setswana
1093 Corsican	1269 Yiddish	1435 Pashto;	1535 Tonga
1097 Czech	1283 Javanese	Pushto	1538 Turkish
1103 Welsh	1287 Georgian	1436 Portuguese	1539 Tsonga
1105 Danish	1297 Kazakh	1463 Quechua	1540 Tatar
1109 German	1298 Greenlandic	1481 Rhaeto-	1543 Twi
1130 Bhutani	1299 Cambodian	Romance	1557 Ukrainian
1142 Greek	1300 Kannada	1482 Kirundi	1564 Urdu
1144 English	1301 Korean	1483 Romanian	1572 Uzbek
1145 Esperanto	1305 Kashmiri	1489 Russian	1581 Vietnamese
1149 Spanish	1307 Kurdish	1491 Kinyarwanda	1587 Volapük
1150 Estonian	1311 Kirghiz	1495 Sanskrit	1613 Wolof
1151 Basque	1313 Latin	1498 Sindhi	1632 Xhosa
1157 Persian	1326 Lingala	1501 Sangho	1665 Yoruba
1165 Finnish	1327 Laothian	1502 Serbo-	1684 Chinese
1166 Fiji	1332 Lithuanian	Croatian	1697 Zulu
1171 Faroese	1334 Latvian;	1503 Singhalese	
1174 French	Lettish	1505 Slovak	
1181 Frisian	1345 Malagasy	1506 Slovenian	1703 Not specified

# Index

## Numerics

16:9 60  
4:3 LETTER BOX 60  
4:3 PAN SCAN 60  
5.1 Channel Surround 19

## A

A-B REPEAT 35  
ADVANCED 43  
ALBUM 38  
album 30  
ANGLE 48  
AUDIO 45, 59  
AUDIO ATT 62  
AUDIO DRC 62  
AUDIO SETUP 62  
AUTO PLAY 61  
AUTO POWER OFF 61

## B

BACKGROUND 60  
Batteries 15  
BIT RATE 43  
BLACK LEVEL 60  
BNR 49

## C

CD 6, 26  
CHAPTER 38  
Chapter 9, 67  
CHAPTER VIEWER 40  
Child Lock 27  
Connecting 16  
Continuous play  
CD/VIDEO CD 26  
DVD 26  
Control Menu 12  
CUSTOM 58  
CUSTOM PARENTAL  
CONTROL 53  
CUSTOM PICTURE MODE  
50  
CUSTOM SETUP 61

## D

DATA CD 6, 30  
DIGITAL OUT 63  
Digital output 63  
DIGITAL VIDEO  
ENHANCER 51  
DIMMER 61  
Display  
Control Menu display 12  
Front panel display 9  
Setup Display 58  
DOLBY DIGITAL 23, 45,

63, 67  
DOWNMIX 63  
DTS 23, 45, 63, 67  
DVD 6, 26, 67  
DVD+RW 6, 27, 67  
DVD's menu 29  
DVD-RW 6, 27, 67

## F

Fast forward 37  
Fast reverse 37  
Film based software 18, 67  
Freeze frame 38  
Front panel display 9

## H

Handling discs 7  
Hooking up 15

## I

INDEX 38  
Index 67  
Instant Replay 27  
Instant Search 27  
Interlace format 18, 68

## L

LANGUAGE SETUP 59  
LAYER 43  
Locating  
a specific point by watching  
the TV screen 28

## M

MEMORY 50  
MENU 59  
MP3 6, 30  
MULTI-DISC RESUME 28,  
62

## N

NORMAL (INTERLACE) 18

## O

On-screen display  
Control Menu display 12  
Setup Display 58  
OSD 59

## P

PARENTAL CONTROL 54  
PAUSE MODE 62  
PBC Playback 29  
PICTURE MODE 50  
PICTURE NAVIGATION 40  
PRO LOGIC 22, 63, 67

PROGRAM 32  
Program Play 32  
PROGRESSIVE AUTO 18  
PROGRESSIVE FILM 18  
Progressive format 18, 68  
PROGRESSIVE VIDEO 18

## Q

QUICK 59  
Quick Setup 24, 59

## R

Remote 15, 57  
REPEAT 35  
Repeat Play 35  
RESET 59  
Resume Play 28

## S

S VIDEO output 16  
Scan 37  
SCENE 38  
Scene 9, 68  
SCREEN SAVER 60  
SCREEN SETUP 60  
Searching 37  
SETUP 58  
Setup Display 58  
SHUFFLE 34  
Shuffle Play 34  
Slow-motion Play 37  
Speakers  
Hooking up 19  
SUBTITLE 48, 59  
SURROUND 19, 46

## T

TIME/TEXT 38, 41  
TITLE 38  
Title 9, 68  
TITLE VIEWER 40  
TOP MENU 29  
TRACK 38  
Track 9, 68  
TRACK SELECTION 62  
TRACK VIEWER 40  
Troubleshooting 64  
TV TYPE 60  
TVS (TV Virtual Surround)  
46

## U

Usable discs 6

## V

Video based software 18, 67  
VIDEO CD 6, 26



Printed on 100% recycled magazine paper.

Printed using VOC (volatile organic compound)-free vegetable oil based ink.

<http://www.sony.net/>