

Wi-Fi Connection/ One-touch (NFC) Guide



* NFC: Near Field Communication

Notes

- The Wi-Fi function of this camera cannot be used connected to a public wireless LAN. PlayMemories Mobile is not guaranteed to work on all Smartphones and Tablets.
- To use the One-touch functions (NFC) of the camera, a smartphone or tablet computer supporting the NFC function is required.

Detailed operations are described in the **Wi-Fi Guide**.

Refer to the following website.

<http://support.d-imaging.sony.co.jp/wi-fi/dsc/2013-2/>

What you can do

Sending images to the computer



Required equipment/environment
The computer connected to a wireless access point

→ See the description on the right.

Sending images to a smartphone (One-touch sharing (NFC))



Required equipment/environment
A smartphone or a tablet computer

→ See the reverse side.

Using a smartphone as a remote controller (One-touch remote (NFC))



Required equipment/environment
A smartphone or a tablet computer

→ See the reverse side.

Viewing still images on a TV



→ Refer to the Wi-Fi guide of the website.

Sending images to the computer

Note: Steps 1 and 2 are required the first time only.

1 Install the latest software on your computer.

Windows: PlayMemories Home

<http://www.sony.net/pm/>

Mac: Wireless Auto Import


<http://www.sony.co.jp/imsoft/Mac/>
Select [Wireless Auto Import].

2 Connect the camera to an access point.


Note: For more information, refer to the instruction of the access point, or contact the person who set up the access point.

If the wireless access point has a WPS button.


① Press the MENU button.

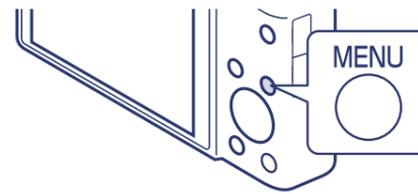

② Select \swarrow 3 with $\blacktriangleright \rightarrow$ [WPS Push].

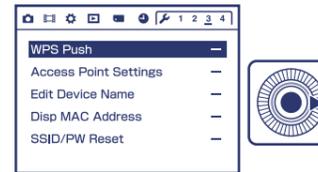


③ Push the WPS button on the wireless access point you want to register.

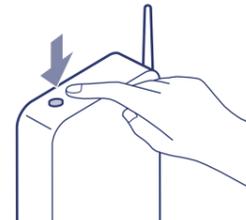


If you know the SSID and password of your wireless access point.


① Press the MENU button.

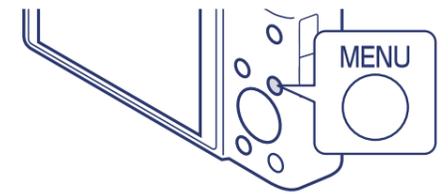

② Select \swarrow 3 with $\blacktriangleright \rightarrow$ [Access point settings].

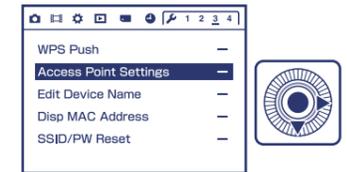


③ Select the access point you want to register, enter the password, then press [OK].

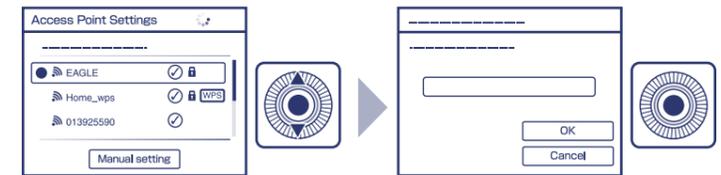


3 When your computer is not started, turn on the computer.

4 Start sending images to the computer.

① Confirm that a memory card is inserted in the camera.

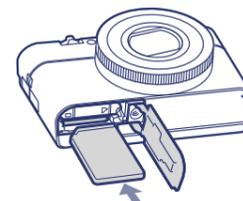


② Press the MENU button.

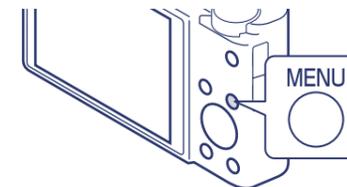

③ Select \blacktriangleright 1 with $\blacktriangleright \rightarrow$ [Send to computer].

- Image saving automatically starts.

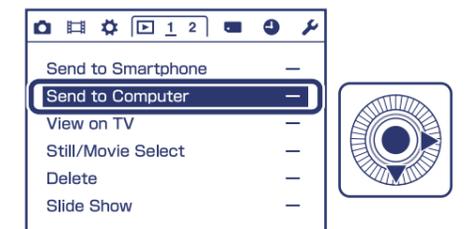

Note: Previously sent images are not duplicated. Sending a movie or multiple still images takes time.



Sending images to a smartphone (One-touch sharing (NFC))

1 Install the latest version of PlayMemories Mobile on your smartphone.

Note: For more information, refer to the following website.
<http://www.sony.net/pmm/>



Android 2.3 ~



*Using One-touch functions (NFC), Android 4.0 ~



iOS 4.3 ~







*One-touch functions (NFC) are not available

2 Select an image on the camera to be sent and connect a smartphone to the camera.

Note: Movies recorded in AVCHD format cannot be sent to a smartphone.


Android/iOS not supporting NFC

- Playback an image to be sent to the smartphone.
- MENU button → [1] with [▶] → [Send to Smartphone] → [Select on This Device].
- Select [This Image] with [▲/▼], then press [●].
- The SSID and password are displayed, and the camera is ready to be connected with the smartphone.

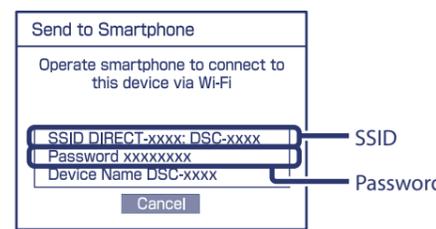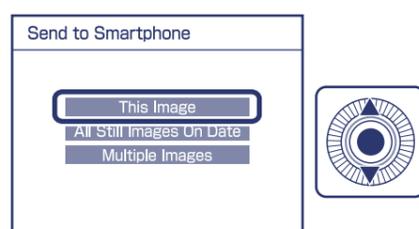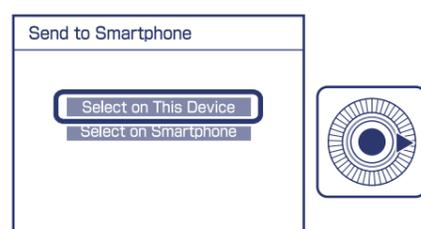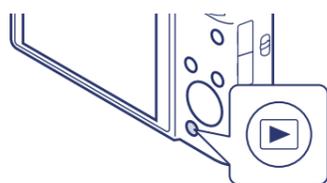


Android

- Start PlayMemories Mobile.
- Select the SSID displayed on the camera.
- Input the password displayed on the camera (first time only).

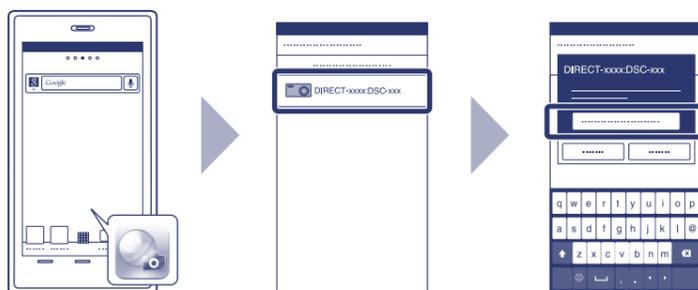


iOS

- Select [Settings] on the smartphone, then select [Wi-Fi] and select SSID displayed on the camera.
- Input the password displayed on the camera (first time only).
- Confirm connection to the SSID displayed on the camera.
- Start PlayMemories Mobile.

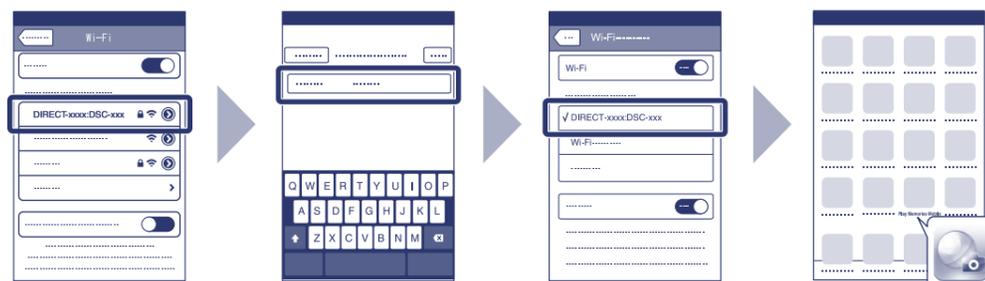


Android supporting NFC (One-touch sharing)

- Playback an image to be sent to the smartphone.
- Select [Settings] on the smartphone, then select [More...] to check that [NFC] is enabled. (This is only necessary the first time.)

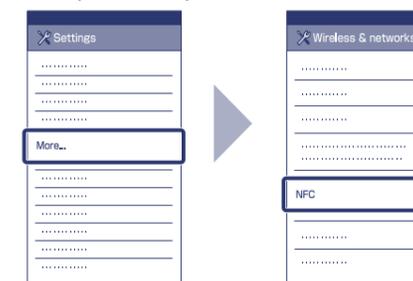

- Touch the smartphone to the camera.

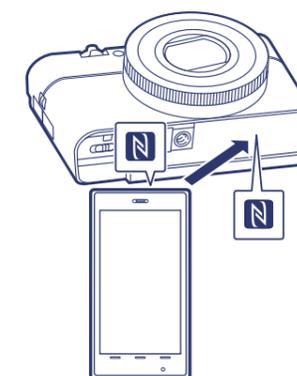

- Canceling sleep and the screen lock of the smartphone beforehand.
- Make sure that the **N** (N Mark) is displayed on the screen of the camera.
- Continue touching without moving until "PlayMemories Mobile" starts (1-2 seconds).
- Touch the N mark of the smartphone to **N** (N Mark) of the camera. If there is no N mark on the smartphone, refer to the instruction manual of the smartphone for the touch area.
- When not well connectable by NFC, see "Android/iOS not supporting NFC".

3 Images on the camera will be sent to your smartphone.

Note: The sent image is stored in Gallery of Android, or Album of iOS.



Using a smartphone as a remote controller (One-touch remote (NFC))

You can monitor the image to be captured and shoot with your smartphone. Select MENU → [1] → [Ctrl with Smartphone] on the camera in step 2 to set up the camera, or touch the N mark of the smartphone to **N** (N Mark) at the bottom of the camera.

Communication distance: Approx. 10m/33ft (line-of-sight)

Note: Communication distance may vary, depending on your surroundings/ smartphone.



For details on operations, refer to the Wi-Fi Guide.

<http://support.d-imaging.sony.co.jp/wi-fi/dsc/2013-2/>