


Speakers – Connection and Installation

COMPONENT VIDEO HOOKUP

If your TV monitor have COMPONENT VIDEO INPUT jacks, use a component video cord to connect to the DVD player (DVP-NC655P) for better picture quality.

When you make the component video hookup

- Set SCAN SELECT on the DVD player to “PROGRESSIVE”.
- Set your TV’s video input to match your selection.
- You do not have to connect the LINE OUT VIDEO 1 jack (on DVD player) to the DVD/LD VIDEO 1 jack (on receiver).

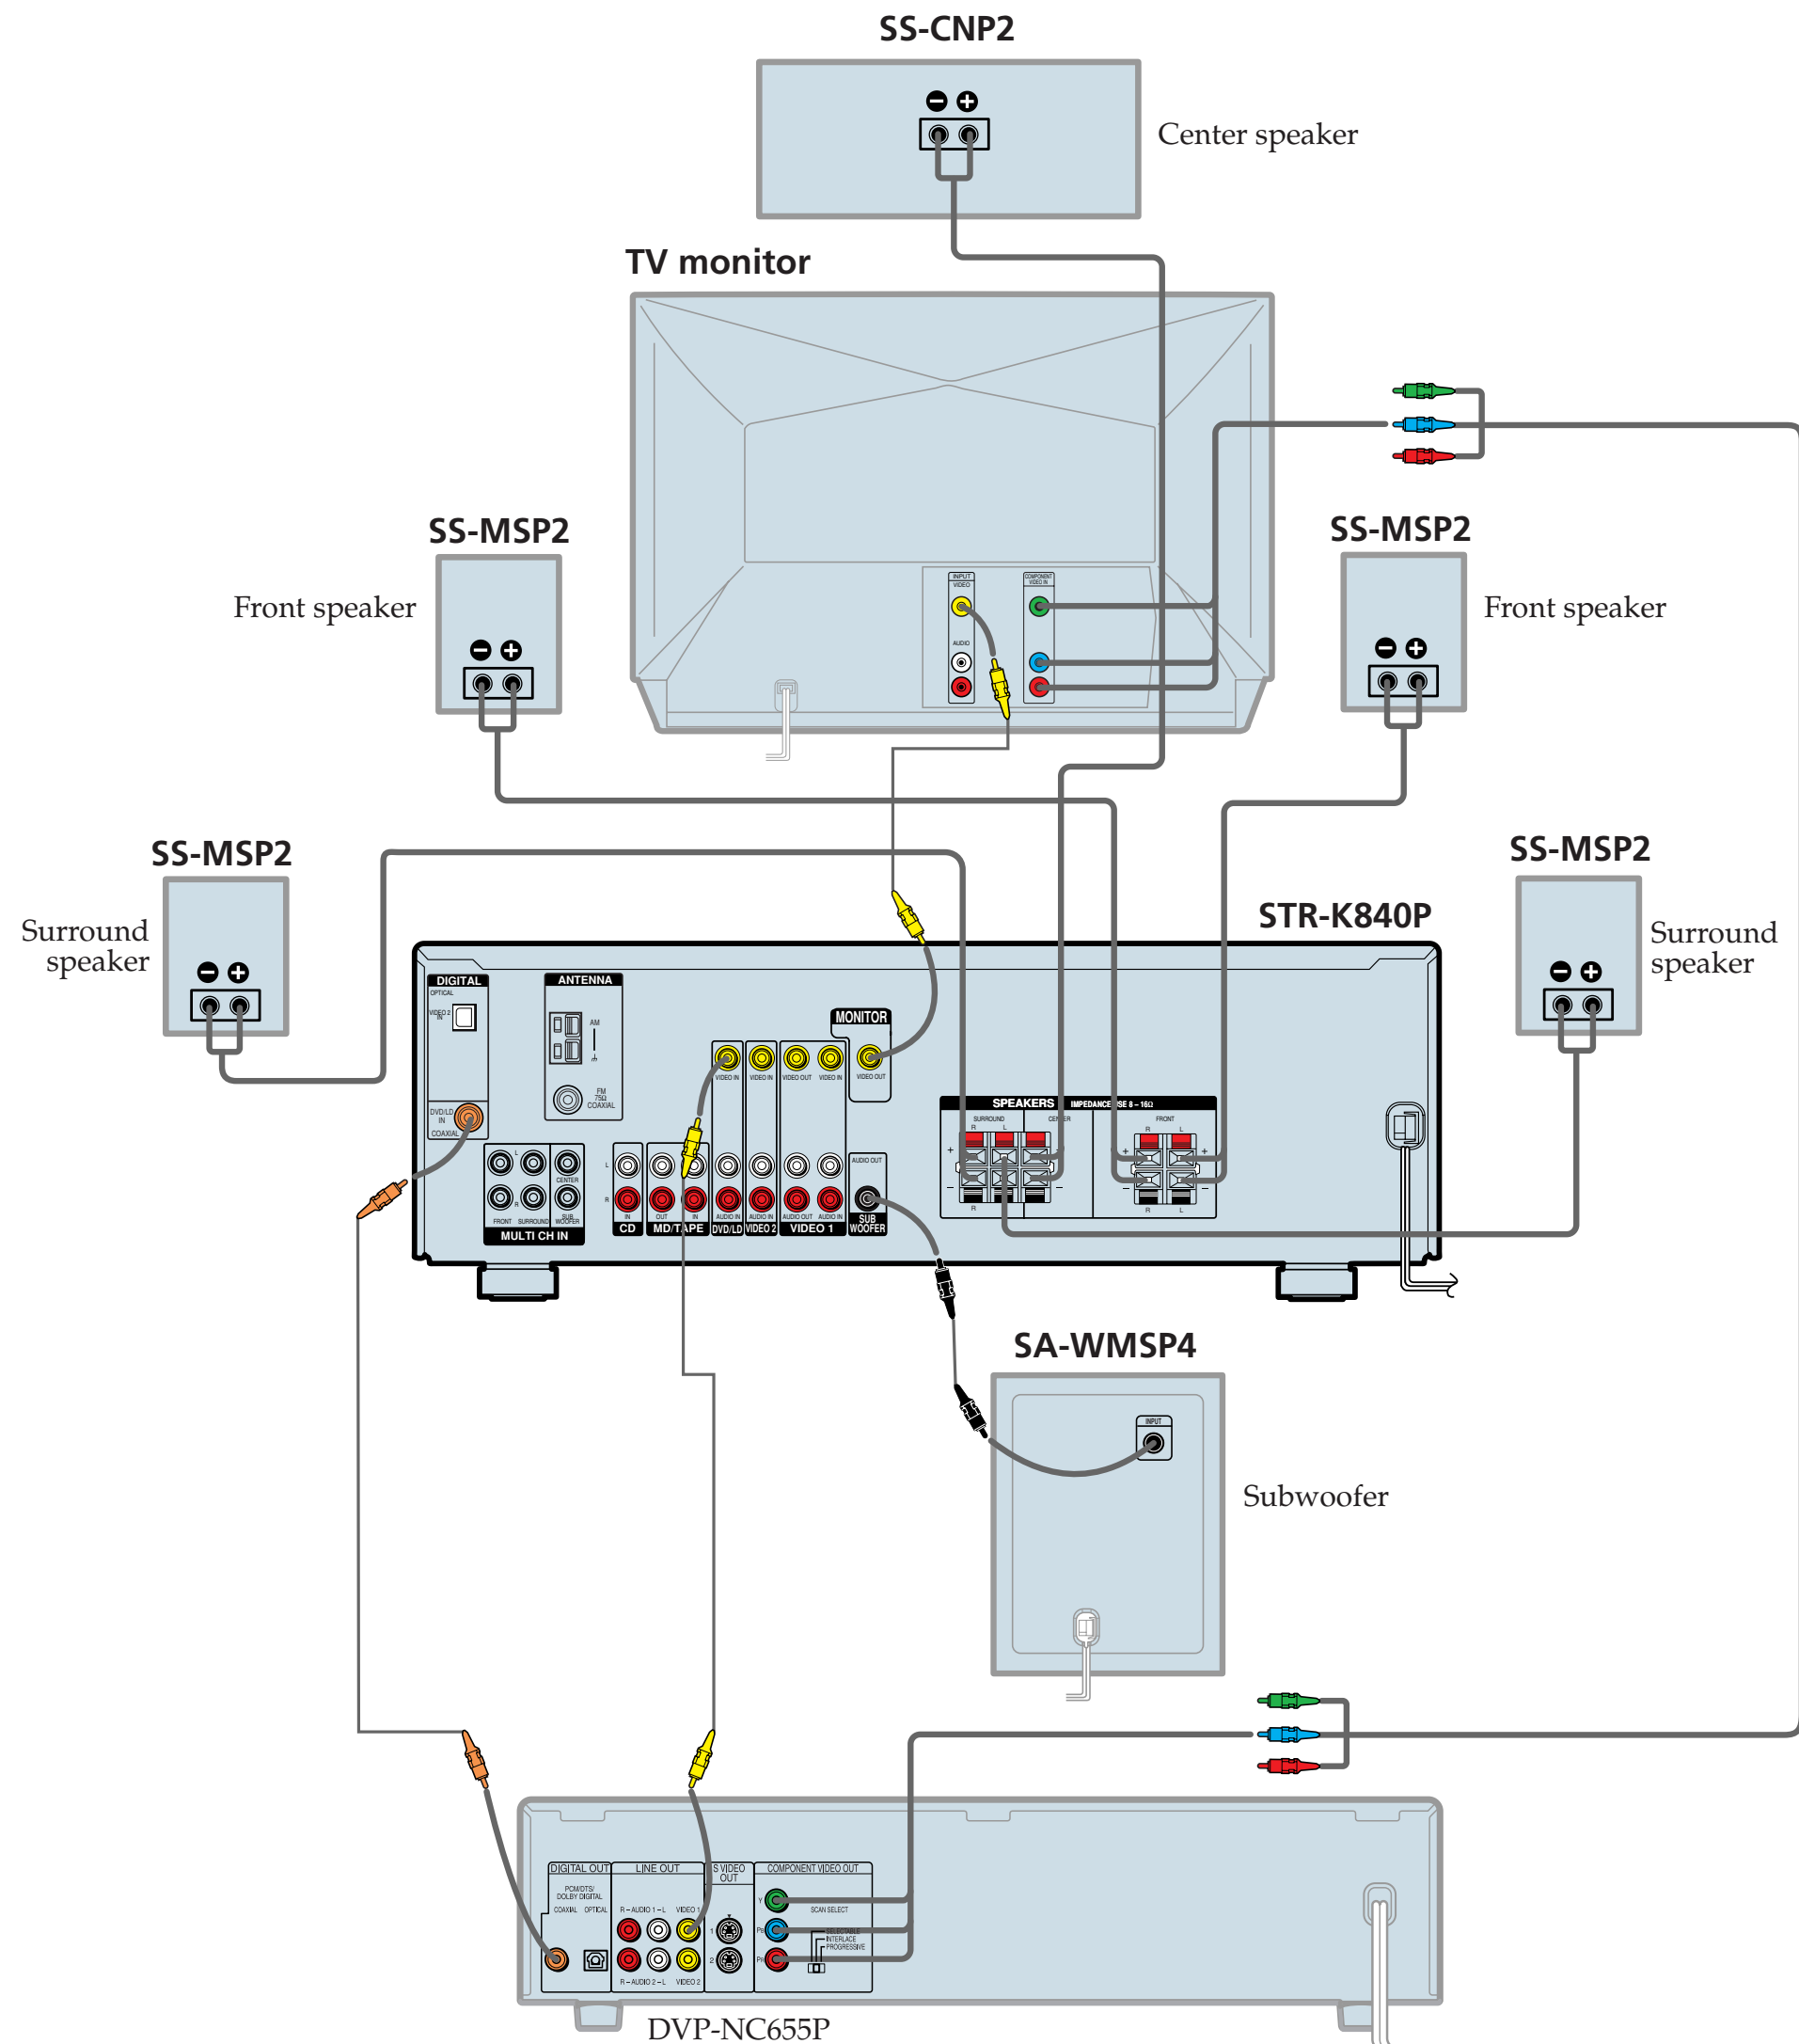

Speaker installation

For best performance, we recommend speaker placement as shown.

See the Operating Instructions for more information.

For greater flexibility in the positioning of the speakers, use the optional WS-FV10C floor stand (available only in certain countries).

A

Front speakers

Place on both sides of the TV equal distances apart.

C

Center speaker

Place on the top of or below the TV.

B

Subwoofer

Can be placed anywhere.

D

Surround speakers

Place right beside or slightly behind your listening position, and a little higher than your ears.

