

FM/AM PLL Synthesized Clock Radio

 
Operating Instructions

ICF-C713

Sony Corporation © 1997 Printed in Malaysia

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

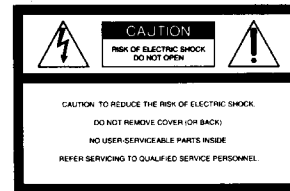

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

- The graphical symbols are on the AC power adaptor.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Before You Begin

Thank you for choosing the Sony clock radio. This will give you many hours of reliable service and listening pleasure. Before operating the clock radio, please read these instructions thoroughly and retain them for future reference.

Features

- Dual alarm FM/AM PLL (phase locked loop) synthesized clock radio
- 5 random memory presets
- Radio and buzzer alarms with the snooze function
- LCD display with backlight which has a brightness switch

Precautions

- Operate the unit only on 120 V AC, 60 Hz.
- Disconnect the cord by grasping the plug. Never pull it by the cord.
- Do not leave the unit in a location near a heat source such as a radiator or air duct, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that block the ventilation holes.
- Should any liquid or solid object fall into the unit, unplug the unit and have it checked by qualified personnel before operating it further.
- When the casing becomes soiled, clean it with a soft cloth dampened with a mild detergent solution. Never use abrasive cleaners or chemical solvents, as they may mar the casing.

If you have any questions, please consult your nearest Sony dealer.

Specifications

Time display

12-hour system

Frequency range

FM: 87.5-108 MHz

AM: 530-1710 kHz

Channel steps

FM: 0.1 MHz (fixed)

AM: 10 kHz (fixed)

Speaker

Approx. 5.7 cm (2 1/4 in) dia.

Power output

150 mW (at 10% harmonic distortion)

Power requirements

120 V AC, 60 Hz

Dimensions

Approx. 115 x 123 x 85 mm (w/h/d)
(4 5/8 x 4 7/8 x 3 3/8 in) incl. projecting parts and controls

Mass

Approx. 420 g (14.8 oz)

Design and specifications are subject to change without notice.

IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference. Carefully observe all warnings, precautions and instructions on the appliance and described in the operating instructions supplied with the appliance by Sony.

INSTALLATION

Water and Moisture

Do not install the appliance near water: for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Heat

Do not install the appliance near sources of heat such as radiators, heat registers, stoves, or other appliances that produce heat.

Ventilation

Slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable and safe operation of the appliance, and to protect it from overheating, these slots and openings must never be blocked or covered.

Do not place the appliance on a bed, sofa, rug or other similar surface which may block the slots and openings.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet, unless proper ventilation is provided.

Carts and Stands

Do not install the appliance on an unstable table, shelf, cart or stand. Use only a cart or stand recommended by Sony.

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

Wall or Ceiling Mounting

If your appliance can be mounted to a wall or ceiling, mount it only as recommended by Sony.

USE

Power Source

Connect the appliance to a power supply only of the type described in the operating instructions or as marked on the appliance.

Grounding or Polarization

Do not defeat the grounding or polarization feature of the AC power cord. If your AC receptacle will not accept the power cord plug, contact your electrician to install a proper AC receptacle.

AC Receptacle

Check to make sure that the AC receptacle holds the power cord plug firmly and securely. If the power cord plug is loose, contact your electrician to replace the defective and unsafe AC receptacle.

Power-Cord Protection

Route the power cord so that it is not likely to be walked on or pinched by having objects placed on it, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.

When not in use

Unplug the power cord of the appliance from the outlet when left unused for a long period of time.

To disconnect the cord, pull it out by grasping the plug. Never pull the plug out by the cord.

Foreign Objects

Be careful that foreign objects and liquids do not enter the enclosure through openings.

Cleaning

Clean the appliance only as recommended by Sony.

ANTENNAS

Outdoor Antenna Grounding

 
If an outdoor antenna or cable system is installed, follow the precautions below.

An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits.

WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Antenna Grounding According to the National Electrical Code

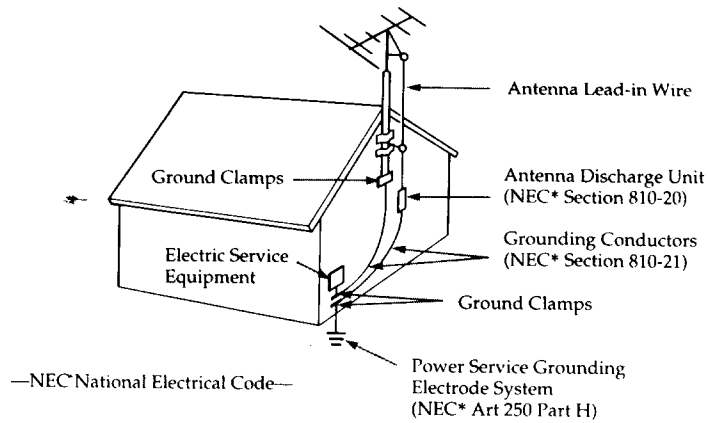


SERVICE

Unplug the appliance from the wall outlet and consult qualified service personnel when:

- the power cord or the plug has been damaged.
- a solid object or liquid has fallen into the cabinet.
- the appliance has been exposed to rain or moisture.
- the appliance does not appear to operate normally or exhibits a marked change in performance.
- the appliance has been dropped, or the enclosure damaged.

 Do not attempt to service the appliance beyond that described in the operating instructions. For all other servicing refer to qualified service personnel only.

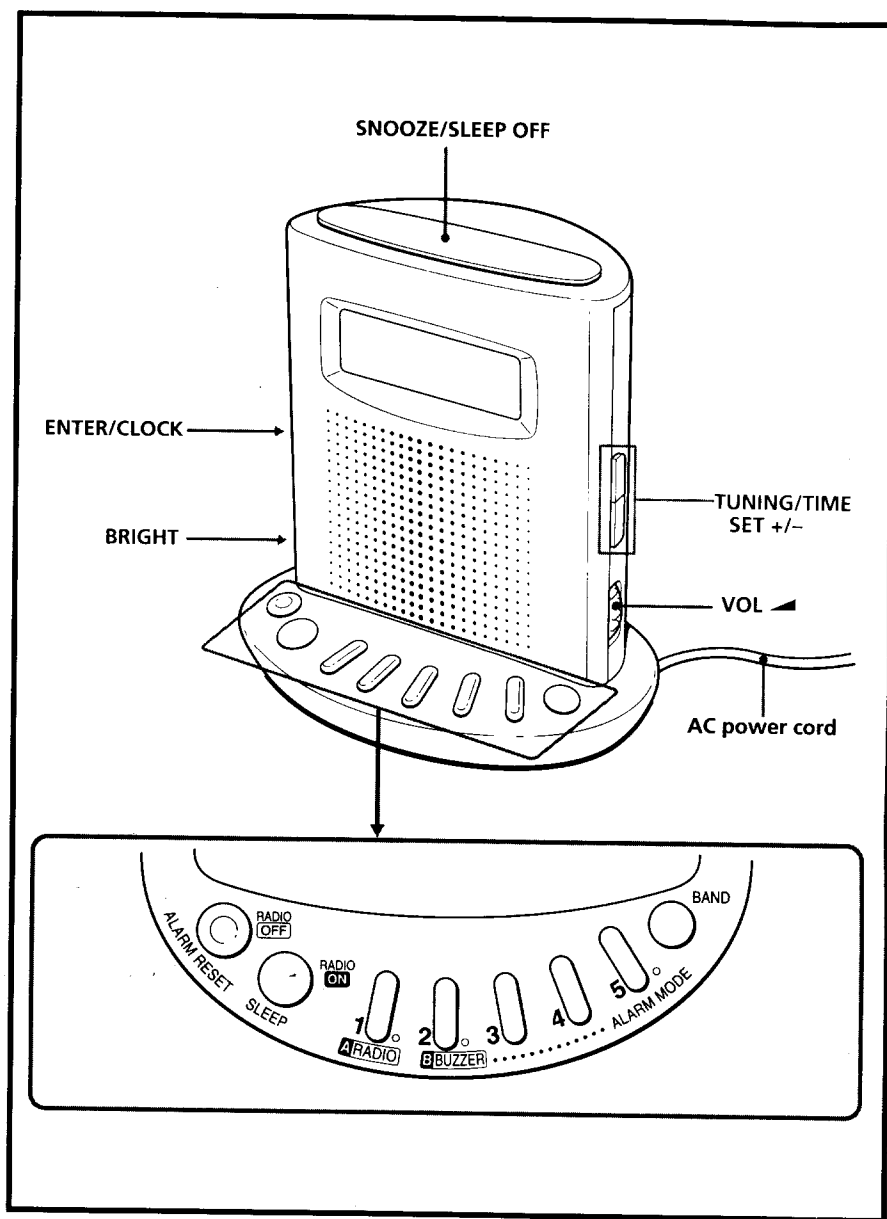

SONY®

Tape Cassette Player/Recorder/CD Player/Mini Disc
DAT/Radio/Head Phone/Speaker/MIC/Personals

LIMITED WARRANTY

Portable Audio

Sony Electronics Inc. ("Sony") warrants this Product (including any accessories) against defects in material or workmanship as follows:

1. For a period of one (1) year from the date of purchase, Sony will repair or replace, at its option, at no charge through your Sony authorized dealer, Sony owned Service Center, or the Sony Parts Center Exchange Department, the defective unit. After this one (1) year period, you must pay for the replacement unit. This warranty does not cover costs incurred in connection with the removal and re-installation of radios, speakers or accessories, nor does it cover any other contingent expenses.

2. To obtain warranty service, you must take the Product, or deliver the Product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to any authorized Sony service facility.

This warranty does not cover customer instruction, installation, set up adjustments or signal reception problems.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of, or to any part of the Product, including the antenna. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Sony to service the Product. This warranty does not cover Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries). This warranty is valid only in the United States.

Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service.

This warranty is invalid if the factory applied serial number has been altered or removed from the Product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract with the Sony Partnership within 90 days of the date of sale, the limitation on how long an implied warranty lasts does not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

The address of the Sony Parts Center - Exchange Department is:

Sony Parts Center - Exchange Department
8281 NW 107th Terrace
Kansas City, Missouri 64153

For your convenience, Sony Electronics Inc. has established telephone numbers for frequently asked questions:

To locate the service or dealer nearest you, or for service assistance or resolution of a service problem, or for product information or operation, call:

Sony Direct Response Center
1-(800)-222-7669
or write to:
Sony Direct Response Center
12451 Gateway Blvd.
Fort Myers, FL 33913

For an accessory or part not available from your authorized dealer, call:

1-(800)-488-SONY (7669)

Setting the Clock

- 1 Plug in the clock radio.
"AM 12:00" will flash in the display.
 - 2 While holding down **ENTER/CLOCK**, press **TUNING/TIME SET +** or **-** until the correct time appears in the display.
When you release **ENTER/CLOCK**, the clock begins to operate.
- To set the current time rapidly, keep pressing the **+** or **-** button while holding down **ENTER/CLOCK**.
 - To set the current time from zero seconds, release **ENTER/CLOCK** with the time signal at step 2.
 - The colon (":") in the time indication is flashes when the radio is off and steadily displayed when it is on.

Playing the Radio

Manual Tuning

- 1 Press **RADIO ON** to turn on the radio.
The band and frequency will appear in the display for a few seconds. Then the current time indication returns to the display.
 - 2 Press **BAND** repeatedly to select the desired band.
 - 3 Use **TUNING/TIME SET +** or **-** to tune in the desired station.
The FM frequency advances or reverses in 0.1 MHz channel steps and the AM frequency in 10 kHz channel steps.
A beep sounds and the tuning stops when the upper or lower extremity of the band range is reached.
 - 4 Adjust volume using **VOL**.
- To turn off the radio, press **RADIO OFF**.
 - To improve reception
FM: Extend the AC power cord fully to increase FM reception sensitivity, since the cord acts as an FM wire antenna.
AM: Rotate the unit horizontally for optimum reception. A ferrite bar antenna is built in to the unit.
 - To check the current station, press the **+** button lightly. The band and frequency are displayed for a few seconds, after which the current time indication returns to the display.
 - If the radio alarm **A RADIO** comes on while the radio is playing, the station switches to the frequency set under preset number 1 (the wake-up frequency).

Setting the Alarm

You can set the radio and buzzer alarms at the preset time. Before setting the alarm, be sure to set the clock (See "Setting the Clock") and preset a radio station under preset button 1 (See "Preset Tuning").

- 1 Turn off the radio.
- 2 While holding down **A RADIO** or **B BUZZER**, press either **TUNING/TIME SET +** or **-** until the desired time appears in the display.
At this time, the "A RADIO" or "B BUZZER" indication flashes in the display.
- 3 Release **A RADIO** or **B BUZZER**.
- 4 Press **ALARM MODE** until the alarm you want appears in the display.
Each time you press **ALARM MODE**, the alarm indication changes as follows.

No alarm
indication → **A RADIO** → **B BUZZER**
↑ **A RADIO** and **B BUZZER** ↓

When the alarm time is reached, the radio or buzzer sounds for 60 minutes or until turned off.

To stop the alarm

Press **ALARM RESET** while the alarm is activated.
The alarm will function at the same time the next day.

To cancel the alarm

Press **ALARM MODE** until neither the "A RADIO" nor "B BUZZER" indication is displayed.

Notes

- The alarm does not function, unless you set the clock, **A RADIO** and **B BUZZER** function.
- If both the radio and buzzer alarm are set for the same time, the radio alarm takes precedence.
- You can check the alarm time setting by pressing **A RADIO** or **B BUZZER**.

Preset Tuning

You can preset up to five stations for one-touch tuning, one under each of preset buttons 1 to 5.

 
Presetting a station

Example: To set AM 1260 kHz in preset button 2.

- 1 Tune in the station you want to preset. (See "Manual Tuning")
- 2 Press **ENTER/CLOCK**. "P" flashes in the display for a few seconds.



- 3 Press the preset button under which you wish to store the station while the "P" indication is flashing. Two beeps sound to indicate successful presetting.



- When using the radio alarm, preset the station you wish to serve as the alarm (the wake-up frequency) under preset button 1.

To change a preset station

Press the preset number again after tuning manually to a different station. The previous station is replaced by the new one.

Tuning in a preset station

- 1 Press **RADIO ON** to turn on the radio.
- 2 Press the preset button under which the desired station is stored.

To doze for a few more minutes

1 Press **SNOOZE/SLEEP OFF**.

The radio or buzzer will shut off but will automatically come on again after about 8 minutes. You can repeat this process as many times as you like.

- You can reset the alarm time while activating the snooze function.

Setting the Sleep Timer

You can enjoy falling asleep to the radio using the built-in sleep timer that turns off the radio automatically after a preset duration.

1 Press **SLEEP**.

The radio turns on. It will go off after the preset time has passed. You can set the sleep timer to 90, 60, 30, or 15 minutes. Every push changes the display as follows.

Current time → On → 90(min)
15 ← 30 ← 60 ←

The radio will play for the time you set, then shut off.

- To turn off the radio before the preset time, press **SNOOZE/SLEEP OFF**.

To Use Both Sleep Timer and Alarm

You can fall asleep to the radio sound and you will be awakened by the radio or buzzer alarm at the preset time.

- 1 Set the alarm. (See "Setting the Alarm".)
- 2 Set the sleep timer. (See "Setting the Sleep Timer".)

Troubleshooting

Should any problem occur with the unit, make the following simple checks to determine whether or not servicing is required.

If the problem persists, consult the nearest Sony dealer.

The clock does not show the correct time.

- Has an electrical power outage lasting more than an hour occurred?

The radio or buzzer alarm does not sound at the preset alarm time.

- Has the desired radio and/or buzzer alarm mode been activated with the **ALARM MODE** button ("A RADIO" and/or "B BUZZER" indication shown in the display)?