

SONY®

KD-30/34/36XS955

Quick Setup Guide

To set up your TV, follow these steps:

- 1

Checking the Supplied Accessories
- 2

Connecting Your TV
(see reverse side)
- 3

Running Initial Setup
- 4

Programming the Remote Control

If, after reading the Operating Instructions and this Quick Setup Guide, you have additional questions related to the use of your Sony television, please call our Customer Information Services Center at:
1-800-222-SONY (7669) (US residents only) or
(416) 499-SONY (7669) (Canadian residents only).


© 2004 Sony Corporation

<http://www.sony.net>

2-148-611-21 (1)

Making Video Connections

Your TV includes several types of video inputs. Use the inputs that are available on your components that provide the best video performance, as described below.

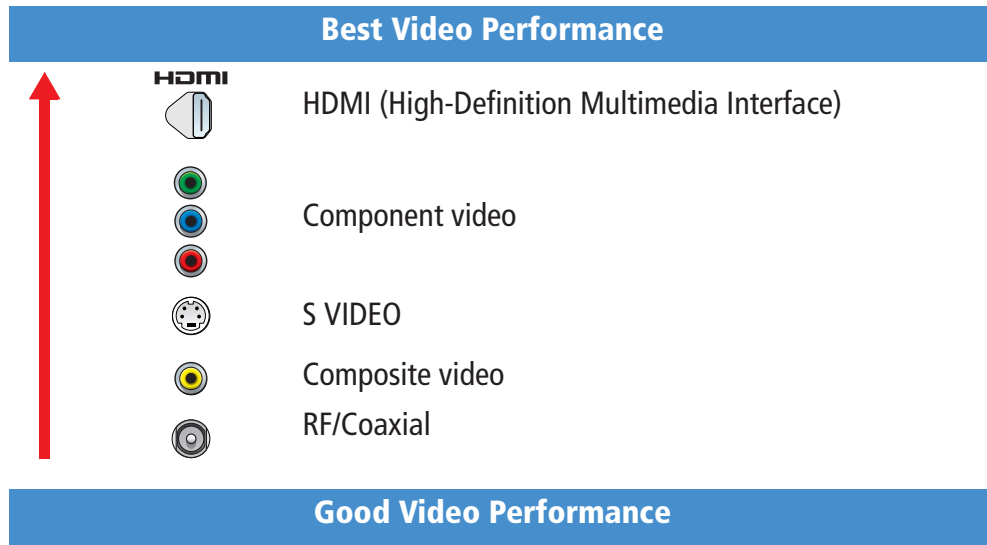

Additional Connections

For best audio performance, connect your digital audio components using either digital optical or digital coaxial audio connections.

Note: If you are using a CableCARD or the digital audio (optical) output connector, see the Operating Instructions for details.

Depending on which components are in your system, you may need to complete additional connections. For example, if you have a satellite receiver, you'll need to connect the satellite antenna. If you have an A/V receiver, you'll need to connect speakers.

Note: The connection diagrams shown on the reverse side are recommendations only; other possible solutions may exist. Connections that include an A/V receiver can often be very complex, so check your A/V receiver's instruction manual for additional details.

4 Programming the Remote Control


The remote control is preset to operate Sony brand video equipment. If you have video equipment other than Sony brand that you want to control with the TV's remote control, use the following procedure to program the remote control.

- Using the list below, find the three-digit code number for the manufacturer of your equipment. (If more than one code number is listed, use the number listed first.)
- Press the button.
- Press the or FUNCTION button.
- Enter the three-digit manufacturer's code number.
- Press the button.

You must do step 5 within 10 seconds of step 4, or you must redo steps 3 through 5.

- To check if the code number works, aim the TV's remote control at the equipment and press the power button that corresponds with that equipment. If it responds, you are done. If not, try using another code listed for that manufacturer.

- If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.

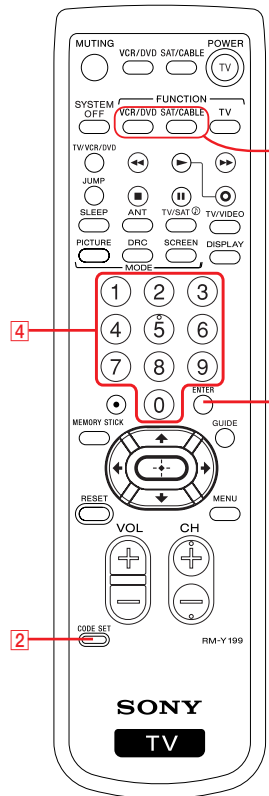


1 Checking the Supplied Accessories

Along with your new Trinitron TV, the packing box contains a remote control and two AA (R6) batteries. These items are all you need to set up and use the TV.

Inserting Batteries

- Remove the battery cover from the remote control.
- Insert two size AA (R6) batteries (supplied) by matching the and terminals on the batteries to the diagram inside the battery compartment.
- Replace the battery cover.

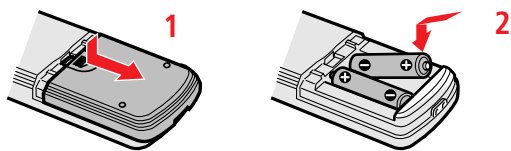

- Remove the batteries to avoid damage from possible battery leakage whenever you anticipate that the remote control will not be used for an extended period.
- Handle the remote control with care.
- Avoid dropping it, getting it wet, placing it in direct sunlight, near a heater, or where the humidity is high.

2 Connecting Your TV

Review the following chart to determine which diagram to use to connect the components in your system:

For these components	See Reverse
Cable Antenna CableCARD (optional) VCR DVD Player	A
Cable Antenna Cable Box or Satellite Receiver VCR DVD Player A/V Receiver	B
Cable Antenna Cable Box VCR DVD Player Satellite Receiver	C
Cable Antenna HD Cable Box or HD Sat Receiver DVD Player A/V Receiver Digital Receiver	D
Cable Antenna HD Cable Box VCR DVD Player	E
Cable Antenna Cable Box or Satellite Receiver VCR DVD Player A/V Receiver	F

- See the "Cables Required" chart that appears with the diagram to determine which cables you'll need. You may need to purchase extra accessories, such as cables and splitters, depending on the components you plan to connect.
- Turn off and unplug all components before making connections.
- If you are connecting a digital cable box, you'll need a special bi-directional splitter that's compatible with your cable box. Contact your cable provider for details.

3 Running Initial Setup

After you finish connecting the TV, you need to run the Initial Setup feature, which automatically creates a list of available analog and digital channels and lets you correct tilt and vertical correction settings. The Initial Setup screens appear when you turn on your TV for the first time after hooking it up.

- Press **POWER** to turn on the TV.
The Initial Setup screen appears.
- Using the remote control, move the highlight to the desired language, then press to select that language. The Tilt Correction screen appears.
- Press to correct any tilt of the picture. You can choose a correction between +7 and -7. When finished, press .
- KD-30/34XS955 Only** The Vertical Correction screen appears. Press to make a vertical correction to the picture. You can choose a correction between +5 and -5. When finished, press .
- The next screen instructs you to connect your cable/antenna. Check that you've connected your signal source correctly. To start Auto Program, highlight **Yes** and then press .

Auto Program automatically creates a list of receivable analog and digital channels. Auto Program may take 50 minutes or more to complete. A progress bar is displayed while the channel list is being created.

When Auto Program is finished, the lowest numbered channel is displayed.

VCRs	
Sony	301, 302, 303
Admiral	327
(M. Ward)	
Pioneer	308
Aiwa	338, 344
Audio	314, 337
Dynamic	
Broksonic	319, 317
Canon	309, 308
Citizen	332
Craig	302, 332
Criterion	315
Curtis	304, 338, 309
Mathes	
Daewoo	341, 312, 309
DBX	314, 336, 337
Dimensia	304
Emerson	319, 320, 316, 317, 318, 341
Fisher	330, 335
Funai	338
General	329, 304, 309
Electric	
Go Video	322, 339, 340
Goldstar	332
Hitachi	306, 304, 305, 338
Instant Replay	309, 308
JC Penney	309, 305, 304, 330, 314, 336, 337
JVC	314, 336, 337, 345, 346, 347
Kenwood	314, 336, 332, 337
LXI (Sears)	332, 305, 330, 335, 338
Magnavox	308, 309, 310
Marantz	314, 336, 337
Marta	332
Memorex	309, 335
Minolta	305, 304
Mitsubishi/ MGA	323, 324, 325, 326
Multitech	325, 338, 321
NEC	314, 336, 337
Olympic	309, 308
Optimus	327
Orion	317
Panasonic	308, 309, 306, 307

Pentax	305, 304
Philco	308, 309
Philips	308, 309, 310
Pioneer	308
Quasar	308, 309, 306
RCA/ PROSCAN	304, 305, 308, 309, 311, 312, 313, 310, 329
Realistic	309, 330, 328, 335, 324, 338
Sansui	314
Samsung	322, 313, 321
Sanyo	330, 335
Scott	312, 313, 321, 335, 323, 324, 325, 326
Sharp	327, 328
Signature	338, 327
2000 (M. Ward)	
SV2000	338
Sylvania	308, 309, 338, 310
Symphonic	338
Tashiro	332
Tatung	314, 336, 337
Teac	314, 336, 338, 337
Technics	309, 308
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
Yamaha	314, 330, 336, 337
Zenith	331


DVD Players	
Sony	751
General	755
Electric	
Hitachi	758
JVC	756
Magnavox	757
Mitsubishi	761
Oritron	759
Panasonic	753
Philips	757
Pioneer	752
RCA/Proscan	755
Samsung	758
Toshiba	754
Zenith	760

Cable Boxes	
Sony	230
Hamlin/Regal	222, 223, 224, 225, 226
Jerrold/G.I./ Motorola	201, 202, 203, 204, 205, 206, 207, 208, 218
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	211, 214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
Zenith	212, 213


Satellite Receivers	
Sony	801
Dish Network	810
Echostar	810
General	802
Electric	
Hitachi	805
Hughes	804
Mitsubishi	809
Panasonic	803
RCA/ PROSCAN	802, 808
Toshiba	806, 807

A

Use this diagram if you have:

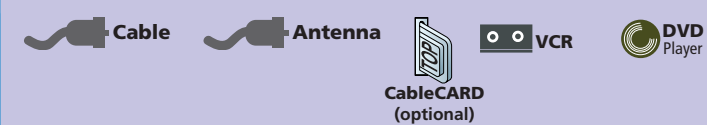

Cables Required	
Splitter	1
Coaxial	4
Composite	1
Component	1
Audio	1

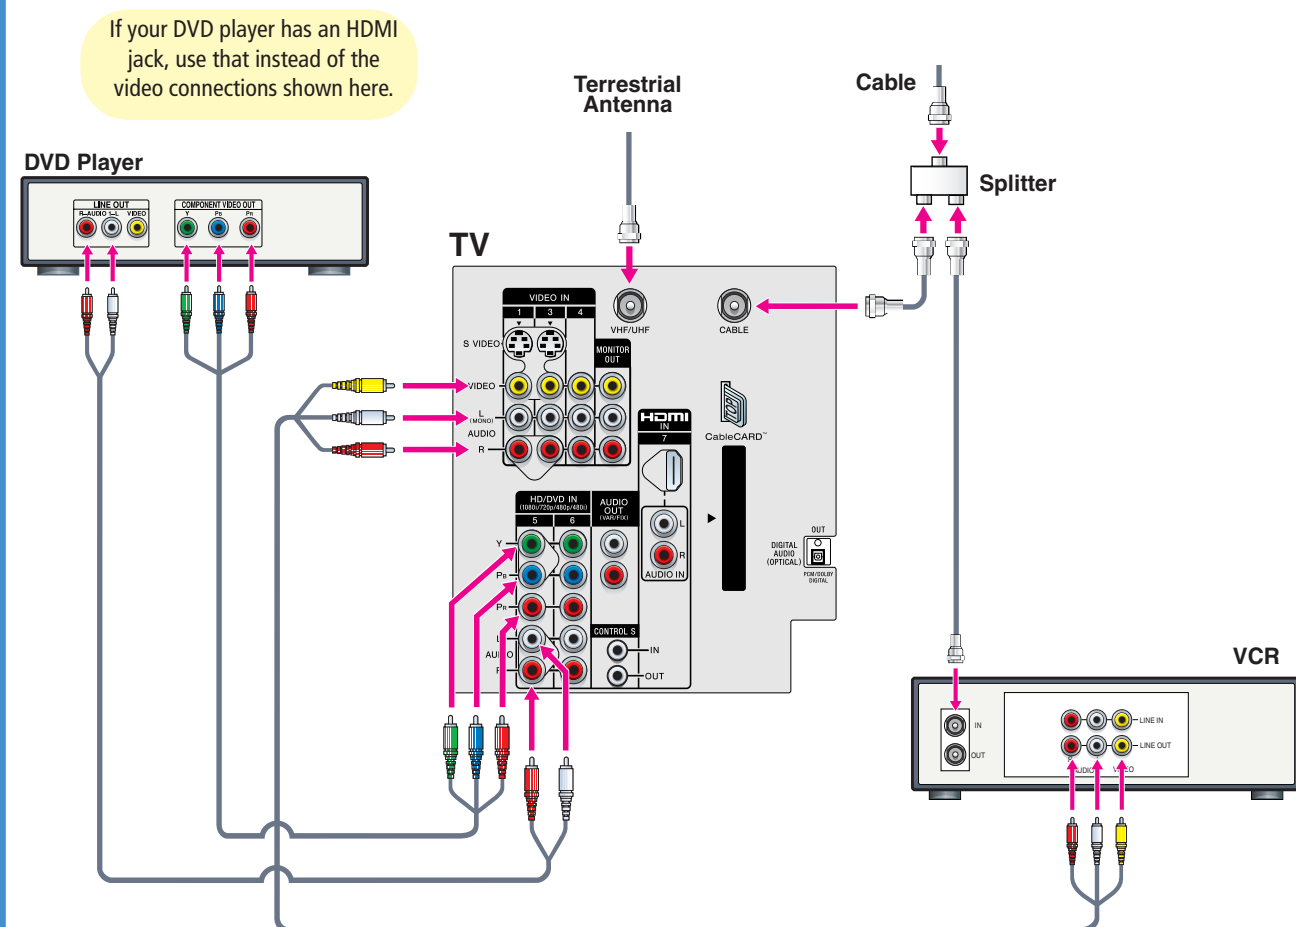


CableCARD use is optional; contact your cable TV provider. See the Operating Instructions for details on using CableCARD.

B

Use this diagram if you have:



Cables Required	
Splitter	1
Coaxial	5
Composite	4
Component	1
Audio	2

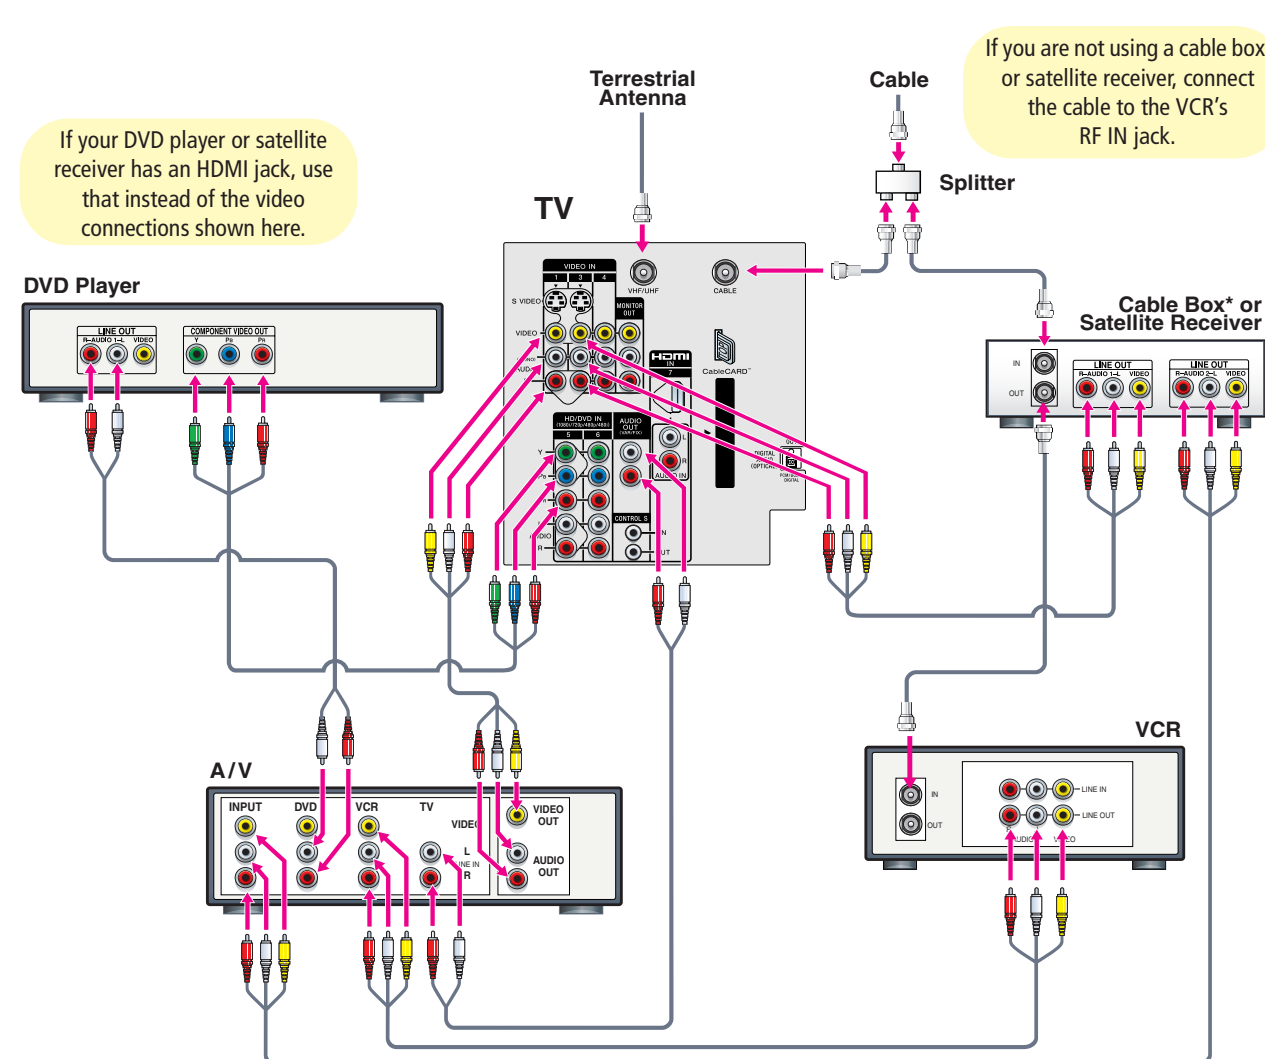


* Cable box may not be required if using CableCARD. See the Operating Instructions for details.

C

Use this diagram if you have:




Cables Required	
Splitter	1
Coaxial	5
Composite	3
Component	2
Audio	2

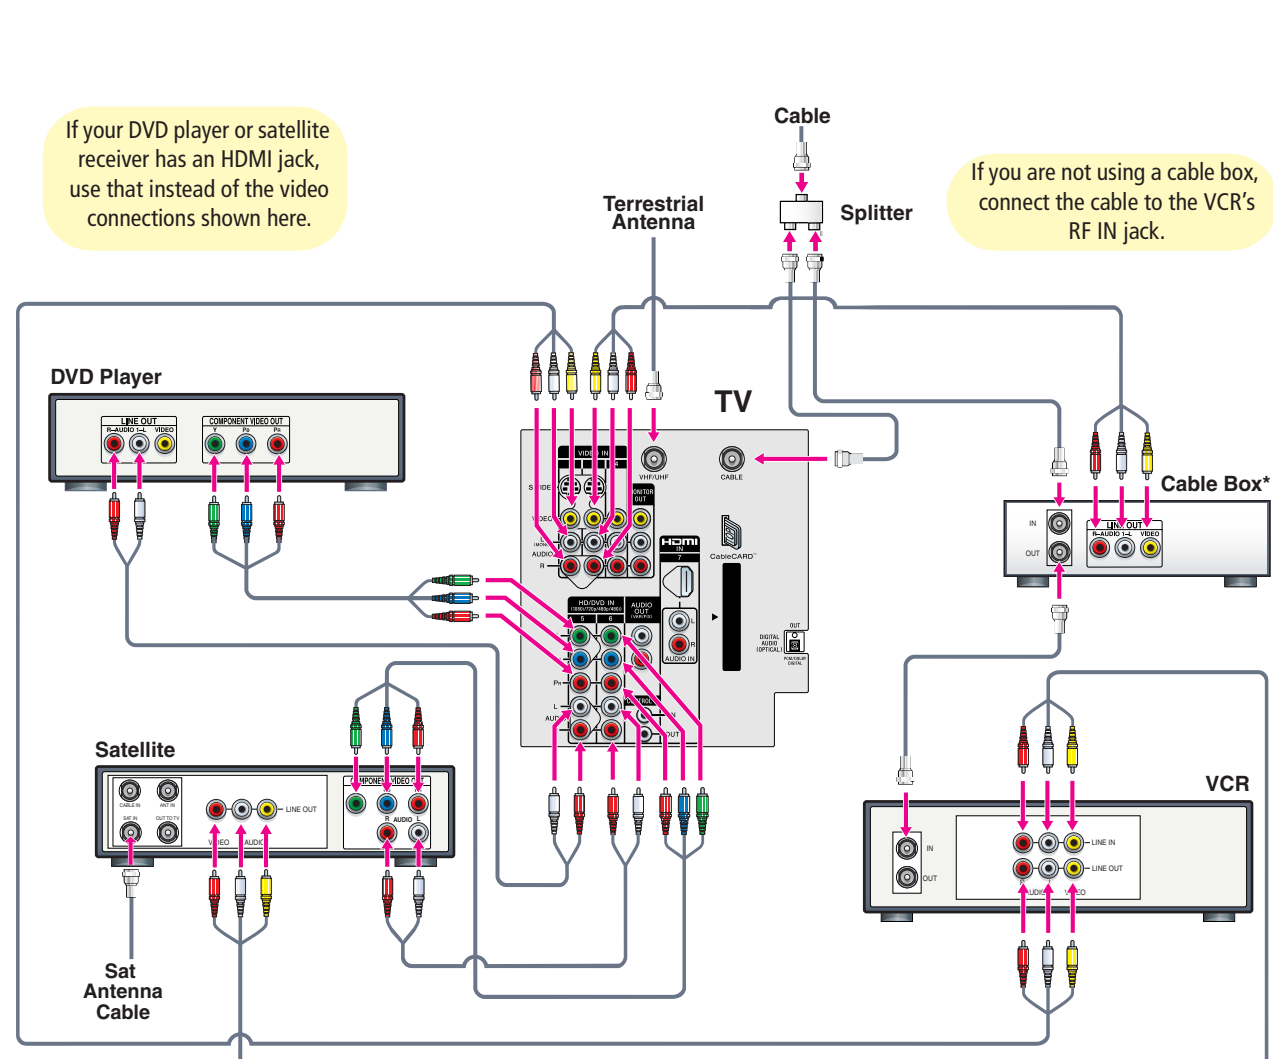


* Cable box may not be required if using CableCARD. See the Operating Instructions for details.

D

 Use this diagram if you have:



Cables Required	
Splitter	1
Coaxial	4
Composite	3
Component	1
HDMI	1
Digital Optical Audio	3

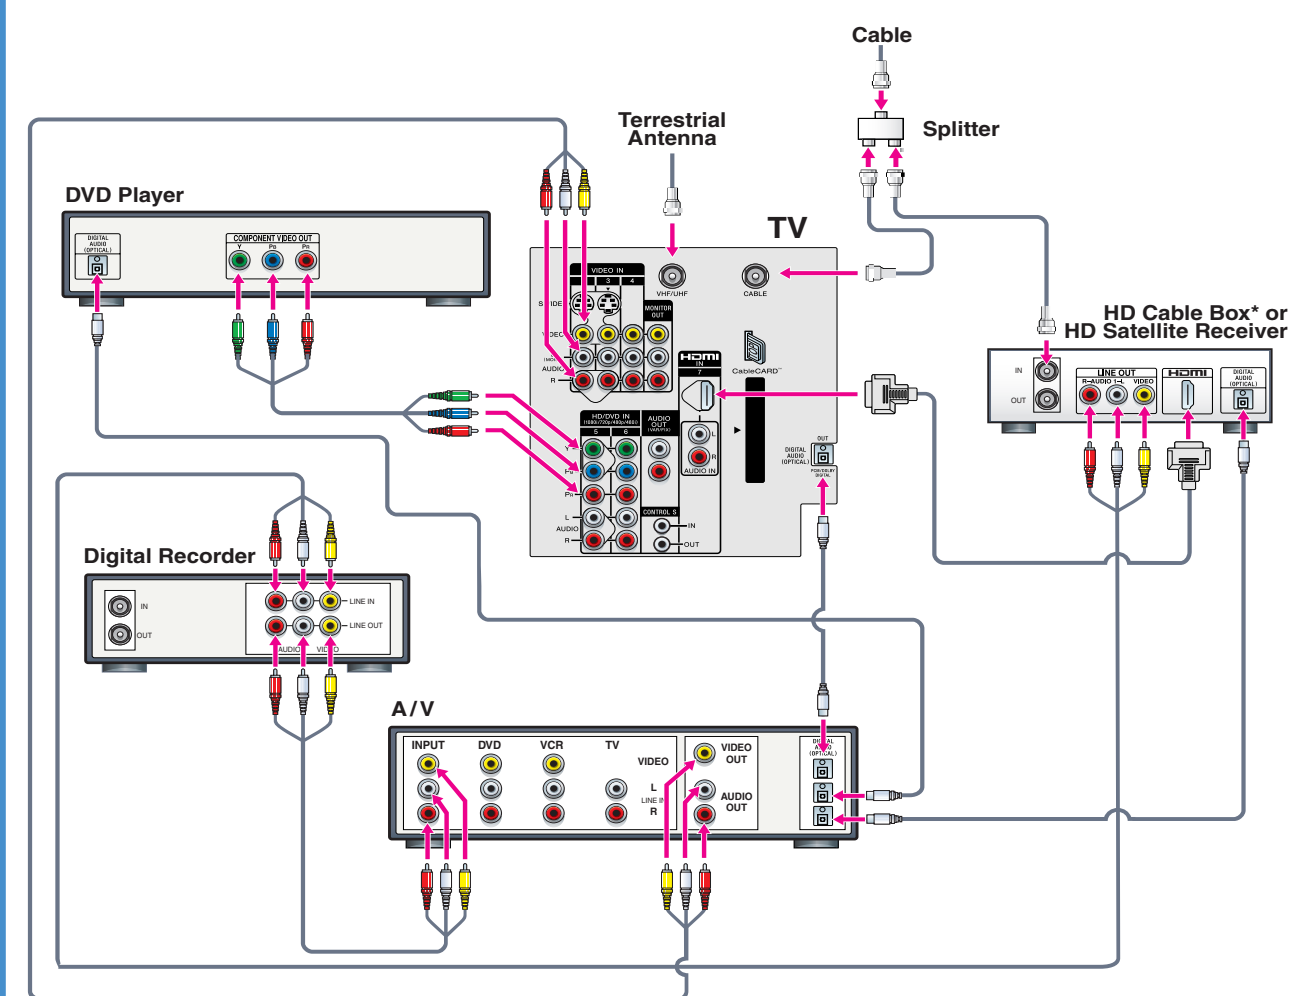


* Cable box may not be required if using CableCARD. See the Operating Instructions for details.

E

Use this diagram if you have:



Cables Required	
Splitter	1
Coaxial	5
Composite	1
Component	2
Audio	2

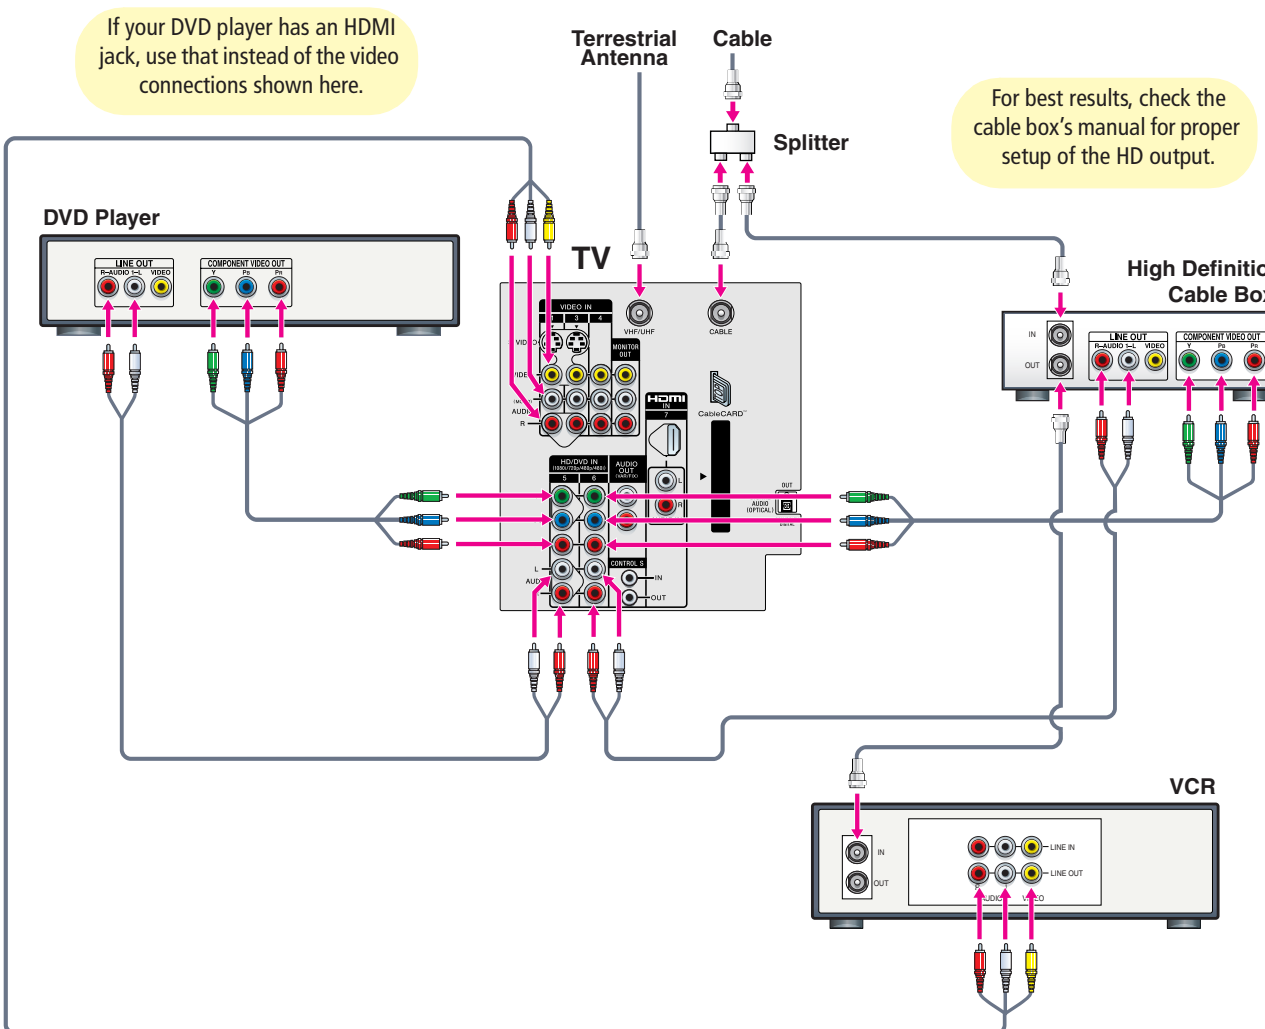


* Cable box may not be required if using CableCARD. See the Operating Instructions for details.

F

Use this diagram if you have:



Cables Required	
Splitter	1
Coaxial	5
Composite	2
Component	1
Video	1

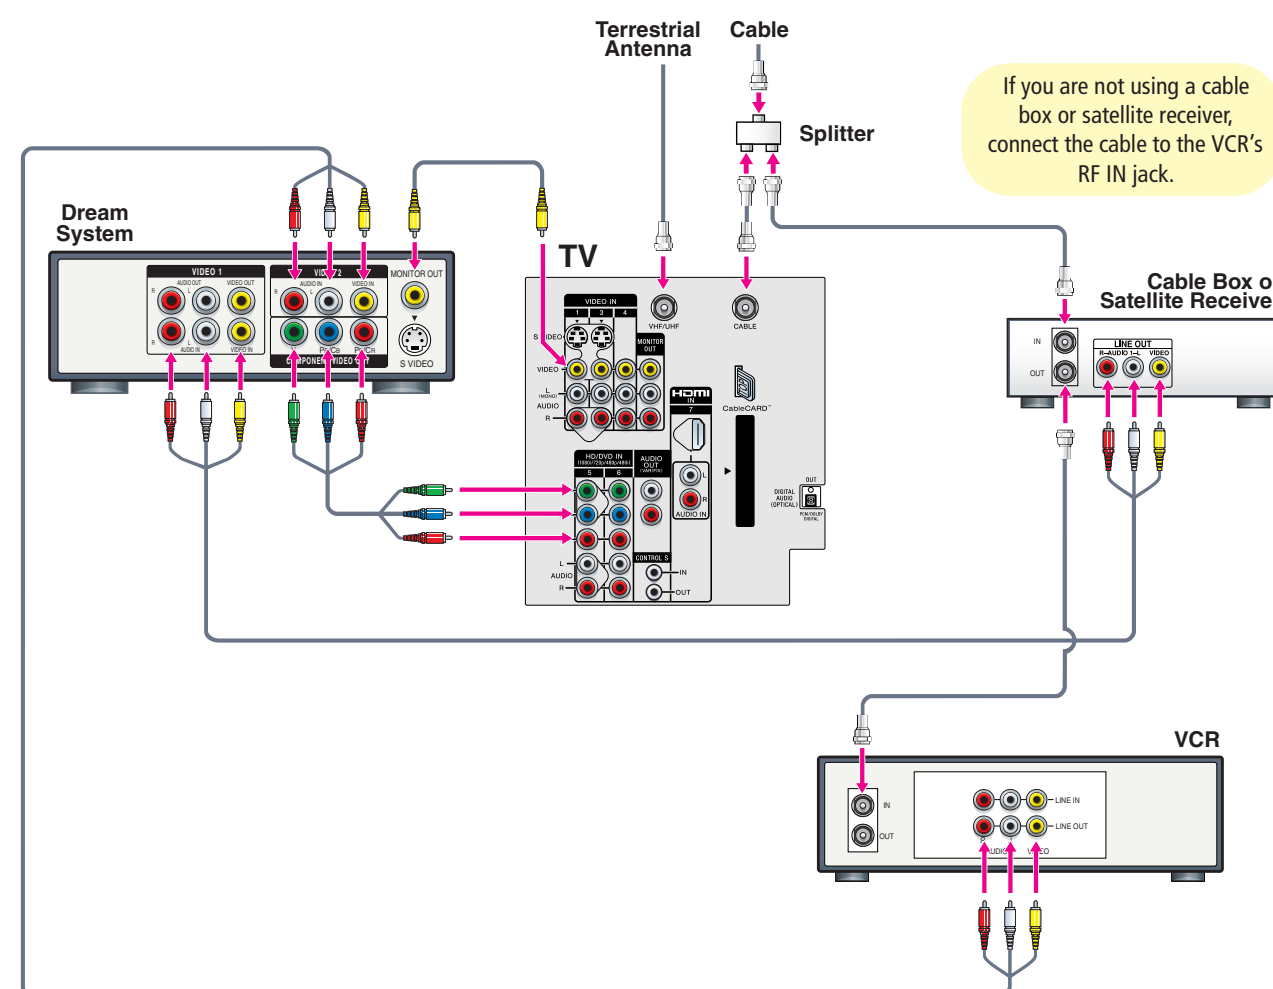

* Cable box may not be required if using CableCARD. See the Operating Instructions for details.