


Mac View Adapter

MAC VIEW "II"

Operating Instructions
 Mode d'emploi
 Bedienungsanleitung
 Manual de instrucciones
 Istruzioni per l'uso
 取扱説明書


English

How to remove the cap

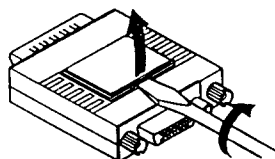

Dip switches

To Macintosh

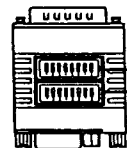

Dip switches (A)
 Dip switches (B)

To monitor

1: ON (up)
 2: OFF (down)

Apple's resolution switching software does not work with all Macintosh configurations. If you have trouble, try to select a resolution without Apple's resolution switching software.

If the problem persists, call your authorized Sony dealer from a location near your monitor.

Selecting resolution (without Apple's resolution switching software)

Mode	Resolution	Dip switch (A) 1 2 3 4 5 6 7 8	Dip switch (B) 1 2 3 4 5 6 7 8	Monitor
13"	640 x 480	1 1 0 0 1 0 0 0	0 0 0 0 0 0 0 1	SE series/SF series
16"	832 x 624	0 1 0 1 1 0 0 0		SE series/SF series
19"	1024 x 768	0 1 1 0 1 0 0 0		SE series/SF series
21"	1152 x 870	1 1 1 1 1 0 0 0		SE series

If you want to change resolutions:

- 1 Change dip switch settings.
- 2 Restart your computer.

If you get no picture from the above dip switch positions, try the following mode.

Dip switch (A) 1 2 3 4 5 6 7 8	Dip switch (B) 1 2 3 4 5 6 7 8
1 1 0 0 0 0 0 0	0 0 0 0 0 0 0 0

Selecting resolution (with Apple's resolution switching software)

Select the dip switch setting that corresponds to the series of your monitor.

Monitor	Dip switch (A) 1 2 3 4 5 6 7 8	Dip switch (B) 1 2 3 4 5 6 7 8	Selectable Mode
SE series	1 1 0 0 1 0 0 0	0 0 1 0 0 0 0 1	13"/16"/19"/21"
SF series	1 1 0 0 1 0 0 0	0 0 0 1 0 0 0 1	13"/16"/19"

If you want to change resolution:

- 1 Open the "Monitors" window in the "Control Panel".
- 2 Click the "Options" button and select the desired resolution.