

SONY

getting c·nnected

Source

Sight

Sound

MX-T2710 MX System

Welcome to Maximum TV™

You are about to experience the thrill and excitement of your new **Sony MX System!**


Before you begin your many hours of Maximum TV™ enjoyment, we will guide you through the setup and operation of your system in an easy to understand and straightforward approach. Think of your system as a combination of Source, Sight, and Sound. We have organized setup into these categories for simplification. **Source** are the components which provide your program material. These include Broadcast, Cable TV and Videotapes. **Sight** is your TV, the component you need to enjoy the Broadcast, Cable TV and Videotape Sources. **Sound** delivered by your Speaker System, is the key ingredient to providing the Maximum TV Surround Sound experience.

We thank you for your MX System purchase. If you have any questions, please call our Consumer Information Services Center at 1-800-222-SONY. Enough talk, let's get started.

Positioning

Stop and take a look at your room. Before unpacking your MX system, you'll want to know where everything will be placed. Look at the diagram below, and position your furniture so that you will be able to sit in front of the TV. The TV stand should have enough room on either side to accommodate your MX System.

A rough rule of thumb is to position the speakers relative to the seating position so that a triangle is formed. Best viewing and listening is achieved directly in front of the TV. The rear speakers should be placed along the rear walls.

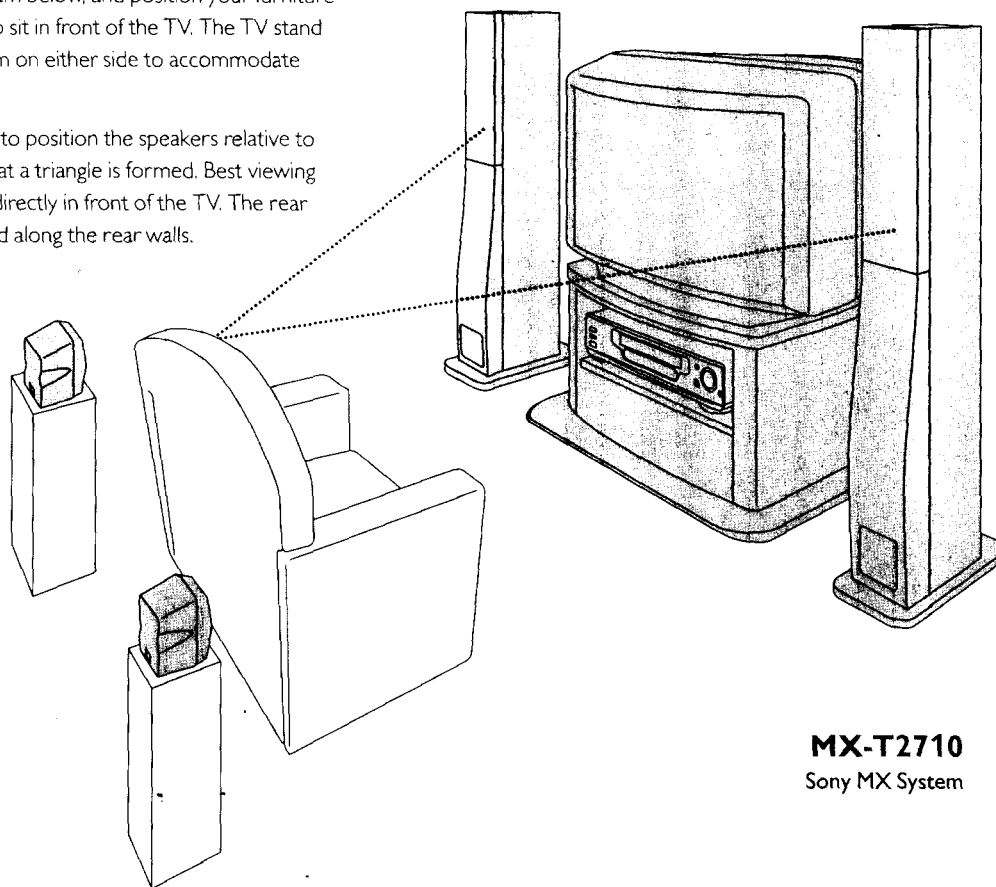



MX-T2710
Sony MX System

Your Sony Components

All GREY items are essential for your system.
WHITE items can be put away for use at your discretion.


SLV-640HF/AV

 VHS Hi-Fi Stereo
Video cassette Recorder

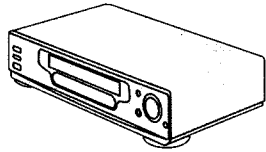


AC power cord

Getting Connected
Guide

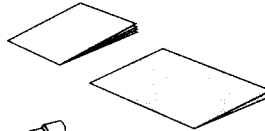

Sony brand DSS
brochure

 

75 ohm cable



A/V cable




Remote Control
(RMT-V154)



Size AA batteries



SU-279/AV

Audio/Video Cabinet

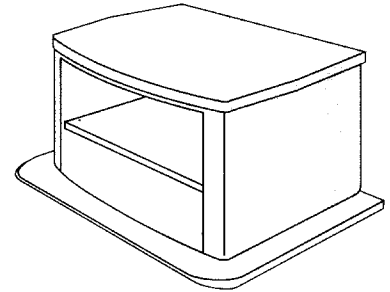


KV-27V15/AV

 27" Trinitron®
Stereo Color TV

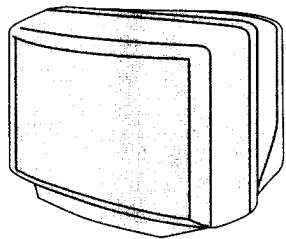

Cable Mouse®
(RM-CM101)
controller

 


Remote Control
(RM-Y121)

Size AA battery

Rear speaker
connecting cord
(10 m)



 Remote Control
(RM-VA1)




Size AA batteries




SA-VA1/AV

MAXTV™ Surround System

Front L/R speakers

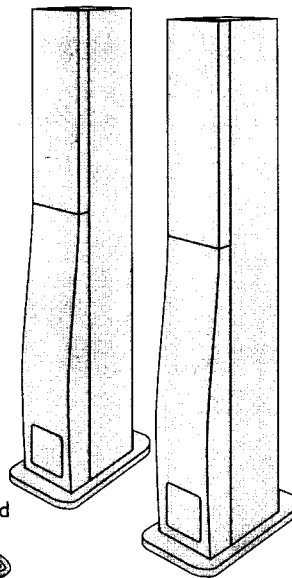

Rear L/R speakers

 

Audio connecting cord




Front speaker connecting cord
(3.5 m)

Cabinet Set-up



SEE CABINET DETAILS IN SU279/AV MANUAL.


- 1 Place the shelf pegs in the top holes.
- 2 Feed antenna/cable input from wall through the back panel of the cabinet.

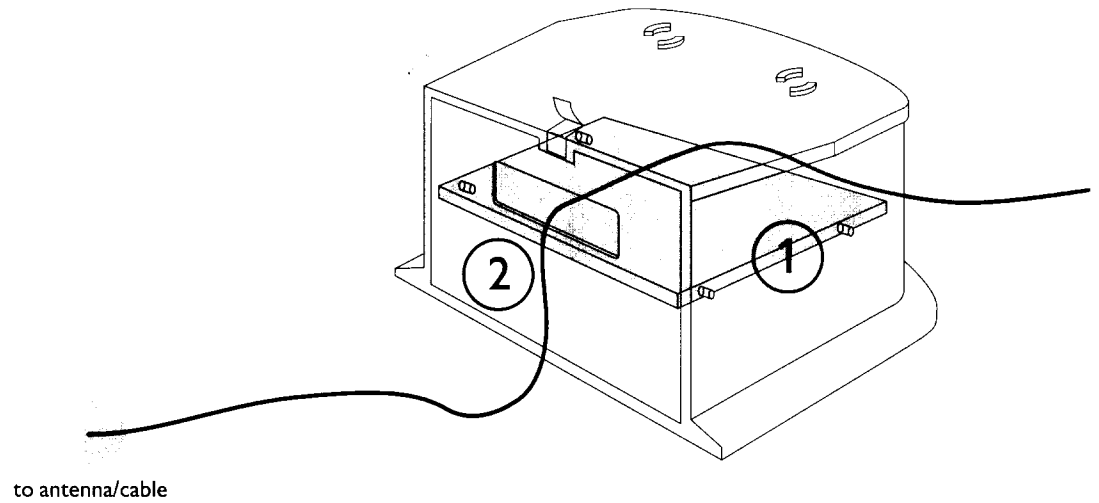

Source

VCR

VHS Hi-Fi Stereo Video Cassette Recorder
(SLV-640HF/AV)

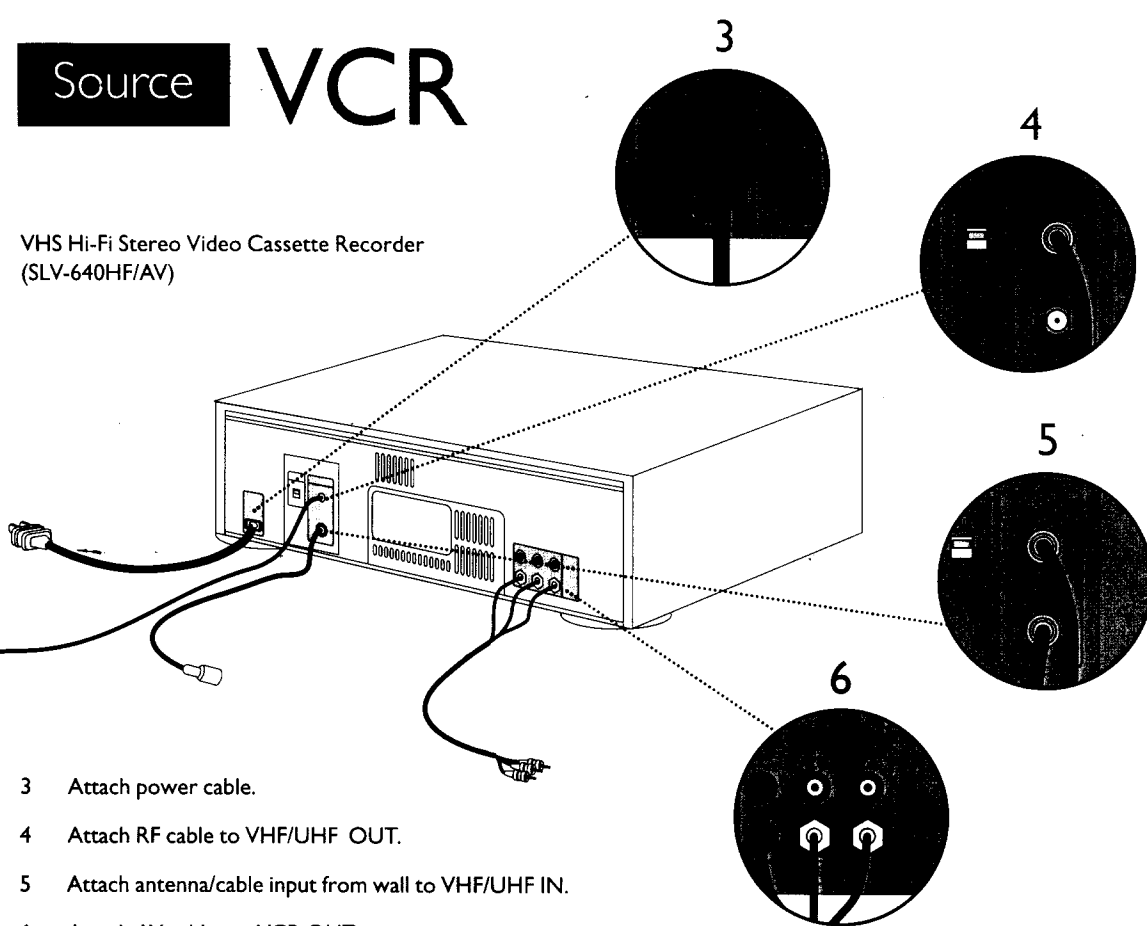


- 3 Attach power cable.
- 4 Attach RF cable to VHF/UHF OUT.
- 5 Attach antenna/cable input from wall to VHF/UHF IN.
- 6 Attach AV cables to VCR OUT.



PLACE VCR IN CABINET, FEED CABLES THROUGH OPENING.

Sight TV

- 1 Make sure to locate TV set on notches on the top of the cabinet.
- 2 Secure TV with strap.

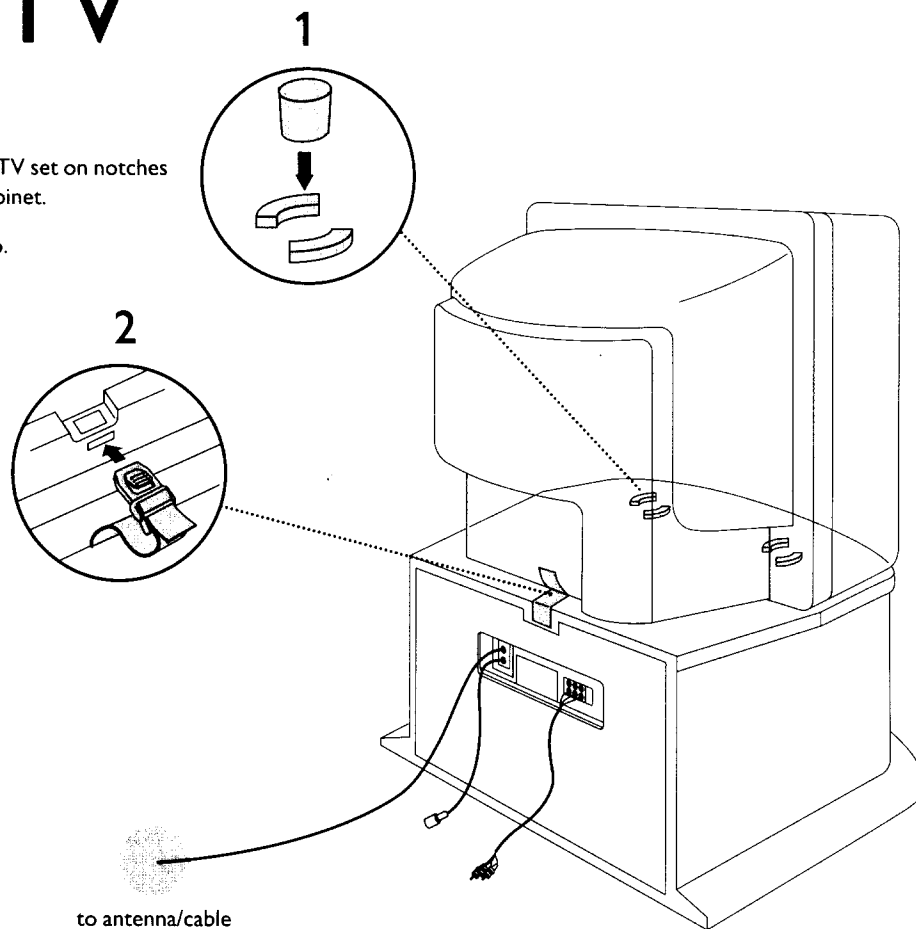


3 Connect VCR AV OUT cables to VIDEO1 IN on TV.

4 Connect RF OUT from VCR to TV VHF/UHF IN.





DO NOT PLUG TV OR VCR INTO ELECTRICAL OUTLET YET.

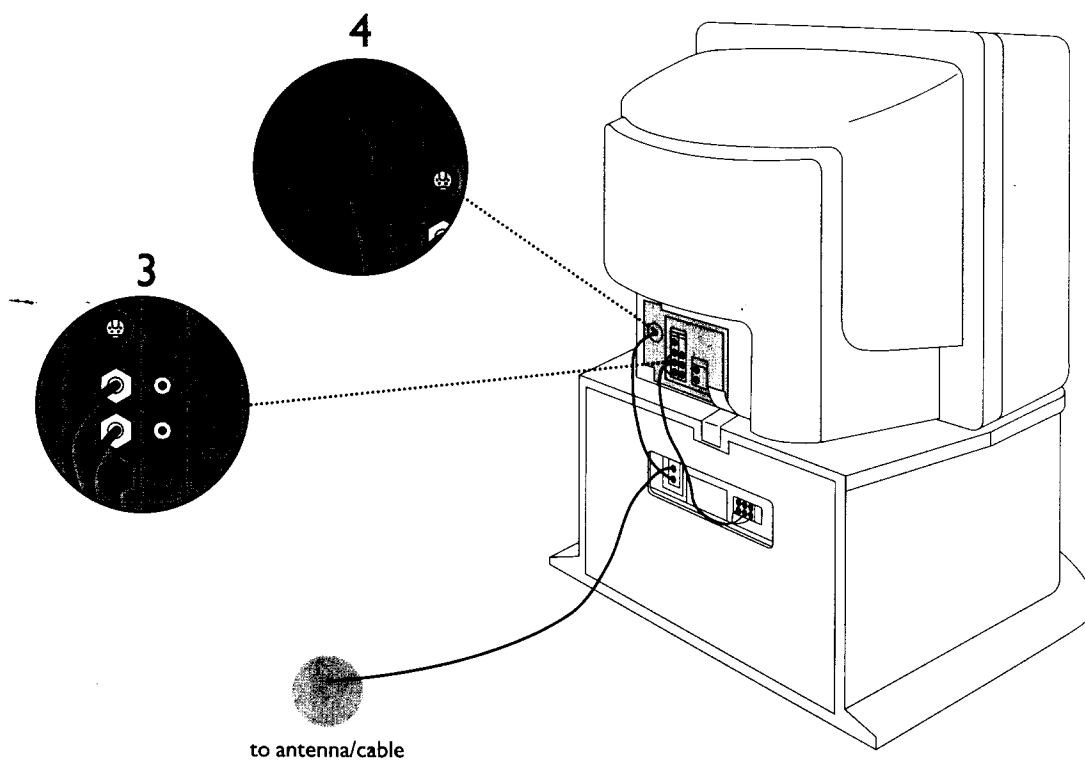

Sound


Speakers

- 1 Locate front speakers as shown.
- 2 Connect AUDIO OUT from TV to INPUT1 on speakers.
- 3 Connect front speaker connection cable from left to right speaker.
- 4 Mount rear speakers on a wall, hang from ceiling, or place on a table or a shelf.
- 5 Connect speaker wires from rear speakers to left front speaker (make sure + and - connections are correct).

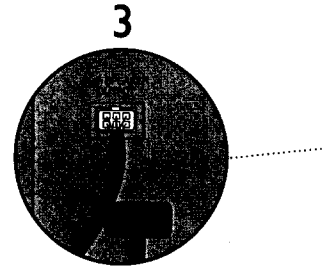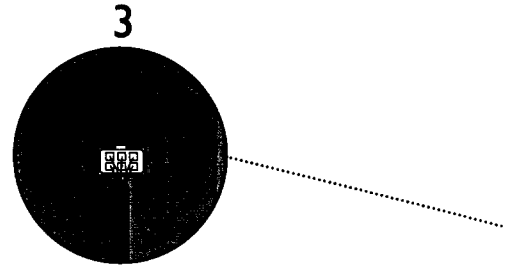


And finish the Set-Up




- 6 Plug speaker in to electrical outlet.
- 7 Plug VCR in to electrical outlet.
- 8 Plug TV in to electrical outlet.

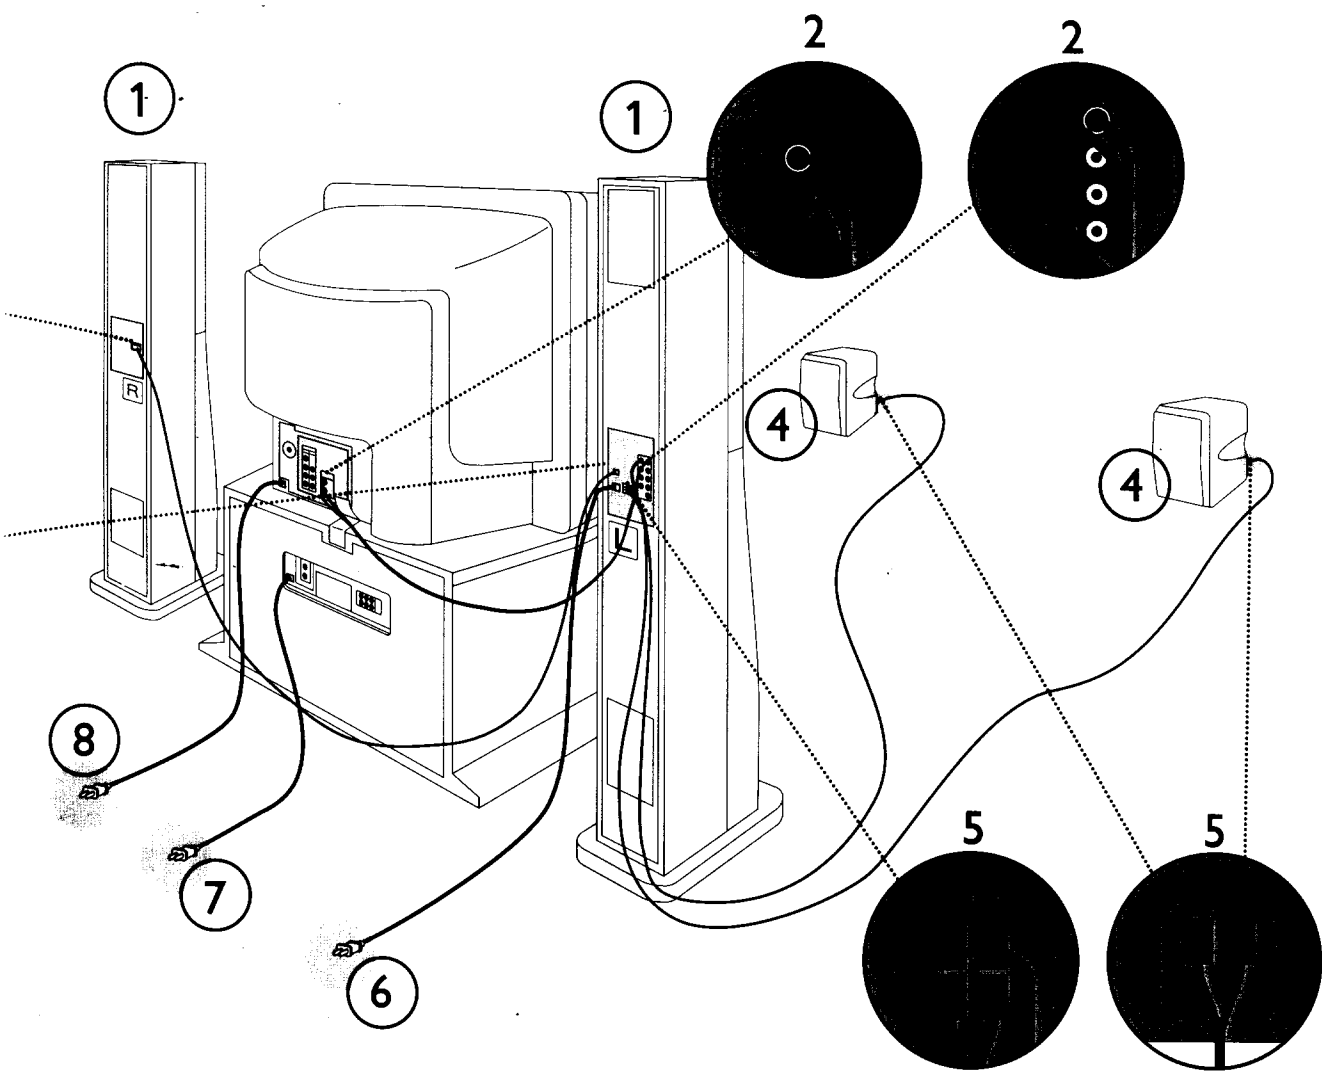


Sound Set-up

 Please check your manuals for detailed instructions.

- 1 Turn your speakers on by pressing power on the SA-VA1/AV front control panel (Left speaker).
- 2 Set INPUT 1 on the SA-VA1/AV front control panel.

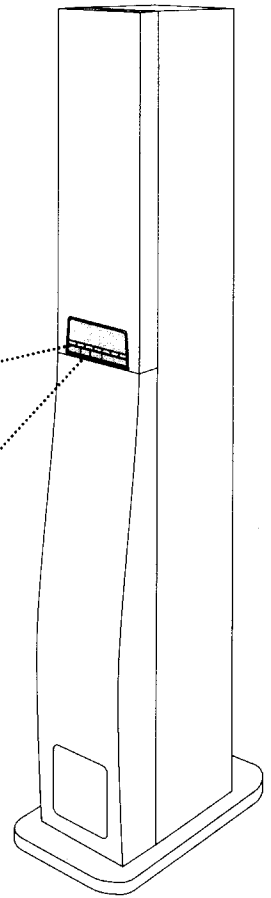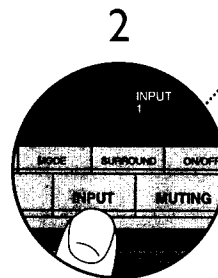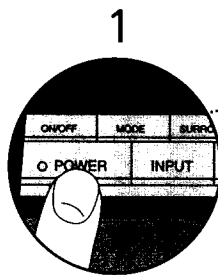

- 3 On the speaker remote (RM-VA1), press VOLUME +/- until left speaker control panel reads 25.
- 4 Press Pro Logic ON/OFF on the remote. Confirm on the speaker display panel.
- 5 Press TEST TONE.
- 6 Press CENTER LEVEL +/- to balance front left and right speakers.
- 7 Press REAR LEVEL +/- to balance the rear speaker level to the front speaker level.
- 8 Turn off TEST TONE.

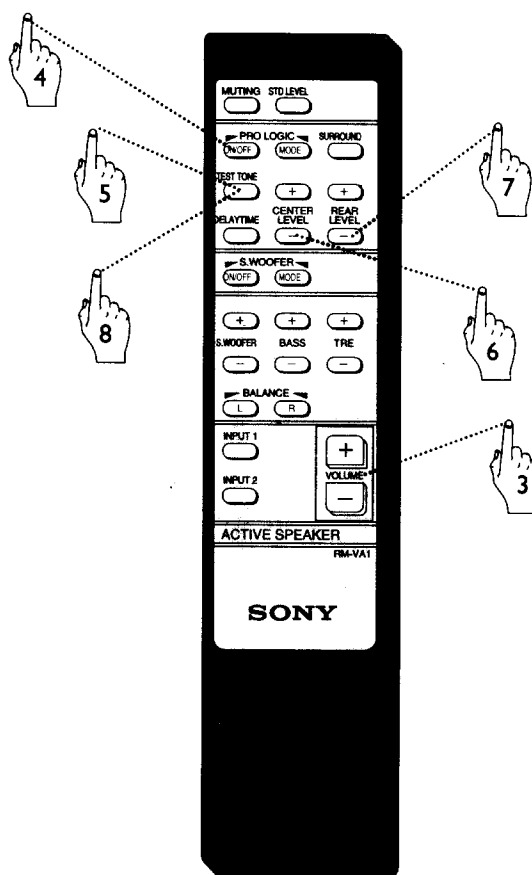

Watching TV

- 1 Set TV/VTR slide switch to TV on your remote (RMT-V154C).
- 2 Press the power button.
- 3 Select channel.
- 4 Adjust volume on remote.



DO NOT READJUST SA-VA1 SPEAKER VOLUME.


Setting your channel presets



Please refer to page 10 of your TV manual for details.




Please refer to page 18 of your VCR manual for details.

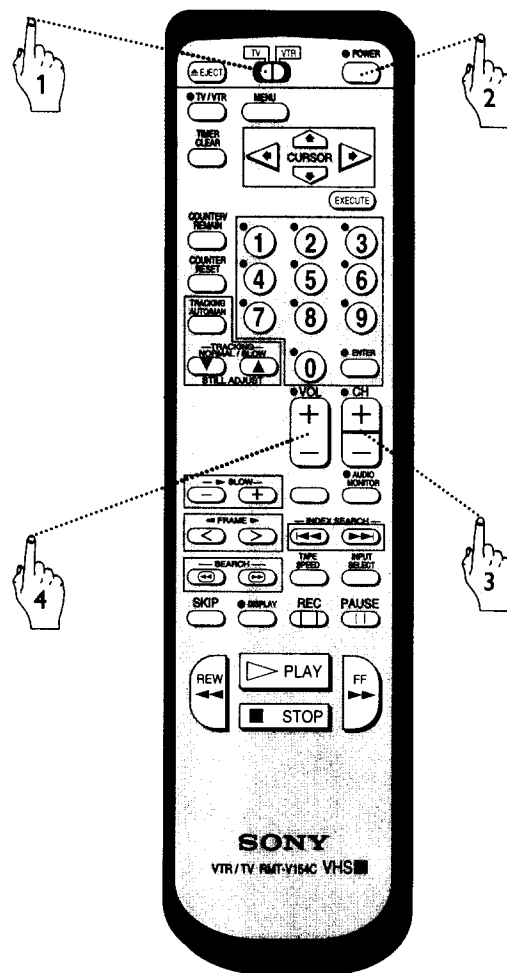




Watching a Movie

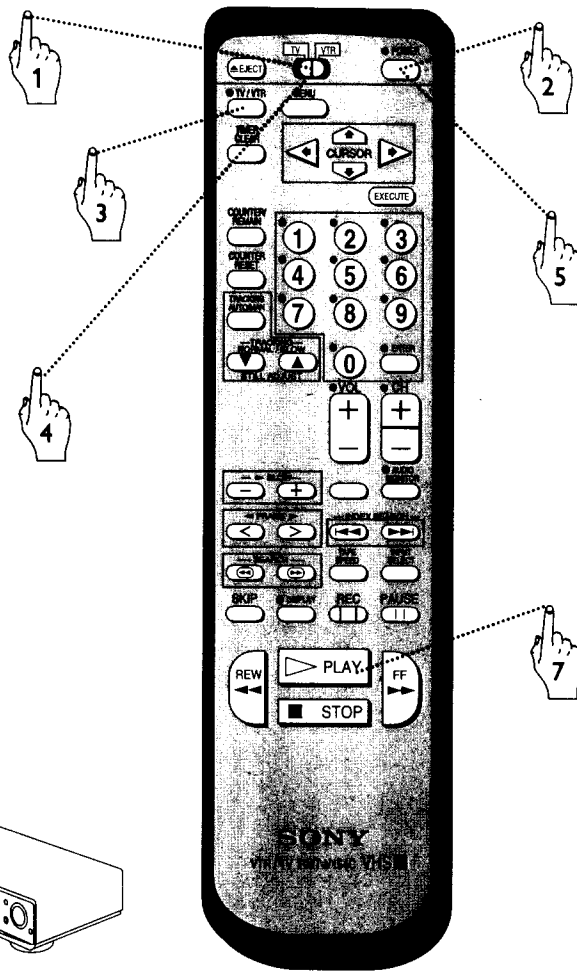- 1 Set TV/VCR slide switch to TV on your remote (RMT-V154C).
- 2 Press the power button.
- 3 Press TV/VTR button to display VIDEO 1 on TV screen.
- 4 Press TV/VCR slide to select VTR.
- 5 Press the power button.
- 6 Insert movie into VCR.
- 7 Press play on remote.



Setting your TV and VCR clock

-  Please refer to page 10 of your TV manual for details.
-  Please refer to page 18 of your VCR manual for details.

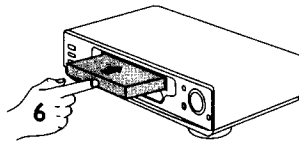

©1995 Sony Electronics Inc. Reproductions in whole or in part without written permission is prohibited.
All rights reserved. Sony, Cable Mouse, MaxTV, Remote Commander and Trinitron are trademarks of Sony.