

SONY



GETTING CONNECTED

MAXIMUM TELEVISION™

MXT-3215 MXT System

Welcome to Maximum TV™


You are about to experience the thrill and excitement of your new **Sony MXT System!** Before you begin your many hours of Maximum TV™ enjoyment, we will guide you through the setup and operation of your system in an easy to understand and straight-forward approach. Think of your system as a combination of Source, Sight, and Sound. We have organized setup into these categories for simplification. **Source** are the components which provide your program material. These include Broadcast, Cable TV and Videotapes. **Sight** is your TV, the component you need to enjoy the Broadcast, Cable TV and Videotape Sources. **Sound** delivered by your SAVA Speaker System, is the key ingredient to providing the Maximum TV Surround Sound experience.

We thank you for your MXT System purchase. If you have any questions, please call our Consumer Information Services Center at 1-800-222-SONY. Enough talk, let's get started.

Positioning

Stop and take a look at your room. Before unpacking your MXT system, you'll want to know where everything will be placed. Look at the diagram below, and position your furniture so that you will be able to sit in front of the TV. The TV stand should have enough room on either side to accommodate your MXT System.

A rough rule of thumb is to position the speakers relative to the seating position so that a triangle is formed. Best viewing and listening is achieved directly in front of the TV. The rear speakers should be placed along the rear walls.

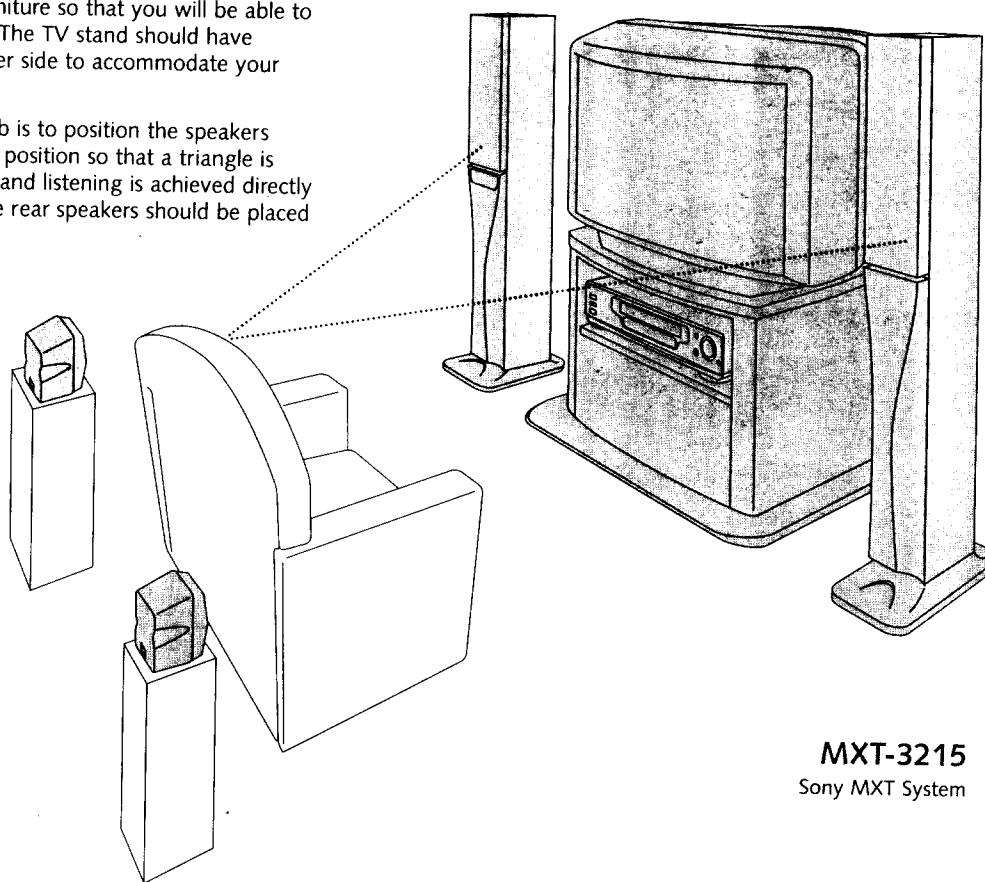



MXT-3215
Sony MXT System

Your Sony Components


All GREY items are essential for your system.
WHITE items can be put away for use at your discretion.

SLV-765HF

 VHS Hi-Fi Stereo
Video cassette Recorder

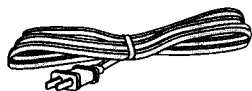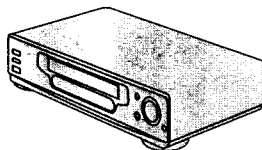

AC power cord

 

75 ohm cable



A/V cable




Remote Control
(RMT-V184A)





Size AA batteries

SU-322MX

Audio/Video Cabinet

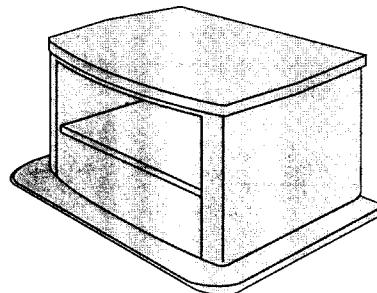

KV-32V25
32" Trinitron®
Stereo Color TV

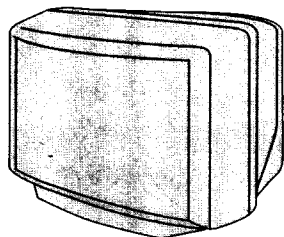 


Remote Control
(RM-Y137)

Size AA batteries




SA-VA35
MaxTV™ Surround System

Front L/R speakers

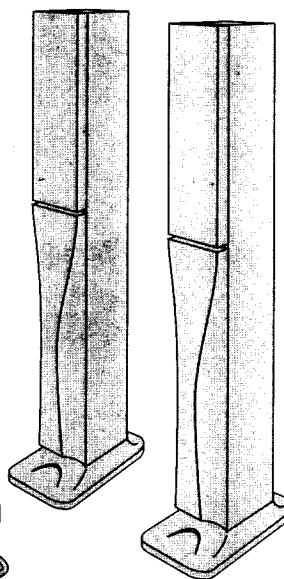

Rear L/R speakers

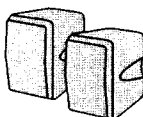 


Rear speaker
connecting cord
(10 m)



Audio connecting cord



 Remote Control
(RM-J35)

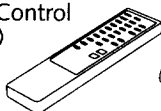

Size AA batteries




Front speaker connecting cord

Cabinet Set-up

 SEE CABINET ASSEMBLY DETAILS IN SU322MX MANUAL.


- 1 Place the shelf pegs in the top holes.
- 2 Feed antenna/cable input from wall through the back panel of the cabinet.

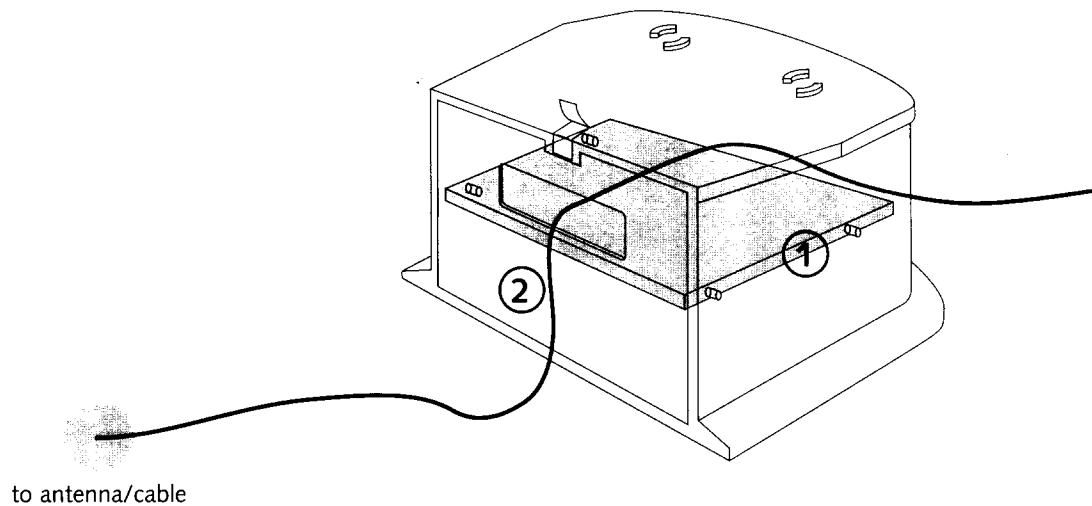

Source

VCR

VHS Hi-Fi Stereo Video Cassette Recorder
(SLV-765HF)

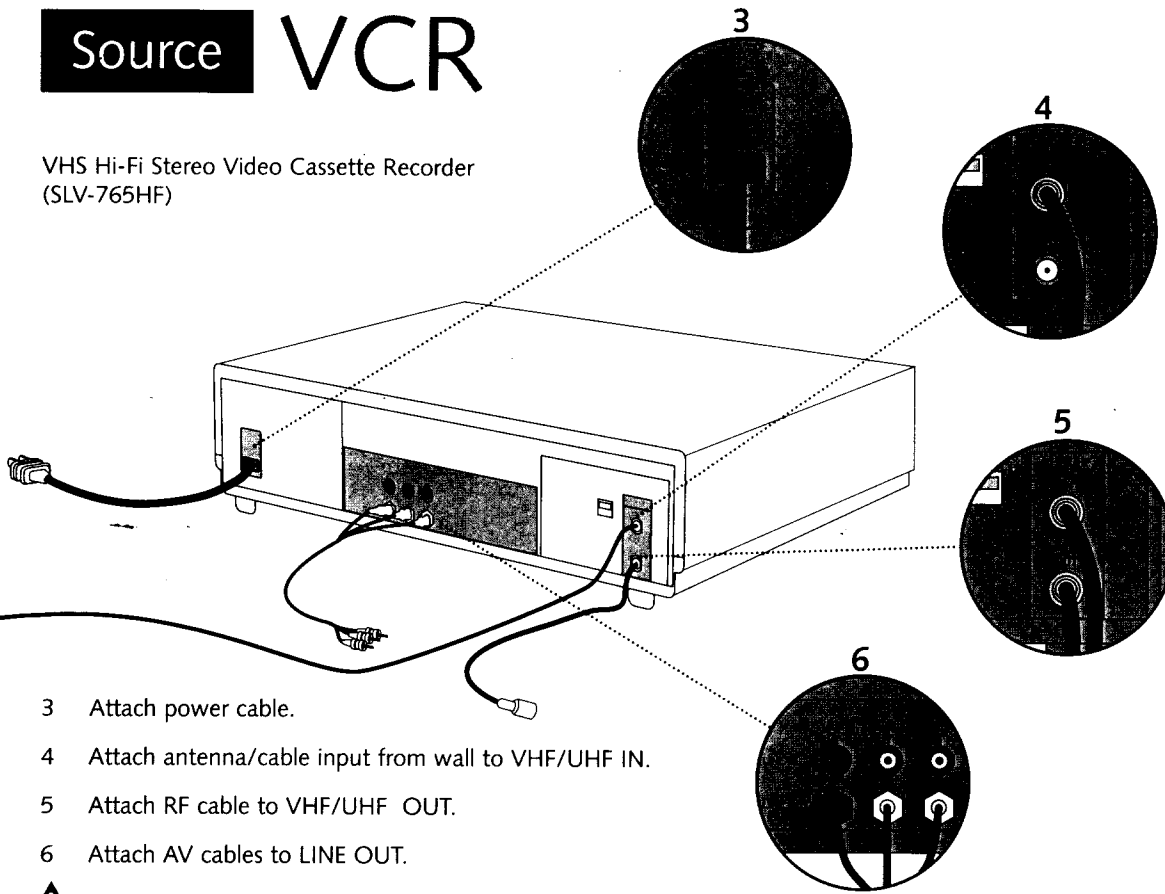


- 3 Attach power cable.
- 4 Attach antenna/cable input from wall to VHF/UHF IN.
- 5 Attach RF cable to VHF/UHF OUT.
- 6 Attach AV cables to LINE OUT.

! PLACE VCR IN CABINET, FEED CABLES THROUGH OPENING.


Sight TV

- 1 Make sure to locate TV set on notches on the top of the cabinet.
- 2 Secure TV with strap.

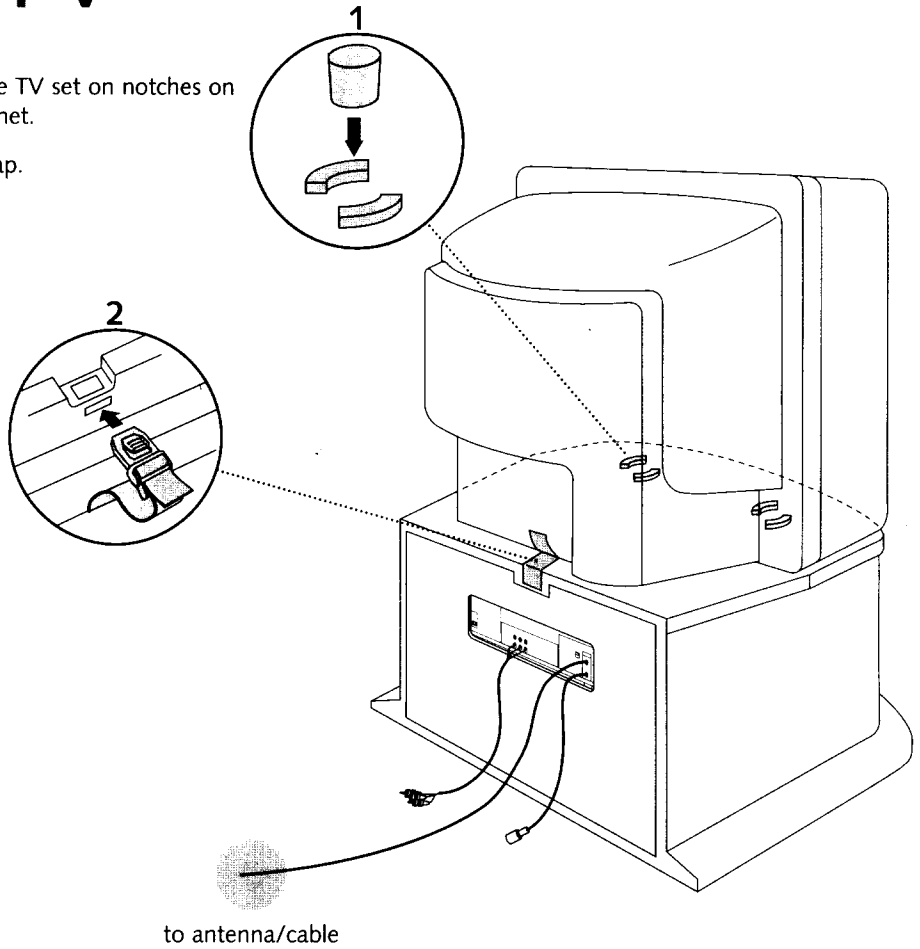



- 3 Connect VCR LINE OUT cables to VIDEO IN 1 on TV.
- 4 Connect VHF/UHF OUT from VCR to TV VHF/UHF IN.

 DO NOT PLUG TV OR VCR INTO ELECTRICAL OUTLET YET.

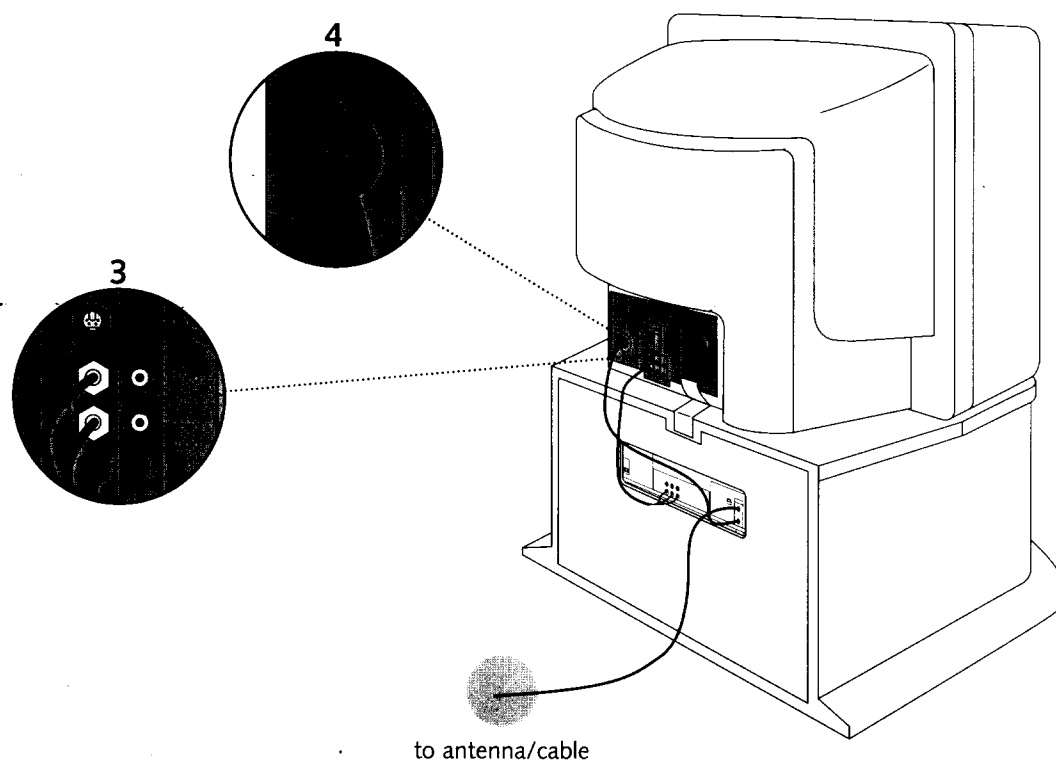


Sound Speakers

- 1 Locate front speakers as shown.
- 2 Connect AUDIO OUT from TV to LINE1 IN on left speaker.
- 3 Connect front speaker connection cable from left to right speaker.
- 4 Mount rear speakers on a wall, hang from ceiling, or place on a table or a shelf.
- 5 Connect speaker wires from rear speakers to left front speaker (make sure + and - connections are correct).

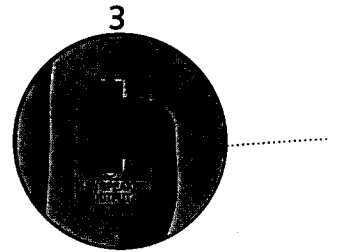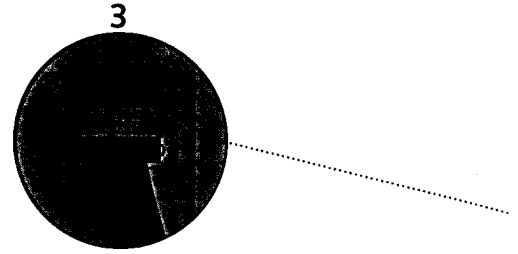


And finish the Set-Up


- 6 Plug speaker in to electrical outlet.
- 7 Plug VCR in to electrical outlet.
- 8 Plug TV in to electrical outlet.

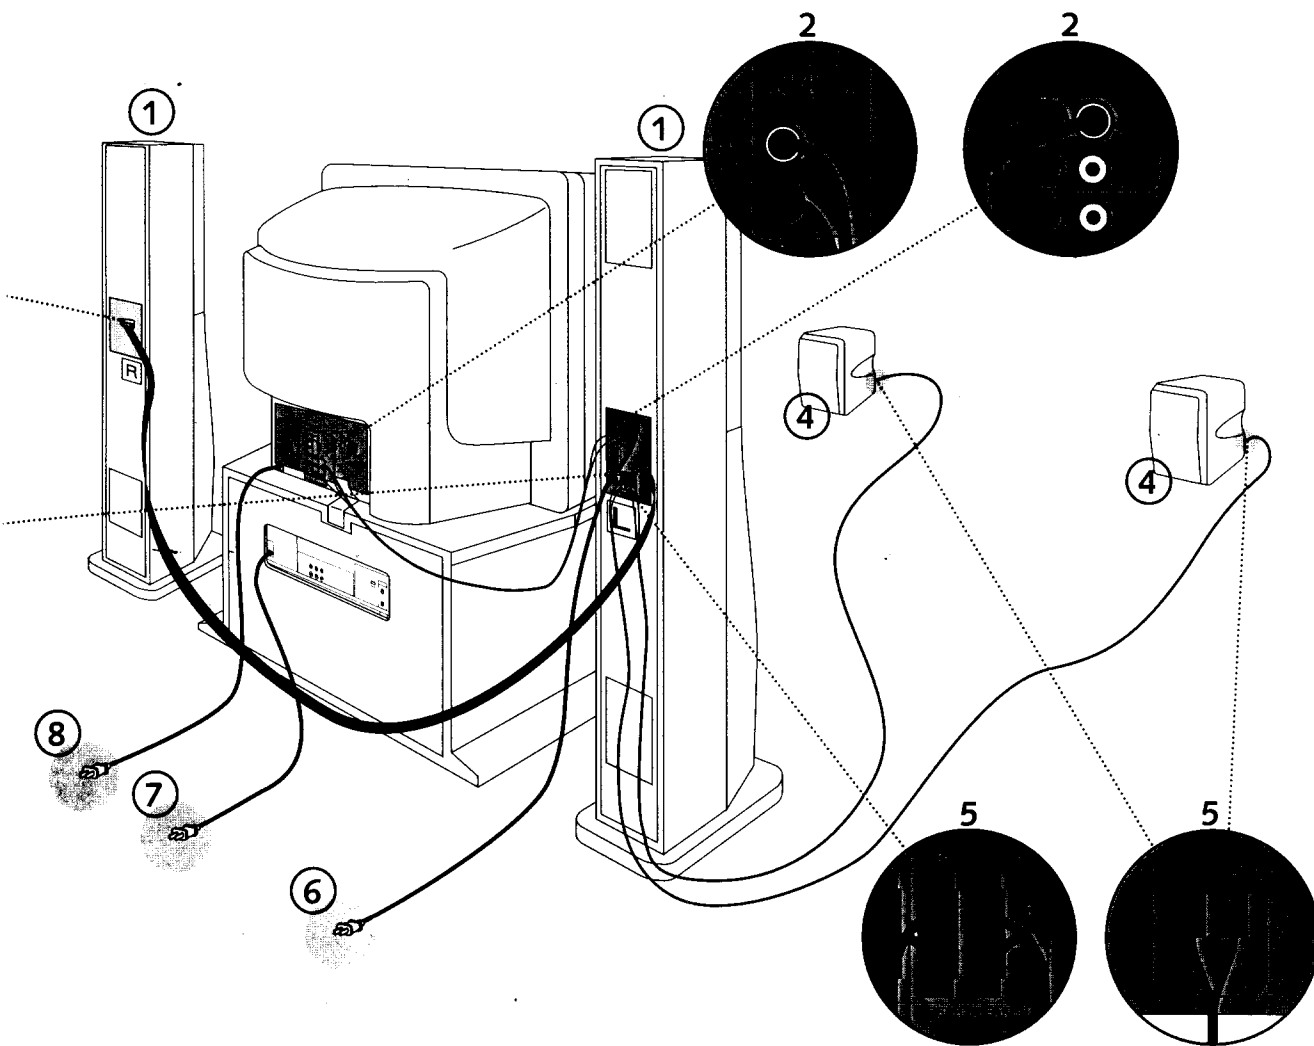


Sound Set-up

 Please check your manuals for detailed instructions.


- 1 Turn your speakers on by pressing power on the SA-VA35 front control panel (Left speaker).
- 2 Set INPUT 1 on the SA-VA35 front control panel.
- 3 On the front control panel, press MASTER VOL +/- until display panel reads 25.
- 4 Press SURROUND on the front panel to display DOLBY SUR on the display panel.

 Please refer to your SAVA manual to balance center and rear speaker levels.

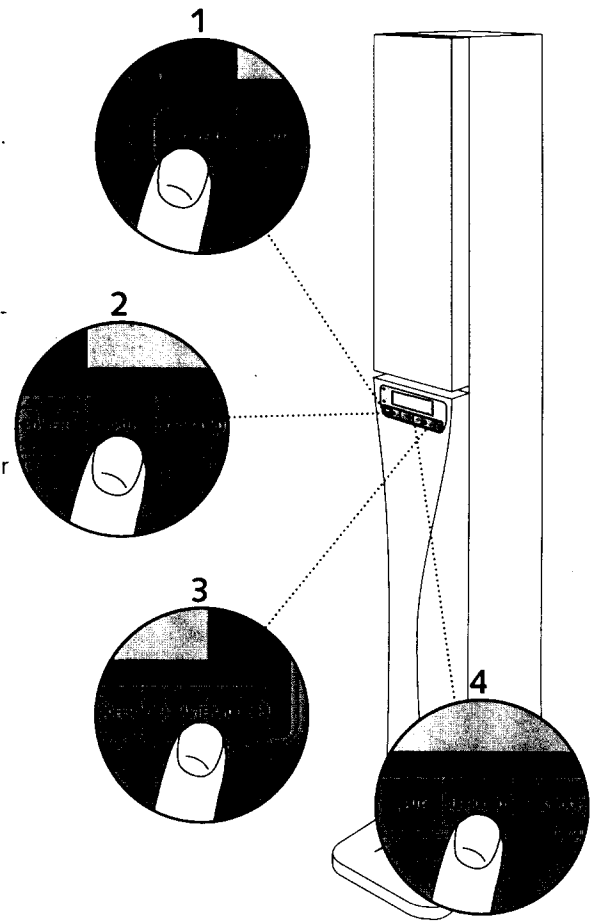




Watching TV

- 1 Set TV/VTR slide switch to TV on your remote (RMT-V184A).
- 2 Press the power button.
- 3 Select channel on remote.
- 4 Adjust volume on remote.

 DO NOT READJUST SA-VA35 SPEAKER VOLUME.


Setting your channel presets

-  Please refer to your TV manual for details.
-  Please refer to your VCR manual for details.

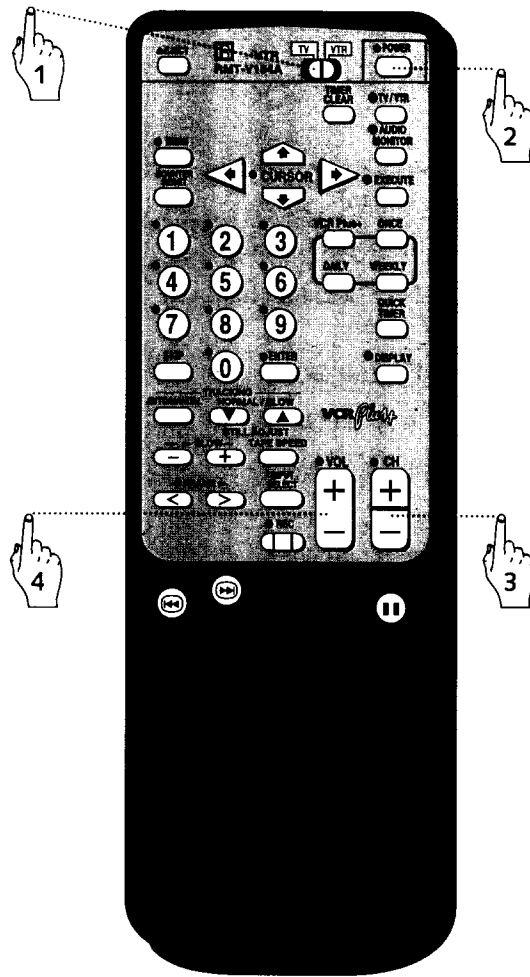




Watching a Movie

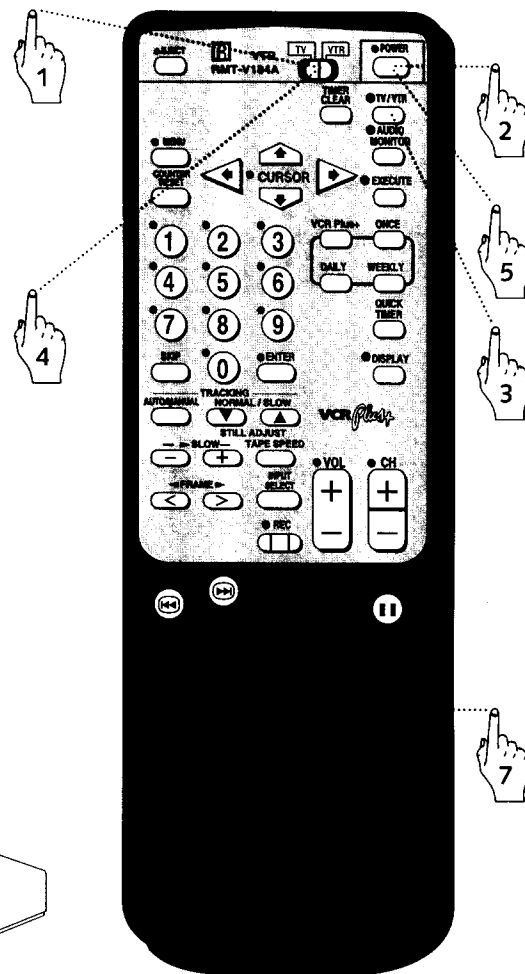- 1 Set TV/VCR slide switch to TV on your remote (RMT-V184A).
- 2 Press the power button.
- 3 Press TV/VTR button to display VIDEO 1 on TV screen.
- 4 Press TV/VCR slide to select VTR.
- 5 Press the power button.
- 6 Insert movie into VCR.
- 7 Press play on remote.



Setting your TV and VCR clock

-  Please refer to your TV manual for details.
-  Please refer to your VCR manual for details.

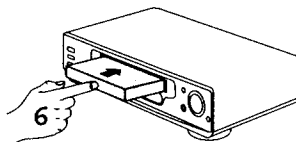



SONY.

Sony Electronics Inc.
1 Sony Drive
Park Ridge, New Jersey 07656

<http://www.sony.com>

©1996 Sony Electronics Inc. Reproductions in whole or in part without written permission is prohibited. All rights reserved. Sony, Maxium Television, Maxium TV, MaxTV, Remote Commander and Trinitron are trademarks of Sony.

C# 8232

Printed in USA 6/96