

SONY



GETTING CONNECTED

MAXIMUM TELEVISION™

MXT-3235 MXT System

Welcome to Maximum TV™


You are about to experience the thrill and excitement of your new **Sony MXT System!** Before you begin your many hours of Maximum TV™ enjoyment, we will guide you through the setup and operation of your system in an easy to understand and straight-forward approach. Think of your system as a combination of Source, Sight, and Sound. We have organized setup into these categories for simplification. **Source** are the components which provide your program material. These include Broadcast, Cable TV and Videotapes. **Sight** is your TV, the component you need to enjoy the Broadcast, Cable TV and Videotape Sources. **Sound** delivered by your SAVA Speaker System, is the key ingredient to providing the Maximum TV Surround Sound experience.

We thank you for your MXT System purchase. If you have any questions, please call our Consumer Information Services Center at 1-800-222-SONY. Enough talk, let's get started.

Positioning

Stop and take a look at your room. Before unpacking your MXT system, you'll want to know where everything will be placed. Look at the diagram below, and position your furniture so that you will be able to sit in front of the TV. The TV stand should have enough room on either side to accommodate your MXT System.

A rough rule of thumb is to position the speakers relative to the seating position so that a triangle is formed. Best viewing and listening is achieved directly in front of the TV. The rear speakers should be placed along the rear walls.

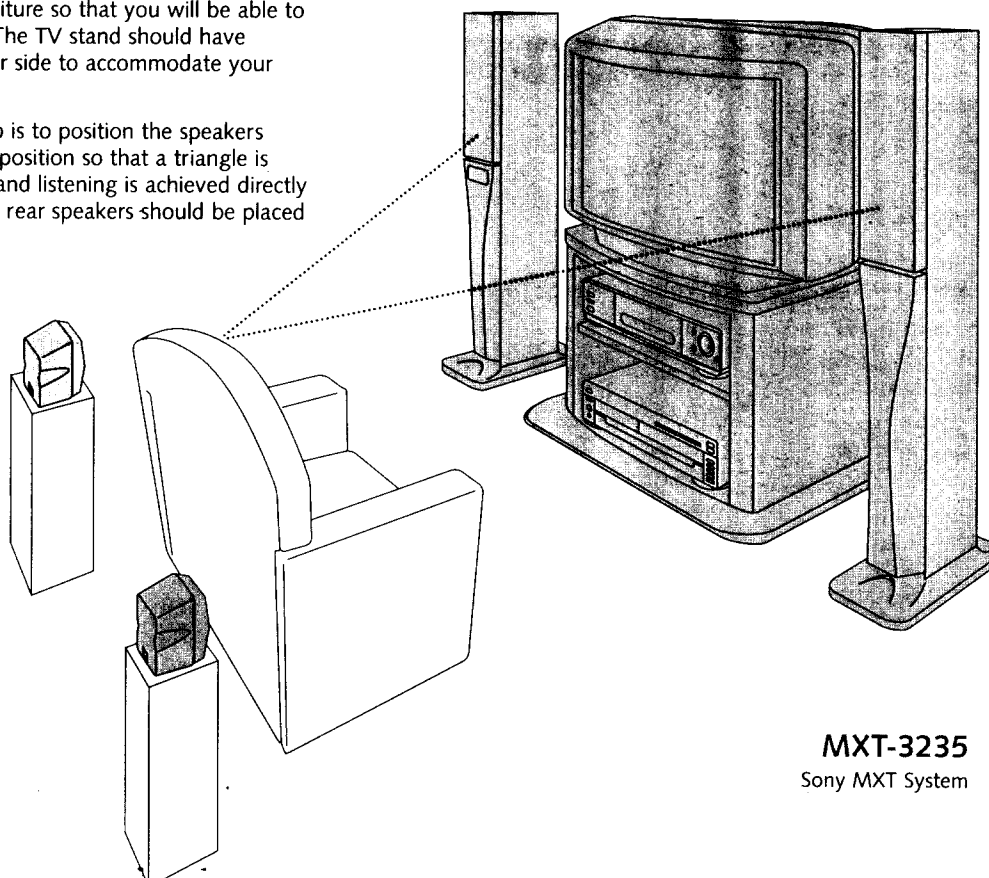


MXT-3235
Sony MXT System

Your Sony Components

All GREY items are essential for your system.
WHITE items can be put away for use at your discretion.

SLV-765HF

VHS Hi-Fi Stereo
Video cassette Recorder

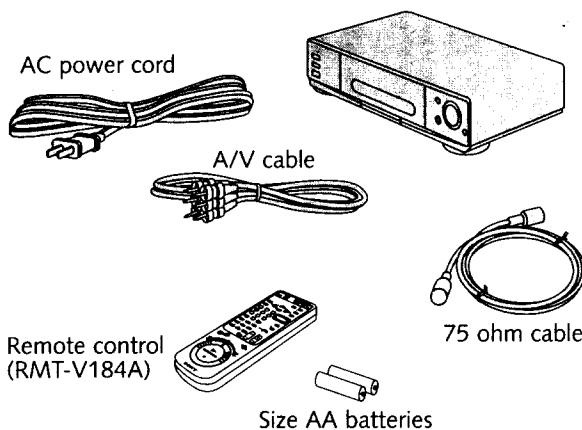

AC power cord

A/V cable


75 ohm cable

Remote control
(RMT-V184A)

Size AA batteries

KV-32V25

32" Trinitron® Stereo Color TV

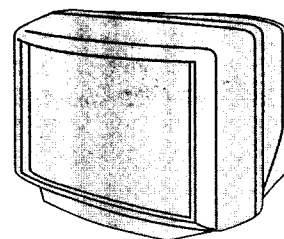


Remote control
(RM-Y137)



Size AA batteries


SU-322MX

Audio/Video Cabinet

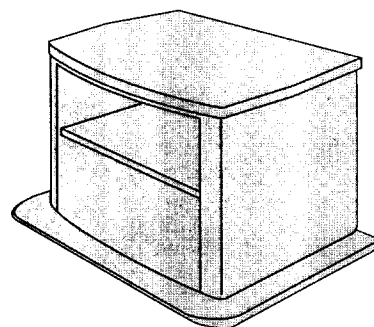

HCD-VA550


Audio Source

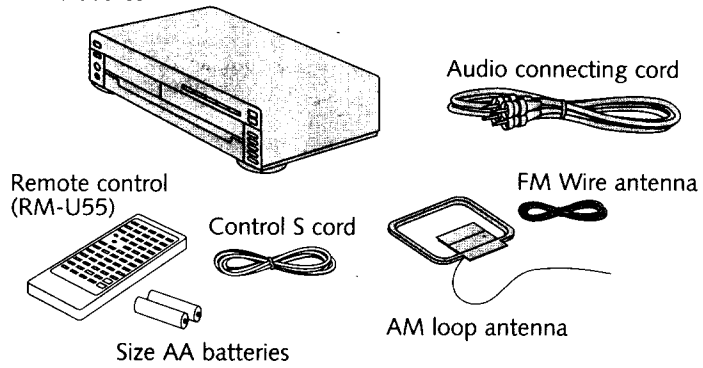

SA-VA55

MaxTV™ Surround System


Front L/R speakers

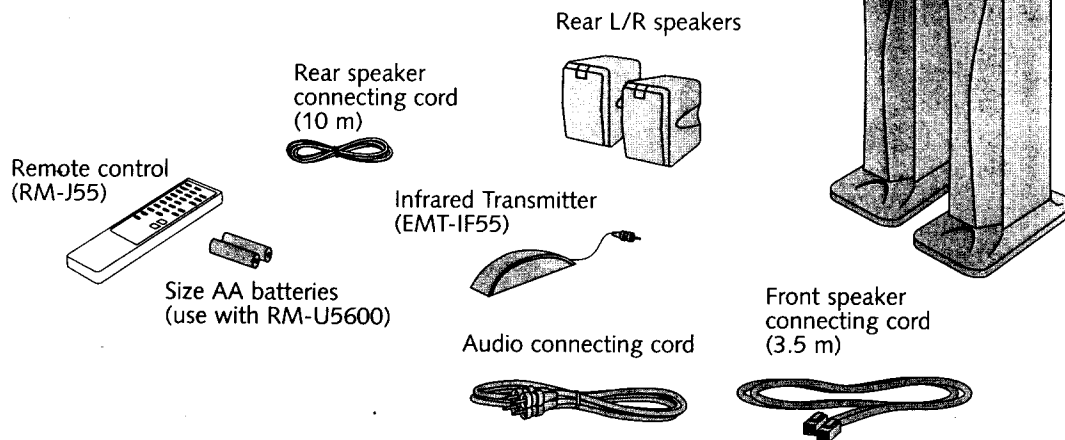

Cabinet Set-up


 SEE CABINET ASSEMBLY DETAILS IN SU322MX MANUAL.

- 1 Place the shelf pegs in the top holes.
- 2 Feed antenna/cable input from wall through the back panel of the cabinet.

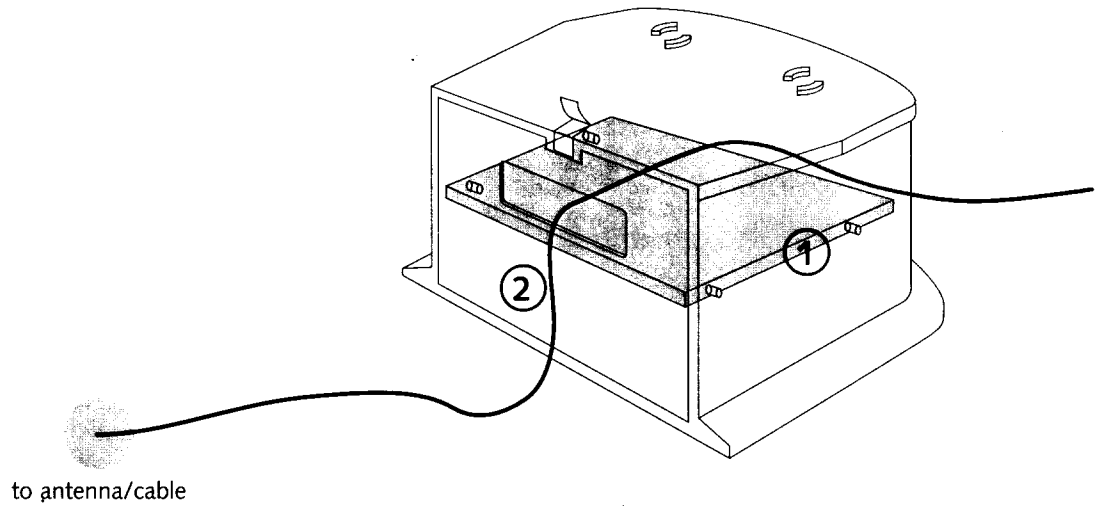

Source VCR

VHS Hi-Fi Stereo Video Cassette Recorder
(SLV-765HF)

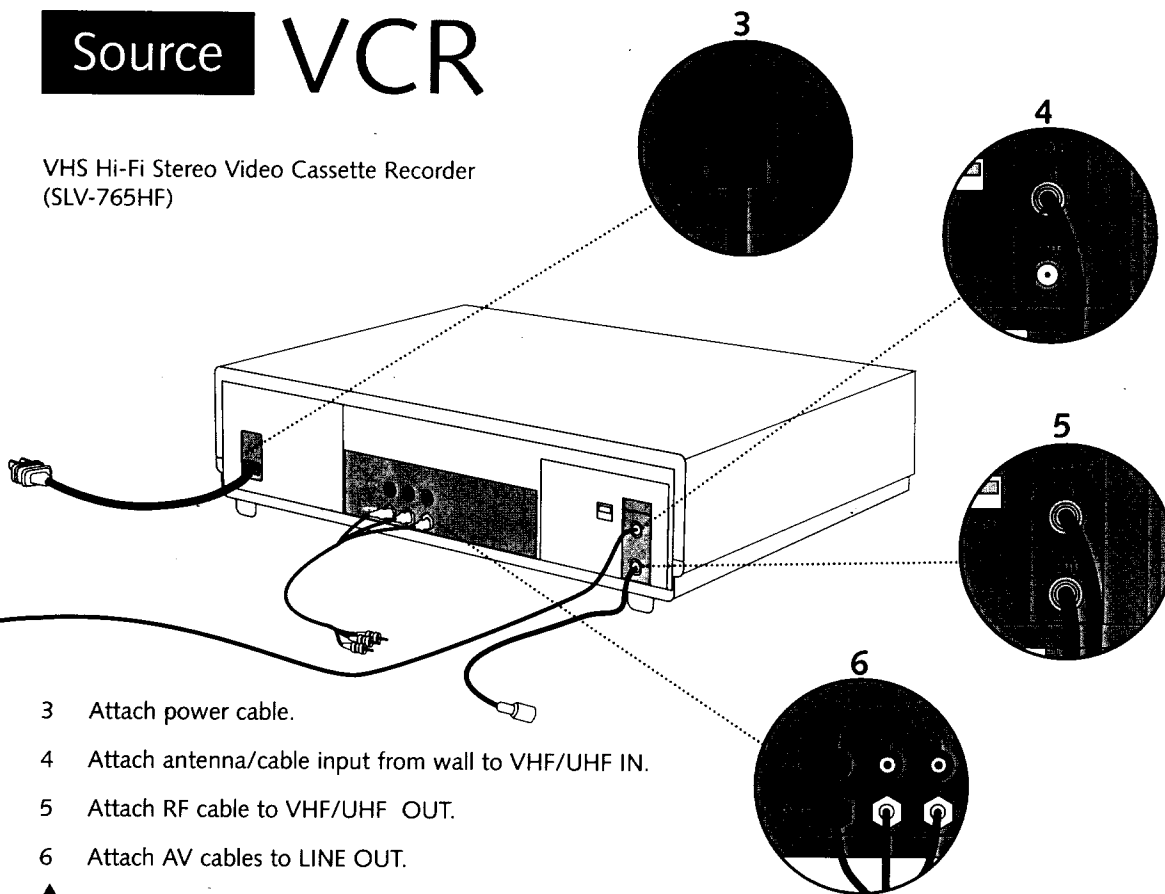


- 3 Attach power cable.
- 4 Attach antenna/cable input from wall to VHF/UHF IN.
- 5 Attach RF cable to VHF/UHF OUT.
- 6 Attach AV cables to LINE OUT.


 PLACE VCR IN CABINET, FEED CABLES THROUGH OPENING.


Sight TV

- 1 Make sure to locate TV set on notches on the top of the cabinet.
- 2 Secure TV with strap.

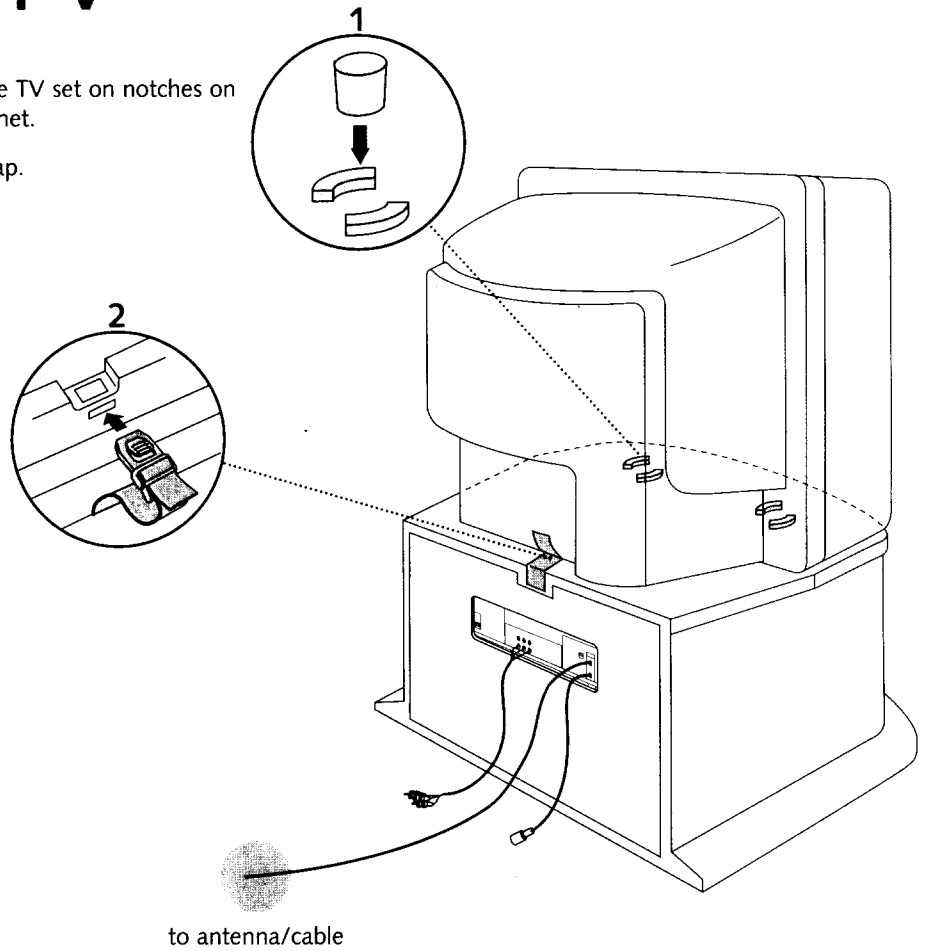

- 3 Connect VCR LINE OUT cables to VIDEO IN 1 on TV.
- 4 Connect VHF/UHF OUT from VCR to TV VHF/UHF IN.

 DO NOT PLUG TV OR VCR INTO ELECTRICAL OUTLET YET.

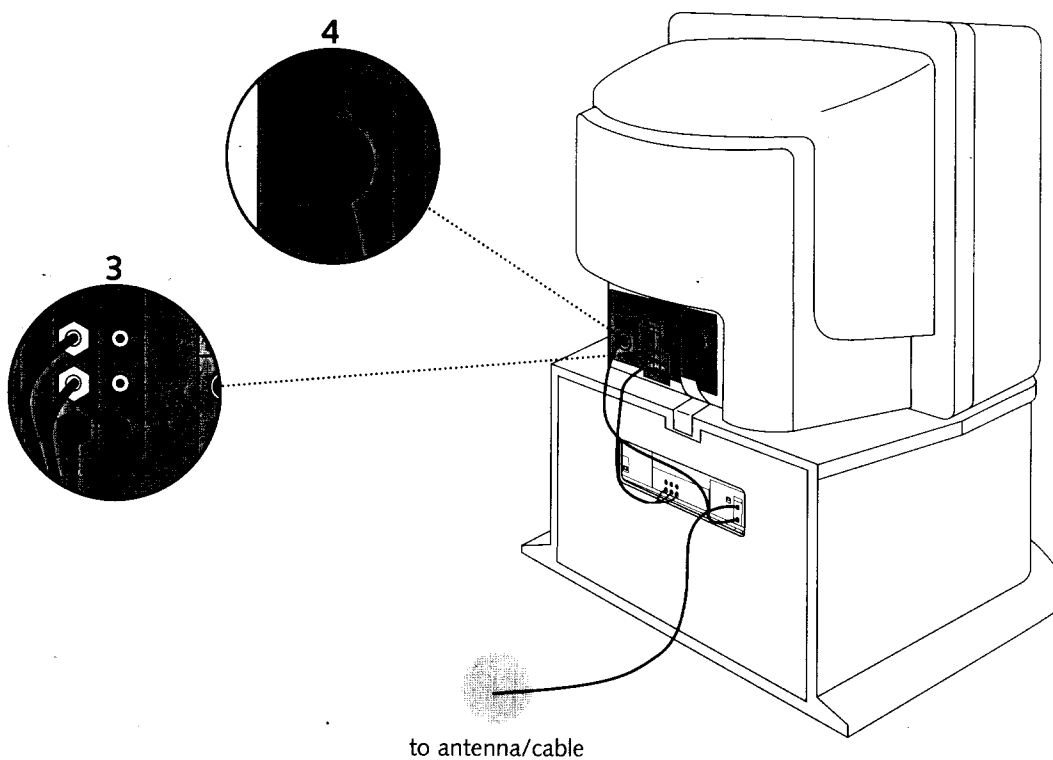



Sound Front & Rear speakers

- 1 Locate front speaker as shown.
- 2 Connect AUDIO OUT from TV to INPUT1 on left speaker.
- 3 Connect front speaker connection cable from left to right speaker.

! DO NOT PLUG SPEAKER INTO ELECTRICAL OUTLET YET.


- 4 Attach Infrared transmitter (EMT-IF55) to back of left speaker.
- 5 Locate Infrared transmitter on top of speaker or mount on wall. (See EMT-IF55 manual for details)
- 6 Connect left rear speaker to right rear speaker with rear speaker connecting wire.
- 7 Mount rear speakers on a wall, hang from ceiling, or place on a table or a shelf.
- 8 Plug left rear speaker into electrical outlet.

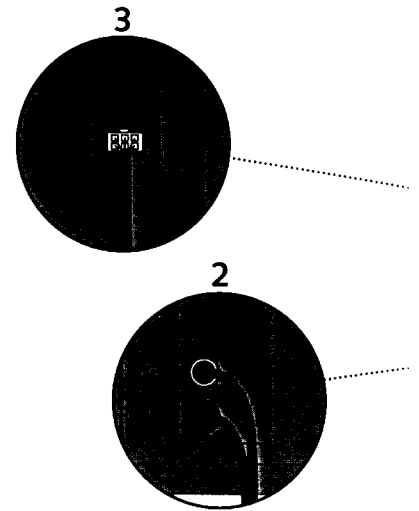

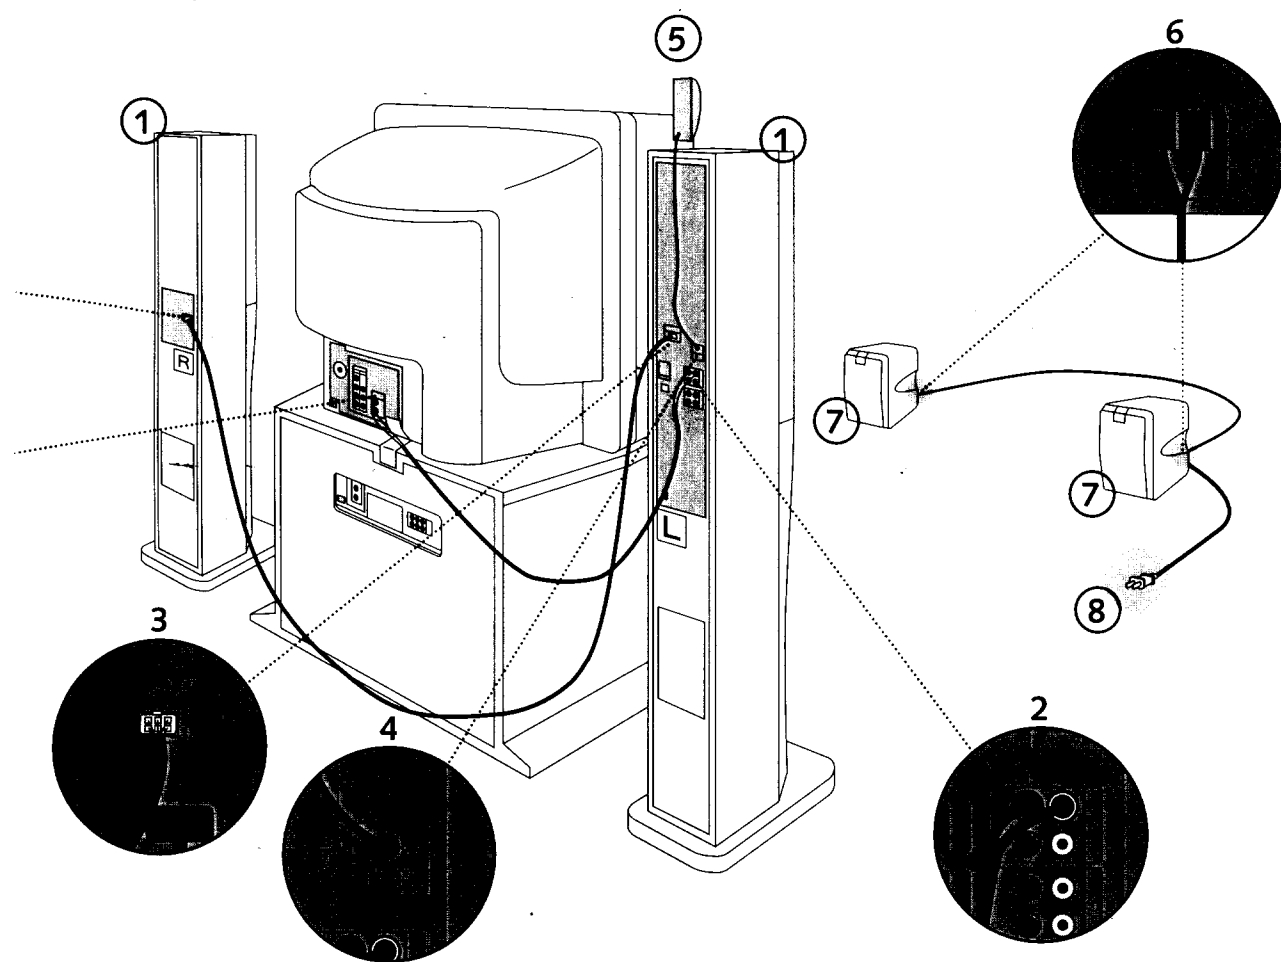


Source Audio

- 1 Attach the red and white cable to LINE OUT (FIXED).
- 2 Attach AM loop antenna.
- 3 Attach FM wire antenna.
- 4 Place Audio component in cabinet, feed cables through opening in back.

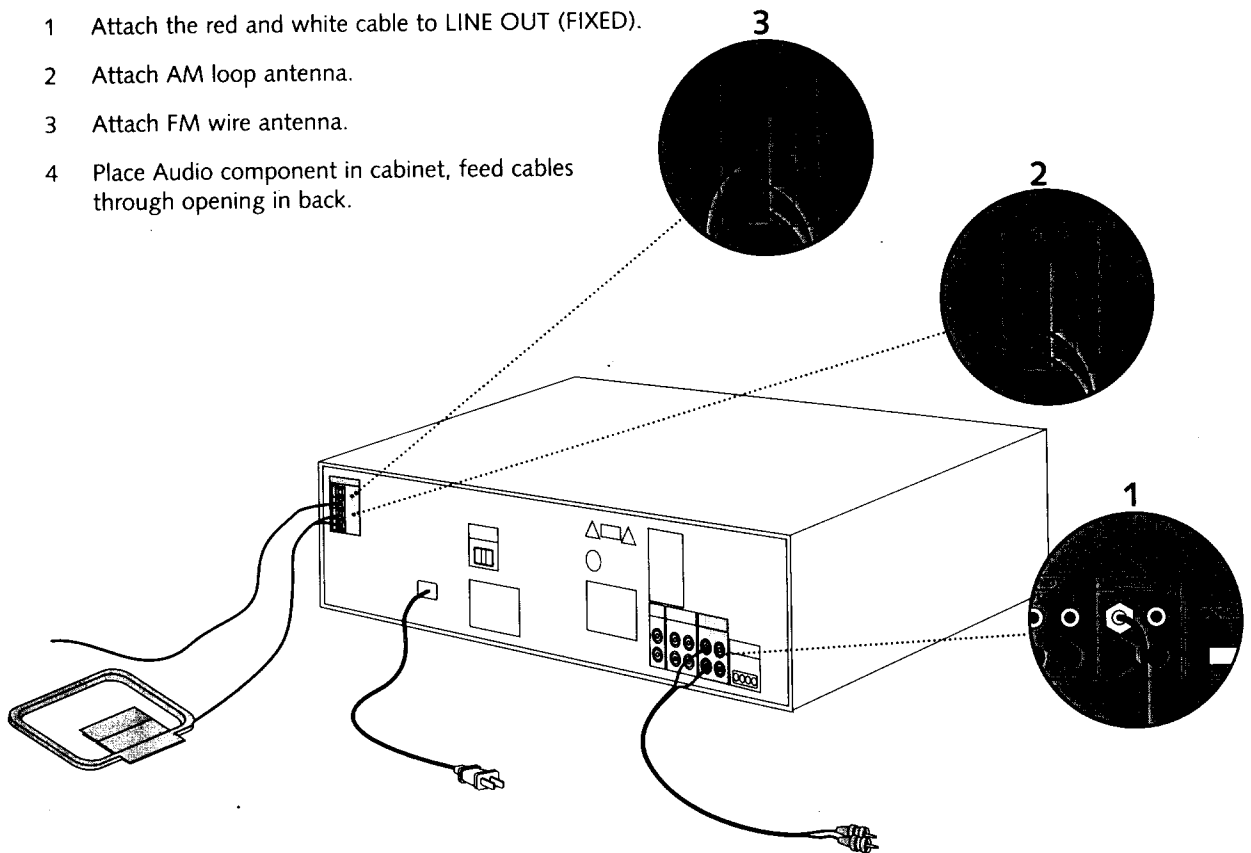


And finish the Set-Up


- 5 Connect the red and white cable from LINE OUT (FIXED) to INPUT2 on left speaker.
- 6 Plug Speakers in to electrical outlet.
- 7 Plug VCR in to electrical outlet.
- 8 Plug TV in to electrical outlet.
- 9 Plug Audio component in to electrical outlet.

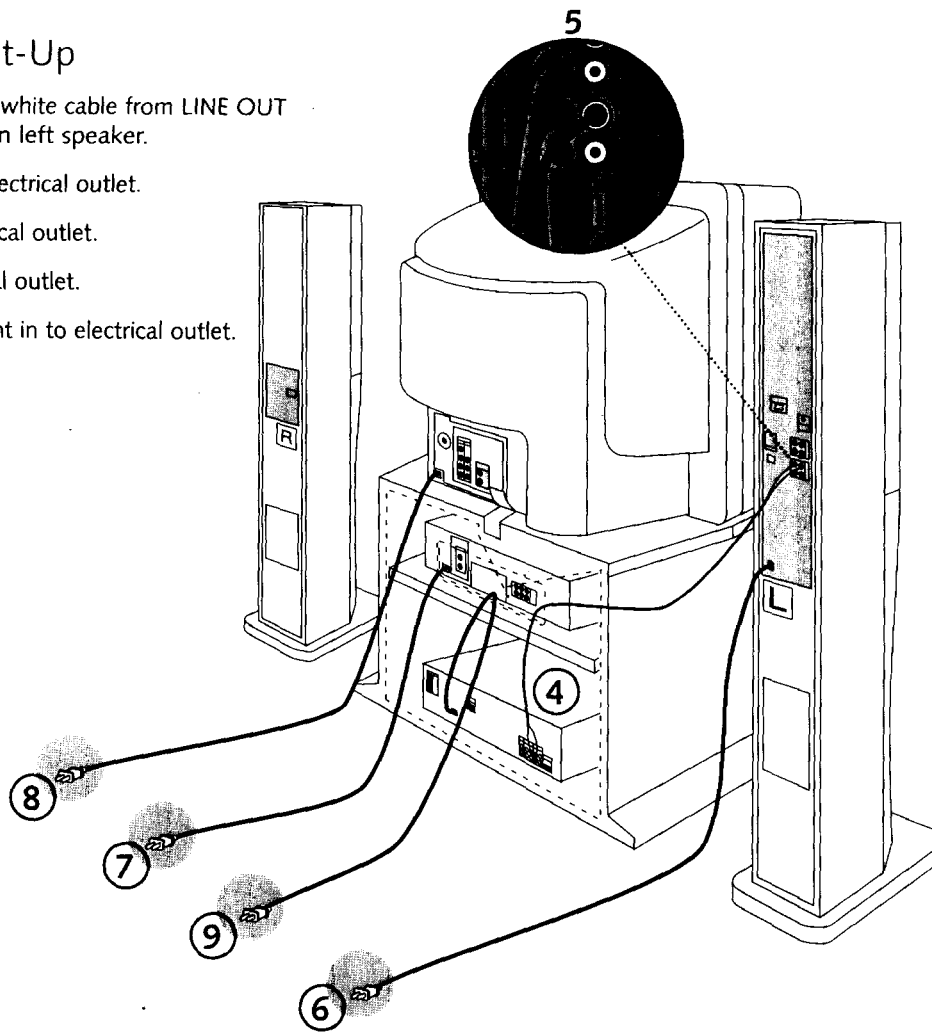

Sound Set-up

 Please check your manuals for detailed instructions.


- 1 Turn your speakers on by pressing power on the SA-VA55 front control panel (Left speaker).
- 2 Set INPUT 1 on the SA-VA55 front control panel.
- 3 Press SURROUND on the front panel to display DOLBY SUR on the display panel.

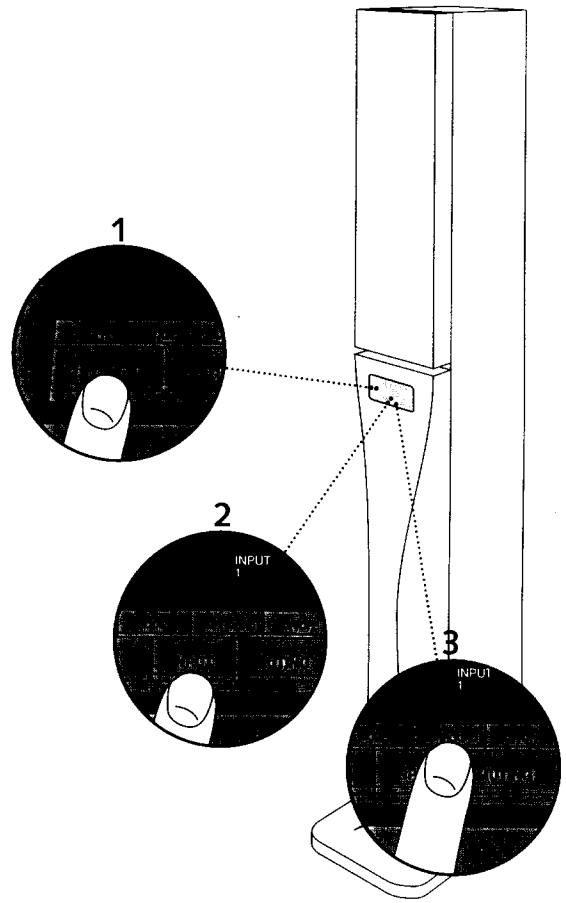


- 4 Press TV on your remote (RM-U5600).
- 5 Press MENU.
- 6 Select AUDIO using \wedge/\vee , press RETURN.
- 7 Select SPEAKER using \wedge/\vee , press RETURN.
- 8 Turn SPEAKER = OFF using \wedge/\vee , press RETURN.
- 9 Select AUDIO OUT using \wedge/\vee , press RETURN.
- 10 Set AUDIO OUT=FIXED using \wedge/\vee , press RETURN.
- 11 Press MENU.





Please refer to your RM-U5600 manual to balance center and rear speaker levels.

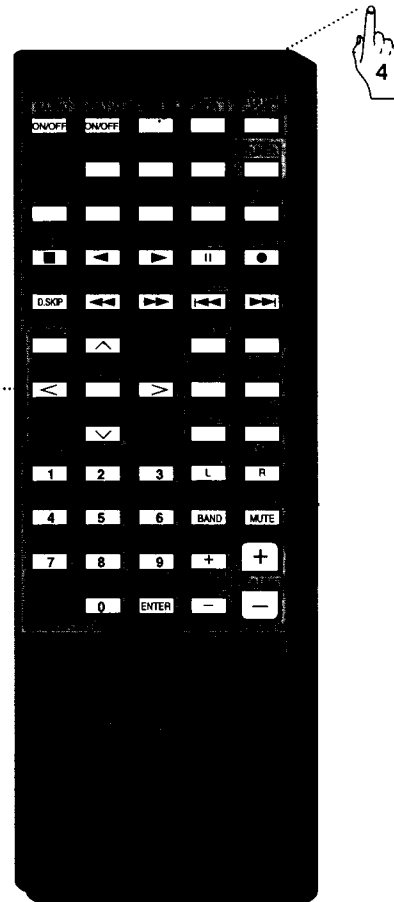


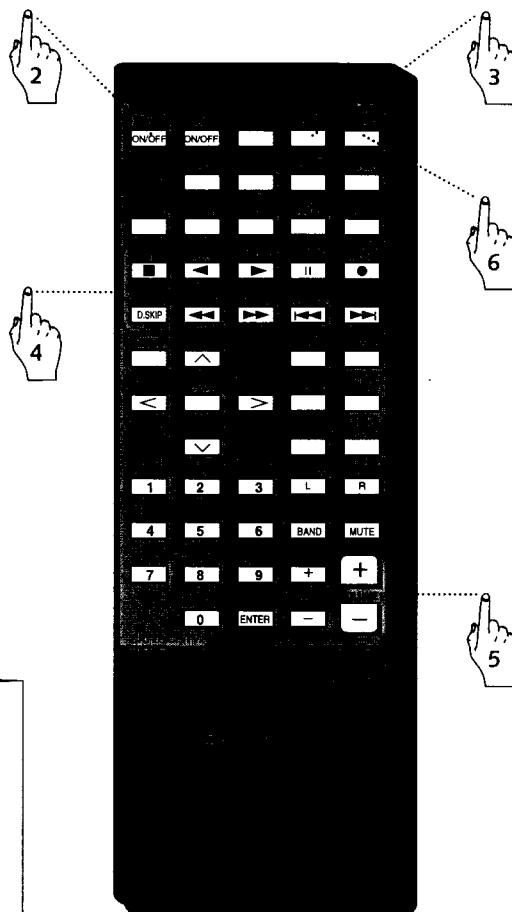
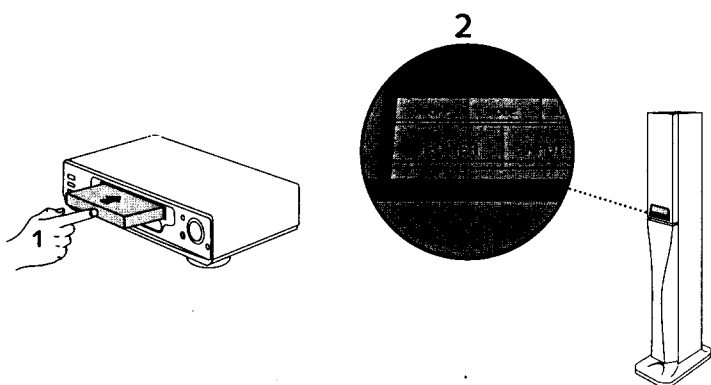
Watching TV

- 1 Press SAVA ON/OFF on your remote control (RM-U5600) and confirm the green power indicator is illuminated on the SAVA control panel.
 - 2 Press TV in your remote(RM-U5600).
 - 3 Select channel.
 - 4 Adjust volume.
 - 5 Turn off power by pressing SYSTEM OFF on remote.
-  Please refer to your TV manual for details.

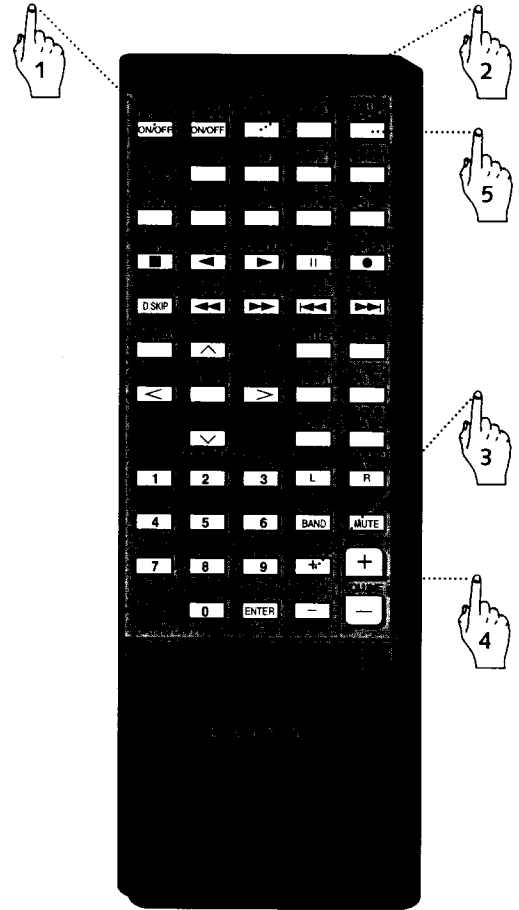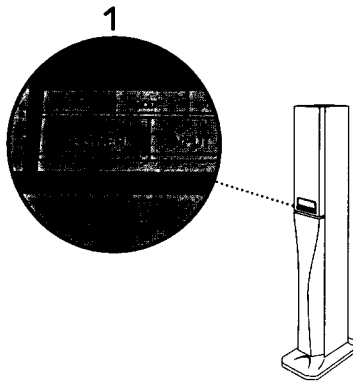


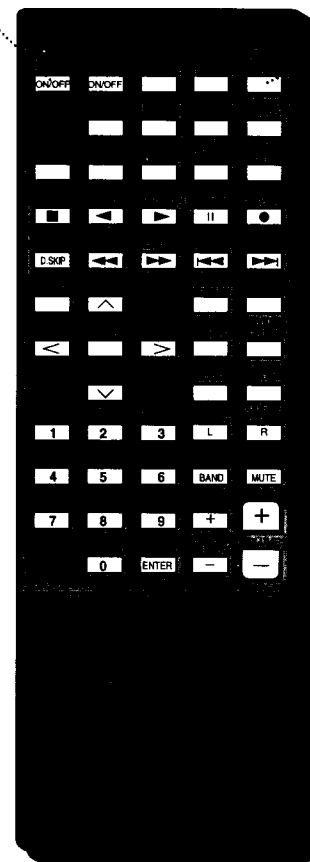
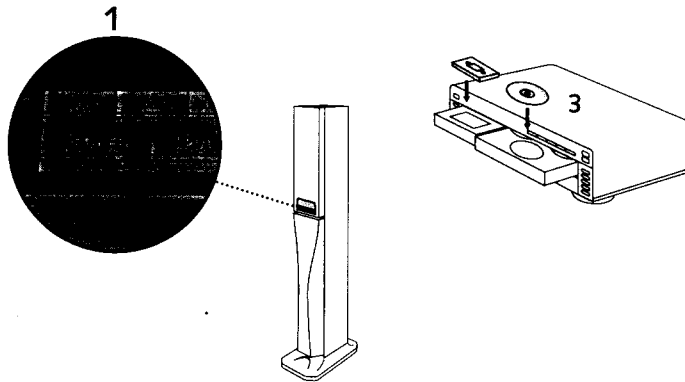
Watching a *Movie*

- 1 Insert movie into VCR.
 - 2 Press SAVA ON/OFF on your remote control and confirm the green power indicator is illuminated on the SAVA control panel.
 - 3 Press VCR on your remote (RM-U5600).
 - 4 Use transport keys.
 - 5 Adjust volume.
 - 6 Turn off power by pressing SYSTEM OFF on remote.
-  Please refer to your VCR manual for details.



Listening to Music

- 1 Press SAVA ON/OFF on your remote control and confirm the green power indicator is illuminated on the SAVA control panel.
 - 2 Press CD, TAPE, or TUNER on your remote (RMU-5600).
 - 3 Insert CD or tape, if desired, skip to step 5 for tuner.
 - 4 Use transport keys.
 - 5 Adjust volume on remote.
 - 6 Turn off power by pressing SYSTEM OFF on remote.
-  Please refer to the manual of your Audio component for details.





SONY.

Sony Electronics Inc.
1 Sony Drive
Park Ridge, New Jersey 07656

<http://www.sony.com>

©1996 Sony Electronics Inc. Reproductions in whole or in part without written permission is prohibited. All rights reserved. Sony, Maxium Television, Maxium TV, MaxTV, Remote Commander and Trinitron are trademarks of Sony.

C# C8231

Printed in USA 6/96