 


SONY

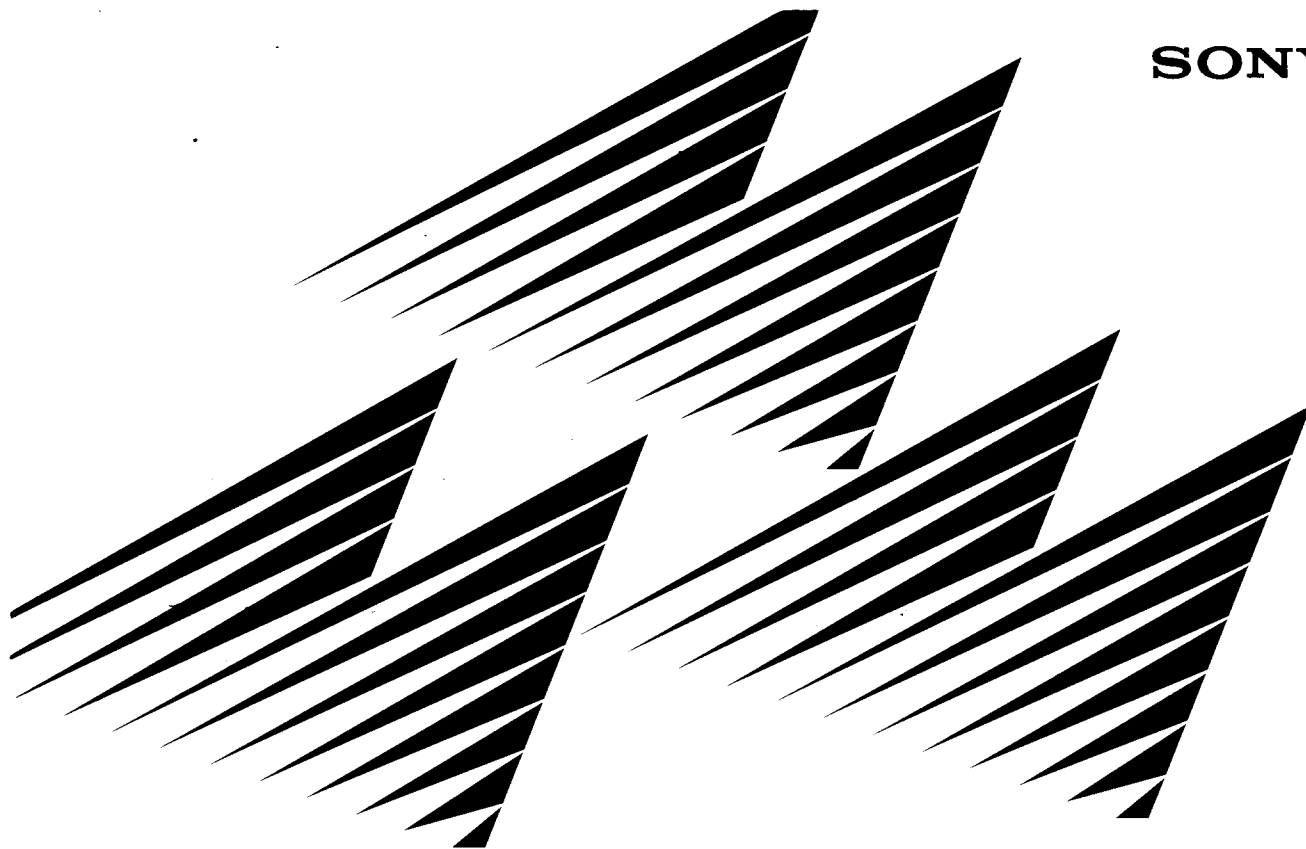

GETTING CONNECTED

# **MAXIMUM TELEVISION™**

MXT-4110 MXT System

# Welcome to Maximum TV™

 
You are about to experience the thrill and excitement of your new **Sony MXT System**! Before you begin your many hours of Maximum TV™ enjoyment, we will guide you through the setup and operation of your system in an easy to understand and straight-forward approach. Think of your system as a combination of Source, Sight, and Sound. We have organized setup into these categories for simplification. **Source** are the components which provide your program material. These include Broadcast, Cable TV and Videotapes. **Sight** is your TV, the component you need to enjoy the Broadcast, Cable TV and Videotape Sources. **Sound** delivered by your SAVA Speaker System, is the key ingredient to providing the Maximum TV Surround Sound experience.

We thank you for your MXT System purchase. If you have any questions, please call our Consumer Information Services Center at 1-800-222-SONY. Enough talk, let's get started.

# Positioning

Stop and take a look at your room. Before unpacking your MXT system, you'll want to know where everything will be placed. Look at the diagram below, and position your furniture so that you will be able to sit in front of the TV. The TV stand should have enough room on either side to accommodate your MXT System.


A rough rule of thumb is to position the speakers relative to the seating position so that a triangle is formed. Best viewing and listening is achieved directly in front of the TV. The rear speakers should be placed along the rear walls.

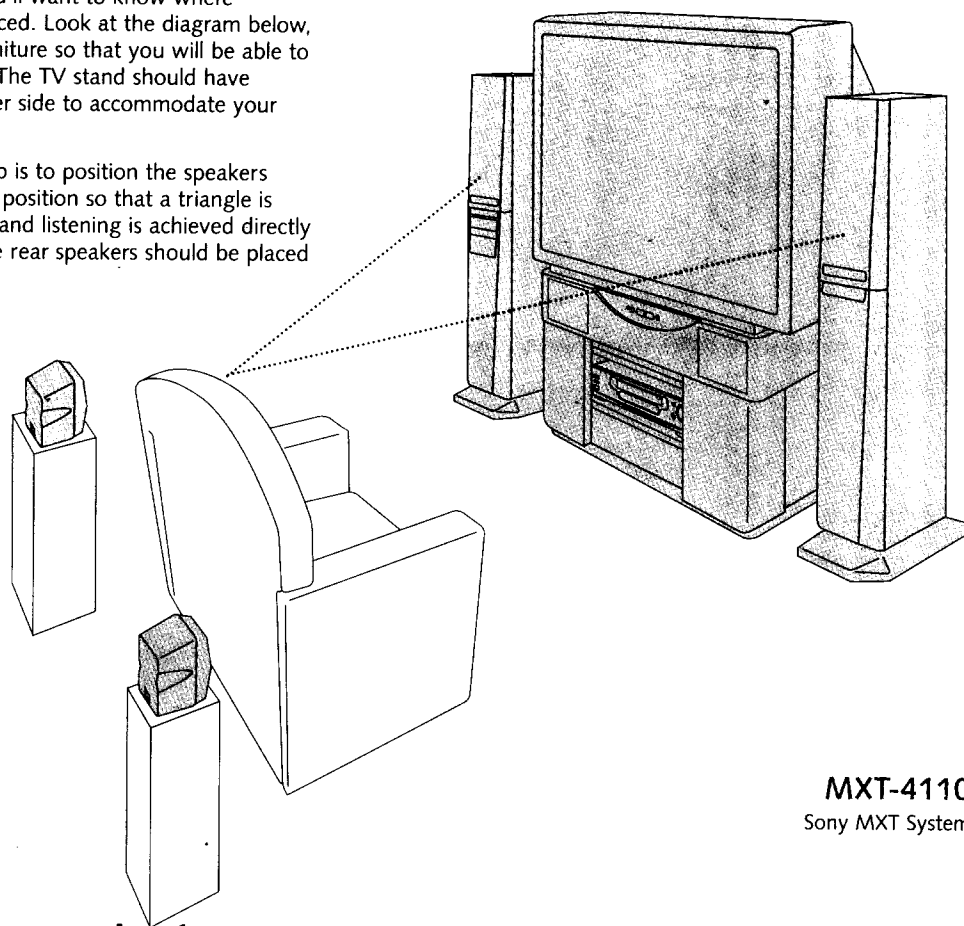


**MXT-4110**  
Sony MXT System

# Your Sony Components
 
## SLV-765HF VHS Hi-Fi Stereo Video cassette Recorder




AC power cord

 


A/V cable

 Remote control  
(RMT-V184A)




Size AA batteries

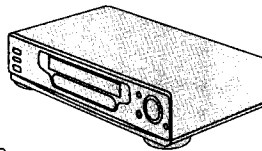 


75 ohm cable

## KP-41T25 41" Videoscope® Big Screen Color TV

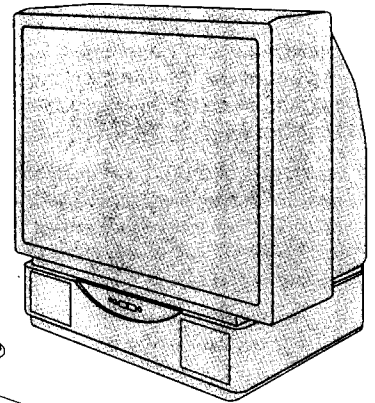 


Remote control  
(RM-Y121)

 


Size AA battery



 
**SU-41T1/AV**  
Audio/Video Cabinet

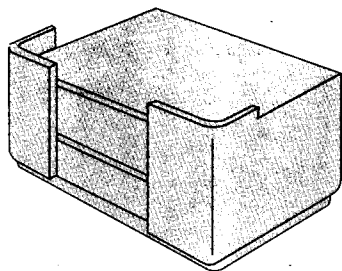

 **SA-VA100\***  
MaxTV™ Surround System  
Front L/R speakers

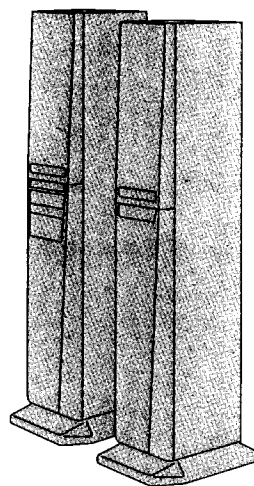

Rear L/R speakers

 

Rear speaker  
connecting cord  
(10 m)



Remote control  
(RM-U100AV)



Size AA batteries



AM loop antenna



FM wire antenna



Video connecting cord



Audio connecting cords (2)




Front speaker  
connecting cord  
(3.5 m)




PLEASE CHECK YOUR SA-VA100 MANUAL FOR SPEAKER STAND ASSEMBLY DETAILS. \*

# Cabinet Set-up

 
 SEE CABINET ASSEMBLY DETAILS IN SU-41T1 MANUAL.

- 1 Assemble the cabinet.
- 2 Feed antenna/cable input from wall through the back panel of the cabinet.

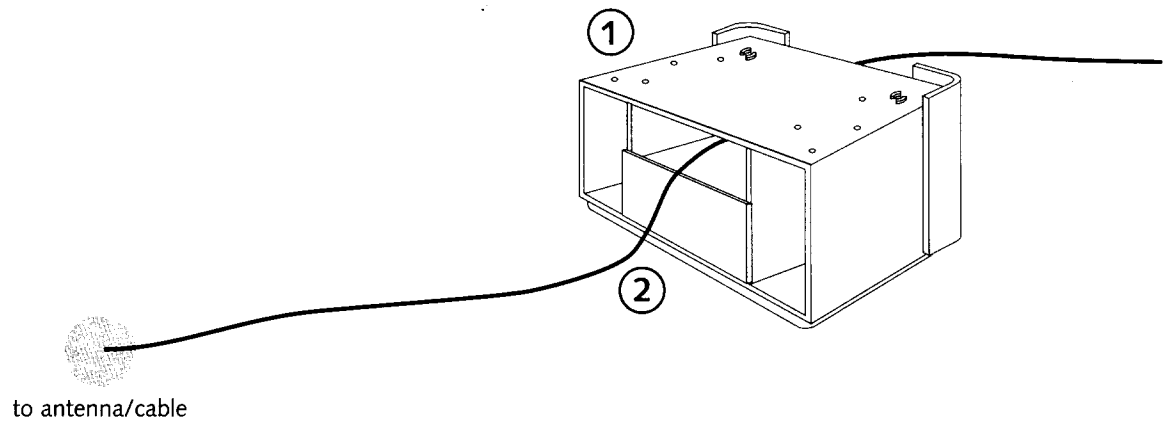

# Source VCR

 VHS Hi-Fi Stereo Video Cassette Recorder  
(SLV-765HF)

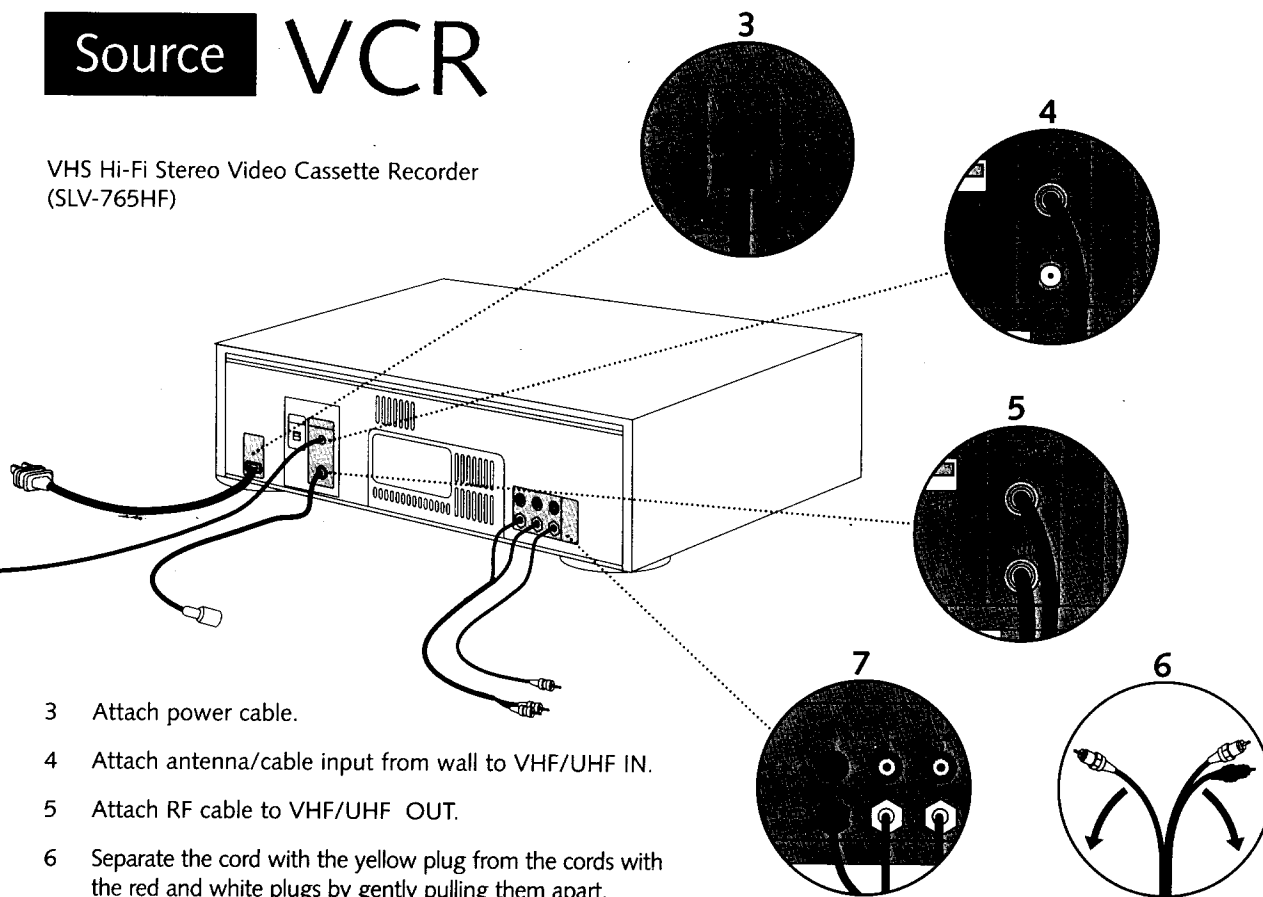


- 3 Attach power cable.
- 4 Attach antenna/cable input from wall to VHF/UHF IN.
- 5 Attach RF cable to VHF/UHF OUT.
- 6 Separate the cord with the yellow plug from the cords with the red and white plugs by gently pulling them apart.
- 7 Attach AV cables to LINE OUT.

**!** PLACE VCR IN CABINET, FEED CABLES THROUGH OPENING.


# Sight TV

 
- 1 Make sure to locate TV set on notches on the top of the cabinet.

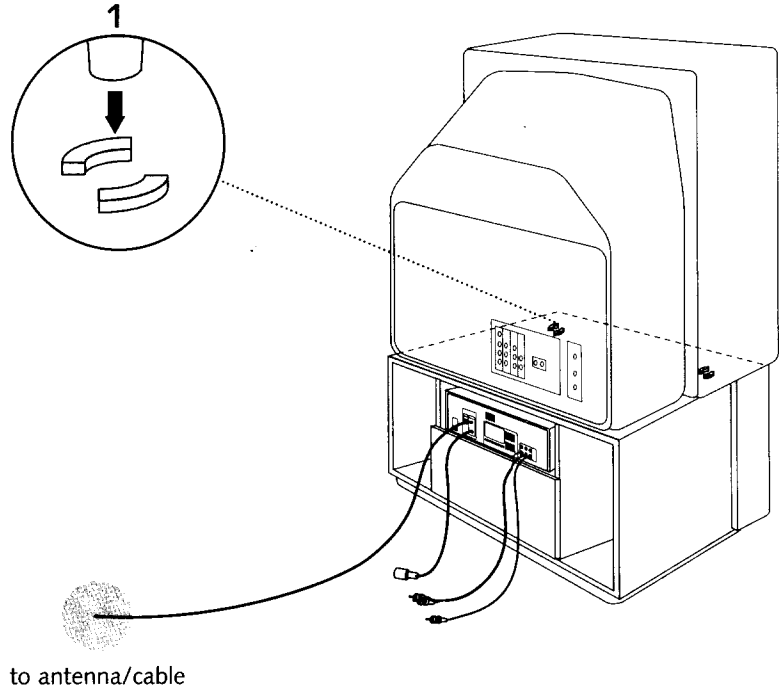



- 2 Connect VHF/UHF OUT from VCR to TV VHF/UHF IN.
- 3 Connect VCR AUDIO LINE OUT cables to VIDEO 1 AUDIO IN on TV (using cord with red & white plugs).

  DO NOT PLUG TV OR VCR INTO ELECTRICAL OUTLET YET.




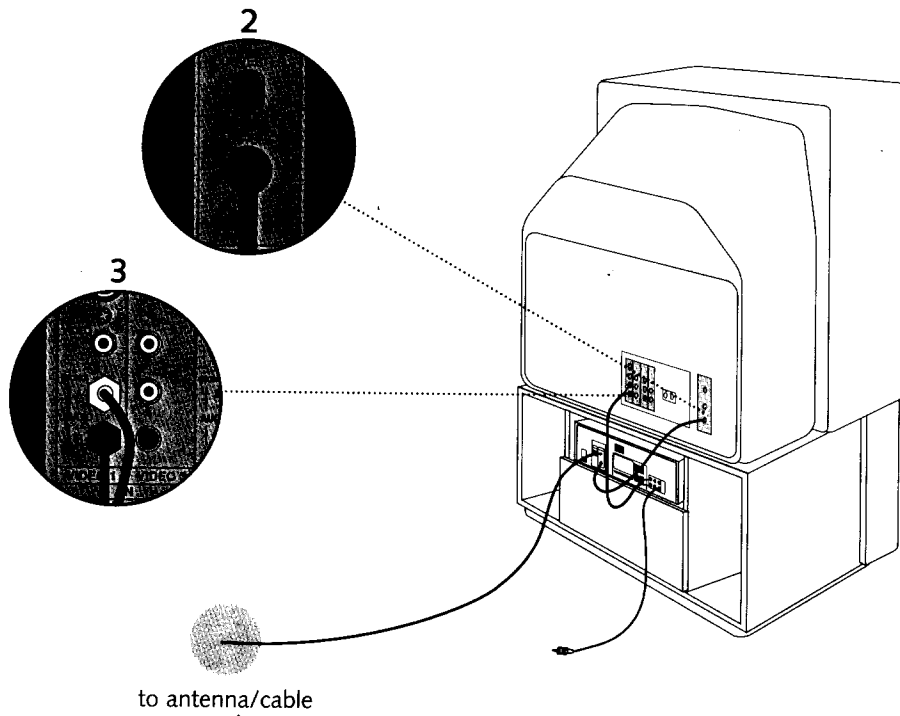



# Sound Speakers

- 1 Locate front speakers as shown.
- 2 Connect front speaker connection cable from left to right speaker.
- 3 Connect LINE OUT from right speaker to LINE IN on left speaker.
- 4 Mount rear speakers on a wall, hang from ceiling, or place on a table or a shelf.
- 5 Connect speaker wires from rear speakers to left front speaker (make sure + and - connections are correct).
- 6 Connect the AM loop antenna to right speaker.
- 7 Connect the FM wire antenna to right speaker.
- 8 Connect VCR VIDEO LINE OUT cable to the SA-VA VIDEO 1 IN on right speaker (yellow jack).
- 9 Connect TV AUDIO OUT cables to the SA-VA VIDEO 1 AUDIO IN on right speaker (red & white jacks).
- 10 Connect MONITOR OUT from right speaker to VIDEO 1 IN on TV.



     
DO NOT PLUG SPEAKERS INTO ELECTRICAL OUTLET YET.

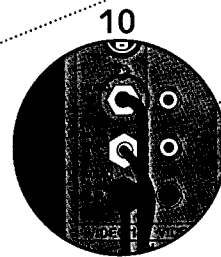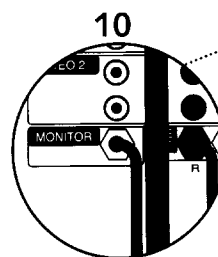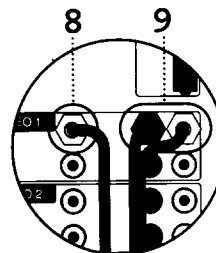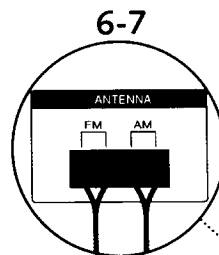

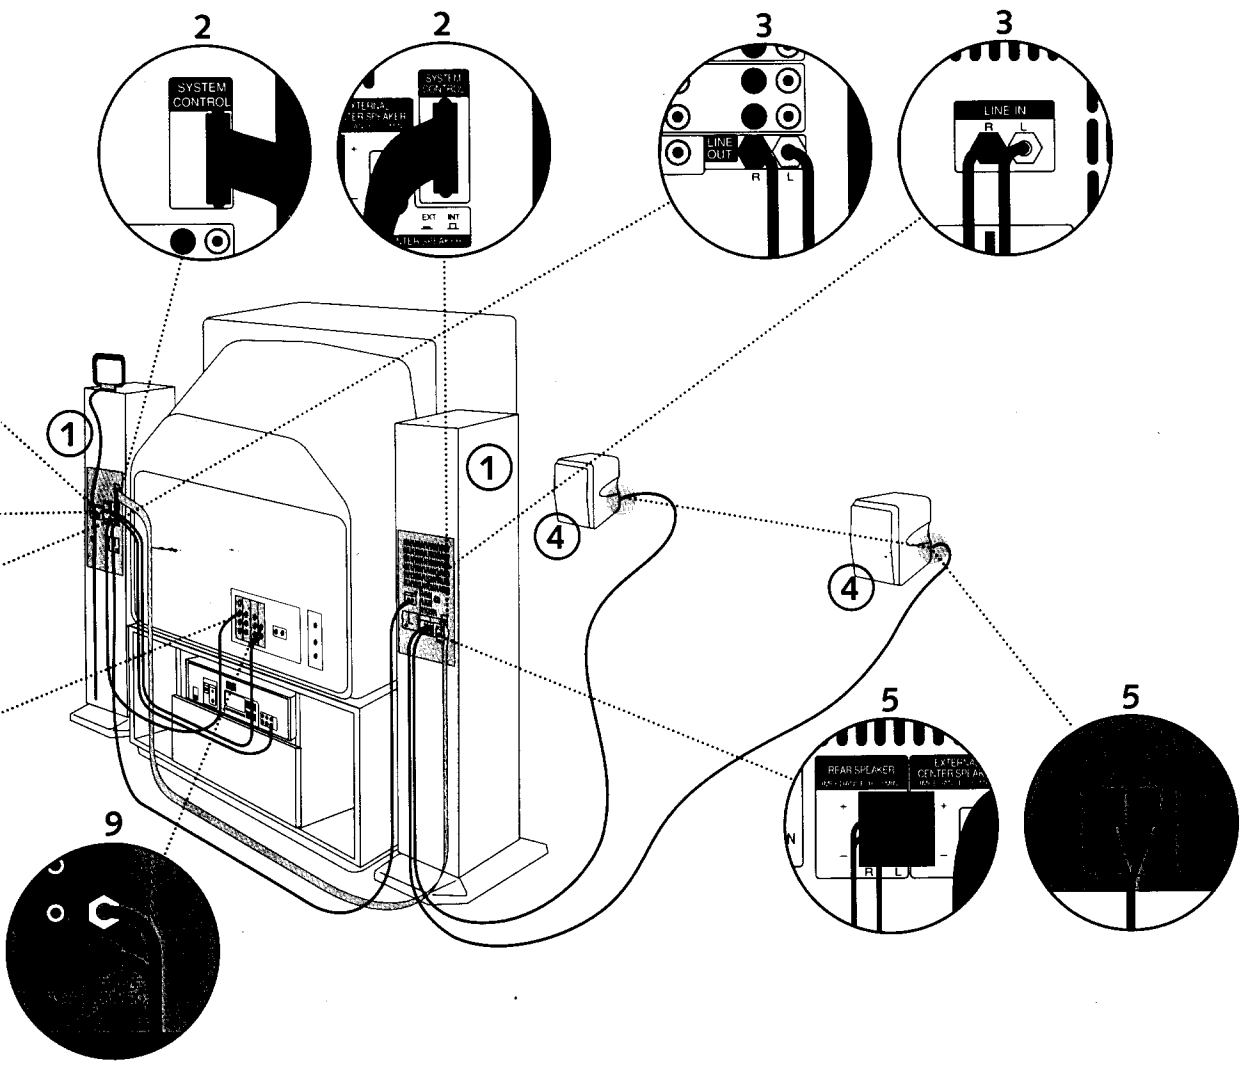

## And finish the Set-Up

 - 1 Plug speakers in to electrical outlet.
- 2 Plug TV in to electrical outlet.
- 3 Plug VCR in to electrical outlet.

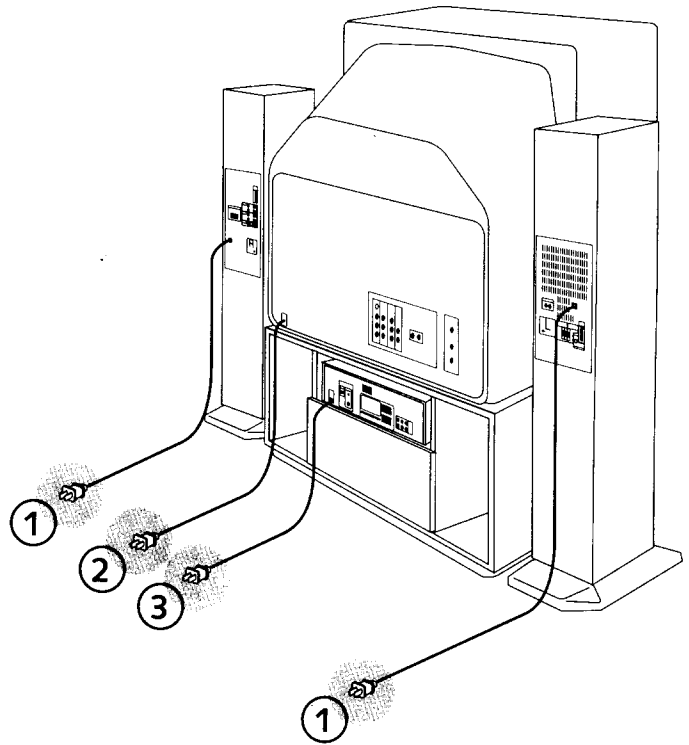


# Sound Set-up



PLEASE CHECK YOUR MANUALS FOR DETAILED INSTRUCTIONS.

 - 1 Turn your speakers on by pressing SYSTEM POWER on the SA-VA100 front control panel (left speaker).
- 2 Set VIDEO 1 on the SA-VA100 front control panel.
- 3 Press SURROUND on the front panel to display DOLBY SUR on the display panel.

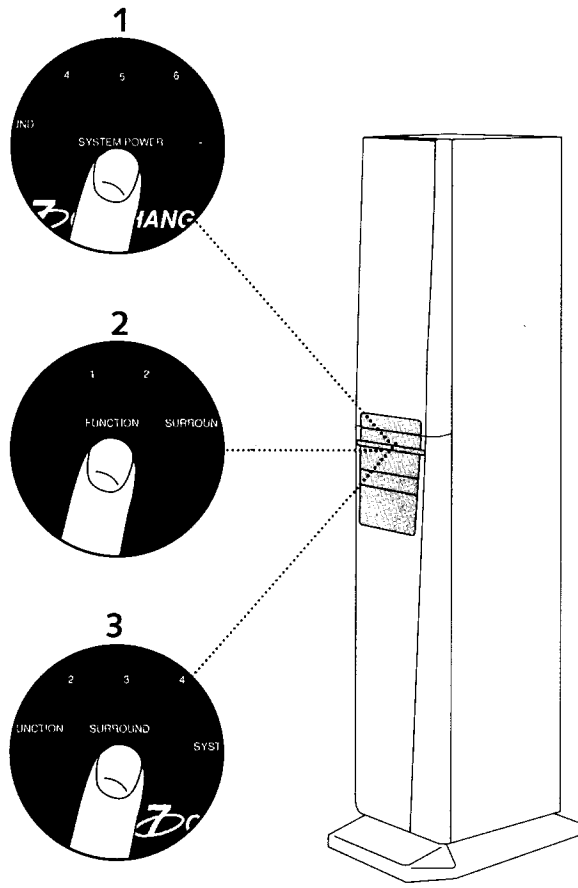


# TV Set-up

- 1 Slide the side display button down to the lowest position on your remote control as shown (use the remote supplied with the TV: RM-Y121).
- 2 Press MENU.
- 3 Using the  $\uparrow$  and  $\downarrow$  buttons, select AUDIO on the screen, then press RETURN. Select SPEAKER, then press RETURN. Select OFF, then press RETURN. Select AUDIO OUT, then press RETURN. Select FIXED, then press RETURN.
- 4 Press MENU to exit.



 AFTER TV SET-UP IS COMPLETE THE RM-U100AV REMOTE SUPPLIED WITH THE SA-VA100 WILL ACT AS THE PRIMARY REMOTE FOR ALL FUNCTIONS.

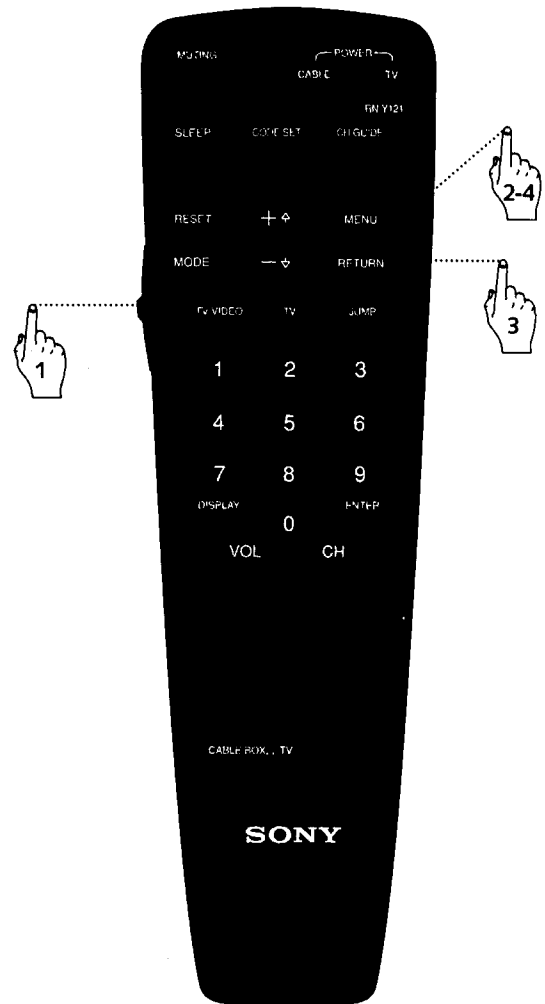


# Watching TV

- 1 Press POWER on your remote control (RM-U100AV) to turn on the SAVA speakers.
- 2 Press TV CONTROL.
- 3 Press VISUAL POWER to turn on the TV.
- 4 Select channel.
- 5 Adjust volume.



 PLEASE REFER TO YOUR TV MANUAL FOR DETAILS.

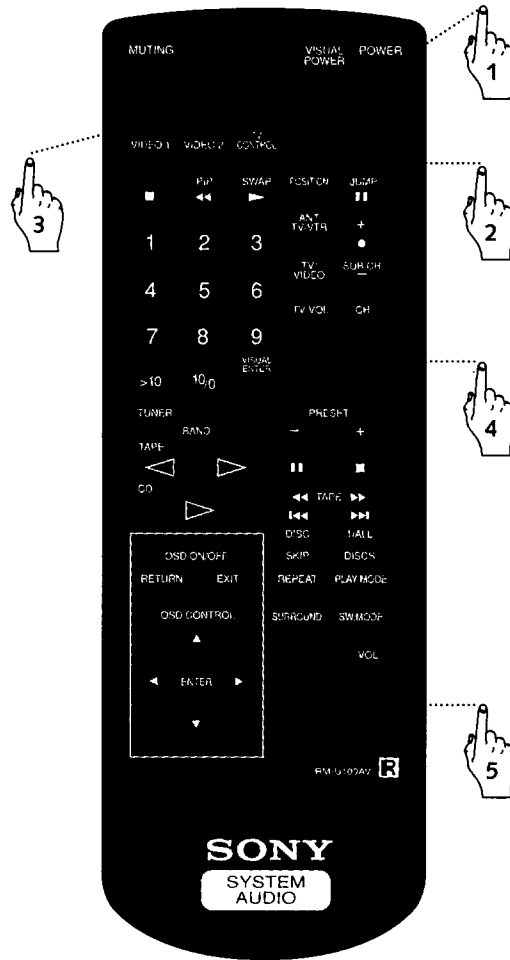


# Watching a Movie

- 1 Press POWER on your remote control (RM-U100AV) to turn on the SAVA speakers.
- 2 Press TV CONTROL.
- 3 Press VISUAL POWER to turn on the TV.
- 4 Press TV/VIDEO to select VIDEO 1 input.
- 5 Press VIDEO 1.
- 6 Press VISUAL POWER to turn on the VCR.
- 7 Use transport keys to play tape.
- 8 Adjust volume.



 PLEASE REFER TO YOUR VCR MANUAL FOR DETAILS.

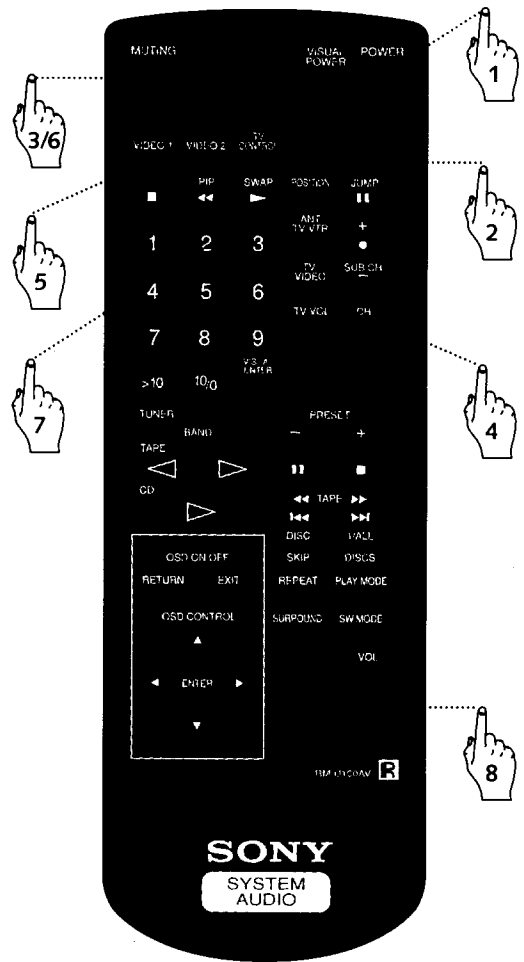





# Listening to Music

- 1 Press POWER on your remote control (RM-U100AV) to turn on the SAVA speakers.
- 2 Insert CD or tape into the left speaker front panel.
- 3a Press TUNER to play radio, select band and preset -/+ to select station.
- 3b Press TAPE to play and use transport keys to play tape.
- 3c Press CD to play and use transport keys to play CD.
- 4 Adjust volume.



  PLEASE REFER TO THE SA-VA100 MANUAL FOR DETAILED INSTRUCTIONS FOR TUNER OPERATIONS INCLUDING STATION PRE-SETTING.

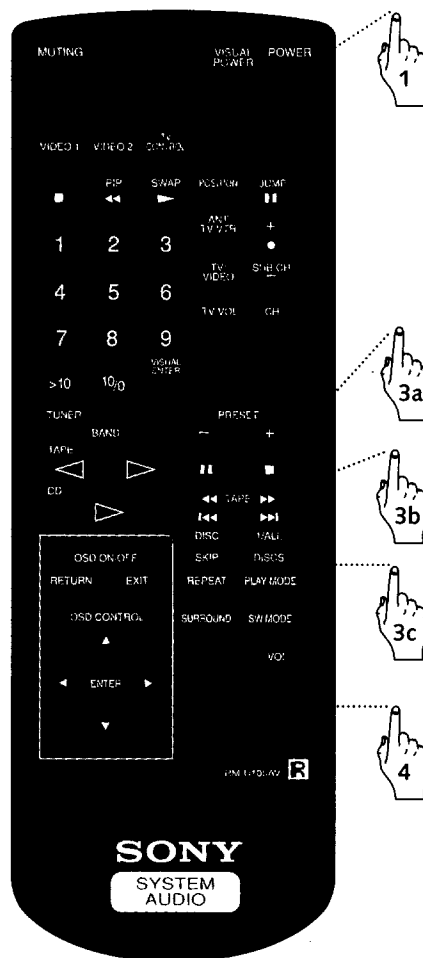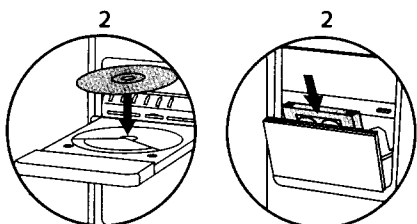



## **SONY.**

Sony Electronics Inc.  
1 Sony Drive  
Park Ridge, New Jersey 07656

<http://www.sony.com>

©1996 Sony Electronics Inc. Reproductions in whole or in part without written permission is prohibited. All rights reserved. Sony, Maximum Television, Maximum TV, MaxTV, Remote Commander and Trinitron are trademarks of Sony.

C# 8234

Printed in USA 9/96