


SONY

MXT-4165

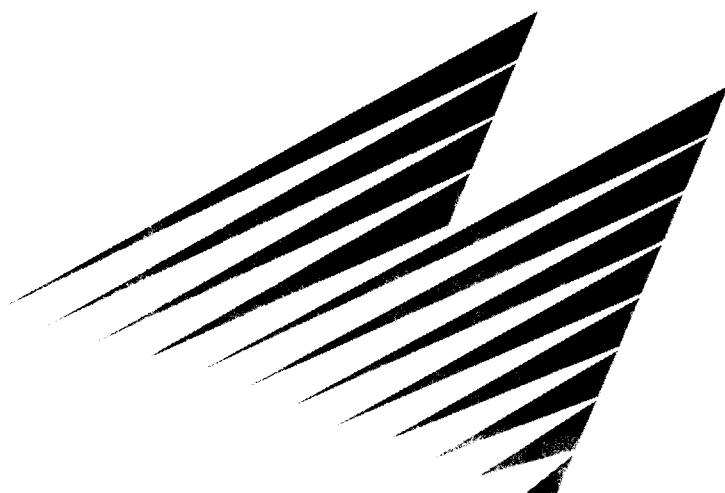


GETTING CONNECTED
SONY MAXIMUM TELEVISION™

Welcome to Maximum TV™

Positioning

You should position your system as shown:

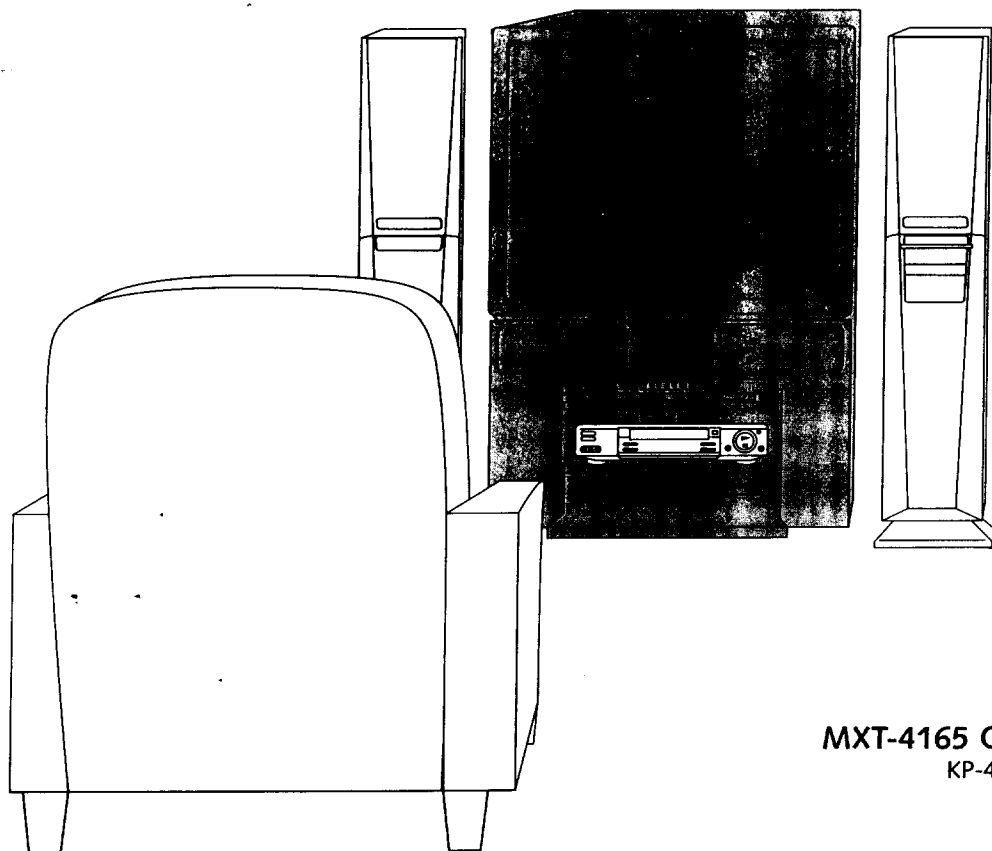


MXT-4165 Contains:


KP-41T65GRAY
SA-VA100
SLV-788HF
SU-41T2


Placement (Rear View)

- 1 Assemble stand
- 2 Place products as shown
- 3 Make sure speaker with "R" or "L" is positioned as shown

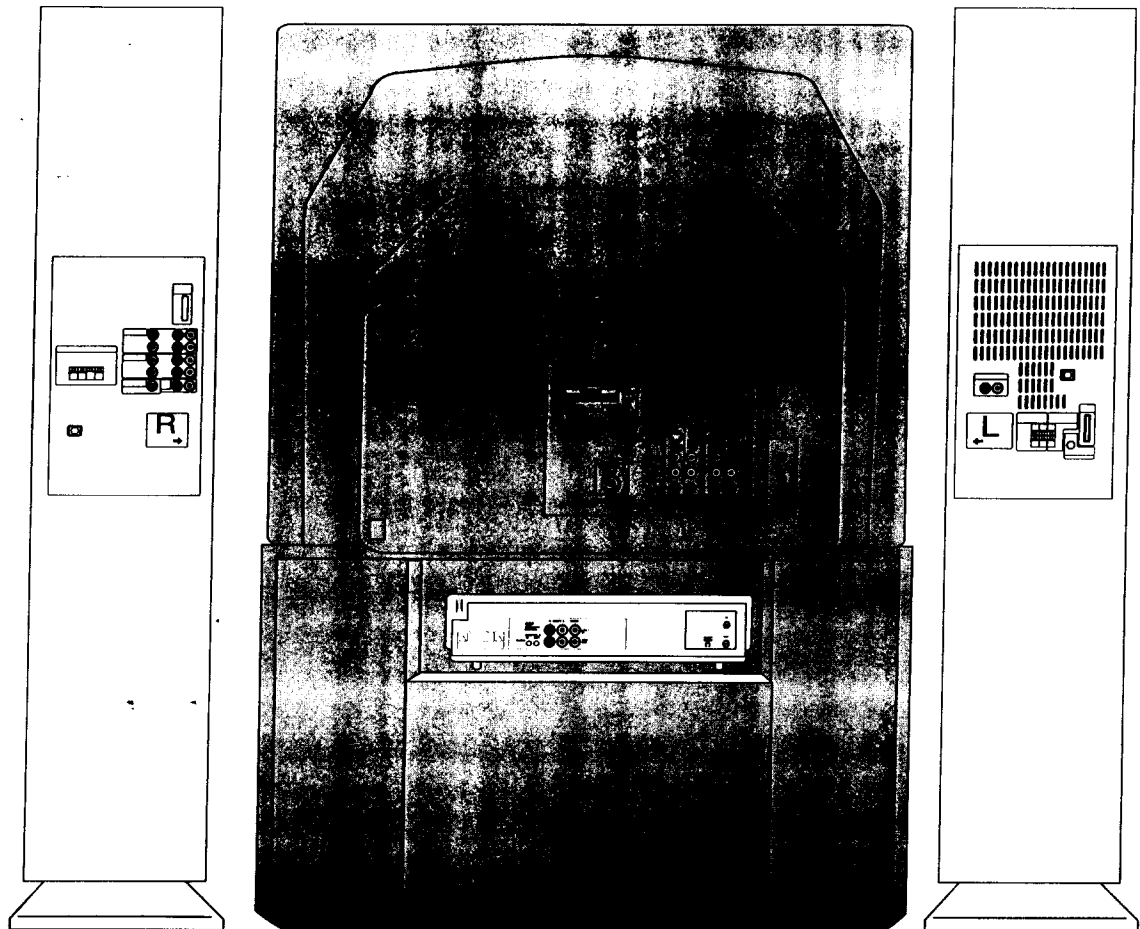

Connection

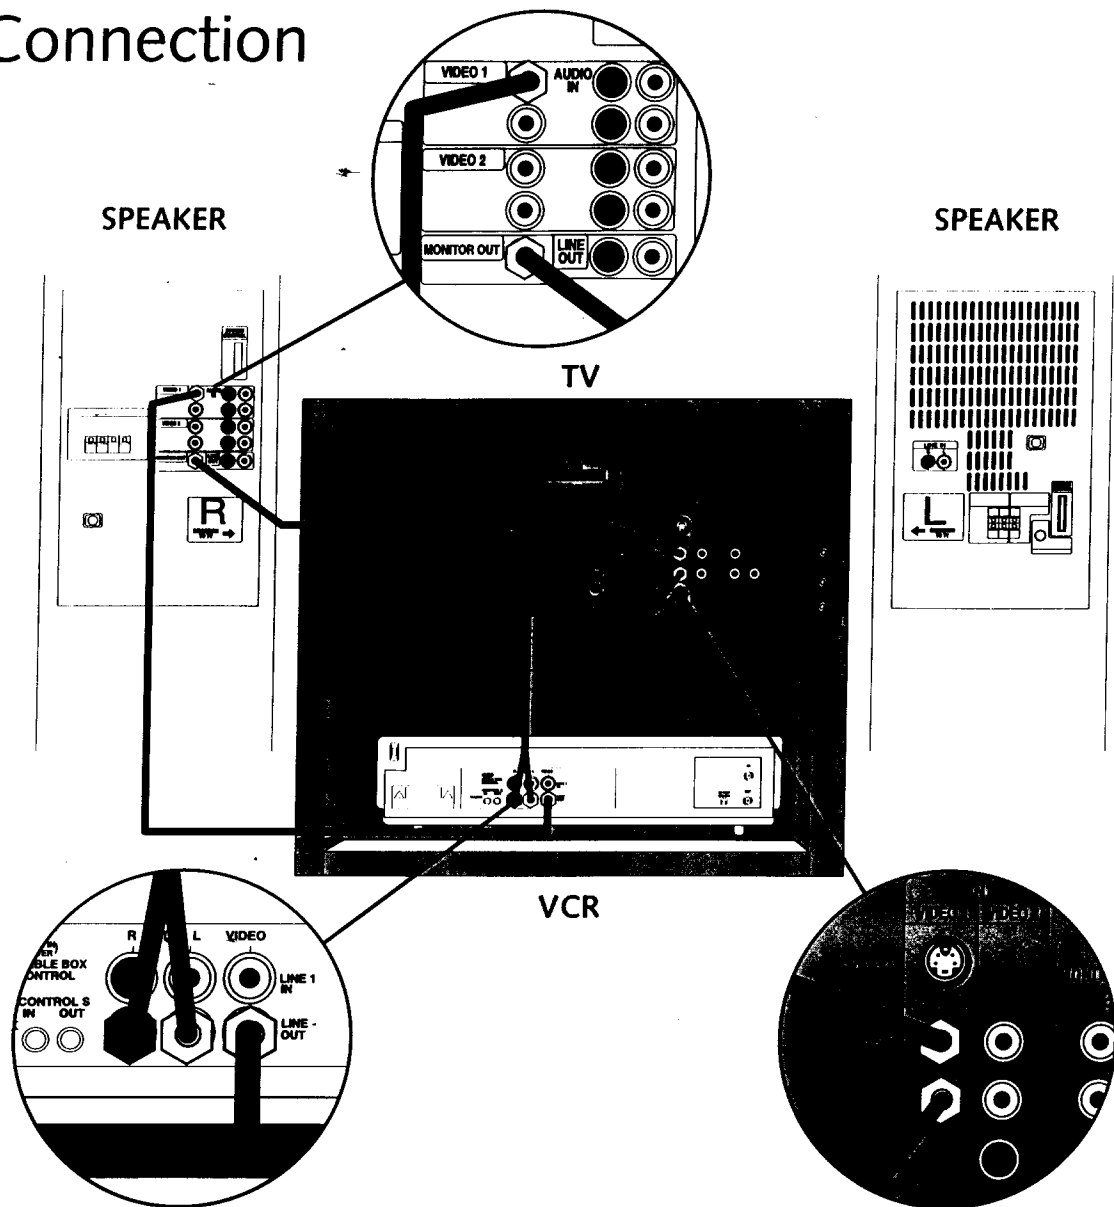

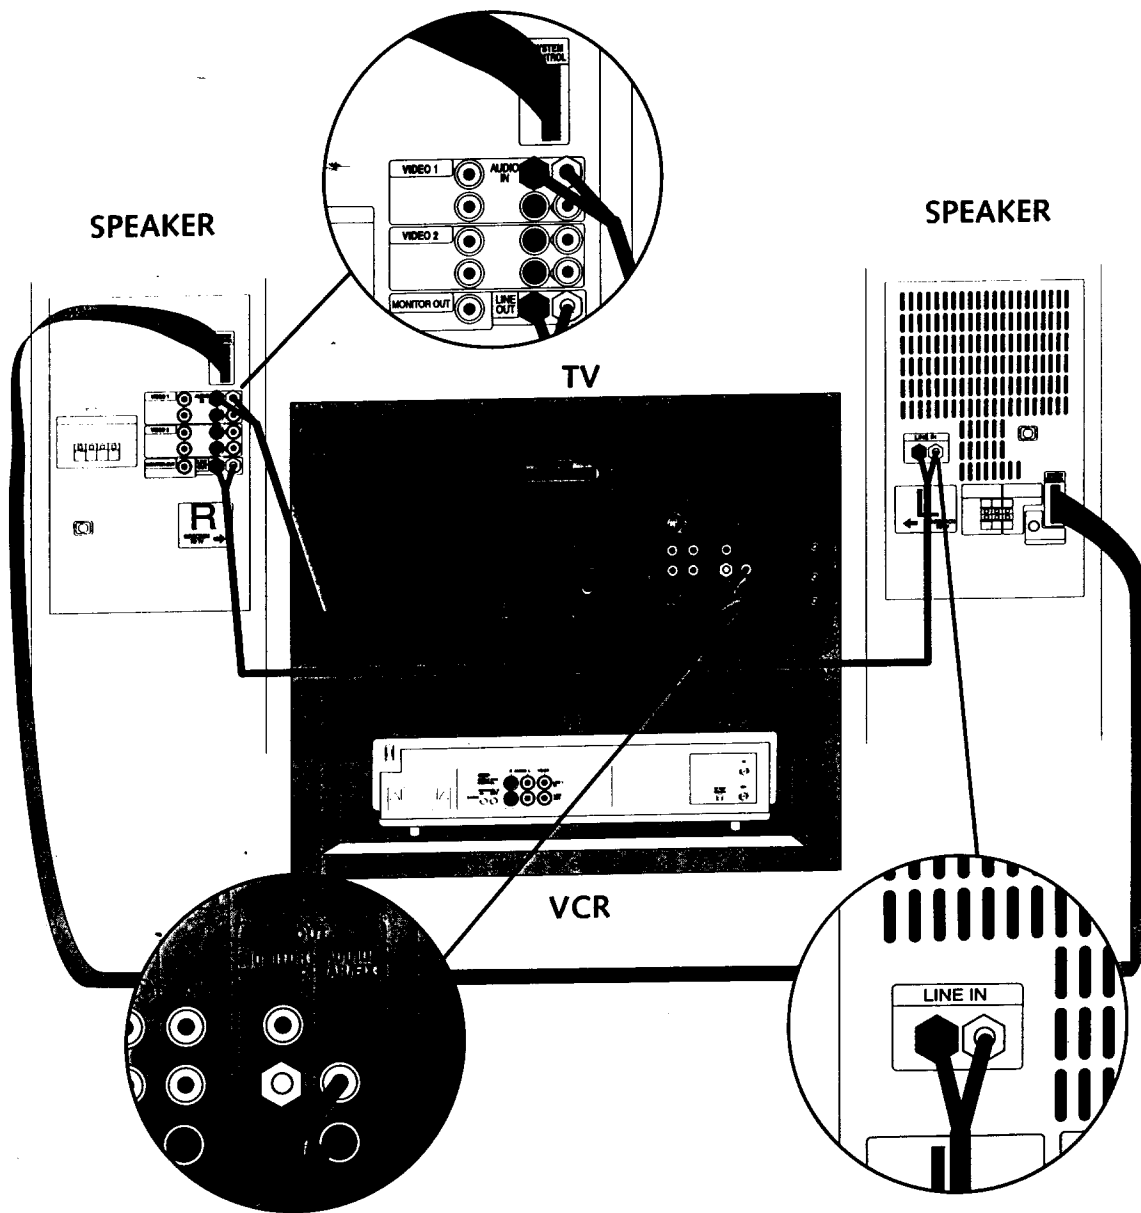

To Operate

Sound Set-up

 PLEASE CHECK YOUR MANUALS FOR DETAILED INSTRUCTIONS

- 1 Turn your speakers on by pressing SYSTEM POWER on the SA-VA100 front control panel (right speaker).
- 2 Press FUNCTION on SA-VA100 front panel to display VIDEO 1.
- 3 Press SURROUND on the front panel to display PRO LOGIC® on the display panel.

TV Set-up

- 1 Press POWER.
- 2 Press MENU.
- 3 Using the ↑ and ↓ buttons on remote (use the remote supplied with the TV RM-Y 136A). Select AUDIO on the screen, then press RETURN + . Select SPEAKER, then press RETURN. Select OFF, then press RETURN. Select AUDIO OUT, then press RETURN. Select FIXED, then press RETURN.
- 4 Press MENU to exit.



AFTER TV SET-UP IS COMPLETE THE RM-U100AV REMOTE SUPPLIED WITH THE SA-VA100 WILL ACT AS THE PRIMARY REMOTE FOR ALL FUNCTIONS.

Watching TV

- 1 Press POWER on your remote control (RM-U100AV) to turn on the SA-VA speakers.
- 2 Press TV CONTROL.
- 3 Press VISUAL POWER to turn on the TV.
- 4 Select channel.
- 5 Adjust volume.



PLEASE REFER TO YOUR TV MANUAL FOR DETAILS.

Watching a Movie

- 1 Press POWER on your remote control (RM-U100AV) to turn on the SA-VA speakers.
- 2 Press TV CONTROL.
- 3 Press VISUAL POWER to turn on the TV.
- 4 Press TV/VIDEO to select Video 1 input.
- 5 Press VIDEO 1.
- 6 Press VISUAL POWER to turn on the VCR.
- 7 Use transport keys to play tape.
- 8 Adjust volume.



PLEASE REFER TO YOUR TV MANUAL FOR DETAILS.

Listening to Music

- 1 Press POWER on your remote control (RM-U100AV) to turn on the SA-VA speakers.
- 2 Insert CD or tape into the right speaker front panel.
- 3 Press TUNER to play radio, select band and preset $-/+$ to select station.
- 3a Press Tape to play and use transport keys to play tape.
- 3b Press CD to play and use transport keys to play CD.
- 4 Adjust volume.



PLEASE REFER TO THE SA-VA 100 MANUAL FOR DETAILED INSTRUCTIONS FOR TUNER OPERATIONS INCLUDING STATION PRE-SETTING.

SONY.

Sony Electronics Inc.
1 Sony Drive
Park Ridge, New Jersey 07656
1-800-222-SONY (7669)
<http://www.sony.com>

©1998 Sony Electronics Inc. Reproduction in whole or in part without written permission is prohibited. All rights reserved. Sony, Maximum Television, and Maximum TV are trademarks of Sony. Pro Logic is a trademark of Dolby Laboratories Licensing Corporation.

CA1712

Printed in USA 5/98