

Tech Fax # 10410

January 27, 1999

---

## **How to Enable the TV or Video Out. PCV 130 150 200**

---

The PCV 130 150 200 computers are equipped with TV Out capability. This feature enables full motion video output on a standard television set.

*OPERATING SYSTEM NOTE: This solution assumes the system is running the original Windows 95 operating system.*

The systems have two video output jacks at the rear of the computer:

1. S-Video Out: Use with any TV, VCR or Camcorder with S-Video In capability.
2. Composite Video Out (RCA-style plug): Use with any TV, VCR or Camcorder not equipped with S-Video In.

*NOTE: Static display software such as spreadsheets, word processors, or cartoon character-type games do not take advantage of the full motion TV Out features. For these reasons, it is not recommended that a television be the sole output device for a personal computer.*

### **Please follow the steps below to enable TV / Video Out on a PCV 130 150 200**

1. Connect the TV to the computer using S-Video or RCA type jacks. Turn the TV on and place in Video mode.

(A) Check the back of computer to ensure the TV is properly connected.

If you are not sure how to connect the TV, please refer to the Sony on-line Users Guide in the computer for assistance. Search on the term TV or Television.

*NOTE: A TV must be connected in order to complete the rest of this procedure successfully.*

2. Click Start, point to Settings, and click Control Panel.
3. Double-click Display icon.
4. Click the Settings Tab.
5. In preview window, click to place a check next to Television.
6. Click OK.
7. Click the X at the top-right corner to close Control Panel.

*NOTE: If the TV is not available, and there is only a monitor, then the video drivers are not installed correctly. Reinstall the video drivers and then retry this procedure.*

8. To reinstall the video drivers do the following:

(A) Insert the Application Recovery CD into the CDROM drive.

(B) Click Start, point to Settings, and click Control Panel.

(C) Double-click the Display icon.

(D) Click the Settings tab.

(E) Click the Advanced Properties button.

(F) Click the Change button.

(G) Click the Have Disk button.

(H) Under Copy Manufacturers Files from, type G:\Drivers\Video.

(I) Click OK.

(J) Click to highlight the All-in-Wonder (Direct Draw) driver from the list and then click OK.

*NOTE: The All-In-Wonder may not be the default selection. If the All-In-Wonder (Direct Draw) is not an option, click Show All Devices and then select All-In-Wonder (Direct Draw).*

(K) Click the Close button.

(L) At the Display Properties box, click Close.

(M) At the Systems Setting Change box, click Yes.

*NOTE: If TV Out does not work try a different RCA (composite) or S-Video cable.*