

8. Press F10 to save configuration changes and exit.

9. Select Yes and press ENTER.

II. PCG 505G 505GX 505F 505FX 705 707 717 719 729 731 735 808

This can be caused by devices attached to the PC Card.

1. Remove the device attached to the PC Card.

2. Attempt Shutdown.