

CD Rom Drive - The Effects of Drive Designation Changes

One of the most common questions asked by customers is how to change the CD Drive to D or E rather than the default setup of G.

Due to CD Rom applications which have been specifically written for the PCV70 and PCV90, certain CD's may not run properly. A listing of the CD's which will not run properly when the CD Rom Drive has been changed to D or E are as follows:

1. American Heritage Talking Dictionary - runs without sound
2. Cartopedia - Error Message will show "Unable to find the CD" and will ask for the appropriate path; insert the new CD Rom drive letter and the CD will run properly
3. The Family Doctor - Will not function at all; select Uninstall, remove the program, and then Reinstall
4. Blockbuster Entertainment Guide - Will not function at all; select Uninstall, remove the program, and then Reinstall
5. Billboard Music Guide - Will not function at all; select Uninstall, remove the program, and then Reinstall
6. Reader Rabbit - Fails to find the CD, will not run at all
7. Wipeout - Will not function at all; select Uninstall, remove the program, and then Reinstall. During the reinstall process, the program will ask if you want to install DirectX drivers; reply Yes to this question and install the drivers
8. All other CD's supplied with the PCV70/PCV90 will function with the reassigned drive