 
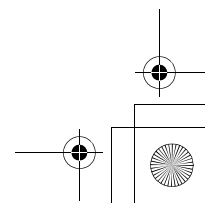 
 
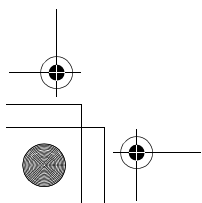 
 
 
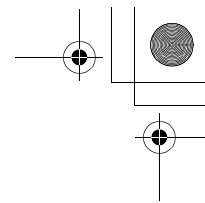 


SONY

VAIO® Computer Quick Start

PCV-W500GN1

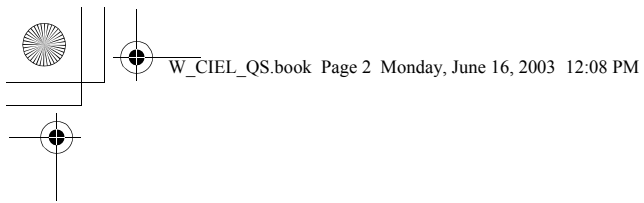

Safety and Legal Information

Notice

© 2003 Sony Electronics Inc. Reproduction in whole or in part without written permission is prohibited. All rights reserved. This manual and the software described herein, in whole or in part, may not be reproduced, translated, or reduced to any machine-readable form without prior written approval.

SONY ELECTRONICS INC. PROVIDES NO WARRANTY WITH REGARD TO THIS MANUAL, THE SOFTWARE, OR OTHER INFORMATION CONTAINED HEREIN AND HEREBY EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH REGARD TO THIS MANUAL, THE SOFTWARE, OR SUCH OTHER INFORMATION. IN NO EVENT SHALL SONY ELECTRONICS INC. BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES, WHETHER BASED ON TORT, CONTRACT, OR OTHERWISE, ARISING OUT OF OR IN CONNECTION WITH THIS MANUAL, THE SOFTWARE, OR OTHER INFORMATION CONTAINED HEREIN OR THE USE THEREOF.

SONY CANNOT WARRANT THAT THE FUNCTIONS DESCRIBED IN THIS GUIDE WILL BE UNINTERRUPTED OR ERROR-FREE. SONY ALSO ASSUMES NO RESPONSIBILITY, AND SHALL NOT BE LIABLE FOR ANY DAMAGES TO, OR VIRUSES THAT MAY INFECT, YOUR COMPUTER EQUIPMENT, OR OTHER PROPERTY ON ACCOUNT OF YOUR ACCESS TO, USE OF, OR BROWSING IN ANY DESCRIBED WEB SITE, OR YOUR DOWNLOADING OF ANY MATERIALS, DATA, TEXT, IMAGES, VIDEO, OR AUDIO FROM ANY DESCRIBED WEB SITE. WEB SITE INFORMATION IS OBTAINED FROM VARIOUS SOURCES AND MAY BE INACCURATE. COPIES OF COPYRIGHTED INFORMATION MAY ONLY BE MADE FOR LEGALLY PERMISSIBLE PURPOSES.

Sony Electronics Inc. reserves the right to make any modification to this manual or the information contained herein at any time without notice. The software described herein is governed by the terms of a separate user license agreement.

This product contains software owned by Sony and licensed by third parties. Use of such software is subject to the terms and conditions of license agreements enclosed with this product. Some of the software may not be transported or used outside the United States. Software specifications are subject to change without notice and may not necessarily be identical to current retail versions.

Certain product(s) included with this computer may include features such as copy protection and content management technology. USE OF THE SOFTWARE PRODUCT(S) REQUIRES AGREEMENT TO APPLICABLE END USER AGREEMENTS AND FULL COMPLIANCE WITH APPLICABLE PRODUCT ACTIVATION PROCEDURES. Product activation procedures and privacy policies will be detailed during initial launch of the software product(s), or upon certain reinstallations of the software product(s), or reconfigurations of the computer, and may be completed by Internet or telephone (toll charges may apply).

Updates and additions to software may require an additional charge. Subscriptions to online service providers may require a fee and credit card information. Financial services may require prior arrangements with participating financial institutions.

Important information for Canadian customers: Your new VAIO computer includes certain software versions or upgrades, and Internet services or offers that are available to U.S. customers only.

Sony, VAIO, the VAIO logo, Click to DVD, MovieShaker, DVgate, PictureGear, Handycam, MagicGate, Memory Stick, the Memory Stick logo, SonicStage, ImageStation, ATRAC3, and i.LINK are trademarks or registered trademarks of Sony.

Intel and Pentium are trademarks or registered trademarks of the Intel Corporation. Microsoft, Windows, the Windows logo and Windows XP are trademarks or registered trademarks of the Microsoft Corporation. PS/2 is a registered trademark of the IBM Corporation.

All other trademarks are trademarks or registered trademarks of their respective owners.



WOW, SRS and (O) symbol are trademarks of SRS Labs, Inc. WOW technology is incorporated under license from SRS Labs, Inc.



As an ENERGY STAR® Partner, Sony Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

The International ENERGY STAR® Office Equipment Program is an international program that promotes energy saving through the use of computers and other office equipment. The program backs the development and dissemination of products with functions that effectively reduce energy consumption. It is an open system in which business proprietors can participate voluntarily. The targeted products are office equipment such as computers, displays, printers, facsimiles and copiers. Their standards and logos are uniform among participating nations. ENERGY STAR is a U.S. registered trademark of the Environmental Protection Agency.

Owner's Record

The model number and serial number are located on the back of your Sony VAIO® computer. Record the model and serial number in the space provided here, and keep in a secure location. Refer to the model and serial numbers when you call the Sony Service Center.

Model Number:	
Serial Number:	

Safety Information and Caution

Your computer's installed optical drives may vary, depending on the system configuration you have purchased. See the online specifications sheet for details on your installed optical drives. For questions regarding your product or for the Sony Service Center nearest you, visit the Sony Computing Support Web site at <http://www.sony.com/pcsupport>.

- ☐ To prevent fire or shock hazard, do not expose your desktop to rain or moisture.
- ☐ To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.
- ☐ Never install modem or telephone wiring during a lightning storm.
- ☐ Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- ☐ Never touch uninsulated telephone wire or terminals unless the telephone line has been disconnected at the network interface.
- ☐ Use caution when installing or modifying telephone lines.
- ☐ Avoid using the modem during an electrical storm.
- ☐ Do not use the modem or a telephone to report a gas leak in the vicinity of the leak.
- ☐ The socket outlet shall be installed near the equipment and shall be easily accessible.



To change the backup battery, please contact your nearest Sony Service Center.



Caution—The use of optical instruments with this product will increase eye hazard. As the laser beam used in this product is harmful to the eyes, do not attempt to disassemble the drive cabinet. Refer servicing to qualified personnel only.



Danger—Visible and invisible laser radiation when open. Avoid direct exposure to beam.



For DVD-RW: Danger—Visible and invisible laser radiation when open. Avoid direct exposure to beam.



For CD-RW: Danger—Invisible laser radiation when open. Avoid direct exposure to beam.



Caution—For ADSL and V.90 modem models; to reduce the risk of fire, use only No. 26 AWG or larger telecommunication line cord.

- ☐ Pour prévenir tout risque d'incendie ou d'électrocution, garder cet appareil à l'abri de la pluie et de l'humidité.
- ☐ Pour prévenir tout risque d'électrocution, ne pas ouvrir le châssis de cet appareil et ne confier son entretien qu'à une personne qualifiée.
- ☐ Ne jamais effectuer l'installation de fil modem ou téléphone durant un orage électrique.
- ☐ Ne jamais effectuer l'installation d'une prise téléphonique dans un endroit mouillé à moins que la prise soit conçue à cet effet.
- ☐ Ne jamais toucher un fil téléphonique à découvert ou un terminal à moins que la ligne téléphonique n'ait été débranché de l'interface réseau.
- ☐ Soyez très prudent lorsque vous installez ou modifiez les lignes téléphoniques.
- ☐ Évitez d'utiliser le modem durant un orage électrique.
- ☐ N'utilisez pas le modem ni le téléphone pour prévenir d'une fuite de gaz vous êtes près de la fuite.



Pour changer la pile de rechange, veuillez contacter votre centre de service Sony le plus près.



Avertissement: L'utilisation d'instruments optiques avec ce produit augmente les risques pour les yeux. Puisque le faisceau laser utilisé dans ce produit est dommageable pour les yeux, ne tentez pas de désassembler le boîtier. Adressez-vous à un agent de service qualifié.



Danger: Radiation laser visible et invisible si ouvert. Évitez l'exposition directe au faisceau.



Pour les DVD-RW: Danger—Radiation laser visible si ouvert. Évitez l'exposition directe au faisceau.



Pour les CD-RW: Danger—Radiation laser visible et invisible si ouvert. Évitez l'exposition directe au faisceau.



Attention: Pour ADSL et V.90 modele modem; afin de réduire les risques d'incendie, n'utilisez qu'un cordon de communication NO. 26 AWG ou plus gros.

Regulatory Information

Declaration of Conformity

Trade Name: SONY
Model No.: PCV-W500GN1
Responsible Party: Sony Electronics Inc.
Address: 680 Kinderkamack Rd. Oradell, NJ 07649
Telephone: 201-930-6972

This phone number is for FCC-related matters only.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Model No.: PCVA-IMB5A

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and the receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Only peripherals (computer input/output devices, terminals, printers, etc.) that comply with FCC Class B limits may be attached to this computer product. Operation with noncompliant peripherals is likely to result in interference to radio and television reception.

All cables used to connect peripherals must be shielded and grounded. Operation with cables, connected to peripherals, that are not shielded and grounded, may result in interference to radio and television reception.

FCC Part 68

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the rear of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

This modem uses the USOC RJ-11 telephone jack.

A telephone plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. The REN is used to determine the quantity of devices which may be connected to the telephone line.

Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g. 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operations of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact the Sony Customer Information Service Center at 1-888-4-SONY-PC (1-888-476-6972), or write to the Sony Customer Information Center, 12451 Gateway Blvd., Fort Myers, FL 33913, or find Sony Customer Service on the Web at <http://www.sony.com/pcsupport>. If this equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment from the network until the problem is resolved.

Repair of this equipment should be made only by a Sony Service Center or Sony authorized agent. For the Sony Service Center nearest you, call 1-888-4-SONY-PC (1-888-476-6972), or visit the Sony Computing Web site at <http://www.sony.com/pcsupport>.

Connection to Party Line Service is subject to state tariffs. Contact the state public utility commission, public service commission, or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

Please use a surge arrestor against electrical surges.

Telephone Consumer Protection Act of 1991 (United States)

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device, including FAX machines, to send any message unless such message clearly contains, in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business, other entity, or individual sending the message, and the telephone number of the sending machine or such business, other entity, or individual. (The telephone number provided may not be a 900 number or any other number for which charges exceed local or long distance transmission charges.)

In order to program this information into your facsimile machine, see your fax software documentation.

Telephone Consumer Guidelines (Canada)

Please refer to your telephone directory under 'Privacy Issues' and/or 'Terms of Service.' For more detailed information, please contact:


CRTC
Terrasses de la Chaudière
Tour centrale 1 promenade du Portage
5 étage Hull PQ K1A 0N2.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Disposal of Lithium Battery

You can return your unwanted lithium batteries to your nearest Sony Service Center or Factory Service Center.

 In some areas the disposal of lithium batteries in household or business trash may be prohibited.

For the Sony Service Center nearest you, call 1-888-476-6972 in the United States or 1-800-961-7669 in Canada.



Do not handle damaged or leaking lithium batteries. In some areas, the disposal of lithium batteries in household or business trash may be prohibited.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

The battery pack used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 212°F (100°C), or incinerate. Dispose of used battery promptly. Keep away from children.

To change the lithium battery, please contact your nearest Sony Service Center.



Ne pas manipuler les batteries au lithium qui fuient ou sont endommagées.

Une batterie non conforme présente un danger d'explosion. La remplacer seulement par une batterie identique ou de type équivalent recommandé par le fabricant. Évacuer les batteries usées selon les directives du fabricant.

La manutention incorrecte du module de batterie de cet appareil présente un risque d'incendie ou de brûlures chimiques. Ne pas démonter, incinérer ou exposer à une température de plus de 100°C. Évacuer promptement la batterie usée. Garder hors de portée des enfants.

Pour changer la batterie au lithium, veuillez contacter votre centre de service Sony le plus près.

Industry Canada Notice

This equipment meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number (REN) is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed 5.

Avis de L'Industrie Canada

Le présent matériel est conforme aux spécifications techniques applicables d'Industrie Canada.

 
 
 
 
 
 
 
L'indice d'équivalence de la sonnerie (IES) sert à indiquer le nombre maximal de terminaux qui peuvent être raccordés à une interface téléphonique. La terminaison d'une interface peut consister en une combinaison quelconque de dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas 5.

Macrovision license

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision corporation. Reverse engineering or disassembly is prohibited.

Licence Macrovision

Ce produit intègre une technologie de protection de la loi sur le droit d'auteur, elle-même protégée par des déclarations de méthode de certains brevets et autres droits de propriété intellectuelle appartenant à Macrovision Corporation, ainsi qu'à d'autres propriétaires de droits. L'utilisation de cette technologie doit être autorisée par Macrovision Corporation. Elle est uniquement destinée à un usage privé et à d'autres fins de visualisation limitée, sauf autorisation contraire de la part de Macrovision Corporation. Tout désossage ou désassemblage est formellement interdit.

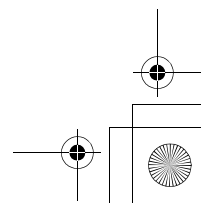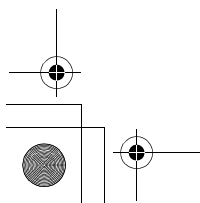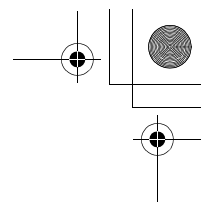

Contents

Getting Started15

Unpacking your Computer17

Locating Controls And Ports21

About the Front Panel22

About the Side Panels26

Setting Up Your Computer29

Connecting a USB Optical Mouse30

Connecting the Modem Cable31

Connecting the Power Cord32

Turning on Your Computer33

Registering your Computer34

Turning Off your Computer35

Upgrading and Maintaining your VAIO

Computer37

Overview38

Installing Memory39

VAIO Recovery Options.....47

About Recovery Options 48

About the Recovery Media Kit..... 50

Using the VAIO Recovery Wizard..... 54

Troubleshooting.....63

About VAIO Computer Functions..... 65

 
Support Options.....69

Immediate Help and Support 70




Help and Support Resources..... 71

Getting Started

Congratulations on your purchase of the Sony VAIO® computer! Your new, high-performance, multimedia computer combines state-of-the-art computer functionality with the latest audio, video and information technology features.



VAIO Computer Quick Start

   


Unpacking your Computer


Your computer may not be supplied with all of the accessories shown, depending on the system configuration you purchased. For details on the accessories supplied with your computer, see the online *Specifications* sheet.

Computer and supplied accessories

 System with attached Keyboard

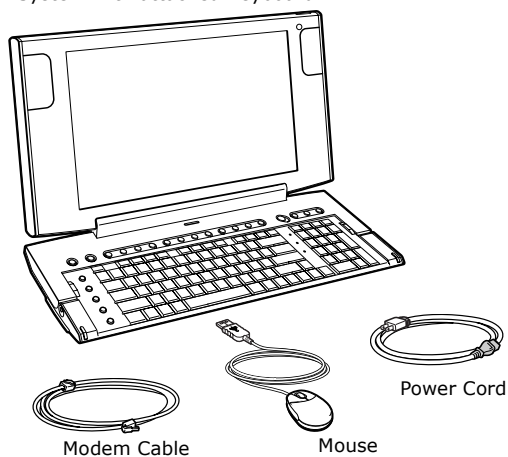

 Giga Pocket Personal Video Recorder accessories

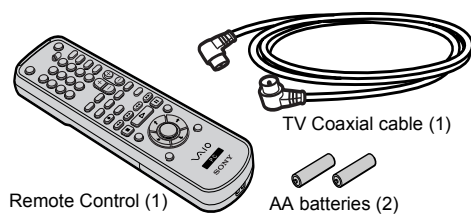

VAIO Computer Quick Start

 
Handling the system unit

Before attempting to lift your computer, close the keyboard against the unit.

Lift the unit by holding the right and left sides.

Do not lift your computer by holding the back of the unit.

Holding the back of the computer may cause damage.

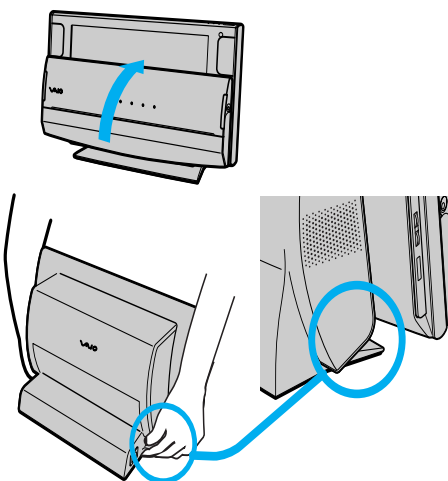

Manuals

- ❑ **VAIO® Computer Quick Start** — Provides basic information on setting up and registering your computer. The Quick Start also provides resources for technical support, safety guidelines and owner's information.
- ❑ **Microsoft® Windows® XP Guide** — Explains how to use the basic features of the latest Windows operating system.

Online Documentation

- ❑ **VAIO® Computer User Guide** — Contains information on the hardware and preinstalled software applications included with your system.


To access the online User Guide:

- 1 Click **Start** in the Windows taskbar, then click **Help and Support**.
- 2 From the **VAIO Help and Support Center** menu, click **VAIO User Guide**.

- ❑ **Specifications** — This online specifications sheet describes the hardware and software configuration of your VAIO computer. To view this online information:
- 1 Click **Start** in the Windows taskbar, then click **Help and Support**.
 - 2 From the **VAIO Help and Support Center** menu, click **VAIO User Guide**.
 - 3 Click the **Welcome** link. The Welcome page displays in the right-side frame.
 - 4 Locate the link in the text, “View the [VAIO® Computer Specifications...](#)”

Hard Disk Drive Recovery

 
Your computer is equipped with a utility program that enables you to recover your computer's operating system and preinstalled software. For more information about hard disk drive recovery:

 Your VAIO® computer is not supplied with System or Application Recovery CDs. Use the VAIO Recovery utility to recover your computer's operating system and preinstalled software.




- 1 Click **Start** in the Windows® taskbar, then click **Help and Support**.
- 2 From the **VAIO Help and Support Center** menu, click **VAIO Recovery Options**.

Other

Software Library containing the Microsoft software license agreement and Sony end-user license agreement.




VAIO Computer Quick Start

   

Locating Controls And Ports

This section is intended to familiarize you with the controls, ports and jacks that are available on your computer. To view the specific hardware configuration for your system, see the online specifications sheet.

 i.LINK is a trademark of Sony used only to designate that a product contains an IEEE 1394 connection. The i.LINK connection may vary, depending on the software applications, operating system, and compatible i.LINK devices. All products with an i.LINK connection may not communicate with each other.

 
Please refer to the documentation that came with your compatible i.LINK device for information on operating conditions and proper connection. Before connecting compatible i.LINK devices to your system, such as an optical or hard disk drive, confirm their operating system compatibility and required operating conditions.

 
VAIO Computer Quick Start

About the Front Panel

The front panel of your VAIO® computer is equipped with built-in stereo speakers and indicator lights. You can access the front panel of your VAIO® computer by lowering the keyboard. When the keyboard is not in use, you can fold it up and use the additional TV, channel, and volume controls.

Handling the System Unit

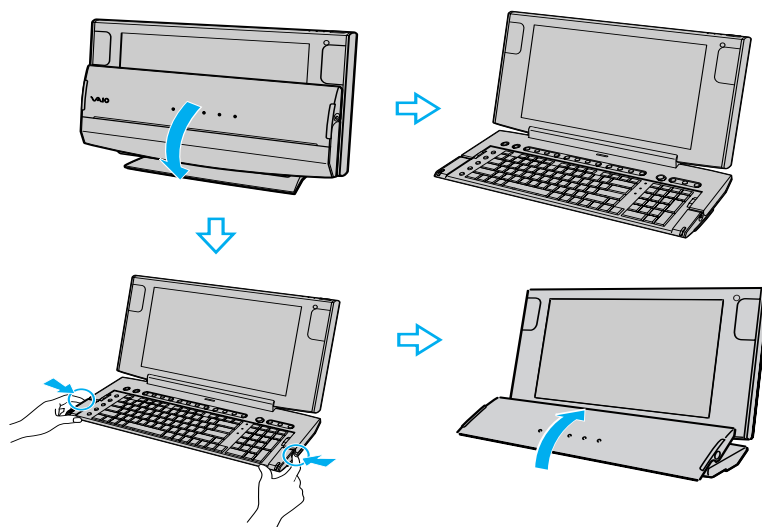


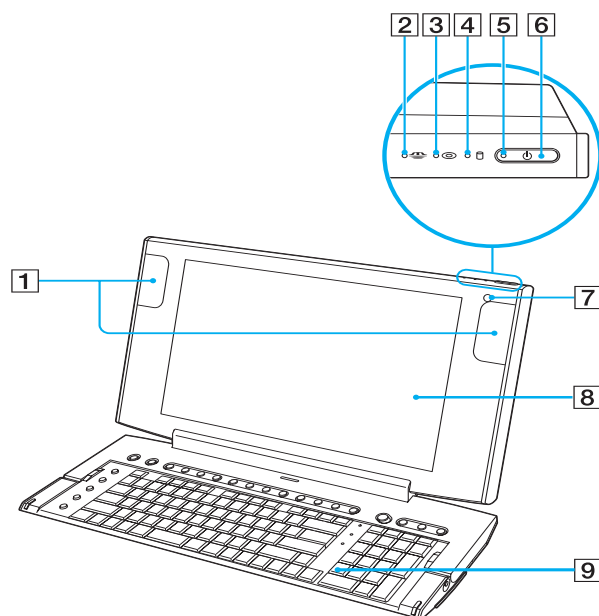*About the Front Panel***Front panel (Keyboard open)**

-
- | | |
|----------|--|
| 1 | Stereo speakers (built-in)
The stereo speakers provide sound for software, audio and video CDs. |
| <hr/> | |
| 2 | Memory Stick® media access indicator
Light is amber when the Memory Stick media slot is in use. |
| <hr/> | |
| 3 | DVD-RW drive access indicator
Light is amber when reading and writing data from and to the DVD-RW drive. |
| <hr/> | |
| 4 | Hard disk drive access indicator
Light is amber when reading and writing data from and to the hard disk. |
-

VAIO Computer Quick Start

 -
- 5 Power indicator**
Light is green when the power is on and amber when the computer is in Stand by mode.
-
- 6 Power button**
Turns the computer on and off.
-
- 7 Infrared receiver**
Communicates with the remote control (supplied), to turn on TV, change TV channels, and raise or lower volume.
-
- 8 Liquid Crystal Display (LCD) screen**
The attached LCD screen provides on-screen visual output to your computer's functional capabilities.
-
- 9 Keyboard with Shortcut keys (S keys)**
The attached keyboard uses a standard key arrangement, along with programmable function keys that launch specific applications.
-

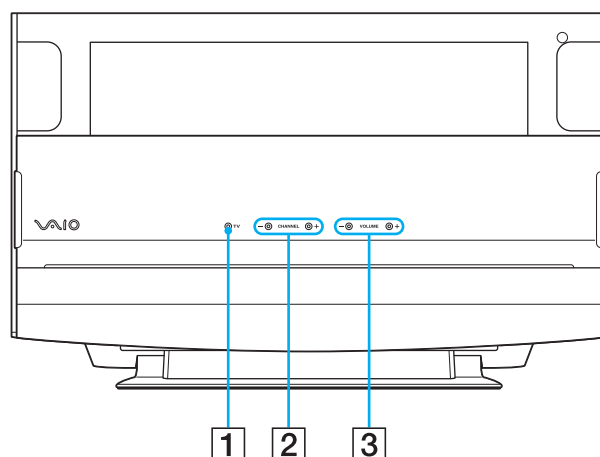*About the Front Panel***Front panel (Keyboard folded)**

-
- | | |
|----------|---|
| 1 | TV On button
Press to start the Giga Pocket™ Video Recorder software.* |
| <hr/> | |
| 2 | Channel +/- button
Press to change the TV channel or audio track.* |
| <hr/> | |
| 3 | Volume +/- button
Press to increase or decrease the computer speaker volume.* |
-

 
* Light is white when button is activated.

VAIO Computer Quick Start

About the Side Panels


The side panels of your computer contain the connections for supplied and optional accessories. The icons on the side panels help to locate and identify the connections on your computer.

Right panel

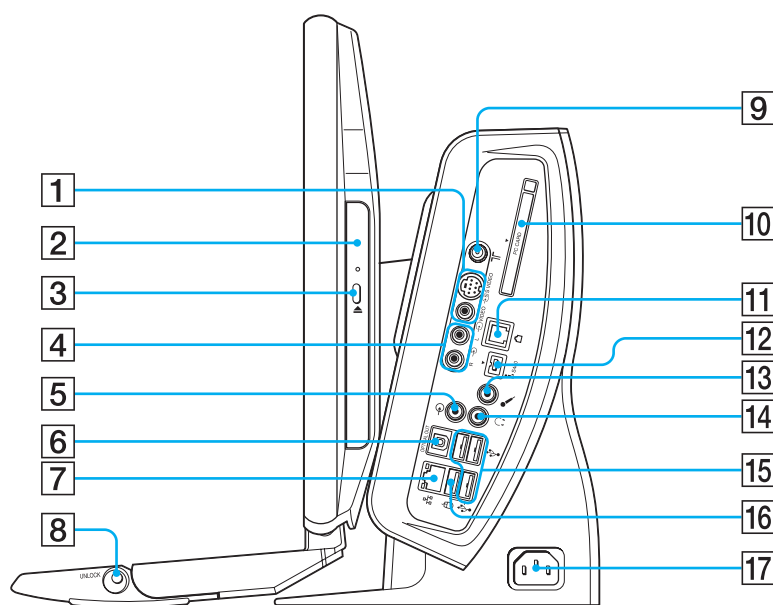

- | | |
|----------|---|
| 1 | S-video In jack
Connection for an S-video cable (optional).
Composite video In jack
Connection for a digital video or stereo A/V dubbing cable (optional). |
| 2 | DVD-RW drive
Reads data from compatible CD or DVD media. Writes data to a DVD-RW, DVD-R, CD-RW, or CD-R media. |
| 3 | DVD-RW drive eject button
Ejects a disc from the drive. |

 
About the Side Panels

-
- | | |
|-----------|---|
| 4 | Composite audio L In jack
Connection for an audio or stereo dubbing cable (optional).
Composite audio R In jack
Connection for an audio or stereo dubbing cable (optional). |
| 5 | Line In jack
Connection for an audio device. |
| 6 | S/P DIF Optical Out port
Connection for a digital audio or optical device. |
| 7 | Ethernet port
Connection for a 10BASE-T/100BASE-TX Ethernet.
(The port marked with  (Network) is for LAN connections only.) |
| 8 | Unlock button
Unlocks the keyboard for folding towards system unit. |
| 9 | VHF/UHF port
Connection for a TV coaxial cable (supplied). |
| 10 | PC Card slot
A PC Card (PCMCIA Card) can be inserted into this slot to increase your computer's functional capabilities. |
| 11 | Modem line jack
Connection for the modem cable (supplied) to the wall jack.* |
| 12 | i.LINK 4-pin S400 port
Connection for i.LINK compatible digital devices (IEEE 1394). |
| 13 | Microphone jack
Connection for a microphone (optional). |
| 14 | Headphones jack
Connection for optional speakers or headphones. |
| 15 | Universal Serial Bus (USB 2.0) ports (3)
Connections for compatible high/full/low-speed USB devices. |
| 16 | Universal Serial Bus (USB 2.0) port
Connection for a USB optical mouse (supplied). |
| 17 | AC Input port
Connection for the supplied power cord. |
-

* A splitter device (optional) is required to connect a telephone and modem line to your computer.

VAIO Computer Quick Start

 Left panel

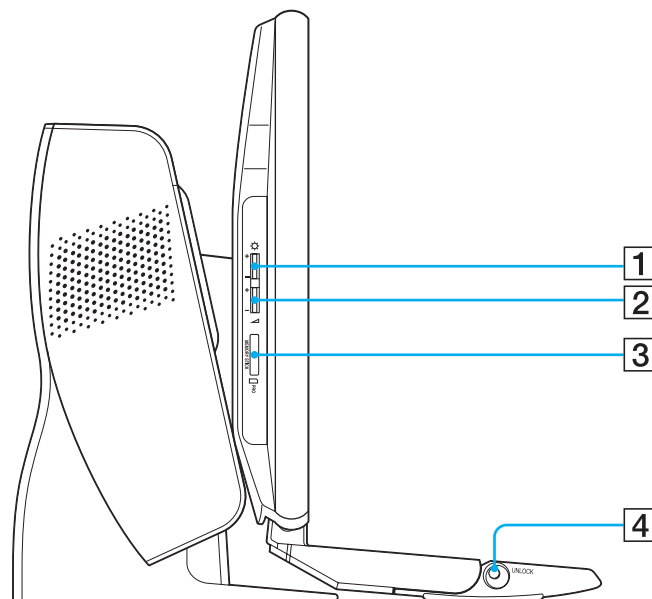

- | | |
|----------|---|
| 1 | Brightness control dial
Adjusts the brightness of the built-in LCD monitor. |
| 2 | Volume control dial
Increases or decreases the speaker volume. |
| 3 | Memory Stick® media slot
Reads and writes data from a Memory Stick media. |
| 4 | Unlock button
Unlocks the keyboard for folding towards system unit. |

Setting Up Your Computer

 
You can set up your system quickly and easily with the instructions provided in this section. For details on your system's hardware configuration, see the online specifications sheet.

VAIO Computer Quick Start

Connecting a USB Optical Mouse

- 1 Plug the USB optical mouse connector into the USB mouse port, located on the right panel of your computer.
- 2 Place the optical mouse on an appropriate surface to enable precision tracking.

To connect a USB mouse

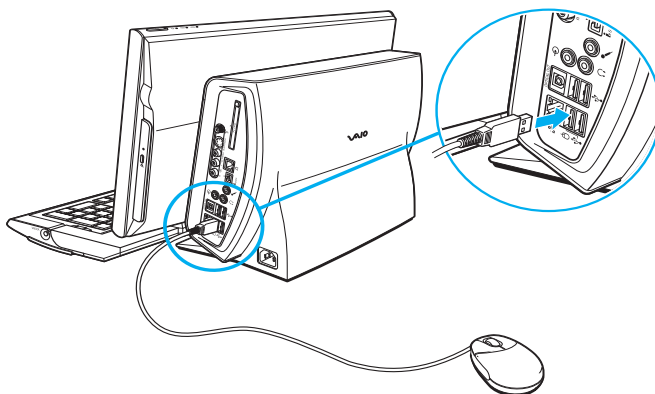

To use an optical mouse

An optical mouse requires an ideal surface texture in order to provide precision pointing and tracking.

- ❑ Use surfaces such as plain paper, card stock, or fabric that have minimal repetitive patterning.
- ❑ Avoid surfaces such as mirrors, smooth glass, or magazines that have half-tone printing.

 
Connecting the Modem Cable


Your computer is equipped with a single RJ-11 jack to connect the supplied modem cable. If you also want to use your walljack for your telephone line, purchase an optional “1-to-2” jack adapter device (splitter).

To connect the modem cable

- 1 Unplug your telephone cable from the wall jack.
- 2 Insert the telephone cable into one of the RJ-11 jacks on a splitter device (optional).
- 3 Insert one end of the modem cable (supplied) into an RJ-11 jack on the splitter device.
- 4 Insert the plug end of the splitter device into the wall jack.
- 5 Plug the modem cable into the modem line jack on the computer.

To connect the modem cable

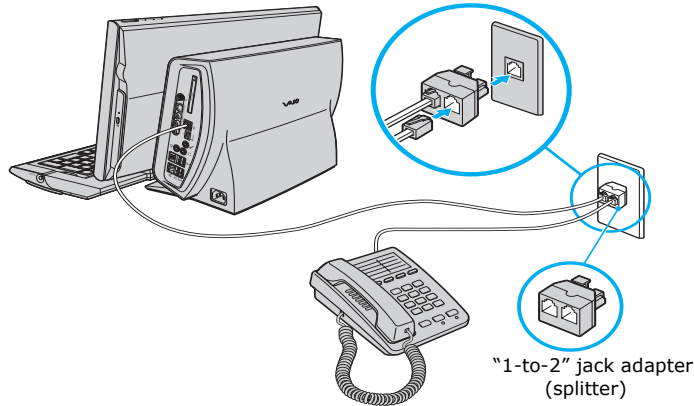


Your computer has a protective sticker  covering the Ethernet port located on the rear panel. Connect only 10BASE-T and 100BASE-TX cables to the Ethernet port. Using other cables or a telephone cable may result in an electric current overload that can cause a malfunction, excessive heat, or fire in the port. For help on connecting to a network, see your network administrator.


VAIO Computer Quick Start

Connecting the Power Cord

- 1 Plug the power cord into the AC input port on the right panel of the computer.
- 2 Plug the power cord into a grounded AC wall outlet or a power strip.

 To connect the power cord

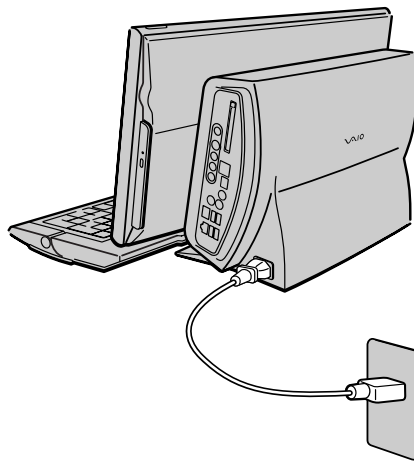


 Install your computer so that you can easily reach the power outlet in the event of an emergency.

Turning on Your Computer

Initially when you start your system, the computer may detect new hardware and prompt you to restart your computer. Respond to this prompt immediately.

Press the power button on the computer to turn on the system.

 To turn on your computer

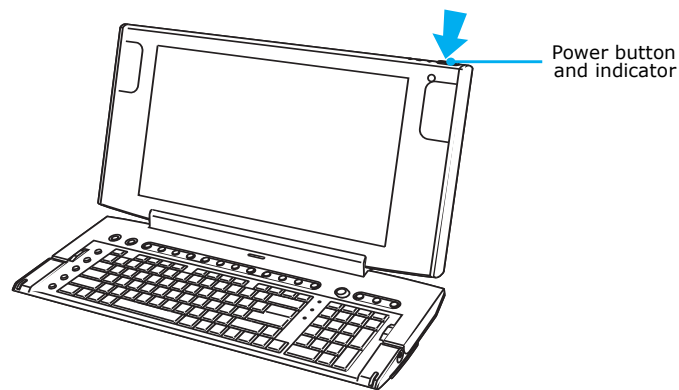


VAIO Computer Quick Start

Registering your Computer

Take advantage of Sony's commitment to quality customer support and receive these benefits by registering your computer:

- ☐ **Sony Customer Support** — Communicate with a Support Representative to troubleshoot problems you may be having with your computer.
- ☐ **Limited warranty** — Protect your investment. See the Limited Warranty Card for more details.

 You are prompted to register your computer the first time you turn on the unit. Follow the on-screen instructions to complete the registration process. If you are not able to register your computer during the first session, you are provided with additional registration opportunities later.

Turning Off your Computer

Follow these steps when you are ready to turn off your computer for an extended period of time.



To avoid loss of data, do not use the Power button to turn off the computer.

To turn off your computer

- 1 Click **Start** in the Windows taskbar, then select **Turn Off Computer**.

The Turn Off Computer dialog box appears.

- 2 Select the **Turn Off** option.



Respond to any prompts about saving your documents.

- 3 Wait for your computer to turn off automatically—the power indicator light turns off.

 
- 4 Turn off any peripheral devices connected to your computer.






If you plan to turn off your computer for a short period of time, you may want to use Stand by mode instead.

About the power button

If your system stops responding, press and hold the Power button for more than six seconds to force your system to shut down. You may need to repeat this procedure if your system does not shut down on the first attempt.



VAIO Computer Quick Start

   


Upgrading and Maintaining your VAIO Computer

In the future you may want to increase the functionality of your VAIO computer. This section provides information about upgrading your system's memory.

VAIO Computer Quick Start

Overview

Sony recommends contacting your local dealer for upgrade or maintenance of your new computer. Your local dealer is knowledgeable of this specialized personal computer and familiar with the safety practices and regulatory compliance required for using and modifying electronic equipment.

 To view the hardware configuration for your computer, see the online specifications sheet.

Before upgrading your computer

The upgrading procedures described in this section assume that you are familiar with the general terminology associated with personal computers and with the safety practices and regulatory compliance required for using and modifying electronic equipment.

Disconnect the computer from its power source and from telecommunications links, networks, or modems before you open the unit or follow any procedures described in this section.



Failure to disconnect your computer from its power source may result in personal injury or equipment damage.

Your computer may not be equipped with all of the hardware features mentioned in this section. The interior configuration of your system may vary from the illustrations, depending on the computer purchased.



Electrostatic discharge (ESD) can damage disk drives, add-on cards, and other components. Follow the procedures described in this section, only at an ESD workstation. If such a station is not available, do not work in a carpeted area and do not handle materials that produce or hold static electricity (for example, cellophane wrappers). Ground yourself by maintaining continuous contact with an unpainted metal portion of the chassis while performing the procedure.

Always turn the power off before you open the system or connect your computer to peripheral equipment. Otherwise, damage may occur to the integrated circuits in your computer.

Installing Memory

The amount of preinstalled memory may vary, depending on the system configuration you purchased. Your computer may ship with all available memory slots filled. See the online specifications sheet for details about the memory installed in your computer.

 


Observe the proper safety precautions when you add or remove the memory in your computer. See “Before upgrading your computer.”

Removing the system unit cover

- 1 Shut down your computer and turn off all peripheral devices, such as your printer.
- 2 Unplug your computer and disconnect any peripheral devices.
- 3 Locate and press the release button on the side of the system unit cover.


Locating the cover release button

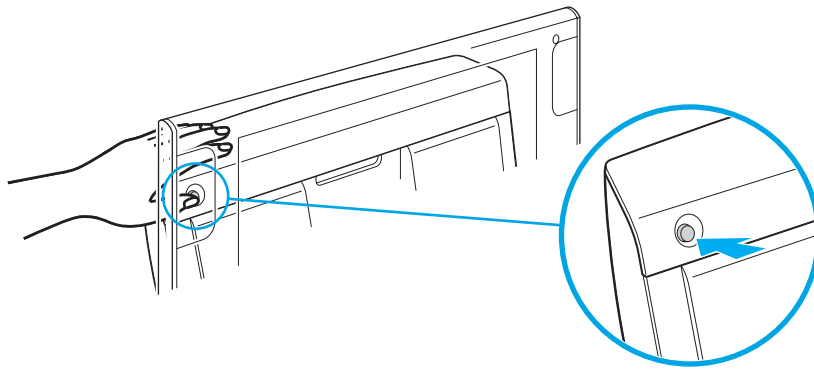

- 4 With the release button depressed, slide the cover to the right and lift away from the system unit.


VAIO Computer Quick Start

 Removing the cover

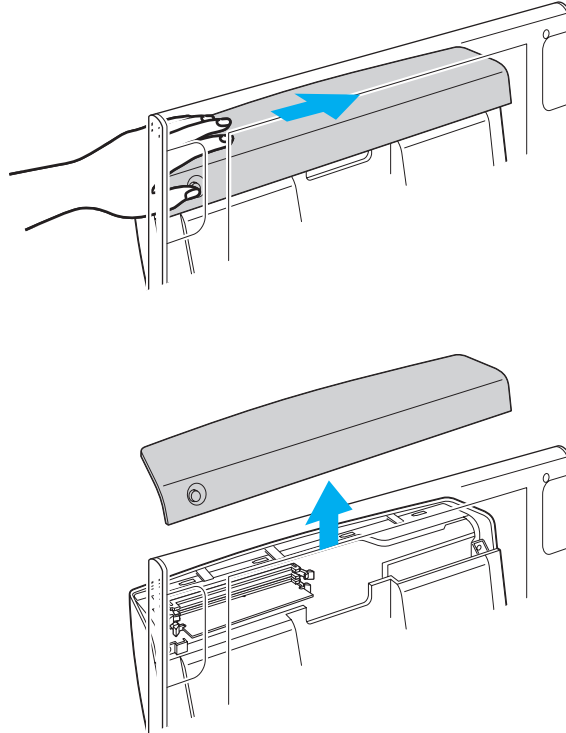

Removing the system unit memory cover

 
- 1 Remove the screw securing the memory cover.
- 2 Carefully detach the memory cover notches by shifting the memory cover to the left.

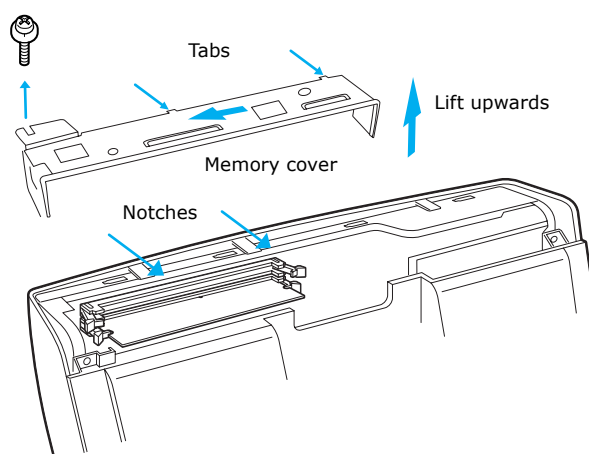Removing the memory cover

- 3 Lift the memory cover upwards to access the memory module.

VAIO Computer Quick Start**Removing a memory module**

 - 1 Locate the memory module(s) you wish to remove.
- 2 Push down on the latches, located on both sides of the module, to gently eject it from the slot.

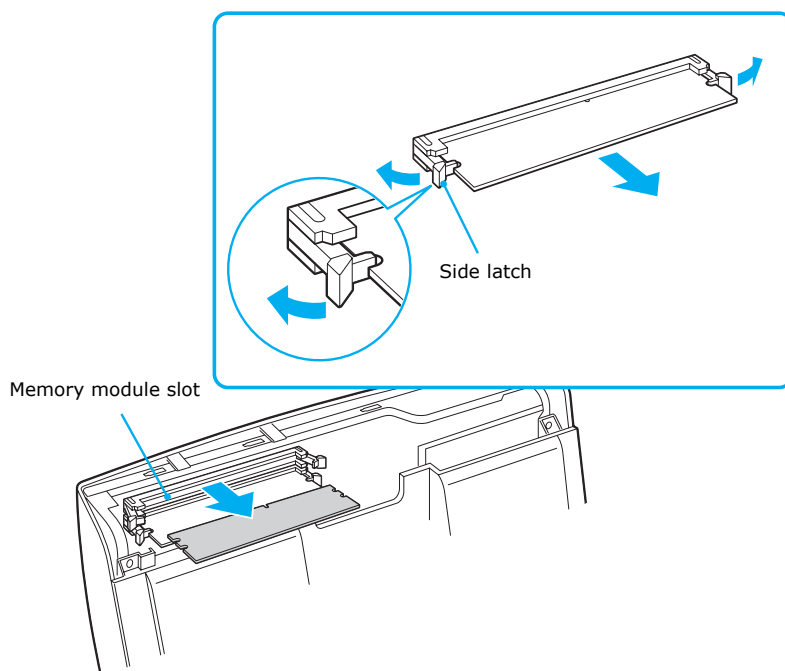
Removing a memory module

- 3 Hold the module by the sides and store it in a static-free bag.

Installing a memory module

- 1 Remove the memory module from its anti-static package, handling it by the edges.
- 2 Locate the notch on the bottom edge of the module and align the module to the open memory module slot.

 Installing a memory module

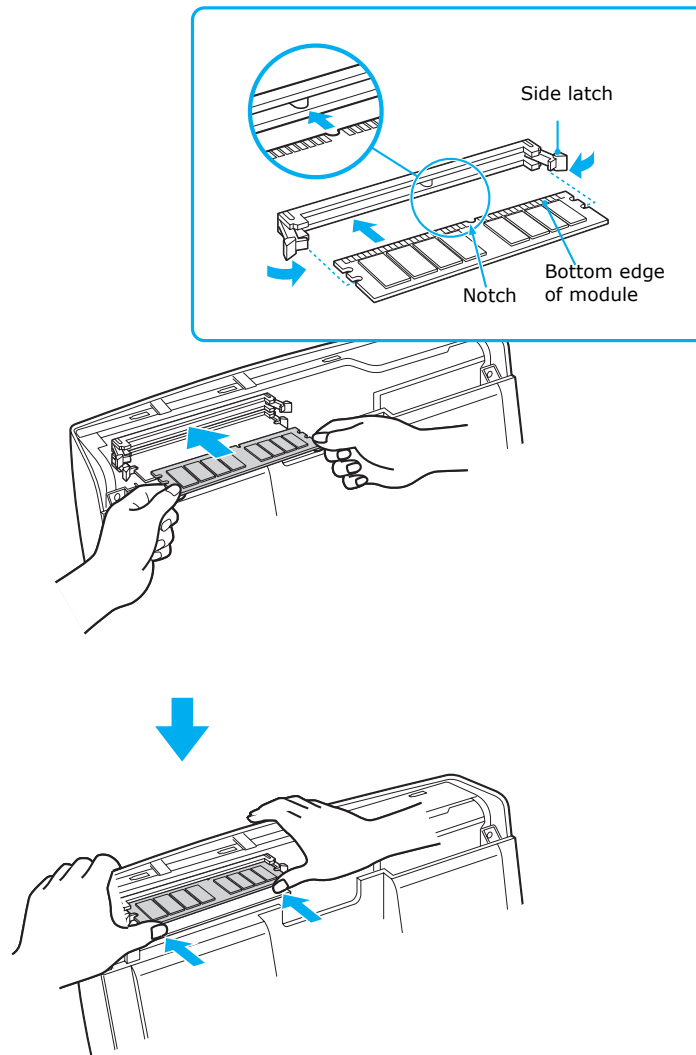

- 3** Firmly insert the bottom edge of the module into the slot.

VAIO Computer Quick Start

- 4 Press down evenly against the module's upper corners. The side latches snap into position, holding the memory module in place.

 


To avoid damaging a memory module or the memory module slot, move the side latches slightly outward to relieve pressure. The module is properly inserted when the side latches click into place.

Replacing the system unit memory cover

- 1 Align the memory cover tabs to the notches on the system unit's chassis.
- 2 Gently press down on the memory cover until the tabs lock into place.
- 3 Shift the memory cover to the right and replace the securing screw.


Replacing the memory cover

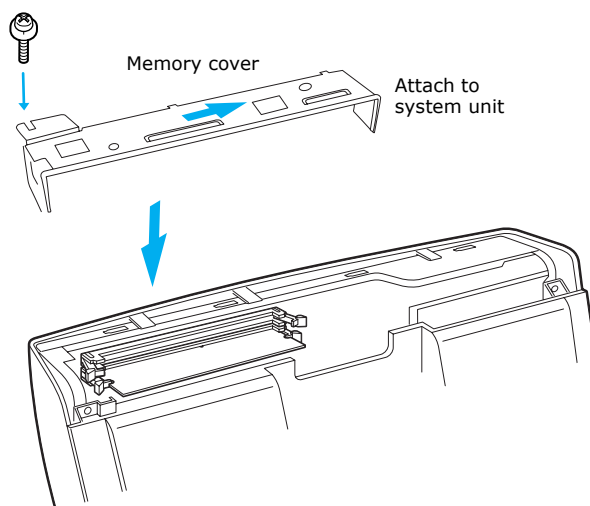


Replacing the system unit cover




- 1** Align the tabs on the cover to the tracks on the system unit's chassis.
- 2** Gently slide the cover to the left, until the tabs lock the cover into place.

  Replacing the cover

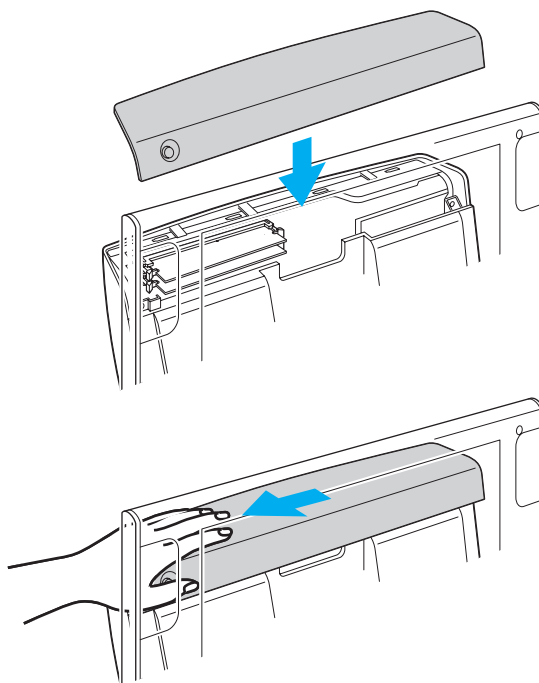



VAIO Computer Quick Start

   

VAIO Recovery Options

The VAIO® Recovery Wizard enables you to recover preinstalled software programs and the operating system on your computer. You can also use this utility to create a Recovery Media Kit. The Recovery Media Kit enables you to reclaim hard drive space and return your computer to normal operation.

 This program repairs or replaces software. For any hardware problems, contact a Sony authorized repair facility.

About Recovery Options

You have several options when recovering software or your computer's operating system.



When you recover drive C, drive D, or perform a complete recovery, the VAIO Recovery Wizard deletes and replaces all the files on the selected drives.

Sony recommends backing up your personal data to storage media or to another computer before proceeding with system recovery.

Accessing the VAIO Recovery Wizard

You can start the VAIO Recovery Wizard utility from the Microsoft® Windows® XP Start menu, from the Recovery Media Kit, or from using the F10 key¹ on notebook computers. Depending on how you access the VAIO Recovery Wizard, you have different system and software recovery options.

System and software recovery options

☐ Create the Recovery Media Kit

You can create a Recovery Media Kit, consisting of CDs and DVDs, which enable you to recover your computer at a later date if the software stops working properly. You can start the VAIO Recovery Wizard from the Windows XP Start menu, and create a Recovery Media Kit.

☐ Windows® System Restore

Return your computer's operating system to a previous working state by performing a System Restore. You can access this recovery option by starting the VAIO Recovery Wizard, or by using the Windows XP System Restore Wizard.

☐ Recover drive C

Returns the drive C to its original factory-installed settings. All previous data and settings on drive C are deleted. You can preserve data on other partitions, such as drive D. To recover drive C, access the VAIO Recovery Wizard from the Windows XP Start menu, the Recovery Media Kit, or by using the F10 key on notebook computers.

☐ Recover drives C and D

Return drives C and D to their original factory-installed settings. With this

¹ This feature is available for VAIO® notebook computers only.

About Recovery Options

option, you lose all data and settings on both drives. To recover drives C and D, start the VAIO Recovery Wizard from the Windows XP Start menu, the Recovery Media Kit, or by using the F10 key on notebook computers.

 Recovering drives C and D with the Recovery Media Kit is the only way to restore the hidden recovery drive.

☐ **Recover software programs**

Recover specific factory-installed software. To recover the original software programs, start the VAIO Recovery Wizard from the Windows XP Start menu or from the Recovery Media Kit. You can access this option by using **Disc 1** from your Recovery Media Kit.

☐ **Perform a complete hard disk drive recovery**

Completely recover your computer's hard disk drive. This option recovers drives C and D, and the hidden recovery drive. To perform a complete hard disk drive recovery, start the VAIO Recovery Wizard from your Recovery Media Kit.

VAIO Computer Quick Start

About the Recovery Media Kit

The Recovery Media Kit is created using your own CDs and/or DVDs. You can create the Recovery Media Kit, or purchase it from Sony.

Recovery Media Kit overview

Confirm that you have sufficient CD and/or DVD recordable media available before you begin creating the Recovery Media Kit. You should also have a permanent marking pen ready, to label each CD and/or DVD media. You can create your kit using a single type of media or by combining media types, as follows:

- ☐ One recordable CD (CD-R) and up to two recordable DVDs (DVD-R or DVD+R)
(Your VAIO® computer must be equipped with a DVD-RW¹ or DVD±RW drive.)
- ☐ Up to 12 recordable CDs (CD-R)
(Your VAIO computer must be equipped with a CD-RW drive.)

Before you begin creating the Recovery Media Kit, prepare your computer for the process, as follows:

- ☐ Close all open programs.
- ☐ Disconnect all network connections.
- ☐ Disconnect all peripheral devices.
- ☐ Do not interrupt the power.
- ☐ Disable any virus protection software.
- ☐ Disable your screen saver.

Creating the Recovery Media Kit


The Recovery Media Kit can be used to start the VAIO Recovery Wizard, in the event your system is unable to start normally. You can reclaim the portion of your hard drive that is allocated to system recovery using the Recovery Media Kit.

 
¹ A DVD-RW drive supports DVD-R media only.

*About the Recovery Media Kit***To create the Recovery Media Kit**

- 1 Click **Start** in the Windows® taskbar, point to **All Programs**, and then click the **VAIO® Recovery Wizard**.

The VAIO Recovery Wizard appears.

 You can start the VAIO Recovery Wizard by double-clicking the VAIO Recovery Wizard icon in the Windows taskbar notification area.

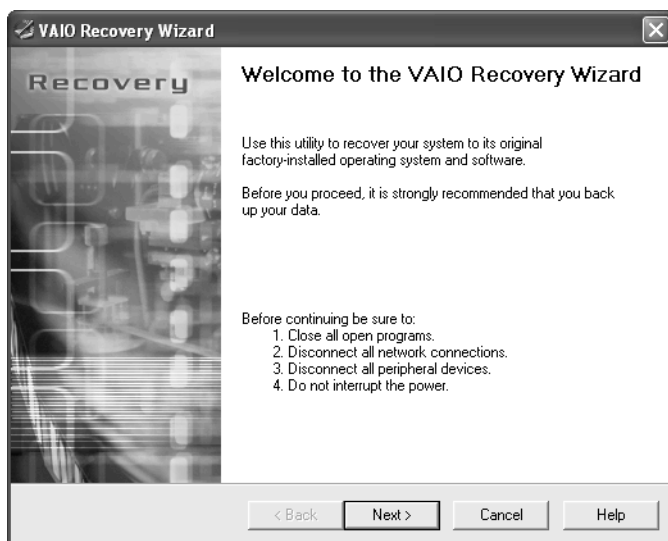VAIO Recovery Wizard

- 2 Read the on-screen information. Click **Next**.
- 3 Select **Create Recovery Media Kit (Strongly Recommended)**, and click **Next**.

*VAIO Computer Quick Start**VAIO Recovery Wizard — Selecting Create Recovery Media Kit*

- 4 Select the Recovery Media Kit that you want to create.

You can create your kit using a single type of media or by combining media types, as follows:

- ☐ One recordable CD (CD-R) and up to two recordable DVDs (DVD-R or DVD+R)
(Your VAIO® computer must be equipped with a DVD-RW¹ or DVD±RW drive.)
- ☐ Up to 12 recordable CDs (CD-R)
(Your VAIO computer must be equipped with a CD-RW drive.)


- 5 Click **Next**. Your computer's optical drive tray opens automatically.

- 6 Insert a blank disc into the drive and close the drive. Click **Next**.

The CD creation process begins. A window with a progress bar appears.

¹ A DVD-RW drive supports DVD-R media only.


About the Recovery Media Kit

 The time required to create each CD or DVD may vary, depending on your optical drive's recording speed.

- 7 When prompted, eject the disc. Label the top of the disc with a permanent marker according to the on-screen instructions.
- 8 Repeat steps step 6 through step 7 for each CD or DVD.
- 9 When the text, **The Recovery Media Kit is complete** appears, click **OK**.
- 10 Click **Finish**. Store the Recovery Media Kit in a safe location.

To order the Recovery Media Kit

- 1 Go to the Sony Direct Accessories and Parts Center Web site at <http://servicesales.sel.sony.com>.
- 2 Enter your computer's model number (for example, PCV-XXX), and click **List Parts and accessories**.
- 3 Follow the online instructions to order the Recovery Media Kit.

 If you are not able to access the Sony Direct Accessories and Parts Center Web site, contact a customer service representative at 1-800-488-7669.

VAIO Computer Quick Start

Using the VAIO Recovery Wizard

The VAIO® Recovery Wizard provides recovery options for your computer. You can access this tool from Windows® XP Start menu, your Recovery Media Kit, or by pressing the F10 key¹ on your notebook computer.

Starting the VAIO Recovery Wizard

To access the VAIO Recovery Wizard from Windows XP

- 1 Click **Start** in the Windows® taskbar, point to **All Programs**, and click **VAIO Recovery Wizard**.

 Using the VAIO Recovery Wizard may require you to restart your computer, even if you cancel and exit the wizard.

- 2 From the **Welcome** window, click **Next**.
- 3 Choose one of the available menu options.

To access the VAIO Recovery Wizard from the Recovery Media Kit

- 1 Press the power switch on the computer to turn on the power.
- 2 Open the optical drive, and place the **Startup Recovery Disc** in the optical drive.
- 3 Close the drive.
- 4 Turn off your computer.
- 5 Wait for approximately 30 seconds, and then turn on the computer.
- 6 When prompted, insert the **Recovery Disk 1** into the optical drive, and then click **OK**.

The VAIO Recovery Wizard appears.

- 7 Click **Next**.
- 8 Choose one of the available menu options.

¹ This feature is available for VAIO® notebook computers only.

Using the VAIO Recovery Wizard

To start the VAIO Recovery Wizard using the F10 Key (for notebook computers only)

- 1 Turn off your notebook computer.
- 2 Press the power switch on the computer to turn on the power.
- 3 When you see the VAIO logo appear on the computer's screen, briefly press the **F10** key.
- 4 Click **Next**.
- 5 Choose one of the available menu options.

Using the VAIO Recovery Wizard

To use Windows System Restore from the VAIO Recovery Wizard

- 1 Start the VAIO® Recovery Wizard, and click **Next**.
- 2 Select **Proceed with System Recovery**, and click **Next**.
- 3 Select **Windows® System Restore**, and click **Next**.
- 4 Follow the on-screen instructions.

VAIO Computer Quick Start

VAIO Recovery Wizard — Selecting Windows System Restore



To recover drive C

- 1 Start the VAIO Recovery Wizard, and click **Next**.
- 2 Select **Proceed with System Recovery**, and click **Next**.
If using the Recovery Media Kit, skip this step.
- 3 Select **C Drive Recovery**, and click **Next**.

VAIO Recovery Wizard — Selecting C Drive Recovery

- 4 Read the on-screen information. Click **Next**.
- 5 The wizard begins the drive C recovery. When it is finished, click **Next**.
- 6 Click **Finish**. Your computer restarts.

To recover drives C and D (and reclaim all space on the hard disk drive)

- 1 Start the VAIO® Recovery Wizard, and click **Next**.
- 2 Select **Proceed with System Recovery**, and click **Next**.
(If you are using the Recovery Media Kit, skip step 2.)
- 3 Select **Custom Recovery (for Advanced Users)**, and click **Next**.
- 4 Select **C and D Drive Recovery**, and click **Next**.

If you are using the Recovery Media Kit, you have two choices for this recovery option:

- ☐ **Keep the Recovery Drive (Recommended)**

VAIO Computer Quick Start

- ❑ **Remove the Recovery Drive.**

VAIO Recovery Wizard — Selecting the C and D Drive Recovery option



- 5 Choose the size of drive C. Any remaining disk space is allocated to drive D (minus the space allocated for the recovery drive). Click **Next**.

 Computers that come equipped with Giga Pocket software do not allow you to set the drive D to zero.

- 6 The wizard starts implementing recovery. When it is finished, click **Next**.
- 7 Click **Finish**, and the computer restarts.


To recover software applications

- 1 Start the VAIO® Recovery Wizard, and click **Next**.
- 2 Select **Proceed with System Recovery**, and click **Next**.

If using the Recovery Media Kit, skip this step.

Using the VAIO Recovery Wizard

- 3 Select **Custom Recovery (for Advanced Users)**, and click **Next**.

 If you select the Application Recovery option, you cannot return to the system recovery portion of the VAIO® Recovery Wizard without restarting your computer.

- 4 Select **Application Recovery**, and click **Next**.

VAIO Recovery Wizard — Selecting Application Recovery

 


- 5 Click to select the check box for each software program you want to recover. Click **Next**.

You may need to use the scrollbar to view all available software programs.

VAIO Computer Quick Start


VAIO Recovery Wizard — Selecting applications

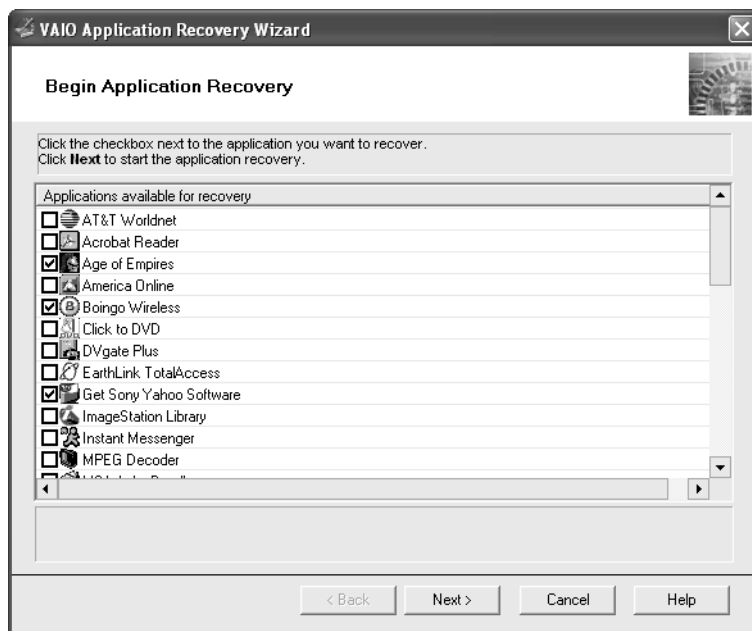

- 6 As your computer prepares to install each application, a status indicator appears. You may see installation wizards, messages, and prompts. Follow the instructions provided in each wizard, and respond to each prompt or message.

When the selected software has been recovered, the **Application Recovery Complete** window appears.

- 7 If you want to recover additional software, click **Back**. The **Application Recovery** window appears with a listing of the available software titles.
- 8 Click **Finish**. Your computer restarts.

 If the recovered software does not function properly or you see an installation error message, try recovering the software again.

To perform a complete hard disk drive recovery

You must use the Recovery Media Kit to perform a complete hard disk drive recovery.

 
- 1 Press the power switch on the computer to turn on the power.
- 2 Open the optical drive, and place the **Startup Recovery Disc** in the optical drive.
- 3 Close the drive.
- 4 Turn off your computer.
- 5 Wait for approximately 30 seconds, and then turn on the computer.
- 6 When prompted, insert the **Recovery Disk 1** into the optical drive, and then click **OK**.

The VAIO Recovery Wizard appears.




- 7 Click **Next**.
- 8 Select **Custom Recovery (for Advanced Users)**, and click **Next**.
- 9 Select **Complete Recovery**, and click **Next**.
- 10 You may see installation wizards, messages, and prompts. Follow the instructions provided in each wizard, and respond to each prompt or message. Your computer may restart.
- 11 When the optical drive ejects, remove the disc. Close the drive, and click **Next**. Your computer may restart several times.

Additional Information

- ☐ Certain software, such as DVgate™ Plus software, automatically saves data to drive D. If you choose not to have a drive D partition, you must change the software settings to enable file saving to drive C.
- ☐ Resizing your hard disk drive partitions with third-party software programs can result in the loss of the VAIO® Recovery Wizard.
- ☐ Giga Pocket™ software requires a drive D in order to operate. For VAIO® computers with Giga Pocket software preinstalled, you cannot set the drive D size to zero.




VAIO Computer Quick Start

 
 
 


Troubleshooting

 This section describes how to troubleshoot common problems. You can also find helpful information on how to use your computer's hardware features and preinstalled software. Your computer may not be equipped with all of the features or software discussed in this section, depending on the system configuration purchased.



VAIO Computer Quick Start

   

About VAIO Computer Functions

My computer does not start.

- ☐ Verify that the computer is plugged into a power source and that it is turned on. Check that the power indicator is lit on the front panel of the computer.
- ☐ Confirm that a disk is not in the floppy disk drive* (unless you are using a bootable floppy disk).
- ☐ Confirm that a CD is not in an optical drive (unless you are using a bootable CD).
- ☐ Confirm that the power cord and all cables are connected firmly.
- ☐ If you plugged the computer into a power strip or Uninterruptible Power Supply (UPS), make sure the power strip or UPS is turned on and working.
- ☐ Verify that the monitor is plugged into a power source and turned on.
If your system has a built-in monitor, confirm that it is plugged into an appropriate power source and that the system is turned on.
- ☐ Verify that the brightness or contrast control dials are adjusted correctly. (See the manual that came with your display for details.)
- ☐ Confirm that the computer is not in stand by mode by pressing any key on the keyboard.

Why did my computer or software stop responding?

You can try to locate and close the software application that has stopped responding.

- 1** Press the **Ctrl+Alt+Delete** keys. The Windows Task Manager window appears.
- 2** From the Applications tab, locate the application that has the status message, **"Not responding."**
- 3** Select the application that has a **Not Responding** status and click **End Task**. Windows attempts to close the application.

If your computer does not respond or the application does not close, try the following steps:

* Certain VAIO computers are not equipped with a floppy disk drive. You can purchase this equipment separately.

VAIO Computer Quick Start

- 1 Save any open files, if possible.
- 2 Press the **Alt+F4** keys. The Turn Off Computer window appears.
- 3 Click **Restart**.

If your computer still does not respond and you cannot restart, shut down your computer by pressing and holding the power button for more than six seconds.

If the software application continues to stop responding or causes your computer to stop responding, contact the software publisher or designated technical support provider.



Pressing and holding the power button for more than six seconds, may result in the loss of data from files that are currently open.

Why does the Windows operating system stop responding during shutdown?

The Windows operating system may not shut down properly for many reasons, including incompatible or conflicting drivers, damaged files, or non-responsive hardware. For troubleshooting information, you can search Windows Help.

- 1 Click **Start** in the Windows taskbar and select **Help and Support**. The **VAIO Help And Support Center** menu appears.
- 2 Select **Fixing a Problem** and then select **Startup and Shut Down problems**. A list of specific problem topics appears on the right side of the dialog box.
- 3 Select **Startup and Shutdown Troubleshooter**. Follow the on-screen instructions according to your specific situation.

Why is my system running slowly?

 
- ☐ The system responsiveness varies depending with the number of applications that are open and running. Close any applications that you are not currently using.
- ☐ Increasing the system memory may also help. For information on installing memory, please see the online VAIO User Guide.

To access the online User Guide:




- 1 Click **Start** in the Windows taskbar, and then click **Help and Support**.
- 2 From the **VAIO Help And Support Center** menu, click **VAIO User Guide**.

How do I change the video resolution of my display?

- 1 Click **Start** in the Windows taskbar, and then select **Control Panel**.
- 2 Select **Appearance and Themes**, and then select **Change the screen resolution**.
- 3 Click the **Settings** tab.
- 4 Change the Screen resolution and Color quality to the desired levels.
- 5 Click **Apply** and then click **OK**.



VAIO Computer Quick Start

   

Support Options

Sony provides several options to help solve common problems or to locate support for your VAIO® computer. This section describes all available resources and offers suggestions on how to access this information for maximum results.

Immediate Help and Support

You can locate helpful information immediately by consulting your hard copy guides and supplements, or by accessing the online Computer User Guide and the individual software Help files.

Your computer is supplied with these support options:


- ❑ **VAIO® Computer Quick Start** — The Quick Start contains information on how to set up your computer quickly and easily. You can find instructions on how to plan an ergonomic work space, connect power cords, cables and peripheral devices, and register your computer with Sony.
- ❑ **VAIO® Computer User Guide** — The online User Guide provides information about configuring, maintaining, upgrading and troubleshooting your computer. To access the online manual:
 - 1 Click **Start** in the Windows® taskbar, then click **Help and Support**.
 - 2 From the **VAIO Help And Support Center** menu, click **VAIO User Guide**.
- ❑ **Specifications** — The online specifications sheet describes the hardware and software configuration of your VAIO computer. To view this online information:
 - 1 Click **Start** in the Windows taskbar and click **Help and Support**.
 - 2 From the **VAIO Help And Support Center** menu, click **VAIO User Guide**.
 - 3 Locate the link in the text, “View the [VAIO® Computer Specifications...](#)”
- ❑ **Preinstalled software Help files** — Each preinstalled software provides online Help within the software. In these Help files, you can find tutorials that teach you to use the software and locate troubleshooting support. To access software Help files:
 - 1 Click **Start** in the Windows taskbar and point to **All Programs**. A submenu appears, listing all preinstalled software applications. (Sony software Help can be located from the submenu.)
 - 2 Click the desired software application. The software’s main window appears.
 - 3 From the menu bar, click **Help**. The Help file appears.

Help and Support Resources

If the information provided with your VAIO® computer does not provide an immediate solution or you would like to get direct support, try these help and support resources.

Software Help and Support

The contact and support information for the preinstalled software on your system is located in the online specifications sheet. Software support is free of charge for 90 days after the original date of purchase.

 Your computer may not be supplied with all of the software discussed in this section, depending on the system configuration you purchased. To view the specific software preinstalled on your computer, see the online specifications sheet.

Sony Computing Support Web site

Online help and support are available 24 hours a day, seven days a week, when you visit the Sony Computing Support Web site. You can access the Web site at <http://www.sony.com/pcsupport>. The Sony Computing Support Web site provides:


- ☐ Information about your specific model computer, such as
 - ☐ hardware and software specifications.
 - ☐ upgrade and maintenance procedures.
 - ☐ safety and legal information.
 - ☐ quick solutions to common problems.
- ☐ An automated tutorial library that contains interactive, easy-to-understand lessons on using your computer's hardware and software features.
- ☐ Links that enable you to:
 - ☐ quickly find the nearest Sony service center locations.
 - ☐ arrange for repairs or check repair status.
 - ☐ review warranty information.
 - ☐ e-mail your question or comments to the Sony Customer Information Services Center.
 - ☐ check pricing and availability for products, accessories and parts, as well as purchase online.
 - ☐ access the Sony Solutions Knowledge Base, a database that contains answers to many frequently asked questions.

VAIO Computer Quick Start

Sony Customer Information Services Center

If other support options do not resolve your issue, you can contact a Sony Support representative directly.

Before making a call to the Sony Customer Information Services Center, have this basic information readily available.

- 1 VAIO® computer system type
- 2 Model number
- 3 Serial number^{*}
Example: 
- 4 Operating system
- 5 Hardware feature or software application that has a problem. (See “Help and Support Resources” for the appropriate software contact information.)
- 6 Brief description of the issue.

For VAIO® computers purchased in the U.S. and Canada, contact a Sony Support representative at 1-888-476-6972.

^{*} The serial number is located on the back panel of your computer. The serial number is on a white barcode label.

