


Replacing the stylus


To remove the stylus

- 1 Turn off the amplifier.
- 2 Grasp the stylus holder and pull it away in the direction of the arrow from the body of the cartridge.

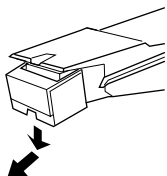


To install the stylus

- 1 Insert the stylus grip into the cartridge receptacle.

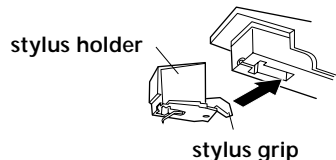


 - 2 Push up the stylus holder until it clicks.




To remove the stylus cover

Pull the stylus cover in the direction of the arrow (forward).

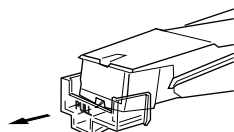

To install the stylus cover

Match the grooves on the inside of the stylus cover with the rib on the stylus holder, then push the stylus cover lightly until it is all the way on.

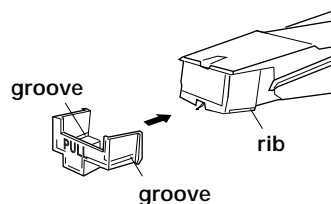

Setting the EQ switch

Set the EQ switch according to the jacks of your stereo system (amplifier).

- When your stereo system (amplifier) has PHONO input jacks (connect to PHONO input jacks)
→set to OFF.
- When your stereo system (amplifier) does not have PHONO input jacks (connect to AUX, VIDEO input jacks, etc.)
→set to ON.

