 


TV POWER	*If programmed, turns your TV and/or audio equipment on or off.
SAT POWER	Puts the Receiver in standby mode.
ENTER/JUMP	Changes the channel to an entered number, or jumps to the previous channel.
TV/VIDEO	*If programmed, selects video input for your TV.
DISPLAY	If Program Guide is visible, displays Program Guide options. Otherwise, brings up the Channel Banner.
SAT/TV Switch	*If programmed, sets the remote to send the channel changing signal to either the Receiver or the TV.
TiVo CENTRAL	Takes you to TiVo Central™.
GUIDE	Displays the Program Guide. Press again to dismiss the Program Guide.
SELECT	Chooses (selects) the currently highlighted item.
SLOW	Plays a program in slow motion.
FORWARD	Three speed fast forward. You can also press PAUSE and then press FORWARD for frame-by-frame forward.
PAUSE	Pauses programs and saves your place.
ADVANCE	Advances to live TV. In a recorded program, press once to jump to the end of a program, twice to jump to the beginning.
CHAN UP/DOWN	Changes channels. Also pages up/down in lists (very handy).

Your Receiver uses some graphic symbols, or icons, to show various kinds of information. A Glossary of Icons is included at the back of this guide.


** You must program the remote control to take advantage of these features. For information on programming the remote control, see the Installation Guide.*

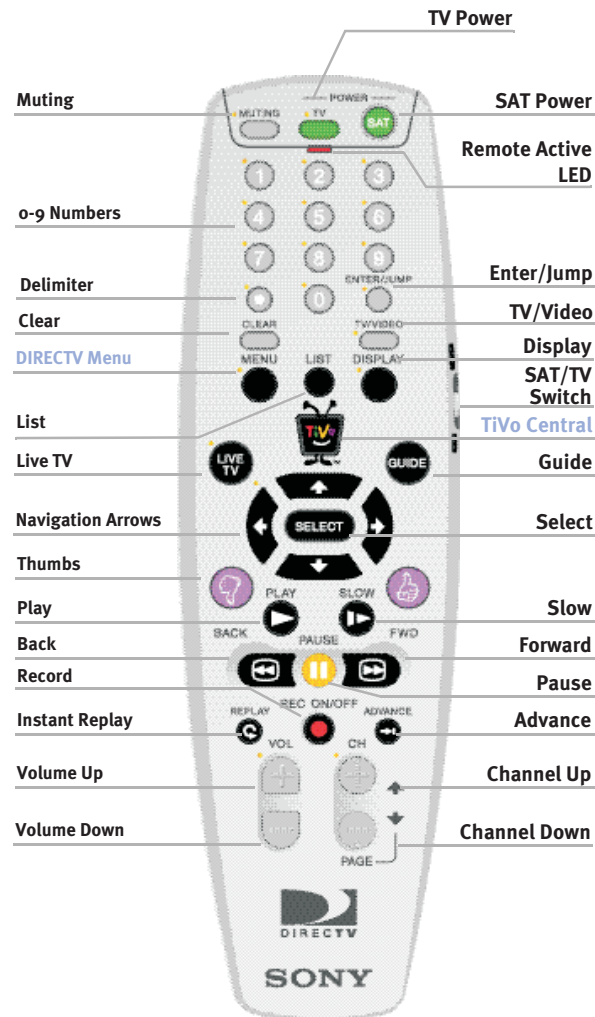


MUTING	*If programmed, turns sound on/off on your TV and/or audio visual equipment.
0-9 Number Buttons	Enter numbers to change channels or for text entry. For two-part channel numbers, use the DELIMITER key to enter the period that separates the first three digits from other digits.
DELIMITER	Enters a period to separate the first three digits from other digits in two-part numbers.
CLEAR	Clears Program Guide, Channel Banner, Status Bar, text, and channel numbers. Also clears programs from the Now Playing List.
DIRECTV MENU	Takes you to the DIRECTV Menu.
LIST	Takes you to Now Playing List.
LIVE TV	Takes you to live TV.
Navigation Arrows	Move the highlight bar and UP, DOWN, RIGHT and LEFT. RIGHT and LEFT change screens. RIGHT arrow also changes the Channel Banner.
THUMBS	Use to show that you like or don't like a program.
PLAY	Plays a program at normal speed.
BACK	Three speed reverse. You can also press PAUSE and then press BACK for very slow reverse.
RECORD	Starts and stops recordings of live TV.
INSTANT REPLAY	Instantly replays the last 8 seconds of programming. Useful for watching sports, replaying jokes, or when you fast forward a bit too far.
VOL UP/DOWN	*If programmed, controls TV and/or stereo volume.

Introducing the Remote Control

 You control your DIRECTV Receiver with TiVo by selecting from a system of easy to use menus. Use the remote control's *navigation arrows*—UP, DOWN, RIGHT and LEFT—to move the blue *highlight bar* (or *highlight*) onto menu items, and to move from screen to screen. Press the SELECT button to choose a highlighted item.

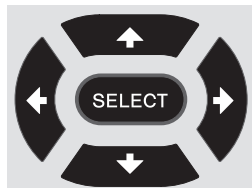

 On the screen below, notice the *whispering arrows* that appear beside the highlight bar. These arrows show possible directions you can take.

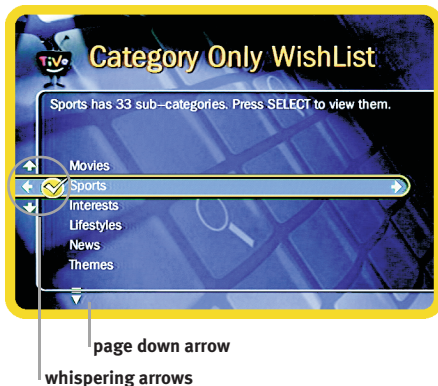

Page down or page up arrows at the bottom or top of a list indicate more options that aren't currently visible. Use the DOWN arrow to view the next item below what you can currently see. Use the CHAN DOWN button to go down to the next page. CHAN UP shows the previous page.

Glossary of Icons



These appear when you press THUMBS UP or THUMBS DOWN. You can give a program up to three THUMBS UP or three THUMBS DOWN.



These appear when an option—such as automatically scheduling an upcoming program or watching an additional program segment—is available. Press SELECT to choose the option.

Now Playing List

(These icons display beside recorded programs. See page 40.)



This program will be saved until you delete it.



In less than one day, this program may be deleted to make room for other programs you have requested, but only if space is needed.



At any time, this program may be deleted to make room for other programs you have requested, but only if space is needed.



This program is currently being recorded.



This program is one of **TiVo's Suggestions**. It was recorded on empty space. **TiVo's Suggestions** are the first programs to be deleted when space is needed.

To Do List

(These icons display beside programs to be recorded. See page 64.)



In the **To Do List**, this checkmark means you chose to record the program on its own, not as part of a Season Pass. (The checkmark is also used outside the To Do List to mean an item has been selected.)



This program is part of a Season Pass.



This program is part of a WishList.

Channel Banner

(These icons display in the full Channel Banner; see page 35.)



Select to start a recording or purchase a Pay Per View program.



Select to turn Dolby Digital audio on or off, if Dolby Digital audio is available.



Select to choose an alternate audio track, if an alternate audio track is available.



Select to display or turn on **Parental Controls**.



Select to view either DIRECTV or TiVo Messages.

Program Guide

(These icons display in the Program Guide, see page 32.)



This appears beside Pay Per View events that are All Day Tickets.



This appears beside programs that are broadcast with Dolby Digital audio.



This icon appears beside programs that are broadcast in Letterbox format.

The inside front cover provides an introduction to the remote control.