

# ***Stereo Component System***

---


Operating Instructions



**SEN-231CD**

# WARNING

**To prevent fire or shock hazard, do not expose the unit to rain or moisture.**

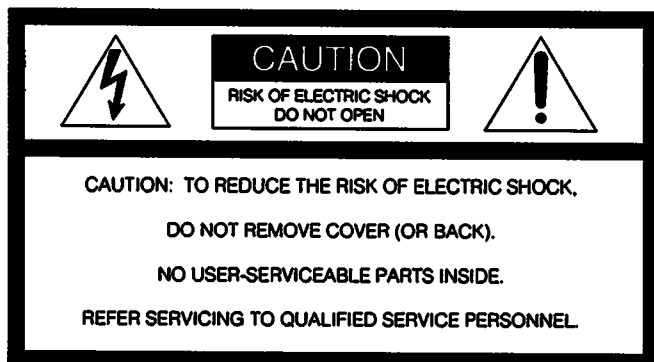

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

\* The graphical symbols are on the rear enclosure.

## Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## Owner's Record

The model and serial numbers are located at the rear. Record these numbers in the spaces provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

HST-231      Serial No. \_\_\_\_\_  
CDP-C231    Serial No. \_\_\_\_\_

## INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

## CAUTION

The use of optical instruments with this product will increase eye hazard.

## For the customers in Canada

### CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

THIS APPARATUS COMPLIES WITH THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS SET OUT IN RADIO INTERFERENCE REGULATIONS.

# Precautions

## On safety

- Operate the unit only on 120 V AC, 60 Hz.
- Should any solid object or liquid fall into the unit, unplug it and have it checked by qualified personnel before operating it any further.
- Unplug the unit from the wall outlet if it is not to be used for an extended period of time. To disconnect the cord, pull it out by grasping the plug. Never pull the cord itself.
- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

## On installation

- Place the unit on a level surface.
- Do not install the unit in a location near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Good air circulation is essential to prevent internal heat buildup in the unit. Place the unit in a location with adequate air circulation. Do not place the unit on a soft surface, such as a rug that would block the ventilation holes on the bottom.
- Do not place anything on top of the cabinet. The top ventilation holes must be unobstructed for the proper operation of the unit and to prolong the life of its components.

## On cleaning the cabinet

Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

## On repacking

Do not throw away the carton and the packing material. It makes an ideal container to transport the unit in.

## On moisture condensation

If the unit is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the unit. Should this occur, the player will not operate. In this case, remove the disc and leave the player turned on for about an hour until the moisture evaporates.


If you have any question or problem concerning your unit, please consult your nearest Sony dealer.

For detailed precautions, see the leaflet "IMPORTANT SAFEGUARD". (Model for USA)

## Note on the Transit Key

The transit key on the bottom exterior of the CDP-C231 protects the optical system against shock during transportation. Before operating the CD player, be sure to remove the key by following the instructions on the label, and store it in a safe place.

When transporting the unit, replace the key in its original hole and lock it in place.

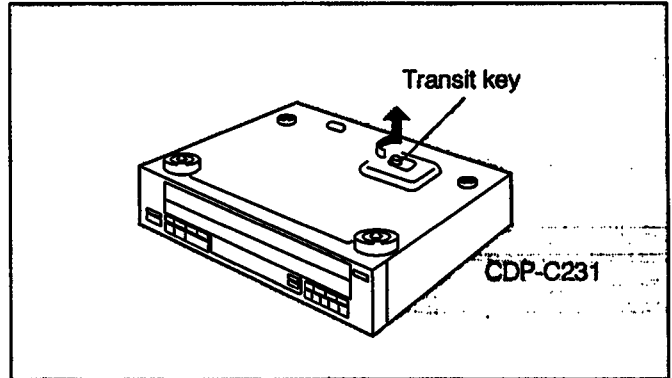

# Table of Contents

## Introduction

Precautions .....	3
Note on the transit key .....	3

## Getting Started

Remote commander .....	4
Hooking up the system .....	5

## Using Your Stereo


Adjusting the audio .....	7
Volume adjustment .....	7
Sound quality adjustment .....	7
Balance adjustment .....	7
Receiving broadcasts .....	7
Tuning in automatically .....	7
Tuning in manually .....	8
Storing station frequencies into memory .....	9
Tuning in a stored station .....	9
Playing back tapes (on either deck A or B) .....	10
Recording on tapes (Deck B) .....	11
Dubbing tapes (from deck A to B) .....	12
Playing the discs - Continuous play .....	13
Information display .....	14
Selecting a desired disc .....	15
Locating a particular selection .....	15
Locating a particular point in a selection .....	15
Playing in a random order - Shuffle play .....	16
To play only desired disc in a random order .....	16
Playing in a desired order - Program play .....	17
Locating the loudest portion of the disc - Peak search ..	18
Designating the total playing time - Time edit .....	19
Playing repeatedly - Repeat play .....	20
Tips on editing tapes .....	21
Fading out after a desired duration - Time fade .....	21

## General

Maintenance .....	21
Specifications .....	22
Troubleshooting .....	23

# Remote Commander

The remote commander supplied with this unit can control the unit from a distance. The remote commander is divided into 6 sections according to the functions as shown below.

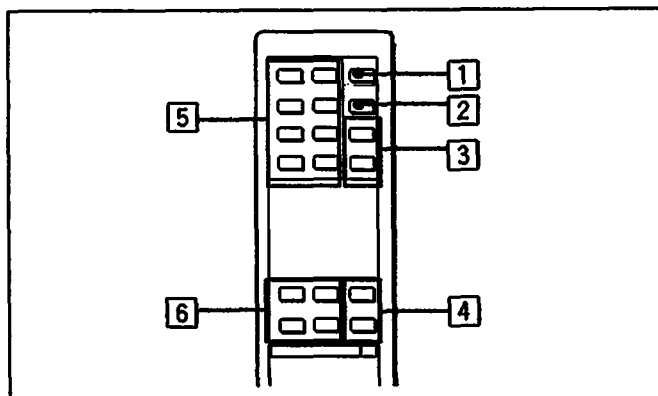

- 1 POWER button
- 2 DBFB button (This button does not operate.)
- 3 TUNER PRESET +/- buttons
- 4 VOL (volume) +/- buttons
- 5 CD player operation buttons

In the TUNER mode:

When you press CD ► once, the unit enters the CD mode.

When you press CD ► twice, the CD player starts playback.

In the mode other than the TUNER mode:

When you press CD ► once, the unit enters the CD mode and starts playback.

- 6 Function selectors

## Battery life


About half a year of normal operation can be expected when using the Sony SUM-3 (NS) batteries. When the batteries are exhausted, the remote commander can no longer operate the unit. If this happens, replace both batteries with new ones.

## To avoid battery leakage


When the commander is not to be used for a long time, remove the batteries to avoid damage caused by battery leakage and corrosion.

## Inserting the batteries into the remote commander

- 1 Open the cover.

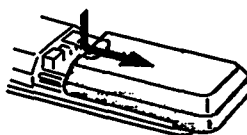

- 2 Insert two size-AA (R6) batteries with correct polarity.

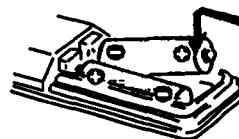


# Hooking Up the System

This section describes about the antenna and speaker connections and the SYSTEM CONTROL cord to connect the CDP-C231. Also, it shows about the connection with the other audio equipments.

- Connect the AC power cord last. Make sure power is off.
- Cord plugs and jacks are color coded. Red plugs and jacks are for right channel (R) and white ones for the left channel (L).
- The cable connectors should be fully inserted into the jacks. A loose connection may cause hum and noise.
- Keep speaker cords, connecting cords and power cords away from the AM loop antenna and the tuner's antenna lead-in to avoid possible noise pickup.


The numbers correspond to the following details.

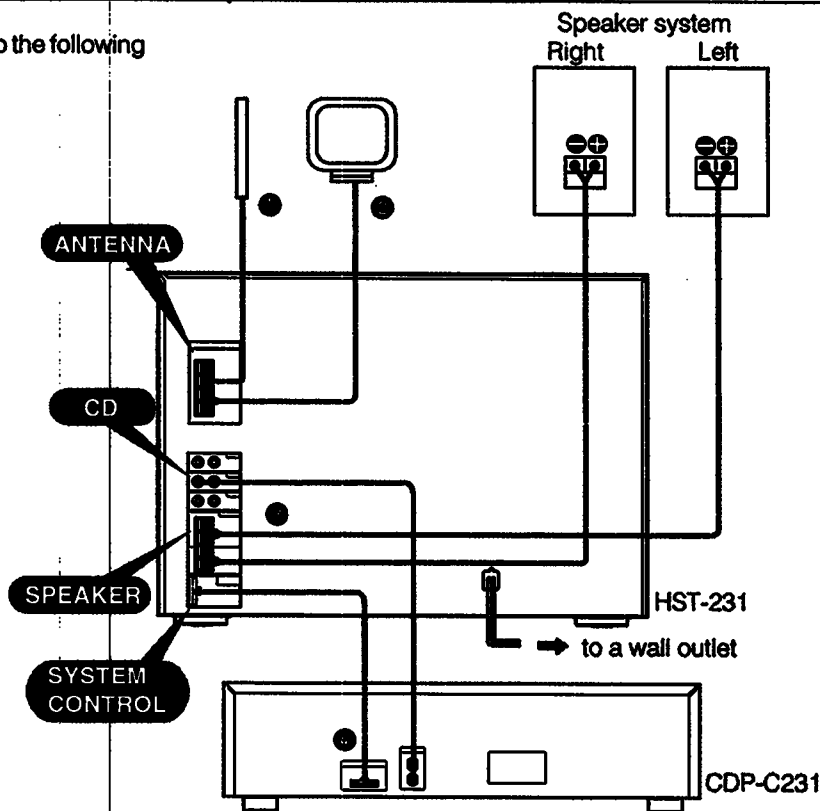

## Note


The CD player is automatically turned off in the TUNER mode.

## 1 FM wire antenna (supplied)

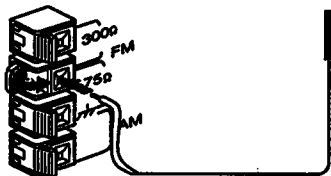

## For better FM reception

Outdoor FM antenna  
(75-ohm coaxial cable)

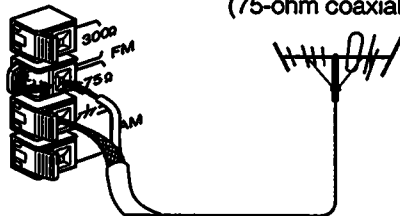


# Hooking Up the System

## CAUTION

Do not put anything like another unit to obstruct the ventilation holes on the top of the unit.  
The level surface installation is required for essential air ventilation to prevent internal heat buildup in the unit.


### ● AM loop antenna (supplied)

To attach to a wall

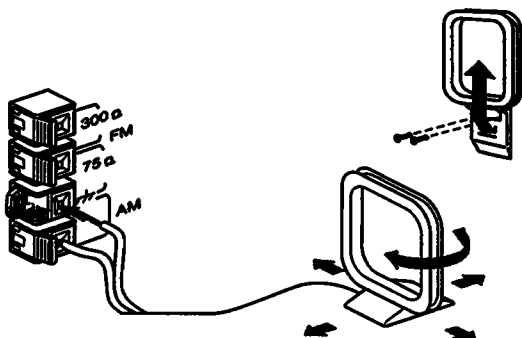


### For better AM reception

Extend a 6 to 15-meter insulated wire out of doors.

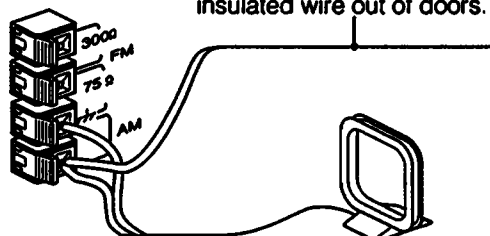


It is also necessary to connect the supplied AM loop antenna.


### ● Speaker cords

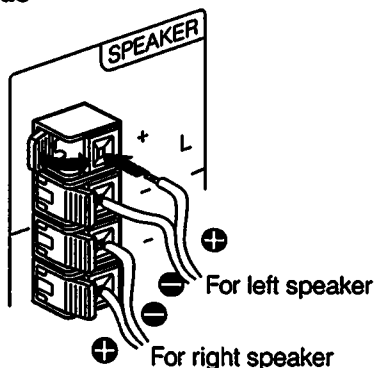

### ● SYSTEM CONTROL cord (Supplied)

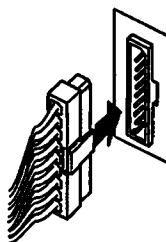


Push in until it clicks.

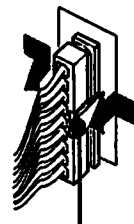

To disconnect, pull out while pressing here.

## Adding other audio equipments to your system

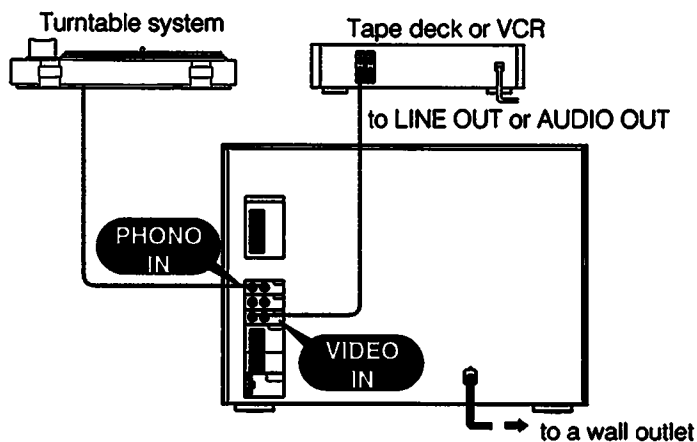

# Adjusting the Audio

The following operations apply only to reproduced sound.

## Volume Adjustment

To increase the sound level, turn the VOLUME control clockwise.

To decrease it, turn the control counterclockwise.

### Note

When listening with headphones connected to the HEADPHONES jack, no sound can be heard from the speaker system.

## Sound Quality Adjustment

### To adjust tone quality

Adjust the 5-BAND STEREO GRAPHIC EQUALIZER controls according to:

- Personal preference
- The room acoustics. For instance, playback in a room with padded walls or furniture will probably sound better with the high frequencies boosted.
- Program quality. If reproduction contains hiss, cutting the higher frequencies will improve playback.

### Function of the graphic equalizer controls

**100 Hz:** Boosts or cuts bass.

**330 Hz:** Adjusts the power, spaciousness and warmth of the sound.

**1 kHz:** Provides more presence for vocals.

**3.3 kHz:** Boosts a brighter sound or reduces stridency.

**10 kHz:** Highlights the delicate quality of instrumental sound.

## Balance Adjustment

To change relative strength of the right and left speaker outputs, adjust the BALANCE control.

### For personal listening


Connect headphones to the HEADPHONES jack.

# Receiving Broadcasts


This section describes about the various ways of tuning which are very convenient.

Before reception, be sure to connect the supplied AM and FM antenna.

## Tuning in Automatically

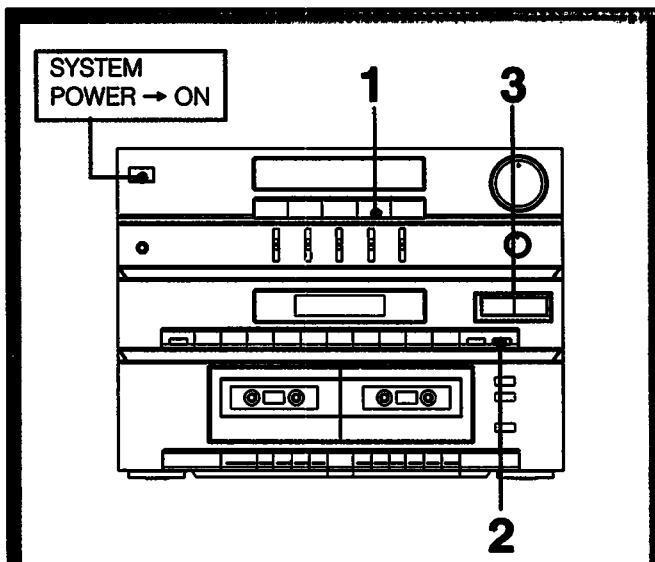


### 1 Press TUNER.

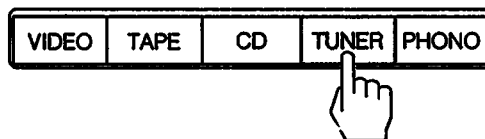


The CD player is automatically turned off in the TUNER mode.

### 2 Press BAND to select FM or AM.

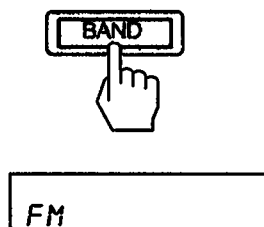

# Receiving Broadcasts

- 3** Keep pressing TUNING – or + for about 3 seconds.

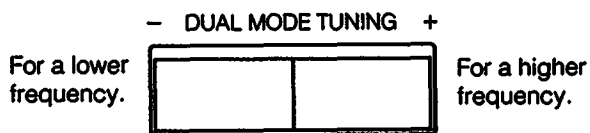

When a station is received automatic tuning stops.

- 4** Repeat step 3 until the desired station is received.

## Indicators in the display window

- "TUNED" appears when a station is tuned in.
- "STEREO" appears when an FM stereo program of sufficient signal strength is received.

## To change the AM tuning interval


The AM tuning interval is preset at the factory to 10 kHz to match the frequency allocation system of your country. To change the interval to 9 kHz, proceed as follows.

- 1 Press the SYSTEM POWER switch to turn on the unit.
  - 2 Set the BAND selector to AM.
  - 3 Disconnect the AC plug from the AC outlet to turn off the unit.
  - 4 While pressing the "+" TUNING button, connect the AC plug to the AC outlet again and then turn on the unit.
- To reset the interval to 10 kHz, follow the same procedure.


## Note

When the interval is changed, all stored stations will be erased from the memory. After changing the interval, be sure to store the stations again.

## Tuning in Manually

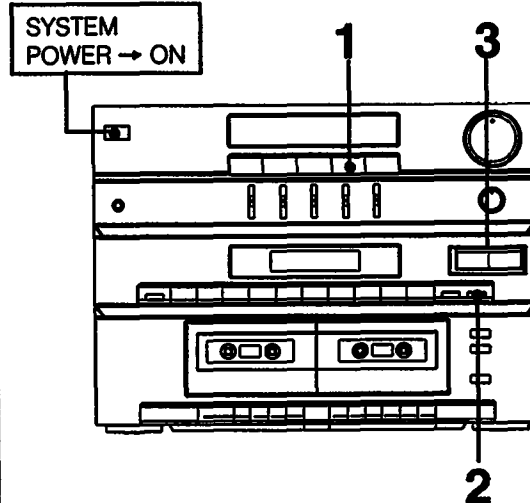


- 1** Press TUNER.

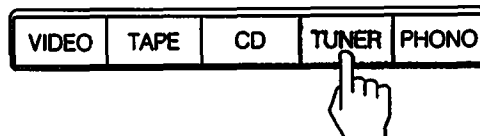


The CD player is automatically turned off in the TUNER mode.

 - 2** Press BAND to select FM or AM.




- 3** Press TUNING – or + to select the station.

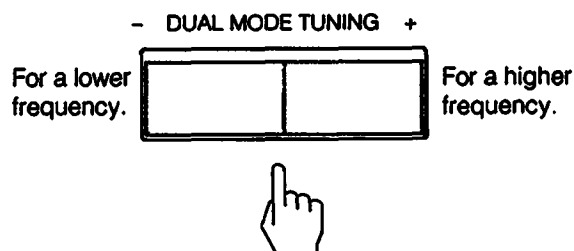




## Storing Station Frequencies into Memory

Up to 10 stations can be stored in any order for each memory page (A, B, C). Therefore, 30 stations can be stored in total.

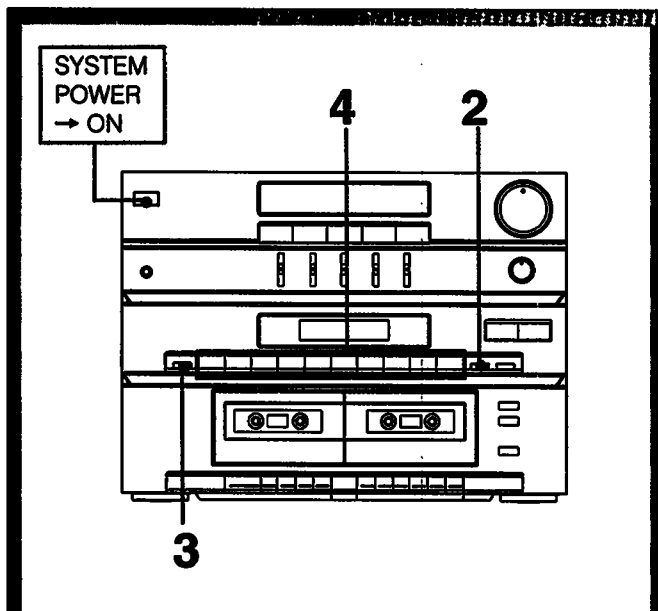

**1** Tune in a desired station. (See pages 7 to 8.)

**2** Press MEMORY.

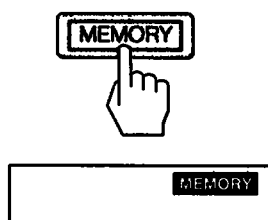

**3** While "MEMORY" appears on the display, press SHIFT to select the memory page (A, B or C).

A - 1, A - 2, ..... A - 0  
B - 1, ..... B - 0  
C - 1, ..... C - 9, C - 0



Each time SHIFT is pressed, A, B or C is indicated cyclically.

**4** While MEMORY appears, press the desired number.

1	2	3	4	5	6	7	8	9	0
---	---	---	---	---	---	---	---	---	---



### If you cannot store a station successfully

You can store a station only while "MEMORY" appears on the display.

If "MEMORY" has gone off, press MEMORY again.

### How long does a station remain stored?

Storing a new station erases the previously stored one.

## Tuning in a Stored Station

**1** Press TUNER.


The CD player is automatically turned off in the TUNER mode.

**2** Press SHIFT.


**3** Designate the number with the numeric buttons.

# Playing Back Tapes (on either Deck A or B)


This section describes about a basic playback operation on either deck A or B.

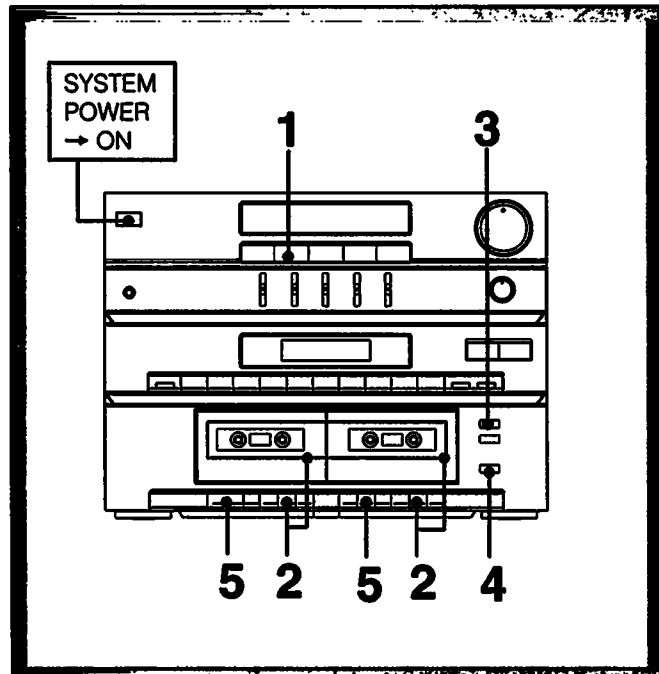


## 1 Press TAPE.

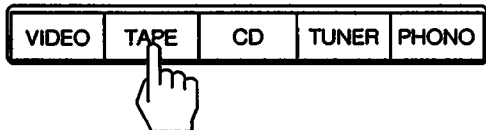


## 2 Open the cassette compartment and insert the tape with the side to be played back facing you.

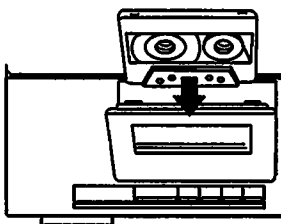


## 3 Press TAPE SELECTOR to select the tape type.

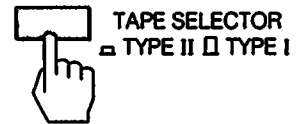

## 4 Press DOLBY NR to select the DOLBY NR setting.

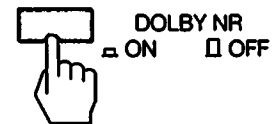

## 5 Press ► to start playback.

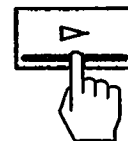

When the tape ends, playback automatically stops.

To stop playback, rewind or fast forward, press ■ ▲.

To pause, press II.

To resume playback, press II again.

To rewind the tape, press ◀◀.

To fast-forward the tape, press ▶▶.

### Notes

- When both decks A and B are in playback mode, only playback from deck A will be audible.
- During playback or recording on a deck, do not operate the other deck.
- Before turning the power off, be sure to release ► or ● by pressing ■ ▲. Otherwise, the tape may become entangled when the power is turned on again.

### What is the Dolby NR\* system?


Dolby NR (noise reduction) system reduces tape hiss noise in low-level, high-frequency signals. The system boosts these signals in recording and lowers them in playback. When listening to a tape recorded with Dolby NR, set the DOLBY NR switch to ON.

\* Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.


\*DOLBY\* and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

# Recording on Tapes (Deck B)

This section describes about the recording operation only on deck B.

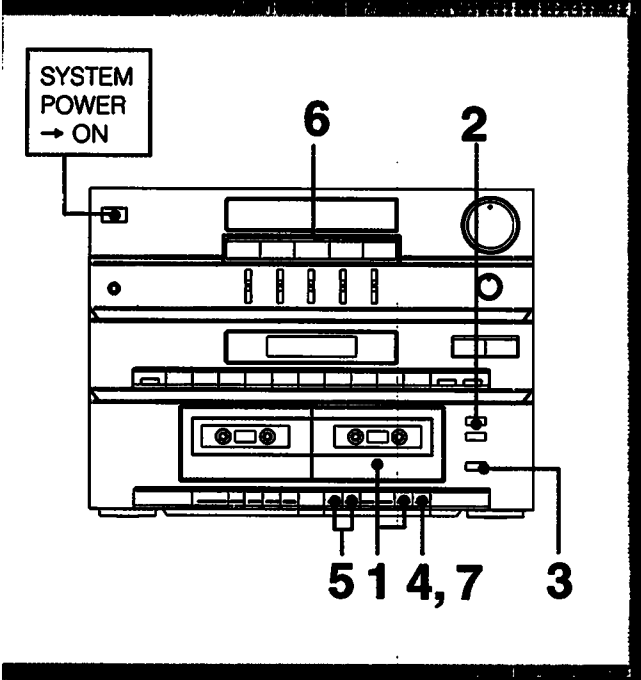


**1** Open the cassette compartment and insert the tape with the side to be recorded facing you.

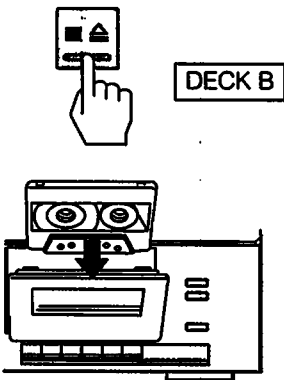

**2** Press TAPE SELECTOR to select the tape type.




**3** Press DOLBY NR to select the DOLBY NR setting.

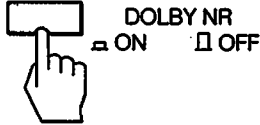

**4** Press II.



**5** Press ● and ▷ together to set the unit in recording pause mode.

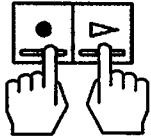

**6** Play the desired program source to be recorded.

**7** Press II to start recording.



To stop recording, press ■ △.

## Notes


- The recording level is automatically adjusted during recording.
- In the recording mode on deck B, do not operate deck A.

## To prevent accidental erasure


To protect side A recording	To reuse a cassette
Break off the tab of side A.  Side A Tab of side B      Tab of side A	Cover the opening with plastic tape. 

# Dubbing Tapes (from Deck A to B)


This section describes about the operation of the recording from deck A to B.

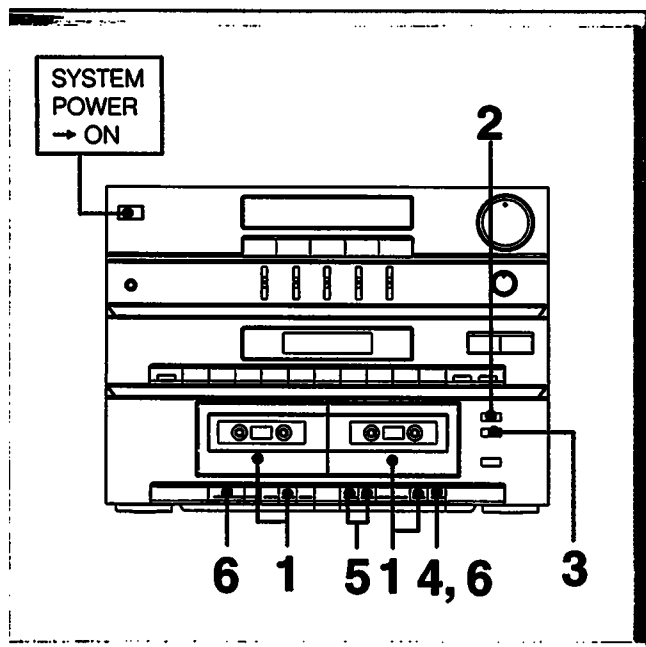

- 1** Press to open the cassette compartment and insert the tapes with the sides to be played back or recorded facing you.

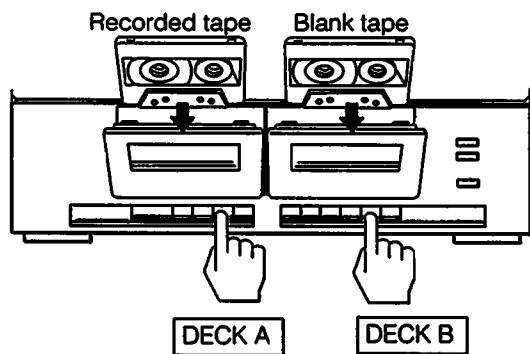


- 2** Press **TAPE SELECTOR** to select the tape type.

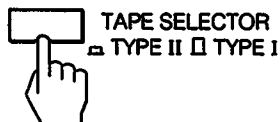


Be sure to use tapes of the same type for dubbing, since the switch setting is effective on both decks.


- 3** Press **DUBBING SPEED** to select the dubbing speed.

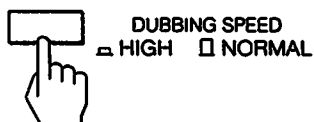


- 4** Press **II**.

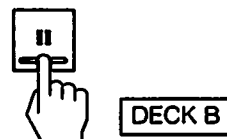

- 5** Press and together to set the unit in recording pause mode.

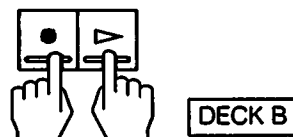

- 6** Press on deck A and **II** on deck B together.

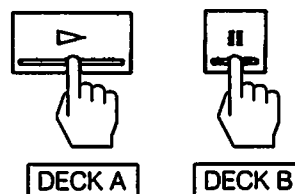

To stop dubbing, press on both decks.

## Notes

- The tape in deck B is automatically recorded with the same recording system as the original tape in deck A. So it is unnecessary to select DOLBY NR.
- Do not change the setting of the DUBBING SPEED switch during tape dubbing.
- If the sound is affected by a television set during high-speed dubbing, turn off the set or move it away from the unit.


## How to edit the tape

- 1 During normal-speed dubbing, press **II** on deck B.
- 2 Locate the desired portion to be dubbed with or on deck A. Then press . Or replace the cassette with a new one.
- 3 Press on deck A and release **II** on deck B to start dubbing again.

# Playing the Discs – Continuous Play

This section describes about the continuous play. This CD player can be played up to 5 discs, and you can choose to play all selections of a disc or all discs.


Before playing a disc, turn on the SYSTEM POWER and set the function selector to the CD mode.  
(The CD player can be used in any other mode than the TUNER mode.)

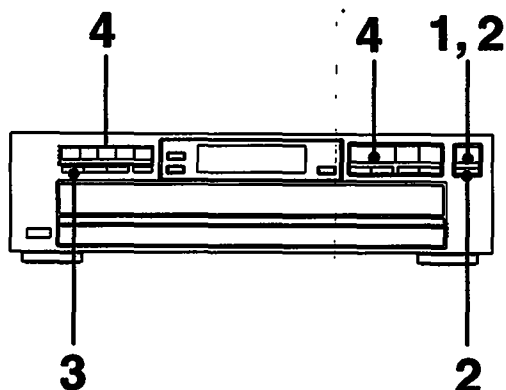


## 1 Press to open the disc tray.




## 2 Place a disc with the label side up. To play more than one disc, press DISC SKIP to turn the disc tray and place up to 5 discs. After placing discs, press to close the disc tray.

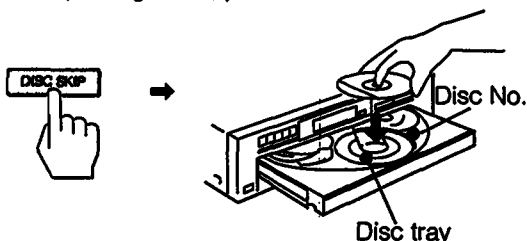


## 3 Press CONTINUE to choose whether to play one disc or all discs. Each time CONTINUE is pressed, "1 DISC" or "ALL DISCS" appears alternately.

 

## 4 Press or the DISC button to start playback.

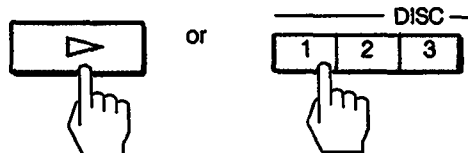

 When the playback of all selections of a disc has been finished, the circle on the tray number goes off.






Music calendar  
Selection number  
Elapsed playing time

To stop play, press .

To stop play and open the tray, press .

To stop for a moment during play, press .  
Press  or  to resume playback.

### When recording on the tape

Press  during the stop mode. The CD player enters the pause mode at the beginning of the first selection. This function makes recording on the tape easy.  
Press  or  to start playback. You cannot use this function in program mode.

### Caution on adjusting volume

Do not turn up the volume while listening to a portion with very low level inputs or no audio signals. Otherwise, the speakers may be damaged when a peak level portion is played.

### Note

The tray number of an empty tray will be displayed until the empty tray number is set to play. Once it is recognized as empty, it will disappear.

### To play an 8 cm (3-inch) CD


Place it on the inner circle of the tray. If the disc is provided with an adaptor, first remove it. Do not put a normal CD (12 cm/5-inch) on top of an 8 cm CD.

### When there are no disc at all on the tray

"no disc" appears on the display.


# Playing the Discs – Continuous Play

## Information Display

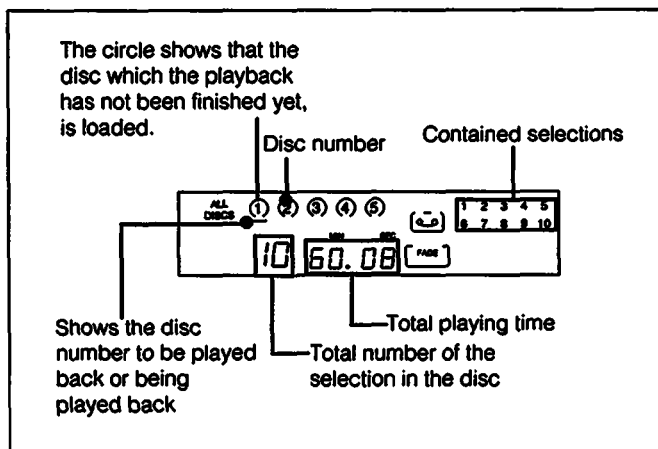

When the disc tray is closed by pressing  $\Delta$ , the total number of selections and the total playing time of the disc to be played are displayed for a few seconds. If you press TIME during stop, the total number of selections and the total playing time of the disc to be played can be displayed.


Each time you press TIME during playback, the display changes as follows:

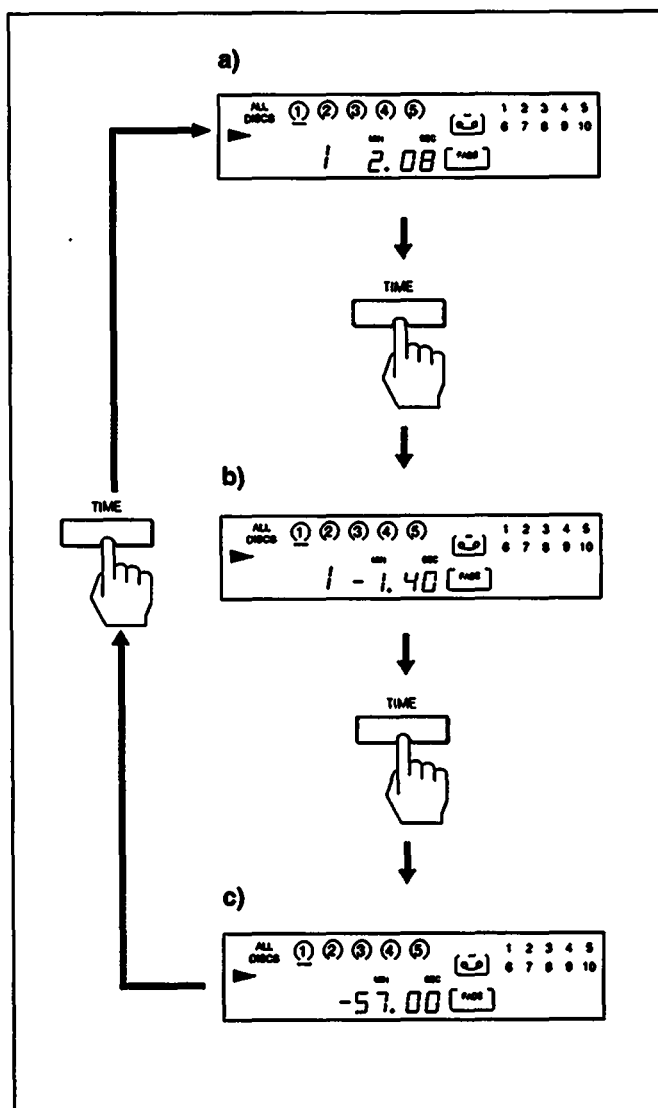

- Elapsed time in a selection (automatically displayed when playback starts.)
- Remaining time in the selection  
"--:--" indicator will appear in the display window instead of the actual time, if a selection numbered 21 or higher is selected.
- Remaining time of the disc

### Notes

- Total remaining time is only available during the continuous mode. It will not be displayed by pressing the TIME button during the program or shuffle mode.
- Total remaining time will be displayed, if time fade is set in the program or shuffle mode.

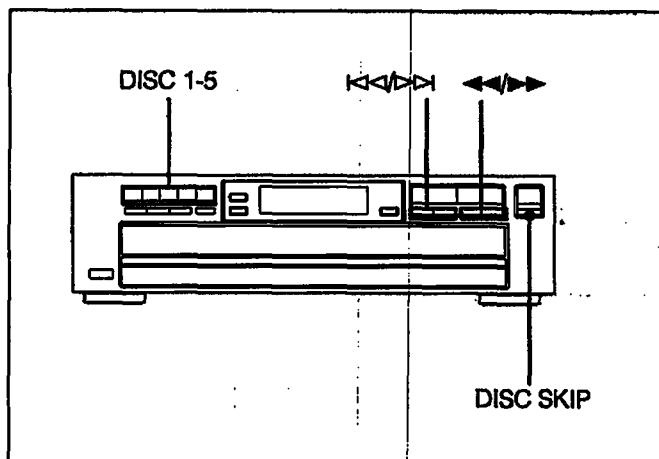

### Selecting a Desired Disc

By using the DISC 1 to 5 buttons or the DISC SKIP button during playback, you can locate the beginning of any disc.

#### To select a particular disc

Press the corresponding DISC 1 to 5 button.

#### To move to the disc tray next to the current one

Press DISC SKIP.

### Locating a Particular Selection

#### Locating a selection in sequence (Automatic Music Sensor)

You can locate the beginning of a selection on the disc being played.

#### To locate the beginning of the selection being played

Press  $\ll$ .

#### To locate the beginning of the next selection

Press  $\gg$ .

Press  $\ll$  or  $\gg$  until the desired selection is located.

### Locating a Particular Point in a Selection

#### Locating a point in sequence (Manual Search)

You can locate a particular point during playback by monitoring the sound at high speed.

#### To go back at high speed

Keep  $\ll$  pressed.

#### To go ahead at high speed

Keep  $\gg$  pressed.


Release the button when you reach the desired point.

#### To locate at higher speed

Press  $\ll$  or  $\gg$  in the pause mode. Search speed will increase three times, but there will be no sound. Find the desired point by watching the number on the display.

# Playing in a Random Order – Shuffle Play


You can have the selections (up to 99) played in a random order. The unit will play all the discs or just one disc you desire.

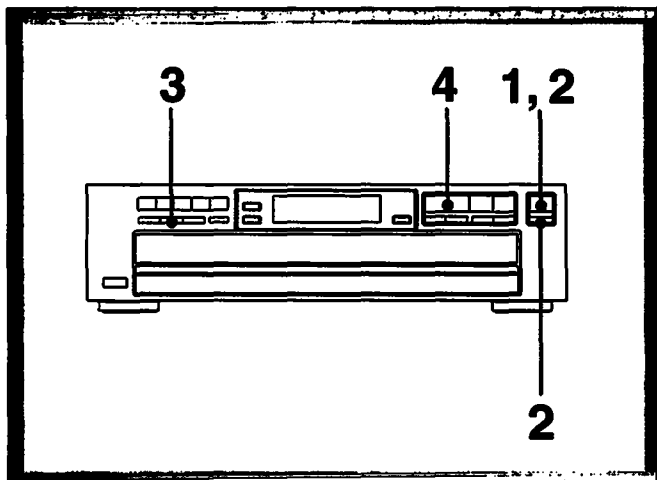


**1** Press to open the disc tray.




**2** Place a disc with the label side up.  
To play more than one disc, press DISC SKIP to turn the disc tray and place up to 5 discs.  
After placing discs, press to close the disc tray.

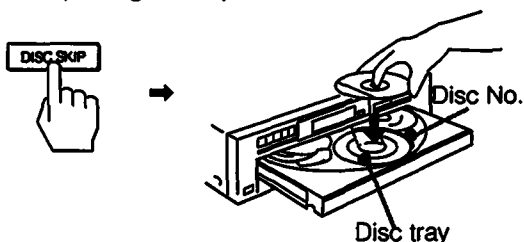

**3** Press SHUFFLE to set to the ALL DISCS mode.

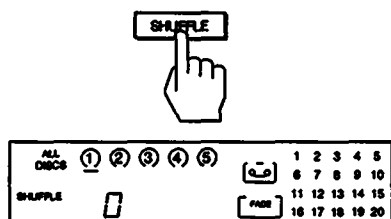

**4** Press to start playback.

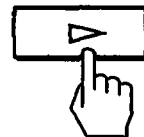

Once a selection is played, it will not be played again until the random order is completed.

**To stop playback**

Press .

**To cancel shuffle play**

Press CONTINUE to return to the continuous mode.

**To change from program or continuous play to shuffle play**

Press SHUFFLE during program or continuous play. The program mode will be cleared and shuffle play will start from the current selection being played.

**While the player is shuffling the selection**

"[ ]" appears on the display.

## To Play only the Desired Disc in a Random Order

**1** Press SHUFFLE to set to the 1 DISC mode.

**2** Select the desired disc number with the DISC 1 to 5 buttons.

The unit starts playback automatically.

**To cancel a disc which you have selected**

Press the DISC 1-5 buttons to be canceled. A circle will disappear around the selected disc number.

**To put back all discs which you have canceled**

Press in the stop mode.


### Note

During shuffle play in ALL DISCS mode, the DISC 1-5, MUSIC SCAN, EDIT/TIME FADE and PEAK SEARCH buttons do not function.



# Playing in a Desired Order – Program Play


You can make a program by designating up to 32 steps in the order you want them to be played. The unit will play the disc according to your program. This function is very convenient for recording on the cassette tape.

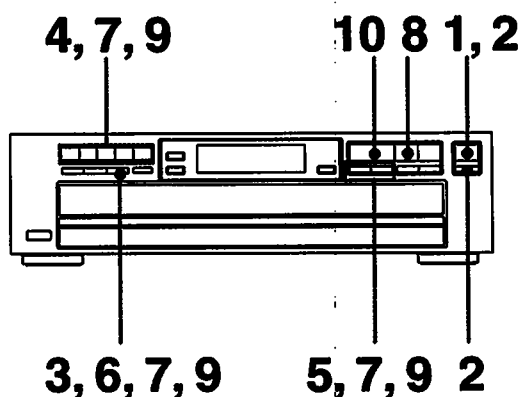

**1** Press to open the disc tray.




**2** Place a disc with the label side up.  
To play more than one disc, press DISC SKIP to turn the disc tray and place up to 5 discs.  
After placing discs, press to close the disc tray.

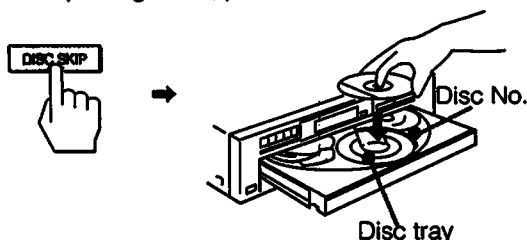

**3** Press PROGRAM so that "PROGRAM" appears on the display.




**4** Choose the disc.

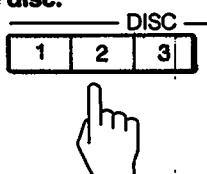


If you program a whole disc, see "To program a whole disc" on page 18.

**5** Press or repeatedly until the desired selection is located.

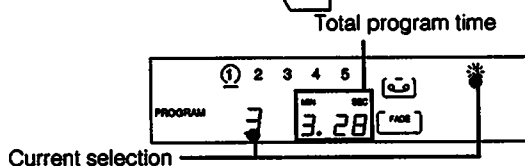

 
**6** Press PROGRAM after the desired selection has been chosen.



The selection is stored, and the blinking number in the window light up.


**7** To program additional selections from the same disc, repeat steps 5 and 6.  
To program additional selections from another disc, repeat steps 4, 5 and 6.  
• You can make a program for recording on the both sides of the tape at one time by performing step 1 to 7.

**8** If you program the selections for side B, press to insert a pause.

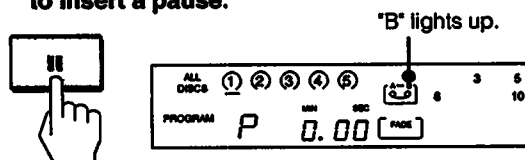

**9** Program the selections for side B.  
Repeat steps 4 to 7 (or 5 to 7).

**10** Press to start playback.

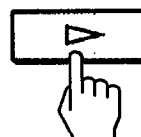

The selections for side A will start playback.



## Note

  The programmed selections are automatically canceled when the unit enters tuner mode.

# Playing in a Desired Order – Program Play

## To program a whole disc

- Using DISC 1 to 5  
After steps 1, 2 and 3:  
1 Press DISC 1 to 5 to select the disc.  
"AL" is displayed on the display.



- 2 Go on to step 7.

- Using DISC SKIP  
After steps 1, 2 and 3:  
1 Press DISC SKIP. "AL" is displayed on the display.  
2 Press PROGRAM.  
3 Go on to step 7.

The whole disc is programmed as one step.

## To program while observing the disc labels

You can program the selections with the disc tray open.

## To play the selections for side B

When the selections for side A have been played, the unit will pause. ("B" lights up.)

Set the tape to the beginning of side B, then press > or II.  
The selections for side B will start playback.

## To stop program play

Press ■. The last selection number programmed will be displayed.

To resume playback, press >. Play begins from the beginning of the program.

You can play the same program repeatedly as long as you do not cancel program play or erase the program.

## To cancel program play

Press CONTINUE and return to the continuous playback mode. The program will be erased.

## Skipping to the next selection programmed

Press >> during playback.

## Going back to the beginning of the selection being played

Press << during playback.

## To cancel all the selections programmed

Press ■ to cancel.

## Notes

- The playing time for selection numbers higher than 20 will not be added into the total playing time.
- When selections have been programmed for sides A and B, the total playing time displayed in stop mode will show the selections programmed for side B and the total playing time for side B.

## Locating the Loudest Portion of the Disc – Peak Search

The unit will scan a disc from beginning to end and determined the loudest portion (peak level) of the disc, and then play that portion repeatedly. In the continuous play mode, only the disc in the play mode can be searched. In the program play mode, all of the programmed disc can be searched. This function will make it easier for you to adjust to the optimum level when recording on tape. You can use this function in the continuous, shuffle and program play modes.

## To set peak search

Press PEAK SEARCH in the stop mode. "PEAK" flashes on the display. The entire tracks in a disc or program will be searched automatically. "PEAK" lights up and the loudest portion will be played repeatedly for 4 seconds. Adjust the recording level on your tape deck according to the peak level.

## To stop peak search

Press ■.

Press II to pause at the first selection.

## To start play immediately


Press >.

## Note on peak search

The unit determines the loudest portion (peak level) of a disc by searching it at fixed intervals. As a result, the portion searched may differ from the actual peak level. In addition, this function may determine different portions as the peak level for the same disc. However, the difference between the portion searched and the actual peak level is insignificant and will not present any problem in adjusting the recording level. The HST-231 adjusts the recording level automatically, so it is not necessary to use this function.

# Designating the Total Playing Time – Time Edit

You can designate a time and the unit will make 2 different programs of selections each fitting within that period. Use this function by designating the length of your tape for editing both sides of a tape.

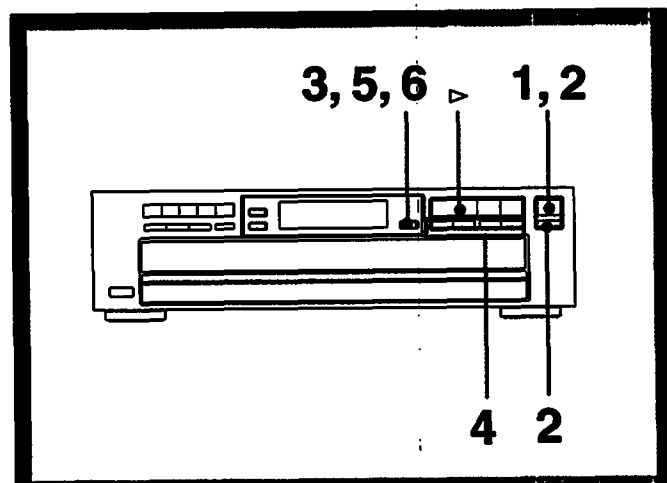


## 1 Press to open the disc tray.



## 2 Place a disc with the label side up.


To play more than one disc, press DISC SKIP to turn the disc tray and place up to 5 discs. After placing discs, press to close the disc tray.

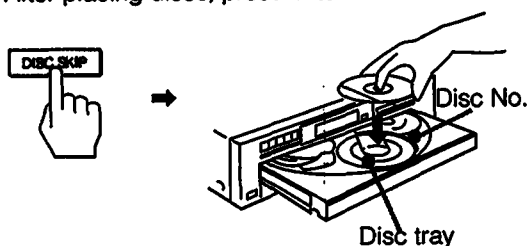

## 3 Press EDIT/TIME FADE.




"EDIT" lights up and "A" blinks.

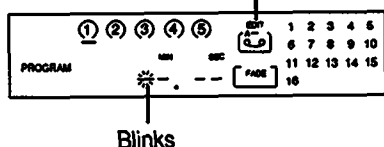


## 4 Designate the length of one side of your tape.


• To set the minute

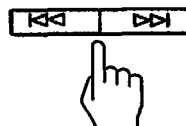


Each time is pressed, the time changes as follows:

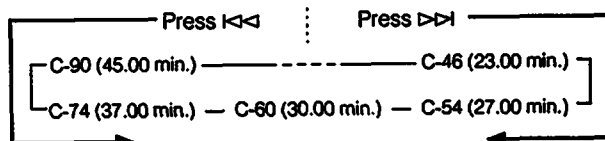

 • To set the seconds, press . The time increases or decreases by 10 seconds.



↓ After 1 second

 

Time

### Note

 
Total playing time can be set up to 59 minutes 50 seconds.

## 5 Press EDIT/TIME FADE.



The program for side A is completed.

If "LINK" blinks during side B program, see "To add selection(s)" on the next page.



Last of programmed selection

Total playing time selection


## 6 Press EDIT/TIME FADE once more, to make a program for the other side of your tape.

 If "LINK" blinks, see "To add selection(s)".

## Designating the Total Playing Time – Time Edit

### To add selection(s) –LINK–

After all selections on the disc have been programmed, if there is the selection that fit in the remaining time, "LINK" and the selection numbers will blink.



To add selection, press EDIT/TIME FADE again. A program will be made automatically to fit the playing time as close as possible to the remaining time.

If the remaining time can contain other selection(s), "LINK" and the selection number keep blinking. When "LINK" blinks, if the disc is changed by another disc, the new selection number(s) on the new disc that fit in the remaining time will blink.

"EDIT" disappears when the playing time becomes equal to the designated time. Whether "LINK" is blinking or not, you can change the disc by another disc and choose selection(s) to fit the remaining time.

### To play the program

Press ▷.

The selections for side A will be played and then the unit will pause. "B" lights up in the tape side indicator. Set the tape to the beginning of side B, then press ▷ or II.

The selections for side B will be played.

### Note

Playback can be performed when "EDIT" is displayed.

### To stop playback

Press ■.

You can play the same program repeatedly as long as you do not cancel time edit or erase the program.

### To cancel time edit

Press CONTINUE and return to the continuous playing mode.

The program will be erased.

### To erase the entire program

Press ■ once during stop; twice during playback.

The program is also erased, when you turn off the unit.

### To include desired selections in the program


1 Make your own program of the desired selections.

See page 17 for instructions.

2 Follow the procedure as shown on the preceding page.

Just designate the length of your tape, and you need not to subtract the playing time of your program. The unit will place your selections at the beginning of its program and add other selections to fit the remaining time.

## Playing Repeatedly – Repeat Play

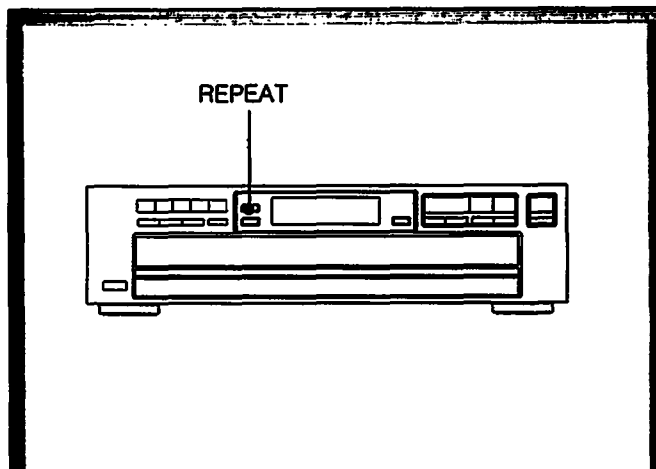

Press REPEAT before or during playback.



In the 1 DISC mode, press REPEAT so that "REPEAT" appears on the display. The unit repeats all selections of a disc. Press REPEAT so that "REPEAT 1" appears. The unit repeats one selection.

In the ALL DISCS mode, Press REPEAT so that "REPEAT" appears on the display. The unit repeats all selections of all discs. Press REPEAT so that "REPEAT 1" appears. The unit repeats one selection.

### To cancel repeat play

Press REPEAT until "REPEAT" disappears.

# Tips on Editing Tapes

The following functions are convenient for editing your own tapes.





## Fading Out after a Desired Duration – Time Fade

You can have the play fade out at the end by designating the play duration. Once time fade is set, it functions twice for editing both sides of a tape. You can change discs without canceling this function. The fade time is preset to 5 seconds.



### To set time fade


- 1 Press EDIT/TIME FADE twice during stop.

 is displayed on the display.

- 2 Set the desired play duration by pressing   and  .

- To set the minute

Each time   is pressed, the display changes in the following order:

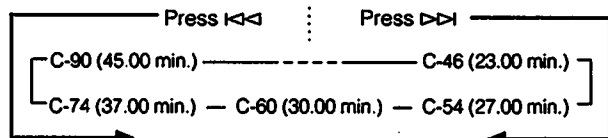



- To set the second

Each time   is pressed, the seconds will be set in 10 second shifts.

- The desired play duration can be set up to 59 minutes 50 seconds.

- 3 To start playback, press .

After the designated time, playback fades out and the unit enters the pause mode. Tape side B lights up. Press  or  to resume playback for the other side of the tape.



When the playback fades out for the second time, the unit enters the pause mode and the time fade function is canceled.

### When playback ends in the duration of time fade

Time fade function will be kept on. Change the disc and start playback automatically. When the total playing time is within some seconds before the designated time, the player fades out.

### To cancel time fade

Time fade will be canceled when

- EDIT/TIME FADE is pressed once again.
-   (manual search) is pressed during playback.

### To display the time remaining until the time set

Press TIME twice.

### If PEAK SEARCH is pressed after setting time fade

Time fade is released but peak search is kept active.

# Maintenance


## Cleaning the Heads and Tape Path

Clean after every 10 hours of operation and before recording for optimum record/playback quality.

- 1 Press .

- 2 Slightly moisten the tip of a cotton swab with cleaning fluid or alcohol.

- 3 Wipe heads, pinch rollers and capstans.

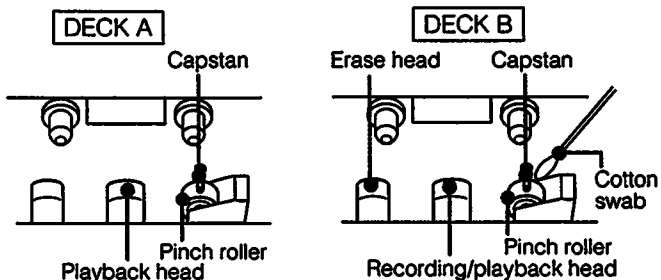

Do not insert a cassette until cleaned areas are completely dry.

## Demagnetizing the Heads

After 20 to 30 hours of use, it is necessary to remove residual magnetism built up on the head. Turn off the power and demagnetize heads with any commercially available demagnetizer.

## Cleaning discs

Before playing, clean the disc with the cleaning cloth.

Wipe the disc from the center out.



Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for analog discs.

## Notes on handling discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.
- Do not stick paper or tape on the disc.



- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as temperature may rise considerably.
- After playing, store the disc in its case.

# Specifications

## AUDIO POWER SPECIFICATIONS

### POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 8-ohm loads, both channels driven, from 70 - 20,000 Hz; rated 100 watts per channel minimum RMS power, with less than 0.9% total harmonic distortion from 250 milliwatts to rated output.

#### Amplifier

Frequency response PHONO: RIAA curve  
CD, VIDEO: 10 Hz - 50 kHz  $\pm 3$  dB

#### Input

	Sensitivity	Impedance
PHONO	2.5 mV	50 kilohms
CD, VIDEO	250 mV	50 kilohms

Output SPEAKER: Accepts speakers of 8 to 16 ohms  
HEADPHONES: Accepts headphones with low and high impedance

GRAPHIC EQUALIZER controls  
Boost/Cut range:  $\pm 8$  dB (100 Hz, 330 Hz, 1 kHz, 3.3kHz)  
 $\pm 6$  dB (10 kHz)

#### Tuner

System FM stereo, FM/AM superheterodyne tuner  
Quartz-locked PLL digital synthesizer system

#### FM tuner section

Tuning range 87.5 - 108 MHz  
Antenna terminals 75 ohms unbalanced  
300 ohms balanced  
Intermediate frequency 10.7 MHz  
Sensitivity (at 50 dB quieting)

22.1 dBf, 7  $\mu$ V (mono),  
42.1 dBf, 70  $\mu$ V (stereo)

Usable sensitivity 19.5 dBf, 5  $\mu$ V (IHF)  
Signal-to-noise ratio (at 75 kHz deviation)

80 dB (mono),  
75 dB (stereo) at 1 kHz

Separation 35 dB at 1 kHz  
Selectivity 55 dB at 400 kHz

Harmonic distortion 0.3% (mono),  
0.5% (stereo) at 1 kHz

#### AM tuner section

Tuning range 530 - 1,710 kHz  
Antenna AM loop antenna, External antenna terminal

Intermediate frequency 450 kHz

Usable sensitivity AM loop antenna: 500  $\mu$ V/m (1,000 kHz)  
Signal-to-noise ratio 54 dB  
Harmonic distortion 0.5%  
Selectivity 38 dB (10 kHz)

#### Tape Deck

System 4-track 2-channel stereo  
Frequency response (DOLBY NR OFF)  
With TYPE II cassette (Sony UCX-S): 30 - 14,000 Hz ( $\pm 3$  dB)  
With TYPE I cassette (Sony HF-S): 30 - 13,000 Hz ( $\pm 3$  dB)  
Wow and flutter 0.12% WRMS (NAB)

#### Compact Disc

System Compact disc digital audio system  
Laser Semiconductor laser  
Wavelength 780-790 nm  
Frequency response 2 Hz - 20 kHz ( $\pm 1.5$  dB)  
Harmonic distortion Less than 0.03 % (1 kHz)

#### General

Power requirements 120 V AC, 60 Hz  
Power consumption 190 W (Model for USA)  
380 VA (Model for Canada)

#### HST-231

Dimensions Approx. 430 x 330 x 300 mm (w/h/d)  
(17 x 12 $\frac{7}{8}$  x 11 $\frac{1}{8}$  inches)  
(including projecting parts and controls)

Weight Approx. 8.8 kg (19 lb 7 oz) net

#### CDP-C231

Dimensions Approx. 430 x 125 x 385 mm (w/h/d)  
(17 x 5 x 15 $\frac{1}{4}$  inches)  
(including projecting parts and controls)

Weight Approx. 5.1 kg (11 lb 4 oz) net

#### Accessories supplied

AM loop antenna (1)  
FM wire antenna (1)  
Remote Commander RM-S102 (1)  
Sony batteries SUM-3(NS) (2)  
Audio signal connecting cord  
(phono plug x 2  $\leftrightarrow$  phono plug x 2)  
(1)  
SYSTEM CONTROL cord (1)  
Headphone MDR-006 (1)  
(Model for Canada)  
Plug adaptor (1)  
(Model for Canada)

Design and specifications are subject to change without notice.

# Troubleshooting

Before going through the check list below, first refer back to the connection and operating procedures. Should any problem persist after you have made these checks, consult your nearest Sony dealer.

Tuner Operation	
STEREO indicator blinks.	<ul style="list-style-type: none"> <li>A very weak FM station or a noisy FM program is received. → Adjust the antenna or connect an external FM antenna.</li> </ul>
Severe hum or noise.	<ul style="list-style-type: none"> <li>The signal strength is too weak. → Adjust the antenna, connect an external antenna or connect the ground wire.</li> </ul>

Cassette Deck Operation	
The ● button does not activate.	<ul style="list-style-type: none"> <li>No tape in the cassette compartment.</li> <li>The tab has been removed from the tape. (See page 11.) → Cover the opening with plastic tape.</li> </ul>
Function buttons do not activate.	<ul style="list-style-type: none"> <li>Cassette compartment is not fully closed.</li> </ul>
Recording or playback cannot be made, or there is decrease in sound level.	<ul style="list-style-type: none"> <li>Recording/playback and erase heads are either dirty or magnetized. → Clean or demagnetize the heads. (See page 21.)</li> </ul>
Excessive wow, flutter or dropout.	<ul style="list-style-type: none"> <li>Capstan or pinch roller is dirty. (See page 21.)</li> </ul>
Incomplete erasure.	<ul style="list-style-type: none"> <li>Erase head is dirty. (See page 21.)</li> </ul>
Unbalanced tone in high frequencies.	<ul style="list-style-type: none"> <li>Improper setting of the DOLBY NR switch. → When playing back, set the switch to the same position used in recording.</li> <li>Improper setting of the TAPE SELECTOR switch. (See page 10.) → Set correctly.</li> </ul>

Compact Disc Operation	
The power of the CD player is not turned on.	<ul style="list-style-type: none"> <li>The function selector is set to the TUNER mode. → Set to the other mode.</li> </ul>
The programmed selections are canceled.	<ul style="list-style-type: none"> <li>The programmed selections are automatically canceled when the unit enters the TUNER mode. → Program the selections again.</li> </ul>
No sound is heard from one or both channels.	<ul style="list-style-type: none"> <li>Incorrect operation of the amplifier.</li> <li>Loose connection. → Connect the cords firmly.</li> </ul>
Remote commander does not operate the unit.	<ul style="list-style-type: none"> <li>No disc in the disc compartment.</li> <li>The unit is in the pause mode. → Press ▷ or    to release pause.</li> <li>Moisture condensation. → Leave the unit turned on for about an hour.</li> <li>The disc is set upside down. → Set the disc with the label side up.</li> <li>The disc is tilted. → Set the disc correctly.</li> <li>The disc is extremely dirty.</li> </ul>
Any operation is not possible.	<ul style="list-style-type: none"> <li>The internal control program may not run. → Turn off the power and turn it on again.</li> </ul>

# Troubleshooting

General	
The unit is not turned on.	<ul style="list-style-type: none"><li>• Check if any button on the front panel has been pressed before turning on the SYSTEM POWER switch.</li></ul>
No audio.	<ul style="list-style-type: none"><li>• Check the power cord connection.</li><li>• Check the connections. (See pages 5 to 6.)</li></ul>
No audio of the CD player.	<ul style="list-style-type: none"><li>• The function selector is set to the TUNER mode. → Set to the other mode.</li></ul>
No audio from one channel.	<ul style="list-style-type: none"><li>• Adjust the BALANCE control.</li><li>• Check the speaker cord or connecting cord connection. (See pages 5 to 6.)</li></ul>
Noise when TV is turned on.	<ul style="list-style-type: none"><li>• Move the TV away from the audio system.</li></ul>
Lack of bass sound or obscure instrument position.	<ul style="list-style-type: none"><li>• Check the connection between the amplifier and speakers.</li></ul>