

Video Cassette Recorder

Operating Instructions




Hi-Fi

***SLV-770HF
SLV-771HF***

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

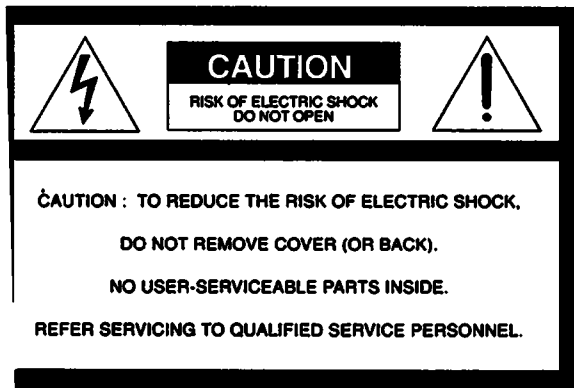

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

to prevent electric shock, do not use this polarized AC plug with extension cord, receptacle or other outlet unless the blades can fully inserted to prevent blade exposure.

Precautions

Safety

Operate the unit only on 120 V AC, 60 Hz.
If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
The blade of the plug is wider than the other for the purpose of safety and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your Sony dealer.
Unplug the unit from the wall outlet if you do not intend to use for an extended period of time. To disconnect the cord, pull it at by the plug, never by the cord.

Wall

Allow adequate air circulation to prevent internal heat buildup.
Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation slots.
Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.

- Keep the unit and cassettes away from equipment with strong magnets, such as microwave ovens or large loudspeakers.
- Do not place heavy objects on the unit.
- If the unit is brought directly from a cold to a warm location, moisture may condense inside the VCR and cause damage to the video head and tape. When you first install the unit, or when you move it from a cold to a warm location, wait for about one hour before operating the unit.

Information

For customers in the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Caution

Television programs, films, video tapes and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provisions of the copyright laws. Also, use of this recorder with cable television transmission may require authorization from the cable television transmission and/or program owner.

Owner's record

The model number is located at the rear and front of the unit and the serial number on the top. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. SLV-770HF/771HF

Serial No. _____

Getting Started

- 5 Step 1: Unpacking
 - 6 Step 2: Setting up the remote commander
 - 8 Step 3: Hookups
 - 21 Selecting the language
 - 22 Setting the clock
 - 24 Presetting channels
 - 27 Setting up cable box control
 - 30 Setting up VCR Plus+
 - 32 Using the SET UP menu
-

Basic Operations

- 34 Playing a tape
- 37 Recording TV programs
- 41 Recording TV programs using the timer
- 44 Recording TV programs using VCR Plus+
- 46 Checking/changing/cancelling timer settings

Additional Operations

- 48 Playing/searching at various speeds
- 49 Adjusting the picture
- 50 Searching using the index function

Editing

- 51 Editing with another VCR
- 53 Synchronized editing

Additional Information

- 55 General setup information
- 56 Troubleshooting
- 58 Specifications
- 59 Index to parts and controls
- 62 Index
- back cover Quick reference to using the VCR

Welcome!

Thank you for purchasing the Sony Video Cassette Recorder (VCR). Here are some of the features you'll enjoy with your VCR:


- Adaptive Picture Control (APC) that automatically optimizes recording and playback performance
- Dynamic Signal Filter (DSF) that boosts and stabilizes signals
- Auto Clock Set feature that sets and adjusts the time and date automatically
- VCR Plus+ system that lets you quickly and easily preset the VCR to record programs
- Cable box control that allows your VCR to control channel selection on most brands of cable boxes
- Remote commander that features multi-brand TV control
- On-screen menu that displays information in either English or French (*Canadian model only*)

* VCR Plus+ and PlusCode are trademarks of Gemstar Development Corporation. The VCR Plus+ system is manufactured under license from Gemstar Development Corporation.

Step 1: Unpacking

Check that you have the following items:

- **Remote commander**

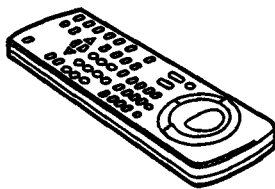


- **Size AA (R6) batteries**




- **Audio/video cable
(3-phono to 3-phono)**




- **Cable mouse (cable box
controller)**

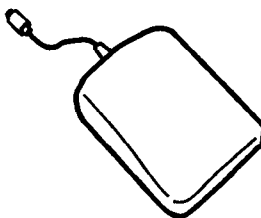

- **75-ohm coaxial cable with
F-type connectors**

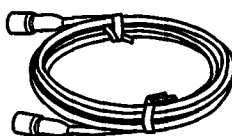


- **AC power cord**

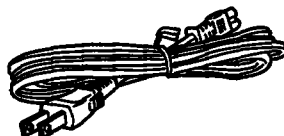

Step 2: Setting up the remote commander


Inserting the batteries

Insert two size AA (R6) batteries by matching the + and – on the batteries to the diagram inside the battery compartment.

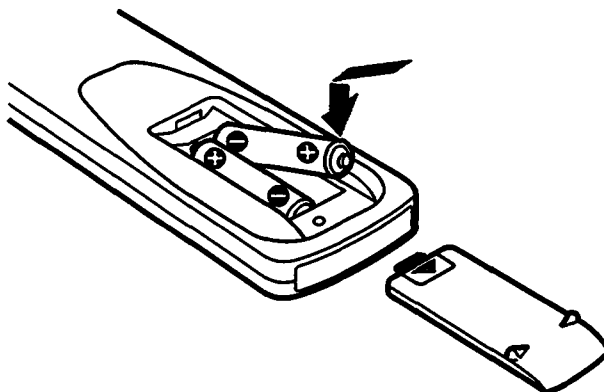

Using the remote commander

You can use this remote commander to operate this VCR and a Sony TV. To operate the VCR, set the COMMAND MODE switch on the VCR to VTR 3. Buttons on the remote commander marked with a dot (•) can be used to operate your TV.

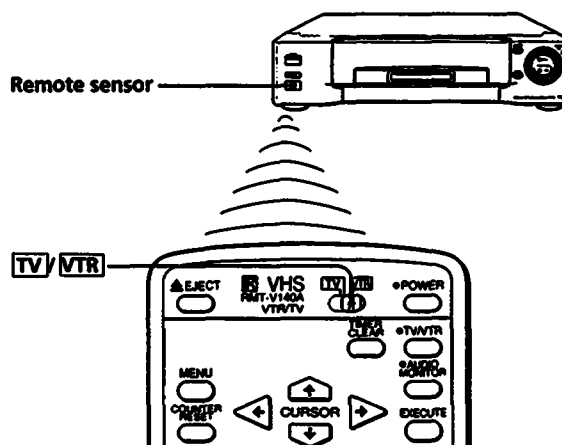

Notes

- With normal use, the batteries should last for approximately three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not use different types of batteries.

To operate	Set TV/VTR to
the VCR	VTR and point at the remote sensor on the VCR
a Sony TV	TV and point at the remote sensor on the TV

Controlling other TVs with the remote commander

The remote commander is preprogrammed to control non-Sony TVs. If your TV is listed in the table below, set the appropriate manufacturer's code number.

1 Set **TV/VTR** on the top of the remote commander to TV.

2 Press and hold down EXECUTE, and then enter your TV's code number(s) using the number buttons. Press the ENTER button. Then release EXECUTE.

Code numbers are listed below.

Now you can use the buttons marked with a dot (•) to control your TV. To control the VCR, reset **TV/VTR** to VTR.

Notes

- If the TV uses a different remote control system from the one programmed to work with the VCR, you cannot control your TV with the remote commander.
- If you enter a new code number, the code number previously entered will be erased.
- When you replace the batteries in the remote commander, the code number automatically resets to 1 (Sony). Reset the appropriate code number.

Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code number	Manufacturer	Code number
Sony	1	Philco	3, 4
Akai	4	Philips	8
AOC	4	Pioneer	16
Centurion	12	Portland	3
Coronado	3	Quasar	6
Curtis-Mathes	12	Radio Shack	5, 14
Daytron	12	RCA	4, 10
Fisher	11	Sampo	12
General Electric	6, 10	Sanyo	11
Hitachi	2, 3	Scott	12
J. C. Penney	4, 12	Sears	7, 10, 11
JVC	9	Sharp	3, 5, 18
KMC	3	Sylvania	8, 12
Magnavox	3, 8, 12	Teknika	3, 8, 14
Marantz	4, 13	Toshiba	7
MGA/Mitsubishi	4, 12, 13, 17	Wards	3, 4, 12
NEC	4, 12	Yorx	12
Panasonic	6	Zenith	15

Step 3: Hookups

Selecting the best hookup option

Before you can use your VCR for the first time, you need to connect it to your TV and set it up to receive programs for viewing and recording. This section explains how to hook up and set up your VCR so that you can start enjoying it right away. There are, however, many types of TVs available and many ways in which your TV can be hooked up. For these reasons, this manual describes several ways your VCR can be connected.

To hook up your VCR so that it works best for you, first scan through the table below. Then use the accompanying diagrams and procedures on the following pages to set up your VCR.

If you have	Use	Refer to
TV that has audio/video inputs	Audio/video (A/V) hookup, then follow one of the hookups below.	Page 9
Cable TV with cable box	Hookup 1	Page 10
Cable TV without cable box	Hookup 2	Page 12
Antenna only, no cable TV	Hookup 3	Page 14

Caution

Connections between the VCR's VHF/UHF connector and the antenna terminals of the TV receiver should be made only as shown in the following instructions. Failure to do so may result in operation that violates the regulations of the Federal Communications Commission regarding the use and operation of RF devices. Never connect the output of the VCR to an antenna or make simultaneous (parallel) antenna and VCR connections at the antenna terminals of your receiver.

Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

After you've completed the connections, follow the instructions for setup including VCR Plus+ setup. During setup, if you need more details of the procedure described, page numbers are provided where you can find complete, step-by-step instructions.

After you've completed the setup, you're ready to use your VCR. Procedures differ depending on the hookup you used. For an overview, refer to "Quick reference to using the VCR" on the back cover.

Before you get started


- Turn off the power to all equipment.
- Do not connect the AC power cords until all of the connections are completed.
- Be sure you make connections firmly. Loose connections may cause picture distortion.
- If your TV doesn't match any of the examples provided, see your nearest Sony dealer or qualified technician.

Audio/video (A/V) hookup


If your TV has audio/video (A/V) input jacks, you will get a better picture and sound if you hook up your VCR using these connections. In addition, for a true "home theater" experience, you should connect the audio outputs of your VCR or TV to your stereo system. If your TV doesn't have A/V inputs, see the following pages for antenna or cable hookups.

If you're planning to use your VCR only to play back pictures and movies, you're finished setting up the VCR after you've made these connections. If you want to record off-air or off your cable TV system, complete these connections first, and then go to the following pages for antenna or cable hookups.

A Use this hookup if your TV has stereo jacks

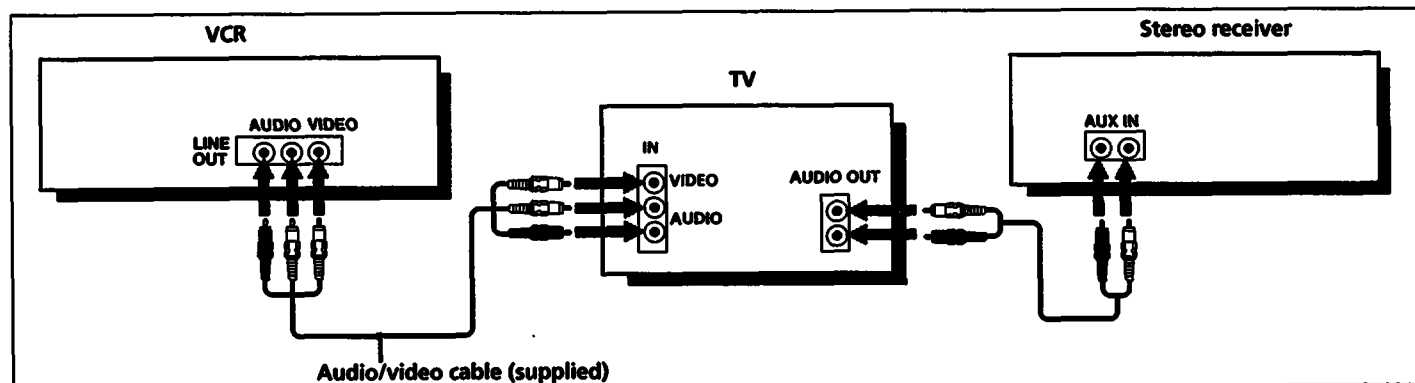


B Use this hookup if your TV doesn't have stereo jacks

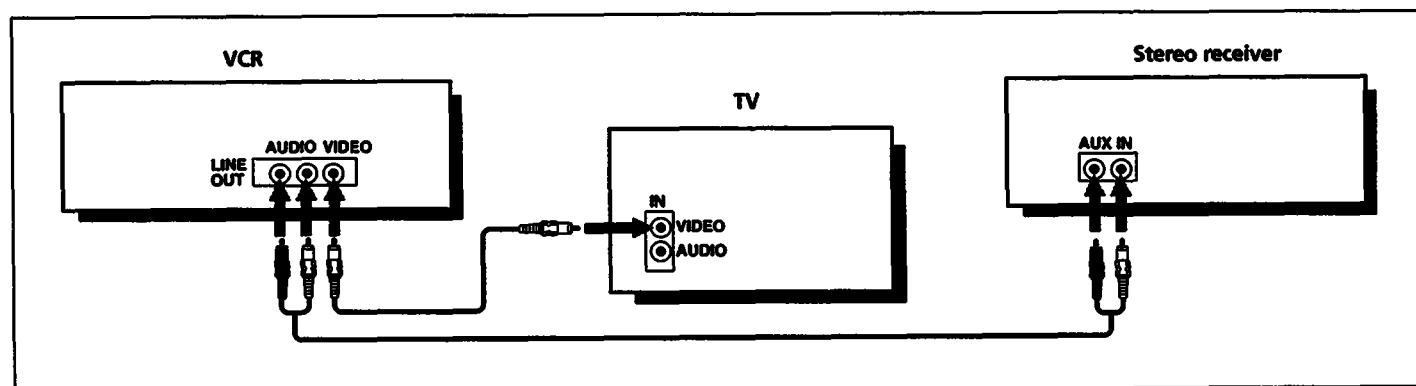

A/V hookup: VCR setup

After you've connected your TV and completed antenna or cable hookup, use the following procedure to set up the VCR.

Press **MENU** and select **SET UP MENU**.

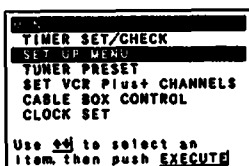

Set **AUTO ANT SEL** to **OFF** and press **EXECUTE**.



For details, see page 33.

Hookup 1

Using cable box control

Recommended use

This hookup is recommended for most cable systems with cable boxes. It allows the VCR's cable box control feature to control the channel on the cable box, simplifying the recording process. You should use this hookup if you have a cable box, especially if your cable system scrambles all or most channels. A list of compatible cable boxes is on page 28.


What you can and can't do with this hookup

What you can do

- Record any channel by using the VCR's cable box control feature to select channels on the cable box


What you can't do

- Record with the cable box turned off
- Record one channel while watching another channel

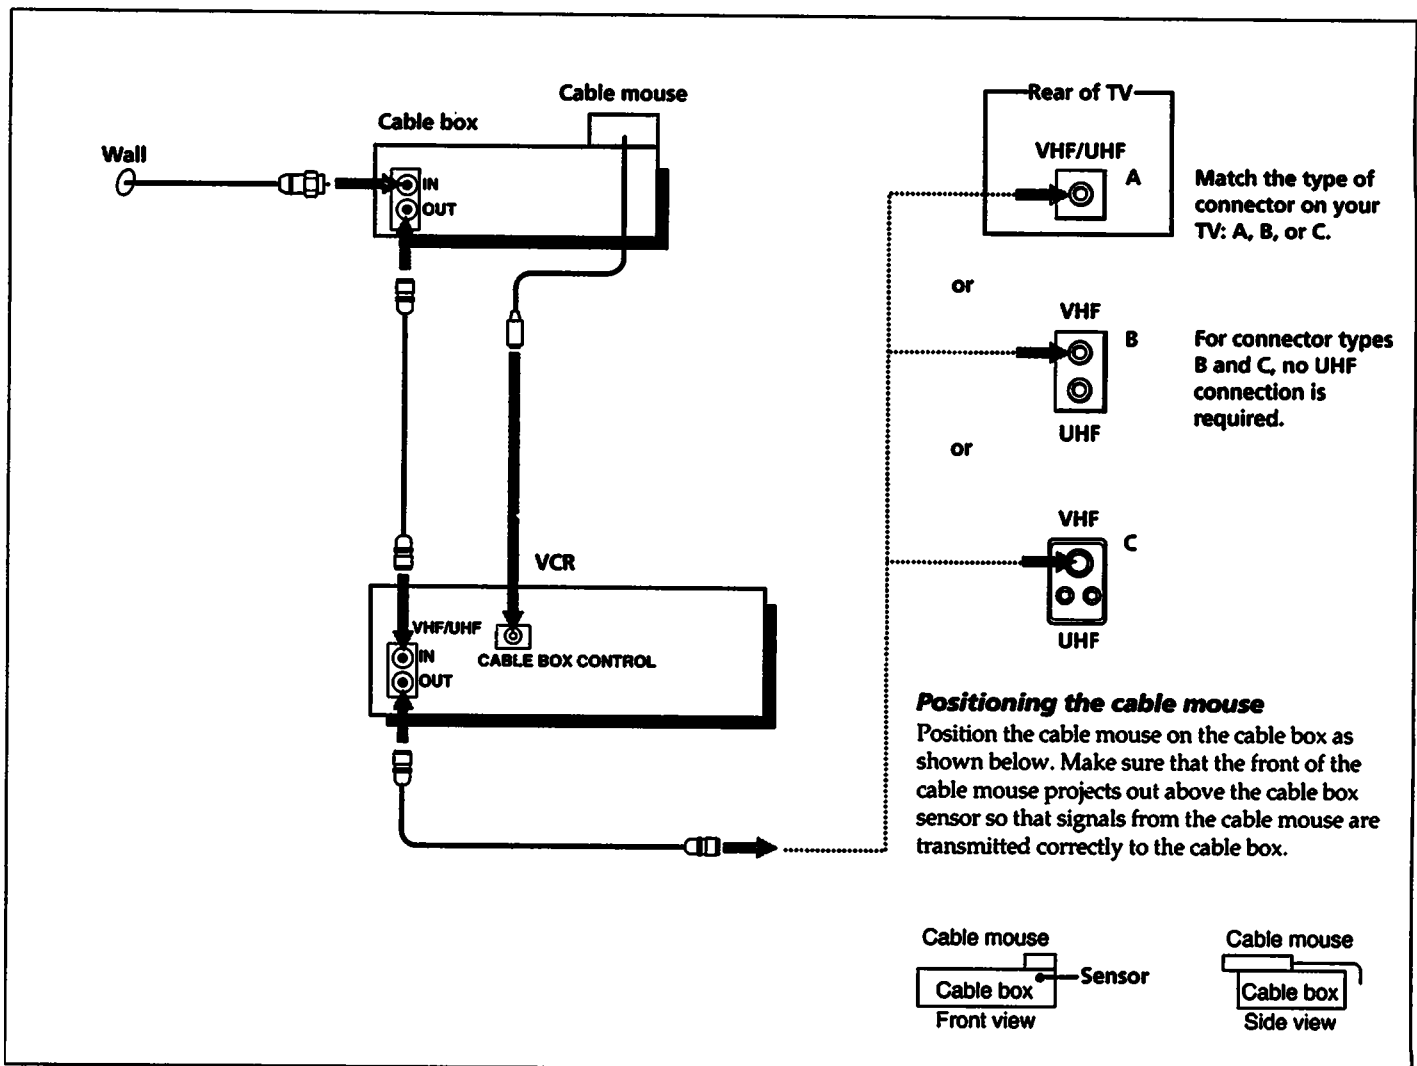


Hookup 1: VCR setup


- 1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.
If you made A/V connections (from page 9), you can skip this step.

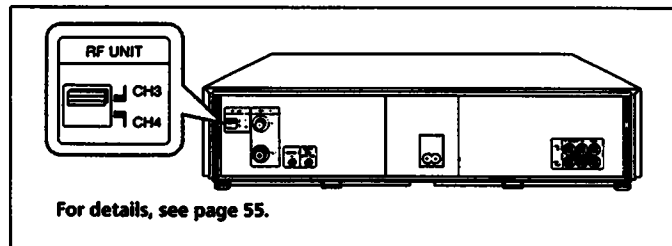

- 2 (Canadian model only) Set the on-screen display language to French if desired. For details, see page 21.
- 3 Turn on your cable box.
- 4 Set NORMAL/CATV to CATV:

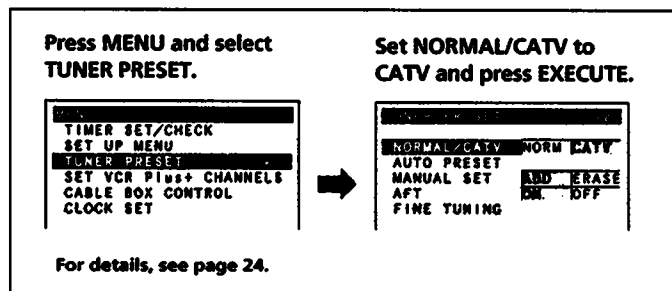

- 5 Set CABLE BOX CONTROL to ON:

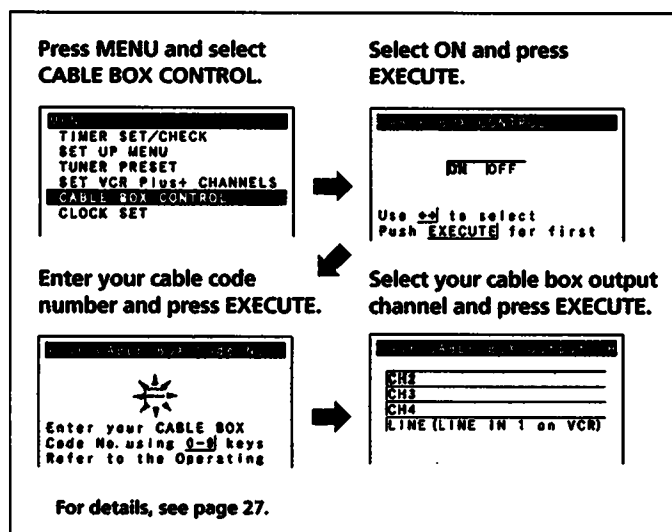


If your cable box is not compatible

Check with your cable company to see if they can provide a compatible box. If not, use Hookup 2 (or 5, if you have only a few scrambled channels) or use Hookup 4 (if you have many scrambled channels).

Hookup 1: VCR Plus+ channel setup

- 1 Find the VCR Plus+ Channel Listing in your program guide. For details on the VCR Plus+ Channel Listing, see page 30.
- 2 If the channels in the program guide are different from the channels that you actually use on your TV, set the channels that are different as follows:

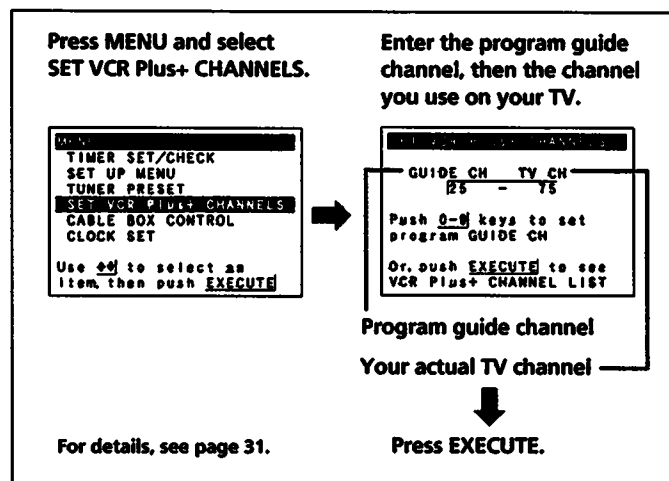

Automatic clock setting

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks if the clock displays the current time. If not, it adjusts the clock automatically. Make sure to leave the cable box on.

The VCR sets the clock by picking up a time signal that's provided by some TV channels. With the automatic clock setting feature you don't have to set the clock or even adjust to Daylight Saving Time.

If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see pages 22–23.

You are now ready to use your VCR

A Quick reference to operations is provided on the back cover to help you quickly enjoy the basic functions. These procedures differ slightly depending on the hookup used. Make a note of which hookup you used (Hookup 1) so that you can always follow the correct instructions.

Hookup 2

No cable box or Incompatible cable box and few scrambled channels

Recommended use

Use this hookup if you do not have a cable box. Also use this hookup if your cable company cannot supply a cable box that is compatible with the VCR's cable box control feature, and your cable system scrambles only a few channels.


What you can and can't do with this hookup

What you can do

- Record any unscrambled channel


What you can't do

- Record scrambled channels that require a cable box

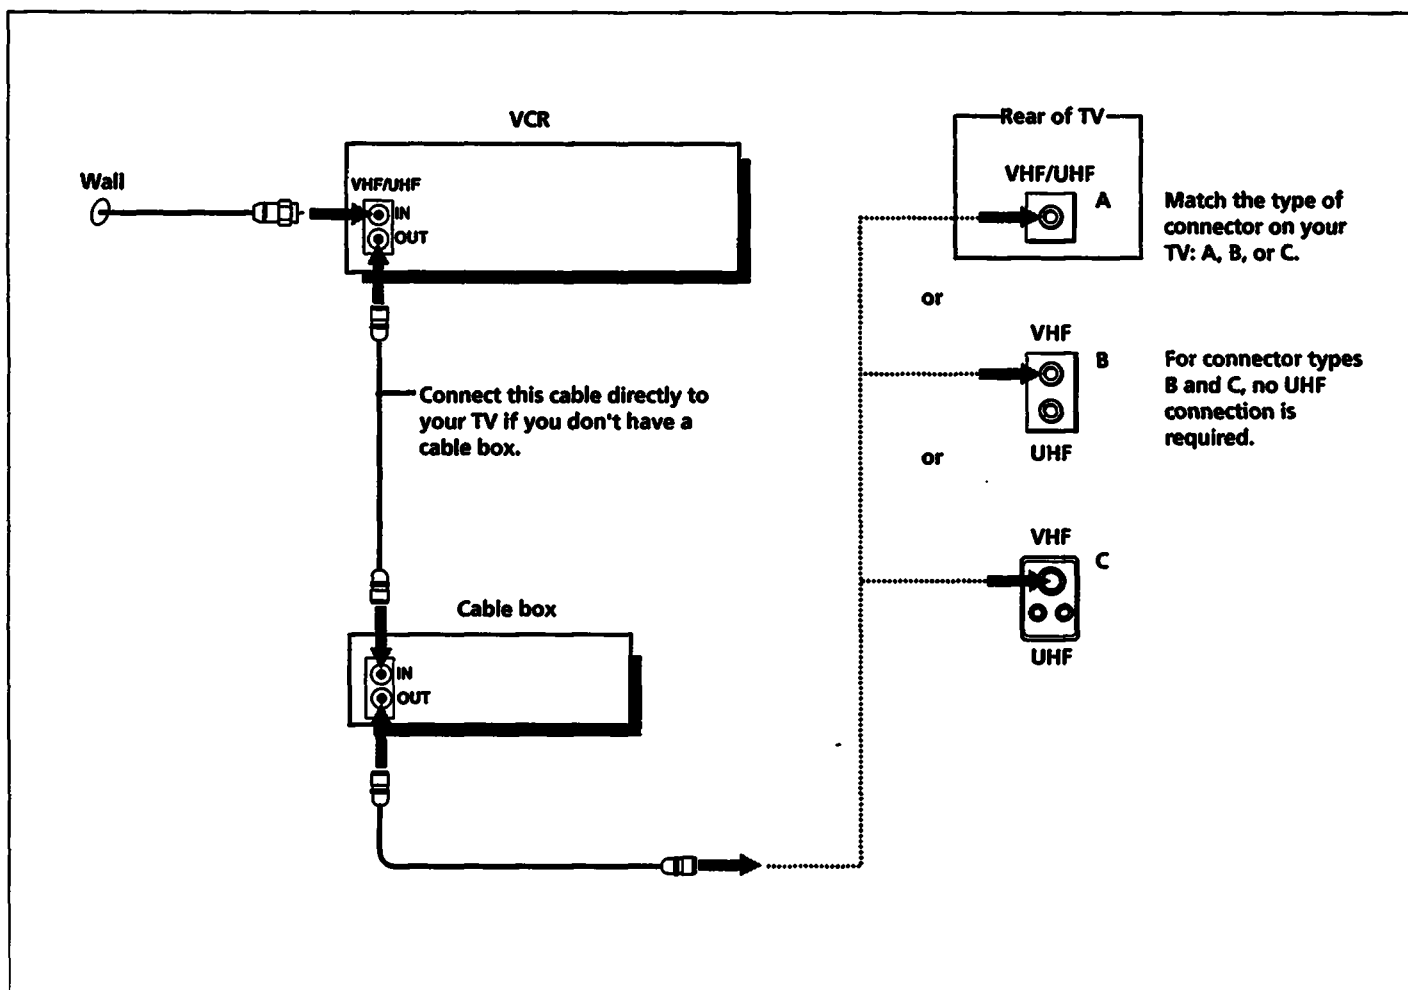


Hookup 2: VCR setup

- 1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.
If you made A/V connections (from page 9), you can skip this step.

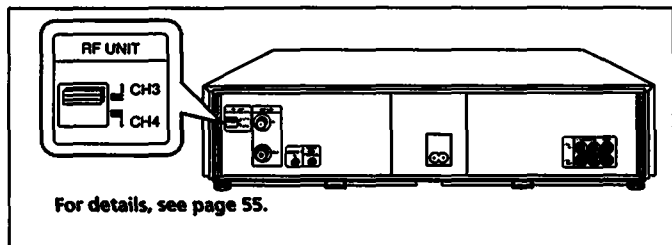


- 2 (Canadian model only) Set the on-screen display language to French if desired. For details, see page 21.

- 3 Set NORMAL/CATV to CATV:

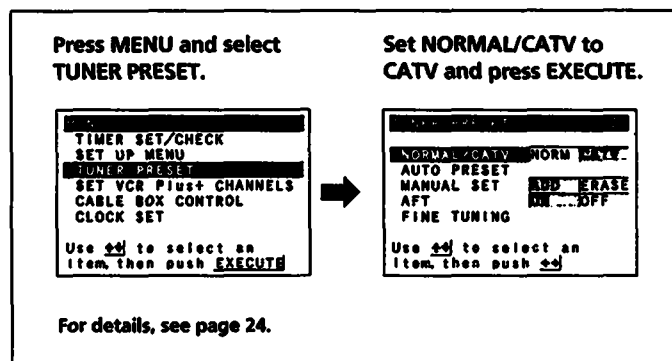


- 4 Preset the channels into the VCR:

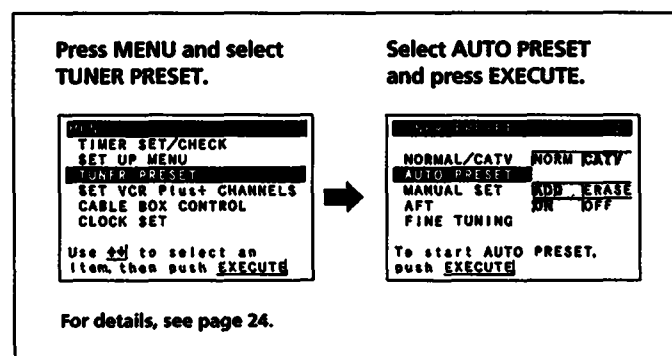

Hookup 2: VCR Plus+ channel setup

- 1 Find the VCR Plus+ Channel Listing in your program guide. For details on the VCR Plus+ Channel Listing, see page 30.
- 2 If the channels in the program guide are different from the channels that you actually use on your TV, set the channels that are different as follows:

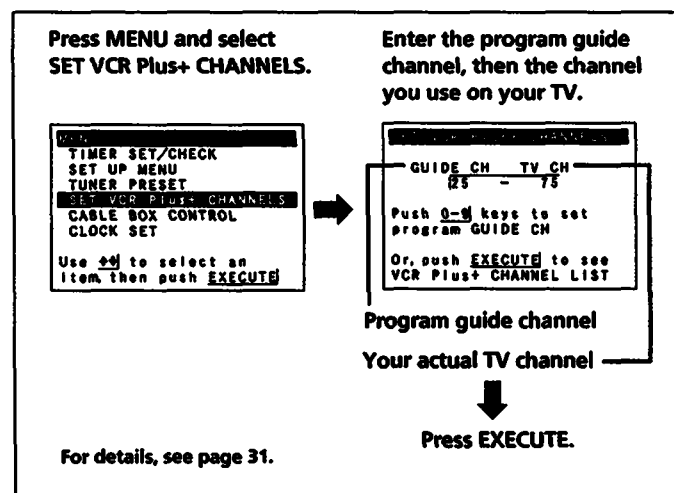

Automatic clock setting

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks if the clock displays the current time. If not, it adjusts the clock automatically.

The VCR sets the clock by picking up a time signal that's provided by some TV channels. With the automatic clock setting feature you don't have to set the clock or even adjust to Daylight Saving Time.

If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see pages 22–23.


You are now ready to use your VCR

A Quick reference to operations is provided on the back cover to help you quickly enjoy the basic functions. These procedures differ slightly depending on the hookup used. Make a note of which hookup you used (Hookup 2) so that you can always follow the correct instructions.


Antenna hookup

A Use this hookup if you're using:

- VHF/UHF antenna (you get channels 2-13 and channels 14 and higher)
- UHF-only antenna (you get channels 14 and higher)
- separate VHF and UHF antennas

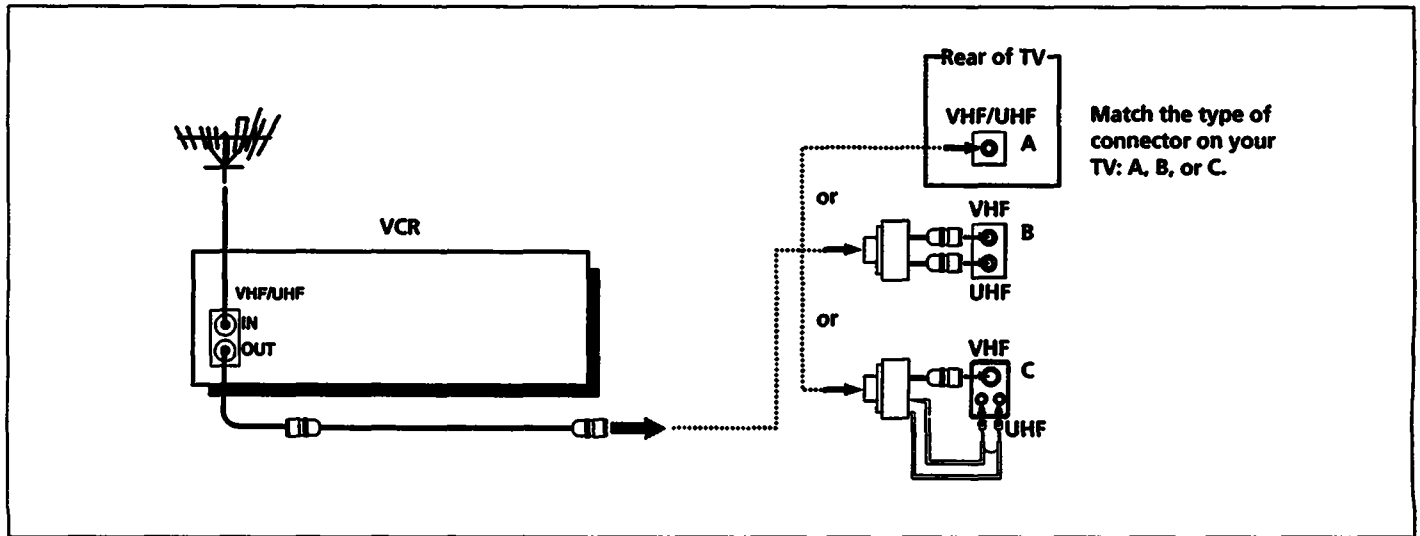

B Use this hookup if you're using a VHF-only antenna (you get channels 2-13 only)

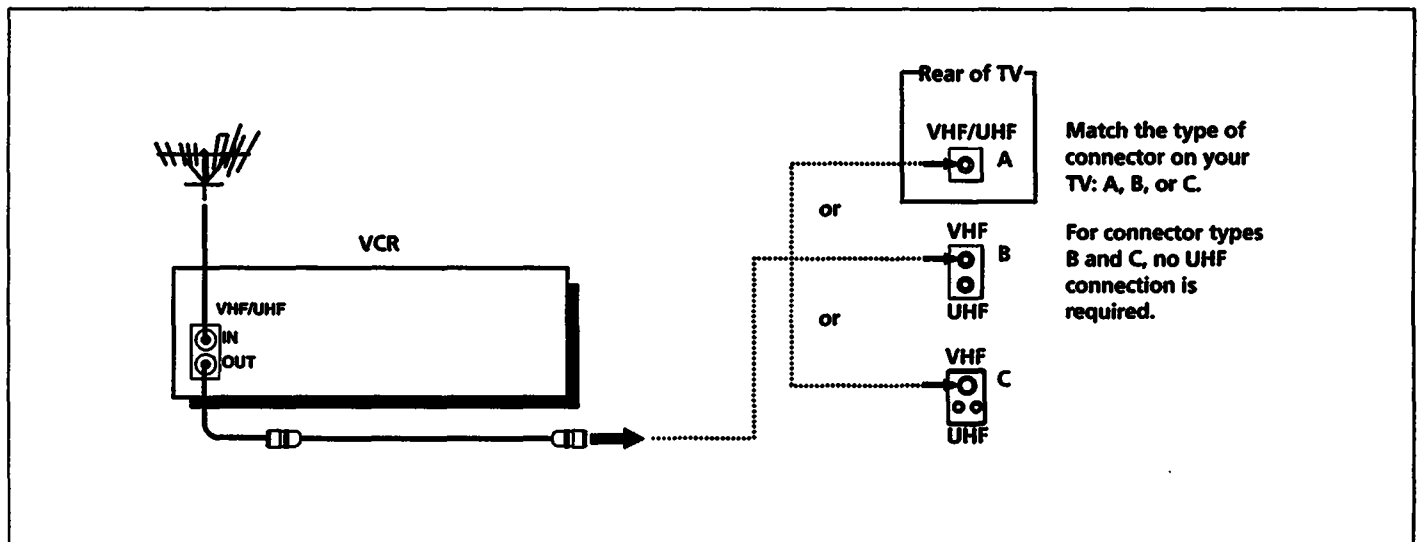


If you cannot connect your antenna cable to the VCR directly

If your antenna cable is a flat cable (300-ohm twin lead cable), attach the external antenna connector (not supplied) so that you can connect the cable to the VHF/UHF IN jack. If you have separate cables for VHF and UHF antennas, you may use a U/V band mixer. For details, see page 55.

Hookup 3: VCR setup

- 1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.
If you made A/V connections (from page 9), you can skip this step.

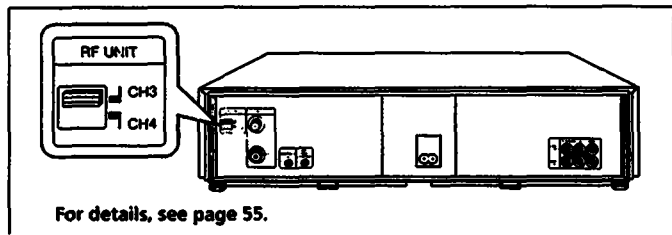

- 2 (Canadian model only) Set the on-screen display language to French if desired. For details, see page 21.

- 3 Set NORMAL/CATV to NORM:

Press MENU and select TUNER PRESET.

Use **⬅** to select an item, then push **EXECUTE**

Set NORMAL/CATV to NORM and press EXECUTE.

Use **⬅** to select an item, then push **⬅**

For details, see page 24.

- 4 Preset the channels into the VCR:

Press MENU and select TUNER PRESET.

Use **⬅** to select an item, then push **EXECUTE**

Select AUTO PRESET and press EXECUTE.

To start AUTO PRESET, push **EXECUTE**

For details, see page 24.

Hookup 3: VCR Plus+ channel setup

- 1 Find the VCR Plus+ Channel Listing in your program guide. For details on the VCR Plus+ Channel Listing, see page 30.
- 2 If the channels in the program guide are different from the channels that you actually use on your TV, set the channels that are different as follows:

Press MENU and select SET VCR Plus+ CHANNELS.

Use **⬅** to select an item, then push **EXECUTE**

Enter the program guide channel, then the channel you use on your TV.

Push **0-9** key to set program GUIDE CH
Or, push **EXECUTE** to see VCR Plus+ CHANNEL LIST

Program guide channel
Your actual TV channel

Press **EXECUTE**.

For details, see page 31.

Automatic clock setting

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks if the clock displays the current time. If not, it adjusts the clock automatically.

The VCR sets the clock by picking up a time signal that's provided by some TV channels. With the automatic clock setting feature you don't have to set the clock or even adjust to Daylight Saving Time.

If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see pages 22-23.

You are now ready to use your VCR

A Quick reference to operations is provided on the back cover to help you quickly enjoy the basic functions. These procedures differ slightly depending on the hookup used. Make a note of which hookup you used (Hookup 3) so that you can always follow the correct instructions.

Hookup 4

Incompatible cable box and many scrambled channels

Recommended use

Use this hookup if your cable company cannot supply a cable box that is compatible with the VCR's cable box control feature, and your cable system scrambles all, or most channels.


What you can and can't do with this hookup

What you can do

- Record any channel by selecting the channel on the cable box


What you can't do

- Record with the cable box turned off
- Record by selecting channels directly with the VCR
- Record one channel while watching another channel

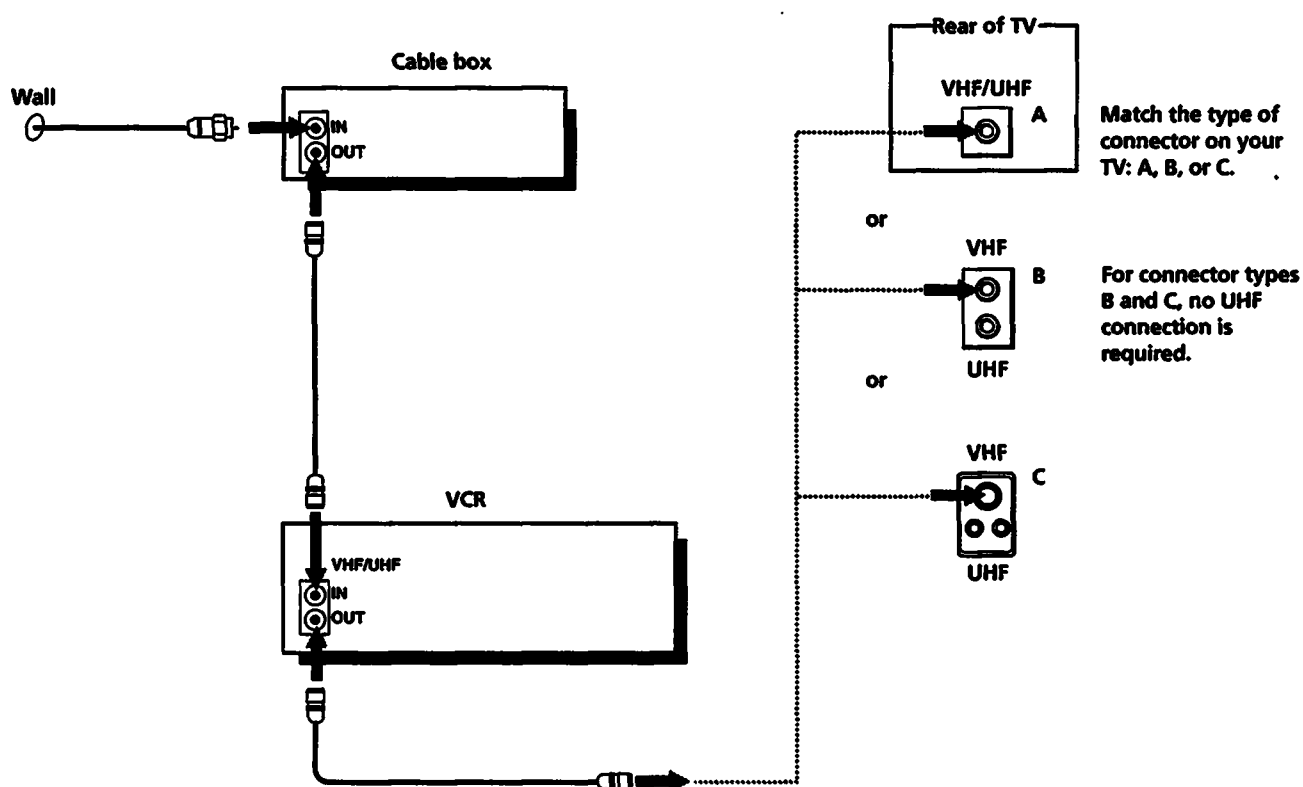


Hookup 4: VCR setup

- 1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.
If you made A/V connections (from page 9), you can skip this step.

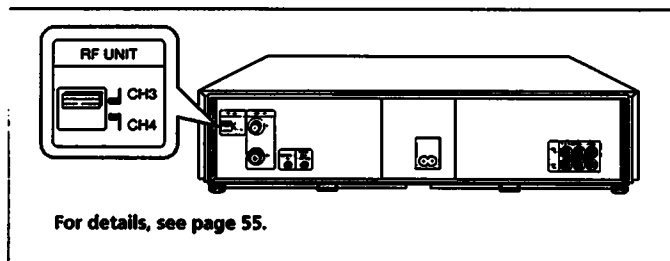


- 2 (Canadian model only) Set the on-screen display language to French if desired. For details, see page 21.
- 3 Turn on your cable box.
- 4 Preset the channels into the VCR:

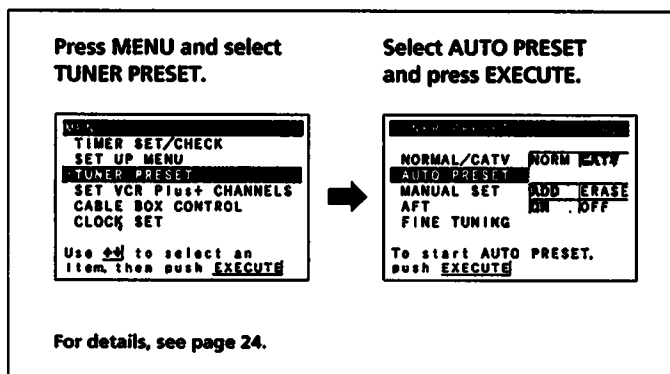

Hookup 4: VCR Plus+ channel setup

- 1 Find the VCR Plus+ Channel Listing in your program guide. For details on the VCR Plus+ Channel Listing, see page 30.
- 2 Enter all the channels you want to record and the cable box output channel (usually 2, 3, or 4):

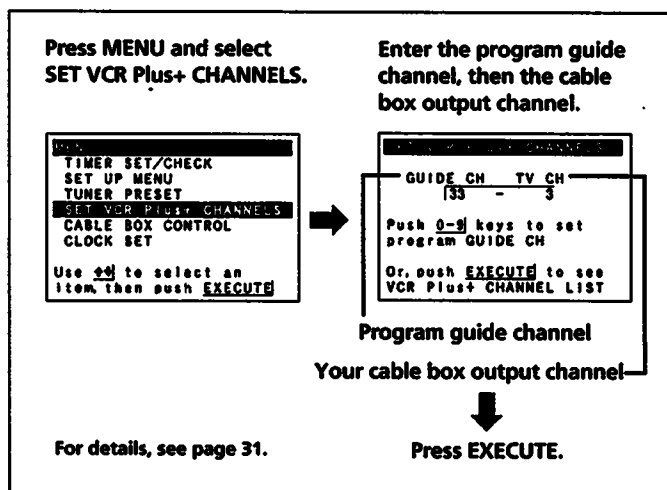

You are now ready to use your VCR

A Quick reference to operations is provided on the back cover to help you quickly enjoy the basic functions. These procedures differ slightly depending on the hookup used. Make a note of which hookup you used (Hookup 4) so that you can always follow the correct instructions.

Hookup 5

Incompatible cable box with few scrambled channels, using an A/B switch (Canadian model only)

Recommended use

By using an A/B switch, this hookup allows you to easily record both scrambled and unscrambled channels. With the A/B switch set to position "A," you can record unscrambled channels by selecting channels directly with the VCR. You only use position "B" and the cable box to record a scrambled channel.


What you can and can't do with this hookup

What you can do

- Record any unscrambled channel by selecting the channel directly with your VCR (the A/B switch is set to "A")
- Record any scrambled channel by selecting the channel on the cable box (the A/B switch is set to "B")


What you can't do

- Record one channel while watching another channel

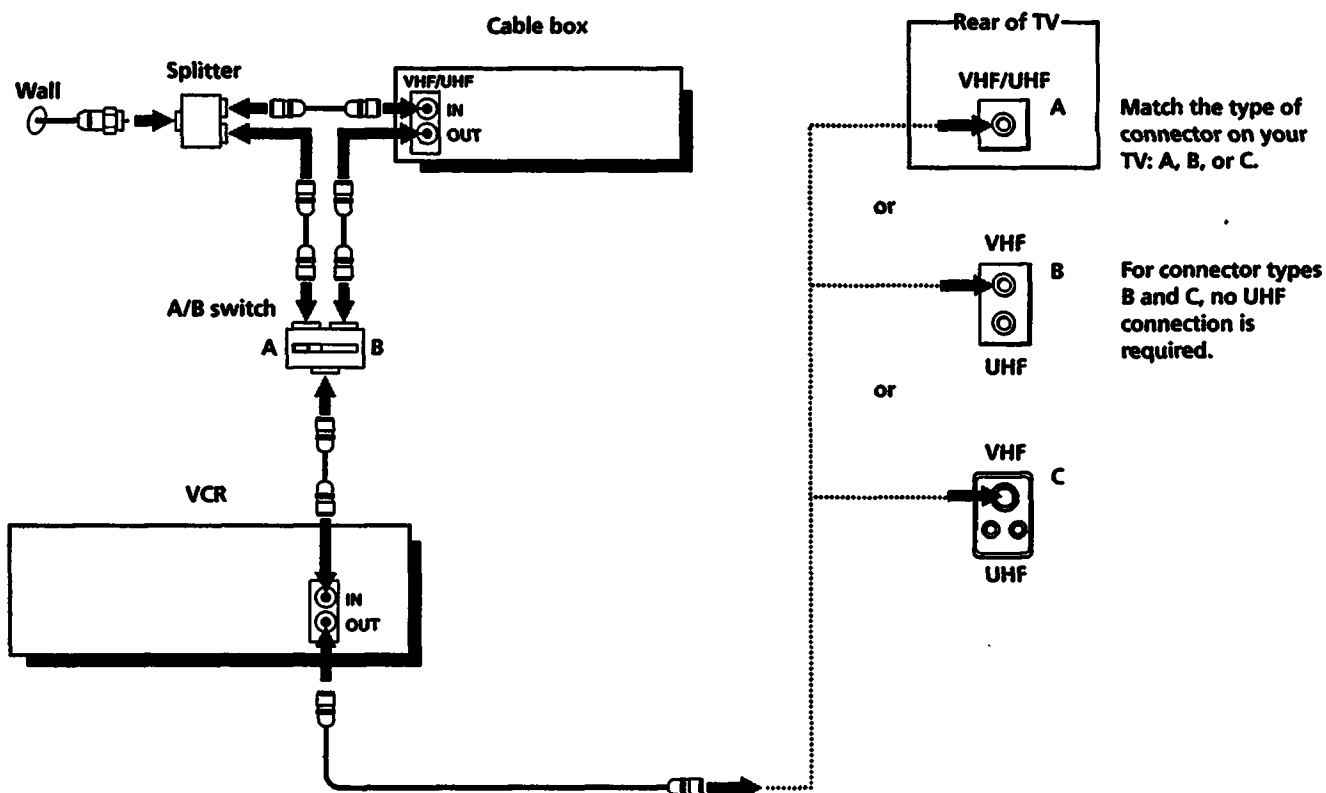

Hookup 5: VCR setup

- 1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.
If you made A/V connections (from page 9), you can skip this step.

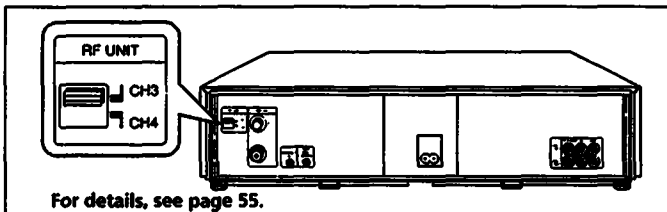

- 2 (Canadian model only) Set the on-screen display language to French if desired. For details, see page 21.
- 3 Set the A/B switch to "A."
- 4 Set NORMAL/CATV to CATV:

Press MENU and select TUNER PRESET.

Use **↵** to select an item, then push **EXECUTE**.

For details, see page 24.

Set NORMAL/CATV to CATV and press EXECUTE.

Use **↵** to select an item, then push **↵**.

- 5 Preset the channels into the VCR:

Press MENU and select TUNER PRESET.

Use **↵** to select an item, then push **EXECUTE**.

For details, see page 24.

Select AUTO PRESET and press EXECUTE.

To start AUTO PRESET, push **EXECUTE**.

- 6 Preset the cable box output channel (usually 2, 3, or 4):

Press MENU and select TUNER PRESET.

Use **↵** to select an item, then push **EXECUTE**.

For details, see page 25.

Set MANUAL SET to ADD and press EXECUTE.

Select CH with 0-9. Push **ENTER** **↵** to ADD/ERASE.

Hookup 5: VCR Plus+ channel setup

- 1 Find the VCR Plus+ Channel Listing in your program guide. For details on the VCR Plus+ Channel Listing, see page 30.
- 2 For unscrambled channels, if the channels in the program guide are different from the channels that you actually use on your TV, set the channels that are different as follows:

Press MENU and select SET VCR Plus+ CHANNELS.

Use **↵** to select an item, then push **EXECUTE**.

Enter the program guide channel, then the channel you use on your TV.

Push 0-9 keys to set program GUIDE CH.
Or, push **EXECUTE** to see VCR Plus+ CHANNEL LIST.

Program guide channel
Your actual TV channel

Press **EXECUTE**.

For details, see page 31.

- 3 For scrambled channels, enter all the scrambled channels you want to record and the cable box output channel (usually 2, 3, or 4):

Press MENU and select SET VCR Plus+ CHANNELS.

Use **↵** to select an item, then push **EXECUTE**.

Enter the program guide channel, then the cable box output channel.

Push 0-9 keys to set program GUIDE CH.
Or, push **EXECUTE** to see VCR Plus+ CHANNEL LIST.

Program guide channel
Your cable box output channel

Press **EXECUTE**.

For details, see page 31.

Incompatible cable box with few scrambled channels, using an A/B switch (continued)

To play a tape

- 1 Set the TV to channel 3 or 4 (or to video input, if you have made A/V connections).
- 2 Insert a cassette and press ▷ PLAY.

To record an unscrambled channel

- 1 Set the A/B switch to "A."
- 2 Press VCR Plus+ on the remote commander.
- 3 Enter the program's PlusCode number.
- 4 Press ONCE, DAILY, or WEEKLY.
- 5 Insert a cassette.
- 6 Press POWER to turn the VCR off.

To record a scrambled channel

- 1 Set the A/B switch to "B."
- 2 Turn on the cable box.
- 3 Set the cable box to the channel you want to record.
- 4 Press VCR Plus+ on the remote commander.
- 5 Enter the program's PlusCode number.
- 6 Press ONCE, DAILY, or WEEKLY.
- 7 Insert a cassette.
- 8 Press POWER to turn the VCR off.
- 9 Leave the cable box on.


To watch TV

- 1 Turn off your VCR, or press the VCR's TV/VTR button until the VTR indicator in the display window goes off.
- 2 Set the A/B switch to "B."
- 3 Turn on your cable box.
- 4 Set the TV to the cable box output channel (usually 2, 3, or 4).
- 5 Set the cable box to the channel you want to watch.


Selecting the language (Canadian model only)

If you prefer French to English, you can change the on-screen language.

- 1 Press MENU.**
The main MENU appears on the TV screen.

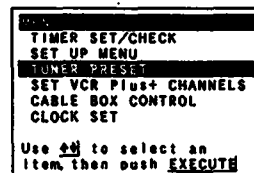


- 2 Press CURSOR ↑/↓ to move the cursor (I) to SET UP MENU, then press EXECUTE.**
The SET UP MENU appears on the TV screen.

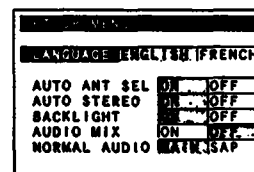


- 3 Press CURSOR ↑/↓ to move the cursor (I) to LANGUAGE.**

- 4 Press CURSOR ←/→ to select ENGLISH or FRENCH, then press EXECUTE.**

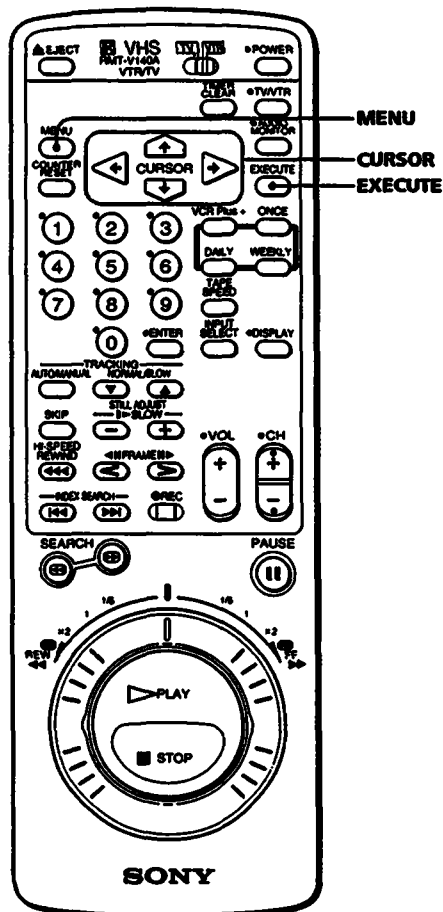

Setting the clock

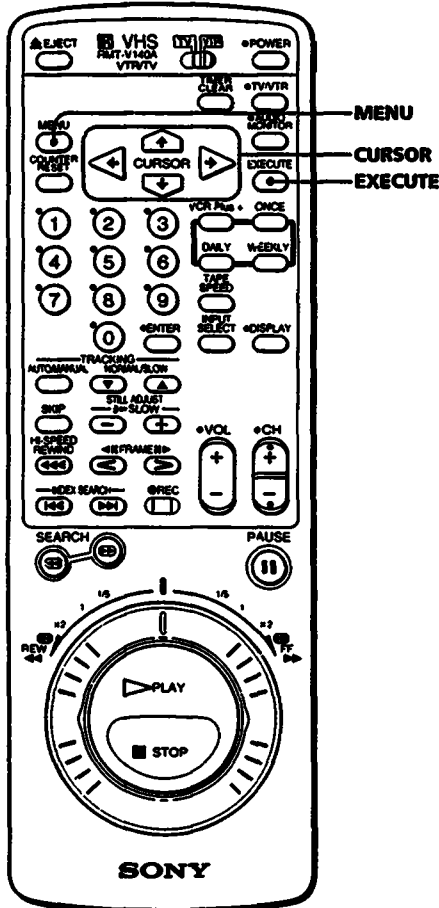

Note

- The menu disappears automatically if you don't proceed for more than one minute.
- The clock cannot be set automatically if you don't receive a channel that carries a time signal in your area. If so, set the clock manually.
- If there are only a few channels in your area that carry time signals, setting the clock automatically may take several minutes. If nothing happens even after you wait several minutes, set the clock manually.


Set the time and date to use the timer feature for recording programs.

Using the Auto Clock Set feature

Some TV and cable channels are beginning to transmit time signals with their broadcasts (this is called Extended Data Services – EDS). Your VCR can use this time signal to automatically set the clock. After you complete the steps below, when you turn off the VCR, it will automatically look for a channel that carries a time signal and set the clock. The Auto Clock Set feature only works if a channel in your area is broadcasting a time signal. Use the manual method until broadcasters in your area start sending time signals.


1 Press MENU.

The main MENU appears on the TV screen.

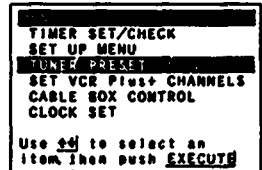


2 Press CURSOR ↑/↓ to move the cursor (I) to CLOCK SET, then press EXECUTE.

The CLOCK SET menu appears on the TV screen.

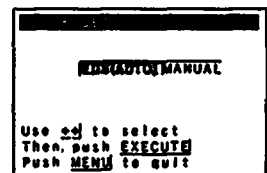


3 Press CURSOR ←/→ to select EDS (AUTO), then press EXECUTE.

The SET EDS CHANNEL menu appears on the TV screen.

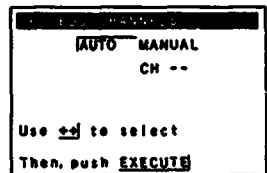


4 Press CURSOR ←/→ to select AUTO or MANUAL.

If you set to AUTO:
The VCR automatically searches for a channel that carries a time signal. (Use this method if you don't know of a channel that carries a time signal.)

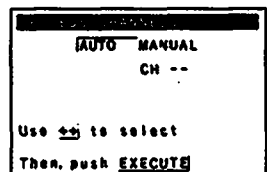

If you set to MANUAL:
Set a channel that carries a time signal by using the number buttons and the -/- (ten's digit) button. (Use this method if you do know of a channel that carries a time signal.)

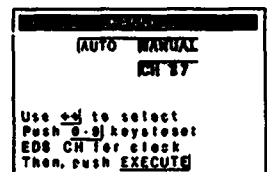

5 Press EXECUTE.


6 To activate the Auto Clock Set function, turn the VCR off.

The VCR automatically adjusts the clock by scanning for a channel that carries a time signal.

Using the manual method


1 Press MENU.

The main MENU appears on the TV screen.

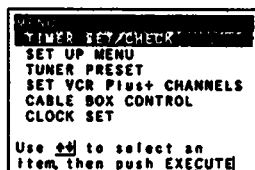


2 Press CURSOR <up>/<down> to move the cursor (|) to CLOCK SET, then press EXECUTE.

The CLOCK SET menu appears on the TV screen.

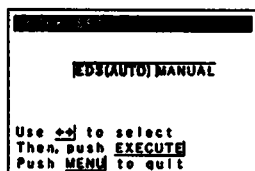


3 Press CURSOR <left>/<right> to select MANUAL, then press EXECUTE.


The CLOCK SET menu appears on the TV screen and the month is highlighted.

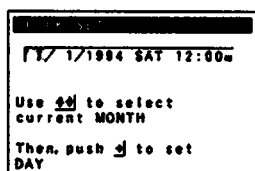


4 Set the month using CURSOR <up>/<down>.

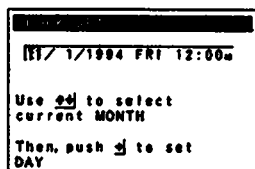


5 Press CURSOR <right> to highlight the day. Set the day using CURSOR <up>/<down>. The day of the week is set automatically.

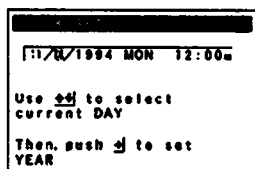


6 Press CURSOR <right> to highlight the year. Set the year using CURSOR <up>/<down>.

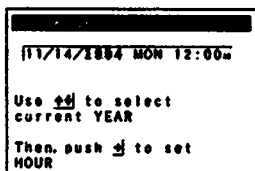

7 Press CURSOR <right> to highlight the hour. Set the hour using CURSOR <up>/<down>.

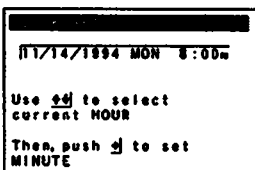

8 Press CURSOR <right> to highlight the minutes. Set the minutes using CURSOR <up>/<down>.

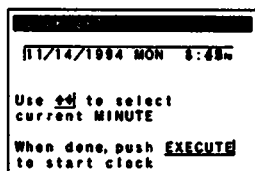

9 Press EXECUTE to start the clock.

Presetting channels

(Skip this section if you are using cable box control.)

This VCR is capable of receiving VHF channels 2 to 13, UHF channels 14 to 69 and unscrambled CATV channels 1 to 125. First, we recommend that you preset the receivable channels in your area using automatic presetting. Then, if there are any unwanted channels, disable them manually. If you have decided which channels you wish to preset, set them directly using manual presetting.


Before you start...

- Turn on the VCR and the TV.
- Set the TV to the VCR channel (channel 3 or 4). If your TV is connected to the VCR using A/V connections, set the TV to video input.
- Press TV/VTR to display the VTR indicator in the VCR's display window.
- Press INPUT SELECT so that a channel number appears in the VCR's display window.

Presetting all receivable channels automatically


1 Press MENU.

The main MENU appears on the TV screen.

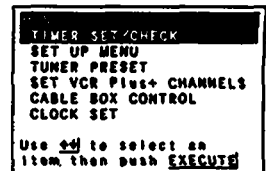


2 Press CURSOR ↑/↓ to move the cursor (I) to TUNER PRESET, then press EXECUTE.

The TUNER PRESET menu appears on the TV screen.

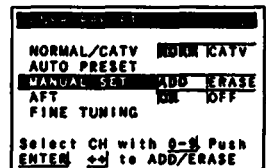


3 Press CURSOR ↑/↓ to move the cursor (I) to NORMAL/CATV.

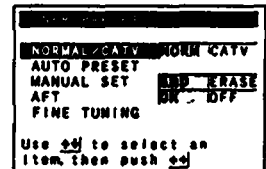


4 Select NORM or CATV using CURSOR ←/→:

- To preset cable TV channels, select CATV.
- To preset VHF and UHF channels, select NORM.

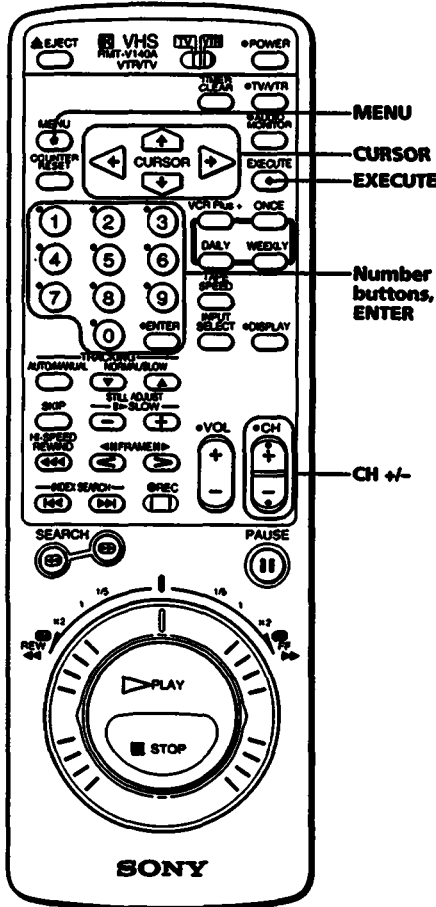


- 5 Press CURSOR \uparrow/\downarrow to move the cursor (B) to AUTO PRESET, then press EXECUTE.**

All receivable channels are preset in numerical sequence. When no more receivable channels can be found, presetting stops and the picture from the lowest numbered channel is displayed on the TV screen.

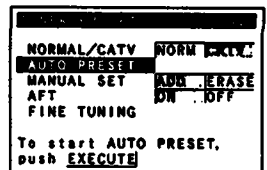


Presetting/disabling channels manually


- 1 Display the TUNER PRESET menu.**
For instructions, follow steps 1 and 2 in "Presetting all receivable channels automatically."

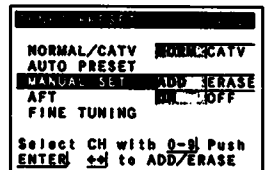


- 2 Select the channel to preset or disable:**
- To preset a channel, enter the channel number by pressing the number buttons then ENTER.
 - To disable a channel, select the channel number by pressing CH +/-.

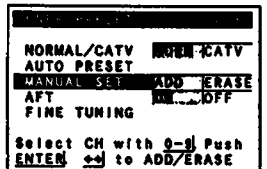

- 3 Set MANUAL SET to ADD or ERASE, using CURSOR $\uparrow/\downarrow/\leftarrow/\rightarrow$:**
- To preset a channel, select ADD.
 - To disable a channel, select ERASE.

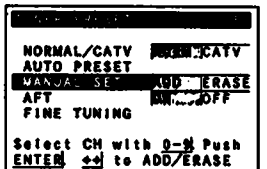

- 4 Repeat steps 2 and 3 to preset or disable channels as required, then press EXECUTE.**

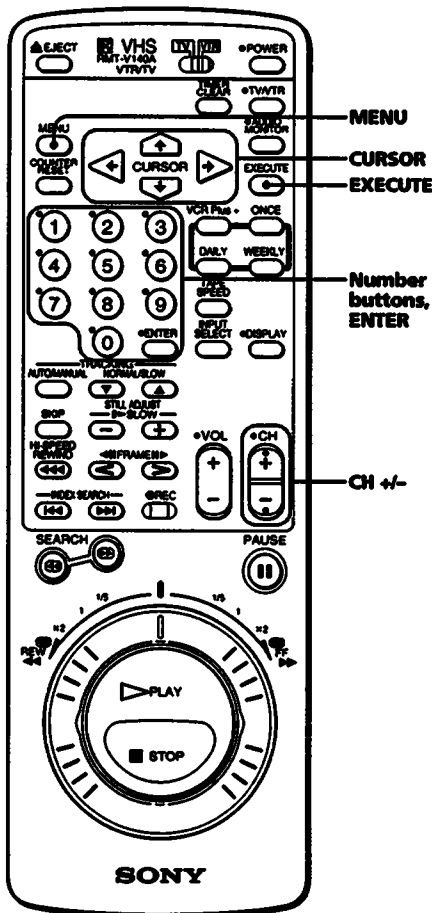

Presetting channels (continued)


Cable TV channel assignment

Cable TV systems use letters or numerals to designate channels. This VCR is designed to correspond with standard cable systems. The chart below shows the channel numbers on this VCR and the corresponding cable TV channels. Note that the channel number assignment shown in the chart may not correspond to the channel number used by your local cable company. Check with your local cable TV company for more information on the available channels.


Number on this VCR	1	2	3	...	12	13	14	15	16	17			
Cable TV channel	A-8	2	3	...	12	13	A	B	C	D			
18	19	20	21	22	23	24	25	26	27	28	29	30	31
E	F	G	H	I	J	K	L	M	N	O	P	Q	R
32	33	34	35	36	37	38	...	93	94	95	96	97	98
S	T	U	V	W	W+1	W+2	...	W+57	W+58	A-5	A-4	A-3	A-2
99	100	101	...	124	125								
A-1	W+59	W+60	...	W+83	W+84								

If the picture is not clear


Normally, the Auto Fine Tuning (AFT) function automatically tunes in channels clearly. If, however, the picture of a channel is not clear, you may also use the manual tuning function.

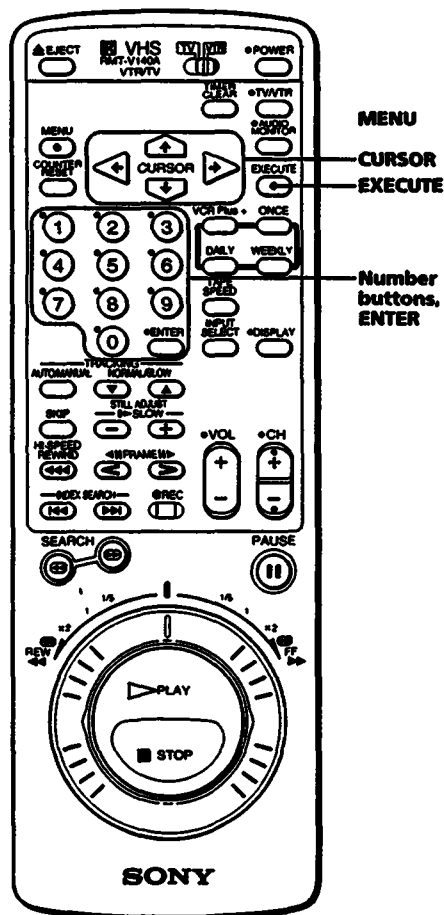


- 1 Display the TUNER PRESET menu.**
For instructions, follow steps 1 and 2 in "Presetting all receivable channels automatically."

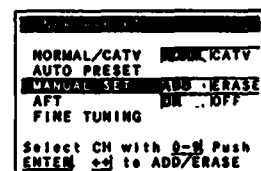


- 2 Select the channel you want to fine-tune by pressing the number buttons and then ENTER.**

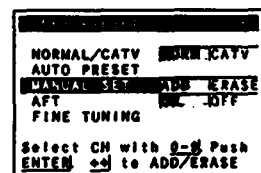

- 3 Press CURSOR ↑/↓ to move the cursor (I) to FINE TUNING.**
The fine tuning meter appears.

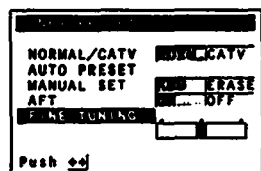


- 4 Press CURSOR ←/→ to get a clearer picture, then press EXECUTE.**
Note that the AFT setting switches to OFF.

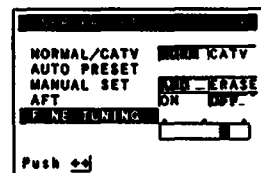


Setting up cable box control

Your VCR includes a cable box control feature which allows the VCR to control most brands of cable boxes via the cable mouse. With cable box control, the VCR controls channels on the cable box for timer recording. You can also use the VCR's remote commander to change channels on the cable box whenever the cable box is turned on. To use cable box control, you need to connect the cable mouse (page 10) and set the code number and output channel.


This VCR is programmed with codes necessary to control channel selection on most brands of cable boxes at the time this VCR was manufactured. It is possible that new cable boxes may be introduced that cannot be controlled with this VCR's cable mouse. If you have a cable box that is incompatible with this VCR, contact your cable operator — they may be able to provide you with a compatible cable box.

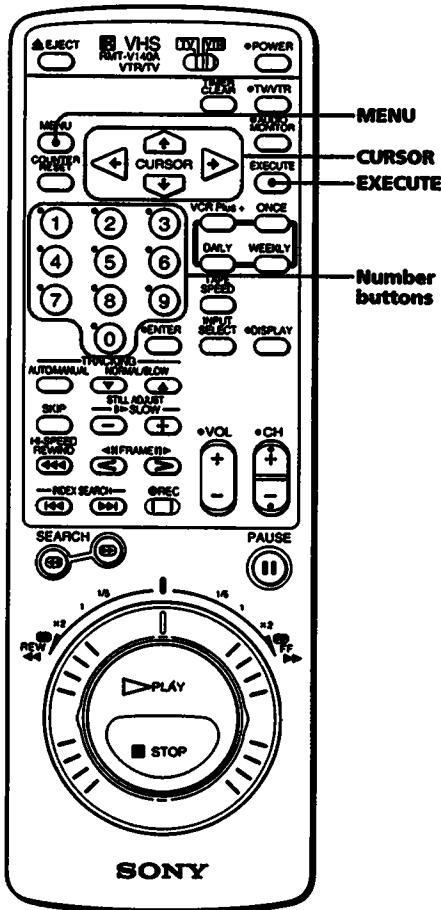

- 1 **Press MENU.**
The main MENU appears on the TV screen.

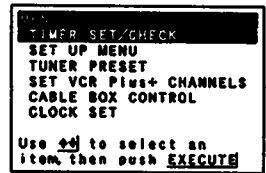


- 2 **Press CURSOR ↑/↓ to move the cursor (I) to CABLE BOX CONTROL, then press EXECUTE.**
The CABLE BOX CONTROL menu appears.

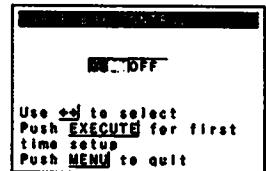


- 3 **Press CURSOR ←/→ to select ON, then press EXECUTE.**

- 4 **Enter the cable box code number by pressing the number buttons, then press EXECUTE.**
Find your cable box code number from the chart on page 28.

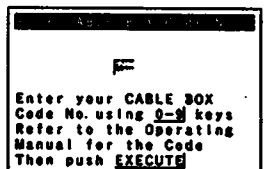

- 5 **Select the cable box output channel using CURSOR ↑/↓, then press EXECUTE.**

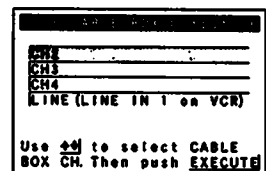

Note

- If you have connected your VCR and the cable box using a LINE connection, the EDS function is cancelled.

Setting up cable box control (continued)

Compatible cable boxes and their code numbers

Cable box brand	Code number Primary use	Code number Secondary use
Drake		38
Eastern		20
Gemini		28
Hamlin/Regal	14, 15, 43	16
Jerrold/GI	1, 2, 3, 4	10, 11, 30, 31, 32
Macom		26, 37
Magnavox		36
Oak	17, 18	19
Panasonic	12, 13	
Philips	22	21, 23, 24
Pioneer	8, 9	
RCA		25
Regency	20	
Scientific Atlanta	5, 6	
Texscan		27
Tocom	10, 11	
Toshiba		35
Unika		41
United Cable		3
United Satellite		42
Video Tech		39
Videoway		40
Viewstar		22, 23
Zenith	7	33, 34

The VCR contains 43 cable box code numbers (1 to 43). If your cable box is not listed above, you may try one of the other codes.

Note

- Tap the buttons on the remote commander lightly. Do not hold the buttons down.

To check the cable box control setting

- 1 Press CH +/- on the remote commander. Does the channel indicator on the cable box change? (Point the remote commander at the VCR, not at the cable box.)
- 2 Press all 10 number buttons (0 to 9) on the remote commander. Does the channel indicator on the cable box change?


If the answer to both 1 and 2 is "yes," you have made the correct setting.

If you cannot get your VCR to control the cable box

- ✓ Check the position of the cable mouse.
- ✓ Place the cable box and VCR away from each other. Do not place the cable box on top of the VCR.
- ✓ Try the setup again making sure to use the correct control code. If the cable box still does not respond you can try other codes.

If your cable box still does not operate with the cable mouse, contact your cable company to see if they can provide you with a compatible cable box.

Tips for normal viewing

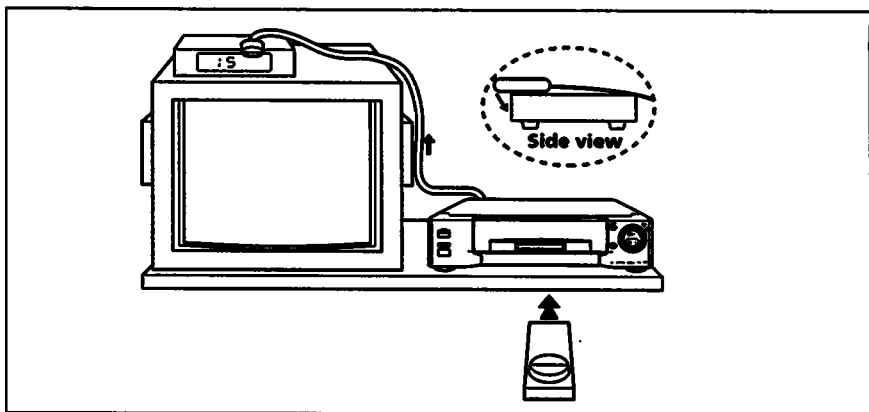

- Place the cable mouse so that it hangs out over the cable box front.
- Position the cable box away from the VCR.
- Do not place the cable box on top of the VCR.
- Point the remote commander at the VCR, not at the cable box.

Setting up VCR Plus+

Example of "PlusCode"

				PlusCode
5:30	14	MOVIE — Musical (2hrs.)	33044	
	2	SPORTS — Golf (1hr. 25min.)	42060	
		CNN — WS 9974		
6:30	2	3	4	DRAMA — Comedy (2hrs.) 17390
	5	SCIENCE AND TECHNOLOGY		
		(1hr. 15min.) 73457		

Example of "Channel Line-up Chart"

CABLE TV	Guide channel number
A&E Arts & Entertainment Network	39
AMC American Movie Classics	35
BRV Bravo (program grid only)	54
CNN Cable News Network	42
CSP C-SPAN	28
DIS The Disney Channel	53
DSC The Discovery Channel	37
ESN ESPN	34
FAM The Family Channel	47
HBO Home Box Office	33
LIF Lifetime	46
MAX Cinemax	45
MSG Madison Square Gardens Network	19
MTV Music Television	48
NIK Nickelodeon	38
SC Sports Channel	59
SCA Sports Channel America	70
SHO Showtime	41
TBS TBS SuperStation	43
TMC The Movie Channel	58
TNN The Nashville Network	49
TNT Turner Network Television	52
USA USA Network	44

VCR Plus+ is a feature in Sony VCRs that simplifies the task of programming the VCR to make timer recordings.


How VCR Plus+ works

Whenever you want to record a TV program, all you need to do is look up the program's "PlusCode," a number assigned to each program that's published in the TV section of most newspapers, cable TV listings, and even *TV GUIDE* magazine. Then, just enter the PlusCode of the program you want and the VCR is automatically programmed to record that show. It's that simple. With VCR Plus+, you no longer have to go through a lengthy and often repetitive procedure when you set start and stop times, channel numbers, and dates. All this information is automatically sent to your VCR when you enter the program's PlusCode.

How to set up your VCR

Setting up your VCR involves coordinating the TV channel number (the number you turn to on your TV or VCR to watch a program) with the guide channel (the number that's assigned to that channel in your program guide). To get the guide channel numbers, find the "Channel Line-up Chart" in the program guide for your area that features VCR PlusCodes. It usually looks like the example to the left.

For each channel your VCR receives, use the Channel Line-up Chart to check that the channel numbers match. For example, if HBO is listed in the Channel Line-up Chart on channel 33, and your VCR receives HBO on channel 15, you need to coordinate these numbers using the following procedure. For channels in which the numbers are the same (for example, if your VCR receives HBO on channel 33, and the guide channel number is 33), you can skip this procedure.

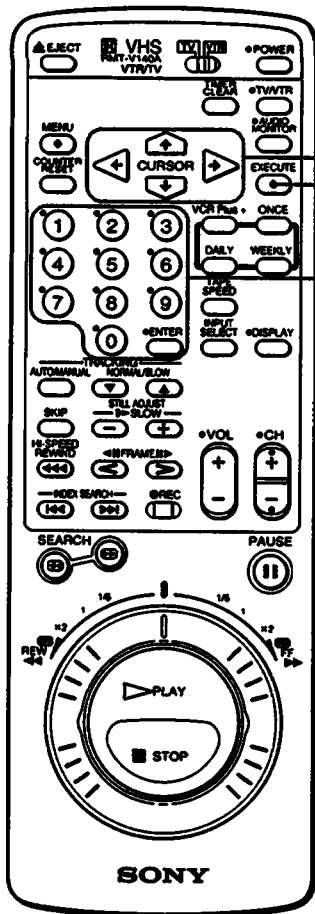


MENU

CURSOR
EXECUTE

Number buttons, ENTER


1 Press MENU.

The main MENU appears on the TV screen.

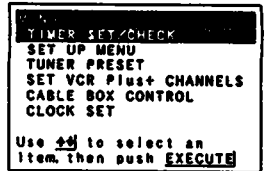


2 Press CURSOR \uparrow/\downarrow to move the cursor (I) to SET VCR Plus+ CHANNELS, then press EXECUTE.

The SET VCR Plus+ CHANNELS menu appears and the GUIDE CH column is highlighted.


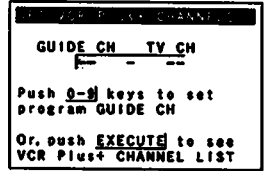


3 Enter the channel number assigned in the program guide and press ENTER.

The TV CH column is highlighted.

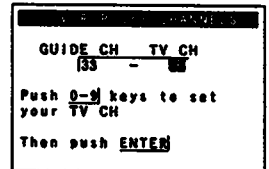


- 4 • If you made Hookup 1, 2, or 3, enter the actual number on your TV (and VCR) and press ENTER.
- If you made Hookup 4, enter the cable box output channel (usually 2, 3, or 4) and press ENTER.
- If you have made Hookup 5, enter the actual number on your TV (and VCR) for an unscrambled channel and press ENTER. For a scrambled channel, enter the cable output channel and press ENTER.

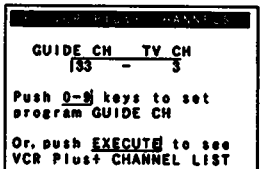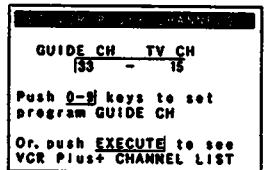

5 Repeat steps 3 and 4 for each channel whose numbers don't match.

6 When you have set all channels, press EXECUTE to confirm your channel settings.

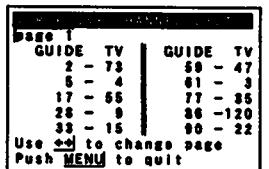

7 When you've finished, press MENU to exit.

32 | Getting Started



Menu choices

Initial settings are indicated in bold letters.



Menu option	Set this option to
LANGUAGE (<i>Canadian model only</i>)	ENGLISH or FRENCH to select the language of the on-screen menus.
AUTO ANT SEL	<ul style="list-style-type: none">• ON if your TV is connected only to VHF/UHF OUT on the VCR. To play a tape, set the TV to the channel for video playback (channel 3 or 4).• OFF if your TV is connected to both VHF/UHF OUT and LINE OUT on the VCR. To play a tape, set the TV to the VCR input.
AUTO STEREO	<ul style="list-style-type: none">• ON to receive stereo programs.• OFF to reduce noise in a stereo program. Although the sound may improve, the sound becomes monaural. For details, see page 39.
BACKLIGHT	<ul style="list-style-type: none">• ON to turn on the LCD backlight.• OFF to turn it off.
AUDIO MIX	<ul style="list-style-type: none">• ON to listen to the sound recorded on the hi-fi audio track and the normal audio track simultaneously. The AUDIO MONITOR button becomes inoperable.• OFF to select the sound using the AUDIO MONITOR button. For details, see page 36.
NORMAL AUDIO	<ul style="list-style-type: none">• MAIN to record the main sound on both the hi-fi and normal audio tracks.• SAP to record the SAP (Second Audio Program) sound on the normal audio track. The main sound is recorded on the hi-fi audio track. For details, see page 39.

Tip

- See "How sound is recorded on a video tape" on page 35.

Basic Operations

Playing a tape

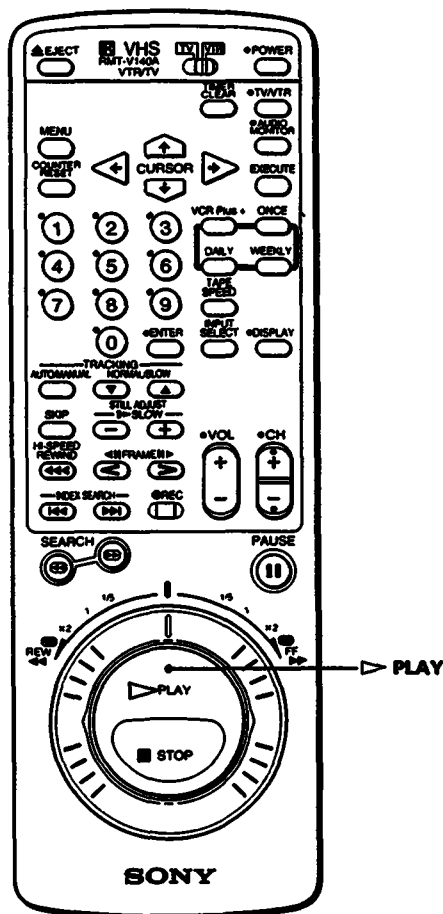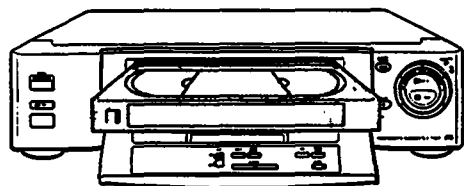

Tip

- For further information on searching and playback functions, see "Playing/searching at various speeds" on page 48.

Note

- Tapes recorded in LP mode can be played back on this VCR, while playback in modes other than normal forward speed is not guaranteed.

This section shows you how to play back a video tape.

1 Turn on your TV and tune in to the VCR:

- If the TV is connected to the VCR using the audio/video cable, set the TV to video input.
- If the TV is connected to the VCR using only the antenna, set the TV to the channel for the VCR.

2 Open the drop down panel and insert a tape.

The VCR turns on automatically. The tape starts playing automatically if its safety tab has been removed.

3 Press **▶ PLAY** to start playing.

When the tape reaches the end, the VCR automatically rewinds it to the beginning. (The power remains on.)

Additional tasks


To	Press
Stop play	■ STOP
Pause play	 PAUSE
Resume play after pause	 PAUSE or ▶ PLAY
Search forward	Turn the DUAL MODE SHUTTLE (DMS) ring to ⏭ during playback
Search backward	Turn the DMS ring to ⏮ during playback
Fast-forward the tape	Turn the DMS ring to ▶▶ FF during stop
Rewind the tape	Turn the DMS ring to ◀◀ REW during stop
Rewind the tape at high speed	◀◀◀ HI-SPEED REWIND
Eject the tape	⏏ EJECT

Displaying the time, remaining tape length and time counter

Press **DISPLAY** to turn the display on or off.

Notes

- When you insert a tape with a short tape length such as T-20, T-30 or a non-standard commercially available tape, the remaining tape length may not be correct.
- The display will not appear during still mode or slow-motion playback.

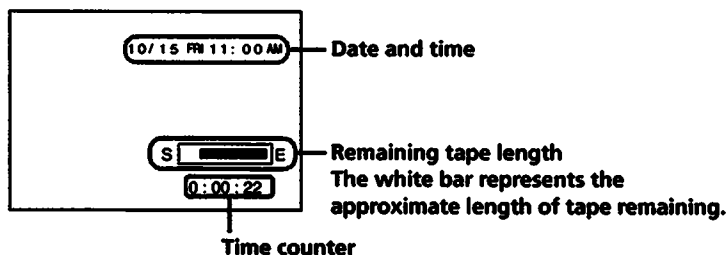

Using the time counter

At the point on a tape that you want to find later, press **COUNTER** **RESET** to reset the counter to "0H00M00S." When you rewind or advance the tape to this point, refer to the counter.

Notes

- When a tape is reinserted, the counter returns to "0H00M00S."
- The counter will not work on tape portions with no recording.

Playing stereo and bilingual programs

Press **AUDIO MONITOR** to select the desired sound. Each press of the button changes the display on the VCR and TV screen.


To listen to a		Press AUDIO MONITOR until	
Stereo tape	Bilingual tape	The TV screen shows	The display window indicator shows
Stereo	Left and right channels	"STEREO"	"STEREO"
Left channel	Left channel	"Lch"	"L"
Right channel	Right channel	"Rch"	"R"
Monaural on normal audio track	Sound on normal audio track (SAP)	No indication	No indication

Notes

- When you play a tape recorded in monaural, the sound is heard in monaural regardless of the **AUDIO MONITOR** setting.
- To play a tape in stereo, you must use the A/V connection.
- If **AUDIO MIX** in the **SET UP MENU** is set to **ON**, the **AUDIO MONITOR** button doesn't work.

How sound is recorded on a video tape

This VCR records sound onto two different tracks. High-fidelity sound (usually stereo) is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

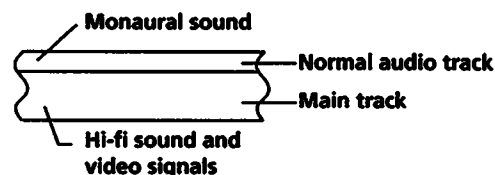

Playing a tape (continued)

Listening to both audio tracks during playback

When playing an audio-inserted tape, you have a choice of listening sound. To listen to the sounds recorded on the hi-fi audio and normal audio tracks at the same time, use the SET UP MENU.

- 1 Press MENU and select SET UP MENU.

SET UP MENU			
LANGUAGE		ENGLISH	FRENCH
AUTO ANT SEL	ON	OFF	
AUTO STEREO	ON	OFF	
BACKLIGHT	ON	OFF	
AUDIO MIX	ON	OFF	
NORMAL AUDIO	MAIN	SAP	

Tip

- See "How sound is recorded on a video tape" on page 35.

- 2 Set AUDIO MIX to ON using CURSOR $\uparrow/\downarrow/\leftarrow/\rightarrow$.

The AUDIO MONITOR button becomes inoperative, and the sound you hear is mixed.

SET UP MENU			
LANGUAGE		ENGLISH	FRENCH
AUTO ANT SEL	ON	OFF	
AUTO STEREO	ON	OFF	
BACKLIGHT	ON	OFF	
AUDIO MIX	ON	OFF	
NORMAL AUDIO	MAIN	SAP	


Note

- If AUDIO MIX remains ON, the AUDIO MONITOR button remains inoperative.

- 3 Press EXECUTE to store the setting.

After playing the audio-inserted tape, reset AUDIO MIX to OFF.

Recording TV programs

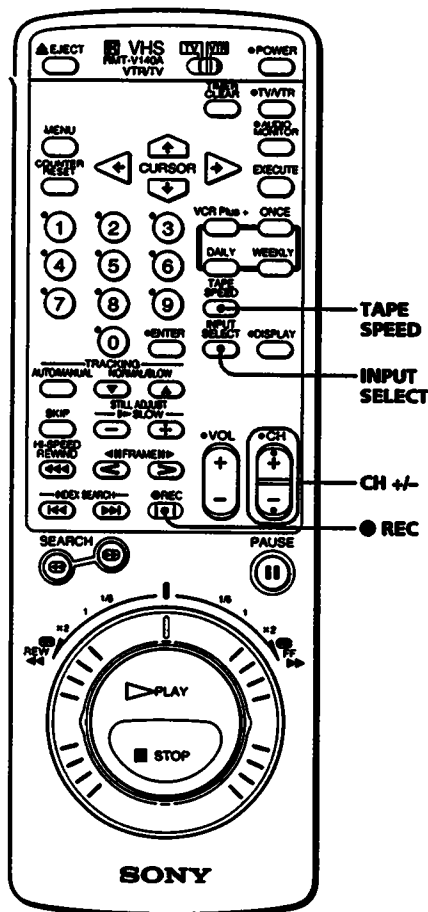

Note

- If you insert a tape with its safety tab removed, the VCR starts playing. To record on this tape, cover the tab hole on the cassette, or the VCR will eject it when you press ● REC.

Tip

- To select channels, you can also use the number buttons on the remote commander. Enter the desired channel number using the number buttons, then press ENTER.

This section shows you how to record TV programs in the most basic way: manual recording. With manual recording, you start the VCR recording when the program begins, then stop it when the program ends. The VCR also provides the following ways of recording.

- Manually start recording, then stop it automatically—"Recording using the quick timer" (page 38)
- Automatically start and stop recording—"Recording TV programs using the timer" (page 41)
- Automatically start and stop recording just by entering the "Plus Code"—"Recording TV programs using VCR Plus+" (page 44)

1 Turn on your TV and tune in to the VCR:

- If the TV is connected to the VCR using the audio/video cable, set the TV to video input.
- If the TV is connected to the VCR using only the antenna, set the TV to the channel for the VCR.

When using a cable box, turn it on.

2 Open the drop down panel and insert a tape with its safety tab in place.

3 Press INPUT SELECT until a channel number appears in the VCR's display window.

VTR

5

4 Select the desired channel by pressing CH +/-.

VTR

12

5 Select the tape speed, SP (standard play) or EP (extended play), by pressing TAPE SPEED.

See "To select tape speeds" on the next page.

VTR SP

6 Start recording by pressing ● REC.

When the tape reaches the end, the VCR automatically rewinds it to the beginning.

Recording TV programs (continued)

Tips

- To cut out an unwanted scene while recording, press **|| PAUSE**, turn the DUAL MODE SHUTTLE ring on the VCR to rewind the tape to the beginning of the unwanted scene, then press **|| PAUSE** to resume recording.
- The display appears on the TV screen indicating information about the tape, but the information will not be recorded on the tape.
- If you don't want to watch TV while recording, you can turn off the TV. When using a cable box, make sure to leave it on.

Notes

- If your tape ends during quick-timer recording, recording stops and the VCR turns off. The tape does not rewind automatically.
- If a power interruption occurs during quick-timer recording, recording stops and your VCR turns off. If the interruption lasts less than three hours and the power is restored before the recording end time, recording will start again from that point.

To stop recording

Press **■ STOP**.

To select tape speeds


When recording, select either SP (standard play) or EP (extended play). EP provides recording time three times as long as SP. However, SP provides better picture quality. You can mix SP and EP on the same tape. When playing back, the VCR automatically detects the tape speed. See the table below for the maximum recording/playback time in each speed.

Tape type	Maximum recording/playback time	
	SP	EP
T-160	2 hrs. 40 min.	8 hrs.
T-120	2 hrs.	6 hrs.
T-60	1 hr.	3 hrs.
T-30	30 min.	1 hr. 30 min.

Recording using the quick timer

The quick timer enables you to record for a specified period of time in intervals of 30 minutes. Once you specify the recording time, the VCR automatically stops recording. Before you begin, check that the clock is set correctly.

 After you start recording, press QUICK TIMER until the desired duration appears in the display window. The TIMER indicator on the VCR lights up. Each press increases the recording duration in increments of 30 minutes as shown below.

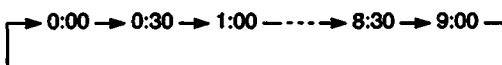

The recording duration decreases minute by minute to 0:00, then the VCR turns off automatically.

To stop recording

To stop while the VCR is recording a program, press **■ STOP** to turn off the TIMER indicator on the VCR.

To extend the recording duration while recording

Press QUICK TIMER until the desired duration appears in the display window.

Watching a TV program while recording another

You can watch a TV program and record another at the same time.

- 1 Press TV/VTR on the top right of the remote commander to turn off the VTR indicator in the display window.
- 2 If the TV is connected to the VCR using the audio/video cable, set the TV to TV input.
If the TV is connected to the VCR using only the antenna cable, skip this step.
- 3 Select the desired channel on the TV.

Tip

- For information on how the VCR records sound, see "How sound is recorded on a video tape" on page 35.

Recording stereo and SAP programs


Stereo programs

This VCR automatically records stereo programs in stereo. When stereo programs are received, the STEREO indicator appears in the display window. If noise occurs while receiving a stereo program, record the program in monaural. Follow the steps below.


SAP programs

Normally, this VCR records main sound on both main and normal audio tracks. To record SAP (Second Audio Program) sound on normal audio track, follow the steps below.


- 1 Press MENU and select SET UP MENU.

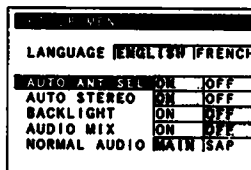

- 2 • To record stereo programs in monaural:
Set AUTO STEREO to OFF using CURSOR $\uparrow/\downarrow/\leftarrow/\rightarrow$.

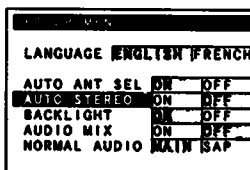

- To record SAP sound on normal audio track:
Set NORMAL AUDIO to SAP using CURSOR $\uparrow/\downarrow/\leftarrow/\rightarrow$.

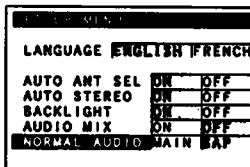

- 3 Press EXECUTE to store the setting.

Note

- Set NORMAL AUDIO to MAIN when not recording SAP sound, or no sound is recorded on the normal audio track. If no sound is recorded on the normal audio track and you play the tape on a mono VCR, you will see only video—no audio will be heard. However, you will receive both audio and video if you play back this tape on a stereo VCR.

Recording TV programs (continued)

To monitor SAP sound while recording

In the SET UP MENU, set NORMAL AUDIO to SAP. Then press EXECUTE. Press AUDIO MONITOR until the SAP indicator lights up in the display window.


Saving a recording

Video tapes have a safety tab to protect against accidental recording. To prevent accidental erasure of a recording, break off the safety tab with a screwdriver or other tool. A tape with its safety tab removed ejects if you try to record on it.

To record on a tape with its safety tab removed, cover the tab hole with adhesive tape.



Recording TV programs using the timer

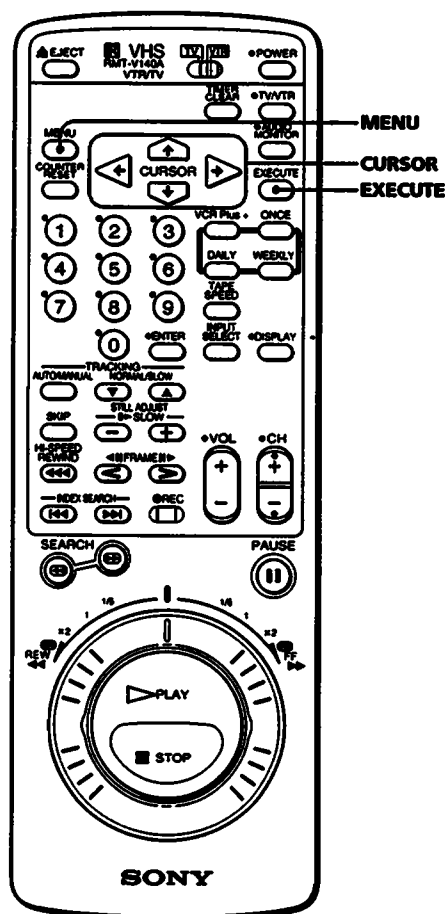

This section shows you how to let the VCR automatically start and stop recording TV programs. You can preset up to eight programs within a one month time frame. If VCR Plus+ is available in your area, see the section "Recording TV programs using VCR Plus+" on page 44 for easier timer recording.

Before you start...

- Check that the clock is set correctly.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- Turn on your TV and tune in to the VCR.
When using a cable box, turn it on.

- 1 Press MENU and select TIMER SET/CHECK, then press EXECUTE.**
A short beep alerts you if the clock needs to be set.

DATE	START	STOP	CH
1/1	--:--	--:--	--
2/1	--:--	--:--	--
3/1	--:--	--:--	--
4/1	--:--	--:--	--
5/1	--:--	--:--	--
6/1	--:--	--:--	--
7/1	--:--	--:--	--

- 2 Set the date to start recording:**
 - Press CURSOR →.
Make sure today's date is highlighted.
If it isn't, reset the clock to the correct time.
 - Press CURSOR ↑ to set the month and date.
The day of the week is set automatically.
To record the same program every day or the same day once a week, see "Daily / weekly recording" on page 43.

DATE	START	STOP	CH
1/1	--:--	--:--	--
2/1	--:--	--:--	--
3/1	--:--	--:--	--
4/1	--:--	--:--	--
5/1	--:--	--:--	--
6/1	--:--	--:--	--
7/1	--:--	--:--	--

DATE	START	STOP	CH
1/1	--:--	--:--	--
2/1	--:--	--:--	--
3/1	--:--	--:--	--
4/1	--:--	--:--	--
5/1	--:--	--:--	--
6/1	--:--	--:--	--
7/1	--:--	--:--	--

- 3 Set the time to start recording:**
 - Press CURSOR → to highlight the hour under "START," then press CURSOR ↑/↓ to set the hour.
 - Press CURSOR → to highlight the minutes under "START," then press CURSOR ↑/↓ to set the minutes.

DATE	START	STOP	CH
1/1	--:--	--:--	--
2/1	--:--	--:--	--
3/1	--:--	--:--	--
4/1	--:--	--:--	--
5/1	--:--	--:--	--
6/1	--:--	--:--	--
7/1	--:--	--:--	--

DATE	START	STOP	CH
1/1	--:--	--:--	--
2/1	--:--	--:--	--
3/1	--:--	--:--	--
4/1	--:--	--:--	--
5/1	--:--	--:--	--
6/1	--:--	--:--	--
7/1	--:--	--:--	--


(continued)

Recording TV programs using the timer (continued)

Tips

- To set the channel, you can also use the CH +/- or number buttons.
- To record video sources from LINE IN 1 or 2 jacks, press INPUT SELECT to display "L1" or "L2" in the "CH" position.
- When CABLE BOX CONTROL is set to ON, timer recording cannot be done through LINE IN.
- To set the recording tape speed, you can also use TAPE SPEED.
- To change or correct a setting before confirming it, press CURSOR → to highlight the item you want to change and reset it.

Notes

- If the  tape indicator in the VCR's display window and the TIMER indicator on the VCR flash when the VCR turns off, check for one of the following causes:
 - no cassette has been inserted,
 - the tape is at its end, or
 - the safety tab on the cassette has been removed.

- 4 Press CURSOR →, then set the time to stop recording in the same way.

DATE	START	STOP	CH
10/23/01	7:00M	8:00M	6 P
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---

- 5 Press CURSOR →, then press CURSOR ↑/↓ to select the channel you want to record.
Only the channels preset in the VCR will appear. When using a cable box, the cable box channels appear.

DATE	START	STOP	CH
10/23/01	7:00M	8:00M	6 P
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---

- 6 Press CURSOR →, then press CURSOR ↑/↓ to select the tape speed, SP (standard play) or EP (extended play).
See "To select tape speeds" on page 38.

DATE	START	STOP	CH
10/23/01	7:00M	8:00M	6 P
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---


- 7 To confirm your program, press CURSOR →.
All the settings stop being highlighted and the cursor (|) appears in the leftmost column.
To preset another timer setting, move the cursor to the next line using CURSOR ↓ and repeat steps 2 to 7.

DATE	START	STOP	CH
10/23/01	7:00M	8:00M	6 P
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---
---	---	---	---

- 8 After making the desired timer settings, press EXECUTE.

- 9 Press POWER to turn off the VCR.
The TIMER indicator on the VCR lights up and stands by for recording. When using a cable box, leave it on.
The VCR automatically turns on and starts recording at the preset start time, and turns off at the preset stop time.

To stop recording

To stop while the VCR is recording a program, press  STOP to turn off the TIMER indicator on the VCR.

To use the VCR while recording

You can do the following tasks during timer recording.

To	Press
Reset the counter to "0H00M00S"	COUNTER RESET
Display tape information on the TV screen	DISPLAY
Check the timer settings	MENU and select TIMER SET/CHECK
Watch another TV program	TV/VTR (See "Watching a TV program while recording another" on page 39.)

Using the VCR before timer recording begins

Press POWER to turn on the VCR. This turns off the TIMER indicator on the VCR. The VCR is ready for use.


After using the VCR, turn it off. This turns on the TIMER indicator on the VCR. When using a cable box, leave it on. If you do not turn the VCR off before the time you've set it to start recording, the timer setting will be cancelled.

Daily/weekly recording


Daily recording records the same program every day of the week; weekly recording records the same program on the same day, every week.

When you set the date to start recording in step 2 of "Recording TV programs using the timer," press CURSOR ↓ until the desired day appears. Each time you press the button, the indication changes as shown on the left.

Daily/weekly recording

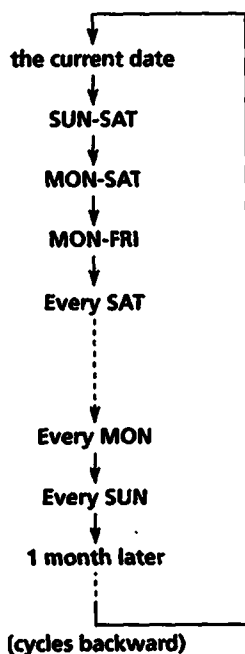

Recording TV programs using VCR Plus+

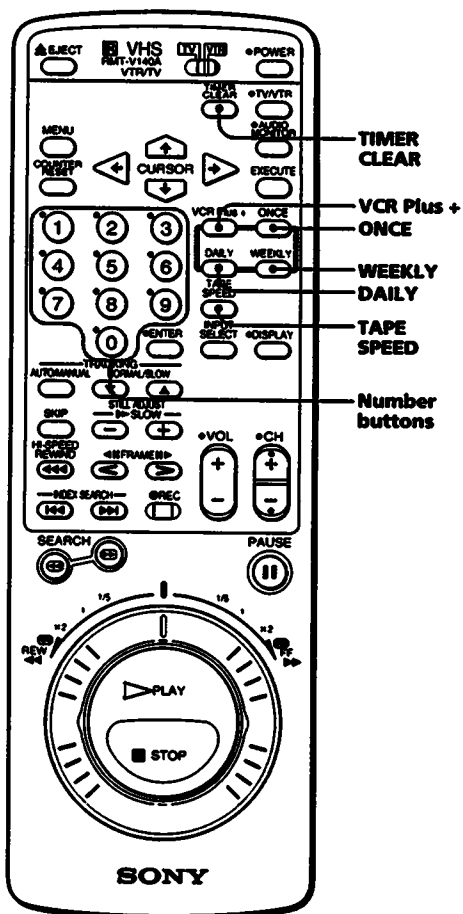


This section shows you another way of timer recording: recording using VCR Plus+. This allows you to record TV programs more easily. Just enter the program's "PlusCode," and the VCR will automatically record the program. You can preset up to eight programs within a one month time frame.


Before you start...

- Check that the clock is set correctly.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- Turn on your TV and tune in to the VCR.
When using a cable box, turn it on.


- 1 Press VCR Plus+.**
A short beep alerts you if the clock needs to be set.

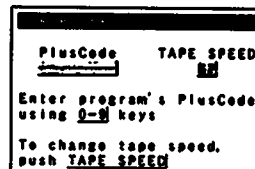

- 2 Enter the desired program's PlusCode using the number buttons.**
If you make a mistake, press TIMER CLEAR and enter the PlusCode again.

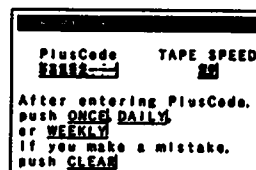


- 3 Select the tape speed, SP (standard play) or EP (extended play), by pressing TAPE SPEED.**

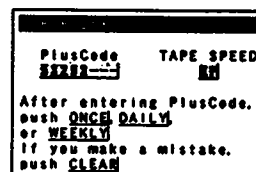

- 4 Press ONCE, DAILY or WEEKLY according to the following:**

To record the program	Press
Only once	ONCE
Monday to Friday at the same scheduled time	DAILY
Every week at the same scheduled time	WEEKLY


The recording information appears on the TV screen: date, program start and stop times, channel number and tape speed. Check that the information is correct. If it is not, press TIMER CLEAR to cancel. To preset another timer setting, repeat steps 1 to 4.

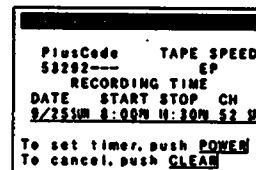

Tip

- If you've entered the wrong PlusCode, press TIMER CLEAR and start again from the beginning.

Notes

- If the  tape indicator in the VCR's display window and the TIMER indicator on the VCR flash when the VCR turns off, check for one of the following causes:
 - no tape has been inserted,
 - the tape is at its end, or
 - the safety tab on the cassette has been removed.

5

Press POWER to turn the VCR off.

The TIMER indicator on the VCR lights up and the VCR stands by for recording.

When using a cable box, leave it on.

The VCR automatically turns on, records the program and turns off.

To stop recording

To stop while the VCR is recording a program, press ■ STOP to turn off the TIMER indicator on the VCR.

To use the VCR while recording

You can do the following tasks while recording using VCR Plus+.

To	Press
Reset the counter to "0H00M00S"	COUNTER RESET
Display tape information on the TV screen	DISPLAY
Check the timer settings	MENU and select TIMER SET/CHECK
Watch another TV program	TV/VTR (See "Watching a TV program while recording another" on page 39.)

Notes


- You cannot set VCR Plus+ in the following cases:
 - When the VCR is turned off.
 - While recording using the timer or quick timer.
- The timer will not accept settings in the following cases:
 - When you select DAILY for a Saturday and Sunday program.
 - When you select DAILY or WEEKLY for a program more than seven days ahead.
 - When you enter the PlusCode of a program that has already ended.

Using the VCR before recording begins

Press POWER to turn on the VCR. This turns off the TIMER indicator on the VCR. The VCR is ready for use.

After using the VCR, turn it off. This turns on the TIMER indicator on the VCR. When using a cable box, leave it on. If you do not turn the VCR off before the time you've set it to start recording, the timer setting will be cancelled.

Checking/changing/ cancelling timer settings

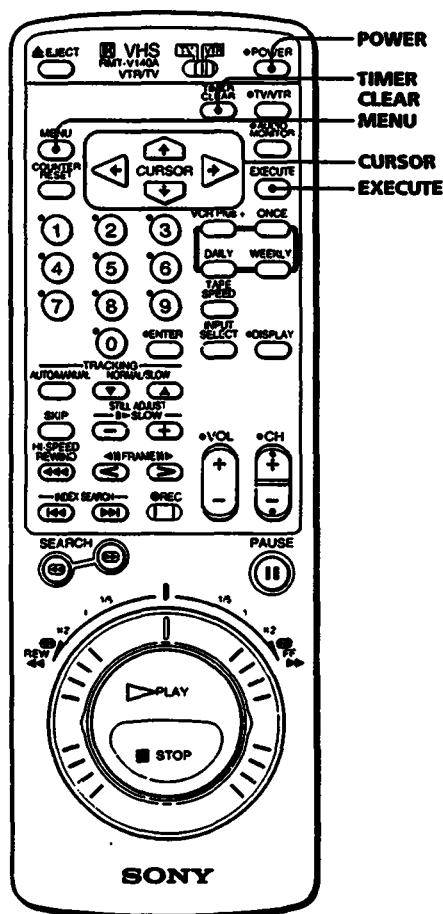

This section shows you how to check, change and cancel the timer settings after you've stored them in the VCR.

Before you start...

- Turn on your TV and tune in to the VCR.

1 Press POWER to turn on the VCR.

2 Press MENU and select TIMER SET/ CHECK, then press EXECUTE.

DATE	START	STOP	CH
8/23/FRI	7:00M	8:00M	6
10/5 WED	11:30M	11:15M	50
SUN - SAT	1:00M	3:00M	LINE2
EVERY SUN	12:55M	1:30M	1,2
-/-	-/-	-/-	-/-
-/-	-/-	-/-	-/-
-/-	-/-	-/-	-/-

3 Check the timer settings:

- If you do not want to change or cancel the settings, press EXECUTE, then turn the VCR off to return to recording standby.
- If you want to change or cancel the settings, press CURSOR \uparrow/\downarrow to move the cursor (II) to the setting you want to change or cancel.

DATE	START	STOP	CH
8/23/FRI	7:00M	8:00M	6
10/5 WED	11:30M	11:15M	50
SUN - SAT	1:00M	3:00M	LINE2
EVERY SUN	12:55M	1:30M	1,2
-/-	-/-	-/-	-/-
-/-	-/-	-/-	-/-
-/-	-/-	-/-	-/-

4 Change or cancel the timer setting:

- To change the setting, press CURSOR \leftarrow/ \rightarrow to highlight the item you want to change, and reset it using CURSOR \uparrow/\downarrow . Then, press CURSOR \rightarrow to move the cursor to the leftmost column.
- To cancel the setting, press TIMER CLEAR.

5 Press EXECUTE.

The VCR returns to the original screen. When there are any other timer settings left in the TIMER SET/CHECK menu, turn the VCR off to return to recording standby.


To check the timer settings during timer recording

Press MENU and select TIMER SET/CHECK. After checking, press EXECUTE to turn off the display.


When the timer settings overlap

The VCR will not record overlapping programs. If any of your timer settings overlap, change the settings.


Case 1

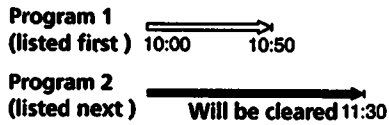

Case 2

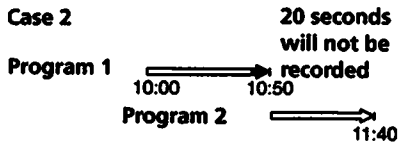

Case 3

 

Case 1: If you preset two programs to start recording at the same time...

The program listed first in the TIMER SET/CHECK menu has priority over the other programs. The timer settings of lower priority programs will be erased from the TIMER SET/CHECK menu when the first program begins recording.

Case 2: If you preset program 2 to start recording at the same time you preset program 1 to finish recording...


The last 20 seconds of program 1 will not be recorded because the VCR will enter recording pause for program 2 before program 1 is finished.

Case 3: If you preset program 2 to start recording before program 1 is finished recording...

Program 2 will start recording before program 1 has finished.

Additional Operations

Playing/searching at various speeds

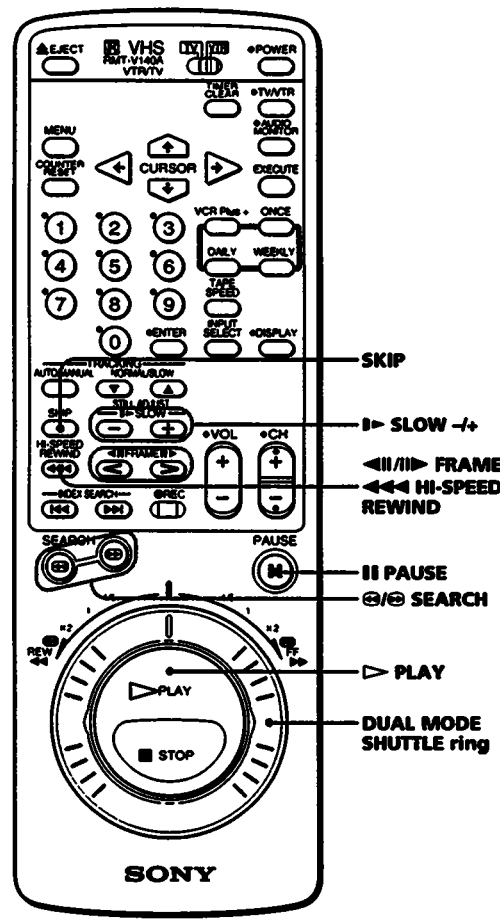

Tip

- Adjust the picture using the ▼/▲ TRACKING NORMAL/SLOW STILL ADJUST buttons if:
 - Streaks appear while playing in slow motion.
 - Bands appear on the top or bottom while pausing.
 - The picture shakes while pausing.

Notes


- Tapes recorded in LP mode can be played back on this VCR, while playback in modes other than normal forward speed is not guaranteed.
- When rewinding at high speed, you will not see the time counter.

you can play back a tape at various speeds: high-speed, slow motion, frame by frame and so on. These options are also useful for searching for a specific point during playback. The sound is muted during these operations.

Playback options	Operation	To resume normal playback
Playing at various speeds:	During playback, turn the DUAL MODE SHUTTLE ring right or left to: One-fifth the normal speed 1/5 Twice the normal speed X2 High speed Ⓜ or Ⓜ	Release the ring.
Fast-forwarding/Rewinding	During stop, turn the DUAL MODE SHUTTLE ring to ►► FF or to ◄◄ REW and release.	Press ► PLAY.
Viewing the picture during fast-forward or rewind	During fast-forward, turn the DUAL MODE SHUTTLE ring to ►► FF. During rewind, turn the ring to ◄◄ REW.	To return to the previous mode, release the ring.
Locking in a high-speed picture	During playback or pause, press Ⓜ SEARCH or Ⓜ SEARCH . To change direction, press ◄◄ FRAME (backward) or ►► FRAME (forward).	Press ► PLAY.
Locking in a slow-motion picture	During playback or pause, press ►► SLOW -/+ . You can increase the playback speed with the + button and decrease the speed with the - button. To change direction, press ◄◄ FRAME (backward) or ►► FRAME (forward).	Press ► PLAY.
Playing frame by frame	During pause, press ►► FRAME to advance the picture one frame or ◄◄ FRAME to reverse the picture one frame.	Press ► PLAY.
Skipping a scene	During playback, press SKIP.	The VCR automatically resumes normal playback.
Rewinding at high speed	Press ◄◄◄ HI-SPEED REWIND.	Press ► PLAY.
Rewind and restart play	During stop, press ► PLAY on the VCR while holding the DUAL MODE SHUTTLE ring on the VCR at the ◄◄ REW position, or while pressing down ◄◄◄ HI-SPEED REWIND on the VCR.	—

Adjusting the picture


The VCR automatically adjusts the picture for the best possible playback or recording. If, however, you find the automatic adjustment unsatisfactory, you can adjust the picture manually.

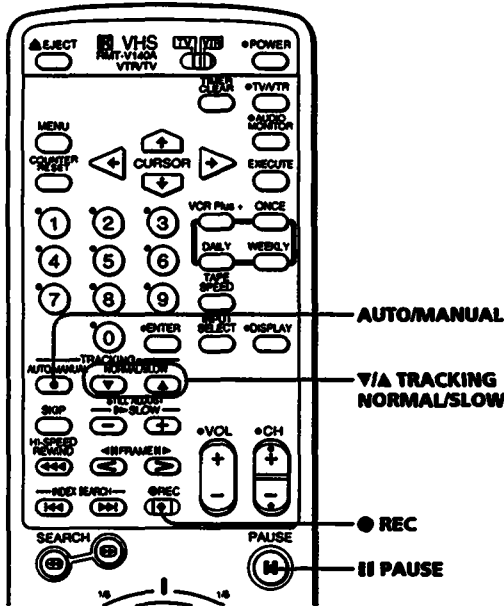

Adjusting the tracking

Though the VCR automatically adjusts the tracking when playing a tape (the AUTO TRACKING indicator flashes in the display window, then lights steadily), distortion may occur if the tape was recorded in poor condition. If so, manually adjust the tracking condition.

Press the ▼/▲ TRACKING NORMAL/SLOW buttons to display the tracking meter. The distortion should disappear as you press one of the two buttons. If you cannot get a clear picture with manual adjustment, press TRACKING AUTO/MANUAL to return to automatic adjustment.

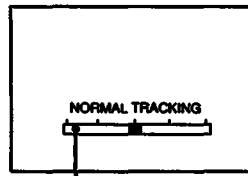

Tracking meter

Note

- The tracking cannot be adjusted automatically for tapes recorded in LP mode.

About Adaptive Picture Control (APC)

Adaptive Picture Control (APC) automatically improves recording and playback quality by adjusting the VCR to the condition of the video heads and tape. To maintain better picture quality, we recommend that you leave APC on (with the APC indicator in the display window lit).


To use APC during playback

The APC function automatically works on all types of tapes, including rental tapes. You can play a tape using the APC function even if the tape was not recorded with it.

To use APC while recording

Whenever you insert a tape and first start recording, the VCR adjusts to the tape using the APC function (the APC indicator flashes rapidly). This adjustment is retained until the tape is ejected. There is a short delay before the VCR actually starts recording while the VCR analyzes the tape.

If you want to start recording precisely the first time you record, set the VCR to recording pause mode (the APC indicator flashes slowly) and press ● REC to let the VCR analyze the tape. When the APC indicator stops flashing, press ■ PAUSE to start recording. Recording begins immediately.

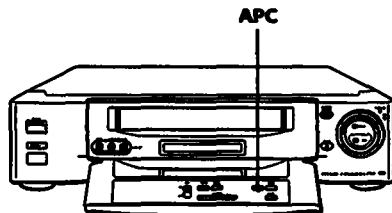


Notes

- Tapes recorded using the APC function are played back normally on VCRs that do not have the APC function.
- Press ■ PAUSE to release recording **after** the APC indicator stops flashing. If you start recording before the APC indicator stops flashing, the APC function is cancelled.

Searching using the index function


The VCR automatically marks an index signal at the point where recording starts (with the exception of when you start recording from recording pause). Use this as a reference to find the beginning of the recording. Since the index number indicates the relative position from the current position, specify how many index signals ahead or behind the specific index signal is from the current position. The VCR can search up to 99 index signals ahead or behind of the current position.

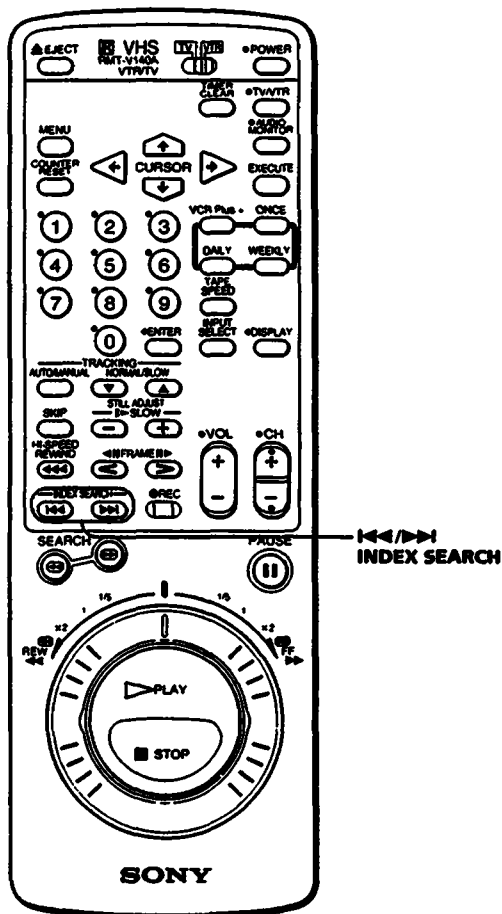

1 Insert an indexed tape into the VCR.

2 Press the **INDEX SEARCH** buttons repeatedly until the index number you want appears on the TV screen:

- To locate succeeding programs, press **INDEX SEARCH**.
- To locate preceding programs, press **INDEX SEARCH**.

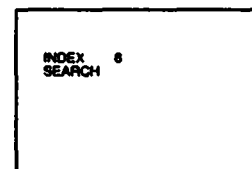

The VCR starts searching and the index number on the TV screen counts down to zero. Playback starts automatically from that point.

Editing

Editing with another VCR

Tips


- Make sure you connect the plugs to jacks of the same color.
- To connect the other VCR, you can use the LINE IN 1 jacks as well. In this case, press INPUT SELECT to display L1 in the display window.
- If the other VCR is a monaural type, leave the red plugs unconnected.

Note


- When connecting the VCRs, do not simultaneously connect the LINE IN and LINE OUT jacks on your VCR. A humming noise may occur if you do this.

This section shows you how to edit to or from another VCR or camcorder. You can make a copy of a tape using this VCR for recording or playback.


How to hook up to record on this VCR

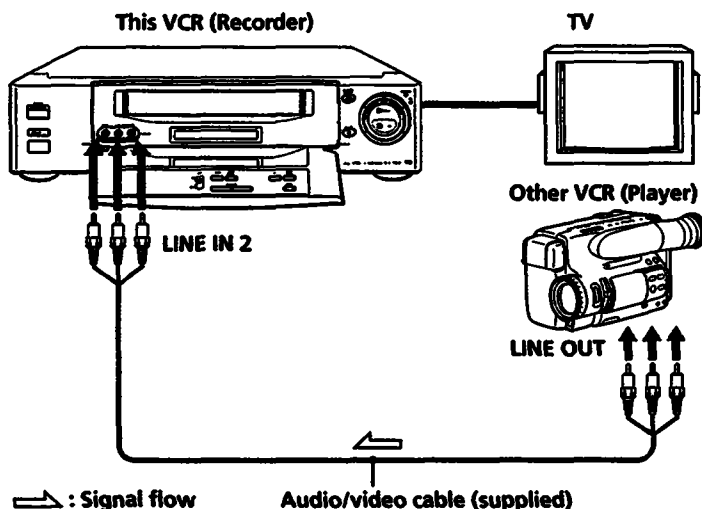

How to hook up to record to another VCR

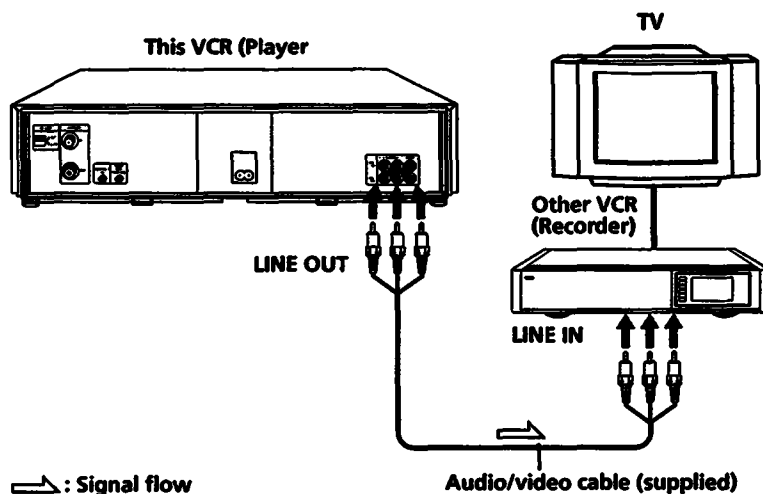

Editing with another VCR (continued)

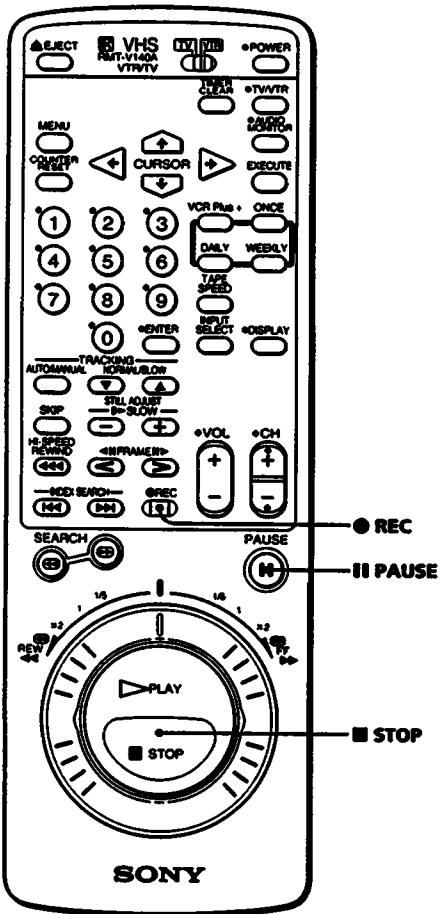

Operation (when recording on this VCR)

Before you start editing

- Press INPUT SELECT to display "L2" in the display window.
- Press TAPE SPEED to select the recording tape speed (SP/EP).
- On this VCR, set the EDIT switch to ON. If the other VCR has a similar switch, set it to ON as well.

- 1** Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 2** Insert a tape into this (recording) VCR. Search for the point to start recording and press **II PAUSE**.
- 3** Press **● REC** on this VCR and set it to recording pause.
- 4** To start editing, press the **II PAUSE** buttons on both VCRs to release the VCRs from pause.
For best results, press the pause button on the other VCR just before pressing **II PAUSE** on this VCR.

To stop editing

Press the ■ STOP buttons on both VCRs.

Tips


- To make your editing more precise, use the pause buttons on the VCRs.
- To cut out unwanted scenes while editing, press **II PAUSE** on this VCR when an unwanted scene begins. When it ends, press **II PAUSE** again to resume recording (Assemble Editing).

Synchronized editing



If your other VCR has a CONTROL S OUT jack, connect the VCRs via the CONTROL S jacks. This additional connection lets you control both VCRs from one VCR for easier editing.

How to hook up via the CONTROL S jacks

The CONTROL S connection only enables you to pause and release pause.

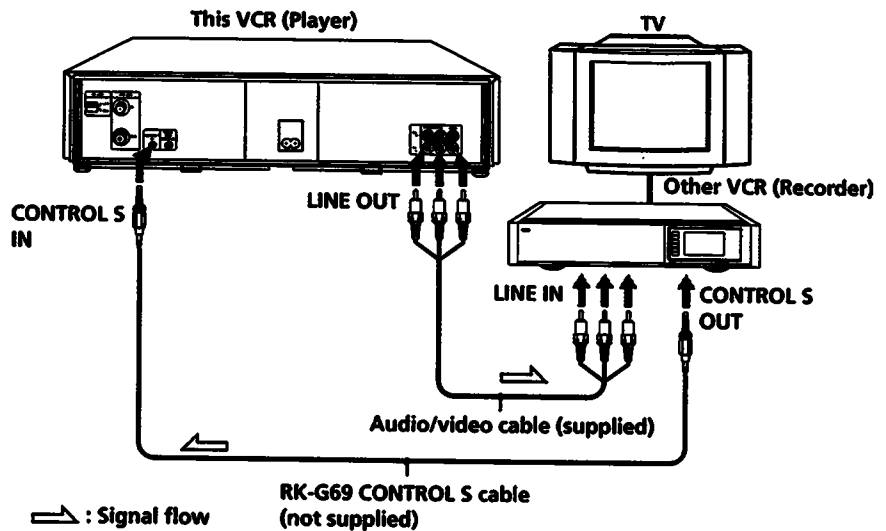

Synchronized editing (continued)

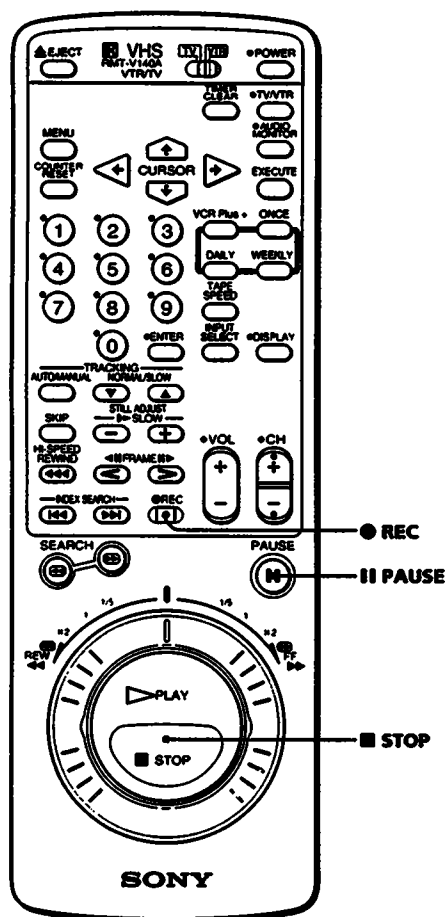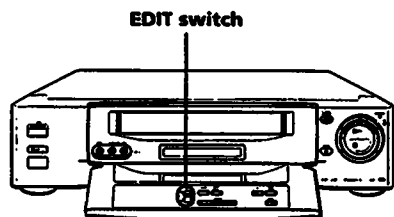

Operation (when recording on the other VCR)

Before you start editing

- On this VCR, set the EDIT switch to ON. If the other VCR has a similar switch, set it to ON as well.


- 1 Insert a source tape with its safety tab removed into this (playback) VCR. Search for the point to start playback and set it to playback pause.
- 2 Insert a tape into the other (recording) VCR. Search for the point to start recording and press **II PAUSE**.
- 3 Press **● REC** on the other VCR to pause for recording.
- 4 To start editing, press **SYNCHRO EDIT** on the other VCR.
- 5 At the point you want to stop recording, press **SYNCHRO EDIT** to stop editing.
Both VCRs return to pause.

To stop editing

Press the **■ STOP** buttons on both VCRs.

Additional Information

General setup information

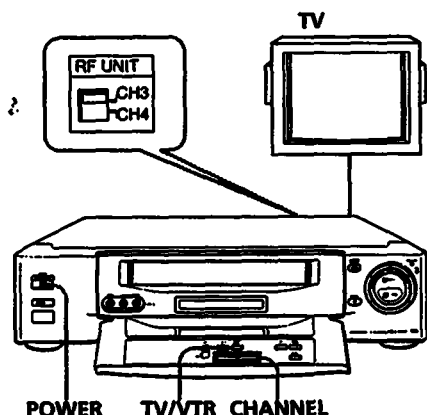

Setting the RF unit

When connecting the VCR to the TV using only the antenna, you must set the RF UNIT switch on the rear of the VCR so that the TV can receive the correct signal from the VCR.


If you connect the VCR to the TV using the supplied audio/video cable, you can skip this step.

- 1 Set the RF UNIT switch on the rear of the VCR to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel.
- 2 Press POWER to turn on the VCR.
- 3 Press TV/VTR to turn on the VTR indicator in the VCR's display window.
- 4 Press CHANNEL +/- to display a channel number in the display window. Select an active channel number in your area.
- 5 Turn on your TV and set it to the channel you selected in step 1 (channel 3 or 4).
The selected TV channel broadcast appears on the TV screen. If the channels change when you press CHANNEL +/-, you have made the correct setting.
Whenever you use the VCR, set the TV to the channel selected in step 1.

Attaching the external antenna connector

When using a 300-ohm twin lead cable for VHF/UHF antenna, use the EAC-32 antenna connector (not supplied) to connect the antenna to the VCR.


- 1 Loosen the screws on the antenna connector.
- 2 Wind the twin leads around the screws on the antenna connector.
- 3 Retighten the screws.

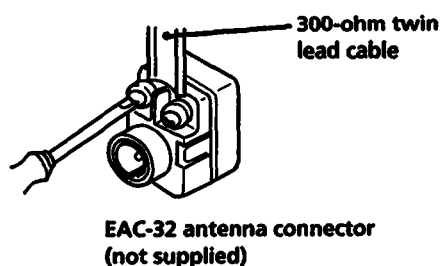

Attaching an UHF/VHF band mixer

When using both 75-ohm coaxial cable and 300-ohm twin lead cable for VHF/UHF antenna, use the EAC-66 UHF/VHF band separator/mixer (not supplied) to connect the antenna to the VCR.

- 1 Loosen the screws on the mixer.
- 2 Wind the twin leads around the screws on the mixer.
- 3 Retighten the screws.
- 4 Connect the 75-ohm coaxial cable to the mixer.

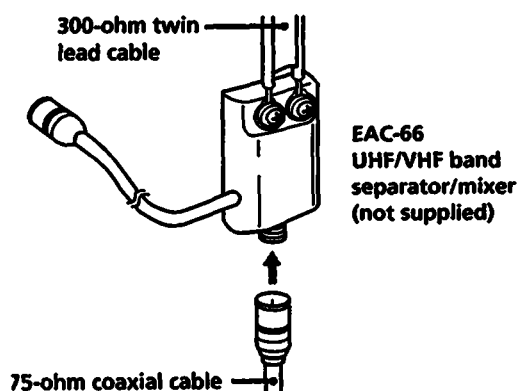

Troubleshooting

	Symptom	Remedy
Power	The POWER switch does not function.	<ul style="list-style-type: none"> Connect the AC power cord securely.
Clock	The clock has stopped and "--:--" lights in the display window.	<ul style="list-style-type: none"> The clock stops if the VCR is disconnected from the wall outlet for more than three hours. Reset the clock (and timer).
Playback	The playback picture does not appear on the TV screen.	<ul style="list-style-type: none"> Make sure the TV is set to the channel for the VCR. If you are using a monitor, set it to video input.
	The picture is not clear.	<ul style="list-style-type: none"> Adjust the tracking with the TRACKING NORMAL/SLOW buttons. The video heads are dirty (see below). Clean the video heads using the Sony T-25CL video head cleaning cassette. If this cleaning cassette is not available in your area, have the heads cleaned at your nearest Sony service facility (a standard service charge will be required.) Do not use a commercially available wet-type cleaning cassette, as it may damage the video heads. The video heads may have to be replaced. Consult your local Sony dealer for more information.
	The picture rolls vertically during picture search.	<ul style="list-style-type: none"> Adjust the vertical hold control on the TV or monitor.
	The picture has no sound.	<ul style="list-style-type: none"> The tape is defective. Use a new tape.
	Both main and SAP sounds are heard.	<ul style="list-style-type: none"> When you play a bilingual tape, make sure the AUDIO MIX option in the SET UP MENU is set to OFF.
Recording	A TV program does not appear on the TV screen.	<ul style="list-style-type: none"> Make sure the TV is set to the channel for the VCR. If you are using a monitor, set it to video input.
	TV reception is poor.	<ul style="list-style-type: none"> Adjust the TV antenna.
	The tape ejects when you press ● REC.	<ul style="list-style-type: none"> Check that the safety tab has not been removed.
	Nothing happens when you press ● REC.	<ul style="list-style-type: none"> Make sure the tape has been wound to the beginning. Select the correct source with the INPUT SELECT button. Select a channel number when recording TV programs; select "L1" or "L2" when recording from other equipment.
	No sound is recorded on the normal audio track.	<ul style="list-style-type: none"> When not recording SAP sound, make sure the NORMAL AUDIO option in the SET UP MENU is set to MAIN.

Symptoms caused by contaminated video heads

- Normal picture
- Rough picture
- Unclear picture
- No picture (or black & white screen appears)



	Symptom	Remedy
Timer recording	The timer does not operate.	<ul style="list-style-type: none"> • Check that the clock is set. • Make sure a tape has been inserted. • Check that the safety tab has not been removed. • Make sure the tape has been wound to the beginning. • Make sure a program has been set for timer recording. • Make sure your timer settings have not already passed the current time. • Check that the cable box is turned on. • When you use cable box control, make sure the CABLE BOX CONTROL option is set to ON.
Others	A tape cannot be inserted.	<ul style="list-style-type: none"> • Check that a tape isn't already in the tape compartment.
	The remote commander does not function.	<ul style="list-style-type: none"> • Make sure you are pointing the remote commander at the remote sensor on the VCR. • Replace all the batteries in the remote commander with new ones if they are weak.
	Beeping sound when button is pressed.	<ul style="list-style-type: none"> • You have attempted an illogical operation.
	The tracking indicator does not appear on the screen.	<ul style="list-style-type: none"> • The recording condition of the tape is very poor and tracking cannot be adjusted.
	The channels on the VCR cannot be changed.	<ul style="list-style-type: none"> • Make sure the CABLE BOX CONTROL option is set to OFF.
	You cannot control other TVs.	<ul style="list-style-type: none"> • Set your TV's code number. The code number resets to 1 when you replace the batteries in the remote commander.
	The VCR needs to be cleaned.	<ul style="list-style-type: none"> • Clean the cabinet, panel and controls with a dry, soft cloth, or a soft cloth slightly moistened with a mild detergent solution. Do not use any type of solvent, such as alcohol or benzine.
<p>If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.</p>		

Specifications

System

Format

VHS NTSC standard

Video recording system

Rotary two-head helical scanning
FM system

Video signal

NTSC color, EIA standards

Tape speed

SP: 33.35 mm/s (1 3/8 inches/s)
EP: 11.11 mm/s (7/16 inches/s)
LP: 16.67 mm/s (11/16 inches/s),
playback only

Maximum recording/playback time

9 hrs. in EP mode (with T-180
tape)

Fast-forward and rewind time

Approx. 4 min. 30 sec (with T-120
tape)

High-speed rewind time

Approx. 3 min. (with T-120 tape)

Tuner section

Channel coverage

VHF 2 to 13
UHF 14 to 69
CATV A-8 to A-1, A to W, W+1 to
W+84

Antenna

75-ohm antenna terminal for
VHF/UHF

Inputs and outputs

LINE IN 1 and 2

VIDEO IN, phono jack (1 each)
Input signal: 1 V_{p-p}, 75 ohms,
unbalanced, sync negative
AUDIO IN, phono jack (2 each)
Input level: -7.5 dBs (0 dBs = 0.775
V_{rms})
Input impedance: more than 47
kilohms

LINE OUT

VIDEO OUT, phono jack (1)
Output signal: 1 V_{p-p}, 75 ohms,
unbalanced, sync negative
AUDIO OUT, phono jack (2)
Standard output: -7.5 dBs
Load impedance: 47 kilohms
Output impedance: less than 10
kilohms

CONTROL S IN

Mini jack (1)

CABLE BOX CONTROL

Phono jack (1)

Timer section

Clock

Quartz locked

Timer indication

12-hour cycle

Timer setting

Only for recording 8 programs in
one month at max.

Power back-up

Built-in self-charging capacitor
Back-up duration: up to three hours
at one time

General

Power requirements

120 V AC, 60 Hz

Power consumption

25 W (max.)

Operating temperature

5°C to 40°C (41°F to 104°F)

Storage temperature

-20°C to 60°C (-4°F to 140°F)

Dimensions

Approx. 430 × 100 × 375 mm (w/h/d)
Approx. (17 × 4 × 14 7/8 inches)
including projecting parts and
controls

Weight

Approx. 5.2 kg (11 lb 7 oz)


Supplied accessories

Remote commander (1)
Size AA (R6) batteries (2)
75-ohm coaxial cable with F-type
connectors (1)
AC power cord (1)
Audio/video cable (3 phono to 3 phono) (1)
Cable mouse (cable box controller) (1)

Design and specifications are subject to
change without notice.


Index to parts and controls

Front panel, with cover closed

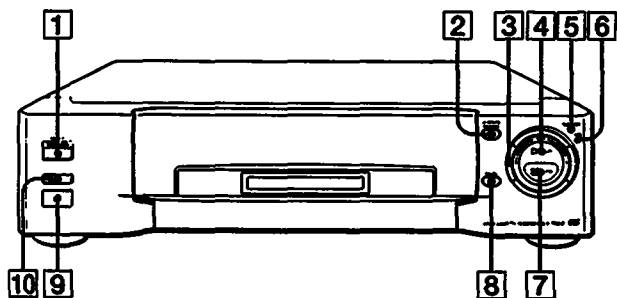

- 1** POWER switch/indicator
- 2** ◀◀ HI-SPEED REWIND button (34)
- 3** DUAL MODE SHUTTLE ring (34)
- 4** ▷ PLAY button (34)
- 5** TIMER indicator (38)
- 6** REC (recording) indicator
- 7** ■ STOP button (34)
- 8** || PAUSE button (34)
- 9** Remote sensor (6)
- 10** ≡ EJECT button (34)

Display window

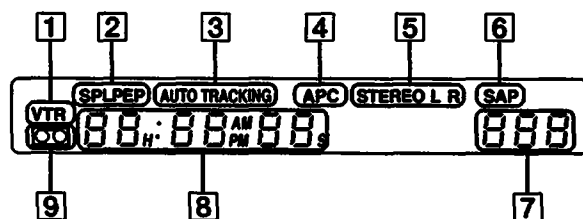


- 1** VTR indicator (39)
- 2** Tape speed indicators (38)
- 3** AUTO TRACKING indicator (49)
- 4** APC indicator (49)
- 5** Sound indicators (35)
- 6** SAP indicator (40)
- 7** Line/channel indicator
- 8** Linear time counter/clock (22, 41)
- 9** Tape indicator

Index to parts and controls (continued)


Refer to the pages indicated in () for details.

Front panel, with cover opened

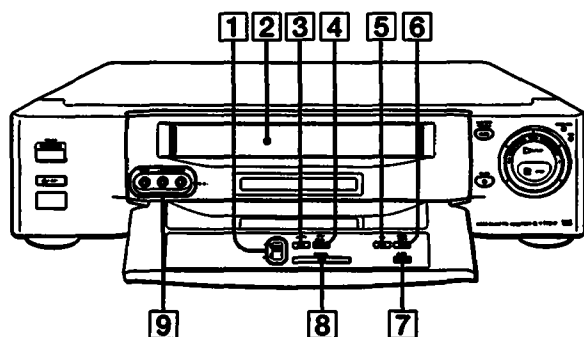


- 1** EDIT switch (52)
- 2** Tape compartment
- 3** TV/VTR button (39)
- 4** INPUT SELECT button (24)
- 5** APC (Adaptive Picture Control) indicator (49)
- 6** QUICK TIMER button (38)
- 7** ● REC (recording) button (37)
- 8** CHANNEL buttons (25)
- 9** LINE IN 2 VIDEO/AUDIO jacks (51)

Rear panel

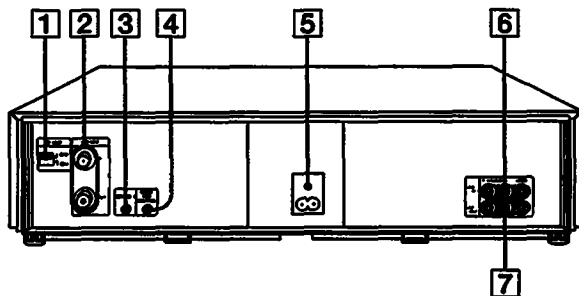

- 1** RF UNIT switch (55)
- 2** VHF/UHF connectors (10, 12, 14, 16, 18)
- 3** CONTROL S IN jack (53)
- 4** CABLE BOX CONTROL jack (10)
- 5** AC IN connector
- 6** LINE IN 1 AUDIO/VIDEO jacks (53)
- 7** LINE OUT AUDIO/VIDEO jacks (9)

Remote commander

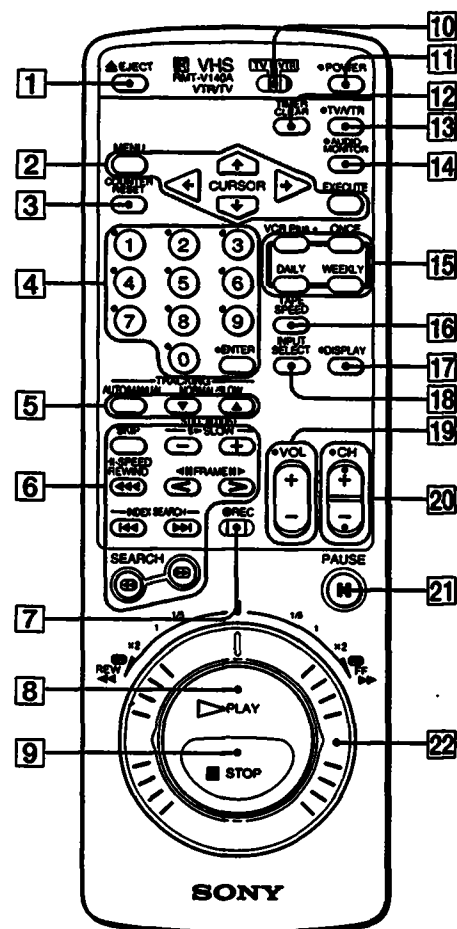

1 EJECT button (34)

2 Menu operation buttons (21)
MENU button
CURSOR $\uparrow/\downarrow/\leftarrow/\rightarrow$
buttons
EXECUTE button

3 COUNTER RESET button
(35)

4 Number buttons and ENTER
button (25)

5 TRACKING buttons (49)
 ∇/\blacktriangle NORMAL SLOW
(STILL ADJUST) buttons
AUTO/MANUAL button

6 Tape transport buttons
 \blacktriangleright SLOW buttons (48)
SKIP button (48)
 $\blacktriangleleft/\blacktriangleright$ FRAME buttons
(48)
 $\blacktriangleleft\blacktriangleleft$ HI-SPEEDREWIND
button (34)
 $\blacktriangleleft/\blacktriangleright\blacktriangleright$ INDEX
SEARCH buttons (50)
 \odot/\odot SEARCH buttons
(34)

7 ● REC (recording) button
(37)

8 ▷ PLAY button (34)

9 ■ STOP button (34)

10 TV/VTR remote control
switch (6)

11 POWER switch

12 TIMER CLEAR button (46)

13 TV/VTR button (39)

14 AUDIO MONITOR button
(40)

15 VCR Plus+ buttons (44)
VCR Plus+ button
ONCE button
DAILY button
WEEKLY button

16 TAPE SPEED button (38)

17 DISPLAY button (35)

18 INPUT SELECT button (24)

19 VOL (volume) button

20 CH (channel) buttons (25)

21 || PAUSE button (34)

22 DUAL MODE SHUTTLE ring
(34)

Index

A, B

- Accessories supplied 5
- Adjusting
 - picture 26
 - tracking 49
- AFT (Auto Fine Tuning) 26
- Antenna hookup 14
- APC (Adaptive Picture Control) 49
- Audio track 35
- Audio/video (A/V) hookup 9
- Auto Clock Set function 11, 22

C

- Cable hookup 8
- Cable Box Control
 - cable box code number chart 28
 - setting 27
- Cable TV channel assignment 26
- Cancelling timer settings 46
- Changing timer settings 46
- Channel line-up chart 30
- Cleaning the video heads 56
- Clock setting 22
- Connecting
 - cable TV 8
 - external antenna connector 55
 - UHF/VHF band mixer 55
- Counter 35

D

- Disabling channels 25
- Dubbing. *See* Editing

E, F, G

- Editing 51
 - synchronized editing 53
- EP mode 38

H

- Hi-fi audio track 35

I, J, K, L

- Index
 - searching 50

L

- Language
 - selecting 21

M

- Monitoring
 - during playback 35, 36
 - during recording 39, 40

N, O

- Normal audio track 35

P

- Picture adjustment. *See* Adjusting Playback 34
 - at various speeds 48
 - frame-by-frame 48
 - skip 48
 - slow motion 48
- Presetting channels 24

Q

- Quick timer 38

R

- Recording 37
 - SAP broadcasts 39
 - saving 40
 - stereo broadcasts 39
 - using VCR Plus+ 44
 - while watching another program 39

S

- Safety tab 40
- SAP (Second Audio Program) 39
- Searching
 - at various speeds 48
 - using the index function 50
- SP mode 38

T, U

- Timer recording 41
 - cancelling timer settings 46
 - changing timer settings 46
 - checking timer settings 46
 - daily/weekly recording 43
 - using VCR Plus+ 44
- Tracking adjustment. *See* Adjusting

V, W, X, Y, Z

- VCR Plus+
 - channel setup 30
 - recording 44

Quick reference to using the VCR

Hookup 1

To play a tape

- 1 Set the TV to channel 3 or 4 (or to video input, if you made A/V connections.)
- 2 Insert a tape and press **▷ PLAY**.

To record a program

- 1 Turn on the cable box.
- 2 Press VCR Plus+ on the remote commander.
- 3 Enter the program's PlusCode number.
- 4 Press ONCE, DAILY, or WEEKLY.
- 5 Insert a tape.
- 6 Turn the VCR off.
- 7 Leave the cable box on.

To watch TV

- 1 Turn off your VCR, or press the VCR's TV/VTR button until the VTR indicator in the display window goes off.
- 2 Turn on your cable box.
- 3 Set the TV to the cable box output channel (usually 2, 3, or 4).
- 4 Set the cable box to the channel you want to watch.

Hookup 2

To play a tape

- 1 Set the TV to channel 3 or 4 (or to video input, if you made A/V connections.)
- 2 Insert a tape and press **▷ PLAY**. If there's no picture on your TV, press the VCR's TV/VTR button until the VTR indicator comes on in the display window.

To record a program

- 1 Press VCR Plus+ on the remote commander.
- 2 Enter the program's PlusCode number.
- 3 Press ONCE, DAILY, or WEEKLY.
- 4 Insert a tape.
- 5 Turn the VCR off.

To watch TV

- 1 Turn off the VCR, or press the VCR's TV/VTR button until the VTR indicator in the display window goes off.
- 2 Set the TV to the channel you want to watch.

Hookup 3

To play a tape

- 1 If you made A/V connections, set the TV to video input. If you didn't use A/V hookup:
 - Turn on the cable box.
 - Set the cable box to channel 3 or 4.
 - Set the TV to the output channel of the cable box (usually 2, 3 or 4).
- 2 Insert a tape and press **▷ PLAY**.

To record a program

- 1 Press VCR Plus+ on the remote commander.
- 2 Enter the program's PlusCode number.
- 3 Press ONCE, DAILY, or WEEKLY.
- 4 Insert a tape.
- 5 Turn the VCR off.

To watch TV

- 1 Turn off your VCR, or press the VCR's TV/VTR button until the VTR indicator in the display window goes off.
- 2 Select the channel with your cable box (if you have one) or with your TV.

Hookup 4

To play a tape

- 1 Set the TV to channel 3 or 4 (or to video input, if you made A/V connections.)
- 2 Insert a tape and press **▷ PLAY**.

To record a program

- 1 Turn on the cable box.
- 2 Set the cable box to the channel you want to record.
- 3 Press VCR Plus+ on the remote commander.
- 4 Enter the program's PlusCode number.
- 5 Press ONCE, DAILY, or WEEKLY.
- 6 Insert a tape.
- 7 Turn the VCR off.
- 8 Leave the cable box on.

To watch TV

- 1 Turn off your VCR, or press the VCR's TV/VTR button until the VTR indicator in the display window goes off.
- 2 Turn on your cable box.
- 3 Set the TV to the cable box output channel (usually 2, 3, or 4).
- 4 Set the cable box to the channel you want to watch.