

SONY.

3-865-085-11 (1)

Video Cassette Recorder

Operating Instructions

Owner's record

The model and serial numbers are located at the rear of the unit.
Record these numbers in the spaces provided below. Refer to them
whenever you call upon your Sony dealer regarding this product.

Model No. _____

Serial No. _____

Declaration of Conformity

Trade Name: SONY


Model No.: SLV-799HF

Responsible Party: Sony Electronics Inc.

Address: 1 Sony Drive, Park Ridge, NJ.07656 USA

Telephone No.: 201-930-6970

This device complies with Part 15 of the FCC Rules. Operation is
subject to the following two conditions: (1) This device may not
cause harmful interference, and (2) this device must accept any
interference received, including interference that may cause
undesired operation.

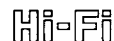


SLV-799HF/792HF

©1999 by Sony Corporation

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

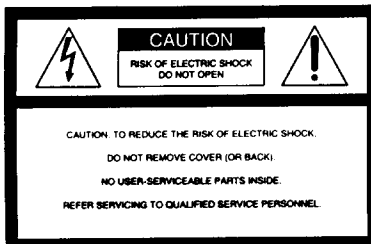

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

To prevent electric shock, do not use this polarized AC plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

Precautions

Safety

- Operate the unit only on 120 V AC, 60 Hz.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- This unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- Unplug the unit from the wall outlet if you do not intend to use it for an extended period of time. To disconnect the cord, pull it out by the plug, never by the cord.
- One blade of the plug is wider than the other for the purpose of safety and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your Sony dealer.

Installing

- Allow adequate air circulation to prevent internal heat buildup.

- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation slots.
- Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the unit and cassettes away from equipment with strong magnets, such as microwave ovens or large loudspeakers.
- Do not place heavy objects on the unit.
- If the unit is brought directly from a cold to a warm location, moisture may condense inside the VCR and cause damage to the video head and tape. When you first install the unit, or when you move it from a cold to a warm location, wait for about three hours before operating the unit.

Information

For customers in the USA

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Television programs, films, video tapes and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provisions of the copyright laws. Also, use of this recorder with cable television transmission may require authorization from the cable television transmission and/or program owner.

Table of contents

Getting Started

- 4** Step 1: Unpacking
- 5** Step 2: Setting up the remote commander
- 8** Step 3: Hookups
- 36** Selecting a language
- 37** Setting the clock
- 45** Setting up the cable box control
- 51** Presetting channels
- 58** Setting up the VCR Plus+* GOLD system

Basic Operations

- 65** Playing a tape
- 68** Recording TV programs
- 72** Locating a channel by Station ID
- 73** Recording TV programs using the VCR Plus+ GOLD system
- 76** Setting the timer manually

Additional Operations

- 80** Playing/searching at various speeds
- 83** Searching for a selected point on the tape
- 85** Skip-searching automatically
- 86** Creating a favorite channel list with Station ID
- 89** Recording TV programs using the dial timer
- 92** Setting the recording duration time

- 93** Checking/ changing/ canceling timer settings
- 95** Recording stereo and bilingual programs
- 97** Searching using the index function
- 98** Adjusting the picture
- 100** Changing menu options
- 102** Editing with another VCR

Additional Information

- 104** General setup information
- 106** Troubleshooting
- 109** Specifications
- 110** Index to parts and controls
- 115** Index
- back cover** Quick reference to using the VCR


* VCR Plus+, C³, ALLSET and PlusCode are trademarks of Gemstar Development Corporation.
VCR Plus+ system is manufactured under license from Gemstar Development Corporation.

Step 1


Unpacking

Check that you have received the following items with the VCR:


- Remote commander

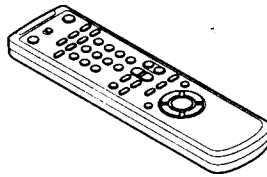


- Cable Mouse (cable box controller)

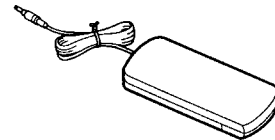


- Size AA (R6) batteries

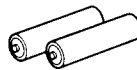

- 75-ohm coaxial cable with F-type connectors

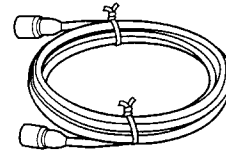

- Audio/video cable (3-phono, 1-mini to 3-phono, 1-mini)

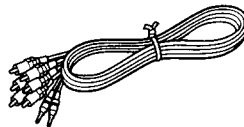


Step 2

Setting up the remote commander


Inserting the batteries

Insert two size AA (R6) batteries by matching the + and - on the batteries to the diagram inside the battery compartment. Insert the negative (-) end first, then push in and down until the positive (+) end clicks into position.

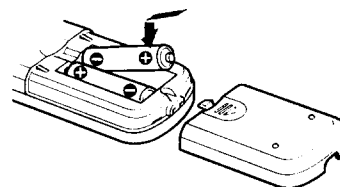

Using the remote commander

You can use this remote commander to operate this VCR and a Sony TV or AV receiver. Buttons on the remote commander marked with a dot (•) can be used to operate your Sony TV. The RECEIVER VOL +/- and MUTING buttons can be used to operate your Sony AV receiver.

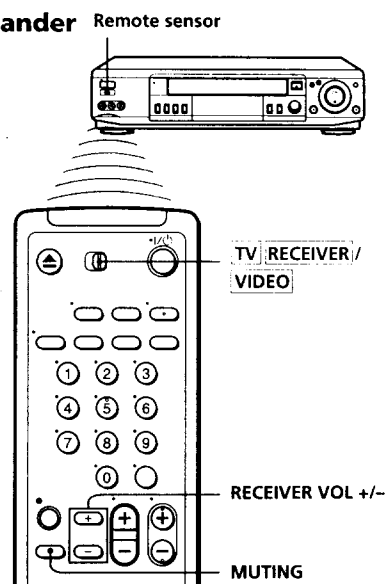

To operate	Set TV/RECEIVER/VIDEO to
the VCR	VIDEO and point at the remote sensor on the VCR
a Sony TV or AV receiver	TV/RECEIVER and point at the remote sensor on the TV or AV receiver

continued

Step 2: Setting up the remote commander (continued)

Notes

- With normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not use different types of batteries.
- Some Sony AV receivers may not be operated with the remote commander.

Controlling other TVs with the remote commander

The remote commander is preprogrammed to control non-Sony TVs. If your TV is listed in the table below, set the appropriate manufacturer's code number.

- 1** Set **TV/RECEIVER** / **VIDEO** at the top of the remote commander to **TV/RECEIVER**.
- 2** Hold down **I/⏻**, and enter your TV's code number(s) using the number buttons. Then release **I/⏻**.

Now you can use the **I/⏻**, **VOL +/-**, **CH +/-**, and **TV/VIDEO** buttons to control your TV. You can also use the buttons marked with a dot (•) to control a Sony TV. To control the VCR, reset **TV/RECEIVER** / **VIDEO** to **VIDEO**.

Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code number	Manufacturer	Code number	Manufacturer	Code number
Sony	01	JVC	09	RCA	04, 10
Akai	04	KMC	03	Sampo	12
AOC	04	Magnavox	03, 08, 12	Sanyo	11
Centurion	12	Marantz	04, 13	Scott	12
Coronado	03	MGA/Mitsubishi	04, 12, 13, 17	Sears	07, 10, 11
Curis-Mathes	12	NEC	04, 12	Sharp	03, 05, 18
Daytron	12	Panasonic	06, 19	Sylvania	08, 12
Emerson	03, 04, 14	Philco	03, 04	Teknika	03, 08, 14
Fisher	11	Philips	08	Toshiba	07
General Electric	06, 10	Pioneer	16	Wards	03, 04, 12
Gold Star	03, 04, 17	Portland	03	Yorx	12
Hitachi	02, 03	Quasar	06, 18	Zenith	15
J.C.Penny	04, 12	Radio Shack	05, 14		

Notes

- If the TV uses a different remote control system from the one programmed to work with the VCR, you cannot control your TV with the remote commander.
- If you enter a new code number, the code number previously entered will be erased.
- When you replace the batteries of the remote commander, the code number may change. Set the appropriate code number every time you replace the batteries.
- When you press the AUDIO MONITOR button, your TV's menu may appear on the TV screen. To exit the TV menu, press the MENU button on the TV remote commander or wait until the menu disappears automatically.

Step 3

Hookups

Selecting the best hookup option

There are many ways in which your VCR can be hooked up. To hook up your VCR so that it works best for you, first scan through the table below. Then use the accompanying diagrams and procedures on the following pages to set up your VCR.

If you have	Use	Refer to
TV that has audio/video inputs	Audio/video (A/V) hookup , then follow one of the hookups below.	Pages 9 and 10
Cable box that is compatible with the VCR's cable box control feature	Hookup 1	Pages 11 to 14
No cable box or incompatible cable box with only a few scrambled channels	Hookup 2	Pages 15 to 18
Antenna only, no cable TV	Hookup 3	Pages 19 to 22
Incompatible cable box with many scrambled channels	Hookup 4	Pages 23 to 26
DIRECTV* digital satellite receiver	Hookup 5	Pages 27 to 29
Incompatible cable box with only a few scrambled channels, using an A/B switch	Hookup 6	Pages 30 to 35

After you've completed the connections, follow the instructions for setup. During setup, if you need more details on the procedure described, page numbers are provided where you can find complete, step-by-step instructions.

After you've completed the setup, you're ready to use your VCR. Procedures differ depending on the hookup you used. For an overview, refer to "Quick reference to using the VCR" on the back cover.

Before you get started

- Turn off the power to all equipment.
- Do not connect the AC power cords until all of the connections are completed.
- Be sure you make connections firmly. Loose connections may cause picture distortion.
- If your TV doesn't match any of the examples provided, see your nearest Sony dealer or qualified technician.

* DIRECTV is a trademark of DIRECTV, Inc., a unit of Hughes Electronics Corporation.


Audio/video (A/V) hookup**Pages 9 and 10**

If your TV has audio/video (A/V) input jacks, you will get a better picture and sound if you hook up your VCR using these connections. In addition, for a true "home theater" experience, you should connect the audio outputs of your VCR or TV to your stereo system. If your TV doesn't have A/V inputs, see the following pages for antenna or cable hookups.


If your TV has the S-Link™* (A/V bus control) function, hook up your VCR using the connection shown on page 10. Your TV will automatically switch to the A/V inputs for your VCR when you play back or operate menu on the VCR.

If you're not planning to use your VCR to record programs, you're finished setting up the VCR after you've made the connections shown on pages 9 and 10. If you want to record off-air or off your cable TV system, complete these connections first, and then go to the following pages for antenna or cable hookups.

* S-Link™ is a trademark of Sony Corporation.

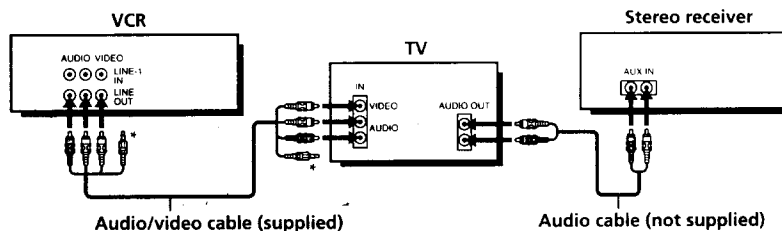A Use this hookup if your TV has stereo jacks


* Do not connect the miniplugs for this hookup.

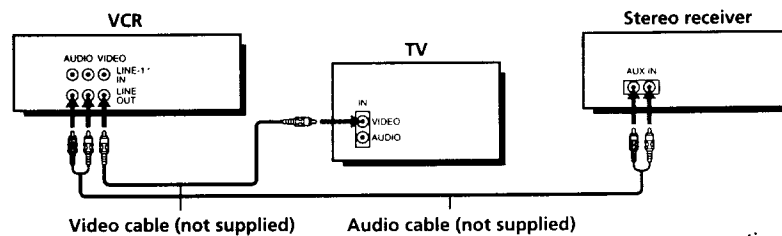B Use this hookup if your TV doesn't have stereo jacks

continued

Step 3: Hookups (continued)

ⓐ Use this hookup if your TV has the S-Link™ function

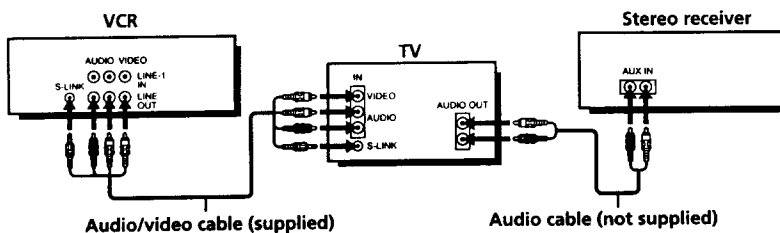


Note

- To play a tape in stereo, you must use the A/V connection.


A/V hookup: VCR setup

After you've connected your TV and completed antenna or cable hookup, use the following procedure to set up the VCR.

Press **MENU** and select **ADVANCED OPTIONS**.

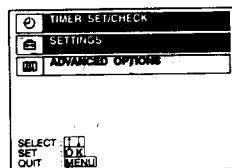

Set **AUTO ANT SELECT** to **OFF** and press **OK**.

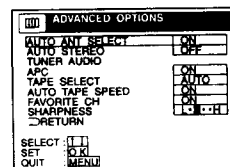

For details, see page 100.

Caution

Connections between the VCR's VHF/UHF connector and the antenna terminals of the TV receiver should be made only as shown in the following instructions. Failure to do so may result in operation that violates the regulations of the Federal Communications Commission regarding the use and operation of RF devices. Never connect the output of the VCR to an antenna or make simultaneous (parallel) antenna and VCR connections at the antenna terminals of your receiver.

Note to CATV system installer (in USA)

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Recommended use

What you can do with this hookup

- ### What you can't do


-
- Wall**
- Cable box**
- Cable Mouse**
- VCR**
- CONTROL S (PLUG IN) OUT CABLE BOX CONTROL**
- VHF/UHF IN OUT**
- Rear of TV VHF/UHF**
- A**
- B**
- C**
- VHF**
- UHF**
- VHF**
- UHF**
- Match the type of connector on your TV: A, B, or C.**
- For connector types B and C, no UHF connection is required.**
- Positioning the Cable Mouse**
- Place the Cable Mouse so that it hangs out over the cable box front.
- Side view**

continued


Step 3: Hookups (continued)

Hookup 1: VCR setup


- 1 Set the RF UNIT switch to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 104. If you made A/V connections (from page 9), you can skip this step.

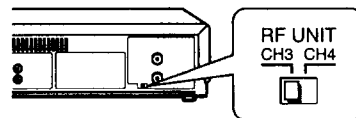


- 2 Turn on your cable box.
- 3 Press EASY SET UP on the VCR.

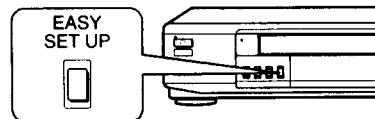

- 1 The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press OK. For details, see page 36.

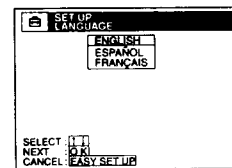


- 2 The CLOCK SET menu appears. Select AUTO and press OK. For details, see page 38.

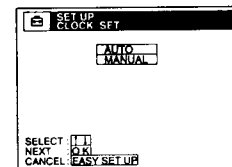


- 3 The SMART CHANNEL MAPPING menu appears. Press ↑/↓/←/→ to enter the ZIP/POSTAL CODE in your area and press OK. (You can also use the number buttons to enter the ZIP/POSTAL CODE.)




- 4 The CABLE BOX CONTROL menu appears. Select ON. For details, see page 46.

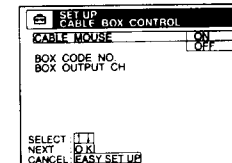

- 5 Enter your cable box code number and press OK. For details, see page 46.

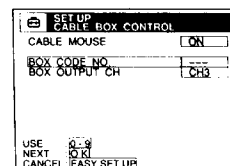


- 6 Select your cable box output channel and press OK.

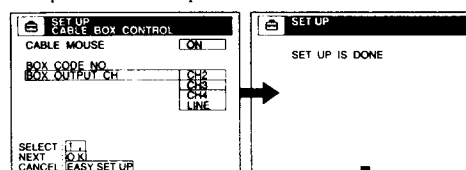


Normal display

Hookup 1: The VCR Plus+ GOLD system channel setup


- 1 Press MENU, then select SETTINGS and press OK.

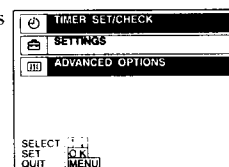

- 2 Select SET VCR Plus+ CHANNELS and press OK.

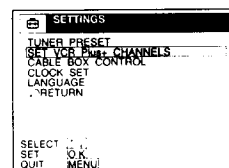

- 3 Select AUTO and press OK.

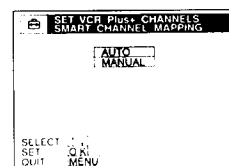

- 4 Press I/⏻ to turn off the VCR.

continued

Step 3: Hookups (continued)

The VCR receives the program information signal from 0:00 am to 5:00 am while the VCR is turned off, and set up the channel for the VCR Plus+ GOLD system recording. After channel setup is finished, you can record TV programs using the VCR Plus+ GOLD system. For details, see page 59.

Notes

- To use the Smart Channel Mapping feature, leave the cable box on.
- It takes about 1 hour to complete channel setup.
- The VCR can receive the program information signal only while the VCR is turned off and no timer recordings are set.
- If the channels in your area don't carry the program information signals, set the program guide channels manually. For details, see page 62.
- If the CHOOSE YOUR CABLE CH MAP menu appears the first time you turn on the VCR after finishing channel setup, select the MAP number. For details, see page 61.

Automatic clock setting

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks the time and adjusts the clock, even for Daylight Saving Time. The VCR sets the clock by picking up a time signal provided by some TV channels.

If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see page 43.

Note

- To use the Auto Clock Set feature, leave the cable box on.

No cable box, or incompatible cable box with only a few scrambled channels

Recommended use


Use this hookup if you do not have a cable box. Also use this hookup if your cable company cannot supply a cable box that is compatible with the VCR's cable box control feature, and your cable system scrambles only a few channels.

What you can do with this hookup

- Record any unscrambled channel by selecting the channel on the VCR

What you can't do

- Record scrambled channels that require a cable box

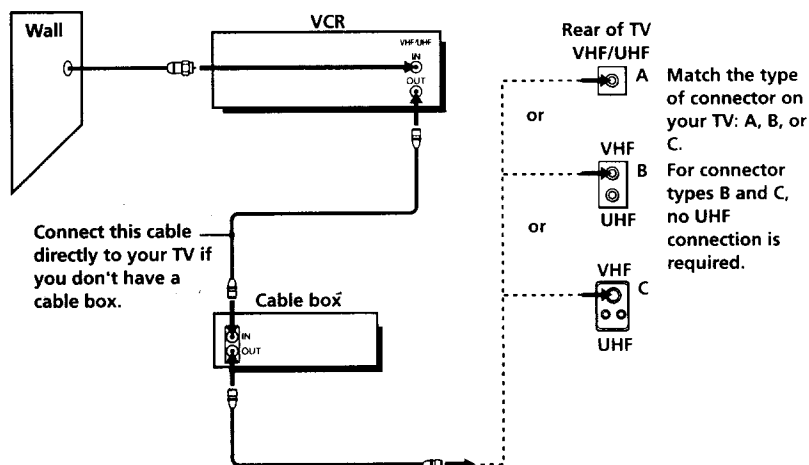


continued


Step 3: Hookups (continued)

Hookup 2: VCR setup


- 1 Set the RF UNIT switch to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 104. If you made A/V connections (from page 9), you can skip this step.

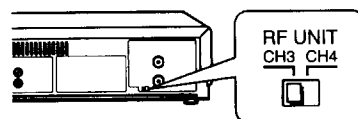


- 2 Press EASY SET UP on the VCR.

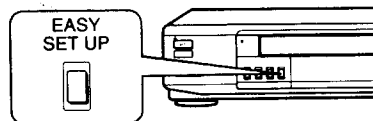


- 1 The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press OK. For details, see page 36.

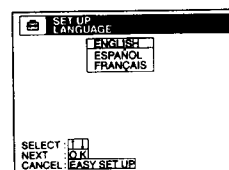


- 2 The CLOCK SET menu appears. Select AUTO and press OK. For details, see page 38.

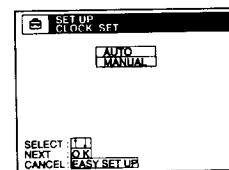


- 3 The SMART CHANNEL MAPPING menu appears. Press ↑/↓/←/→ to enter the ZIP/POSTAL CODE in your area and press OK. (You can also use the number buttons to enter the ZIP/POSTAL CODE.)

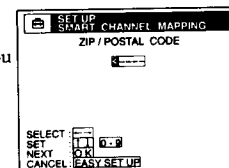


- 4 The CABLE BOX CONTROL menu appears. Select OFF and press OK.

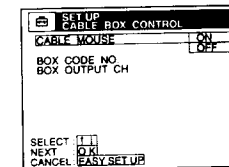

- 5 The TUNER PRESET menu appears. Set ANTENNA/CABLE to CABLE and press OK. For details, see page 52.

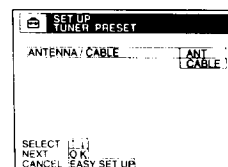


- 6 The AUTO PRESET starts.

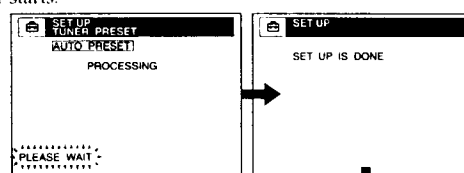


Normal display

Hookup 2: The VCR Plus+ GOLD system channel setup


- 1 Press MENU, then select SETTINGS and press OK.

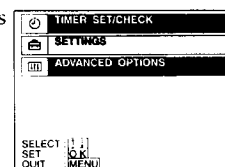

- 2 Select SET VCR Plus+ CHANNELS and press OK.

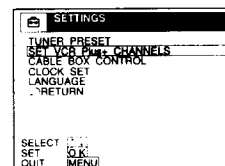

- 3 Select AUTO and press OK.

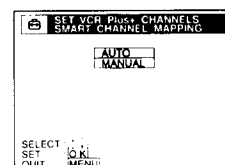

- 4 Press I/⏻ to turn off the VCR.

continued

Step 3: Hookups (continued)

The VCR receives the program information signal from 0:00 am to 5:00 am while the VCR is turned off, and set up the channel for the VCR Plus+ GOLD system recording. After channel setup is finished, you can record TV programs using the VCR Plus+ GOLD system. For details, see page 59.

Notes

- It takes about 1 hour to complete channel setup.
- The VCR can receive the program information signal only while the VCR is turned off and no timer recordings are set.
- If the channels in your area don't carry the program information signals, set the program guide channels manually. For details, see page 62.
- If the CHOOSE YOUR CABLE CH MAP menu appears the first time you turn on the VCR after finishing channel setup, select the MAP number. For details, see page 61.

Automatic clock setting

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks the time and adjusts the clock, even for Daylight Saving Time. The VCR sets the clock by picking up a time signal provided by some TV channels.



If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see page 43.

Antenna hookup

Make the following connections if you're using an antenna (if you don't have cable TV).

A Use this hookup if you're using:

- VHF/UHF antenna (you get channels 2–13 and channels 14 and higher)
- UHF-only antenna (you get channels 14 and higher)
- Separate VHF and UHF antennas

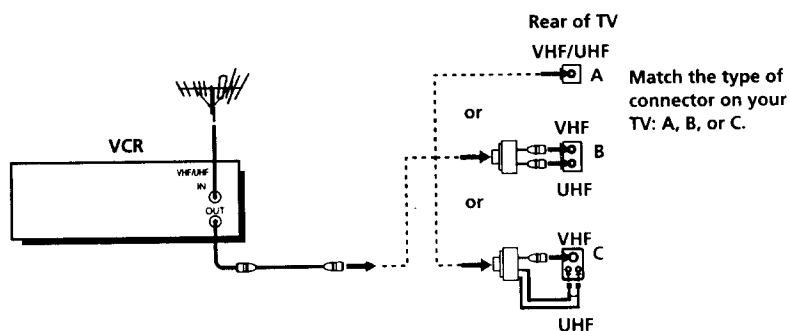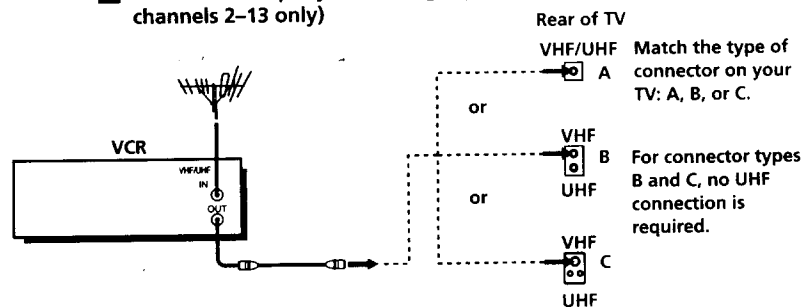**B Use this hookup if you're using a VHF-only antenna (you get channels 2–13 only)****If you cannot connect your antenna cable to the VCR directly**


If your antenna cable is a flat cable (300-ohm twin lead cable), attach an external antenna connector (not supplied) so you can connect the cable to the VHF/UHF IN connector. If you have separate cables for VHF and UHF antennas, you should use a U/V band mixer (not supplied). For details, see page 105.

continued


Step 3: Hookups (continued)

Hookup 3: VCR setup


- 1 Set the RF UNIT switch to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 104. If you made A/V connections (from page 9), you can skip this step.
- 2 Press EASY SET UP on the VCR.

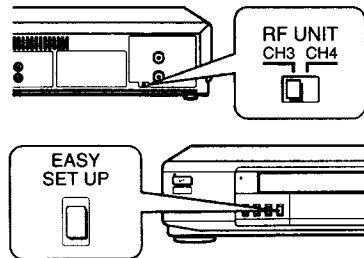


- 1 The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press OK. For details, see page 36.

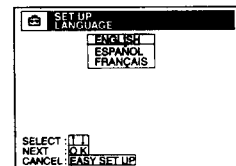


- 2 The CLOCK SET menu appears. Select AUTO and press OK. For details, see page 38.

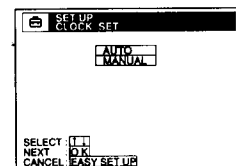


- 3 The SMART CHANNEL MAPPING menu appears. Press ↑/↓/←/→ to enter the ZIP/POSTAL CODE in your area and press OK. (You can also use the number buttons to enter the ZIP/POSTAL CODE.)

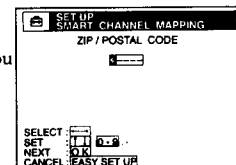


- 4 The CABLE BOX CONTROL menu appears. Select OFF and press OK.

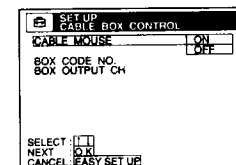

- 5 The TUNER PRESET menu appears. Set ANTENNA/CABLE to ANT and press OK. For details, see page 52.

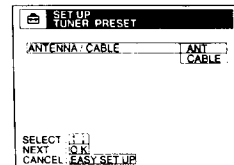

- 6 The AUTO PRESET starts.

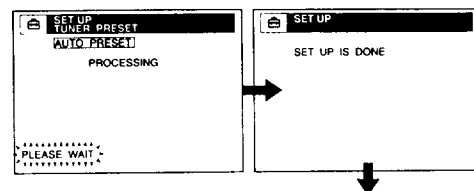


Normal display


Getting Started

Hookup 3: The VCR Plus+ GOLD system channel setup


- 1 Press MENU, then select SETTINGS and press OK.

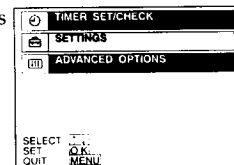

- 2 Select SET VCR Plus+ CHANNELS and press OK.

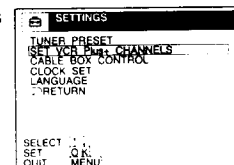

- 3 Select AUTO and press OK.

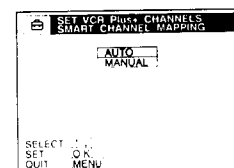

- 4 Press I/⏻ to turn off the VCR.

continued

Step 3: Hookups (continued)

The VCR receives the program information signal from 0:00 am to 5:00 am while the VCR is turned off, and set up the channel for the VCR Plus+ GOLD system recording. After channel setup is finished, you can record TV programs using the VCR Plus+ GOLD system. For details, see page 59.

Notes

- It takes about 1 hour to complete channel setup.
- The VCR can receive the program information signal only while the VCR is turned off and no timer recordings are set.
- If the channels in your area don't carry the program information signals, set the program guide channels manually. For details, see page 62.
- If the CHOOSE YOUR CABLE CH MAP menu appears the first time you turn on the VCR after finishing channel setup, select the MAP number. For details, see page 61.

Automatic clock setting

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks the time and adjusts the clock, even for Daylight Saving Time. The VCR sets the clock by picking up a time signal provided by some TV channels.

If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see page 43.

Incompatible cable box with many scrambled channels

Recommended use


Use this hookup if your cable company cannot supply a cable box that is compatible with the VCR's cable box control feature, and your cable system scrambles all or most channels.

What you can do with this hookup

- Record any channel by selecting the channel on the cable box

What you can't do

- Record with the cable box turned off
- Record one channel while watching another channel





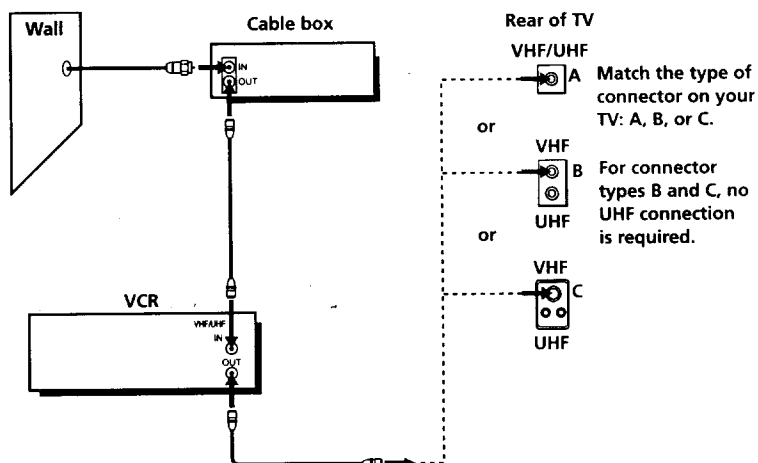


continued


Step 3: Hookups (continued)

Hookup 4: VCR setup


- 1 Set the RF UNIT switch to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 104. If you made A/V connections (from page 9), you can skip this step.
- 2 Turn on your cable box.
- 3 Press EASY SET UP on the VCR.
 - 1 The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press OK. For details, see page 36.
 - 2 The CLOCK SET menu appears. Select MANUAL and press OK. Then set the clock manually and press OK. For details, see page 44.
 - 3 The SMART CHANNEL MAPPING menu appears. Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to enter the ZIP/POSTAL CODE in your area and press OK. (You can also use the number buttons to enter the ZIP/POSTAL CODE.)
 - 4 The CABLE BOX CONTROL menu appears. Select OFF and press OK.

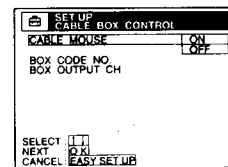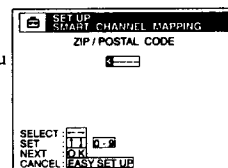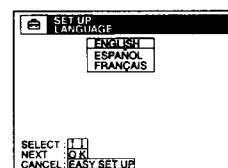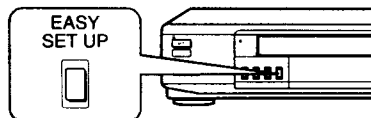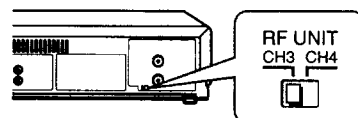

- 5 The TUNER PRESET menu appears. Set ANTENNA/CABLE to ANT and press OK. For details, see page 52.

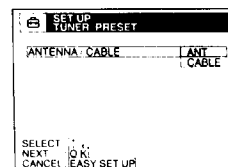


- 6 The AUTO PRESET starts.

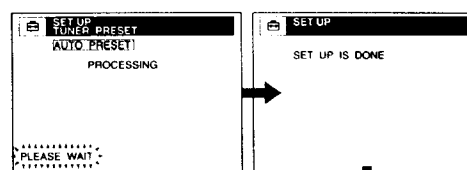


Normal display

Hookup 4: The VCR Plus+ GOLD system channel setup


- 1 Find the VCR Plus+ GOLD system Channel Listing in your program guide. For details, see page 58.
 - 2 Enter all the channels you want to record and the cable box output channel (usually 2, 3, or 4). For details, see page 62.
- 1 Press MENU, then select SETTINGS and press OK.

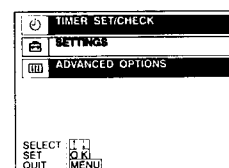

- 2 Select SET VCR Plus+ CHANNELS and press OK.

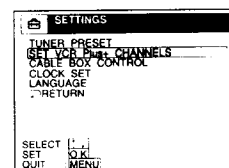


- 3 Select MANUAL and press OK.

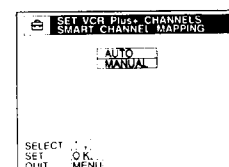

continued

Step 3: Hookups (continued)

- 4 Enter the program guide channel, then the cable box output channel.

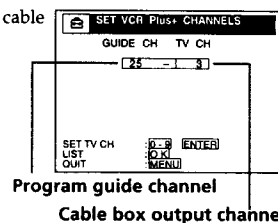

- 5 Press OK.

- 6 Press MENU to exit the menu.

Automatic clock setting

To use the Auto Clock Set feature with this hookup, you need to manually select a channel that carries a time signal:

- 1 Tune the cable box to a channel that carries a time signal.
- 2 Select AUTO in the CLOCK SET menu to turn on the Auto Clock Set feature.
- 3 Turn off the VCR. It automatically sets the clock and adjusts for Daylight Saving Time by picking up the time signal.

If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see page 43.

Note

- To use the Auto Clock Set feature, leave the cable box on.

DIRECTV digital satellite receiver**Recommended use**

Use this hookup if you have a DIRECTV digital satellite receiver. It allows the VCR's cable box control feature to control the channel on the DIRECTV digital satellite receiver, simplifying the recording process. A list of compatible DIRECTV digital satellite receivers is on page 49.


The DIRECTV System is a satellite broadcast that provides superior digital-quality video and crisp digital-quality audio. A variety of program packages are available through your program providers. It also has program guides that are sorted by program categories.

What you can do with this hookup

- Record any channels using the VCR's cable box control feature to select channels on the DIRECTV digital satellite receiver.

What you can't do


- Record with the DIRECTV digital satellite receiver turned off
- Record any channels from cable or an antenna
(To record channels from cable or an antenna, turn off the cable box control feature.)
- Use a cable box
- Record programs with the VCR Plus+ GOLD system

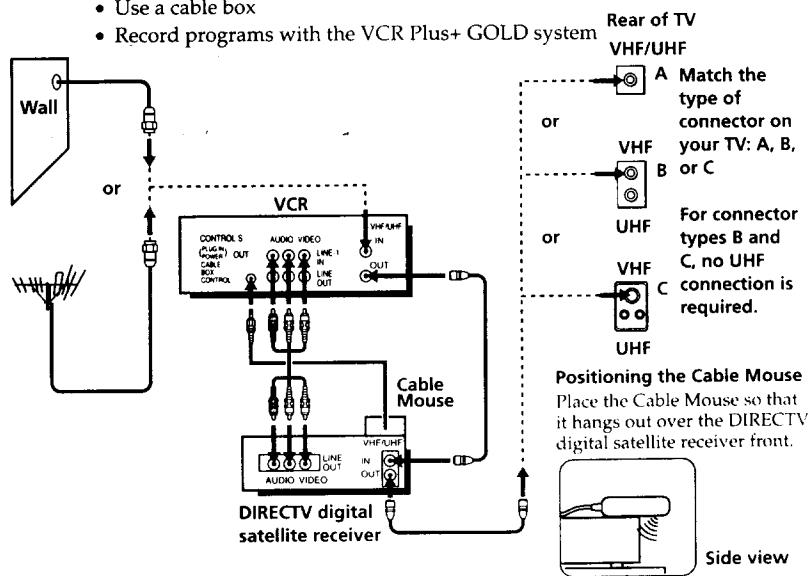


Step 3: Hookups (continued)

Hookup 5: VCR setup


- 1 Set the RF UNIT switch to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 104. If you made A/V connections (from page 9), you can skip this step.

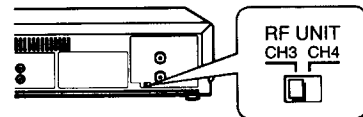


- 2 Turn on your DIRECTV digital satellite receiver.
- 3 Press EASY SET UP on the VCR.

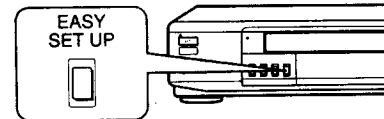


- 1 The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press OK. For details, see page 36.

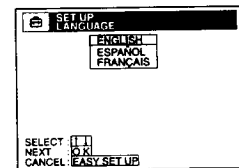


- 2 The CLOCK SET menu appears. Select AUTO and press OK. For details, see page 38.

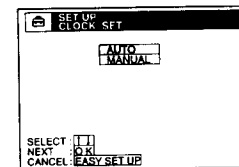

- 3 The SMART CHANNEL MAPPING menu appears. Press ↑/↓/←/→ to enter the ZIP/POSTAL CODE in your area and press OK. (You can also use the number buttons to enter the ZIP/POSTAL CODE.)

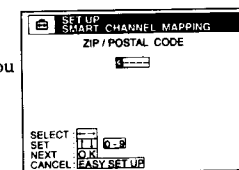

- 4 The CABLE BOX CONTROL menu appears. Select ON. For details, see page 46.

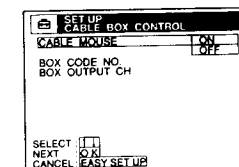

- 5 Enter your DIRECTV digital satellite receiver code number and press OK. For details, see page 46.

- 6 Set your DIRECTV digital satellite receiver output channel (BOX OUTPUT CH) to LINE and press OK.

Normal display

Getting Started

Automatic clock setting

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks the time and adjusts the clock, even for Daylight Saving Time. The VCR sets the clock by picking up a time signal provided by some TV channels.

If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see page 43.

Note

- To successfully record a program from the DIRECTV digital satellite receiver, proceed as follows:
 - Leave the DIRECTV digital satellite receiver on all the time.
 - Turn off the display (menu screen, channel number, etc.) of the DIRECTV digital satellite receiver.
 - To record or receive locked channels, unlock the channel before the VCR starts recording.
 - To set pay-per-view programs in the timer setting, order the pay-per-view program before the VCR starts recording.
 - Some programs are copy protected. You cannot record these programs.

continued

Step 3: Hookups (continued)

Hookup 6

Pages 30 to 35

Incompatible cable box with only a few scrambled channels, using an A/B switch

Recommended use


By using an A/B switch (not supplied), this hookup allows you to record both scrambled and unscrambled channels conveniently.

What you can do with this hookup

- Record any unscrambled channel by selecting the channel directly on the VCR (the A/B switch is set to A)
- Record any scrambled channel by selecting the channel on the cable box (the A/B switch is set to B)


What you can't do

- Record one scrambled channel while watching another channel (the A/B switch is set to B)

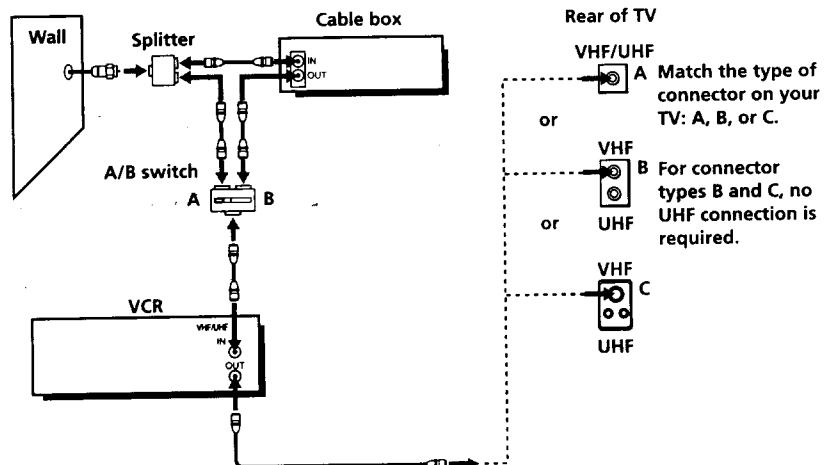


Hookup 6: VCR setup


- 1 Set the RF UNIT switch to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel. For details, see page 104. If you made A/V connections (from page 9), you can skip this step.

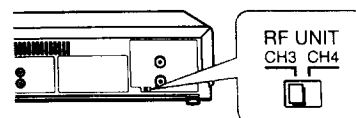


- 2 Set the A/B switch to "A."
- 3 Press EASY SET UP on the VCR.

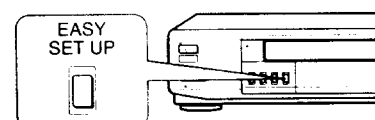


- 1 The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press OK. For details, see page 36.

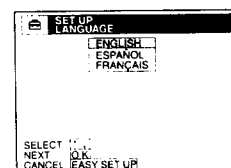


- 2 The CLOCK SET menu appears. Select AUTO and press OK. For details, see page 38.

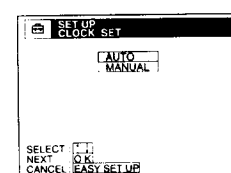

- 3 The SMART CHANNEL MAPPING menu appears. Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to enter the ZIP/POSTAL CODE in your area and press OK. (You can also use the number buttons to enter the ZIP/POSTAL CODE.)

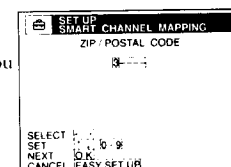


- 4 The CABLE BOX CONTROL menu appears. Select OFF and press OK.

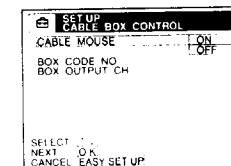


continued

Step 3: Hookups (continued)

- 5 The TUNER PRESET menu appears. Set ANTENNA/CABLE to CABLE and press OK. For details, see page 52.

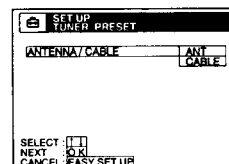

- 6 The AUTO PRESET starts.

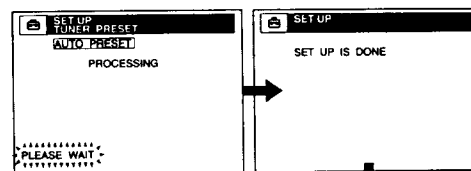


Normal display

- 4 Preset the cable box output channel (usually 2, 3 or 4). For details, see page 54.

- 1 Press MENU, then select SETTINGS and press OK.


- 2 Select TUNER PRESET and press OK.

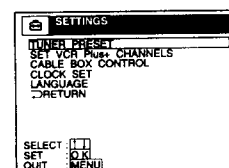

- 3 Enter the cable box output channel.

- 4 Set MANUAL SET to ADD and press OK.


Cable box output channel

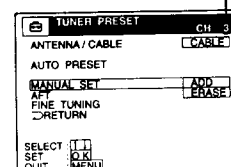


- 5 Press MENU to exit the menu.

Hookup 6: The VCR Plus+ GOLD system channel setup


- 1 Press MENU, then select SETTINGS and press OK.

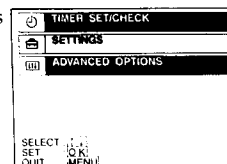

- 2 Select SET VCR Plus+ CHANNELS and press OK.

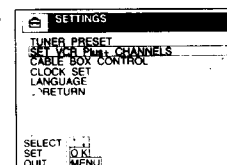

- 3 Select AUTO and press OK.

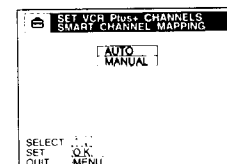

- 4 Press I/O to turn off the VCR.

The VCR receives the program information signal from 0:00 am to 5:00 am while the VCR is turned off, and set up the channel for the VCR Plus+ GOLD system recording. After channel setup is finished, you can record TV programs using the VCR Plus+ GOLD system. For details, see page 59.

Notes

- To use the Smart Channel Mapping feature, set the A/B switch to "A."
- It takes about 1 hour to complete channel setup.
- The VCR can receive the program information signal only while the VCR is turned off and no timer recordings are set.
- If the channels in your area don't carry the program information signals, set the program guide channels manually. For details, see page 62.
- If the CHOOSE YOUR CABLE CH MAP menu appears the first time you turn on the VCR after finishing channel setup, select the MAP number. For details, see page 61.

continued

Getting Started


Step 3: Hookups (continued)

VCR Plus+ GOLD channel setup for scrambled channels


To set the program guide channels for scrambled channels, enter all the scrambled channels you want to record and the cable box output channel (usually 2, 3, or 4) after finishing smart channel mapping. For details, see page 62.

- 1 Find the VCR Plus+ GOLD Channel Listing in your program guide. For details, see page 58.


- 2 Press MENU, then select SETTINGS and press OK.

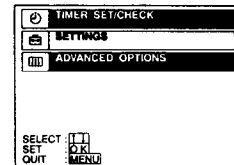


- 3 Select SET VCR Plus+ CHANNELS and press OK.

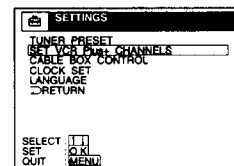

- 4 Select MANUAL and press OK.

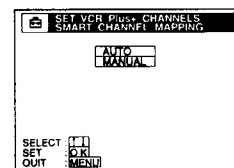

- 5 Enter the program guide channel, then the cable box output channel.

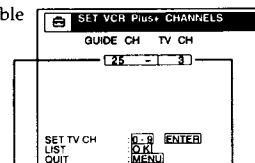

Program guide channel
Cable box output channel

- 6 Press OK.

- 7 Press MENU to exit the menu.

Automatic clock setting

Once you've set up the VCR, it automatically sets the clock the first time you turn off the VCR. After that, whenever you turn off the VCR, it checks the time and adjusts the clock, even for Daylight Saving Time. The VCR sets the clock by picking up a time signal provided by some TV channels.


If you want to use the timer to record right away, or if the channels in your area do not carry time signals, set the clock manually. For details, see page 43.

Note

- To use the Auto Clock Set feature, set the A/B switch to "A."

Selecting a language

You can change the on-screen display language.

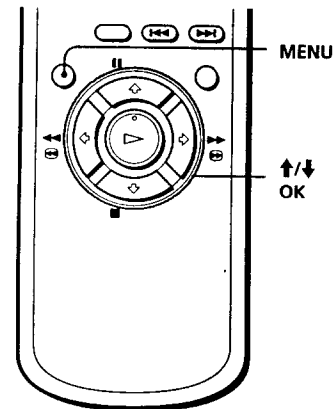


1

MENU



Press MENU, then press \uparrow/\downarrow to highlight SETTINGS and press OK.


When using the EASY SET UP procedure, skip steps 1 and 2.

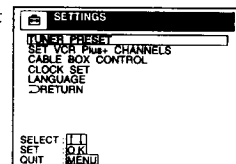

2



Press \uparrow/\downarrow to highlight LANGUAGE, then press OK.

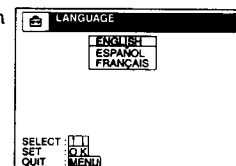

3



Press \uparrow/\downarrow to highlight ENGLISH, ESPAÑOL, or FRANÇAIS, then press OK.

4

MENU



Press MENU to exit the menu.

Tip

- If you want to return to the previous menu, highlight RETURN and press OK.

Setting the clock


Using the Auto Clock Set feature

Some TV and cable channels transmit time signals with their broadcasts. Your VCR can pick up this time signal to automatically set the clock.

The Auto Clock Set feature works only if a channel in your area is broadcasting a time signal. If broadcasters in your area are not yet sending time signals, set the time manually (page 43).

Before you start...


- Turn on the VCR and the TV.
- Set the TV to the VCR channel (channel 3 or 4). If your TV is connected to the VCR using A/V connections, set the TV to video input.
- Press TV/VIDEO to display the VIDEO indicator in the VCR's display window.
- Press INPUT SELECT so that a channel number appears in the VCR's display window.

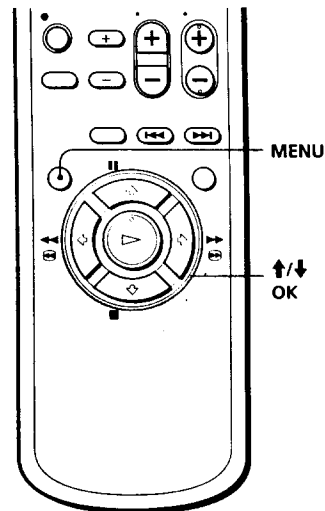



- 1** Press MENU, then press \uparrow/\downarrow to highlight SETTINGS and press OK.



When using the EASY SET UP procedure, skip steps 1 and 2.

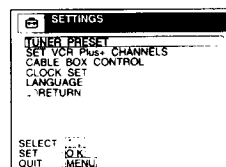

- 2** Press \uparrow/\downarrow to highlight CLOCK SET, then press OK.

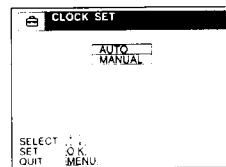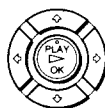


continued

Setting the clock (continued)

3




Press \uparrow/\downarrow to highlight AUTO, then press OK.

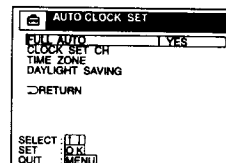

4



Press \uparrow/\downarrow to highlight FULL AUTO, then press OK.

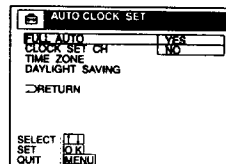

5



Press \uparrow/\downarrow to highlight YES, then press OK.

6



Press MENU to exit the menu.

7

To activate the Auto Clock Set function, turn off the VCR.

The VCR automatically sets the clock by searching for a channel that carries a time signal and sets your time zone and Daylight Saving Time (if applicable).

If your clock is set to the wrong time zone or Daylight Saving Time, you can adjust these settings without turning off the Auto Clock Set feature (page 40).

Tip

- If you want to return to the previous menu, highlight RETURN and press OK.


Notes

- The clock cannot be set automatically if you don't receive a channel that carries a time signal in your area. If so, set the clock manually.
- If there are only a few channels in your area that carry time signals, setting the clock automatically may take up to about 30 minutes. If nothing happens even after you wait about 30 minutes, set the clock manually.
- If you use Hookup 1, make sure you leave the cable box on.

continued

Setting the clock (continued)


If the clock is not activated

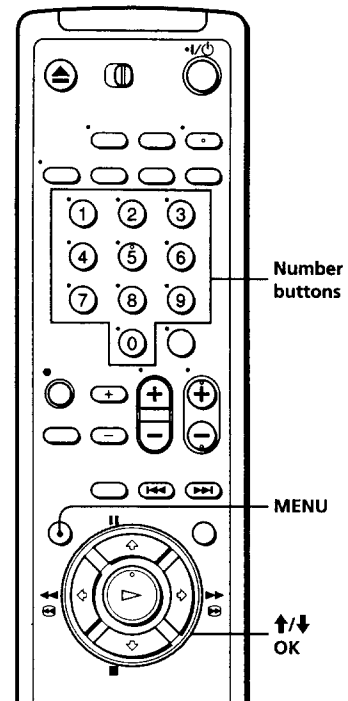

1

Follow steps 1 to 4 in "Using the Auto Clock Set feature."

The AUTO CLOCK SET menu is displayed.

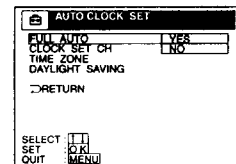

2



Press \uparrow/\downarrow to highlight NO for FULL AUTO and press OK.

AUTO CLOCK SET	
FULL AUTO	NO
CLOCK SET CH	---
TIME ZONE	AUTO
DAYLIGHT SAVING	AUTO
RETURN	
SELECT	OK
SET	OK
QUIT	MENU

3



Press \uparrow/\downarrow to highlight the item you want to set and press OK. Then press \uparrow/\downarrow to make the setting and press OK.

- For CLOCK SET CH

Leave the setting to "—" to have the VCR automatically search for a channel that carries a time signal.

Press the number buttons to select a channel that carries a time signal.

Use this option if you know of a channel that carries a time signal. Most PBS member stations broadcast a time signal. For the fastest response, select your local PBS station.



AUTO CLOCK SET	
FULL AUTO	NO
CLOCK SET CH	---
TIME ZONE	AUTO
DAYLIGHT SAVING	AUTO
RETURN	
USE	OK
SET	OK
QUIT	MENU

- For TIME ZONE

Select the time zone of your area, or select AUTO to have the VCR automatically set your time zone.

The options are:

AUTO \leftrightarrow ATLANTIC \leftrightarrow

EASTERN \leftrightarrow CENTRAL \leftrightarrow

MOUNTAIN \leftrightarrow PACIFIC \leftrightarrow

ALASKA \leftrightarrow HAWAII \leftrightarrow AUTO

AUTO CLOCK SET	
FULL AUTO	NO
CLOCK SET CH	---
TIME ZONE	ATLANTIC
DAYLIGHT SAVING	EASTERN
RETURN	
SELECT	OK
SET	OK
QUIT	MENU

- For DAYLIGHT SAVING

Select ON or OFF (standard time), or AUTO to have the VCR automatically set the daylight saving time.

AUTO CLOCK SET	
FULL AUTO	NO
CLOCK SET CH	---
TIME ZONE	AUTO
DAYLIGHT SAVING	ON
RETURN	
SELECT	OK
SET	OK
QUIT	MENU

continued

Setting the clock (continued)

4



Press MENU to exit the menu.

5

To activate the Auto Clock Set function, turn off the VCR.

Tip

- If you want to return to the previous menu, highlight RETURN and press OK.



Note

- If you use both the cable box control feature and the Auto Clock Set feature, the VCR automatically changes channels on the cable box until a channel that carries a time signal is found, whenever you turn off the VCR.
If you want to stop the search, change the channel on the cable box with the channel buttons either on the VCR or on the remote commander.

Using Manual Clock Set

Before you start...

- Turn on the VCR and the TV.
- Set the TV to the VCR channel (channel 3 or 4). If your TV is connected to the VCR using A/V connections, set the TV to video input.
- Press TV/VIDEO to display the VIDEO indicator in the VCR's display window.

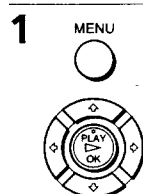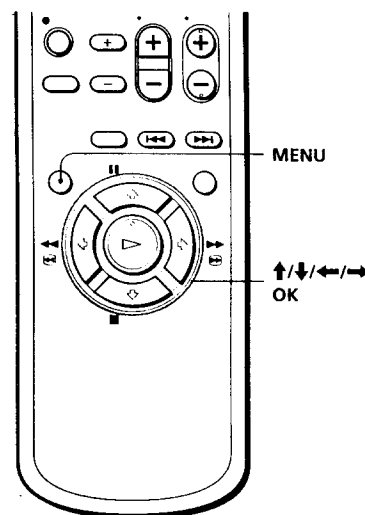


1

MENU

Press MENU, then press \uparrow/\downarrow to highlight SETTINGS and press OK.


When using the EASY SET UP procedure, skip steps 1 and 2.

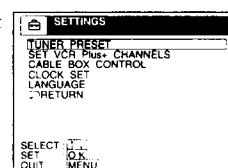

2



Press \uparrow/\downarrow to highlight CLOCK SET, then press OK.

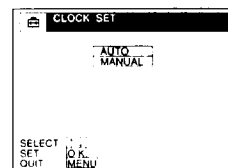


continued

Setting the clock (continued)

3




Press \uparrow/\downarrow to highlight MANUAL, then press OK.

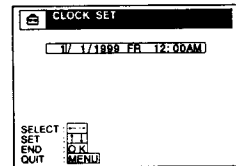

4




Press \uparrow/\downarrow to set the month.

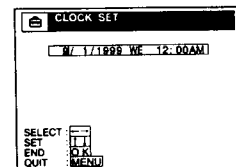

5



Press \rightarrow to highlight the day and press \uparrow/\downarrow to set the day.
The day of the week is set automatically.

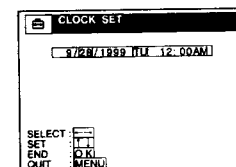

6

Set the year, hour, and minutes in the same way as the day.

7



Press OK to start the clock.

Tip


- If you want to return to the previous menu, highlight RETURN and press OK.

Setting up the cable box control

(Skip this section if you are using Hookup 2, 3, 4, or 6.)

Your VCR includes a cable box control feature that allows the VCR to control most brands of cable boxes/DIRECTV digital satellite receivers via the Cable Mouse. With the cable box control, the VCR controls channels on the cable box/DIRECTV digital satellite receiver for timer recording. You can also use the VCR's remote commander to change channels on the cable box/DIRECTV digital satellite receiver whenever the cable box/DIRECTV digital satellite receiver is turned on even if the VCR is turned off. To use cable box control, you need to connect the Cable Mouse (pages 11 and 27) and set the code number and output channel.

This VCR is programmed with codes necessary to control channel selection on most brands of cable boxes at the time this VCR was manufactured. It is possible that new cable boxes may be introduced that cannot be controlled with this VCR's Cable Mouse. If you have a cable box that is incompatible with this VCR, contact your cable operator — they may be able to provide you with a compatible cable box.

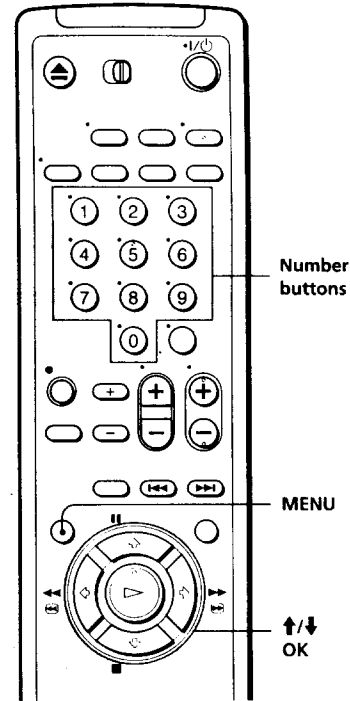

Getting Started


1

MENU



Press MENU, then press \uparrow/\downarrow to highlight SETTINGS and press OK.

When using the EASY SET UP procedure, skip steps 1 and 2.

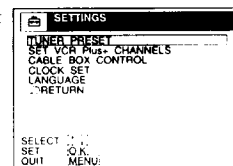

continued

Setting up the cable box control (continued)

2



Press \uparrow/\downarrow to highlight CABLE BOX CONTROL, then press OK.

CABLE BOX CONTROL	
CABLE MOUSE	OFF
BOX CODE NO.	
BOX OUTPUT CH	
RETURN	
SELECT	[]
SET	OK
QUIT	MENU

3



Press \uparrow/\downarrow to highlight CABLE MOUSE, then press OK.

CABLE BOX CONTROL	
CABLE MOUSE	ON
BOX CODE NO.	097
BOX OUTPUT CH	CH3
RETURN	
SELECT	[]
SET	OK
QUIT	MENU

4



Press \uparrow/\downarrow to highlight ON, then press OK.

CABLE BOX CONTROL	
CABLE MOUSE	ON
BOX CODE NO.	097
BOX OUTPUT CH	CH3
RETURN	
USE	P-R
SET	OK
QUIT	MENU

5



Press \uparrow/\downarrow to highlight BOX CODE NO., then press OK.
When BOX CODE NO. is "---," skip this step.

CABLE BOX CONTROL	
CABLE MOUSE	ON
BOX CODE NO.	012
BOX OUTPUT CH	CH3
RETURN	
SELECT	[]
SET	OK
QUIT	MENU

6




Press the number buttons to enter the cable box/DIRECTV digital satellite receiver code number, then press OK.

Find your cable box/DIRECTV digital satellite receiver code number from the chart below.

7



Press \uparrow/\downarrow to highlight BOX OUTPUT CH, then press OK.

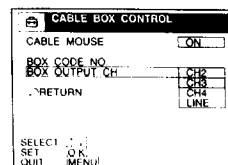

8



If you want to control a cable box, press \uparrow/\downarrow to highlight the cable box output channel, then press OK.

If you want to control a DIRECTV digital satellite receiver, select LINE, then press OK.

9



Press MENU to exit the menu.

Cable box and DIRECTV digital satellite receiver brand and the corresponding code numbers

If more than one code number is listed, try entering them one by one, until you come to the correct code for your equipment.

Cable box brand	Code numbers
ABC	018, 022, 024, 028, 217
Antronix	218
Archer	033, 050, 164, 218, 808
BBT	278
Cable Star	067
Cableterra	033
Cable time	172, 388, 459
Century	164
Citizen	164, 326, 327
Clyde Cablevision	097
Colour Voice	036, 042
Comband	243, 244
Comtronics	051, 071

Cable box brand	Code numbers
Decsat	434
Diamond	046
Eagle Comtronics	051
Eastern	013, 285
Electricord	089
Electus	055
Focus	411
Garrard	164
GC Electronics	027, 067, 341
GE	243, 244
GEC	097
Gemini	026, 068, 081
General Instrument	022, 287, 487

continued

Setting up the cable box control (continued)


Cable box brand	Code numbers
Hamlin	020, 031, 045, 270, 284
Hitachi	022
Jasco	164, 326
Jerrold	014, 022, 025, 026, 035, 037, 058, 109, 287, 487
Linsay	451
Macom	044
Magnavox	038, 043, 080
Memorex	011
Movie Time	089, 167, 214
Northcoast	325
Novaplex	629
NSC	074, 081, 167, 214
Oak	018, 030, 259
Panasonic	032, 118
Paragon	011
Philips	036, 038, 039, 040, 041, 042, 071, 301
Pioneer	034, 155, 271, 544, 695
Popular Mechanics	411
Pulsar	011
Radio shack	808
RCA	032
Realistic	218
Recoton	411
Regal	031, 270, 284, 290
Regency	013
Rembrandt	081
Samsung	051, 155
Scientific Atlanta	017, 019, 028, 288
Seam	521

Cable box brand	Code numbers
Sharp	324
Signal	051
Signature	022
SL Marx	051
Spectravision	069
Sprucer	032, 318
Standard Components	107, 166
Starcom	014, 026, 058, 109
Stargate	026, 051
STS	167
Sylvania	012
T-Cable Teletext	116
Tandy	269
Tatung	108
Teknica	157
TeleCaption	232
Teleservice	292
Texscan	012, 107
TFC	321
Timeless	429
Tocom	023, 024
Toshiba	011
Tudi	297
TV86	074
TV COM	018, 030, 259
Uniden	236
Unika	033, 164, 218
United Artists	018
United Cable	014
Universal	033, 050, 067, 088, 089, 164, 202, 218, 333

Cable box brand	Code numbers	DIRECTV digital satellite receiver brand	Code numbers
Videoway	261	Hitachi	830
Vidtech	255	RCA	577
Viewstar	038, 071, 074, 122, 222, 269, 300	Sony	650
Zenith	011, 065, 536	Toshiba	801
Zentek	411		
Wave Master	576		

To ensure correct operation

- Place the Cable Mouse so that it hangs out over the cable box/DIRECTV digital satellite receiver front.
- Do not place the cable box/DIRECTV digital satellite receiver on top of the VCR.
- Position the cable box/DIRECTV digital satellite receiver away from the VCR.
- Point the remote commander at the VCR, not at the cable box/DIRECTV digital satellite receiver.

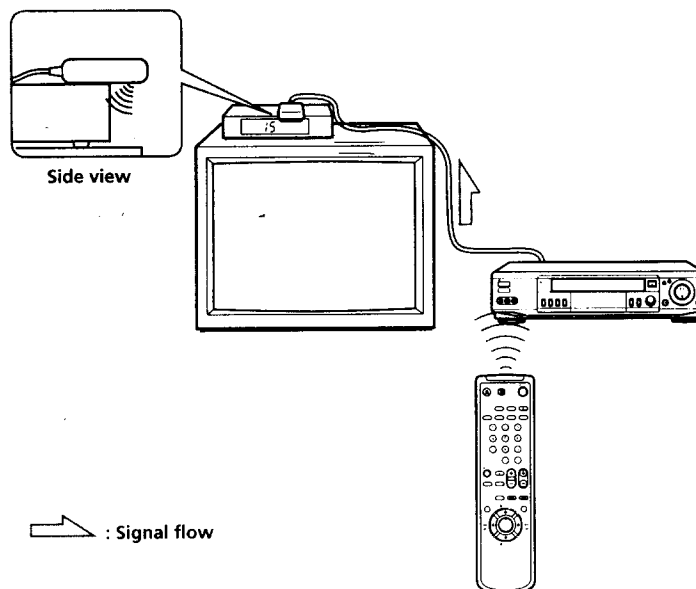

continued

Setting up the cable box control (continued)

To check the cable box control setting

- 1** Press CH +/- on the remote commander. Does the channel indicator on the cable box/DIRECTV digital satellite receiver change? (Point the remote commander at the VCR, not at the cable box/DIRECTV digital satellite receiver.)
- 2** Press all 10 number buttons (0 to 9) on the remote commander. Does the channel indicator on the cable box/DIRECTV digital satellite receiver change?

If the answer to both 1 and 2 is "yes," you have made the correct setting.

If you cannot get your VCR to control the cable box/DIRECTV digital satellite receiver

- Check that the Cable Mouse is connected to the CABLE BOX CONTROL jack on the VCR.
- Check the position of the Cable Mouse.
- Place the cable box/DIRECTV digital satellite receiver and VCR away from each other. Do not place the cable box/DIRECTV digital satellite receiver on top of the VCR.
- Try the setup again making sure to use the correct control code. If the cable box still does not respond, try the other codes that are listed.

If your cable box still does not operate with the Cable Mouse, contact your cable company to see if they can provide you with a compatible cable box.

Tip

- If you want to return to the previous menu, highlight RETURN and press OK.

Note

- Make sure you turn off the VCR when you plug in or unplug the Cable Mouse. If you unplug the Cable Mouse and plug it in again, turn on the VCR before you use the cable box/DIRECTV digital satellite receiver control feature.

Presetting channels

(Skip this section if you are using cable box/DIRECTV digital satellite receiver control.)

This VCR is capable of receiving VHF channels 2 to 13, UHF channels 14 to 69 and unscrambled CATV channels 1 to 125. First, we recommend that you preset the receivable channels in your area using automatic presetting. Then, if there are any unwanted channels, disable them manually. If you have decided which channels you wish to preset, set them directly using manual presetting.

Before you start...

- Turn on the VCR and the TV.
- Set the TV to the VCR channel (channel 3 or 4). If your TV is connected to the VCR using A/V connections, set the TV to video input.
- Press TV/VIDEO to display the VIDEO indicator in the VCR's display window.

Presetting all receivable channels automatically


1

MENU




Press MENU, then press \uparrow/\downarrow to highlight SETTINGS and press OK.

When using the EASY SET UP procedure, skip steps 1 and 2.

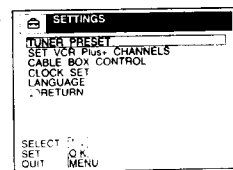

continued

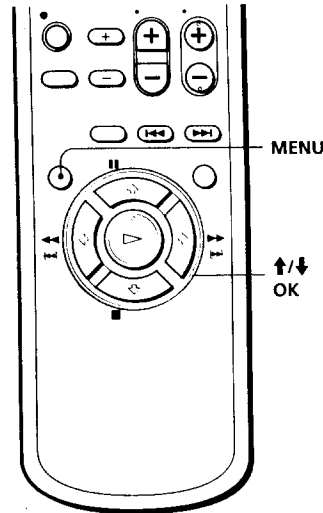


Getting Started

Presetting channels (continued)

2



Press \uparrow/\downarrow to highlight TUNER PRESET, then press OK.

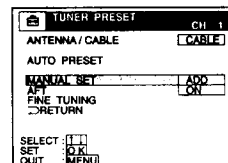

3




Press \uparrow/\downarrow to highlight ANTENNA/CABLE, then press OK.

4




• To preset cable TV channels:

Press \uparrow/\downarrow to set ANTENNA/CABLE to CABLE, then press OK.

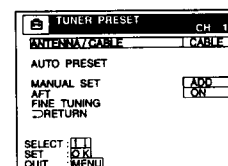

• To preset VHF and UHF channels:

Press \uparrow/\downarrow to set ANTENNA/CABLE to ANT, then press OK.

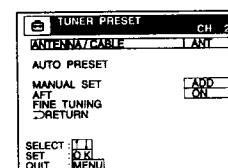


5




Press \uparrow/\downarrow to highlight AUTO PRESET, then press OK.

All receivable channels are preset in numerical sequence. When no more receivable channels can be found, presetting stops and the picture from the lowest numbered channel is displayed on the TV screen.

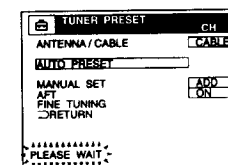

Tips

- When receiving a VHF, UHF, or CATV channel, the display changes as follows each time you press DISPLAY.

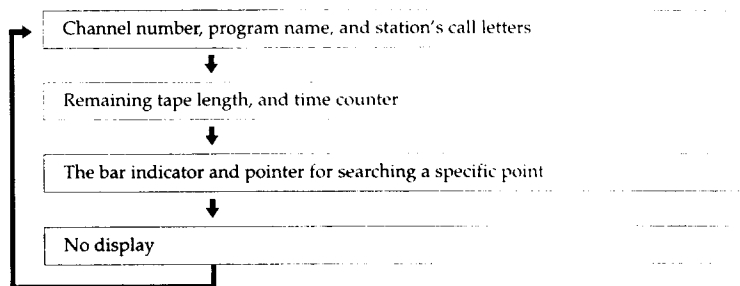


- If you want to return to the previous menu, highlight RETURN and press OK.

continued

Presetting channels (continued)

Presetting/disabling channels manually

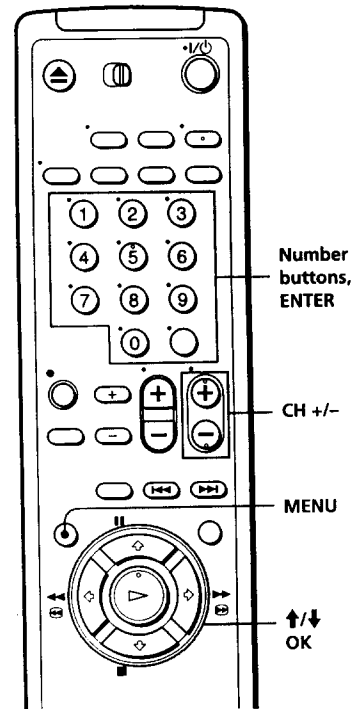


1

MENU




Press MENU, then press ↑/↓ to highlight SETTINGS and press OK.

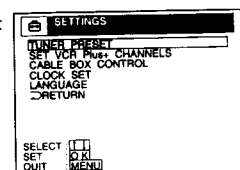


2



Press \uparrow/\downarrow to highlight TUNER PRESET, then press OK.

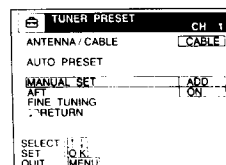

3

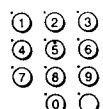


• To preset a channel:

1 Press the number buttons to enter the channel number, then press ENTER.

2 Press OK.

3 Press \uparrow/\downarrow to set MANUAL SET to ADD, then press OK.

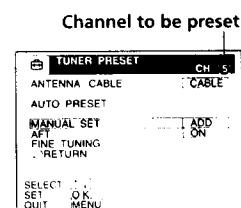

• CH




• To disable a channel:

1 Press CH +/- to select the channel number.

2 Press OK.

3 Press \uparrow/\downarrow to set MANUAL SET to ERASE, then press OK.

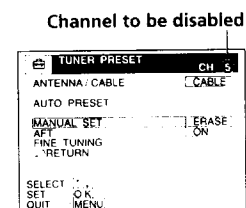

4



Repeat step 3 to preset or disable channels as required, then press MENU.

Tip


- If you want to return to the previous menu, highlight RETURN and press OK.

continued

Presetting channels (continued)

If the picture is not clear

Normally, the Auto Fine Tuning (AFT) function automatically tunes in channels clearly. If, however, the picture of a channel is not clear, you can also use the manual tuning function.

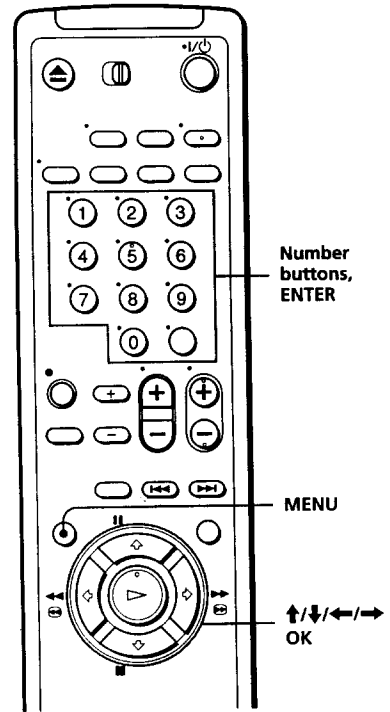


1

MENU




Press MENU, then press \uparrow/\downarrow to highlight SETTINGS and press OK.

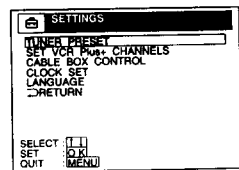


2



Press \uparrow/\downarrow to highlight TUNER PRESET, then press OK.

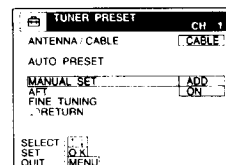


3

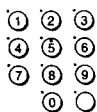

Press the number buttons to select the channel you want to fine-tune, then press ENTER.

Selected channel

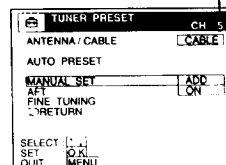


4



Press \uparrow/\downarrow to highlight FINE TUNING, then press OK.

The fine tuning meter appears.

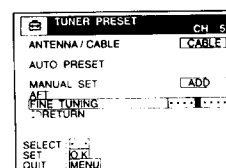


5



Press \leftarrow/\rightarrow to adjust to a clearer picture, then press OK.

Note that the AFT setting switches to OFF.

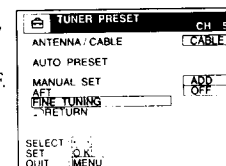

6



Press MENU to exit the menu.

Tips

- To select the channel on step 3 above, you can also use the CH +/- buttons. In this case, you don't need to press ENTER.
- If you want to return to the previous menu, highlight RETURN and press OK.

Note

- When adjusting FINE TUNING, the menu may become difficult to read due to interference from the picture being received.

Setting up the VCR Plus+ GOLD system

How the VCR Plus+ GOLD system works

Whenever you want to record a TV program, all you need to do is look up the "PlusCode" number, a number assigned to each program published in the TV section of most newspapers, cable TV listings, and even *TV GUIDE* magazine. Then, just enter the PlusCode number of the program you want and the VCR is automatically programmed to record that show. It's that simple.

Example of "PlusCode"

		PlusCode
5:30	14 MOVIE — Musical (2hrs.)	33044
	2 SPORT — Golf (1hr. 25min.) 42060	
	CNN — WS 9974	
6:30	2 3 4 DRAMA — Comedy (2hrs.) 17390	
	5 SCIENCE AND TECHNOLOGY (1hr. 15min.) 73457	

How to set up your VCR

Setting up your VCR involves coordinating the TV channel number (the number you turn to on your TV or VCR to watch a program) with the guide channel (the number that's assigned to that channel in your program guide).

The VCR can set the guide channels automatically (see page 59), but you may have to set the guide channels manually depending on your area or the way you hooked up your VCR (see page 62).


To find the guide channel numbers, look at the "Channel Line-up Chart" in the program guide for your area that features VCR PlusCodes. It usually looks like the example to the right.

Example of "Channel Line-up Chart"

CABLE CH	CABLE TV	VCR Plus+ GUIDE CH
16	AMC American Movie Classics	35
17	BRV Bravo (program grid only)	54
20	CNN Cable News Network	42
21	CSP C-SPAN	28
22	DIS The Disney Channel	53
25	DSO The Discovery Channel	37
34	ESN ESPN	34
35	FAM The Family Channel	47
5	HBO Home Box Office	33
27	LIF Lifetime	46
29	MAX Comedy	45
30	MTV Music Television	48
31	NIK Nickiodeon	38
38	SC Sports Channel	59
39	SCA Sports Channel America	70
45	SHO Showtime	41
17	TBS TBS SuperStation	43
44	TMC The Movie Channel	58
49	TNN The Nashville Network	49
50	TNT Turner Network Television	52
51	USA USA Network	44


Setting up the VCR Plus+ GOLD system automatically (Smart Channel Mapping)

The VCR can automatically set the guide channels in your area from ZIP/POSTAL CODE you entered in EASY SET UP. The VCR receives the program information signal and renews the data everyday after you complete the following procedure.

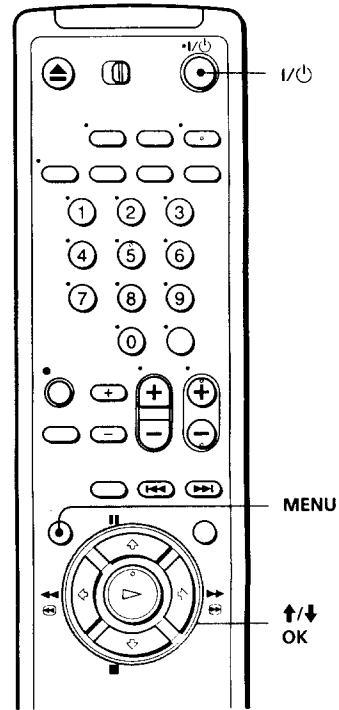

1 Set up the VCR using the EASY SET UP function.

2 Press MENU, then press \uparrow/\downarrow to highlight SETTINGS and press OK.

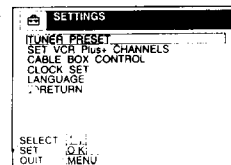


continued

Setting up the VCR Plus+ GOLD system (continued)

3



Press \uparrow/\downarrow to highlight SET VCR Plus+ CHANNELS, then press OK.
The SMART CHANNEL MAPPING menu appears.

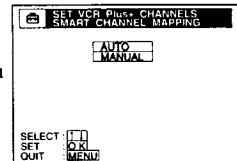


4




Press \uparrow/\downarrow to highlight AUTO, then press OK.

The instruction shown on the right appears on the TV screen for few seconds, then the screen returns to the normal display.

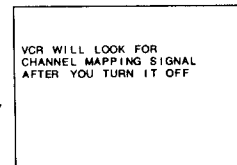

If the program information signal in your area has several channel map patterns, the CHOOSE YOUR CABLE CH MAP menu appears, and you must select the channel map. See "To select the channel map" below.

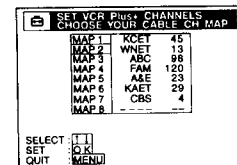

5



Press I/O to turn off the VCR.

The VCR sets the program guide channels from 0:00 am to 5:00 am while the VCR is turned off. (It takes about 1 hour to complete channel mapping.)

Tip

- If you want to return to the previous menu, highlight RETURN and press OK.

To select the channel map

If the program information signal in your area has several channel map patterns (up to 8), the CHOOSE YOUR CABLE CH MAP menu appears:

- the first time you turn on the VCR after completing channel mapping
- after selecting AUTO and pressing OK on the SMART CHANNEL MAPPING menu

In this case, you have to select the channel map on the CHOOSE YOUR CABLE CH MAP menu.

- 1 Find the VCR Plus+ GOLD system Channel Listing in your program guide. For details, see page 58.
- 2 Press \uparrow/\downarrow to highlight the channel map number you want by checking the channel number in the program guide.
- 3 Press OK.

Notes

- It takes about 1 hour to complete channel mapping.
- The VCR can receive the program information signal only while the VCR is turned off and no timer recordings are set.
- The VCR cannot set the guide channels correctly unless you enter the ZIP/POSTAL CODE in your area.
- When you move to a different area, you must set up the VCR again and enter your new ZIP/POSTAL CODE in the EASY SET UP procedure.

Channel map number		Station ID	
SET VCR PLUS CHANNELS CHOOSE YOUR CABLE CH MAP			
MAP 1	KAET	25	
MAP 2	WVUE	13	
MAP 3	ABC	18	
MAP 4	FAM	120	
MAP 5	ASE	20	
MAP 6	KAET	20	
MAP 7	CBS	4	
MAP 8			
SELECT (1) OK SET OK QUIT MENU			
		Channel number	

Channel number


Getting Started

continued

Setting up the VCR Plus+ GOLD system (continued)

Setting up the VCR Plus+ GOLD system manually


To set the guide channels, use the Channel Line-up Chart to check that the guide channel numbers match the TV channel your VCR receives. For example, if HBO is listed in the Channel Line-up Chart on channel 33, and your VCR receives HBO on channel 5, you need to coordinate these numbers using the following procedure. If the guide and TV channel numbers are the same, you can skip this procedure.

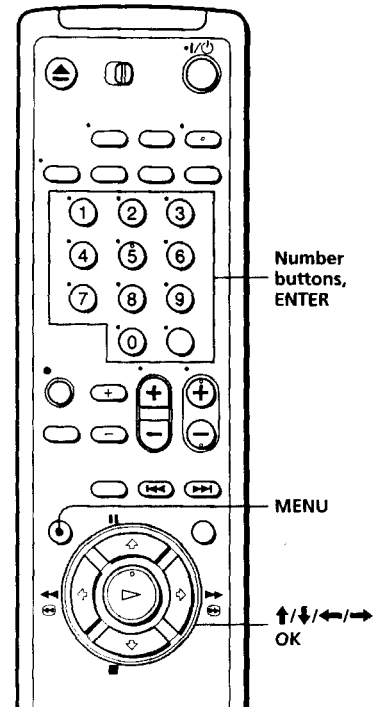

1


MENU

Press MENU, then press \uparrow/\downarrow to highlight SETTINGS and press OK.

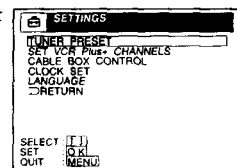

2


Press \uparrow/\downarrow to highlight SET VCR Plus+ CHANNELS, then press OK.

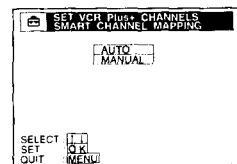


3




Press \uparrow/\downarrow to highlight MANUAL, then press OK.

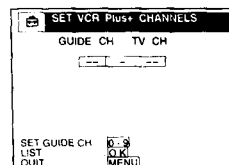


4

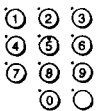


Enter the guide channel number assigned in the program guide and press ENTER.

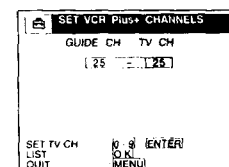


5

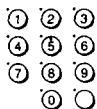

- If you made Hookup 1, 2 or 3: Enter the actual number on your TV (and VCR) and press ENTER.

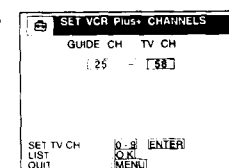

- If you made Hookup 4: Enter the cable box output channel (usually 2, 3 or 4) and press ENTER.
- If you made Hookup 6: Enter the actual number on your TV (and VCR) for an unscrambled channel and press ENTER. For a scrambled channel, enter the cable box output channel (usually 2, 3, or 4) and press ENTER.

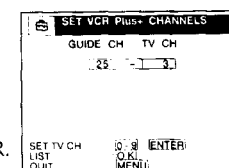

6

Repeat steps 3 and 4 for each channel number that does not match.

continued

Setting up the VCR Plus+ GOLD system (continued)

7



When you have set all channels, press OK to confirm your channel settings.

To return to the previous page, press ←.

To go to the next page, press →.

VCR Plus+ CHANNEL LIST			
PAGE 1		PAGE 1	
GUIDE	TV	GUIDE	TV
2 - 73		66 - 48	
5 - 25		68 - 59	
17 - 5		71 - 83	
25 - 58		74 - 123	
34 - 115		79 - 6	
39 - 68		82 - 100	
43 - 7		85 - 98	
48 - 12		88 - 52	
52 - 55		91 - 30	
59 - 36		93 - 87	
PAGE		QUIT	
		MENU	

8




After all settings are complete, press MENU to exit the menu.

Tip

- If you want to return to the previous menu, highlight RETURN and press OK.

Playing a tape

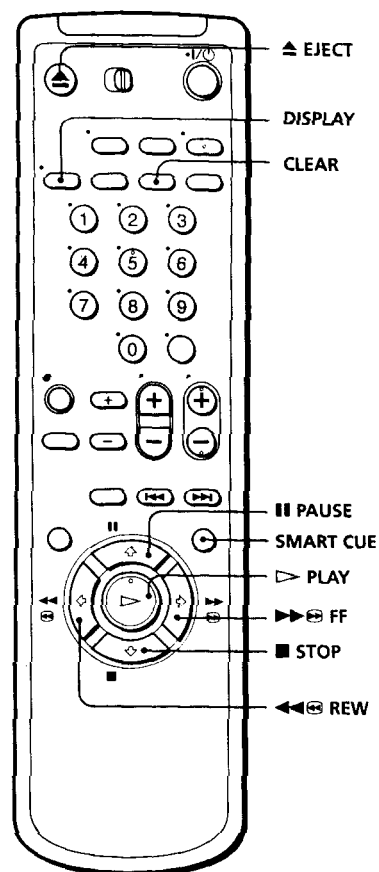

Basic Operations

- 1** Turn on your TV and set it to the video channel.
- 2** Insert a tape.
The VCR turns on and starts playing automatically if you insert a tape with its safety tab removed.



continued

Playing a tape (continued)



 



3



Press  PLAY.

When the tape reaches the end, it will rewind automatically.

Additional tasks

 To	Press
Stop play	■ STOP
Pause play	PAUSE
Resume play after pause	PAUSE or  PLAY.
Fast-forward the tape	  FF during stop
Rewind the tape	  REW during stop
Eject the tape	 EJECT

To skip playback


You can skip a portion of playback you don't want to watch such as a commercial and restart playback by pressing a single button.

- 1 Press SMART CUE during playback of the scene you want to skip. The VCR starts searching.
- 2 Press SMART CUE again when you find the scene you want to watch. The VCR stops searching, rewinds a few seconds, then resumes normal playback.

If you press and hold SMART CUE while the VCR is skip searching, the VCR will stop searching, and continue rewinding until you release SMART CUE.

To use the time counter

At the point on the tape that you want to find later, press CLEAR. The counter in the display window resets to "0:00:00." Search for the point afterwards by referring to the counter.

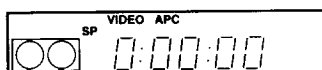


To display the counter on the TV screen, press DISPLAY.

Notes

- Tapes recorded in the LP mode on other VCRs can be played back on this VCR but the picture quality cannot be guaranteed.
- While setting the menu on the TV screen, you cannot use ▷ PLAY, || PAUSE, ⏮ FF, ⏪ REW, or ■ STOP buttons.
- The counter resets to "0:00:00" whenever a tape is reinserted.
- The counter stops counting when it comes to a portion with no recording.

Recording TV programs

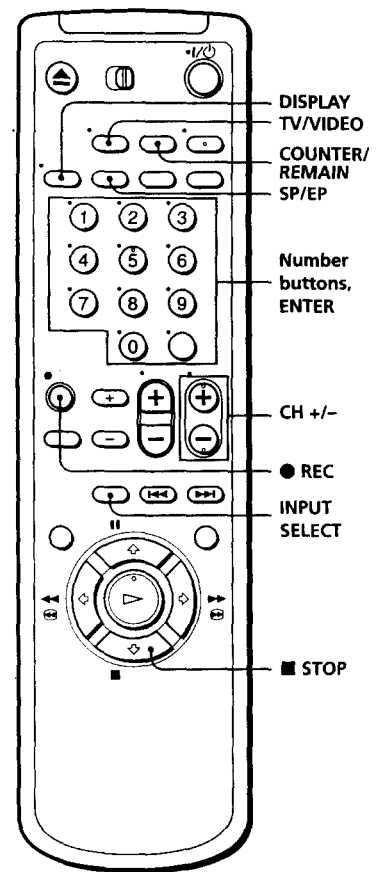


- 1** Turn on your TV and set it to the video channel.
To record from a cable box, turn it on.
- 2** Insert a tape with its safety tab in place.

3




Press INPUT SELECT until a channel number appears in the display window.

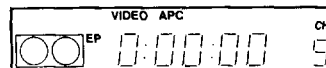

4



Press CH +/- to select the channel you want to record.

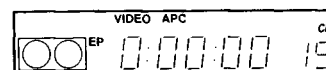


5



Press SP / EP to select the tape speed, SP or EP.

EP (Extended Play) provides recording time three times as long as SP (Standard Play), however, SP produces better picture and audio quality.

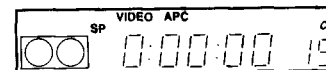


6



Press ● REC to start recording.

The recording indicator lights up red in the display window.

Recording indicator

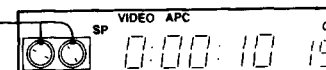

To stop recording

Press ■ STOP.


Basic Operations

continued

Recording TV programs (continued)

To check the remaining tape length

Press DISPLAY. The remaining tape length and the time counter appear on the TV screen. Each time you press COUNTER/REMAIN, the time counter and the remaining tape length with the Ⓢ indicator appear alternately in the display window.

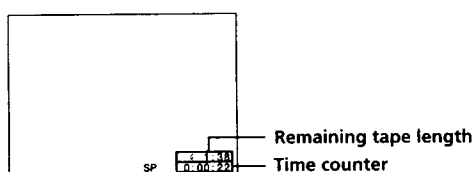

To check the remaining time of a T-140 or T-180 tape, set TAPE SELECT in the ADVANCED OPTIONS menu to 180. (For details, see page 101.)

To watch another TV program while recording

- 1 Press TV/VIDEO to turn off the VIDEO indicator in the display window.
- 2 If the TV is connected to the VCR's LINE OUT jacks, set the TV to TV input; if not, skip this step.
- 3 Select another channel on the TV.

To select the channel using the shuttle ring

To select a channel in step 4 above, you can also use the shuttle ring. During stop, turn the shuttle ring clockwise for higher channels or counterclockwise for lower channels. The VCR switches the channel in the preset order.

To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on a tape again, cover the tab hole with adhesive tape.



Tips

- To select a channel, you can use the number buttons on the remote commander. Enter the channel number, then press ENTER.
- You can select a video source from the LINE-1 IN or LINE-2 IN jacks using the INPUT SELECT button.
- The display appears on the TV screen indicating information about the tape, but the information won't be recorded on the tape.
- If you don't want to watch TV while recording, you can turn off the TV. When using a cable box, make sure to leave it on.

Notes


- The remaining tape length may not be indicated accurately for short tapes such as T-20 or T-30, or tapes recorded in the LP mode.
- The display does not appear during still (pause) mode or slow-motion playback.
- It may take up to one minute for the VCR to calculate and display the remaining tape length after you press DISPLAY.

Locating a channel by Station ID


You can select the TV program from station ID.

Before you start...


- Set FAVORITE CH to OFF in the ADVANCED OPTIONS menu (page 101).

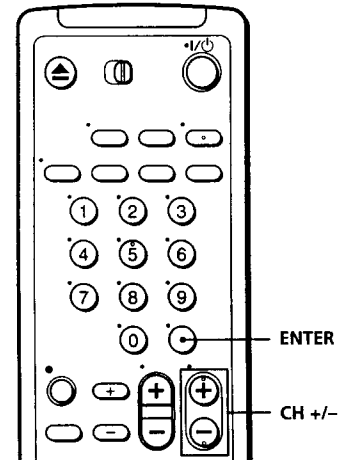

- 1 Turn on your TV and set it to the video channel.
To record from a cable box, turn it on.


- 2  Press ENTER.
The station ID appears on the TV screen.

3	ABC
9	DEF
10	GHI
12	JKL
13	MNO
16	PQR
19	STU
22	VWX
43	YZA
45	BBB

- 3  Press CH +/- to select the station ID you want.

The selected station ID

3	ABC
9	DEF
10	GHI
12	JKL
13	MNO
16	PQR
19	STU
22	VWX
43	YZA
45	BBB

- 4  Press ENTER.

Note


- If the TV channel has no station ID, the channel number appears on the TV screen.

Recording TV programs using the VCR Plus+ GOLD system

Just enter the PlusCode number listed in the TV program guide. The date, time and channel number of that program are set automatically. You can preset up to eight programs at a time.


Before you start...

- Check that the VCR clock is set to the correct time.
- Turn on your TV and set it to the video channel. When using a cable box, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.

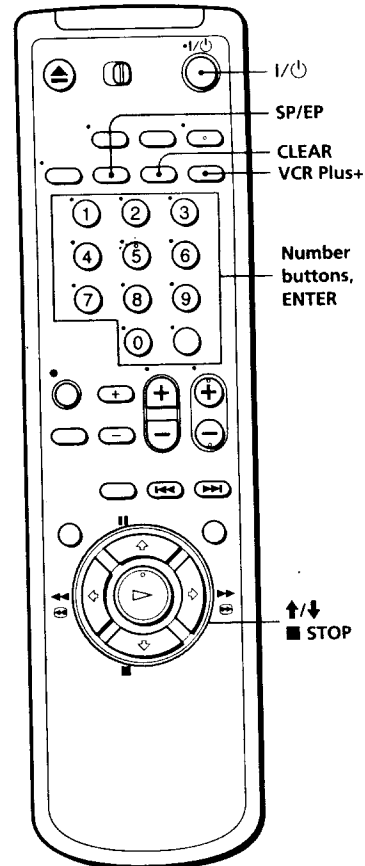


Basic Operations


- 1 **VCR Plus+** Press VCR Plus+.

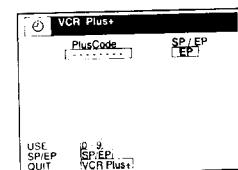



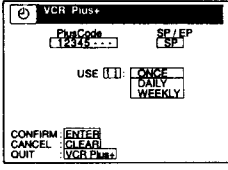
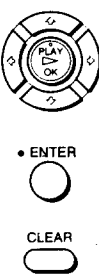


continued

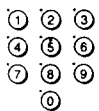Recording TV programs using the VCR Plus+ GOLD system (continued)

 
- 2**  Press the number buttons to enter the PlusCode number.

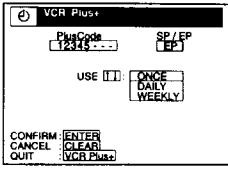

 If you make a mistake, press CLEAR and re-enter the correct number.



- 3**  Press SP/EP to select the tape speed, SP or EP.


- 4**  Press / to highlight ONCE, DAILY, or WEEKLY, then press ENTER:


To record	Select
Only once	ONCE
Everyday Monday to Friday	DAILY
Once a week	WEEKLY

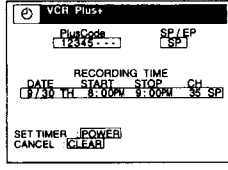 The date, start and stop time, channel number (or station ID), and tape speed appear on the TV screen. If the information is not correct, press CLEAR to cancel the setting.


- 5** To enter another setting, repeat steps 1 to 4.
- 6**  Press I/⏻ to turn off the VCR.

The  indicator appears in the display window and the VCR stands by for recording. When using a cable box, leave it on.

To stop recording

To stop the VCR while recording, press  STOP.

To use the VCR after setting the timer

To use the VCR before a timer recording begins, just press I/⏻. The ⏻ indicator disappears from the display window and the VCR switches on. Remember to press I/⏻ to reset the VCR to the timer recording standby mode after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter.
- Display tape information on the TV screen.
- Check the timer settings.
- Watch another TV program.

To lock the VCR after setting the timer (Child Lock)

While the VCR turns on, hold down I/⏻ POWER on the VCR until the ⏻ indicator appears in the display window. The VCR turns off and the ⏻ indicator remains lit. The VCR will not work except for timer recording.

To unlock the VCR, hold down I/⏻ POWER on the VCR until the ⏻ indicator disappears from the display window. The VCR is unlocked and turns on.

To stop timer recording while the VCR is locked, press ■ STOP. The recording stops and the VCR is unlocked.

Tips

- To cancel the VCR Plus+ GOLD system recording, press VCR Plus+ before pressing ENTER in step 4 above.
- When you are recording a program in the SP mode and the remaining tape becomes shorter than the recording time, the tape speed is automatically changed to the EP mode. Note that some noises will appear on the picture when the tape speed is changed. If you want to keep the tape speed, set AUTO TAPE SPEED to OFF in the ADVANCED OPTIONS menu (page 101).

Notes


- If the VCR does not accept the PlusCode number, this means that:
 - The PlusCode number is incorrect.
 - ONCE, DAILY, or WEEKLY was selected incorrectly. You cannot select DAILY or WEEKLY for a program that airs more than seven days ahead.
- The VCR will be unlocked when:
 - you stop timer recording by pressing ■ STOP
 - you insert a tape
 - the AC power cord is disconnected or power supply stops.
- The station ID appears on the TV screen only when you complete Smart Channel Mapping and the VCR receives the program information signal (see page 59).

Setting the timer manually

If the VCR Plus+ GOLD system is not available in your area, follow the instructions below to set the timer to record programs.

Before you start...

- Check that the VCR clock is set to the correct time.
- Turn on your TV and set it to the video channel. When using a cable box, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.

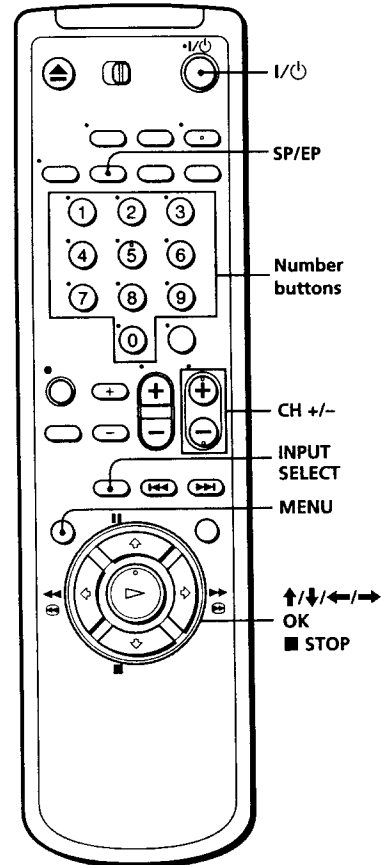


1

MENU



Press MENU, then press \uparrow/\downarrow to highlight TIMER SET/CHECK and press OK.

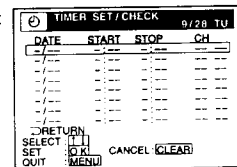

Press **↑/↓** to highlight the line that is to be set, then press **OK**.




Set the date, start and stop time, channel number and tape speed:



1 Press \uparrow/\downarrow to set each item.

2 Press **→** to highlight and set each item in turn.

To correct a setting, press **←** to return to that setting and reset.

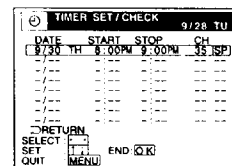

When you set the channel number, the station ID may appear in the "CH" position. You can set it while checking the station ID.

To record the same program every day or the same day every week, press **↓** while the date is highlighting. For details, see “Daily / weekly recording” below.



To record from a source connected to the LINE-1 IN or LINE-2 IN jacks, press INPUT SELECT to display "L1" or "L2" in the "CH" position.

Press OK to confirm the setting.



To enter another setting, highlight to the next line and repeat step 3.

MENU



Press **MENU** to exit the menu.

- 1/0



Press **I/⏻** to turn off the VCR.

The indicator appears in the display window and the VCR stands by for recording.

• When using a cable box, leave it on.

continued

Setting the timer manually (continued)

To stop recording

To stop the VCR while recording, press ■ STOP.

Daily/weekly recording

In step 3 above, press ↓ to select the recording pattern. Each time you press ↓, the indication changes as shown below. Press ↑ to change the indication in reverse order.

the current date → SU-SA → MO-SA → MO-FR → EVERY SA → →
EVERY MO → EVERY SU → 1 month later → (dates count down) → the
current date

To use the VCR after setting the timer

To use the VCR before a timer recording begins, just press I/⏻. The Ⓢ indicator disappears from the display window and the VCR switches on. Remember to press I/⏻ to reset the VCR to the timer recording standby mode after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter.
- Display tape information on the TV screen.
- Check the timer settings.
- Watch another TV program.

To lock the VCR after setting the timer (Child Lock)

While the VCR turns on, hold down I/⏻ POWER on the VCR until the Ⓢ indicator appears in the display window. The VCR turns off and the Ⓢ indicator remains lit. The VCR will not work except for timer recording.

To unlock the VCR, hold down I/⏻ POWER on the VCR until the Ⓢ indicator disappears from the display window. The VCR is unlocked and turns on.

To stop timer recording while the VCR is locked, press ■ STOP. The recording stops and the VCR is unlocked.


Tips

- To set the channel, you can also use the CH+/- or number buttons.
- You can set the channel with the shuttle ring during stop.
- To set the tape speed, you can also use the SP/EP button.
- When you are recording a program in the SP mode and the remaining tape becomes shorter than the recording time, the tape speed is automatically changed to the EP mode. Note that some noises will appear on the picture when the tape speed is changed. If you want to keep the tape speed, set AUTO TAPE SPEED to OFF in the ADVANCED OPTIONS menu (page 101).
- If you want to return to the previous menu and continue with other operations after setting the timer, press \downarrow to highlight RETURN, then press OK.
The display returns to the MENU screen.
If you are finished using the VCR, turn off the power before the timer recording starts.

Notes

- If you are using cable box control, you cannot select "L1" or "L2".
- The station ID appears on the TV screen only when you complete Smart Channel Mapping and the VCR receives the program information signal (see page 59).

Playing/searching at various speeds

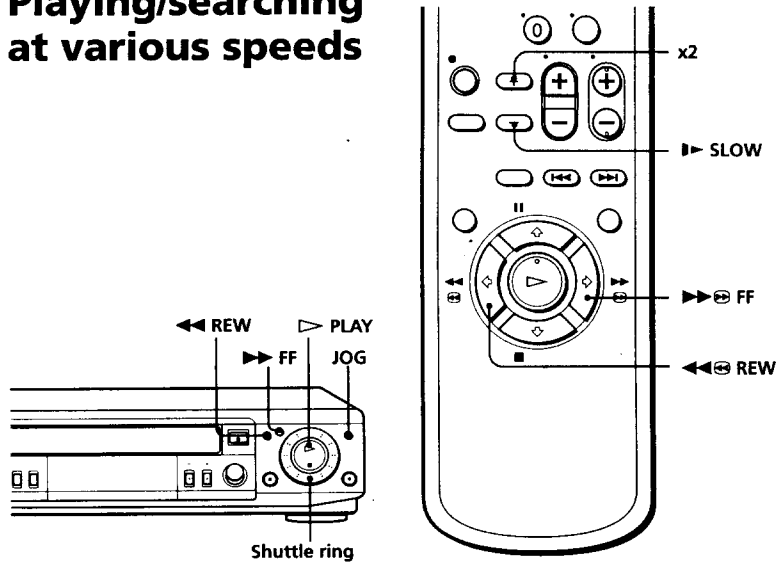

Playback options	Operation
View the picture during fast-forward or rewind	During fast-forward, hold down ►► FF/►► FF. During rewind, hold down ◄◄ REW/◄◄ REW.
Play at high speed	<ul style="list-style-type: none"> During playback, press ►► FF or ◄◄ REW <u>on the remote commander</u>. During playback, hold down ►► FF/►► FF or ◄◄ REW/◄◄ REW. When you release the button, normal playback resumes.
Play at twice the normal speed	During playback, press x2.
Play in slow motion	During playback or pause, press ►► SLOW.
Play frame by frame	During pause, press ►► FF or ◄◄ REW <u>on the remote commander</u> . Hold down the button to play one frame each second.
Rewind and start play	During stop, press ►► PLAY <u>on the VCR</u> while holding down ◄◄ REW <u>on the VCR</u> .

To resume normal playback


Press ►► PLAY.

Using the shuttle ring

With the shuttle ring, you can operate a variety of playback options. There are two ways for using the shuttle ring, normal mode and jog mode.

To use the shuttle ring in normal mode

During playback or pause, turn the shuttle ring clockwise or counterclockwise. Each change in the shuttle ring position changes the playback mode in the following way.

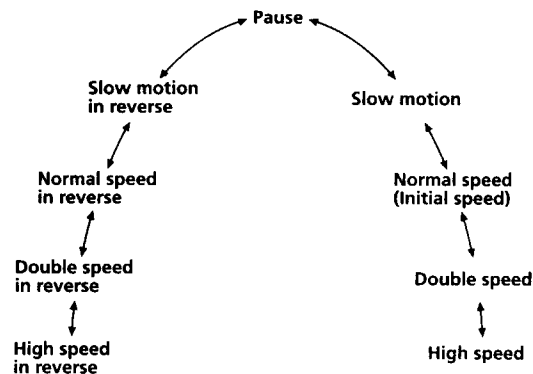

To use the shuttle ring in jog mode

Use this mode for frame-by-frame playback.

Press JOG to enter the jog mode. The JOG button lights up. If you change to the jog mode during any playback mode, the playback pauses so you can see a still picture. Each change in the shuttle ring position shifts the picture one frame. To shift frames in reverse, turn the shuttle ring counterclockwise. The frame shift speed depends on the speed you turn the shuttle ring. To resume normal playback, press JOG again. The JOG button goes off.

continued

Playing/searching at various speeds (continued)

Tip


- Adjust the picture using the TRACKING +/- buttons if:
 - Streaks appear while playing in slow motion.
 - The picture shakes while pausing.
- To set tracking to the center position, press both buttons (+/-) at the same time.

Notes



- The sound is muted during these operations.
- Tapes recorded in the LP mode on other VCRs can be played back on this VCR but the picture quality cannot be guaranteed.
- The picture may have snow:
 - when playing at high speed in reverse
 - when playing in reverse slow motion
 - when playing in reverse

Searching for a selected point on the tape

You can easily find a specific point by moving the pointer on the TV screen. The VCR fast-forwards or rewinds to the point you indicate and starts playback automatically.

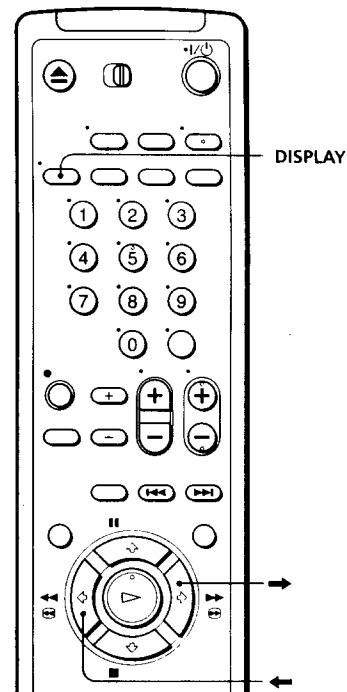

- 1 Press DISPLAY repeatedly until the bar indication appears on the TV screen.
A cursor (■) indicating the current position of the tape appears on the bar indication. If the cursor does not appear, play the tape a few moments (by pressing ▷ PLAY, ►► FF, or ◀◀ REW) until the cursor appears.
- 2 Press ◀/▶ to move the pointer (▽) to the point where you want to start playback.
The VCR starts searching and the cursor (■) moves toward the pointer. When the VCR locates the marked point, playback starts.

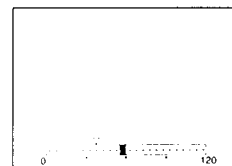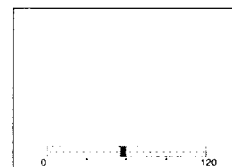

continued

Searching for a selected point on the tape (continued)

To cancel searching

Press ▷ PLAY or ■ STOP.

To turn off the bar indication

Press DISPLAY again.

Notes


- The figure on the bar indication represents the total time length of the inserted tape as shown below.
The total time length may not be displayed correctly for:
 - tapes other than T-60, T-120, or T-160
 - tapes recorded in more than one tape speed mode.

Tape type	Total time length		
	SP	LP	EP
T-60 or shorter	60	120	180
from T-80 to T-140	120	240	360
T-160 or longer	160	320	480

- If you move the pointer (▼) on the bar indication during search, the VCR searches for the new reset point.
- With the bar indication on, the ►►⏏ FF/► and ◀◀⏏ REW/◀ buttons on the remote commander work only for moving the pointer (▼), while the ►► FF and ◀◀ REW buttons on the VCR are used for normal tape operation. Note, however, if you press these buttons on the VCR, searching is canceled.



Skip-searching automatically

You can spot check a whole tape quickly. At intervals, the VCR skips playback while searching forward or backward.

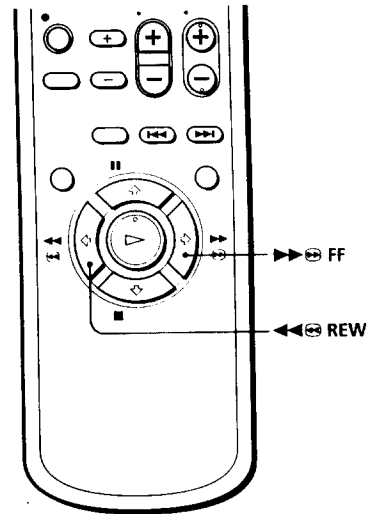

Hold down **FF** (or **REW**) for more than two seconds during stop. "SKIP" indicator appears on the TV screen.

The VCR searches forward (or backward) for about two minutes on the counter, then fast-forwards (or rewinds) for about ten minutes on the counter. The VCR repeats this operation until it stops at the end (or beginning) of the tape.

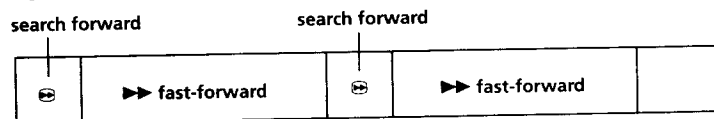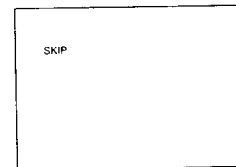

To cancel skip-search

Press **PLAY** or **STOP**.

Note


- The VCR automatically fast-forwards (or rewinds) any portion with no recording.

Creating a favorite channel list with Station ID


You can create your favorite channel list of the TV channels with Station ID. You can store up to 10 channels with Station ID and select the channel from your favorite channel list.

Before you start...


- Set FAVORITE CH to ON in the ADVANCED OPTIONS menu (page 101).

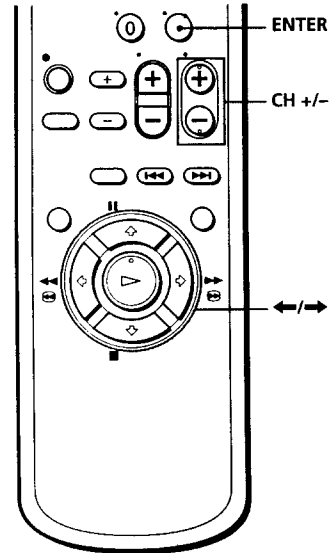

Creating your favorite channel list

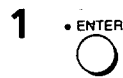

Press ENTER.
The FAVORITE CH screen appears on the TV screen.

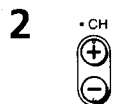

Press CH +/- to select the station ID you want to replace.

The selected station ID

FAVORITE CH	
12	ABC
15	ABC
9	ABC
13	ABC
19	ABC
3	ABC
45	ABC
43	ABC
22	ABC
10	ABC



Press ←/→ to select the station ID you want to set.

FAVORITE CH	
12	ABC
15	ABC
27	ABC
13	ABC
19	ABC
3	ABC
45	ABC
43	ABC
22	ABC
10	ABC

4

Repeat steps 2 and 3 to set the station IDs as required.

5

• ENTER




Press ENTER.


continued

Creating a favorite channel list with Station ID (continued)


Selecting a channel from your favorite channel list

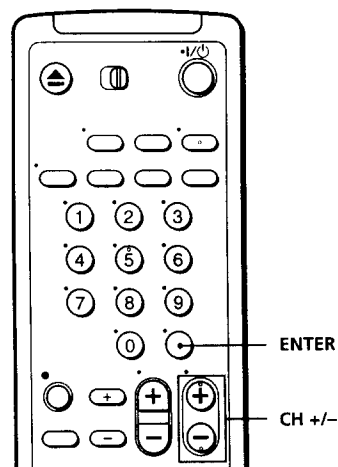

- 1 Turn on your TV and set it to the video channel.
To choose a channel from a cable box, turn the cable box on.


- 2  Press ENTER.
Your FAVORITE CH screen appears on the TV screen.

FAVORITE CH	
12	ABC
15	DEF
27	GHI
13	JKL
19	MNO
3	PQR
45	STU
43	VWX
22	YZ
10	ABC

- 3  Press CH +/- to select the station ID you want to select.

The selected station ID


FAVORITE CH	
12	ABC
15	DEF
27	GHI
13	JKL
19	MNO
3	PQR
45	STU
43	VWX
22	YZ
10	ABC

- 4  Press ENTER.

Note

- If the TV channel has no station ID, the channel number appears on the TV screen.

Recording TV programs using the dial timer

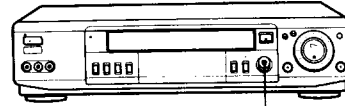

DIAL TIMER



The Dial Timer function allows you to make timer recordings of programs without turning on your TV. Set the recording timer to record up to eight programs that will be broadcast within the next 24 hours using the DIAL TIMER. The recording start time and recording stop time can be set at 15 minute intervals.

Before you start...

- Check that the VCR clock is set to the correct time.
- When using a cable box, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.


1 Press DIAL TIMER.

"START" and the recording start time appear alternately in the display window.

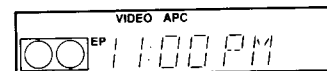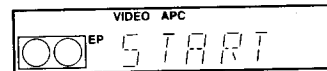

2 Turn DIAL TIMER to set the recording start time.

The time changes in 15 minute intervals.


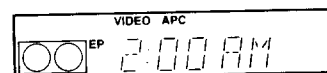


continued

Recording TV programs using the dial timer (continued)


3 Press DIAL TIMER.

"STOP" and the recording stop time appear alternately in the display window.

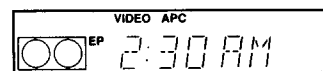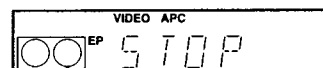

4 Turn DIAL TIMER to set the recording stop time.

The time changes in 15 minute intervals.

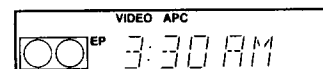


5 Press DIAL TIMER.

The channel number or station ID appears in the display window.



6 Turn DIAL TIMER to set the channel.

To record from a source connected to the LINE-1 IN or LINE-2 IN jacks, press INPUT SELECT to display "L1" or "L2".

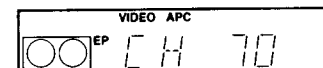

7 Press DIAL TIMER to complete the setting.

"OK" appears in the display window for about five seconds.

The Ⓢ indicator appears in the display window and the VCR stands by for recording. When using a cable box, leave it on.

To stop recording

To stop the VCR while recording, press ■ STOP.

To use the VCR after setting the timer

To use the VCR before a timer recording begins, just press I/⏻. The ⊕ indicator disappears from the display window and the VCR switches on. Remember to press I/⏻ to reset the VCR to the timer recording standby mode after using the VCR.

Tips


- The program is recorded in the current tape speed. To change the tape speed, press SP/EP before you complete the setting in step 7.
- To check, change, or cancel the program setting, see "Checking/changing/canceling timer settings" (page 93).

Notes


- If eight programs have already been set in step 1, "FULL" appears in the display window for about three seconds.
- If you are using cable box control, you cannot select "L1" or "L2."
- The ⊕ indicator flashes in the display window when you complete the setting in step 7 with no tape inserted.
- If "CLOCK" and "12: -- AM" appear alternately when you press the DIAL TIMER control, set the clock to use the Dial Timer function (page 37).

Setting the recording duration time


After starting recording in the normal way, you can have the VCR stop recording automatically after a specified duration.

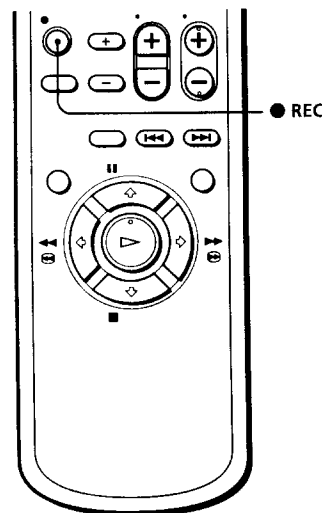

- 1 While recording, press ● REC.
The ⊖ indicator appears in the display window.

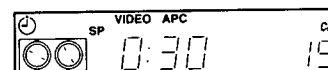

- 2 Press ● REC repeatedly to set the duration.
Each press advances the time in increments of 30 minutes.

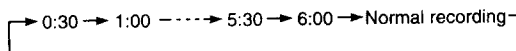

The tape counter decreases minute by minute to 0:00, then the VCR stops recording and turns off automatically.

To extend the duration

Press ● REC repeatedly to set a new duration.

To cancel the duration

Press ● REC repeatedly until ⊖ indicator disappears and the VCR returns to normal recording mode.

To stop while recording

Press ■ STOP.


Note

- You cannot display the current tape time in the display window when setting the recording duration.

Checking/ changing/ canceling timer settings

Before you start...

- Turn on your TV and set it to the video channel.

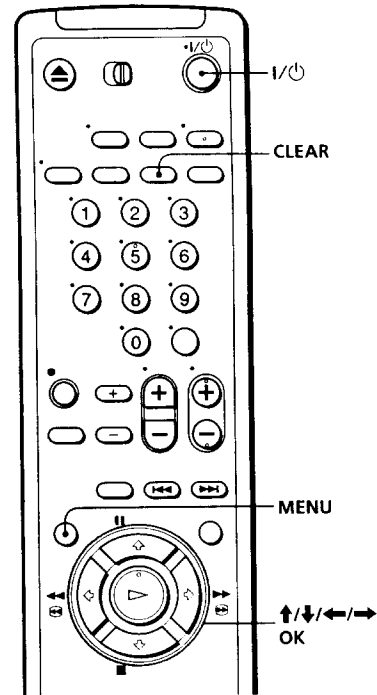

- 1 Press I/⏻ to turn on the VCR.
- 2 Press MENU, then press ↑/↓ to highlight TIMER SET/CHECK and press OK.
 - If you want to change a setting, go on to the next step.
 - If you do not need to change the settings, press MENU, then turn off the VCR to return to recording standby.


continued

-
- TIMER SET/CHECK** 9/28 TU
- | DATE | START | STOP | CH |
|----------|---------|---------|-------|
| 9:30 TH | 8:00PM | 9:00PM | 35 SP |
| 10:7 PA | 10:00AM | 11:30AM | 20 EP |
| MO FR | 2:00PM | 3:00PM | 60 EP |
| EVERY SU | 6:30AM | 7:00AM | 42 EP |
| --/-- | --/-- | --/-- | -- EP |
| --/-- | --/-- | --/-- | -- EP |
| --/-- | --/-- | --/-- | -- EP |
| --/-- | --/-- | --/-- | -- EP |
-

If any timer settings remain, turn off the VCR to return to recording standby.

When the timer settings overlap

The program that starts first has priority and the second program starts recording only after the first program has finished. If the programs start at the same time, the program listed first in the menu has priority.

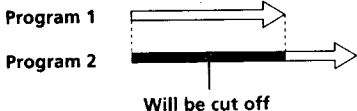

Recording stereo and bilingual programs

Recording stereo programs

This VCR automatically receives and records stereo programs. When a stereo program is received, the STEREO indicator lights up. If there is noise in the stereo program, set AUTO STEREO in the ADVANCED OPTIONS menu to OFF. The sound will be recorded in monaural (on both hi-fi and normal audio tracks) but with less noise. For details, see page 100.

Recording bilingual programs

Normally, this VCR records only the main sound. When a SAP (Second Audio Program) is received, the SAP indicator lights up. To record only SAP sound, set TUNER AUDIO in the ADVANCED OPTIONS menu to SAP. For details, see page 100.

Selecting the sound during playback

Press AUDIO MONITOR to select the sound you want. (The sound being recorded will not change.)


To listen to	On-screen display	Display window
Stereo	STEREO	STEREO
Left channel	L	STEREO
Right channel	R	STEREO
Monaural sound on the normal audio track	No indicator	No indicator

continued

Recording stereo and bilingual programs (continued)

How sound is recorded on a video tape

The VCR records sound onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

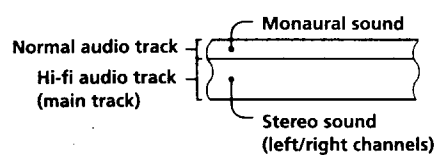


Notes

- To play a tape in stereo, you must use the A/V connections.
- When you play a tape recorded in monaural, the sound is heard in monaural regardless of the AUDIO MONITOR setting.

Searching using the index function

The VCR marks the tape with an index signal at the point where each recording begins. Use these signals as references to find a specific recording.

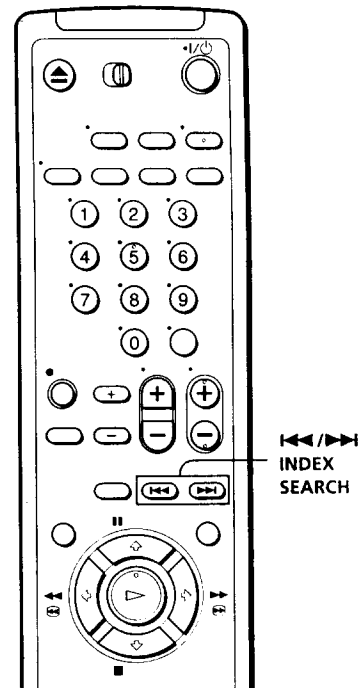

- 1 Insert an indexed tape into the VCR.
- 2 Press **◀◀/▶▶** INDEX SEARCH.
 - To search ahead, press **▶▶** INDEX SEARCH.
 - To search backwards, press **◀◀** INDEX SEARCH.


The VCR starts searching, and playback starts automatically from that point.

To stop searching

Press **■** STOP.


Note


- No index signal will be added when recording starts from recording pause. However, an index signal will be marked if you change the program position during recording pause.

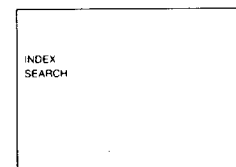


Adjusting the picture

Adjusting the tracking

Although the VCR automatically adjusts the tracking when playing a tape (the  indicator flashes in the display window, then goes off), distortion may occur if the tape was recorded in poor condition. In this case, manually adjust the tracking.

Press TRACKING +/- to display the tracking meter. The distortion should disappear as you press one of the two buttons (the  indicator lights up). To resume automatic tracking adjustment, eject the tape and reinsert it.

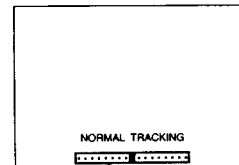


Tracking meter

About the Reality Regenerator function

The Reality Regenerator function automatically restores the picture to its original quality during playback.

To use the Reality Regenerator function, press REALITY REGENERATOR. The REALITY REGENERATOR indicator lights up.

To turn it off, press REALITY REGENERATOR. The REALITY REGENERATOR indicator goes off.

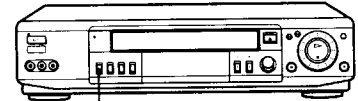

REALITY REGENERATOR

About the Adaptive Picture Control (APC) function

The Adaptive Picture Control (APC) function automatically improves recording and playback quality by adjusting the VCR to the condition of the video heads and tape. To maintain better picture quality, we recommend that you set APC to ON in the ADVANCED OPTIONS menu (with the APC indicator in the display window lit). For details, see page 100.

APC playback

The APC function automatically works on all types of tapes, including rental tapes and tapes that were not recorded with APC.

APC recording


Whenever you insert a tape and first start recording, the VCR adjusts to the tape using the APC function (the APC indicator flashes rapidly). This adjustment is retained until the tape is ejected.

Notes

- The auto tracking adjustment cannot be guaranteed to work with tapes recorded in the LP mode on other VCRs.
- The APC function does not work if the tape speed is automatically changed from the SP to EP mode during a timer recording when AUTO TAPE SPEED is set to ON in the ADVANCED OPTIONS menu, unless the tape has been recorded in the EP mode with the APC function.
- There is a delay of about ten seconds before the VCR actually starts recording while the VCR analyzes the tape. To avoid the delay, first set the VCR to recording pause (the APC indicator flashes slowly) and press ● REC to have the VCR analyze the tape (the APC indicator flashes rapidly). After the APC indicator stops flashing, press ■ PAUSE to start recording immediately.
If you want to start recording quickly without using the APC function, first set the VCR to recording pause (the APC indicator flashes slowly) and press ■ PAUSE to start recording.

Changing menu options

- 1 Press MENU, then select ADVANCED OPTIONS and press OK.

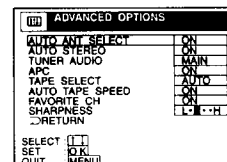

- 2 Press \uparrow/\downarrow to highlight the option to change, then press OK.
- 3 Press \uparrow/\downarrow to change the setting, then press OK.
To adjust the sharpness, press \leftarrow/\rightarrow and press OK.
- 4 Press MENU to return to the original screen.

Menu choices


Initial settings are indicated in bold print.

Menu option	Set this option to
AUTO ANT SELECT	<ul style="list-style-type: none"> • ON if your TV is connected only to VHF/UHF OUT on the VCR. To play a tape, set the TV to the VCR channel (channel 3 or 4). • OFF if your TV is connected to both VHF/UHF OUT and LINE OUT on the VCR. To play a tape, set the TV to the VCR input.
AUTO STEREO	<ul style="list-style-type: none"> • ON to receive stereo programs. • OFF to reduce noise. The sound changes to monaural.
TUNER AUDIO	<ul style="list-style-type: none"> • MAIN to record the main sound on both hi-fi and normal audio tracks. • SAP to record the SAP (Second Audio Program) sound on both hi-fi and normal audio tracks.
APC	<ul style="list-style-type: none"> • ON to switch on the APC (Adaptive Picture Control) function and improve picture quality. • OFF to switch off APC.

Menu option	Set this option to
TAPE SELECT	<ul style="list-style-type: none">• AUTO when using a T-160 length tape or any tape shorter than a T-140 length tape.• 180 when using a T-140 or T-180 length tape. For details, see page 70.
AUTO TAPE SPEED	<ul style="list-style-type: none">• ON to change the timer recording tape speed automatically to the EP mode when the remaining tape length becomes shorter than the recording time. To operate AUTO TAPE SPEED, set TAPE SELECT correctly.• OFF to keep the tape speed.
FAVORITE CH	<ul style="list-style-type: none">• ON when using favorite channel list.• OFF when using station ID list. For details, see pages 72 and 86.
SHARPNESS	L (Low) through H (High) to adjust the sharpness of the picture. L to turn off the sharpness control.

Editing with another VCR

How to hook up to record on this VCR

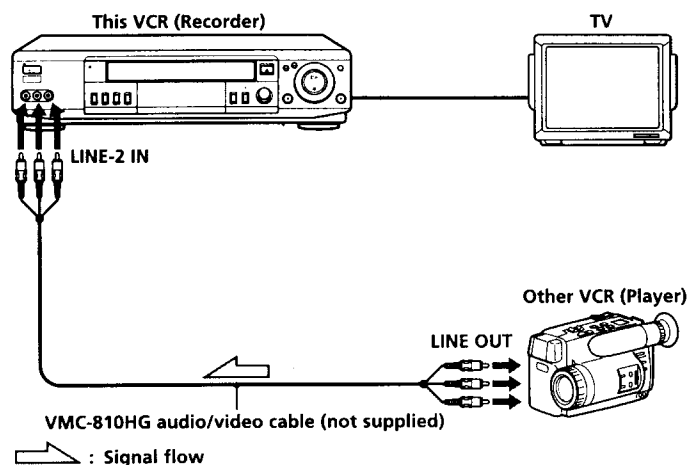

If the other VCR has a CONTROL S OUT jack for synchronized editing

Hook up to record on the other VCR, then connect the VCR's via the CONTROL S jacks. The CONTROL S connection lets you control (pause and release pause) both VCRs from the recording VCR.


Notes

- Make sure you connect the plugs to jacks of the same color.
- If the other VCR is a monaural type and connected to this VCR's LINE-2 IN jacks, connect the audio plug to the AUDIO L (white) jack. The sound is recorded on both right and left channels. When connecting to the AUDIO R (red) jack, the sound is recorded only on the right channel.
- If you connected this VCR to both the LINE IN and LINE OUT jacks of the other VCR, select the input correctly to prevent a humming noise.
- You can use the LINE-1 IN jacks for editing. If the other VCR is a monaural type, the sound is recorded only on the channel whose jack is connected to the audio plug. To record on both right and left channels, connect the audio plugs to the AUDIO R/L jacks using a VMC-910HG audio/video cable (not supplied).
- If the CONTROL S IN jack is used for S-Link™ (A/V bus control) with a TV, the CONTROL S connection cannot be used for editing.

Operation (when recording on this VCR)

Before you start editing

- Turn on your TV and set it to the video channel.
- Press INPUT SELECT to display "L2" (or "L1") in the display window.
- Press SP/EP to select the tape speed, SP or EP.

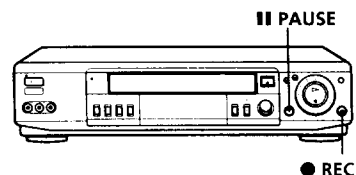

- 1 Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 2 Insert a tape into this (recording) VCR. Search for the point to start recording and press **PAUSE**.
- 3 Press **REC** on this VCR and set it to recording pause.
- 4 To start editing, press the **PAUSE** buttons on both VCRs at the same time.

To stop editing

Press the **STOP** buttons on both VCRs.

Tip

- To cut out unwanted scenes while editing, press **PAUSE** on this VCR when an unwanted scene begins. When it ends, press **PAUSE** again to resume recording.


Note

- If you start recording following the procedure above, the VCR won't start recording with the APC function. To record a tape with the APC function, press **REC** again during recording pause in step 3 so that the VCR analyzes the tape. Then when you start recording in step 4, press **PAUSE** immediately after the APC indicator stops flashing. If you press **PAUSE** before the APC indicator stops flashing, the APC function is canceled.

General setup information

Setting the RF unit

When connecting the VCR to the TV using only the antenna cable, you must set the RF UNIT switch on the rear of the VCR so that the TV can receive the correct signal from the VCR.

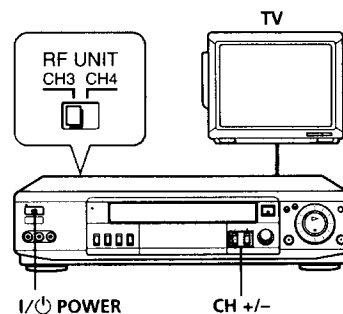


- 1 Set the RF UNIT switch on the rear of the VCR to CH3 or CH4, whichever channel is not used in your area. If both are used, set the switch to either channel.
- 2 Press I/POWER to turn on the VCR.
- 3 Press TV / VIDEO to turn on the VIDEO indicator in the VCR's display window.
- 4 Press CH +/- to display a channel number in the display window. Select an active channel number in your area.
- 5 Turn on your TV and set it to the channel you selected in step 1 (channel 3 or 4).

The channel you selected in step 4 appears on the TV screen. If the channels change when you press CH +/-, you have made the correct setting.

Whenever you use the VCR, set the TV to the channel selected in step 1.

Attaching the external antenna connector


When using a 300-ohm twin lead cable for VHF/UHF antenna, use the EAC-32 antenna connector (not supplied) to connect the antenna to the VCR.

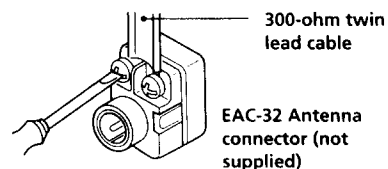

- 1 Loosen the screws on the antenna connector.
- 2 Wind the twin leads around the screws on the antenna connector.
- 3 Retighten the screws.

Attaching a UHF/VHF band mixer


When using both 75-ohm coaxial cable and 300-ohm twin lead cable for VHF/UHF antenna, use the EAC-66 UHF/VHF band separator/mixer (not supplied) to connect the antenna to the VCR.

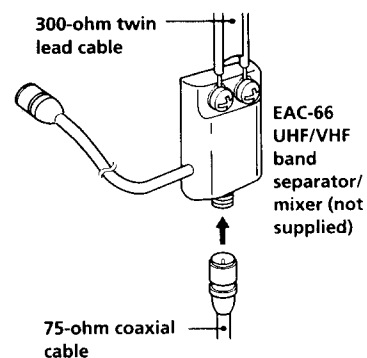


- 1 Loosen the screws on the mixer.
- 2 Wind the twin leads around the screws on the mixer.
- 3 Retighten the screws.
- 4 Connect the 75-ohm coaxial cable to the mixer.

Troubleshooting

 If you have any questions or problems not covered below, please consult your nearest Sony dealer.

	Symptom	Remedy
Power	The I/⏻ switch does not function.	<ul style="list-style-type: none"> Connect the AC power cord securely. Make sure the VCR is not locked. To unlock, hold down I/⏻ POWER on the VCR until the  indicator disappears.
	The power is turned on but the VCR does not operate.	<ul style="list-style-type: none"> Moisture condensation occurs. Turn the power off, unplug the AC power cord and leave the VCR to dry for over three hours.
Clock	The clock has stopped and ":-:-" lights in the display window.	<ul style="list-style-type: none"> The clock stops if the VCR is disconnected from the wall outlet for more than one hour. Reset the clock (and timer).
Playback	The playback picture does not appear on the TV screen.	<ul style="list-style-type: none"> Make sure the TV is set to the channel for the VCR. If you are using a monitor, set it to video input.
	The picture is not clear.	<ul style="list-style-type: none"> Adjust the tracking with the TRACKING+/- buttons. The video heads are dirty (see below). Clean the video heads using the Sony T-25CLD, T-25CLDR, or T-25CLW video head cleaning cassette. If these cleaning cassettes are not available in your area, have the heads cleaned at your nearest Sony service facility (a standard service fee will be charged). Do not use a commercially available liquid type cleaning cassette other than Sony's, as it may damage the video heads. The video heads may have to be replaced. Consult your local Sony dealer for more information.
	The picture rolls vertically during picture search.	<ul style="list-style-type: none"> Adjust the vertical hold control on the TV or monitor.
	The picture has no sound.	<ul style="list-style-type: none"> The tape is defective. If you made A/V connections, check the audio cable connection.

Symptoms caused by contaminated video heads

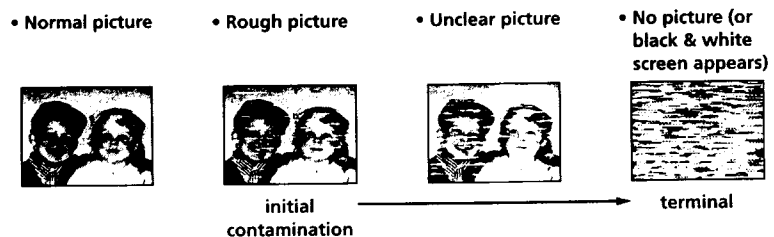

	Symptom	Remedy
Recording	A TV program does not appear on the TV screen.	<ul style="list-style-type: none"> • Make sure the TV is set to the channel for the VCR. If you are using a monitor, set it to video input. • Select the correct source with the INPUT SELECT button. Select a channel number when recording TV programs; select "L1" or "L2" when recording from other equipment.
	TV reception is poor.	<ul style="list-style-type: none"> • Adjust the TV antenna.
	The tape starts playing as soon as it is inserted.	<ul style="list-style-type: none"> • The safety tab has been removed. To record on this tape, cover the tab hole.
	The tape ejects when you press ● REC.	<ul style="list-style-type: none"> • Check that the safety tab has not been removed.
Timer recording	Nothing happens when you press ● REC.	<ul style="list-style-type: none"> • Make sure the tape is not at its end.
	The timer does not operate.	<ul style="list-style-type: none"> • Check that the clock is set. • Make sure a tape has been inserted. • Check that the safety tab has not been removed. • Make sure the tape is not at its end. • Make sure a program has been set for timer recording. • Make sure your timer settings have not already passed the current time. • Check that the cable box is turned on. • The clock stops if the VCR is disconnected from the wall outlet for more than one hour. Reset the clock and timer. • When you use cable box control, make sure the CABLE BOX CONTROL option is set to ON.

continued

Troubleshooting (continued)

Others	Symptom	Remedy
	A tape cannot be inserted.	<ul style="list-style-type: none">• Check that a tape isn't already in the tape compartment.
	The remote commander does not function.	<ul style="list-style-type: none">• Make sure you are pointing the remote commander at the remote sensor on the VCR.• Replace all the batteries in the remote commander with new ones if they are weak.• Make sure the TV RECEIVER / VIDEO switch is set correctly.• If you are not using S-Link™, make sure that both miniplugs are unconnected.
	The channels on the VCR cannot be changed.	<ul style="list-style-type: none">• Make sure the CABLE BOX CONTROL option is set to OFF.
	The tracking meter does not appear on the screen.	<ul style="list-style-type: none">• The recording condition of the tape is very poor and tracking cannot be adjusted.
	You cannot control other TVs.	<ul style="list-style-type: none">• Set your TV's code number. The code number may change when you replace the batteries of the remote commander.
	The VCR needs to be cleaned.	<ul style="list-style-type: none">• Clean the cabinet, panel and controls with a dry, soft cloth, or a soft cloth slightly moistened with a mild detergent solution. Do not use any type of solvent, such as alcohol or benzine.

Specifications

System

Format
VHS NTSC standard

Video recording system
Rotary head helical scanning FM system

Video heads
Double azimuth four heads

Video signal
NTSC color, EIA standards

Tape speed
SP: 33.35 mm/s ($1\frac{3}{8}$ inches/s)
EP: 11.11 mm/s ($\frac{7}{16}$ inches/s)
LP: 16.67 mm/s ($1\frac{1}{16}$ inches/s),
playback only

Maximum recording/playback time
8 hrs. in EP mode (with T-160 tape)

Fast-forward and rewind time
Approx. 3 min. (with T-120 tape)

Tuner section

Channel coverage
VHF 2 to 13
UHF 14 to 69
CATV A-8 to A-1, A to W, W+1 to W+84

Antenna
75-ohm antenna terminal for VHF/UHF

Inputs and outputs

LINE-1 IN and -2 IN
VIDEO IN, phono jack (1 each)
Input signal: 1 Vp-p, 75 ohms, unbalanced,
sync negative
AUDIO IN, phono jacks (2 each)
Input level: 327 mVrms
Input impedance: more than 47 kilohms

LINE OUT
VIDEO OUT, phono jack (1)
Output signal: 1 Vp-p, 75 ohms, unbalanced,
sync negative
AUDIO OUT, phono jacks (2)
Standard output: 327 mVrms
Load impedance: 47 kilohms
Output impedance: less than 10 kilohms

S-LINK (CONTROL S IN)
Mini jack (1)

CABLE BOX CONTROL (CONTROL S OUT)
Stereo mini jack (plug in power) (1)

Timer section

Clock
Quartz locked

Timer indication
12-hour cycle

Timer setting
8 programs per month (max.)

Power back-up
Built-in self-charging capacitor
Back-up duration: up to 1 hour at a time

General

Power requirements
120 V AC, 60 Hz

Power consumption
24 W

Operating temperature
5°C to 40°C (41°F to 104°F)

Storage temperature
-20°C to 60°C (-4°F to 140°F)

Dimensions
Approx. 430 × 100 × 292.5 mm (w/h/d)
(Approx. 17 × 4 × 11 $\frac{5}{16}$ inches) including
projecting parts and controls

Mass
Approx. 4.1 kg (9 lb 1 oz)

Supplied accessories

Remote commander (1)
Size AA (R6) batteries (2)
75-ohm coaxial cable with F-type connectors (1)
Audio/video cable (3-phono, 1-mini to 3-phono,
1-mini) (1)
Cable Mouse (cable box controller) (1)


Design and specifications are subject to change
without notice.

ENERGY STAR is a U.S. registered mark.
As an ENERGY STAR Partner, Sony Corporation
has determined that this product meets the
ENERGY STAR guidelines for energy efficiency.

Index to parts and controls


Refer to the pages indicated in parentheses () for details.

Front panel

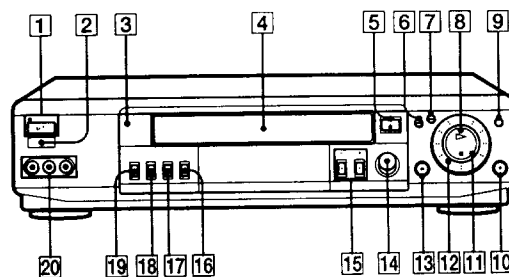

- | | |
|--|--|
| 1 I/⏻ POWER switch/indicator (74) | 12 Shuttle ring (70, 81) |
| 2 Remote sensor (5) | 13 ■ PAUSE button (66, 103) |
| 3 REALITY REGENERATOR indicator (98) | 14 DIAL TIMER control (89) |
| 4 Tape compartment | 15 CH (channel)/TRACKING +/- buttons (69, 98) |
| 5 ▲ EJECT button (66) | 16 EASY SET UP button (12, 16, 20, 24, 28, 31) |
| 6 ◀ REW (rewind) button (66, 80) | 17 INPUT SELECT button (69, 71) |
| 7 ▶▶ FF (fast-forward) button (66, 80) | 18 SP (Standard Play)/EP (Extended Play) button (69) |
| 8 ▷ PLAY button (66, 80) | 19 REALITY REGENERATOR button (98) |
| 9 JOG button (81) | 20 LINE-2 IN VIDEO/AUDIO L/R jacks (102) |
| 10 ● REC (record) button (69, 92, 103) | |
| 11 ■ STOP button (66, 103) | |

Display window

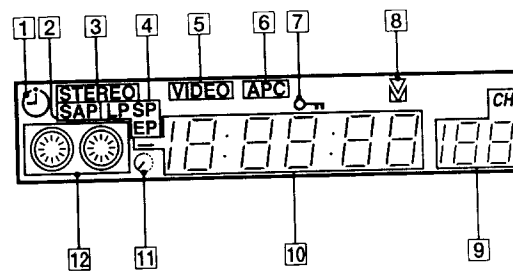


- | | |
|---|--------------------------------------|
| 1 Timer indicator (74, 77) | 7 Child Lock indicator (75) |
| 2 SAP (Second Audio Program) indicator (95) | 8 Tracking indicator (98) |
| 3 STEREO indicator (95) | 9 Line/channel indicator (69, 103) |
| 4 Tape speed indicator (69) | 10 Time counter/clock indicator (67) |
| 5 VIDEO indicator (70, 104) | 11 Remaining time indicator (70) |
| 6 APC (Adaptive Picture Control) - indicator (99) | 12 Tape/recording indicator (69) |

continued


Index to parts and controls (continued)

Rear panel

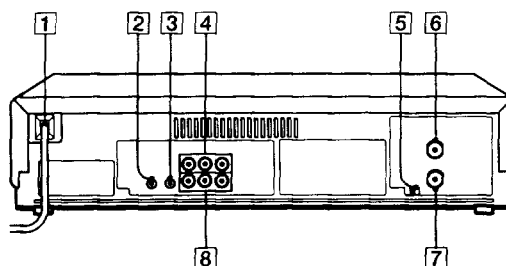

- | | |
|--|---|
| 1 AC power cord (8) | 5 RF (Radio Frequency) UNIT switch (104) |
| 2 S-LINK (CONTROL S IN) jack (10, 102) | 6 VHF/UHF IN connector (11, 15, 19, 23, 27, 30) |
| 3 CABLE BOX CONTROL (CONTROL S OUT) jack (11, 27) | 7 VHF/UHF OUT connector (11, 15, 19, 23, 27, 30) |
| 4 LINE-1 IN AUDIO R/L/VIDEO jacks (27, 102) | 8 LINE OUT AUDIO R/L/VIDEO jacks (9) |


Remote commander

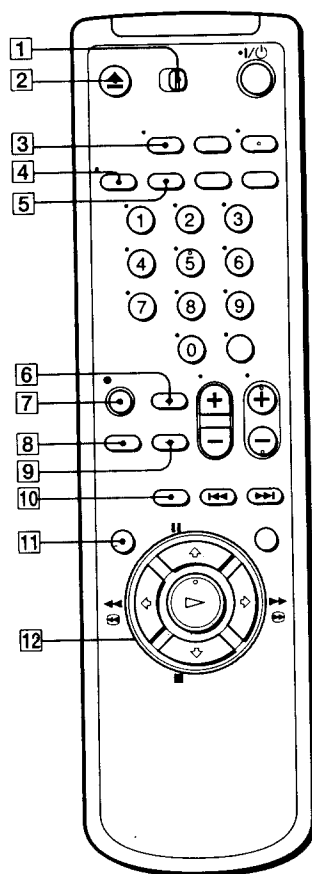

- 1 TV/RECEIVER/VIDEO switch (5)
- 2 ▲ EJECT button (66)
- 3 TV/VIDEO button (6, 70)
- 4 DISPLAY button (70, 83)
- 5 SP (Standard Play)/EP (Extended Play) button (69)
- 6 x2/RECEIVER VOL (volume) + button (5, 80)
- 7 ● REC (record) button (69, 92)
- 8 MUTING button (5)
- 9 ► SLOW/RECEIVER VOL (volume) - button (5, 80)
- 10 INPUT SELECT button (69, 71, 103)
- 11 MENU button (36, 76, 93)
- 12 ■ PAUSE/▲ button (36, 66)
 ■ STOP/▼ button (36, 66)
 ◀◀ REW (rewind)/◀ button (66, 80)
 ▶▶ FF (fast-forward)/▶ button (66, 80)
 ▷ PLAY/OK button (36, 66)

continued

Index to parts and controls (continued)

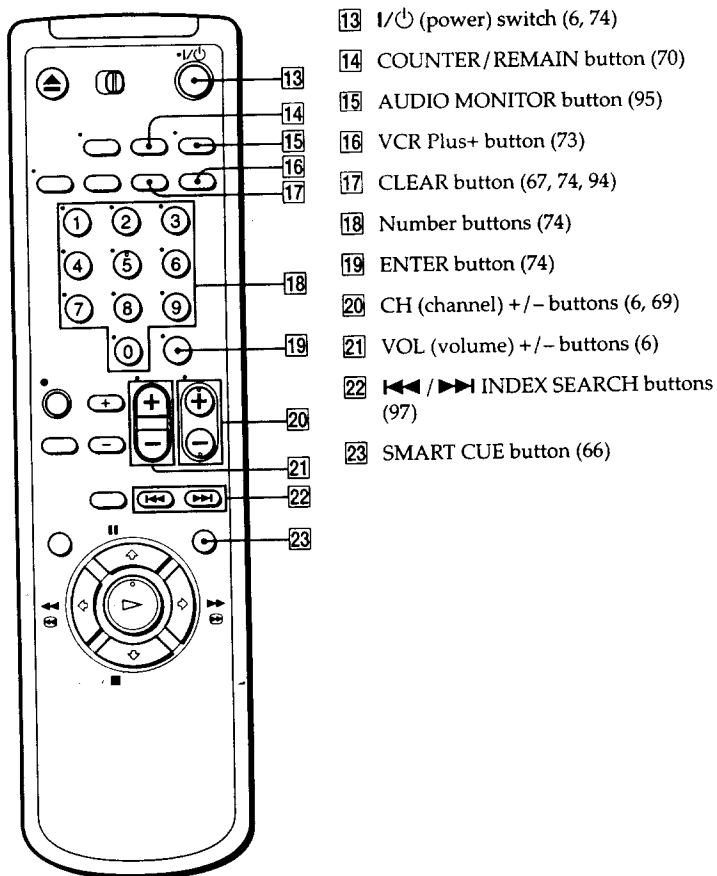

Index

A, B

Adjusting
 picture 98
 tracking 98
Advanced option 100
AFT (Auto Fine Tuning) 56
Antenna hookup 19
APC (Adaptive Picture Control) 99
Audio track 96
Audio/video (A/V)
 hookup 9
Auto Clock Set 37
Auto Tape Speed 101

C

Cable box control
 cable box code number
 chart 47
 setting 45
Cable hookup 8
Cable Mouse 11, 27
Channel line-up chart 58
Child Lock 75
Cleaning the video
 heads 106
Clock setting 37
Connecting
 cable TV 8
 external antenna
 connector 105
 UHF/VHF band
 mixer 105
Counter 67

D

Dial Timer 89
DIRECTV System 27
Disabling channels 54
Dubbing. *See* Editing.

E

Easy Set Up 12, 16, 20, 24,
28, 31
Editing 102
EP mode 69

F, G

Favorite channel 86

H

Hi-fi audio track 96

I, J, K

Index Search 97

L

Language selecting 36
Locking the VCR 75
LP mode 71

M

Monaural 95
Monitoring audio during
 playback 95

N, O

Normal audio track 96

P, Q

Picture adjustment. *See*
 Adjusting.
Playback 65
 at various speeds 80
 frame-by-frame 81
 selecting the sound 95
 skip 66
 slow motion 81
Presetting channels 51

R

Reality Regenerator 98
Recording 68
 bilingual programs 95
 SAP broadcasts 95
 saving 71
 stereo broadcasts 95
 timer setting 76
 using the Dial Timer 89
 using VCR Plus+
 GOLD 73
 while watching another
 program 70
RF channel 104

S

Safety tab 71
SAP (Second Audio
Program) 95
Searching
 at various speeds 80
 for a selected point 83
 skip-search 85
S-Link™ 10
Smart channel mapping 59
SP mode 69
Station ID 72
Stereo 95

T, U

Timer setting 76
 canceling 93
 changing 93
 checking 93
 daily/weekly
 recording 78
 using VCR Plus+
 GOLD 73
Tracking adjustment. *See*
 Adjusting.
Tuner presetting 51

V, W, X, Y, Z

VCR Plus+ GOLD
 channel setup 58
 recording 73

Quick reference to using the VCR

Hookup 1

To play a tape

- 1 Set the TV to channel 3 or 4 (or to video input, if you made A/V connections.)
- 2 Insert a tape and press \triangleright PLAY.

To record a program

- 1 Turn on the cable box.
- 2 Press VCR Plus+ on the remote commander.
- 3 Enter the PlusCode number.
- 4 Select ONCE, DAILY, or WEEKLY, then press ENTER.
- 5 Insert a tape.
- 6 Press I/\odot to turn off the VCR.
- 7 Leave the cable box on.

To watch TV

- 1 Turn off your VCR, or press the VCR's TV/VIDEO button until the VIDEO indicator in the display window goes off.
- 2 Turn on your cable box.
- 3 Set the TV to the cable box output channel (usually 2, 3, or 4).
- 4 Set the cable box to the channel you want to watch.

Hookup 2

To play a tape

- 1 If you made A/V connections, set the TV to video input. If you didn't use A/V hookup:
 - Turn on the cable box.
 - Set the cable box to channel 3 or 4.
 - Set the TV to the output channel of the cable box (usually 2, 3, or 4).

- 2 Insert a tape and press \triangleright PLAY.

To record a program

- 1 Press VCR Plus+ on the remote commander.
- 2 Enter the PlusCode number.
- 3 Select ONCE, DAILY, or WEEKLY, then press ENTER.
- 4 Insert a tape.
- 5 Press I/\odot to turn off the VCR.

To watch TV

- 1 Turn off your VCR, or press the VCR's TV/VIDEO button until the VIDEO indicator in the display window goes off.
- 2 Select the channel with your cable box (if you have one) or with your TV.

Hookup 3

To play a tape

- 1 Set the TV to channel 3 or 4 (or to video input, if you made A/V connections.)
- 2 Insert a tape and press \triangleright PLAY. If there's no picture on your TV, press the VCR's TV/VIDEO button until the VIDEO indicator comes on in the display window.

To record a program

- 1 Press VCR Plus+ on the remote commander.
- 2 Enter the PlusCode number.
- 3 Select ONCE, DAILY, or WEEKLY, then press ENTER.
- 4 Insert a tape.
- 5 Press I/\odot to turn off the VCR.

To watch TV

- 1 Turn off the VCR, or press the VCR's TV/VIDEO button until the VIDEO indicator in the display window goes off.
- 2 Set the TV to the channel you want to watch.

Hookup 4

To play a tape

- 1 Set the TV to channel 3 or 4 (or to video input, if you made A/V connections.)
- 2 Insert a tape and press \triangleright PLAY.

To record a program

- 1 Turn on the cable box.
- 2 Set the cable box to the channel you want to record.
- 3 Press VCR Plus+ on the remote commander.
- 4 Enter the PlusCode number.
- 5 Select ONCE, DAILY, or WEEKLY, then press ENTER.
- 6 Insert a tape.
- 7 Press I/\odot to turn off the VCR.
- 8 Leave the cable box on.

To watch TV

- 1 Turn off your VCR, or press the VCR's TV/VIDEO button until the VIDEO indicator in the display window goes off.
- 2 Turn on your cable box.
- 3 Set the TV to the cable box output channel (usually 2, 3, or 4).
- 4 Set the cable box to the channel you want to watch.

Sony online <http://www.world.sony.com/>

If you have any questions about this product, you may call: **Sony Customer Information Center** 1-800-222-SONY (7669) or write to: **Sony Customer Information Center** Sony Drive, Mail Drop #T1-11, Park Ridge, NJ 07656

Sony Corporation Printed in Malaysia