

SONY




GETTING CONNECTED

MAXIMUM TELEVISION™

STR-D510SS



SURROUND SOUND™


 DOLBY SURROUND
PRO • LOGIC

Welcome to Maximum Television™

You are about to experience the thrill of your new Sony Maximum Television System!


Finally, you'll hear the thrill of Dolby® Pro Logic® Surround Sound. Many of the latest Hollywood hit movies you rent and many of the TV broadcasts you watch are produced in Surround Sound. With your Sony Maximum Television System, they'll come alive as they were meant to be experienced. Watching Surround Sound sports events will be like sitting in the stands. At last you'll enjoy the full value of your Dolby® Pro Logic® encoded rental movies and cable TV channels.

This Getting Connected Guide tells you everything you need to bring Maximum Television into your home. If you have any questions just call the Sony Customer Information Services Center at:
1-800-222-SONY

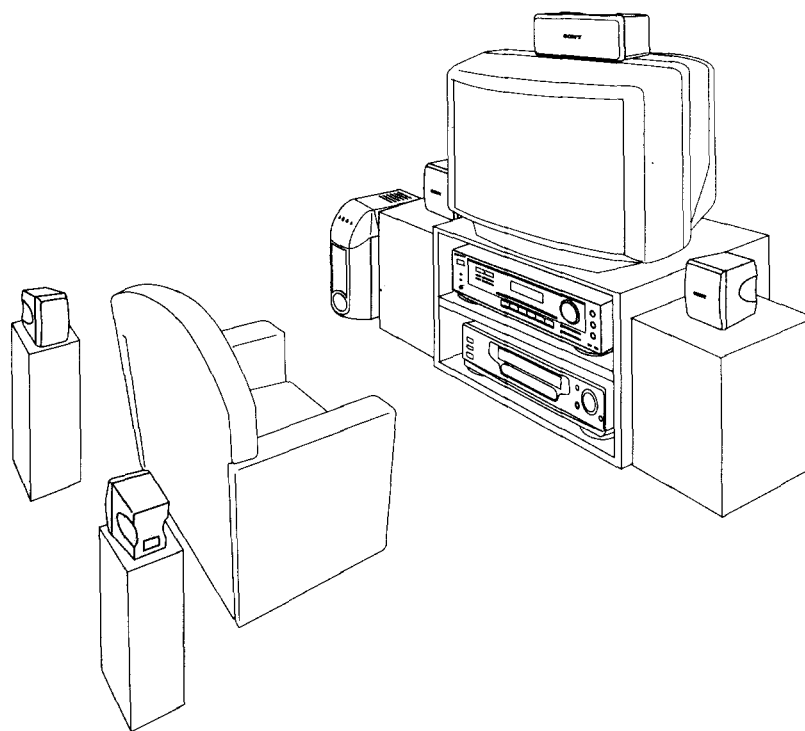


Positioning overview

To maximize performance in your home environment, position your speakers as shown in the drawing below. The rear speakers can be positioned on a back wall, or side wall, without compromising performance. Your center channel speaker should be positioned above or below the television. The subwoofer can be positioned out of sight without affecting performance.

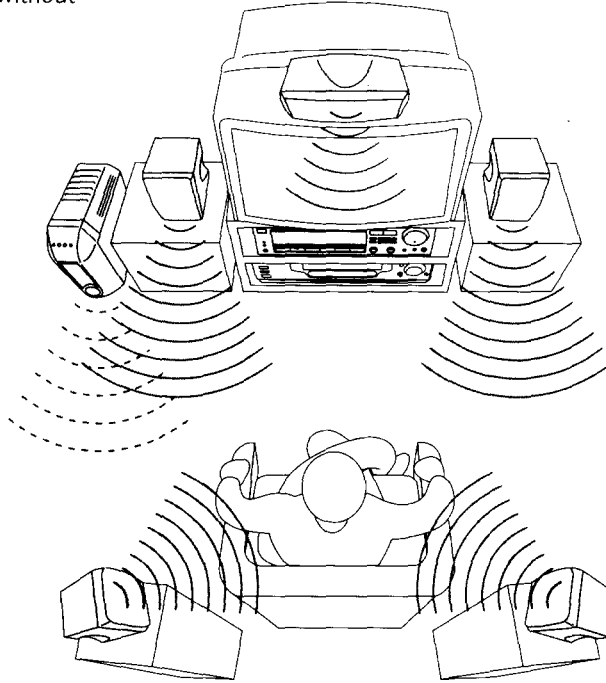


Your Sony components

Dolby® Pro Logic® audio for television or video requires a stereo television and/or stereo VCR.

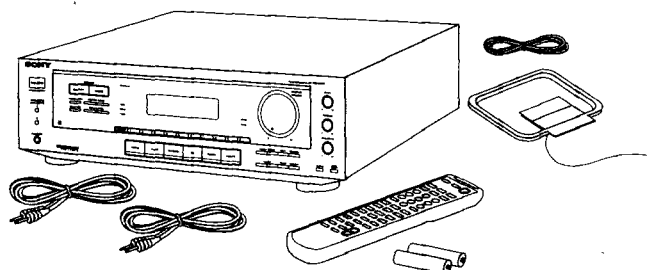

STR-D350Z DSP A/V Receiver

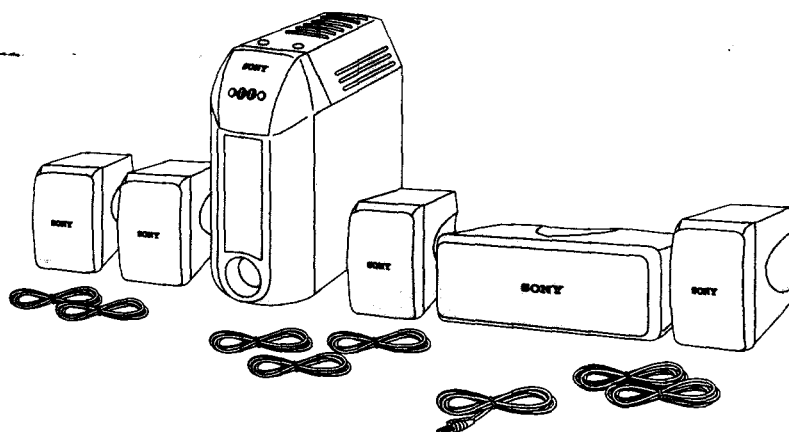


SA-VE100 Surround Sound Speaker System

Front speakers + Subwoofer

- 1 Locate front speakers on either side of the TV, on tables or shelves. Locate the subwoofer on the floor.
- 2 Connect speaker wires from
 - a) subwoofer top row of **SPEAKER** terminals to b) the back of the front speakers: **R**(ight) to **R**(ight) and **L**(eft) to **L**(eft).



⚠ Make sure to connect the speaker polarity correctly: + to + and - to -.

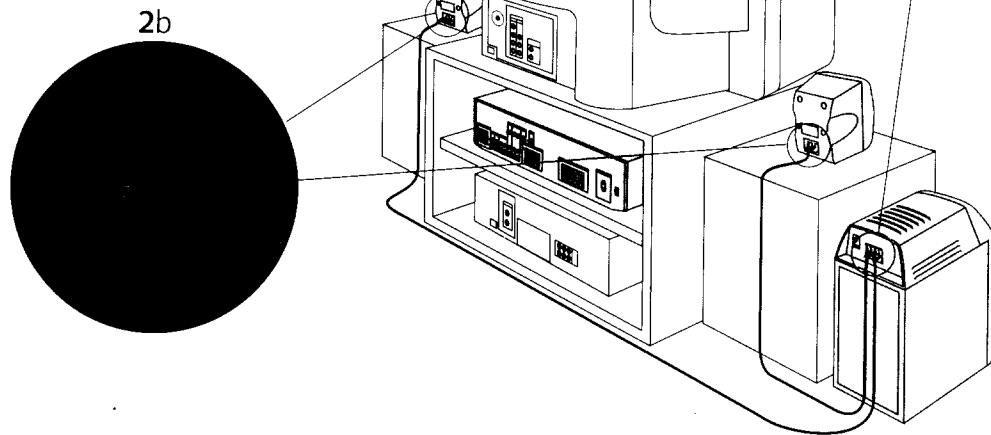

Front speakers + Subwoofer con't



- 3 Connect speaker wires from
a) receiver top row of **FRONT SPEAKERS-A**
to b) the subwoofer **INPUT 2** (bottom
row of speaker terminals): **R**(ight) to
R(ight) and **L**(eft) to **L**(eft).

⚠ Make sure to connect the speaker
polarity correctly: + to + and - to -.

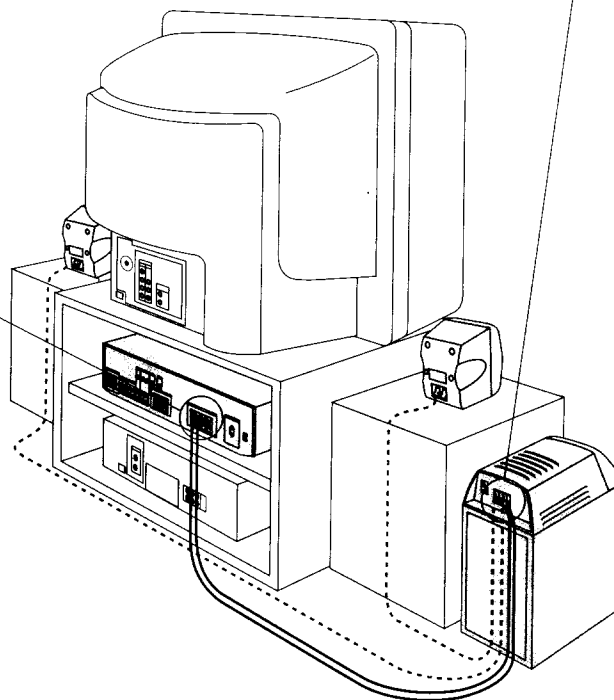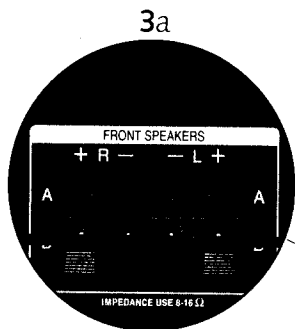

Center + Rear speakers


- 1 Locate rear speakers on either side of you, on tables, on shelves or on the wall, positioned towards you.
 - 2 Connect speaker wires from a) receiver **SURROUND SPEAKERS-R-REAR-L** to b) the backs of the rear speakers: **R**(ight) to **R**(ight) and **L**(eft) to **L**(eft).
 - 3 Locate center speaker above or below your TV.
 - 4 Connect speaker wires from a) receiver **SURROUND SPEAKERS-CENTER** to b) the back of the center speaker.
- ⚠ *Make sure to connect the speaker polarity correctly: + to + and - to -.*

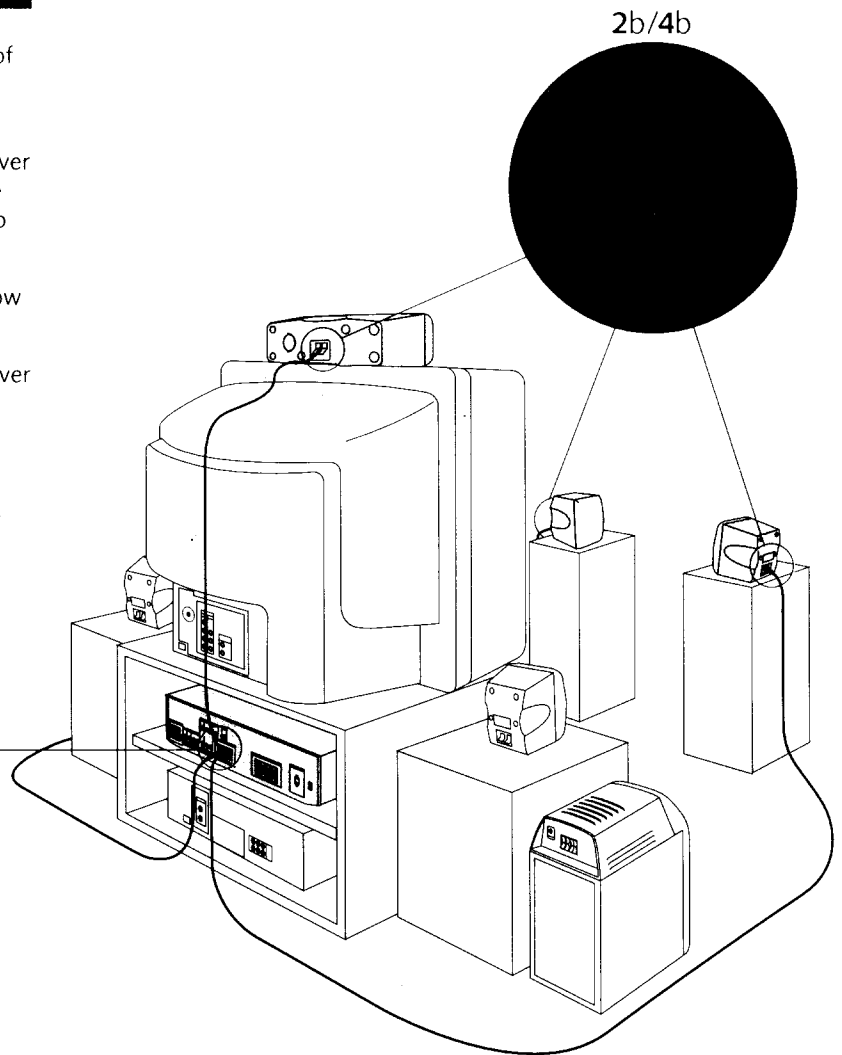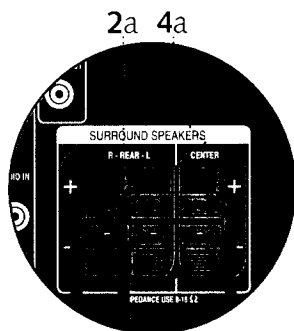

Cable/antenna connection


⚠ This step may already be set up. If so, please skip to the next page.

- 1 Connect cable from TV antenna or cable outlet to VCR VHF/UHF IN.
- 2 Connect cable from a) VCR VHF/UHF OUT to b) TV VHF/UHF IN.

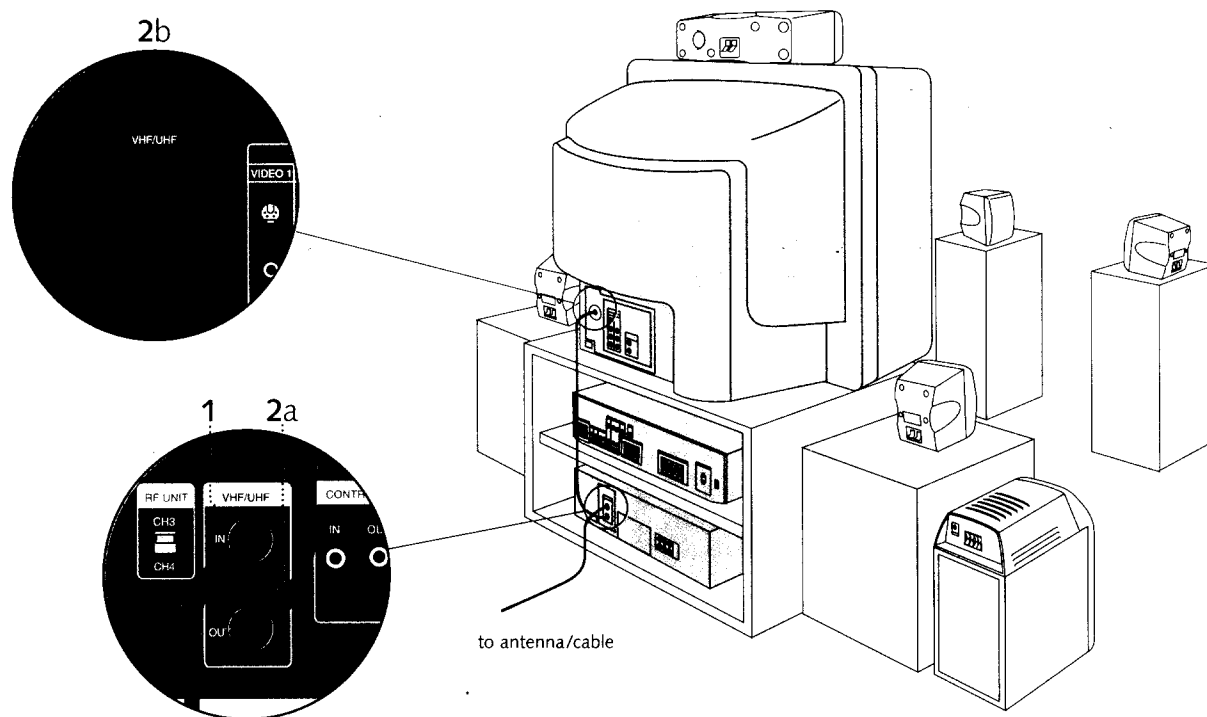

VCR + Receiver audio connection





1. Connect cables from a) VCR AUDIO OUT to b) receiver VIDEO-AUDIO IN: R(right) to R(right) and L(left) to L(left).

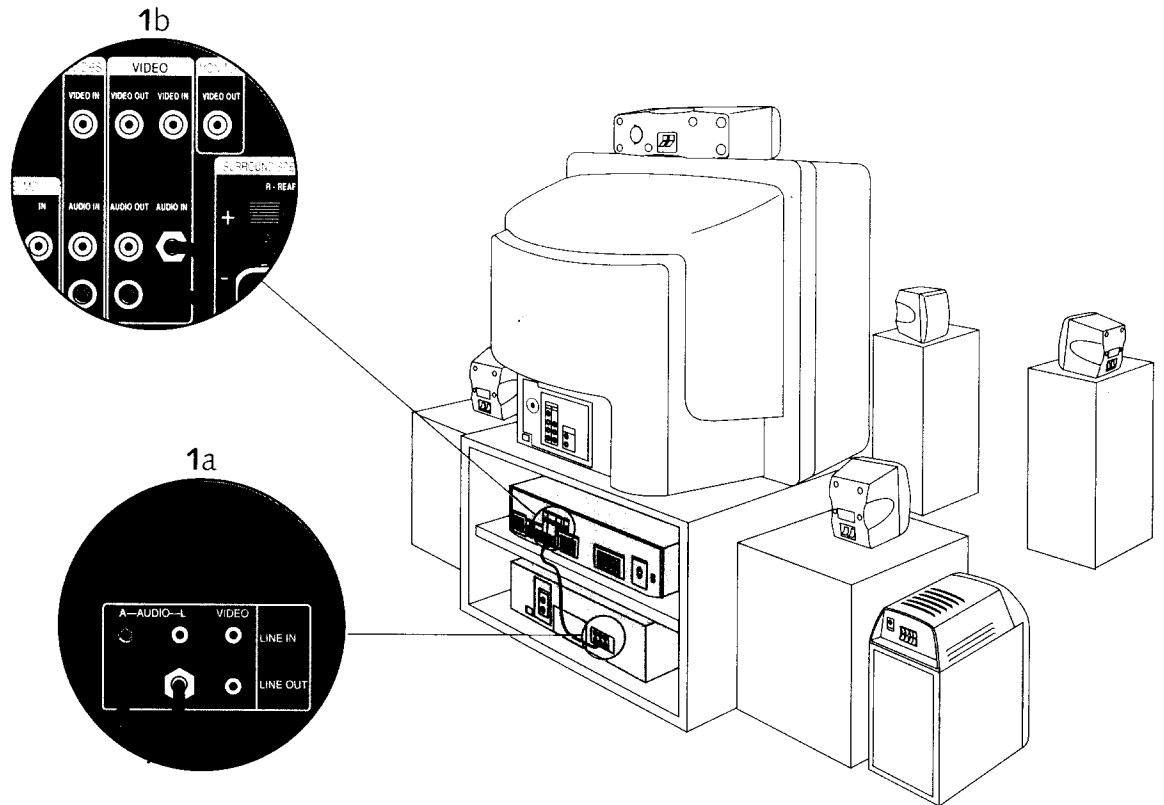

Video/audio additional connection



▼ If your TV has audio and video inputs, please make these additional connections.

- 1 Connect cables from a) TV AUDIO OUT to b) receiver TV/DBS-AUDIO IN.
- 2 Connect cable from a) receiver MONITOR-VIDEO OUT to b) TV VIDEO1 IN.
- 3 Connect cable from a) VCR VIDEO OUT to b) receiver VIDEO IN.

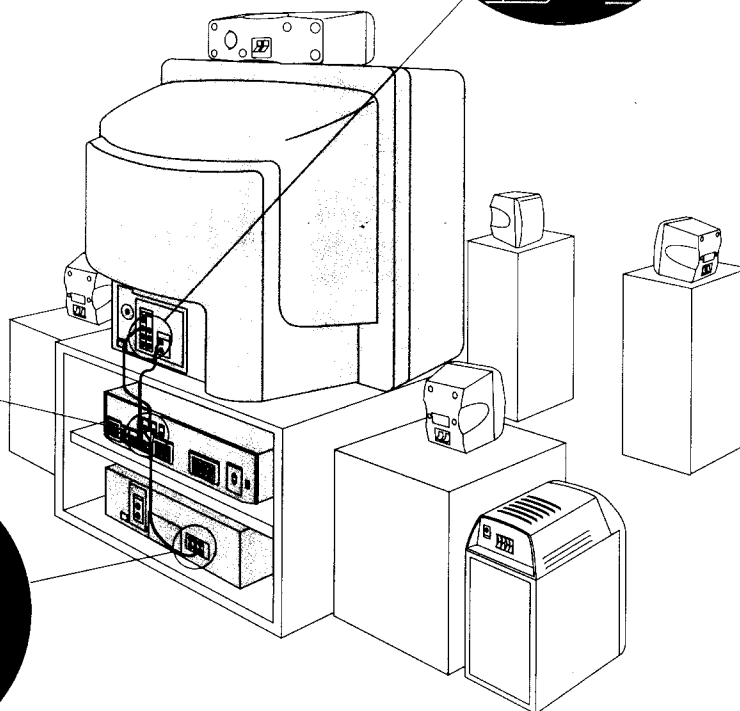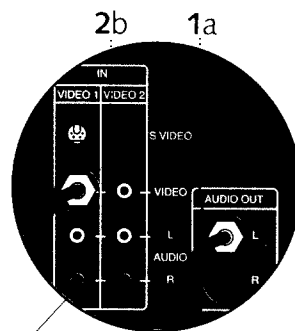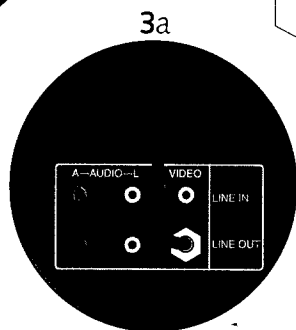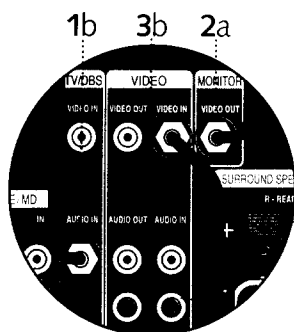


Initial system setup

- 1 Select VIDEO on receiver.
- 2 Press SURROUND ON/OFF until DOLBY appears on display.
- 3 Press surround MODE until DOLBY PRO LOGIC is selected.
- 4 Press CENTER MODE until NORMAL is selected.
- 5 Turn the POWER on the subwoofer.
- 6 Set CUT OFF FREQ and LEVEL dials to mid-positions, then adjust settings during play until you reach desired bass impact.

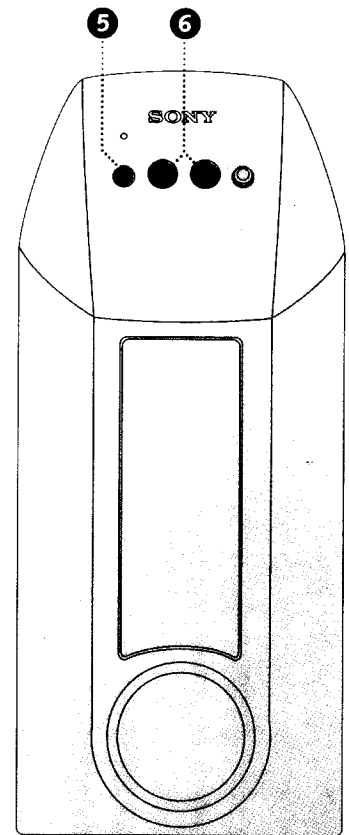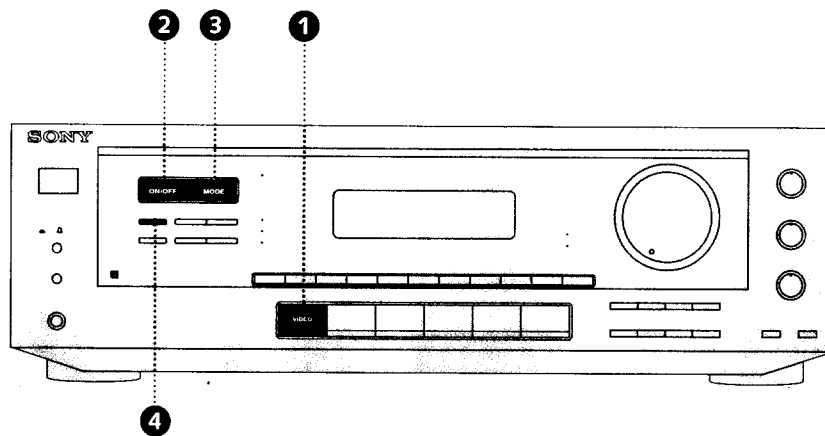

Balancing volume levels

- 1 Press TEST TONE.
- 2 Adjust REAR LEVEL and CENTER LEVEL +/- until you achieve the desired speaker balance.

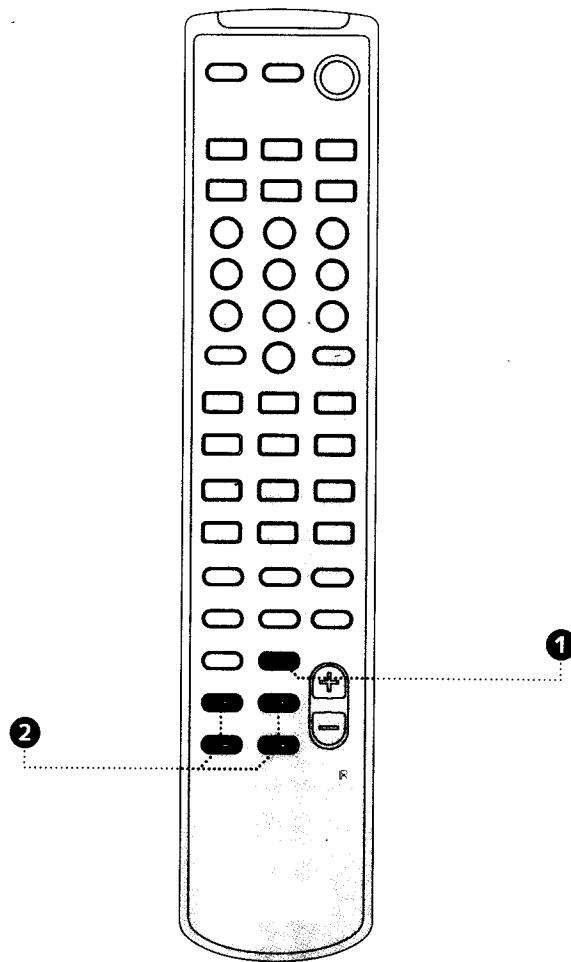

Watching TV

in Dolby® Pro Logic® Surround Sound


⚠ If you have made the video/audio additional connections, skip to page 13.

- 1 Turn on VCR, TV, and receiver.
- 2 Press **VIDEO** on receiver or remote control.
- 3 Make sure your VCR's TV/VCR switch is set to VCR.
- 4 Press **TV/VIDEO** on remote control to select television.
- 5 Use your VCR remote, or Sony receiver remote if your VCR is a Sony brand, to view and select different channels.

Watching movies

in Dolby® Pro Logic® Surround Sound

- 1 Turn on VCR, TV, and receiver.
- 2 Press **VIDEO** on receiver or remote control.
- 3 Press **TV/VIDEO** on remote control to select video.
- 4 Put in the video tape and **play**.

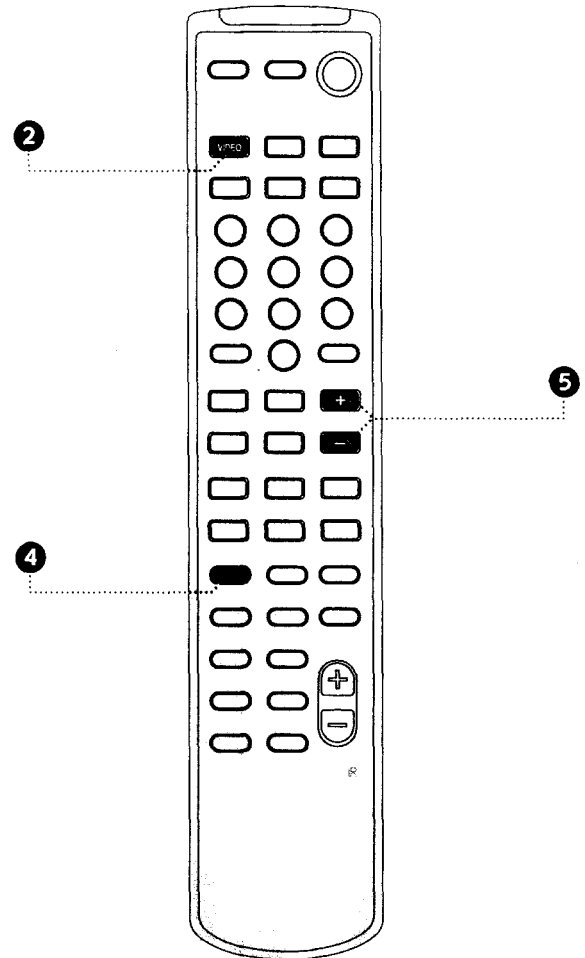

Watching TV

in Dolby® Pro Logic® Surround Sound


▼ *These directions only apply if you have made the video/audio additional connections on page 9.*

- 1 Press **TV** on receiver or remote control.
- 2 If your TV is not a Sony brand turn it on and press **TV/VIDEO** to select video.
- 3 Use your receiver, or non-Sony TV remote, to select and view channels.

Watching movies

in Dolby® Pro Logic® Surround Sound

- 1 Press **VIDEO** on remote control.
 - 2 If your VCR is not a Sony brand turn it on.
 - 3 If your TV is not a Sony brand turn it on. Press the **INPUT SELECT** on the receiver until you see the **VIDEO 1 INPUT**.
 - 4 Put in the video tape and **play**.
- ⚠ *For listening to the radio and antenna hook-up, see STR-D350Z Operating Instructions for details.*

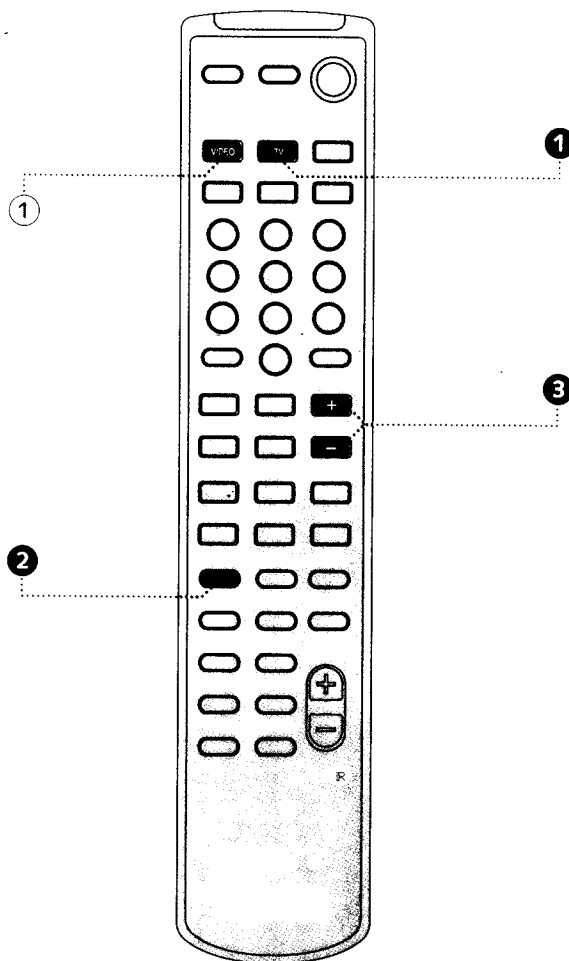



SONY.

Sony Electronics Inc.
1 Sony Drive
Park Ridge, New Jersey 07656

<http://www.sony.com>

©1997 Sony Electronics Inc. Reproductions in whole or in part without written permission is prohibited.
All rights reserved. Sony, Maximum Television, and Surround Sound are trademarks of Sony.
Dolby and ProLogic are trademarks of Dolby Licensing Corporation.

0-450-143-10