

The background of the entire page is composed of several thick, parallel diagonal stripes that run from the top-left towards the bottom-right. These stripes are in a dark, textured grey color, creating a sense of motion and depth.

SONY

MAXIMUM TELEVISION™

A small, stylized version of the Sony logo, which is a triangle made of horizontal lines, is located in the bottom-left corner of the page.

**GETTING
CONNECTED**

STR-D700SS



SURROUND SOUND™




Welcome to Maximum Television™

You are about to experience the thrill of your new Sony Maximum Television System!

Finally, you'll hear the thrill of Dolby® ProLogic® Surround Sound. Many of the latest Hollywood hit movies you rent and many of the TV broadcasts you watch are produced in Surround Sound. With your Sony Maximum Television System, they'll come alive as they were meant to be experienced. Watching Surround Sound sports events will be like sitting in the stands. At last you'll enjoy the full value of your Dolby® Pro Logic® encoded rental movies and cable TV channels.


This Getting Connected Guide tells you everything you need to bring Maximum Television into your home. If you have any questions just call the Sony Customer Information Services Center at:

1-800-222-SONY

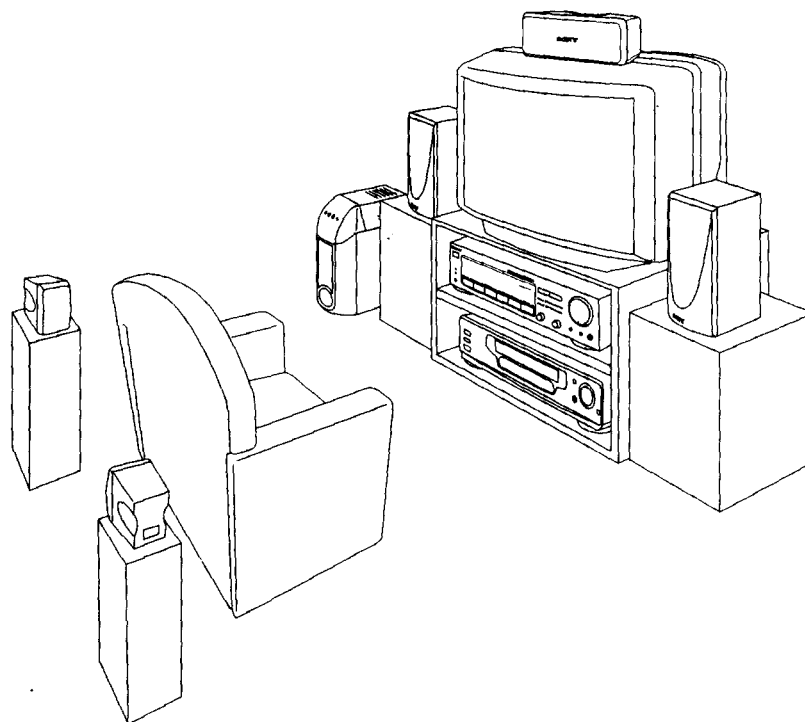


Positioning Overview

To maximize performance in your home environment, position your speakers as shown in the drawing below. The rear speakers can be positioned on a back wall, or side wall, without compromising performance. Your center channel speaker should be positioned above or below the television.

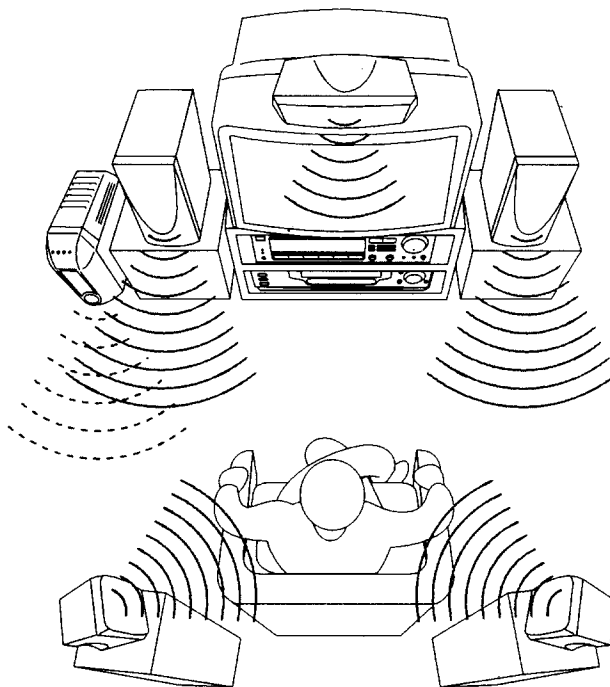


Your Sony Components


Dolby® ProLogic® audio for television or video requires a stereo television and/or stereo VCR.

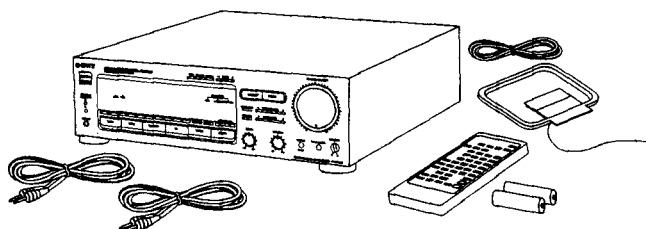


STR-D665 A/V Receiver

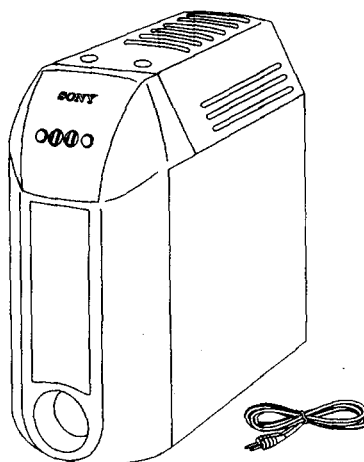

SA-W10 Subwoofer

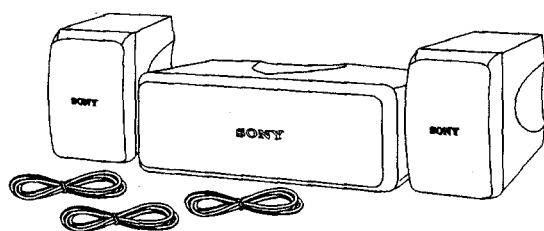


SS-CR150 Surround Sound Speaker System

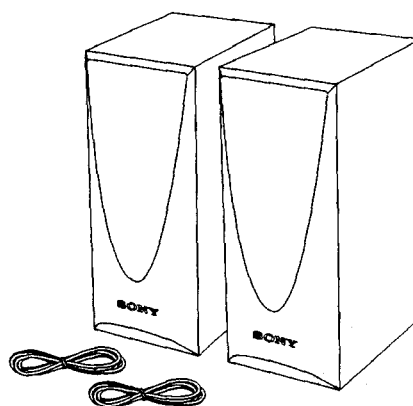

SS-AV22 Bookshelf Speakers

Front Speakers

- 1 Locate front speakers on either side of the TV, on tables or shelves.
- 2 Connect speaker wires from
 - a) receiver **FRONT SPEAKERS-A** to
 - b) the backs of the front speakers:
R(ight) to **R(ight)** and **L(eft)** to **L(eft)**.
- ⚠ *Make sure to connect the speaker polarity correctly: + to + and - to -.*
- 3 Connect audio cable from
 - a) receiver **MIX OUT** to
 - b) the subwoofer **INPUT 1**.

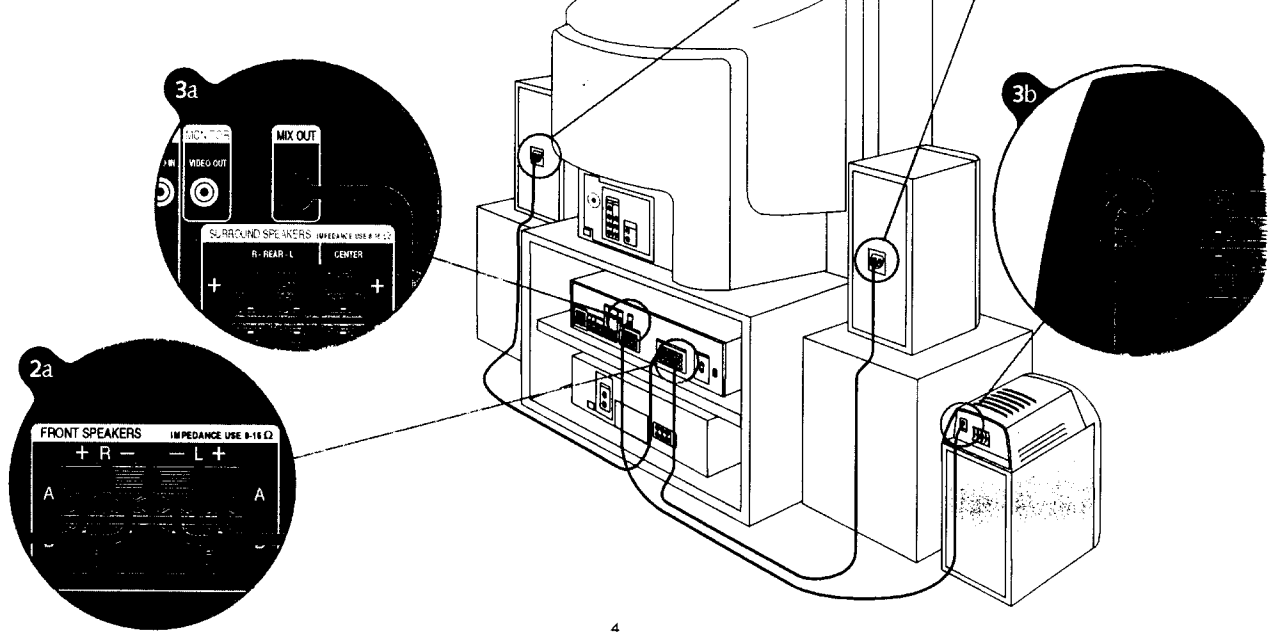




Center Speakers

Locate front speakers on either side of the TV, on tables or shelves.

Connect speaker wires from

- a) receiver **SURROUND SPEAKERS-CENTER** to
- b) the back of the center speaker.

⚠ *Make sure to connect the speaker polarity correctly: + to + and - to -.*

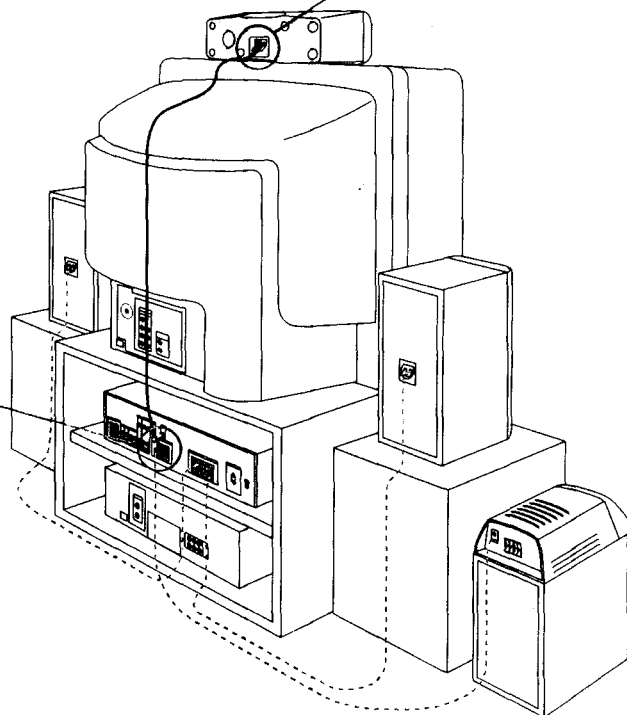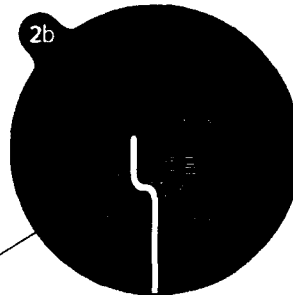
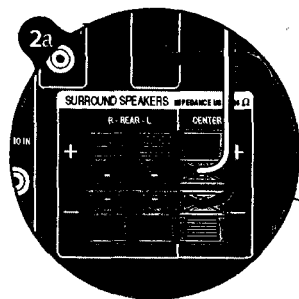


Rear Speakers

Locate rear speakers on either side of you, on tables, on shelves or on the wall, positioned towards you.

- 2 Connect speaker wires from
a) receiver SURROUND SPEAKERS-R-REAR-L to
b) the backs of the rear speakers:
R(ight) to R(ight) and L(ef) to L(ef).


⚠ Make sure to connect the speaker polarity correctly: + to + and - to -.

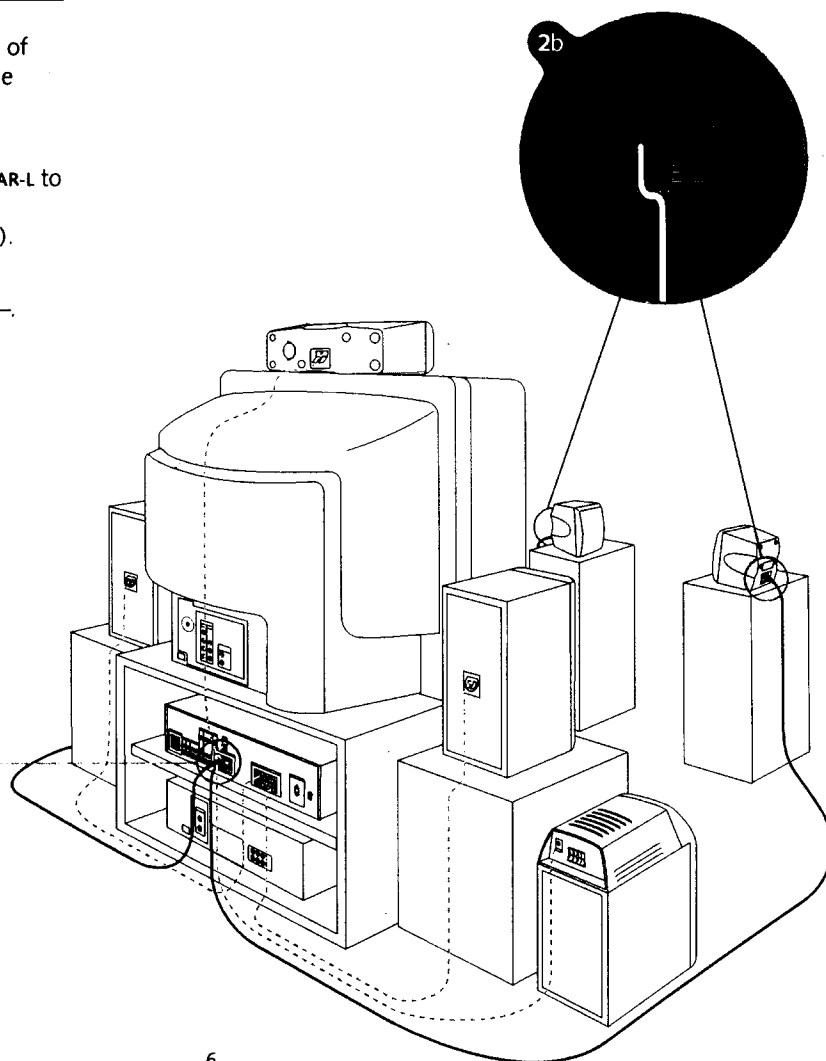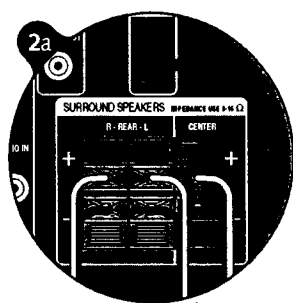

Cable/Antenna Connection




⚠ This step may already be set up. If so, please skip to the next page.

- 1 Connect cable from TV antenna or cable outlet to VCR VHF/UHF IN.
- 2 Connect cable from
 - a) VCR VHF/UHF OUT to
 - b) TV VHF/UHF IN.

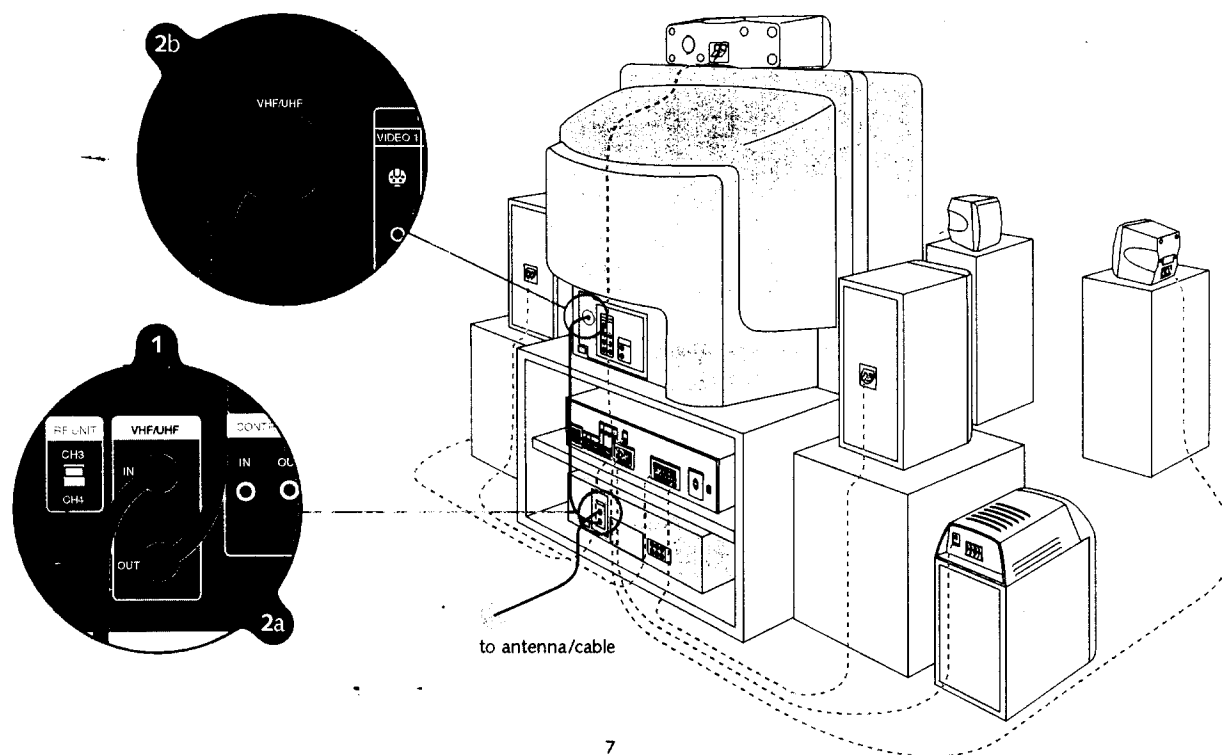

VCR + Receiver Audio Connection





- 1 Connect cables from
 - a) VCR AUDIO OUT to
 - b) receiver VIDEO-AUDIO IN:
R(right) to R(right) and L(left) to L(left).

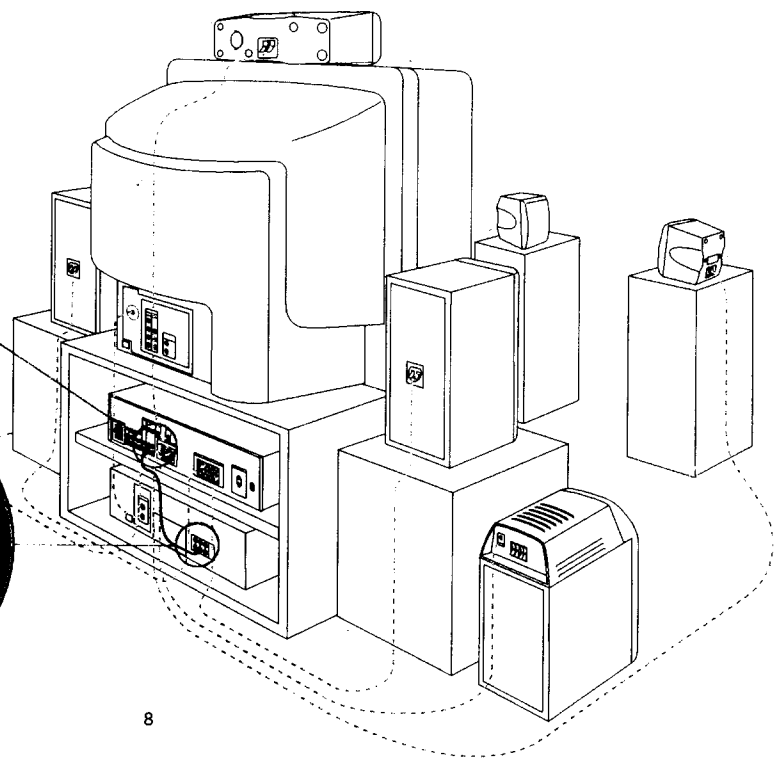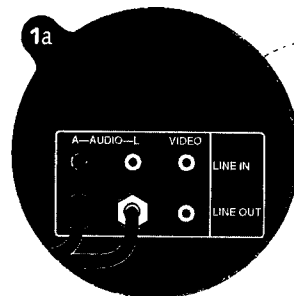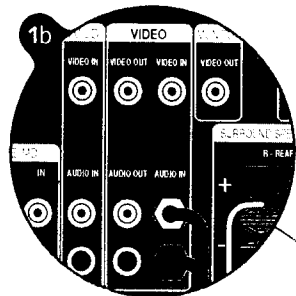

Video/Audio Optional Connection*



⚠ If your TV has audio and video connections, this is an alternative setup to page 7 and 8.


- 1 Connect cables from
 - a) TV AUDIO OUT to
 - b) receiver TV/LD-AUDIO IN.
- 2 Connect cable from
 - a) receiver MONITOR-VIDEO OUT to
 - b) TV VIDEO IN.
- 3 Connect cable from
 - a) VCR VIDEO OUT to
 - b) receiver VIDEO IN.

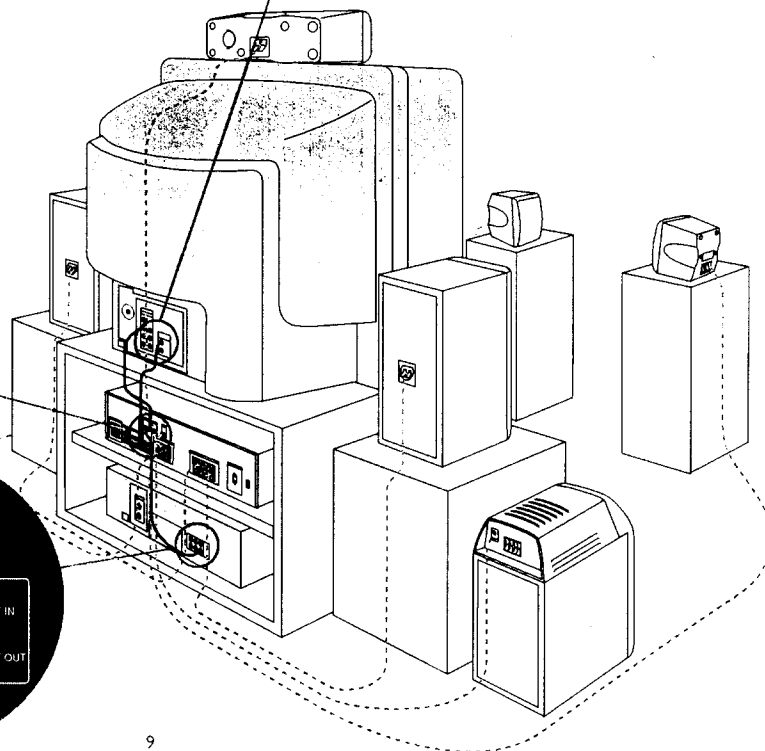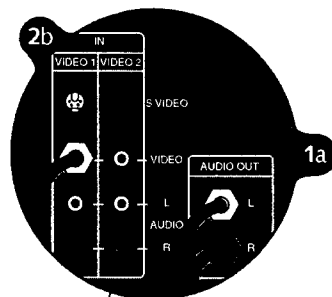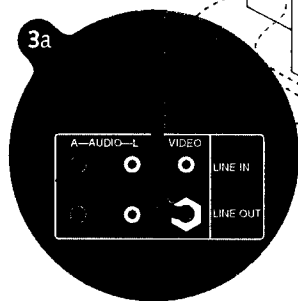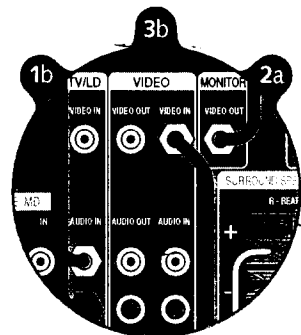

Initial System Setup

- 1 Select **VIDEO** on receiver.
- 2 Press soundfields **ON/OFF** to turn on soundfields.
- 3 Press soundfields **MODE** until **DOLBY PRO LOGIC** is selected.
- 4 Press **CENTER MODE** until **NORMAL** is selected.
- 5 Turn on the subwoofer and crossover dials to the mid-position.
- 6 Adjust settings during play until you reach desired bass impact.

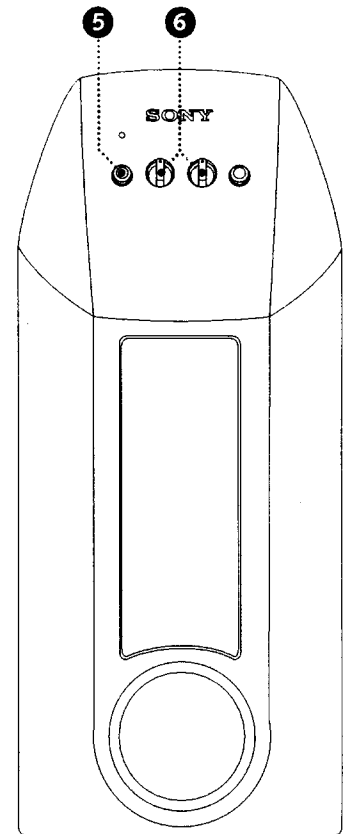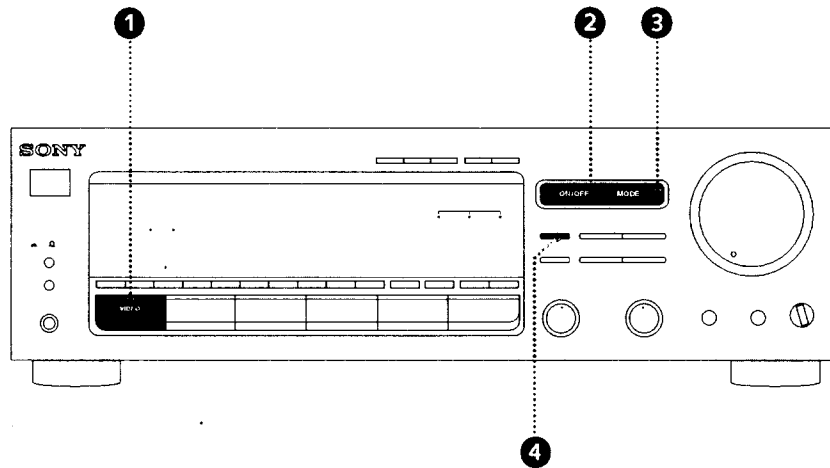

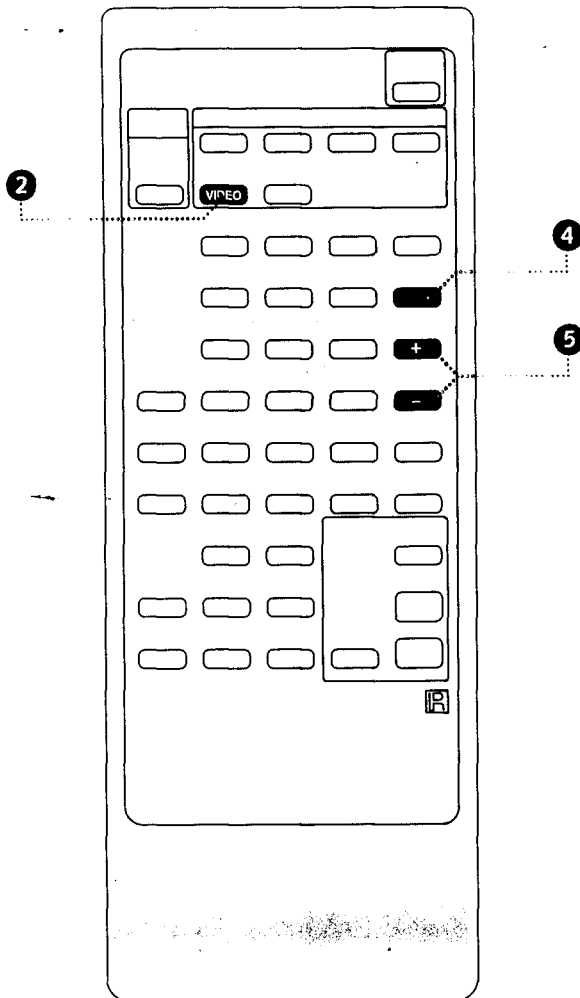

Watching TV

in Dolby® Pro Logic® Surround Sound

- ⚠ If you have made the Video/Audio Optional Connections, skip to page 12.
- 1 Turn on VCR, TV, and receiver.
 - 2 Press VIDEO on receiver or remote control.
 - 3 Make sure your VCR's TV/VCR switch is set to VCR.
 - 4 Press TV/VIDEO on remote control to select television.
 - 5 Use your VCR remote, or Sony receiver remote if your VCR is a Sony brand, to view and select different channels.

Watching Movies

in Dolby® Pro Logic® Surround Sound

- 1 Turn on VCR, TV, and receiver.
- 2 Press VIDEO on receiver or remote control.
- 3 Press TV/VIDEO on remote control to select video.
- 4 Put in the video tape and play.

Watching TV


in Dolby® Pro Logic® Surround Sound



- * *These directions only apply if you have made the Video/Audio Optional Connections on page 9.*
- ① Press **TV** on receiver or remote control.
- ② If your TV is not a Sony brand turn it on and press **TV/VIDEO** to select video.
- ③ Use your receiver, or non-Sony TV remote, to select and view channels.

Watching Movies

in Dolby® Pro Logic® Surround Sound

- ① Press **VIDEO** on receiver or remote control.
- ② If your VCR is not a Sony brand turn it on.
- ③ If your TV is not a Sony brand turn it on. Press the **INPUT SELECT** on the receiver until you see the **VIDEO 1 INPUT**.
- ④ Put in the video tape and **play**.

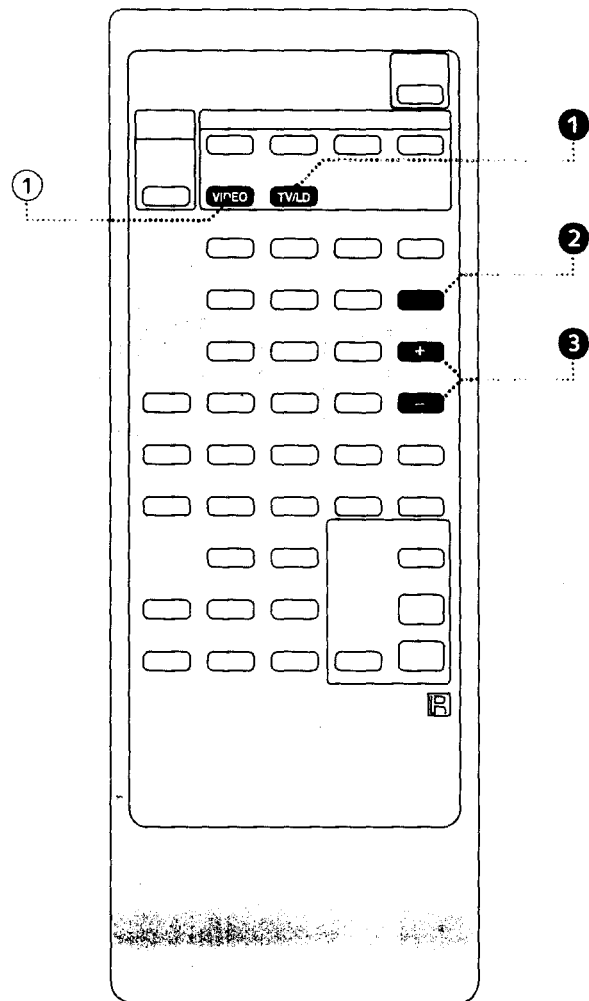

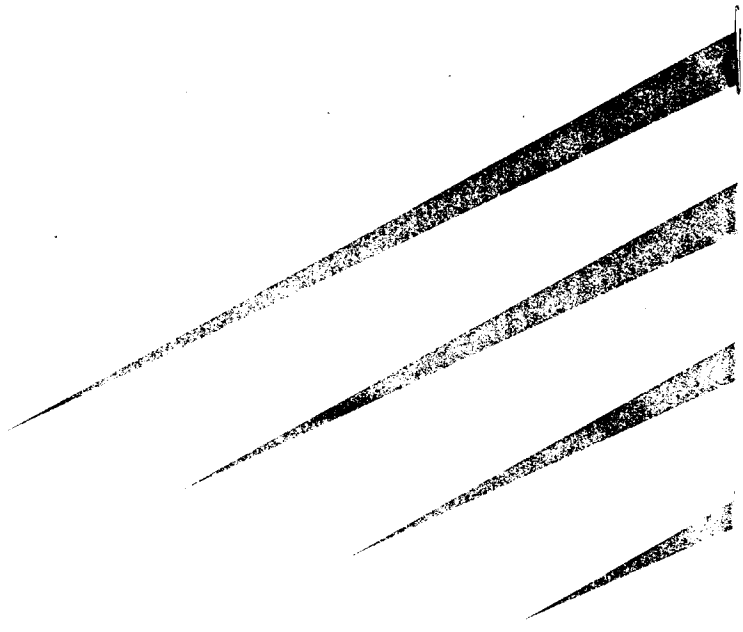

©1996 Sony Electronics Inc. Reproductions in whole or in part without written permission is prohibited.
All rights reserved. Sony, Maximum Television, and Surround Sound are trademarks of Sony.
Dolby and ProLogic are trademarks of Dolby Licensing Corporation.