


Head Cleaning


Clean the tape head after every 10 hours of use to enjoy optimum sound. Moisten a cotton swab or a soft cloth with alcohol and wipe the parts shown in the illustration.

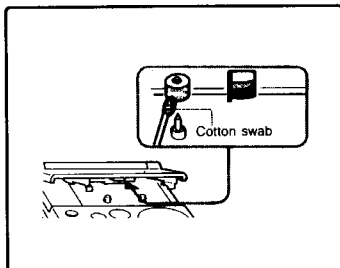

Notes on batteries.

- If the sound becomes weak and noisy, batteries may be run down. Try a new set of batteries.
- Take out the batteries if you are not going to use the cassette player for long time, or else the batteries might leak and damage the cassette player.

To refix the battery compartment lid

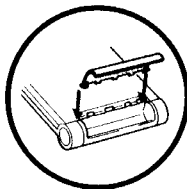

SONY



3-750-869-21 (1)

PROPERTY OF THE
NATIONAL TECHNICAL DEPT.

Cassette Player **FILE COPY**


TPM-8000 TPM-8000B

Operating Instructions

Before operating the unit, please read this manual thoroughly and retain it for future reference.

IMPORTANT NOTICE TO PARENTS:

Please read all instructions before allowing children to use

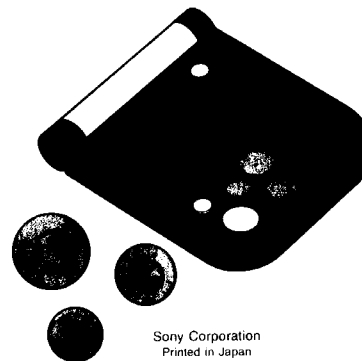

Sony Corporation
Printed in Japan
© 1989

Owner's Record


The model number is located at the bottom of the unit and the serial number in the battery compartment. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this unit.

Model No. TPM-8000/8000B Serial No.

- Do not touch the tape running area inside the cassette compartment, while the cassette player is on.
- Take care to keep the cassette player, especially tape running area, dry and clean.
- If you have any question or problem concerning your cassette player, please consult your nearest Sony dealer.
- Take care not to catch your fingers in the cassette lid.


Getting Started

You need two 1.5 V batteries size C (R14).

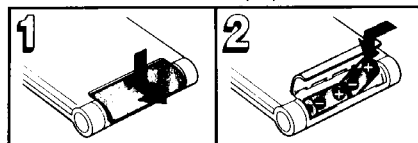

Check the ⊕ and ⊖ ends of the batteries. Close the lid.

Putting a Cassette in

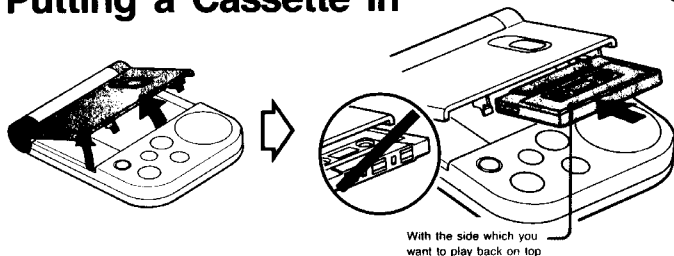


With the side which you want to play back on top.

Playing a Cassette


Press one of these three buttons to play a cassette.

Be sure to remove the cassette if the unit will not be used for a long time.

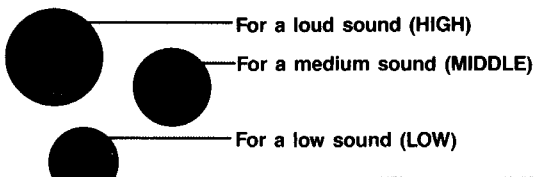

PLAY/ VOLUME buttons

You can play a tape at a loud, medium or low level.

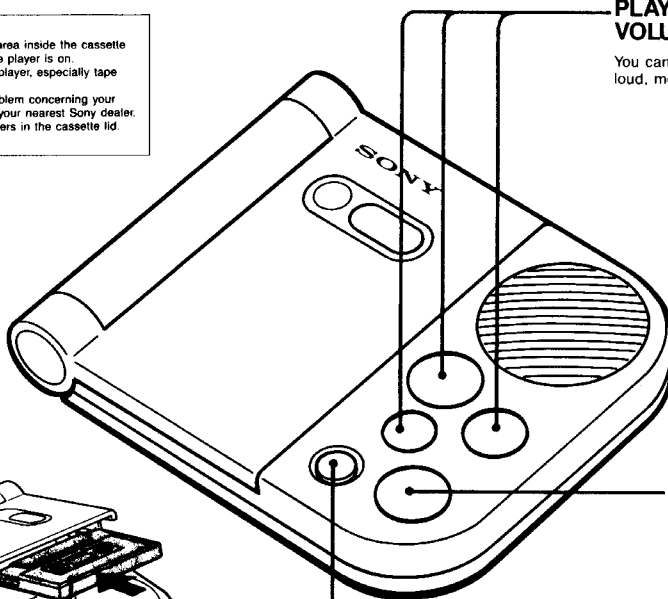

OFF button

Press to stop a tape.

REWIND/REVIEW button

Keep depressed to rewind/review a tape.

Press OFF to stop the tape.

When the tape ends

The power shuts off automatically in about one minute.

