

On safety

- Should any solid object or liquid fall into the cabinet, stop using the unit and have it checked by qualified personnel before operating it any further.
- Never disassemble the feeder.
- Do not handle the feeder roughly.

On installation

- Avoid placing the unit in a location subject to vibration, high humidity, excessive dust, direct sunlight, extremely high or low temperatures
- The unit is designed to operate horizontally. Never attempt to incline the printer.
- Do not place a video camera or other heavy objects on the unit.

On cleaning

Clean the cabinet, panel and controls with a soft dry cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent, such as alcohol or benzene, which may damage the finish.

On printing paper

- Avoid placing the print paper in a location subject to high temperatures, high humidity, wide and sudden changes in temperature, excessive dust, or direct sunlight.
- Use the print paper recommended for this printer only. If you use a different type of paper, the feeder may cause problem.
- To store a half-used printing pack, replace it in its original packing and reseal the package.

Specifications

Maximum printing quantity	25 sheets
Print paper	VP-standard print paper (4 × 5½ inches (100 × 140 mm) (v/h), cut paper)
Operating temperatures	41°F - 95°F (5°C - 35°C)
Operating humidity	20 - 80%
Dimensions	Approx. 5½ × 1½ × 7¾ inches (149 × 32 × 185 mm) (w/h/d) excluding projecting parts
Mass	Approx. 13 oz (360 g)
Accessories supplied	Operating instructions (1) Warranty card (1)

Design and specifications are subject to change without notice.

Automatic Feeder

Operating Instructions

VPF-A2

Sony Corporation © 1996 Printed in Japan

Warning

To prevent fire or shock hazard, do not expose the feeder to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Owner's Record


The model number is located at the rear and the serial number is located in the battery compartment. Record the serial number in the

Before you start


The Sony VPF-A2 is the automatic feeder specially designed for Sony Digital Color Printer DPP-M55. When you attach the VPF-A2 to the printer, you need not insert print paper into the printer; just press the PRINT button and the print paper is loaded automatically. With the VPF-A2, you can print up to 25 sheets continuously.

How to use


- 1 To open the cover, slide the front switch to the right.

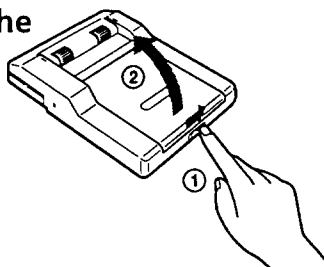

- 2 Open the lid of the paper tray and make sure that the spacer is raised.

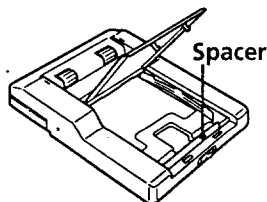


- 3 To avoid paper jamming, ruffle the print paper. Make sure not to touch the printing surface (with no logos).

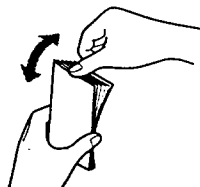


- 4 Insert print paper with its printing surface (with no logos) facing up.

Make sure not to touch the printing surface and not to bend the corners of the paper. You can load up to 25 sheets of VP-standard print paper into the feeder.

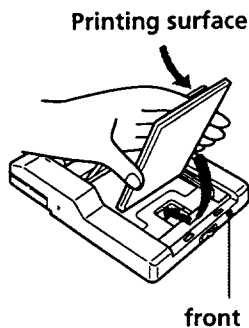


- 5 Close the feeder cover and attach the feeder to the printer.

Digital Color Printer

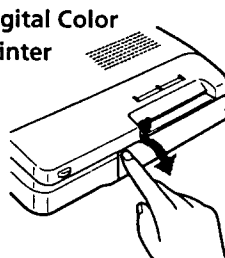


Push PUSH to open the lid.

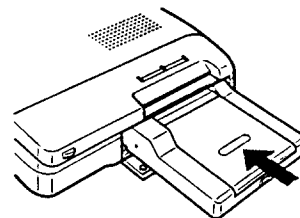

Insert the feeder firmly.

- 6 Operate the personal computer and the digital color printer, and start printing. (For details, refer to the instruction manual of the DPP-M55.)

Notes

- If a trouble occurs in feeding the print paper, the  lamp flashes. Detach the feeder and check if there is no paper jammed in the printer.
- Do not touch the printing surface (shining side where nothing is printed) when handling the print paper.
- Do not place the print paper in a dusty location. Finger prints or dust on the printing surface may result in imperfect printing.
- Use the print paper with the VP logos recommended for this printer only. If you use a different type of paper, the printer may not print properly or may cause problem.
- The feeder can hold up to 25 sheets of paper. When you add paper to a part-full feeder, be careful that the total number of sheets does not exceed 25. If you exceed this limit, paper jams may occur.
- Do not place different types of paper in the feeder. If you do, paper jams may occur.
- Before you insert print paper into the automatic feeder, remove the feeder from the Digital Color Printer DPP-M55.
- During printing, do not open the feeder cover. If you do, paper jams may occur.

If the print paper runs out during continuous printing

- 1 Remove the automatic feeder from the Digital Color Printer DPP-M55.
- 2 Insert print paper into the feeder.
- 3 Attach the feeder to the printer. Printing resumes automatically. (If you insert print paper without removing the feeder from the printer, printing does not resume automatically.)