

# WM-EX10

## Operating Instructions

WALKMAN is  
a trademark  
of Sony Corporation.

Sony Corporation © 1992 Printed in Malaysia

### Owner's Record

The model number is located on the bottom and the serial number is located inside the cassette holder. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. WM-EX10

Serial No. \_\_\_\_\_

### We do not recommend:


—the use of cassettes longer than 90 minutes.

### When not using the unit:


Avoid winding the headphone cord around the Walkman. Otherwise, the buttons may be kept pressed, resulting in unnecessary battery discharge.




1

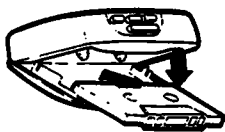


2

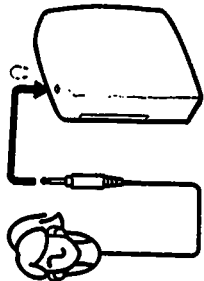


3

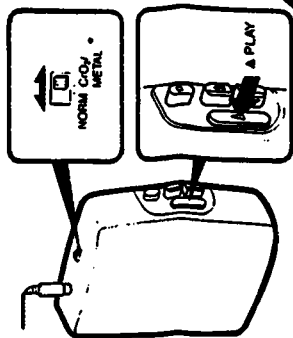

4

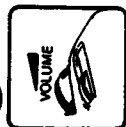

FINISH

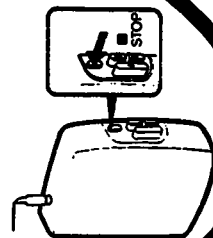

TYPE I (normal) — NONE  
TYPE II (COQ) — COQ/METAL  
TYPE IV (metal) — COQ/METAL



© 1981 Sony

# Walkman

## Notes on batteries

- To prevent damage from battery leakage and corrosion, remove the batteries when you are not going to use your Walkman for a long time.
- When you plug a cord into the DC IN 3 V jack (bottom), the internal batteries are automatically disconnected.
- When the sound becomes unstable, insert a new set of batteries.

## External power sources

You can connect the following external power sources through the DC IN 3 V jack (bottom). Only use the recommended accessories with your Walkman.

- House current using an AC-D2L AC power adaptor
- 12 V car battery using a DCC-70 car battery cord
- Two size D (R20) batteries using an EBP-500B battery case.

The illustration shows the polarity of DC IN 3 V jack. Only use power cords with the same polarity.



## Handling your Walkman

- Avoid exposure to temperature extremes, direct sunlight, moisture, sand, dust, or mechanical shock. Never leave the unit in a car parked in the sun.

## Notes on Headphones

### Road Safety

Do not use headphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headset at high volume while walking, especially pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

### Preventing hearing damage

Avoid using headphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

### Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

## Maintenance

- Prolonged use may contaminate the tape head. If sound drop-outs or excessive noise occurs, clean the head and tape path with alcohol.
- Clean your headphone plug periodically for optimum sound.
- Do not use alcohol, benzine or thinner to clean the case.

If you have any question or problem concerning your Walkman, please consult your nearest Sony dealer.

## Specifications

Power requirements 3 V DC Batteries size AA (R6) × 2

External DC 3 V power sources

Battery life (Approximate hours)

Sony Alkaline AM3 (N)	8 hrs.
Sony SUM-3 (NS)	3.5 hrs.

Accessories supplied

Stereo headphones (1) Belt clip (1)

Optional accessories

AC power adaptor AC-D2L

Car battery cord DCC-70



Battery case EBP-500B

Your dealer may not handle some of the above listed accessories. Please ask the dealer for detailed information.

Design and specifications subject to change without notice.


## You can:

— wear the Walkman on a belt.

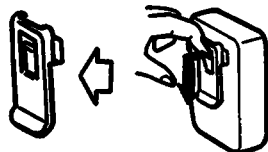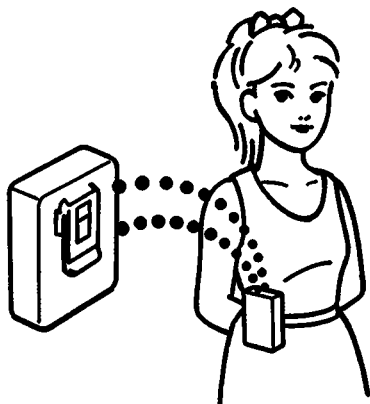

## You should:

— clean the parts shown periodically.

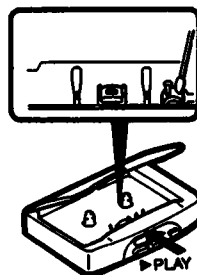

—run the Walkman for a few minutes before inserting a cassette if it has not been used for a long time.

# SONY LIMITED WARRANTY

SONY CORPORATION OF AMERICA ("SONY") warrants the product against defects in material or workmanship, as follows:

1. For a period of 90 days from the date of retail purchase, SONY shall at its sole and absolute option either repair the defective product at no charge or replace the defective product with the same model or its equivalent model at no charge through a SONY SERVICE CENTER.

To obtain warranty service during the initial 90-day period, you must take the product, or deliver the product prepaid, to one of the SONY SERVICE CENTERS located in the United States.

2. After the initial 90-day period, SONY will supply, at no charge, new or rebuilt replacements for defective parts for a period of 1 year from the date of retail purchase.

Labor for removal and installation of these parts is available from your SONY authorized service facility or SONY SERVICE CENTER, at your expense.

Proof of purchase in the form of a bill of sale or receipted invoice, which indicates that the product is within the warranty period, must be presented to obtain warranty service.

This warranty does not cover cosmetic damage, and damage to any part of the product, including the antenna, which results from acts of God, accident, misuse, abuse, improper maintenance, or connection to an improper voltage supply.

This warranty is valid only if the serial number appears on the product. This warranty is void only in the United States of America.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract with the Sony Partnership within 90 days of the date of sale, the limitation on how long an implied warranty lasts does not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Please refer to the list of SONY SERVICE CENTERS on the reverse side for the SONY SERVICE CENTER nearest you.

For your convenience, Sony Corporation of America has established the Customer Information Center to supply you with product or service information.

Important: If returning product for service. Please see reverse side of this card for your nearest Sony Service Center.

## SONY CUSTOMER INFORMATION CENTER

201-830-SONY (7668)

714-821-SONY (7668)

708-205-SONY (7668)

or write to:

## SONY CUSTOMER INFORMATION CENTER

Sony Drive, Mail Drop #T1-11

Park Ridge, New Jersey 07656

## SONY CORPORATION OF AMERICA

Sony Drive, Park Ridge, New Jersey 07656

## Sony Service Centers

<b>Arizona</b> <b>Phoenix</b> 2240 North Scottsdale Road Tempe, AZ 85281 (602) 948-7888	<b>Massachusetts</b> <b>Boston</b> 390 University Avenue 128 Westwood Industrial Center Westwood, MA 02090 (617) 329-9130	<b>Missouri</b> <b>St. Louis</b> 12482-O Natural Bridge Road Shrewport, MO 63044 (314) 291-2201
<b>California</b> <b>Burbank</b> (San Angeles area) 4100 Riverside Drive, Suite A Burbank, CA 91506 (818) 842-7888	<b>Illinois</b> <b>Chicago</b> 1730 West Fullerton, Suite 4 Riverport Shopping Center Chicago, IL 60614 (312) 929-8588	<b>New Jersey</b> <b>Metuchen</b> (N.Y. Metropolitan Area) 388 Route 17 South Metuchen, NJ 07430 (201) 529-1888
<b>Costa Mesa</b> (Orange County area) 2729 Bristol Street South Costa Mesa, CA 92626 (714) 848-8232	<b>Indiana</b> (Chicago area) 7340 North Calumet Avenue Mies, IL 60548 (708) 647-2400	<b>Utah</b> <b>Brigham City</b> US Highway 22 at Morris Avenue Unger, UT 84303 (201) 687-6556
<b>San Bruno</b> (San Francisco area) 731 Canby Place San Bruno, CA 94066 (415) 871-2810	<b>Minnesota</b> (Chicago area) 6036-38 South Cass Avenue Westmont, IL 60558 (708) 988-0048	<b>Ohio</b> <b>Cleveland</b> 6370 Van Road Parma Heights, OH 44130 (216) 848-7888
<b>San Diego</b> 8878 Campton Drive San Diego, CA 92123 (619) 279-2734	<b>Kansas</b> <b>Overland Park</b> 1712 West 28th Street Overland Park, KS 66214 (913) 888-2822	<b>Pennsylvania</b> <b>Philadelphia</b> 691 Park Avenue King of Prussia, PA 19406 (215) 268-8550
<b>San Jose</b> 1258 Old Oakland Road San Jose, CA 95112 (408) 280-7888	<b>Maryland</b> (Washington D.C.) <b>Washington D.C.</b> 5300 Sursumed Avenue Bethesda, MD 20706 (301) 594-1818	<b>Pittsburgh</b> <b>Westland</b> 10510 Perry Highway Rt. 19th Westland, PA 15090 (412) 525-8448
<b>Colorado</b> <b>Denver</b> Havana Plaza Center 10740 East 8th Avenue Aurora, CO 80014 (303) 788-7888	<b>Massachusetts</b> <b>Boston</b> 390 University Avenue 128 Westwood Industrial Center Westwood, MA 02090 (617) 329-9130	<b>Texas</b> <b>Dallas</b> 401 Preston Valley Shopping Center Dallas, TX 75230 (214) 681-2837
<b>Florida</b> <b>Fort Lauderdale</b> 2880 North 28th Terrace Hollywood, FL 33030 (304) 930-8800	<b>Michigan</b> <b>Dearborn</b> 43304 Seven Mile Road Dearborn, MI 48106 (313) 344-4044	<b>Virginia</b> <b>Reston</b> 7838 Westheimer Houston, TX 77063 (713) 783-8781
<b>Georgia</b> <b>Atlanta</b> 120 Interstate North Parkway East Suite 410 Atlanta, GA 30338 (404) 953-8871	<b>Minnesota</b> <b>Minneapolis</b> 4300 W. 34th Street St. Louis Park, MN 55416 (612) 920-8000	<b>Washington</b> <b>Seattle</b> 836 Pacific Seattle, WA 98108 (206) 782-8500

## Sony District Service Offices

<b>Western Zone</b> <b>Western District</b> Sony Service Company 2729 Bristol Street South Costa Mesa, CA 92626 (714) 848-8838	<b>Central Zone</b> <b>Midwest District</b> Sony Service Company 1200 N. Arlington Heights Rd. Northbrook, IL 60062 (708) 773-7888	<b>Eastern Zone</b> <b>Eastern District</b> Sony Service Company 388 Route 17 South Metuchen, NJ 07430 (201) 529-1888
<b>Northwestern District</b> Sony Service Company 1258 Old Oakland Road San Jose, CA 95112 (408) 280-7875	<b>East Central District</b> Sony Service Company 28200 Town Center Drive, Suite 300 West, TX 48060 (313) 367-2281	<b>Mid-Atlantic District</b> Sony Service Company 691 Park Avenue King of Prussia, PA 19406 (215) 788-8848
<b>Southwestern District</b> Sony Service Company 3301 Pioneer Ct., Suite 100 Irving, TX 75063 (214) 560-8370		<b>Southeastern District</b> Sony Service Company 120 Interstate North Parkway East Suite 410 Atlanta, GA 30338 (404) 953-8858