


Connect your 3D Blu-ray Disc™ Player to a 3D TV Using an HDMI® Cable

What is 3D TV

Experience High Definition TV in a whole new dimension. 3D TV brings you into the action with razor-sharp detail and clarity that you can almost touch. 3D TV works with 3D active glasses to display a unique frame sequence to each eye individually, thus resulting in full high definition (HD) 3D images. 3D TV enhances viewing by adding depth to your television experience.

What you will need & Connection Diagrams

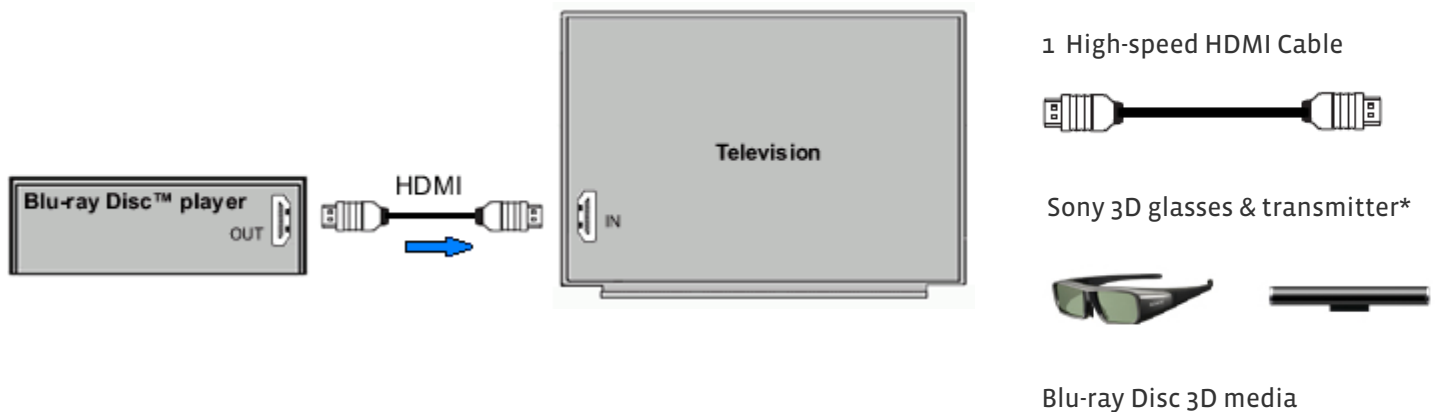

*If the Sony TV is 3D ready you will need to purchase the 3D active glasses and 3D sync transmitter separately. Sony TVs with built in 3D technology have the transmitter built into the TV and come supplied with 3D active glasses.

Why we recommend this hookup

This connection is required in order to view 3D content on a 3D television. You will need to make sure you have a “High-Speed HDMI” cable because a standard HDMI cable will only produce 2D results. To enjoy 3D content playback you will also need to have a Blu-ray Disc media encoded in 3D. Standard Blu-ray Disc media will play back in 2D.

Connection instructions

1. Connect a High-speed HDMI cable to:
 - a. **HDMI OUT** jack on the Blu-ray Disc player
 - b. **HDMI IN** jack on the TV



Important: A High-Speed HDMI cable is required for 3D content. The cable should be marked with High-Speed.

2. If you have a 3D ready TV connect the 3D transmitter to the “3D input” jack on the TV and place the transmitter in line of sight of the viewing area.

Note: The transmitter uses infra-red technology and will not work if there is an obstruction, such as a wall between the transmitter and the glasses.

How to test the hookup & operate your equipment

Watch a Blu-ray Disc or DVD movie

1. Turn on the TV.
2. Turn on the Blu-ray Disc player.
3. Tune the TV to the HDMI video input to which the Blu-ray Disc player is connected, for example, **VIDEO 5**.
4. Turn on the Sony active 3D glasses
5. Insert a 3D Blu-ray Disc movie into the Blu-ray Disc player.
6. Press the **Play** button on the Blu-ray Disc player remote control.

If there is picture and sound from the Blu-ray Disc player on the TV, you have connected the Blu-ray Disc player correctly.

Note: It may be necessary to activate the 3D feature in the TV and Blu-ray Disc player via the menu systems. Please refer to the instruction manual for your model product for more information.

Additional support information is available at the Sony Support Web site:
esupport.sony.com