

Amendment to the DiIMAGE F100 instruction manual


File number memory - page 99

When file number memory is active and the camera is turned off without taking a picture after the memory card is changed or formatted, or all the images on the card are deleted, the file number will be reset to 0001. If an image is captured after one of the above operations, the image file number will be one greater than the last file recorded.

Every time a new folder is created, the file number is reset to 0001 regardless if file number memory is active or not.

Flash signals - page 33

When the orange flash lamp blinks quickly (1), the flash is charging and the shutter will not release. The lamp will go out when the flash is charged.

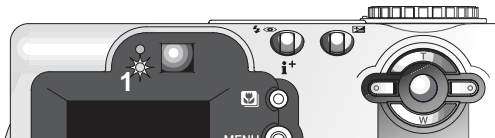

MINOLTA

9229-2777-22 SY-A205