

DVP-NS36/NS37/NS45P/NS55P/NS61P/NS63P

RMT-D175A/RMT-D175P/RMT-D175C

SERVICE MANUAL



Photo : DVP-NS36
RMT-D175P



Notes: Australia/NZ model only

AEP Model
DVP-NS36/NS37

Russian Model
UK Model
DVP-NS36

Canadian Model
US Model
DVP-NS45P/NS55P

Argentina Model
Brazilian Model
E Model
DVP-NS63P

PX Model
DVP-NS55P

Australia/New Zealand Model
Chinese Model
Middle East Model
Singapore Model
DVP-NS61P

SPECIFICATIONS

System

Laser: Semiconductor laser

Signal format system: PAL/NTSC:
(Except DVP-NS45P/NS55P)

Signal format system: NTSC:
(DVP-NS45P/NS55P/NS63P)

Audio characteristics

Frequency response: DVD VIDEO

(PCM 96 kHz): 2 Hz to 44 kHz
(± 1.0 dB)/DVD VIDEO (PCM 48 kHz):
2 Hz to 22 kHz (± 0.5 dB)/CD: 2 Hz to
20 kHz (± 0.5 dB)

Signal-to-noise ratio (S/N ratio): 115 dB
(LINE OUT L/R (AUDIO) jacks only)

Harmonic distortion: 0.003%

Dynamic range: DVD VIDEO:
103 dB/CD: 99 dB

Wow and flutter: Less than detected value
($\pm 0.001\%$ W PEAK)

Outputs

**(Jack name: Jack type/Output level/
Load impedance)**

LINE OUT (AUDIO): Phono jack/
2 Vrms/ 10 kilohms

DIGITAL OUT (OPTICAL):

Optical output jack/-18 dBm
(wave length 660 nm) (DVP-NS61P)

DIGITAL OUT (COAXIAL): Phono jack/
0.5 Vp-p/75 ohms

COMPONENT VIDEO OUT:

(Y, Pb/Cb, Pr/Cr)

Phono jack/Y: 1.0 Vp-p,
Pb/Cb, Pr/Cr: 0.7 Vp-p/75 ohms
(DVP-NS61P only)

COMPONENT VIDEO OUT: (Y, Pb, Pr)

Phono jack/Y: 1.0 Vp-p/Pb,Pr:
interlace*1 = 0.648 Vp-p, progressive or
interlace*2 = 0.7 Vp-p/75 ohms

*1 BLACK LEVEL

(COMPONENT OUT) is ON

*2 BLACK LEVEL

(COMPONENT OUT) is OFF
(DVP-NS45P/NS55P/NS63P)

S VIDEO OUT:

4-pin mini DIN/Y: 1.0 Vp-p,
C: 0.286 Vp-p/75 ohms
(DVP-NS45P/NS55P/NS63P)

S VIDEO OUT:

4-pin mini DIN/Y: 1.0 Vp-p,
C: 0.3 Vp-p (PAL),
0.286 Vp-p (NTSC)/75 ohms
(DVP-NS61P only)

LINE (RGB)-TV:

(AUDIO): SCART jack/2 Vrms/10 kilohms
(VIDEO): SCART jack/1.0 Vp-p/75 ohms
(S VIDEO): SCART jack/Y: 1.0 Vp-p,
C: 0.3 Vp-p (PAL),
0.286 Vp-p (NTSC)/75 ohms
(RGB): SCART jack/0.7 Vp-p/75 ohms
(DVP-NS36 Except RUS/NS37 only)

LINE OUT (VIDEO): Phono jack/
1.0 Vp-p/75 ohms

General

Power requirements:

220 - 240 V AC, 50/60 Hz
(DVP-NS36/NS37)
120 V AC, 60 Hz
(DVP-NS45P:US,CND/NS55P:US,CND)
110 - 240 V AC, 50/60 Hz
(DVP-NS61P/NS55P:PX/NS63P)

Power consumption:

9W (Except DVP-NS45P:US,CND/
NS55P:US,CND)
10W (DVP-NS45P:US,CND/
NS55P:US,CND)

Dimensions (approx.):

430 × 43 × 207.6 mm
(DVP-NS63P: E only)
430 × 43 × 208 mm
(17 × 11 11/16 × 8 1/5 in.)
(width/height/depth) incl. projecting parts

Mass (approx.):

1.75 kg (DVP-NS36/NS37)
1.72 kg (3 5/4 lb)
(DVP-NS45P/NS55P/NS61P)
1.74 kg (DVP-NS63P)

Operating temperature: 5°C to 35°C
(41°F to 95°F)

Operating humidity: 25% to 80%

Specifications and design are subject to
change without notice.

ENERGY STAR® is a U.S. registered mark.
As an ENERGY STAR® Partner, Sony
Corporation has determined that this
product meets the ENERGY STAR®
guidelines for energy efficiency.
(DVP-NS61P: AUS only)




CD/DVD PLAYER

SONY®

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

- 1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
- 2. Check the interboard wiring to ensure that no wires are “pinched” or contact high-wattage resistors.
- 3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
- 4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
- 5. Check the line cord for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
- 6. Check the B+ voltage to see it is at the values specified.
- 7. Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

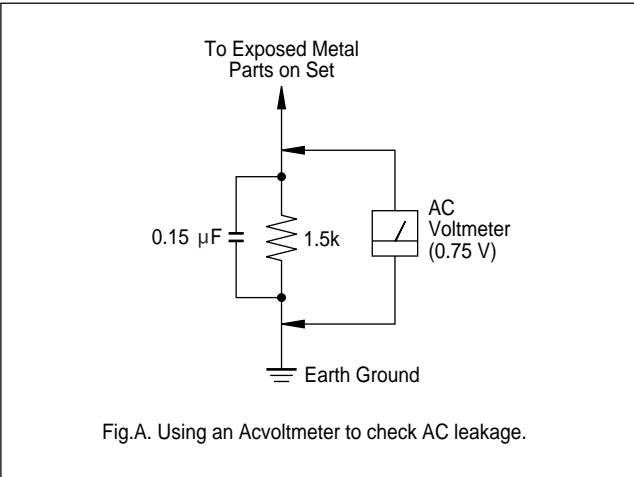

WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION, BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 25 cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

CAUTION:

The use of optical instrument with this product will increase eye hazard.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK OR DOTTED LINE WITH MARK ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5mA (500 microampers). Leakage current can be measured by any one of three methods.

- 1. A commercial leakage tester, such as the Simpson 229 or RCA TW-540A. Follow the manufacturers’ instructions to use these instruments.
- 2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
- 3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75V, so analog meters must have an accurate low voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

Unleaded solder


Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size.)

: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40°C higher than ordinary solder.
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
Soldering irons using a temperature regulator should be set to about 350°C
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

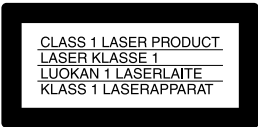

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

TABLE OF CONTENTS

SERVICE NOTE

1. Disc Removal Procedure (at POWER OFF)	5
--	---

1. GENERAL

WARNING	1-1
Notes About the Discs	1-1
Precautions	1-1
About This Manual	1-1
This Player Can Play the Following Discs	1-1
Index to Parts and Controls	1-2
Guide to the Control Menu Display	1-3
Hookups	1-3
Hooking Up the Player	1-3
Step 1: Unpacking	1-3
Step 2: Inserting Batteries into the Remote	1-3
Step 3: Connecting the Video Cords	1-4
Step 4: Connecting the Audio Cords	1-4
Step 5: Connecting the Mains Lead	1-5
Step 6: Quick Setup	1-5
Playing Discs	1-5
Playing Discs	1-5
Resuming Playback from the Point Where You	
Stopped the Disc (Multi-disc Resume)	1-6
Using the DVD's Menu	1-6
Selecting "ORIGINAL" or "PLAY LIST" on a	
DVD-RW/DVD-R	1-6
Playing VIDEO CD's With PBC Functions	
(PBC Playback)	1-6
Various Play Mode Functions (Programme Play,	
Shuffle Play, Repeat Play, A-B Repeat Play	1-7
Searching for a Scene	1-8
Searching for a Particular Point on a Disc (Search,	
Scan, Slow-motion Play, Freeze Frame)	1-8
Searching for a Title/Chapter/Track/Scene, etc.	1-8
Searching by Scene (PICTURE NAVIGATION)	1-8
Viewing Information About the Disc	1-9
Checking the Playing Time and Remaining Time	1-9
Sound Adjustments	1-9
Changing the Sound	1-9
TV Virtual Surround Settings (TVS)	1-10
Enjoying Movies	1-10
Changing the Angles	1-10
Displaying the Subtitles	1-10
Adjusting the Playback Picture	
(CUSTOM PICTURE MODE)	1-11
Sharpening the Picture (SHARPNESS)	1-11
Enjoying MP3 Audio and JPEG Images	1-11
About MP3 Audio Tracks and JPEG Image Files	1-11
Playing MP3 Audio Tracks and JPEG Image Files	1-12
Enjoying JPEG Images as a Slide Show	1-12
Enjoying DivX Videos	1-13
About DivX Video Files	1-13
Playing DivX Video Files	1-13
Using Various Additional Functions	1-14
Locking Discs (CUSTOM PARENTAL CONTROL,	
PARENTAL CONTROL)	1-14
Controlling Your TV with the Supplied Remote	1-15
Settings and Adjustments	1-16
Using the Setup Display	1-16
Setting the Display or Sound Track Language	
(LANGUAGE SETUP)	1-16
Settings for the Display (SCREEN SETUP)	1-16
Custom Settings (CUSTOM SETUP)	1-16
Settings for the Sound (AUDIO SETUP)	1-16
Additional Information	1-17
Troubleshooting	1-17
Self-diagnosis Function (When letters/	
numbers appear in the display	1-18
Glossary	1-18
Specifications	1-18

2. DISASSEMBLY

2-1. Upper Case	2-1
2-2. Front Panel Assembly	2-1
2-3. Loading Assembly	2-2
2-4. Optical Pick-Up	
(Device, Optical KHM-313CAA/C2RP)	2-3
2-5. Rear Panel, MV Board and IF Board	2-4
2-5-1. Rear Panel, MV-51 and IF-144/IF-145 Boards	2-4
2-5-2. Rear Panel, MV-50 and IF-144 Boards	2-5
2-6. Switching Regulator	2-5
2-7. Interval Views	2-6
2-8. Circuit Boards Location	2-7

3. BLOCK DIAGRAMS

3-1. Overall Block Diagram	3-1
3-2. Power Line Block Diagram	3-3
3-3. System Control/Signal Processor Block Diagram	3-5
3-4. RF/Servo Block Diagram	3-7
3-5. Video (1) Block Diagram	3-9
3-6. Video (2) Block Diagram	3-11
3-7. Audio Block Diagram	3-13
3-8. Interface Control Block Diagram	3-15

4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. Frame Schematic Diagram	4-1
4-2. Printed Wiring Boards and Schematic Diagrams	4-3
Waveforms	
MV-50 Board (DVP-NS36/NS37))	4-4
MV-51 Board (DVP-NS45P/55P/61P/63P)	4-5
IF-144 Printed Wiring Board	4-7
IF-144 (Interface) Schematic Diagram	4-9
IF-145 Printed Wiring Board	4-11
IF-145 (Interface) Schematic Diagram	4-13
MS-203 Printed Wiring Board	4-15
MS-203 (Loading Motor) Schematic Diagram	4-16
MV-50 Printed Wiring Board	4-17
MV-50 (CPU, Servo-DSP, AVDEC)	
Schematic Diagram	4-19
MV-50 (Drive) Schematic Diagram	4-21
MV-50 (Video Euro) Schematic Diagram	4-23
MV-50 (Audio) Schematic Diagram	4-25
MV-50 (Power) Schematic Diagram	4-27
MV-51 Printed Wiring Board	4-29
MV-51 (CPU, Servo-DSP, AVDEC)	
Schematic Diagram	4-31
MV-51 (Drive) Schematic Diagram	4-33
MV-51 (Video) Schematic Diagram	4-35
MV-51 (Audio) Schematic Diagram	4-37
MV-51 (Power) Schematic Diagram	4-39
SW-468 Printed Wiring Board	4-41
SW-468 (Switch) Schematic Diagram	4-42
SW-475 Printed Wiring Board	4-43
SW-475 (Switch) Schematic Diagram	4-44
Power Block (SRV1872WW) Printed Wiring Board	4-45
Power Block (SRV1872WW) Schematic Diagram	4-47
Power Block (SRV1873UC) Printed Wiring Board	4-49
Power Block (SRV1873UC) Schematic Diagram	4-51

5. IC PIN FUNCTION DESCRIPTION

5-1. System Control Pin Function	
(MV-50/51 Boards IC101)	5-1

6. TEST MODE

6-1. Executing IOP Measurement 6-1

6-2. Emergency History Check 6-1

6-3. Initializing Setup Data 6-2

6-4. Version Information 6-3

6-5. If Con Self Diagnostic Function 6-3

7. ELECTRICAL ADJUSTMENT

7-1. Power Supply Output Voltage Check 7-1

7-2. Adjustment of Video System
(DVP-NS36:AEP,UK/NS37) 7-2

7-3. Adjustment of Video System
(Except DVP-NS35/NS36:AEP,UK/NS37) 7-4

8. REPAIR PARTS LIST

8-1. Exploded Views 8-1

8-1-1. Main Section 8-1

8-1-2. Mechanism Deck Assembly 8-3

8-2. Electrical Parts List 8-4

SERVICE NOTE

1. DISC REMOVAL PROCEDURE (at POWER OFF)

- 1) Open dust cover to access to a hole insert a tapering driver into the aperture of the unit bottom, and move the lever of chuck cam in the direction of the arrow A. (See Fig. 1)
- 2) Draw out the tray in the direction of the arrow B, and remove a disc. (See Fig. 1)
- 3) After removing the disc, push in the direction of arrow C until the tray fully in.
- 4) Move the lever of chuck cam in the direction of arrow D.

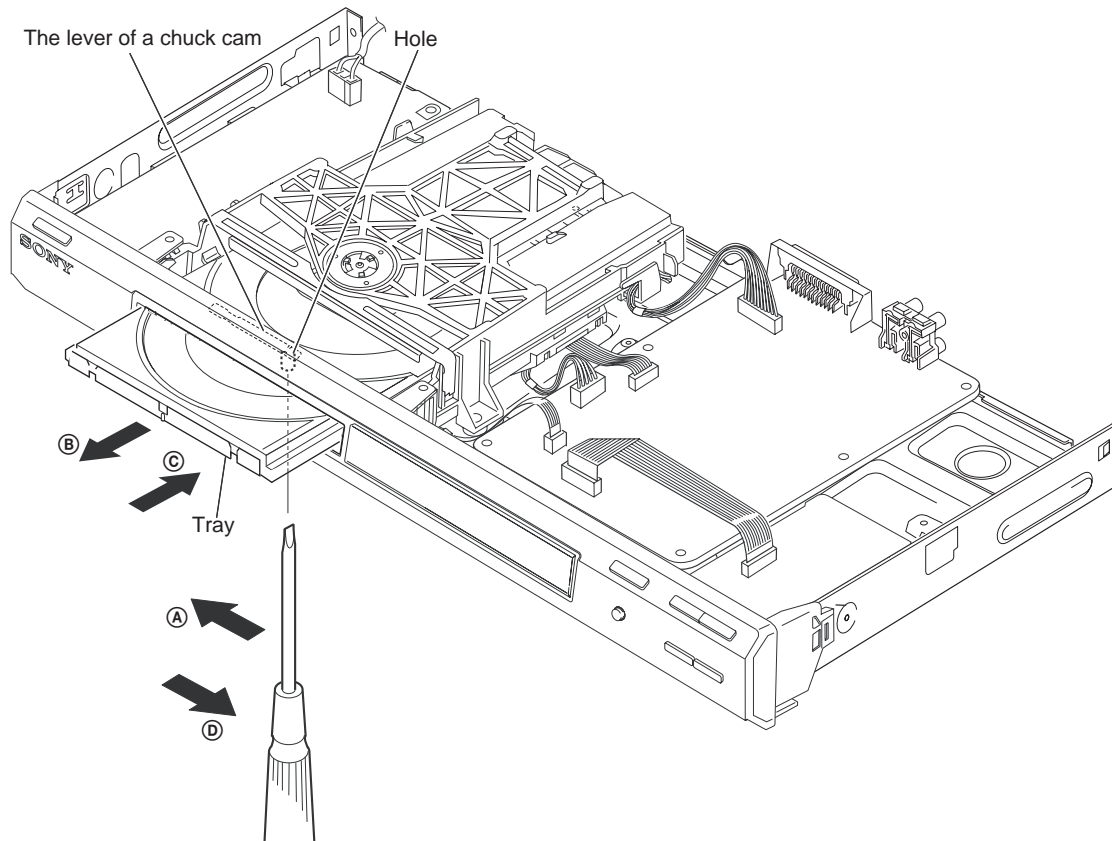


Fig. 1.

Note:

IM 2-661-647-11 for DVP-NS61P (Except China) other model, you can refer to IM list in accessories (See page 8-11)

**SECTION 1
GENERAL**

This section is extracted from instruction manual. 2-661-647-11

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.
The mains lead must only be changed at a qualified service shop.

CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet.
Refer servicing to qualified personnel only.

**Disposal of Old Electrical & Electronic Equipment**

This symbol is applicable only in the European Union and other European countries with separate collection systems.

Precautions**Safety**

- The power requirements and power consumption of this unit are indicated on the back of the unit. Check that the unit's operating voltage is identical with your local power supply.

Power requirements and power consumption

- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Installing

- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the unit and discs away from equipment with strong magnets, such as microwave ovens, or large loudspeakers.
- Do not place heavy objects on the unit.

For Customers in Taiwan only

Please recycle used batteries.

Notes About the Discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.



- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.
- Clean the disc with a cleaning cloth.
- Wipe the disc from the centre out.



- Do not use solvents such as benzene, thinner, commercially available disc/lens cleaners, or anti-static spray intended for vinyl LPs.
- If you have printed the disc's label, dry the label before playing.

Precautions**On safety**

Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.

On power sources

- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- If you are not going to use the player for a long time, be sure to disconnect the player from the wall outlet. To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.

On placement

- Place the player in a location with adequate ventilation to prevent heat build-up in the player.
- Do not place the player on a soft surface such as a rug.
- Do not place the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.

On operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.
- When you move the player, take out any discs. If you don't, the disc may be damaged.

On adjusting volume

Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level section is played.

On cleaning

Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

On cleaning discs, disc/lens cleaners

Do not use a commercially available cleaning disc or disc/lens cleaner (wet or spray type). These may cause the apparatus to malfunction.

IMPORTANT NOTICE

Caution: This player is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Plasma display panel televisions and projection televisions are susceptible to this.

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

This Player Can Play the Following Discs

Format of discs	
DVD VIDEO	
DVD-RW/-R	
DVD+RW/+R	
VIDEO CD/ Music CD	
CD-RW/-R	

"DVD+RW," "DVD-RW," "DVD+R," "DVD-R," "DVD VIDEO," and "CD" logos are trademarks.

Note about CDs/DVDs

The player can play CD-ROMs/CD-Rs/CD-RWs recorded in the following formats:
– music CD format
– video CD format
– MP3 audio tracks, JPEG image files, and DivX video files of format conforming to ISO 9660* Level 1/Level 2, or its extended format, Joliet
– KODAK Picture CD format
* A logical format of files and folders on CD-ROMs, defined by ISO (International Organization for Standardization).

The player can play DVD-ROMs/ DVD+RWs/DVD-RWs/DVD+Rs/DVD-Rs recorded in the following format:
– MP3 audio tracks, JPEG image files and DivX video files of format conforming to UDF (Universal Disk Format).

Example of discs that the player cannot play

The player cannot play the following discs:

- CD-ROMs/CD-Rs/CD-RWs other than those recorded in the formats listed on this page.
- CD-ROMs recorded in PHOTO CD format.
- Data part of CD-Extras.
- DVD Audio discs.
- DATA DVDs that do not contain MP3 audio tracks, JPEG image files, or DivX video files.
- HD layer on Super Audio CDs.

Also, the player cannot play the following discs:

- A DVD VIDEO with a different region code.
- A disc that has a non-standard shape (e.g., card, heart).
- A disc with paper or stickers on it.
- A disc that has the adhesive of cellophane tape or a sticker still left on it.

Region code

Your player has a region code printed on the back of the unit and only will play DVD VIDEOS (playback only) labelled with identical region codes. This system is used to protect copyrights.

DVD VIDEOS labelled will also play on this player.

If you try to play any other DVD VIDEO, the message "Playback prohibited by area limitations." will appear on the TV screen. Depending on the DVD VIDEO, there may be no region code indication, even though playing the DVD VIDEO is prohibited by area restrictions.



Region code

About This Manual

- Instructions in this manual describe the controls on the remote. You can also use the controls on the player if they have the same or similar names as those on the remote.
- "DVD" may be used as a general term for DVD VIDEOS, DVD+RWs/DVD+Rs (+VR mode) and DVD-RWs/DVD-Rs (video mode).
- The meaning of the icons used in this manual is described below:

Icons	Meaning
	Functions available for DVD VIDEOS and DVD+RWs/DVD+Rs in +VR mode or DVD-RWs/DVD-Rs in video mode
	Functions available for DVD-RWs/DVD-Rs in VR (Video Recording) mode
	Functions available for VIDEO CDs (including Super VCDs or CD-Rs/CD-RWs in video CD format or Super VCD format)
	Functions available for music CDs or CD-Rs/CD-RWs in music CD format
	Functions available for DATA CDs (CD-ROMs/CD-Rs/CD-RWs containing MP3 ¹ audio tracks, JPEG image files, and DivX ^{2,3} video files)
	Functions available for DATA DVDs (DVD-ROMs/DVD+Rs/DVD+RWs/DVD-Rs/ DVD-RWs containing MP3 ¹ audio tracks, JPEG image files and DivX ^{2,3} video files)

*1 MP3 (MPEG-1 Audio Layer III) is a standard format defined by ISO (International Organization for Standardization)/IEC (International Electrotechnical Commission) MPEG which compresses audio data.

*2 DivX[®] is a video file compression technology, developed by DivX, Inc.

*3 DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

DVP-NS36/NS37/NS45P/NS55P/NS61P/NS63P

Notes

- **Notes about DVD-RWs/DVD+Rs, DVD-RWs/DVD-Rs or CD-Rs/CD-RWs**
Some DVD+Rw/DVD+Rs, DVD-Rw/DVD-Rs, or CD-R/CD-RWs cannot be played on this player due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software.
The disc will not play if it has not been correctly finalized. For more information, refer to the operating instructions for the recording device.
Note that this player cannot play discs that do not work with some DVD+Rw/DVD+Rs, even if they have been correctly finalized. In this case, view the data by normal playback. Also some DATA CDs/DATA DVDs created in Packet Write format cannot be played.
- **Music discs encoded with copyright protection technologies**
This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.
- **Note on DualDiscs**
A DualDisc is a two sided disc product which makes DVD recorded material on one side and digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

Copyrights

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

 
Note on playback operations of DVDs and VIDEO CDs










Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the instructions supplied with the DVDs or VIDEO CDs.

Index to Parts and Controls


For more information, see the pages indicated in parentheses

Front panel



- | | |
|---|--|
| 1  (on/standby) button (22) | 6  (stop) button (23) |
| 2  Disc tray (22) | 7  (previous/next) buttons (31) |
| 3  Front panel display (9) | 8  PROGRESSIVE button/indicator (17)
Lights up when the player outputs progressive signals. |
| 4  (open/close) button (22) | 9  (remote sensor) (14) |
| 5  (play) button (22) | |

 Rear panel




- 1** DIGITAL OUT (COAXIAL) jack (18)
- 2** LINE OUT L/R (AUDIO) jacks (18)
- 3** LINE OUT (VIDEO) jack (15)
- 4** S VIDEO OUT jack (15)
- 5** COMPONENT VIDEO OUT jacks (15)
- 6** DIGITAL OUT (OPTICAL) jack (18)

7


8

Front panel display


When playing back a DVD VIDEO/DVD-VR mode disc

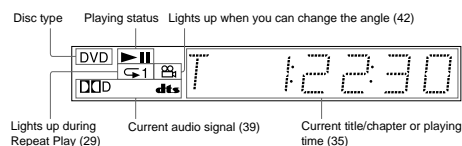

When playing back a VIDEO CD with Playback Control (PBC) (26)

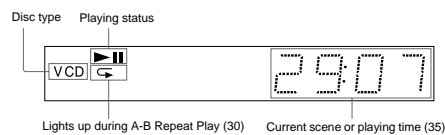


When playing back a CD, DATA CD (MP3 audio/DivX video)/DATA DVD (MP3 audio/DivX video), or VIDEO CD (without PBC)

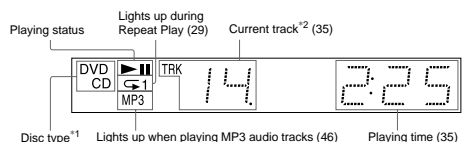





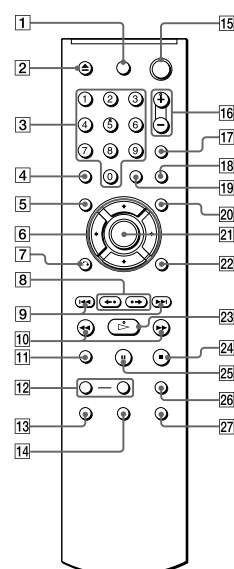



*¹ When playing DATA DVDs, the DVD indicator is displayed.
When playing VIDEO CDs (without PBC), the VCD indicator is displayed.
*² When playing DivX video files, the current track is not displayed.

Remote



- 9** PREV/NEXT (previous/next) buttons (23)
- 10** SCAN/SLOW buttons (32)
- 11** ZOOM button (23, 50)
- 12** SLOW PLAY/FAST PLAY buttons (23)
- 13** AUDIO button (38)
- 14** SUBTITLE button (42)
- 15** (on/standby) button (22)
- 16** VOL (volume) +/- buttons (59)
The + button has a tactile dot.*
- 17** TV/VIDEO button (59)
- 18** PICTURE NAVI (picture navigation) button (34, 49)
- 19** TIME/TEXT button (35)
- 20** MENU button (25)
- 21** ENTER button (20)
- 22** DISPLAY button (11)
- 23** PLAY button (22)
The button has a tactile dot.*
- 24** STOP button (23)
- 25** PAUSE button (23)
- 26** SUR (surround) button (40)
- 27** ANGLE button (42)

* Use the tactile dot as a reference when operating the player.

- 1 TV  (on/standby) button (59)
- 2  OPEN/CLOSE button (23)
- 3 Number buttons (25)
The number 5 button has a tactile dot.*
- 4 CLEAR button (27)
- 5 TOP MENU button (25)
- 6   buttons (25)
- 7  RETURN button (23)
- 8    REPLAY/STEP/
ADVANCE/STEP buttons (23, 32)

Guide to the Control Menu Display


Use the Control Menu to select a function and to view related information. Press DISPLAY repeatedly to turn on or change the Control Menu display as follows:



Control Menu display

The Control Menu display 1 and 2 will show different items depending on the disc type. For details about each item, see the pages in parentheses.

Example: Control Menu display 1 when playing a DVD VIDEO.

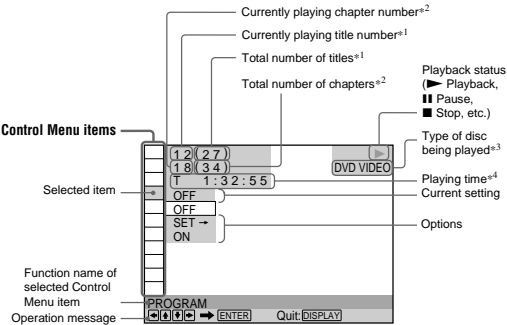

^{a1} Displays the scene number for VIDEO CDs (PBC is on), track number for VIDEO CDs/CDs, album number for DATA CDs/DATA DVDs.
^{a2} Displays the index number for VIDEO CDs, MP3 audio track number or JPEG image file number for DATA CDs/DATA DVDs. DivX video file number for DATA CDs/DATA DVDs.
^{a3} Displays Super VCD as "SVCD."
^{a4} Displays the date for JPEG files.

To turn off the display
Press DISPLAY.

→ continued 11

List of Control Menu items

Item	Item Name, Function
	TITLE (page 32)/SCENE (page 32)/TRACK (page 32) Selects the title, scene, or track to be played.
	CHAPTER (page 32)/INDEX (page 32) Selects the chapter or index to be played.
	TRACK (page 32) Selects the track to be played.
	ORIGINAL/PLAY LIST (page 25) Selects the type of titles (DVD-RW/DVD-R in VR mode) to be played, the ORIGINAL one, or an edited PLAY LIST.
	TIME/TEXT (page 32) Checks the elapsed time and the remaining playback time. Input the time code for picture and music searching. Displays the DVD/CD text, or the DATA CD/DATA DVD track or file name.
	PROGRAM (page 27) Selects the title, chapter, or track to play in the order you want.
	SHUFFLE (page 28) Plays the title, chapter, or track in random order.
	REPEAT (page 29) Plays the entire disc (all titles/all tracks/all albums) repeatedly or one title/chapter/track/album/file repeatedly.
	A-B REPEAT (page 30) Specifies the parts you want to play repeatedly.
	CUSTOM PICTURE MODE (page 43) Adjusts the video signal from the player. You can select the picture quality that best suits the programme you are watching.
	SHARPNESS (page 45) Exaggerates the outline of the image to produce a sharper picture.
	PARENTAL CONTROL (page 56) Set to prohibit playback on this player.
	SETUP (page 61) QUICK Setup (page 20) Use Quick Setup to choose the desired language of the on-screen display, the aspect ratio of the TV and the audio output signal. CUSTOM Setup In addition to the Quick Setup setting, you can adjust various other settings. RESET Returns the settings in "SETUP" to the default setting.
	ALBUM (page 47) Selects the album that contains the MP3 audio tracks and JPEG image files to be played.
	FILE (page 32) Selects the JPEG image file to be played.
	ALBUM (page 32) Selects the album that contains DivX video file to be played.
	FILE (page 32) Selects the DivX video file to be played.
	DATE (page 50) Displays the date the picture was taken by a digital camera.

12

	INTERVAL (page 51) Specifies the duration for which the slides are displayed on the screen.
	EFFECT (page 52) Selects the effects to be used for changing slides during a slide show.
	MODE (MP3, JPEG) (page 51) Selects the data type; MP3 audio track (AUDIO), JPEG image file (IMAGE) or both (AUTO) to be played when playing a DATA CD or DATA DVD.

Hint
The Control Menu icon indicator lights up in green when you select any item except "OFF" ("PROGRAM," "SHUFFLE," "REPEAT," "A-B REPEAT," "CUSTOM PICTURE MODE," "SHARPNESS" only). The "ORIGINAL/PLAY LIST" indicator lights up in green when you select "PLAY LIST" (default setting).

Hookups

Hooking Up the Player

Follow steps 1 to 6 to hook up and adjust the settings of the player.

Notes


- Plug cords securely to prevent unwanted noise.
- Refer to the instructions supplied with the components to be connected.
- You cannot connect this player to a TV that does not have a video input jack.
- Be sure to disconnect the mains lead of each component before connecting.

Step 1: Unpacking

- Check that you have the following items:
- Audio/Video cord (phono plug × 3 ↔ phono plug × 3) (1)
 - Remote commander (remote) (1)
 - R6 (size AA) batteries (2)

Step 2: Inserting Batteries Into the Remote

You can control the player using the supplied remote. Insert two R6 (size AA) batteries by matching the ⊕ and ⊖ ends on the batteries to the markings inside the compartment. When using the remote, point it at the remote sensor on the player.

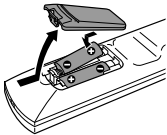


Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct light from the sun or a lighting apparatus. Doing so may cause a malfunction.
- If you do not use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.


Step 3: Connecting the Video Cords

Connect this player to your TV monitor, projector, or AV amplifier (receiver) using a video cord. Select one of the patterns **A** through **C**, according to the input jack on your TV monitor, projector, or AV amplifier (receiver). In order to view progressive signal (525p or 625p) pictures with a compatible TV, projector, or monitor, you must use pattern **C**.

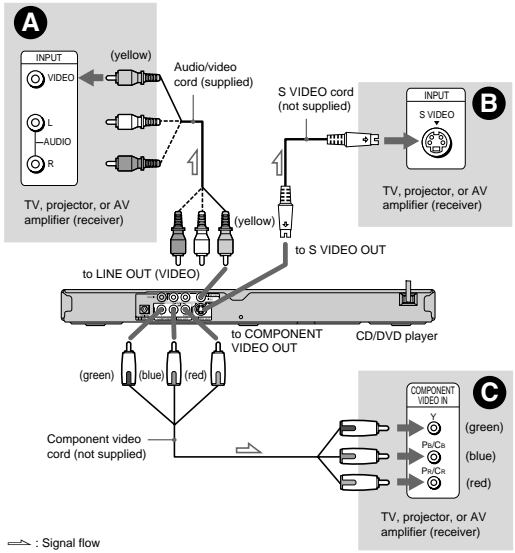

If you are connecting to a video input jack

 
Connect the yellow plug of an audio/video cord (supplied) to the yellow (video) jack. You will enjoy standard quality images. With this connection, select "NORMAL (INTERLACE)" (default) by pressing the PROGRESSIVE button on the front panel.



continued 15

Using the PROGRESSIVE button

 By using the PROGRESSIVE button on the front panel, you can select the signal format in which the player outputs video signals (Progressive or Interlace), and the conversion method for progressive signals. The PROGRESSIVE indicator lights up when the player outputs progressive signals. Each time you press PROGRESSIVE, the display changes as follows:



◆PROGRESSIVE AUTO

Select this setting when:
– your TV accepts progressive signals, and,
– the TV is connected to the COMPONENT VIDEO OUT jacks.
Normally select this under the above condition. This automatically detects the software type, and selects the appropriate conversion method.
Note that the picture will not be clear or no picture will appear if you select these settings when either of the above conditions is not met.

◆PROGRESSIVE VIDEO

Select this setting when:
– your TV accepts progressive signals, and,
– the TV is connected to the COMPONENT VIDEO OUT jacks, and
– you want to fix the conversion method to PROGRESSIVE VIDEO for video-based software. Select this if the image is not clear when you select PROGRESSIVE AUTO.
Note that the picture will not be clear or no picture will appear if you select these settings when either of the above conditions is not met.

◆NORMAL (INTERLACE)

Select this setting when:
– your TV does not accept progressive signals, or,
– your TV is connected to jacks other than the COMPONENT VIDEO OUT jacks (LINE OUT (VIDEO) or S VIDEO OUT).

About DVD software types and the conversion method

DVD software can be divided into two types: film-based software and video based software. Video-based software is derived from TV, such as dramas and sit-coms, and displays images at 30 frames/60 fields (25 frames/50 fields) per second. Film-based software is derived from film and displays images at 24 frames per second. Some DVD software contains both video and film. In order for these images to appear natural on your screen when output in progressive format, the progressive signals need to be converted to match the type of DVD software that you are watching.

Note

When you play video-based software in progressive signal format, sections of some types of images may appear unnatural due to the conversion process when output through the COMPONENT VIDEO OUT jacks. Images from the S VIDEO OUT and LINE OUT (VIDEO) jacks are unaffected as they are output in the normal (interlace) format.

Hookups

 
If you are connecting to an S VIDEO input jack

Connect an S VIDEO cord (not supplied). You will enjoy high quality images. With this connection, select "NORMAL (INTERLACE)" (default) by pressing the PROGRESSIVE button on the front panel.



If you are connecting to a monitor, projector, or AV amplifier (receiver) having component video input jacks (Y, Pb/Cb, Pr/Cr)

Connect the component via the COMPONENT VIDEO OUT jacks using a component video cord (not supplied) or three video cords (not supplied) of the same kind and length. You will enjoy accurate colour reproduction and high quality images. If your TV accepts progressive 525p/625p format signals, use this connection and press the PROGRESSIVE button on the front panel to output progressive signals. For details, see "Using the PROGRESSIVE button" (page 17).



When connecting to a standard 4:3 screen TV

 
Depending on the disc, the image may not fit your TV screen. To change the aspect ratio, see page 63.

To change the colour system

If the on-screen menu of the player does not appear on the connected TV, switch the player's colour system to match the colour system of the TV (NTSC or PAL). First turn off the player by pressing I/II, and then press I/II again while holding down III on the player. The player turns back on, and the name of the colour system scrolls across the front panel display.

Note


Do not connect a VCR, etc., between your TV and the player. If you pass the player signals via the VCR, you may not receive a clear image on the TV screen. If your TV has only one audio/video input jack, connect the player to this jack.



16

Step 4: Connecting the Audio Cords

Select one of the following patterns **A** or **B**, according to the input jack on your TV monitor, projector, or AV amplifier (receiver). This will enable you to listen to sound.

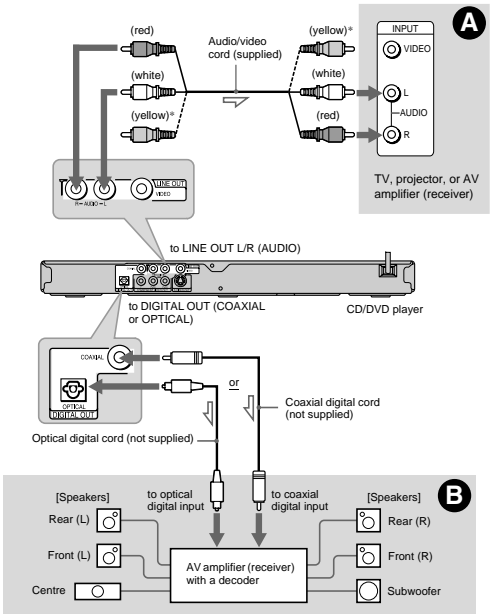

Signal flow

* The yellow plug is used for video signals (page 15).

Hint

 
For correct speaker location, see the operating instructions supplied with the connected components.

17

18

④ Connecting to audio L/R input jacks

This connection will use your TV's or stereo amplifier's (receiver's) two speakers for sound. Connect using the audio/video cord (supplied).



- Surround effect (page 40)
- TV: Dynamic Theatre, Dynamic, Wide, Night

 


Stereo amplifier (receiver): Standard, Night



⑤ Connecting to a digital audio input jack

If your AV amplifier (receiver) has a Dolby Digital^{*1}, DTS^{*2}, or MPEG audio decoder and a digital input jack, use this connection. Connect using a coaxial or optical digital cord (not supplied).



- Surround effect
- Dolby Digital (5.1ch), DTS (5.1ch), MPEG audio (5.1ch)



- ^{*1} Manufactured under license from Dolby Laboratories.
 "Dolby," "Pro Logic," and the double-D symbol are trademarks of Dolby Laboratories.
^{*2} "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Notes

- After you have completed the connection, make the appropriate settings in Quick Setup (page 20). If your AV amplifier (receiver) has an MPEG audio decoder function, set "MPEG" to "MPEG" in AUDIO SETUP (page 67). Otherwise, no sound or a loud noise will come from your speakers.
- The TVS effects of this player cannot be used with this connection.
- In order to listen to DTS sound tracks, you must use this connection. DTS sound tracks are not output through the LINE OUT L/R (AUDIO) jacks, even if you set "DTS" to "ON" in Quick Setup (page 20).

Headups


19

Step 5: Connecting the Mains Lead

Plug the player and TV mains lead (power cord) into a mains.

Step 6: Quick Setup

Follow the steps below to make the minimum number of basic adjustments for using the player. To skip an adjustment, press ►►. To return to the previous adjustment, press ◀◀. The on-screen displays differ depending on the player model. Oceanian model is used for illustration unless otherwise specified.

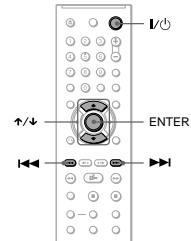

1 Turn on the TV.


2 Press I/⏻.

3 Switch the input selector on your TV so that the signal from the player appears on the TV screen.

"Press [ENTER] to run QUICK SETUP" (press enter to run Quick Setup) appears at the bottom of the screen. If this message does not appear, select "QUICK" (quick) under "SETUP" (setup) in the Control Menu to run Quick Setup (page 62).

4 Press ENTER without inserting a disc.

The Setup Display for selecting the language used in the on-screen display appears. The available languages differ depending upon the player model.

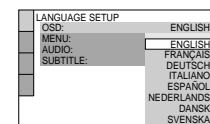


5 Press ◀/▶ to select a language.

The player displays the menu and subtitles in the selected language.

20

6 Press ENTER.

The Setup Display for selecting the aspect ratio of the TV to be connected appears.

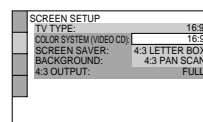


7 Press ◀/▶ to select the setting that matches your TV type.

- ◆ If you have a wide-screen TV or a 4:3 standard TV with a wide-screen mode
- 16:9 (page 63)
- ◆ If you have a 4:3 standard TV
- 4:3 LETTER BOX or 4:3 PAN SCAN (page 63)

8 Press ENTER.

 The Setup Display for selecting the type of jack used to connect your amplifier (receiver) appears.




9 Press ◀/▶ to select the type of jack (if any) you are using to connect to an amplifier (receiver), then press ENTER.

If you did not connect an AV amplifier (receiver), select "NO," then go to step 13.
 If you connected an AV amplifier (receiver) using just an audio cord, select "YES: LINE OUTPUT L/R (AUDIO)," then go to step 13.
 If you connected an AV amplifier (receiver) using either a digital optical or coaxial cord, select "YES: DIGITAL OUTPUT."


10 Press ◀/▶ to select the type of Dolby Digital signal you wish to send to your amplifier (receiver).

If your AV amplifier (receiver) has a Dolby Digital decoder, select "DOLBY DIGITAL." Otherwise, select "D-PCM."

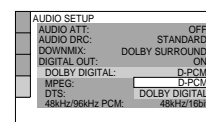

11 Press ENTER.

"DTS" is selected.

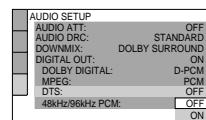

12 Press ◀/▶ to select whether or not you wish to send a DTS signal to your amplifier (receiver).

If your AV amplifier (receiver) has a DTS decoder, select "ON." Otherwise, select "OFF."

13 Press ENTER.


Quick Setup is finished and connections are complete.
 If your AV amplifier (receiver) has an MPEG audio decoder, set "MPEG" to "MPEG" (page 67).

Headups

21



Depending on the DVD or VIDEO CD, some operations may be different or restricted. Refer to the operating instructions supplied with your disc.

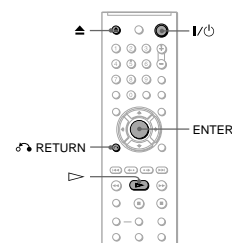

1 Turn on your TV.

2 Press I/⏻.

The player turns on.

3 Switch the input selector on your TV so that the signal from the player appears on the TV screen.

◆ When using an amplifier (receiver)
 Turn on the amplifier (receiver) and select the appropriate channel so that you can hear sound from the player.

4 Press ⏻ on the player, and place a disc on the disc tray.



Playback side facing down

5 Press ▷.

The disc tray closes. The player starts playback (continuous play). Adjust the volume on the TV or the amplifier (receiver).

Depending on the disc, a menu may appear on the TV screen. For DVD VIDEOS, see page 25. For VIDEO CDs, see page 26.

To turn off the player

Press I/⏻. The player enters standby mode.

Hint

You can have the player turn off automatically whenever you leave it in stop mode for more than 30 minutes. To turn this function on or off, set "AUTO POWER OFF" in "CUSTOM SETUP" to "ON" or "OFF" (page 64).

Note


Discs created on DVD recorders must be correctly finalized before they can be played. For more information about finalizing, refer to the operating instructions supplied with the DVD recorder.

Notes on playing DTS sound tracks on a DVD VIDEO

- DTS audio signals are output only through the DIGITAL OUT (COAXIAL or OPTICAL) jack.
- When you play a DVD VIDEO with DTS sound tracks, set "DTS" to "ON" in "AUDIO SETUP" (page 67).
- If you connect the player to audio equipment without a DTS decoder, do not set "DTS" to "ON" in "AUDIO SETUP" (page 67). A loud noise may come out from the speakers, affecting your ears or causing the speakers to be damaged.

22

Additional operations

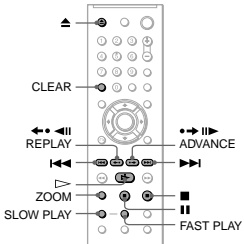

To	Operation
Stop	Press ■
Pause	Press II
Resume play after pause	Press II or ▷
Go to the next chapter, track, or scene in continuous play mode	Press ►►
Go back to the previous chapter, track, or scene in continuous play mode	Press ◀◀
Stop play and remove the disc	Press ▲
Replay the previous scene ^{#1}	Press ◀◀◀ REPLAY during playback
Briefly fast forward the current scene ^{#2}	Press ►►► ADVANCE during playback
Magnify the image ^{#3}	Press ZOOM repeatedly. Press CLEAR to cancel.

^{#1} DVD VIDEOs/DVD-RWs/DVD-Rs only. The button cannot be used for DivX video files.
^{#2} DVD VIDEOs/DVD-RWs/DVD-Rs/ DVD+RWs/DVD+Rs only. The button cannot be used for DivX video files.
^{#3} Video and JPEG pictures only (except BACKGROUND pictures). You can move the enlarged picture using ◀/▶/◀/▶. Depending upon the contents of the disc, the zoom function may be cancelled automatically when the picture is moved.

Note
You may not be able to use the Replay or Advance function with some scenes.

Playback quickly or slowly with sound

You can listen to dialogue or sound while playing the current scene quickly or slowly.
During playback, press FAST PLAY or SLOW PLAY.
The speed changes when you press either FAST PLAY or SLOW PLAY.

To return to normal playback
Press ▷.

- Notes**
- You can only use this function with DVDs/VIDEO CDs/Super VCDs and DVD-RWs/DVD-Rs in VR mode only.
 - “Operation not possible” will appear when maximum or minimum speed is reached.
 - During Fast Play or Slow Play mode, you cannot change the angle (page 42), subtitle (page 42) and sound (page 38). The sound can only be changed for VIDEO CDs/Super VCDs.
 - Fast Play and Slow Play functions do not work when playing DTS sound tracks.
 - You cannot use Fast Play or Slow Play functions when playing a still picture on DVD-RW/DVD-R in VR mode.

Locking the disc tray (Child Lock)

You can lock the disc tray to prevent children from opening it.

When the player is in standby mode, press RETURN, ENTER, and then I/O on the remote.
The player turns on and “LOCKED” appears on the front panel display. The ▲ and ▼ buttons on the player or the remote do not work while the Child Lock is set.


To unlock the disc tray
When the player is in standby mode, press RETURN, ENTER, and then I/O again.

Note
Even if you select “RESET” under “SETUP” in the Control Menu (page 62), the disc tray remains locked.

Using the DVD’s Menu

DVDVideo

A DVD is divided into long sections of a picture or a music feature called “titles.” When you play a DVD which contains several titles, you can select the title you want using the TOP MENU button.
When you play DVDs that allow you to select items such as language for the sound and subtitles, select these items using the MENU button.

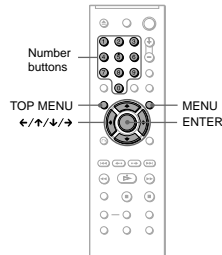


- Press TOP MENU or MENU.**
The disc’s menu appears on the TV screen. The contents of the menu vary from disc to disc.
- Press ◀/▶/◀/▶ or the number buttons to select the item you want to play or change.**
If you press the number buttons, the following display appears. Press the number buttons to select the item you want.




- Press ENTER.**

Selecting “ORIGINAL” or “PLAY LIST” on a DVD-RW/DVD-R

Some DVD-RWs/DVD-Rs in VR (Video Recording) mode have two types of titles for playback: originally recorded titles (ORIGINAL) and titles that can be created on recordable DVD players for editing (PLAY LIST). You can select the type of title to be played.

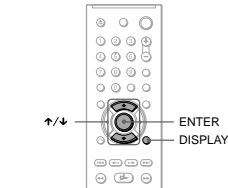

- Press DISPLAY when the player is in stop mode.**
The Control Menu appears.
- Press ◀/▶ to select (ORIGINAL/PLAY LIST), then press ENTER.**
The options for “ORIGINAL/PLAY LIST” appear.

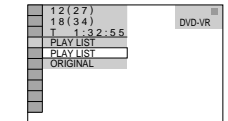


- Press ◀/▶ to select a setting.**
 - PLAY LIST: plays the titles created from “ORIGINAL” for editing.
 - ORIGINAL: plays the titles originally recorded.
- Press ENTER.**

Resuming Playback From the Point Where You Stopped the Disc (Multi-disc Resume)

DVDVideo VCD

The player stores the point where you stopped the disc for up to 6 discs and resumes playback the next time you insert the same disc. If you store a resume playback point for the seventh disc, the resume playback point for the first disc is deleted.

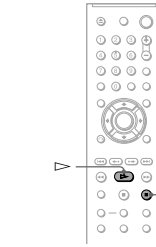

- While playing a disc, press ■ to stop playback.**
“RESUME” appears on the front panel display.
- Press ▷.**
The player starts playback from the point where you stopped the disc in step 1.


Hint
To play from the beginning of the disc, press ■ twice, then press ▷.

- Notes**
- “MULTI-DISC RESUME” in “CUSTOM SETUP” must be set to “ON” (default) for this function to work (page 65).
 - The point where you stopped playing is cleared when:
 - you change the play mode.
 - you change the settings on the Setup Display.
 - For DVD-RWs/DVD-Rs in VR mode, CDs, DATA CDs, and DATA DVDs, the player remembers the resume playback point for the current disc.
 - The resume point is cleared when:
 - you opened the disc tray.
 - you disconnect the mains lead.
 - the player enters standby mode (DATA CD/DATA DVD only).
 - Resume Play does not work during Shuffle Play and Programme Play.
 - This function may not work with some discs.
 - If “MULTI-DISC RESUME” in “CUSTOM SETUP” is set to “ON” and you playback a recorded disc such as DVD-RW, the player may playback other recorded discs from the same resume point.

Playing VIDEO CDs With PBC Functions (PBC Playback)

VCD

PBC (Playback Control) allows you to play VIDEO CDs interactively by following the menu on the TV screen.

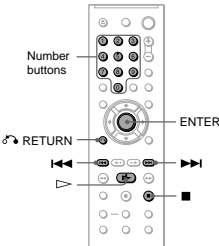

- Start playing a VIDEO CD with PBC functions.**
The menu for your selection appears.
- Press the number buttons to select the item number you want.**
- Press ENTER.**
- Follow the instructions in the menu for interactive operations.**
Refer to the instructions supplied with the disc, as the operating procedure may differ depending on the VIDEO CD.


To return to the menu
Press RETURN.

- Hint**
To play without using PBC, press ◀/▶/◀/▶ or the number buttons while the player is stopped to select a track, then press ▷ or ENTER.
“Play without PBC” appears on the TV screen and the player starts continuous play. You cannot play still pictures such as a menu.
To return to PBC playback, press ■ twice then press ▷.
- Note**
Depending on the VIDEO CD, “Press ENTER” in step 3 may appear as “Press SELECT” in the instructions supplied with the disc. In this case, press ▷.

Various Play Mode Functions (Programme Play, Shuffle Play, Repeat Play, A-B Repeat Play)

You can set the following play modes:

- Programme Play (page 27)
- Shuffle Play (page 28)
- Repeat Play (page 29)
- A-B Repeat Play (page 30)

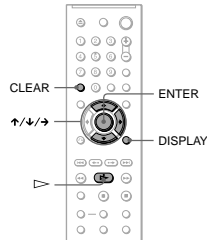

Note

The play mode is cancelled when:
– you open the disc tray,
– the player enters standby mode by pressing I/O.

Creating your own programme (Programme Play) DVD Video VCD CD


You can play the contents of a disc in the order you want by arranging the order of the titles, chapters, or tracks on the disc to create your own programme. You can programme up to 99 titles, chapters, and tracks.

1 Press DISPLAY.

The Control Menu appears.


2 Press 1/4/3 to select PROGRAM, then press ENTER.

The options for "PROGRAM" appear.

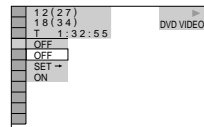


3 Press 1/4/3 to select "SET →", then press ENTER.

"TRACK" is displayed when you play a VIDEO CD, or CD.

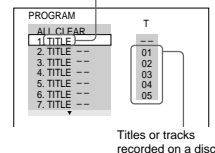

4 Press →.

The cursor moves to the title or track row "T" (in this case, "01").

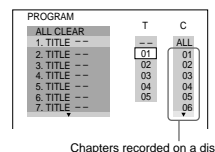


5 Select the title, chapter, or track you want to programme.

◆ When playing a DVD VIDEO

For example, select chapter "03" of title "02."


Press 1/4/3 to select "02" under "T," then press ENTER.

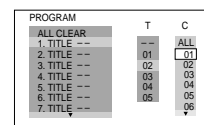

→ continued 27

Playing Discs

Next, press 1/4/3 to select "03" under "C," then press ENTER.

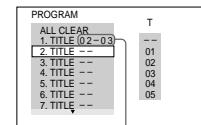


Selected title and chapter

◆ When playing a VIDEO CD, or CD

For example, select track "02."

Press 1/4/3 to select "02" under "T," then press ENTER.

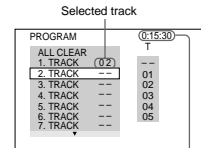

Total time of the programmed tracks

6 To programme other titles, chapters, or tracks, repeat steps 4 to 5.

The programmed titles, chapters, and tracks are displayed in the selected order.

7 Press ▷ to start Programme Play.

Programme Play begins.
When the programme ends, you can restart the same programme again by pressing ▷.

To return to normal play

Press CLEAR, or select "OFF" after step 2. To play the same programme again, select "ON" in step 3 and press ENTER.

To change or cancel a programme

- Follow steps 1 to 3 of "Creating your own programme (Programme Play)."
- Select the programme number of the title, chapter, or track you want to change or cancel using 1/4/3 and press →. If you want to delete the title, chapter, or track from the programme, press CLEAR.

- Follow step 5 for new programming. To cancel a programme, select "--" under "T," then press ENTER.

To cancel all of the titles, chapters, or tracks in the programmed order

- Follow steps 1 to 3 of "Creating your own programme (Programme Play)."
- Press ↑ and select "ALL CLEAR."
- Press ENTER.

Hint

You can perform Repeat Play or Shuffle Play of programmed titles, chapters, or tracks. During Programme Play, follow the steps of Repeat Play (page 29) or Shuffle Play (page 28).

Notes

- When you programme tracks on a Super VCD, the total playing time is not displayed.
- You cannot use this function with VIDEO CDs or Super VCDs with PBC playback.

Playing in random order (Shuffle Play) DVD Video VCD CD


You can have the player "shuffle" titles, chapters, or tracks. Subsequent "shuffling" may produce a different playing order.

1 Press DISPLAY during playback.

The Control Menu appears.

2 Press 1/4/3 to select SHUFFLE, then press ENTER.

The options for "SHUFFLE" appear.

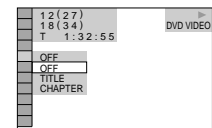

3 Press 1/4/3 to select the item to be shuffled.

◆ When playing a DVD VIDEO

- TITLE
- CHAPTER

- ◆ When playing a VIDEO CD or CD
- TRACK

- ◆ When Programme Play is activated
- ON: shuffles titles, chapters, or tracks selected in Programme Play.

4 Press ENTER.

Shuffle Play starts.

To return to normal play

Press CLEAR, or select "OFF" in step 3.

Hints

- You can set Shuffle Play while the player is stopped. After selecting the "SHUFFLE" option, press ▷. Shuffle Play starts.
- Up to 200 chapters in a disc can be played in random order when "CHAPTER" is selected.

Note

You cannot use this function with VIDEO CDs or Super VCDs with PBC playback.

Playing repeatedly (Repeat Play) DVD Video DVD-R VCD CD DATA CD DATA DVD


You can play all of the titles or tracks on a disc, or a single title, chapter, or track repeatedly.
You can use a combination of Shuffle or Programme Play modes.

1 Press DISPLAY during playback.

The Control Menu appears.

2 Press 1/4/3 to select REPEAT, then press ENTER.

The options for "REPEAT" appear.

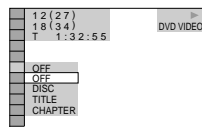

3 Press 1/4/3 to select the item to be repeated.

◆ When playing a DVD VIDEO

- DISC: repeats all of the titles.
- TITLE: repeats the current title on a disc.
- CHAPTER: repeats the current chapter.

◆ When playing a DVD-VR mode disc

- DISC: repeats all the titles of the selected type.
- TITLE: repeats the current title on a disc.
- CHAPTER: repeats the current chapter.

◆ When playing a VIDEO CD or CD

- DISC: repeats all of the tracks.
- TRACK: repeats the current track.
- ◆ When playing a DATA CD/DATA DVD
- DISC: repeats all of the albums.
- ALBUM: repeats the current album.
- TRACK (MP3 audio tracks only): repeats the current track.
- FILE (DivX video files only): repeats the current file.

◆ When Programme Play or Shuffle Play is activated

- ON: repeats Programme Play or Shuffle Play.

4 Press ENTER.

Repeat Play starts.

To return to normal play

Press CLEAR, or select "OFF" in step 3.

Hint

You can set Repeat Play while the player is stopped. After selecting the "REPEAT" option, press ▷. Repeat Play starts.

Notes

- You cannot use this function with VIDEO CDs or Super VCDs with PBC playback.
- When repeating a DATA CD/DATA DVD which contains MP3 audio tracks and JPEG image files, and their playing times are not the same, the sound will not match the image.
- When "MODE (MP3, JPEG)" is set to "IMAGE (JPEG)" (page 51), you cannot select "TRACK."

→ continued 29

Playing Discs

28

Repeating a specific portion (A-B Repeat Play) DVD Video DVD-R VCD CD

DVD Video DVD-R VCD CD


You can play a specific portion of a title, chapter or track repeatedly. (This function is useful when you want to memorize lyrics, etc.)

1 Press DISPLAY during playback.

The Control Menu appears.


2 Press 1/4/3 to select A-B REPEAT, then press ENTER.

The options for "A-B REPEAT" appear.

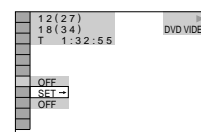


3 Press 1/4/3 to select "SET →", then press ENTER.

 The "A-B REPEAT" setting bar appears.



4 During playback, when you find the starting point (point A) of the portion to be played repeatedly, press ENTER.

 The starting point (point A) is set.



5 When you reach the ending point (point B), press ENTER again.

The set points are displayed and the player starts repeating this specific portion.

To return to normal play


Press CLEAR, or select "OFF" in step 3.

30

Searching for a Scene

Searching for a Particular Point on a Disc (Search, Scan, Slow-motion Play, Freeze Frame)

You can quickly locate a particular point on a disc by monitoring the picture or playing back slowly.

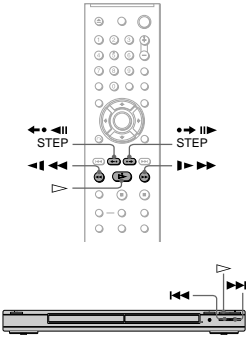

- Notes
- Depending on the disc, you may not be able to do some of the operations described.
- For DATA CD/DATA DVDs, you can search for a particular point only on MP3 audio track or DivX video file.

Locating a point quickly using the PREV (previous)/NEXT (next) buttons (Search)

DVD Video DVD-R VCD CD DATA CD DATA DVD

You can search for the next or previous chapter, track, or scene using the PREV (previous)/NEXT (next) buttons on the player. During playback, press the NEXT (next) button or the PREV (previous) button briefly to go to the next or previous chapter/track/scene. Or, press and hold the NEXT (next) button or the PREV (previous) button to search forward or backward, and release the button when you find the point you want to return to normal playback. (Search)

Locating a point quickly by playing a disc in fast forward or fast reverse (Scan)

DVD Video DVD-R VCD CD DATA CD DATA DVD

Press the FAST FORWARD (FF) or FAST REVERSE (FR) button while playing a disc. When you find the point you want, press the STOP button to return to normal speed. Each time you press the FAST FORWARD (FF) or FAST REVERSE (FR) button during scan, the scan speed changes. With each press the indication changes as shown below. Actual speeds may differ between discs.

Playback direction
×2 → 1 → 2 → 3
3 (DVD VIDEO/DVD-VR mode/VIDEO CD/ DATA CD*/DATA DVD* only)
×2 (DVD VIDEO/CD only)

Opposite direction
×2 ← 1 ← 2 ← 3
3 (DVD VIDEO/DVD-VR mode/VIDEO CD/ DATA CD*/DATA DVD* only)
×2 (DVD VIDEO only)

* DivX video only
The "×2" or "×2" playback speed is about twice the normal speed.
The "3" or "3" playback speed is faster than "2" or "2" and the "2" or "2" playback speed is faster than "1" or "1".

Searching for a Scene

Watching frame by frame (Slow-motion Play)

DVD Video DVD-R VCD CD DATA CD DATA DVD

Press the SLOW-MOTION PLAY (SMP) button when the player is in pause mode. To return to normal speed, press the STOP button. Each time you press the SLOW-MOTION PLAY (SMP) button during Slow-motion Play, the playback speed changes. Two speeds are available. With each press the indication changes as follows:

Playback direction
2 → 1 → 2

Opposite direction (DVD/DVD-VR mode only)
2 ← 1 ← 2

The "2" or "2" playback speed is slower than "1" or "1".

Note
For DATA CDs/DATA DVDs, this function works only for DivX video files.

Playing one frame at a time (Freeze Frame)

DVD Video DVD-R VCD CD DATA CD DATA DVD


When the player is in the pause mode, press the STEP button to go to the next frame. Press the STEP button to go to the preceding frame (DVD/DVD-VR mode only). To return to normal playback, press the STOP button.

- Notes
- You cannot search for a still picture on a DVD-RW/DVD-R in VR mode.
- For DATA CDs/DATA DVDs, this function works only for DivX video files.

Searching for a Title/Chapter/Track/Scene, etc.

DVD Video DVD-R VCD CD DATA CD DATA DVD

You can search a DVD by title or chapter, and you can search a VIDEO CD/CD/DATA CD/ DATA DVD by track, index, file, or scene. As titles and tracks are assigned unique numbers on the disc, you can select the desired one by entering its number. You can also search for a scene using the time code.

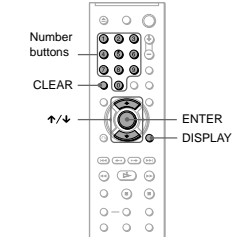

- Press DISPLAY (when playing a DATA CD or DATA DVD with JPEG image files, press twice).
- Press the up/down arrow button to select the search method.

- When playing a DVD VIDEO/DVD-R mode disc
 - TITLE
 - CHAPTER
 - TIME/TEXT
- Select "TIME/TEXT" to search for a starting point by inputting the time code.


- When playing a VIDEO CD or Super VCD without PBC playback
- TRACK
- INDEX

- When playing a VIDEO CD or Super VCD with PBC Playback
- SCENE


- When playing a CD
- TRACK

- When playing a DATA CD/DATA DVD
- ALBUM
- TRACK (MP3 audio tracks only)
- FILE (JPEG image files only)

- When playing a DATA CD (DivX video files)/DATA DVD (DivX video files)
 - ALBUM
 - FILE
- Example: when you select CHAPTER
"*** (**)" is selected (** refers to a number).
The number in parentheses indicates the total number of titles, chapters, tracks, indexes, scenes, album or files.

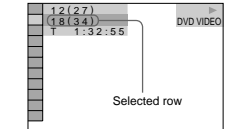

- Press ENTER.
"*** (**)" changes to "-- (**)".

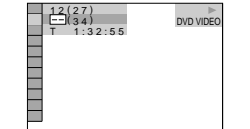

- Press the number buttons to select the title, chapter, track, index, scene, etc., number you want to search.

If you make a mistake
Cancel the number by pressing CLEAR, then select another number.

- Press ENTER.
The player starts playback from the selected number.

To search for a scene using the time code (DVD VIDEO/DVD-VR mode only)

- In step 2, select the TIME/TEXT. "T ***:***:***" (playing time of the current title) is selected.
- Press ENTER.
"T ***:***:***" changes to "T --:--:--."
- Input the time code using the number buttons, then press ENTER.
For example, to find the scene at 2 hours, 10 minutes, and 20 seconds after the beginning, just enter "2:10:20."

- Hints
- When the Control Menu display is turned off, you can search for a chapter (DVD VIDEO/DVD-VR mode), track (CD/DATA CD/DATA DVD), or file (DATA CD (DivX video)/DATA DVD (DivX video)) by pressing the number buttons and ENTER.
- You can display the first scene of titles, chapters, or tracks recorded on the disc on a screen divided into 9 sections. You can start playback directly by selecting one of the scenes. For details, see "Searching by Scene (PICTURE NAVIGATION)" (page 34).


- Notes
- The title, chapter, or track number displayed is the same number recorded on the disc.
- You cannot search for a scene on a DVD+RW/DVD+R using the time code.

Searching for a Scene

Searching by Scene (PICTURE NAVIGATION)

DVD Video VCD

You can divide the screen into 9 subscreens and find the desired scene quickly.

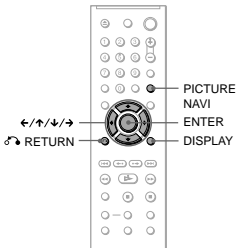

- Press PICTURE NAVI during playback.
The following display appears.


CHAPTER VIEWER [ENTER]

- Press PICTURE NAVI repeatedly to select an item.

- CHAPTER VIEWER (DVD VIDEO only): displays the first scene of each chapter.
- TITLE VIEWER (DVD VIDEO only): displays the first scene of each title.
- TRACK VIEWER (VIDEO CD/ Super VCD only): displays the first scene of each track.

- Press ENTER.

The first scene of each chapter, title, or track appears as follows.

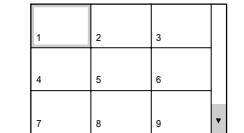

- Press the left/right/up/down arrow button to select a chapter, title, or track, and press ENTER.
Playback starts from the selected scene.

To return to normal play during setting
Press the RETURN or DISPLAY button.

- Hint
- If there are more than 9 chapters, titles, or tracks, is displayed at the bottom right of the screen. To display the additional chapters, titles, or tracks, select the bottom scenes and press the up/down arrow button. To return to the previous scene, select the top scenes and press the up/down arrow button.


Note
Depending on the disc, you may not be able to select some items.

Viewing Information About the Disc

Checking the Playing Time and Remaining


Time **DVDVideo** **DVDVr** **VCD** **CD****DATA CD** **DATA DVD**

You can check the playing time and remaining time of the current title, chapter, or track. Also, you can check the DVD/CD text or track name (MP3 audio), or file name (DivX video) recorded on the disc.

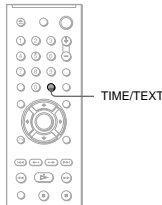

1 Press TIME/TEXT during playback.

 The following display appears.



2 Press TIME/TEXT repeatedly to change the time information.

The available time information depends upon the type of disc you are playing.

◆ When playing a DVD VIDEO or DVD-VR mode disc

- T **h:m:s** (hours: minutes: seconds)
Playing time of the current title
- T **-m:s**
Remaining time of the current title
- C **h:m:s**
Playing time of the current chapter
- C **-m:s**
Remaining time of the current chapter

◆ When playing a VIDEO CD or Super VCD (with PBC functions)

- **m:s** (minutes: seconds)
Playing time of the current scene

◆ When playing a VIDEO CD (without PBC functions), or CD

- T **h:m:s** (minutes: seconds)
Playing time of the current track
- T **-m:s**
Remaining time of the current track
- D **h:m:s**
Playing time of the current disc
- D **-m:s**
Remaining time of the current disc

◆ When playing a Super VCD (without PBC functions)

- T **h:m:s** (minutes: seconds)
Playing time of the current track

◆ When playing a DATA CD (MP3 audio)/DATA DVD (MP3 audio)

- T **h:m:s** (minutes: seconds)
Playing time of the current track

◆ When playing a DATA CD (DivX video)/DATA DVD (DivX video)

 
- **h:m:s** (hours: minutes: seconds)
Playing time of the current file

Viewing Information About the Disc

Checking the play information of the disc


To check the DVD/CD text

Press TIME/TEXT repeatedly in step 2 to display text recorded on the DVD/CD. The DVD/CD text appears only when text is recorded in the disc. You cannot change the text. If the disc does not contain text, "NO TEXT" appears.



To check DATA CD/DATA DVD album name, etc.

By pressing TIME/TEXT while playing MP3 audio tracks or DivX video files on a DATA CD/DATA DVD, you can display the name of the album/track, and the audio bit rate (the amount of data per second of the current audio track) on your TV screen.

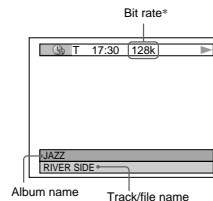


* Appears when:
- playing an MP3 audio track on a DATA CD/DATA DVD.
- playing a DivX video file that contains MP3 audio on a DATA CD/DATA DVD.

Checking the information on the front panel display

You can view the time information and text displayed on the TV screen also on the front panel display. The information on the front panel display changes as follows when you change the time information on your TV screen.


When playing a DVD VIDEO or DVD-VR mode disc

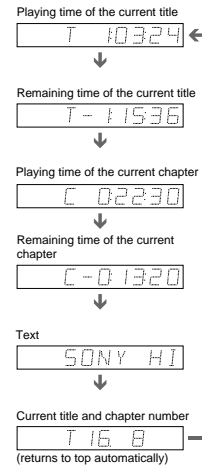


→ continued 35

36


When playing a DATA CD (MP3 audio)/DATA DVD (MP3 audio)

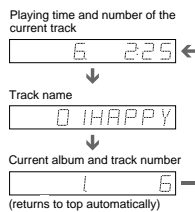

When playing a DATA CD (DivX video), or DATA DVD (DivX video)

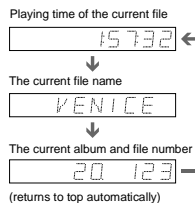

When playing a VIDEO CD (without PBC functions), or CD

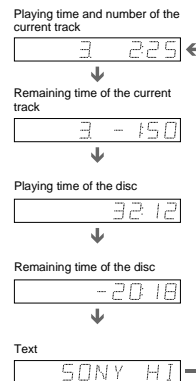

Hints

- When playing a VIDEO CDs without PBC functions, the track number and the index number are displayed after text.
- When playing VIDEO CDs with PBC functions, the scene number or the playing time are displayed.
- Long text that does not fit in a single line will scroll across the front panel display.
- You can also check the time information and text using the Control Menu (page 11).

Notes

- Depending on the type of disc being played, the DVD/CD text or track name may not be displayed.
- The player can only display the first level of the DVD/CD text, such as the disc name or title.
- Playing time of MP3 audio tracks and DivX video files may not be displayed correctly.
- If you play a disc containing JPEG image files only, "NO AUDIO DATA" appears when "MODE (MP3, JPEG)" is set to "AUTO," "JPEG" appears when "MODE (MP3, JPEG)" is set to "IMAGE (JPEG)" in the front panel display.

Viewing Information About the Disc


Sound Adjustments

Changing the Sound

DVDVideo **DVDVr** **VCD** **CD** **DATA CD****DATA DVD**


When playing a DVD VIDEO, DATA DVD (DivX video files), or DATA CD (DivX video files) recorded in multiple audio formats (PCM, Dolby Digital, MPEG audio, or DTS), you can change the audio format. If the DVD VIDEO is recorded with multilingual tracks, you can also change the language.

With CDs, DATA CDs/DATA DVDs, or VIDEO CDs, you can select the sound from either the right or left channel and listen to the sound of the selected channel through both the right and left speakers. For example, when playing a disc containing a song with the vocals on the right channel and the instruments on the left channel, you can hear the instruments from both speakers by selecting the left channel.

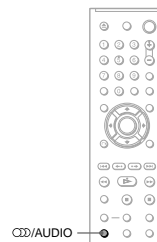

1 Press AUDIO during playback.

 The following display appears.



2 Press AUDIO repeatedly to select the desired audio signal.

◆ When playing a DVD VIDEO

Depending on the DVD VIDEO, the choice of language varies. When 4 digits are displayed, they indicate a language code. See "Language Code List" on page 74 to see which language the code represents. When the same language is displayed two or more times, the DVD VIDEO is recorded in multiple audio formats.

◆ When playing a DVD-VR mode disc

The types of sound tracks recorded on a disc are displayed. The default setting is underlined.

- Example:
 - 1: MAIN (main sound)
 - 1: SUB (sub sound)
 - 1: MAIN+SUB (main and sub sound)
- ◆ When playing a VIDEO CD, CD, or DATA CD (MP3 audio)/DATA DVD (MP3 audio)

The default setting is underlined.

- STEREO: the standard stereo sound
- 1/L: the sound of the left channel (monaural)
- 2/R: the sound of the right channel (monaural)

◆ When playing a DATA CD (DivX video), or DATA DVD (DivX video)

Select one of the displayed audio signal formats.

If "No audio data" appears, the player does not support the audio signal format contained in the disc.

◆ When playing a Super VCD

The default setting is underlined.

- 1:STEREO: the stereo sound of the audio track 1
- 1:1/L: the sound of the left channel of the audio track 1 (monaural)
- 1:2/R: the sound of the right channel of the audio track 1 (monaural)
- 2:STEREO: the stereo sound of the audio track 2
- 2:1/L: the sound of the left channel of the audio track 2 (monaural)
- 2:2/R: the sound of the right channel of the audio track 2 (monaural)

Notes

- While playing a Super VCD on which the audio track 2 is not recorded, no sound will come out when you select "2:STEREO," "2:1/L," or "2:2/R."
- When playing DVD-RW/DVD-R in VR mode: If you connect to an AV amplifier (receiver) using the DIGITAL OUT (COAXIAL or OPTICAL) jack and want to switch between the sound tracks, set "DOLBY DIGITAL" to "D-PCM" in "AUDIO SETUP."

 
Checking the audio signal format

You can check the audio signal format by pressing **CD**/AUDIO repeatedly during playback. The format of the current audio signal (Dolby Digital, DTS, PCM, etc.) appears as shown below.

When playing a DVD VIDEO


Example:

Dolby Digital 5.1 ch



Example:

 
Dolby Digital 3 ch



When playing a DivX video file on a DATA CD or a DATA DVD

Example:

 MP3 audio



About audio signals

Audio signals recorded in a disc contain the sound elements (channels) shown below. Each channel is output from a separate speaker.

- Front (L)
- Front (R)
- Centre
- Rear (L)
- Rear (R)
- Rear (Monaural): This signal can be either the Dolby Surround Sound processed signals or the Dolby Digital sound's monaural rear audio signals.
- LFE (Low Frequency Effect) signal

Notes

- If "DTS" is set to "OFF" in "AUDIO SETUP" (page 67) the DTS track selection option will not appear on the screen even if the disc contains DTS tracks.
- MPEG audio signals with more than two channels will appear as shown above (3/2, 1, 2/1), but only the Front (L) and Front (R) signals will be output from your two front speakers.

Sound Adjustments

TV Virtual Surround Settings (rvs)

 
When you connect a stereo TV or 2 front speakers, TVS (TV Virtual Surround) lets you enjoy surround sound effects by using sound imaging to create virtual rear speakers from the sound of the front speakers (L: left, R: right) without using actual rear speakers. TVS was developed by Sony to produce surround sound for home use using just a stereo TV.

This only works when playing a multichannel Dolby audio soundtrack. Furthermore, if the player is set up to output the signal from the DIGITAL OUT (OPTICAL or COAXIAL) jack, the surround effect will only be heard when "DOLBY DIGITAL" is set to "D-PCM" and "MPEG" is set to "PCM" in "AUDIO SETUP" (page 67).



1 Press SUR during playback.

The following display appears.



2 Press SUR repeatedly to select one of the TVS sounds.

See the explanations given for each item in the following section.

- TVS DYNAMIC THEATER
- TVS DYNAMIC
- TVS WIDE
- TVS NIGHT
- TVS STANDARD

 
To cancel the setting

Select "OFF" in step 2.

TVS DYNAMIC THEATER

Creates one set of LARGE virtual rear speakers and virtual subwoofer from the sound of the front speakers (L, R) without using actual rear speakers and subwoofer (shown below).

This mode is effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.



TVS DYNAMIC


Creates one set of virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers (shown below).

This mode is effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.



TVS WIDE

Creates five sets of virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers (shown below). This mode is effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.

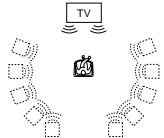


TVS NIGHT

Large sounds, such as explosions, are suppressed, but the quieter sounds are unaffected. This feature is useful when you want to hear the dialogue and enjoy the surround sound effects of "TVS WIDE" at low volume.

TVS STANDARD

Creates three sets of virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers (shown below). Use this setting when you want to use TVS with 2 separate speakers.

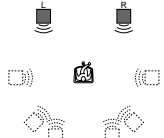

L: Front speaker (left)
R: Front speaker (right)
□: Virtual speaker

Notes

- When the playing signal does not contain a signal for the rear speakers, the surround effects cannot be heard.
- When you select one of the TVS modes, turn off the surround setting of the connected TV or amplifier (receiver).
- Make sure that your listening position is between and at an equal distance from your speakers, and that the speakers are located in similar surroundings.
- Not all discs will respond to the "TVS NIGHT" function in the same way.
- The TVS effects do not work when using the Fast Play or Slow Play functions, even though you can change the TVS modes.


Sound Adjustments

Enjoying Movies

Changing the Angles


DVD Video

If various angles (multi-angles) for a scene are recorded on the DVD VIDEO, "ANGLE" appears in the front panel display. This means that you can change the viewing angle.

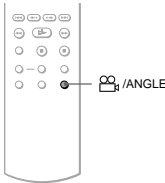

1 Press ANGLE during playback.

 The number of the angle appears on the display.



2 Press ANGLE repeatedly to select an angle number.

The scene changes to the selected angle.

Note

Depending on the DVD VIDEO, you may not be able to change the angles even if multi-angles are recorded on the DVD VIDEO.

Displaying the Subtitles

 
DVD Video DVD VR DATA CD DATA DVD

If subtitles are recorded on the discs, you can change the subtitles or turn them on and off whenever you want while playing a DVD.



1 Press SUBTITLE during playback.

The following display appears.



2 Press SUBTITLE repeatedly to select a setting.

When playing a DVD VIDEO

Select the language.

Depending on the DVD VIDEO, the choice of language varies. When 4 digits are displayed, they indicate a language code. See "Language Code List" on page 74 to see which language the code represents.

When playing a DVD-VR mode disc

Select "ON."

◆ When playing a DATA CD (DivX video), or DATA DVD (DivX video) Select the displayed language.

To turn off the subtitles
Select "OFF" in step 2.


Notes

- Depending on the DVD VIDEO, you may not be able to change the subtitles even if multilingual subtitles are recorded on it. You also may not be able to turn them off.
- You can change the subtitles if the DivX video file has an ".AVI" or ".DIVX" extension and contains subtitle information within the same file.
- While playing a disc with subtitles, the subtitle may disappear when you press FAST PLAY or SLOW PLAY button.

Adjusting the Playback Picture (CUSTOM PICTURE MODE)

DVDVideo DVDVR VCD DATA CD
DATA DVD


You can adjust the video signal of the DVD, VIDEO CD, DATA CD/DATA DVD in JPEG format, or DATA CD/DATA DVD containing DivX video files from the player to obtain the picture quality you want. Choose the setting that best suits the programme you are watching. When you select "MEMORY," you can make further adjustments to each element of the picture (colour, brightness, etc.).

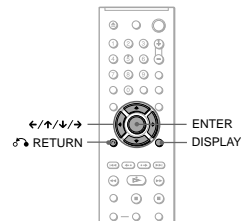


Enjoying Movies

1 Press DISPLAY during playback
(When playing a DATA CD or DATA DVD with JPEG image files, press twice).

The Control Menu appears.

2 Press \uparrow/\downarrow to select  (CUSTOM PICTURE MODE), then press ENTER.

The options for "CUSTOM PICTURE MODE" appear.

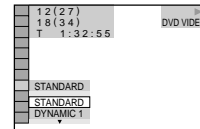

3 Press \uparrow/\downarrow to select the setting you want.

The default setting is underlined.

- STANDARD**: displays a standard picture.
- DYNAMIC 1**: produces a bold dynamic picture by increasing the picture contrast and the colour intensity.
- DYNAMIC 2**: produces a more dynamic picture than DYNAMIC 1 by further increasing the picture contrast and colour intensity.
- CINEMA 1**: enhances details in dark areas by increasing the black level.
- CINEMA 2**: white colours become brighter and black colours become richer, and the colour contrast is increased.
- MEMORY**: adjusts the picture in greater detail.

4 Press ENTER.

The selected setting takes effect.

Hint

When you watch a movie, "CINEMA 1" or "CINEMA 2" is recommended.

Adjusting the picture items in "MEMORY"

You can adjust each element of the picture individually.

- PICTURE**: changes the contrast
- BRIGHTNESS**: changes the overall brightness
- COLOR**: makes the colours deeper or lighter
- HUE**: changes the colour balance

1 In step 3 of "Adjusting the Playback Picture," select "MEMORY" and press ENTER.

The "PICTURE" adjustment bar appears.



2 Press \leftarrow/\rightarrow to adjust the picture contrast.

To go to the next or previous picture item without saving the current setting, press \uparrow/\downarrow .

3 Press ENTER.

The adjustment is saved, and "BRIGHTNESS" adjustment bar appears.

4 Repeat step 2 and 3 to adjust "BRIGHTNESS," "COLOR," and "HUE."

To turn off the display

Press \leftarrow RETURN, or DISPLAY.

Note

The "BRIGHTNESS" setting is not effective if you connect the player via the LINE OUT (VIDEO) or S VIDEO OUT jack and select "PROGRESSIVE AUTO" or "PROGRESSIVE VIDEO" by using the PROGRESSIVE button on the front panel.


→ continued 43

44

Sharpening the Picture (SHARPNESS)

DVDVideo DVDVR VCD DATA CD
DATA DVD


You can enhance the outlines of images to produce a sharper picture.

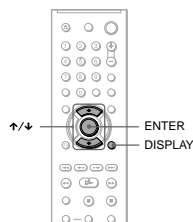


Enjoying Movies

1 Press DISPLAY during playback
(When playing a DATA CD or DATA DVD with JPEG image files, press twice).

The Control Menu appears.

2 Press \uparrow/\downarrow to select  (SHARPNESS), then press ENTER.

The options for "SHARPNESS" appear.

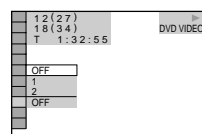

3 Press \uparrow/\downarrow to select a level.

- 1: enhances the outline.
- 2: enhances the outline more than 1.

4 Press ENTER.

The selected setting takes effect.

45

Enjoying MP3 Audio and JPEG Images

About MP3 Audio Tracks and JPEG Image Files

MP3 is audio compression technology that satisfies the ISO/IEC MPEG regulations. JPEG is image compression technology. You can play DATA CDs/DATA DVDs that contain MP3 audio tracks or JPEG image files.

DATA CDs/DATA DVDs that the player can play

You can play back DATA CDs (CD-ROMs/CD-Rs/CD-RWs) or DATA DVDs (DVD-ROMs/DVD+RWs/DVD+Rs/DVD-RWs/DVD-Rs) recorded in MP3 (MPEG-1 Audio Layer III) and JPEG format. However, this player only plays DATA CDs whose logical format is ISO 9660 Level 1/Level 2 or Joliet, and DATA DVDs of Universal Disk Format (UDF).

Refer to the instructions supplied with the disc drives and the recording software (not supplied) for details on the recording format.

Note

The player may not be able to play some DATA CDs/DATA DVDs created in the Packet Write format.

MP3 audio track or JPEG image file that the player can play

The player can play the following tracks and files:

- MP3 audio tracks with the extension ".MP3."
- JPEG image files with the extension ".JPEG" or ".JPG."
- JPEG image files that conform to the DCF* image file format.

* "Design rule for Camera File system": Image standards for digital cameras regulated by JEITA (Japan Electronics and Information Technology Industries Association).

Notes

- The player will play any data with the extension ".MP3," ".JPG," or ".JPEG," even if they are not in MP3 or JPEG format. Playing these data may generate a loud noise which could damage your speaker system.
- The player does not conform to audio tracks in mp3PRO format.
- Some JPEG files cannot be played.
- You cannot play MP3 audio tracks/JPEG image files in DATA CDs/DATA DVDs that contain DivX video files.


46

About playback order of albums, tracks, and files

Albums play in the following order:

◆Structure of disc contents

Tree 1 Tree 2 Tree 3 Tree 4 Tree 5

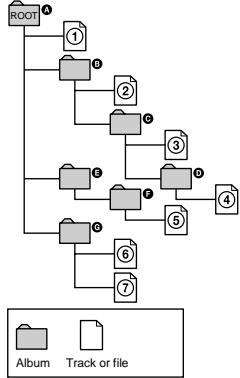

When you insert a DATA CD/DATA DVD and press **ENTER**, the numbered tracks (or files) are played sequentially, from ① through ⑦. Any sub-albums/tracks (or files) contained within a currently selected album take priority over the next album in the same tree. (Example: ② contains ③ so ③ is played before ④.)

When you press **MENU** and the list of album names appears (page 48), the album names are arranged in the following order:

② → ③ → ④ → ⑤ → ⑥ → ⑦. Albums that do not contain tracks (or files) (such as album ①) do not appear in the list.

⚡ Hints

- If you add numbers (01, 02, 03, etc.) to the front of the track/file names when you store the tracks (or files) in a disc, the tracks and files will be played in that order.
- Since a disc with many trees takes longer to start playback, it is recommended that you create albums with no more than two trees.


Notes

- Depending on the software you use to create the DATA CD/DATA DVD, the playback order may differ from the above illustration.
- The playback order above may not be applicable if there are more than 200 albums and 300 tracks/files in each album.
- The player can recognize up to 200 albums (the player will count just albums, including albums that do not contain MP3 audio tracks and JPEG image files). The player will not play any albums beyond the 200th album.
- Proceeding to the next or another album may take some time.

Enjoying MP3 audio and JPEG images

Playing MP3 Audio Tracks or JPEG Image Files DATA CD DATA DVD

You can play MP3 audio tracks and JPEG image files on DATA CDs (CD-ROMs/CD-Rs/CD-RWs) or DATA DVDs (DVD-ROMs/DVD-RWs/DVD+Rs/DVD-RWs/DVD-Rs).

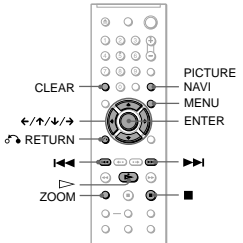

⚡ Hint

You can view the disc information while playing MP3 audio tracks (page 35).

Notes

- DATA CDs recorded in KODAK Picture CD format automatically start playing when inserted.
- If no MP3 audio track or JPEG image file is recorded on the DATA CD/DATA DVD, "No audio data" or "No image data" appears on the screen.

Selecting an album

1 Press MENU.

The list of albums on the disc appears. When an album is being played, its title is shaded.



2 Press **↑/↓** to select the album you want to play.

3 Press **ENTER**.

Playback starts from the selected album. To select MP3 audio tracks, see "Selecting an MP3 audio track" (page 49). To select JPEG image files, see "Selecting a JPEG image file" (page 49).

To stop playback

Press **■**.

To go to the next or previous page

Press **→** or **←**.

To turn on or off the display

Press **MENU** repeatedly.


⚡ Hint

Of the selected album, you can select to play only the MP3 audio tracks, JPEG image files, or both, by setting "MODE (MP3, JPEG)" (page 51).

Selecting an MP3 audio track

1 After step 2 of "Selecting an album," press ENTER.

The list of tracks in the album appears.

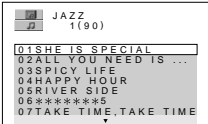

2 Press **↑/↓** to select a track, and press ENTER.

Playback starts from the selected track.

To stop playback

Press **■**.

To go to the next or previous page

Press **→** or **←**.

To return to the previous display

Press **↶** RETURN.

To go to the next or previous MP3 audio track


Press **▶▶** or **◀◀** during playback. You can select the first track of the next album by pressing **▶▶** during playback of the last track of the current album.

Note that you cannot return to the previous album by using **◀◀**, and that you need to select the previous album from the album list.

Selecting a JPEG image file

1 After step 2 of "Selecting an album," press PICTURE NAVI.

The image files in the album appear in 16 subscreens. A scroll box is displayed on the right.

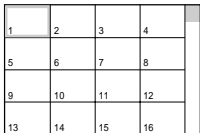

To display the additional image, select the bottom images and press **↓**. To return to the previous image, select the top images and press **↑**.

2 Press **←/→** to select the image you want to view, and press ENTER.

The selected image appears.

Example



To go to the next or previous JPEG image file


Press **←** or **→** during playback. You can select the first file of the next album by pressing **→** during playback of the last file of the current album.

Note that you cannot return to the previous album by using **←**, and that you need to select the previous album from the album list.

Enjoying MP3 audio and JPEG images

To rotate a JPEG image

Press **↑/↓** while viewing the image. Each time you press **↑**, the image rotates counterclockwise by 90 degrees. To return to normal view, press **CLEAR**. Note that the view also returns to normal if you press **←/→** to go to the next or previous image. Example: when **↑** is pressed once.

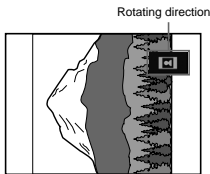

To magnify a JPEG image (ZOOM)

Press **ZOOM** while viewing the image. You can enlarge the image up to four times the original size, and scroll using **←/↑/↓/→**. To return to normal view, press **CLEAR**.

◆When pressed once (x2)

The image enlarges twice the original size.

◆When pressed twice (x4)

The image enlarges four times the original size.

To stop viewing the JPEG image

Press **■**.

⚡ Hints

- While viewing JPEG image files, you can set options such as "INTERVAL" (page 51), "EFFECT" (page 52), and "SHARPNESS" (page 45).
- You can view JPEG images files without MP3 audio by setting "MODE (MP3, JPEG)" to "IMAGE (JPEG)" (page 51).
- The date the picture was taken is displayed beside "DATE" in the Control Menu (page 11). Note that no date may appear depending on the digital camera.


Note

PICTURE NAVI does not work if "AUDIO (MP3)" is selected in "MODE (MP3, JPEG)" (page 51).

Enjoying JPEG Images as a Slide Show


DATA CD DATA DVD

You can play JPEG image files on a DATA CD or DATA DVD successively as a slide show.

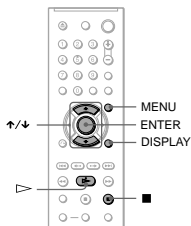

1 Press MENU.

The list of albums on the DATA CD/DATA DVD appears.

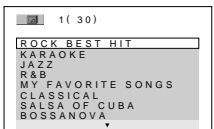

2 Press **↑/↓** to select an album.

3 Press **ENTER**.

The JPEG images in the selected album start playing as a slide show.

To stop playback

Press **■**.


Notes

- The slide show stops when **↑/↓** or **ZOOM** is pressed. To resume the slide show, press **ENTER**.
- This function does not work if "MODE (MP3, JPEG)" is set to "AUDIO (MP3)" (page 51).

Viewing a slide show with sound (MODE (MP3, JPEG))

When JPEG image files and MP3 audio tracks are placed in the same album, you can enjoy a slide show with sound.

- 1 Press **DISPLAY** during stop mode. The Control Menu appears.
- 2 Press **↔** to select **MODE** (MP3, JPEG), and press **ENTER**. The options for "MODE (MP3, JPEG)" appear.

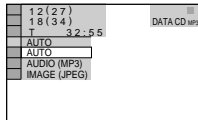

- 3 Press **↔** to select "AUTO" (default), and press **ENTER**.
 - AUTO: plays both the JPEG image files and MP3 audio tracks in the same album as a slide show.
 - AUDIO (MP3): plays only MP3 audio tracks continuously.
 - IMAGE (JPEG): plays only JPEG image files continuously.

- 4 Press **MENU**. The list of albums on the DATA CD/DATA DVD appears.



- 5 Press **↔** to select the album that contains both the MP3 audio tracks and JPEG images you want to play.
- 6 Press **▷**. A slide show starts with sound.

Hints

- To repeat both MP3 audio tracks and JPEG image files in a single album, repeat the same MP3 audio track or album when "MODE (MP3, JPEG)" is set to "AUTO." See "Playing repeatedly (Repeat Play)" (page 29) to repeat the track or album.
- The player recognizes a maximum of 200 albums regardless of the selected mode. Of each album, the player recognizes up to 300 MP3 audio tracks and 300 JPEG image files when "AUTO" is selected, 600 MP3 audio tracks when "AUDIO (MP3)" is selected, 600 JPEG image files when "IMAGE (JPEG)" is selected.


Notes

- This function does not work if the MP3 audio tracks and JPEG image files are not placed in the same album.
- If playing time of JPEG image or MP3 audio is longer than the other, the longer one continues without sound or image.
- If you play large MP3 track data and JPEG image data at the same time, the sound may skip. It is recommended that you set the MP3 bit rate to 128 kbps or lower when creating the file. If the sound still skips, then reduce the size of the JPEG file.

Setting the pace for a slide show (INTERVAL)

You can set the time the slides are displayed on the screen.

- 1 Press **DISPLAY** twice while viewing a JPEG image or when the player is in stop mode. The Control Menu appears.
- 2 Press **↔** to select **INTERVAL**, then press **ENTER**. The options for "INTERVAL" appear.

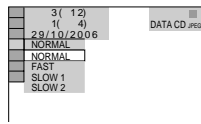

- 3 Press **↔** to select a setting. The default setting is underlined.
 - NORMAL: sets the duration to between 6 to 9 seconds.
 - FAST: sets a duration shorter than NORMAL.

Enjoying MP3 audio and JPEG images

- SLOW 1: sets a duration longer than NORMAL.
- SLOW 2: sets a duration longer than SLOW 1.

4 Press ENTER.


Note

Some JPEG files, especially progressive JPEG files or JPEG files of 3,000,000 pixels or more, may take longer to display than others, which may make the duration seem longer than the setting you selected.

Selecting the slides' appearance (EFFECT)

You can select the way the slides are displayed during a slide show.

- 1 Press **DISPLAY** twice while viewing a JPEG image or when the player is in stop mode.
- 2 Press **↔** to select **EFFECT**, then press **ENTER**. The options for "EFFECT" appear.

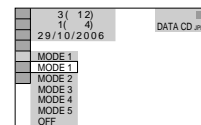

- 3 Press **↔** to select a setting. The default setting is underlined.
 - MODE 1: the image sweeps in from top to bottom.
 - MODE 2: the image sweeps in from left to right.
 - MODE 3: the image stretches out from the centre of the screen.
 - MODE 4: the images randomly cycle through the effects.
 - MODE 5: the next image slides over the previous image.
 - OFF: turns off this function.
- 4 Press **ENTER**.

→ continued 51

52

Enjoying DivX® Videos

About DivX Video Files

DivX® is a video file compression technology, developed by DivX, Inc. This product is an official DivX® Certified product.

You can play DATA CDs and DATA DVDs that contain DivX video files.

DATA CDs and DATA DVDs that the player can play

Playback of DATA CDs (CD-ROMs/CD-Rs/CD-RWs) and DATA DVDs (DVD-ROMs/DVD+RWs/DVD+Rs/DVD-RWs/DVD-Rs) on this player is subject to certain conditions:

- With DATA CDs/DATA DVDs that contain DivX video files in addition to MP3 audio tracks or JPEG image files, the player plays only the DivX video files.

However, this player only plays DATA CDs whose logical format is ISO 9660 Level 1/Level 2 or Joliet, and DATA DVDs of Universal Disk Format (UDF). Refer to the instructions supplied with the disc drives and the recording software (not supplied) for details on the recording format.

About playback order of data on DATA CDs or DATA DVDs

See "About playback order of albums, tracks, and files" (page 47). Note that the playback order may not be applicable, depending on the software used for creating the DivX video file, or if there are more than 200 albums and 600 DivX video files in each album.

Note

The player may not be able to play some DATA CDs/DATA DVDs created in the Packet Write format.

DivX video files that the player can play

The player can play data that is recorded in DivX format, and which has the extension ".AVI," or ".DIVX." The player will not play files with the extension ".AVI" or ".DIVX" if they do not contain a DivX video.

Hint

For details about playable MP3 audio tracks or JPEG image files on DATA CDs/DATA DVDs, see "DATA CDs/DATA DVDs that the player can play" (page 46).

Notes


- The player may not play a DivX video file when the file has been combined from two or more DivX video files.
- The player cannot play a DivX video file of size more than 720 (width) × 576 (height)/2 GB.
- Depending on the DivX video file, the picture may be unclear or the sound may skip.
- The player cannot play some DivX video files that are longer than 3 hours.

Enjoying DivX® Videos

Playing DivX Video Files

DATA CD DATA DVD

You can play DivX video files on DATA CDs (CD-ROMs/CD-Rs/CD-RWs) and DATA DVDs (DVD-ROMs/DVD+RWs/DVD+Rs/DVD-RWs/DVD-Rs).

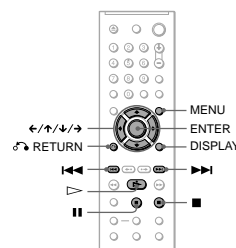

Hints

- You can view the disc information while playing a DivX video file (page 35).
- The player plays DivX video files either in PAL or NTSC colour system according to the current setting (page 16).


Notes

- If there are no DivX video files recorded on the DATA CD/DATA DVD, a message appears to indicate that the disc is not playable.
- Depending on the DivX video file, the picture may pause or be unclear. In which case, it is recommended that you create the file at a lower bit rate. If the sound is still noisy, MP3 is the recommended audio format. Note, however, this player does not conform to WMA (Windows Media Audio) format.
- Because of the compression technology used for DivX video files, it may take some time after you press **▷** (play) for the picture to appear.
- Depending on the DivX video file, the sound may not match the pictures on the screen.

Selecting an album

- 1 Press **MENU**.

A list of albums on the disc appears. Only albums that contain DivX video files are listed.

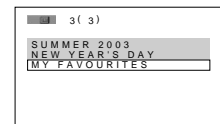

- 2 Press **↔** to select the album you want to play.

- 3 Press **▷**. Playback starts from the selected album. To select DivX video files, see "Selecting a DivX video file" (page 55).

To stop playback

Press **■**.

To go to the next or previous page


Press **◀** or **▶**.

To turn the display on or off

Press **MENU** repeatedly.

Selecting a DivX video file

- 1 After step 2 of "Selecting an album," press ENTER.
The list of files in the album appears.

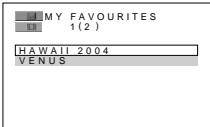

- 2 Press **↑/↓** to select a file, and press ENTER.
The selected file starts playing.

To stop playback
Press **■**.

To go to the next or previous page
Press **←** or **→**.

To return to the previous display
Press **↶** RETURN.

To go to the next or previous DivX video file without turning on the above file list
You can select the next or previous DivX video file in the same album by pressing **▶▶** or **◀◀**.
You can also select the first file of the next album by pressing **▶▶** during playback of the last file of the current album. Note that you cannot return to the previous album by using **◀◀**. To return to the previous album, select it from the album list.


Hint
If the number of viewing times is preset, you can play the DivX video files as many times as the preset number. The following occurrences are counted:
– when the player is turned off. This includes when the player is automatically turned off by the Auto Power Off function. Press **||** instead of **■** when you want to stop viewing.
– when the disc tray is opened.
– when another file is played.

Enjoying DivX® Videos

Using Various Additional Functions

Locking Discs (CUSTOM PARENTAL CONTROL, PARENTAL CONTROL)


You can set two kinds of playback restrictions for a disc.
• Custom Parental Control
You can set playback restrictions so that the player will not play inappropriate discs.
• Parental Control
Playback of some DVD VIDEOS can be limited according to a predetermined level such as the age of the users. Scenes may be blocked or replaced with different scenes. The same password is used for both Parental Control and Custom Parental Control.

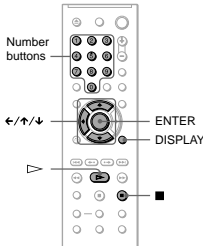

Custom Parental Control

DVDVideo VCD CD
You can set the same Custom Parental Control password for up to 40 discs. When you set the 41st-disc, the first disc is cancelled.
1 Insert the disc you want to lock.
If the disc is playing, press **■** to stop playback.
2 Press DISPLAY while the player is in stop mode.
The Control Menu appears.

- 3 Press **↑/↓** to select **(PARENTAL CONTROL)**, then press ENTER.
The options for "PARENTAL CONTROL" appear.

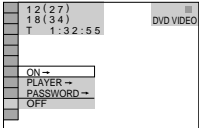

- 4 Press **↑/↓** to select "ON →," then press ENTER.
♦ If you have not entered a password The display for registering a new password appears.



 
Enter a 4-digit password using the number buttons, then press ENTER. The display for confirming the password appears.
♦ When you have already registered a password
The display for entering the password appears.

- 5 Enter or re-enter your 4-digit password using the number buttons, then press ENTER.
"Custom parental control is set." appears and then the screen returns to the Control Menu.

To turn off the Custom Parental Control function
1 Follow steps 1 to 3 of "Custom Parental Control."
2 Press **↑/↓** to select "OFF →," then press ENTER.
3 Enter your 4-digit password using the number buttons, then press ENTER.

To play a disc for which Custom Parental Control is set

- 1 Insert the disc for which Custom Parental Control is set.
The "CUSTOM PARENTAL CONTROL" display appears.




- 2 Enter your 4-digit password using the number buttons, then press ENTER.
The player is ready for playback.

Hint
If you forget your password, enter the 6-digit number "199703" using the number buttons when the "CUSTOM PARENTAL CONTROL" display asks you for your password, then press ENTER. The display will ask you to enter a new 4-digit password.


Parental Control (limited playback) **DVDVideo**

Playback of some DVD VIDEOS can be limited according to a predetermined level such as the age of the users. The "PARENTAL CONTROL" function allows you to set a playback limitation level.

- 1 Press DISPLAY while the player is in stop mode.
The Control Menu appears.
2 Press **↑/↓** to select **(PARENTAL CONTROL)**, then press ENTER.
The options for "PARENTAL CONTROL" appear.

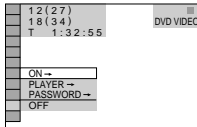


 - 3 Press **↑/↓** to select "PLAYER →," then press ENTER.
♦ If you have not entered a password
The display for registering a new password appears.




Enter a 4-digit password using the number buttons, then press ENTER. The display for confirming the password appears.
♦ When you have already registered a password
The display for entering the password appears.

 - 4 Enter or re-enter your 4-digit password using the number buttons, then press ENTER.
The display for setting the playback limitation level appears.




- 5 Press **↑/↓** to select "STANDARD," then press ENTER.
The selection items for "STANDARD" are displayed.

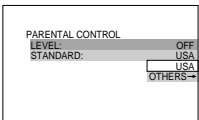


- 6 Press **↑/↓** to select a geographic area as the playback limitation level, then press ENTER.

Using Various Additional Functions

 The area is selected.
When you select "OTHERS →," select and enter a standard code in the table on page 74 using the number buttons.
7 Press **↑/↓** to select "LEVEL," then press ENTER.
The selection items for "LEVEL" are displayed.



 - 8 Select the level you want using **↑/↓**, then press ENTER.
Parental Control setting is complete.



The lower the value, the stricter the limitation.

To turn off the Parental Control function
Set "LEVEL" to "OFF" in step 8.
To play a disc for which Parental Control is set
1 Insert the disc and press **▶**.
The display for entering your password appears.
2 Enter your 4-digit password using the number buttons, then press ENTER.
The player starts playback.

Hint
If you forget your password, remove the disc and repeat steps 1 to 3 of "Parental Control (limited playback)." When you are asked to enter your password, enter "199703" using the number buttons, then press ENTER. The display will ask you to enter a new 4-digit password. After you enter a new 4-digit password, replace the disc in the player and press **▶**. When the display for entering your password appears, enter your new password.

Notes
• When you play discs which do not have the Parental Control function, playback cannot be limited on this player.
• Depending on the disc, you may be asked to change the parental control level while playing the disc. In this case, enter your password, then change the level. If the Resume Play mode is cancelled, the level returns to the previous level.


Changing the password

- 1 Press DISPLAY while the player is in stop mode.
The Control Menu appears.
2 Press **↑/↓** to select **(PARENTAL CONTROL)**, then press ENTER.
The options for "PARENTAL CONTROL" appear.
3 Press **↑/↓** to select "PASSWORD →," then press ENTER.
The display for entering the password appears.
4 Enter your 4-digit password using the number buttons, then press ENTER.
5 Enter a new 4-digit password using the number buttons, then press ENTER.
6 To confirm your password, re-enter it using the number buttons, then press ENTER.

If you make a mistake entering your password
Press **←** before you press ENTER and input the correct number.

Controlling Your TV with the Supplied Remote

You can control the sound level, input source, and power switch of your Sony TV with the supplied remote.

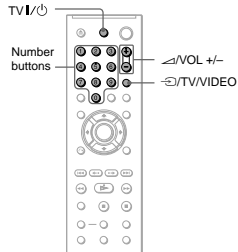

You can control your TV using the buttons below.

By pressing	You can
TV I/⏻	Turn the TV on or off
⏮/VOL +/-	Adjust the volume of the TV
⏮/TV/VIDEO	Switch the TV's input source between the TV and other input sources.

Note

Depending on the connected unit, you may not be able to control your TV using all or some of the buttons on the supplied remote.

Controlling other TVs with the remote

You can control the sound level, input source, and power switch of non-Sony TVs as well. If your TV is listed in the table below, set the appropriate manufacturer's code.

- 1 While holding down TV I/⏻, press the number buttons to select your TV's manufacturer's code (see the table below).
- 2 Release TV I/⏻.

Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

◆For RMT-D175P remote commander only

Manufacturer	Code number
Sony	01 (default)
Aiwa	01 (default)
Grundig	11
Hitachi	24
JVC	33
LG	06
Loewe	06
Panasonic	17, 49
Philips	06, 08
Samsung	06, 71
Sanyo	25
Sharp	29
Thomson	43
Toshiba	38

Using Various Additional Functions

◆For RMT-D175A remote commander only

Manufacturer	Code number
Sony	01 (default)
Daewoo	04, 22
Hitachi	02, 04
JVC	09
LG/Goldstar	04
MGA/Mitsubishi	04, 13
Panasonic	19
Philips	21
RCA	04, 10
Samsung	04, 20
Sharp	18
Toshiba	07, 18

Notes

- When you replace the batteries of the remote, the code number you have set may be reset to the default setting. Set the appropriate code number again.
- Depending on the connected unit, you may not be able to control your TV using all or some of the buttons on the supplied remote.

→ continued 59

60

Settings and Adjustments


Using the Setup Display

By using the Setup Display, you can make various adjustments to items such as picture and sound. You can also set a language for the subtitles and the Setup Display, among other things.

For details on each Setup Display item, see pages from 62 to 67.

Note

Playback settings stored in the disc take priority over the Setup Display settings and not all of the functions described may work.

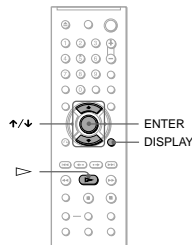


- 1 Press DISPLAY when the player is in stop mode.

The Control Menu appears.


- 2 Press ⏮/⏭ to select (SETUP), then press ENTER.

The options for "SETUP" appear.

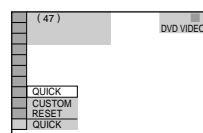

- 3 Press ⏮/⏭ to select "CUSTOM," then press ENTER.

The Setup Display appears.

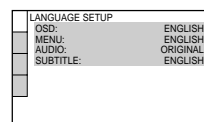


- 4 Press ⏮/⏭ to select the setup item from the displayed list:

"LANGUAGE SETUP," "SCREEN SETUP," "CUSTOM SETUP," or "AUDIO SETUP." Then press ENTER.

The Setup item is selected.

Example: "SCREEN SETUP"

Selected item

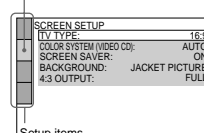


Setup items

- 5 Press ⏮/⏭ to select an item, then press ENTER.

The options for the selected item appear.

Example: "TV TYPE"

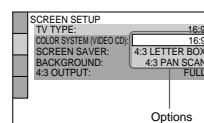


Options

Settings and Adjustments

- 6 Press ⏮/⏭ to select a setting, then press ENTER.

The setting is selected and setup is complete.

Example: "4:3 PAN SCAN"

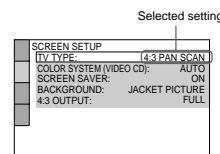

To enter the Quick Setup mode

Select "QUICK" in step 3. Follow from step 5 of the Quick Setup explanation to make basic adjustments (page 20).

To reset all of the "SETUP" settings

 
- 1 Select "RESET" in step 3 and press ENTER.
- 2 Select "YES" using ⏮/⏭. You can also quit the process and return to the Control Menu by selecting "NO" here.
- 3 Press ENTER.

All the settings explained on pages 62 to 67 return to the default settings. Do not press I/⏻ while resetting the player, which takes a few seconds to complete.

Setting the Display or Sound Track Language (LANGUAGE SETUP)

"LANGUAGE SETUP" allows you to set various languages for the on-screen display or sound track.

Select "LANGUAGE SETUP" in the Setup Display. To use the display, see "Using the Setup Display" (page 61).



◆ OSD (On-Screen Display)

Switches the display language on the screen.

◆ MENU (DVD VIDEO only)

You can select the desired language for the disc's menu.

◆ AUDIO (DVD VIDEO only)

Switches the language of the sound track. When you select "ORIGINAL," the language given priority in the disc is selected.

◆ SUBTITLE (DVD VIDEO only)

Switches the language of the subtitle recorded on the DVD VIDEO. When you select "AUDIO FOLLOW," the language for the subtitles changes according to the language you selected for the sound track.

⚠ Hint

If you select "OTHERS →" in "MENU," "SUBTITLE," or "AUDIO," select and enter a language code from "Language Code List" on page 74 using the number buttons.

Note

If you select a language in "MENU," "SUBTITLE," or "AUDIO" that is not recorded on a DVD VIDEO, one of the recorded languages will be automatically selected.

→ continued 61

62

Settings for the Display (SCREEN SETUP)

Choose settings according to the TV to be connected.

Select "SCREEN SETUP" in the Setup Display. To use the display, see "Using the Setup Display" (page 61). The default settings are underlined.

SCREEN SETUP	16:9
TV TYPE:	AUTO
COLOR SYSTEM (VIDEO CD):	AUTO
SCREEN SAVER:	ON
BACKGROUND:	JACKET PICTURE
4:3 OUTPUT:	FULL

TV TYPE

Selects the aspect ratio of the connected TV (4:3 standard or wide).

16:9	Select this when you connect a wide-screen TV or a TV with a wide mode function.
4:3 LETTER BOX	Select this when you connect a 4:3 screen TV. Displays a wide picture with bands on the upper and lower portions of the screen.
4:3 PAN SCAN	Select this when you connect a 4:3 screen TV. Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit.

16:9



4:3 LETTER BOX



4:3 PAN SCAN



Note

Depending on the DVD, "4:3 LETTER BOX" may be selected automatically instead of "4:3 PAN SCAN" or vice versa.

COLOR SYSTEM (VIDEO CD)

Selects the color system when you play a VIDEO CD.

AUTO	Outputs the video signal in the system of the VIDEO CD, either PAL or NTSC. If your TV is the DUAL system, select AUTO.
PAL	Changes the video signals of an NTSC VIDEO CD and outputs it in the PAL system.
NTSC	Changes the video signals of a PAL VIDEO CD and outputs it in the NTSC system.

SCREEN SAVER

The screen saver image appears when you leave the player in pause or stop mode for 15 minutes, or when you play a CD, or DATA CD (MP3 audio)/DATA DVD (MP3 audio) for more than 15 minutes. The screen saver will help prevent your display device from becoming damaged (ghosting). Press \triangleright to turn off the screen saver.

ON	Turns on the screen saver.
OFF	Turns off the screen saver.

BACKGROUND

Selects the background colour or picture on the TV screen when the player is in stop mode or while playing a CD, or DATA CD (MP3 audio)/DATA DVD (MP3 audio).

JACKET PICTURE	The jacket picture (still picture) appears, but only when the jacket picture is already recorded on the disc (CD-EXTRA, etc.). If the disc does not contain a jacket picture, the "GRAPHICS" picture appears.
GRAPHICS	A preset picture stored in the player appears.
BLUE	The background colour is blue.
BLACK	The background colour is black.


Settings and Adjustments

4:3 OUTPUT

This setting is effective only when you set "TV TYPE" in "SCREEN SETUP" to "16:9."

Adjust this to watch 4:3 aspect ratio progressive signals. If you can change the aspect ratio on your progressive format (525p/625p) compatible TV, change the setting on your TV, not the player. This setting is effective only when "PROGRESSIVE AUTO" or "PROGRESSIVE VIDEO" is selected by using the PROGRESSIVE button on the front panel.

FULL	Select this when you can change the aspect ratio on your TV.
NORMAL	Select this when you cannot change the aspect ratio on your TV. Shows a 16:9 aspect ratio signal with black bands on left and right sides of the image.

 

16:9 aspect ratio TV

Custom Settings (CUSTOM SETUP)

Use this to set up playback related and other settings.

Select "CUSTOM SETUP" in the Setup Display. To use the display, see "Using the Setup Display" (page 61). The default settings are underlined.

CUSTOM SETUP	OFF
AUTO POWER OFF:	OFF
AUTO PLAY:	BRIGHT
DIMMER:	AUTO
PAUSE MODE:	OFF
TRACK SELECTION:	ON
MULTI-DISC RESUME:	ON
DIVX:	Registration Code \rightarrow

AUTO POWER OFF

Switches the Auto Power Off setting on or off.

OFF	Switches this function off.
ON	The player enters standby mode when left in stop mode for more than 30 minutes.

AUTO PLAY

Switches the Auto Play setting on or off. This function is useful when the player is connected to a timer (not supplied).

OFF	Switches this function off.
ON	Automatically starts playback when the player is turned on by a timer (not supplied).

DIMMER

Adjusts the lighting of the front panel display.

BRIGHT	Makes the lighting bright.
DARK	Makes the lighting dark.

PAUSE MODE (DVD VIDEO/DVD-VR mode only)

Selects the picture in pause mode.

AUTO	The picture, including subjects that move dynamically, is output with no jitter. Normally select this position.
FRAME	The picture, including subjects that do not move dynamically, is output in high resolution.

TRACK SELECTION (DVD VIDEO only)

Gives the sound track which contains the highest number of channels priority when you play a DVD VIDEO on which multiple audio formats (PCM, MPEG audio, DTS, or Dolby Digital format) are recorded.

OFF	No priority given.
AUTO	Priority given.

Notes

- When you set the item to "AUTO," the language may change. The "TRACK SELECTION" setting has higher priority than the "AUDIO" settings in "LANGUAGE SETUP" (page 62).
- If you set "DTS" to "OFF" (page 67), the DTS sound track is not played even if you set "TRACK SELECTION" to "AUTO."
- If PCM, DTS, MPEG audio, and Dolby Digital sound tracks have the same number of channels, the player selects PCM, DTS, MPEG audio, and Dolby Digital sound tracks in this order.

MULTI-DISC RESUME (DVD VIDEO/VIDEO CD only)

Switches the Multi-disc Resume setting on or off. Resume playback can be stored in memory for up to 6 different DVD VIDEOs/VIDEO CDs (page 24).

ON	Stores the resume setting in memory for up to 6 discs.
OFF	Does not store the resume setting in memory. Playback restarts at the resume point only for the current disc in the player.

Note

If you run Quick Setup, Multi-disc Resume setting stored in memory may return to the default settings.

DivX

Displays the registration code for this player. For more information, go to <http://www.divx.com> on the Internet.

64

Settings for the Sound (AUDIO SETUP)

"AUDIO SETUP" allows you to set the sound according to the playback and connection conditions.

Select "AUDIO SETUP" in the Setup Display. To use the display, see "Using the Setup Display" (page 61). The default settings are underlined.

AUDIO SETUP	OFF
AUDIO ATT:	STANDARD
AUDIO DRC:	DOLBY SURROUND
DOWNMIX:	ON
DIGITAL OUT:	D-PCM
DOLBY DIGITAL:	PCM
MPEG:	OFF
DTS:	48kHz/96kHz PCM: 48kHz/16bit

AUDIO ATT (attenuation)

If the playback sound is distorted, set this item to "ON." The player reduces the audio output level.

This function affects the output of the LINE OUT L/R (AUDIO) jacks.

OFF	Normally, select this position.
ON	Select this when the playback sound from the speakers is distorted.

AUDIO DRC (Dynamic Range Control) (DVD VIDEO/DVD-VR mode only)

Makes the sound clear when the volume is turned down when playing a DVD that conforms to "AUDIO DRC."

This function affects the output from the following jacks:

- LINE OUT L/R (AUDIO) jacks
- DIGITAL OUT (OPTICAL or COAXIAL) jack only when "DOLBY DIGITAL" is set to "D-PCM" (page 67).

STANDARD	Normally select this position.
TV MODE	Makes low sounds clear even if you turn the volume down.
WIDE RANGE	Gives you the feeling of being at a live performance.

DOWNMIX (DVD VIDEO/DVD-VR mode only)

Switches the method for mixing down to 2 channels when you play a DVD which has rear sound elements (channels) or is recorded in Dolby Digital format. For details on the rear signal components, see "Checking the audio signal format" (page 39). This function affects the output of the following jacks:

- LINE OUT L/R (AUDIO) jacks
- DIGITAL OUT (OPTICAL or COAXIAL) jack when "DOLBY DIGITAL" is set to "D-PCM" (page 67).

DOLBY SURROUND	Normally, select this position. Multi-channel audio signals are output to 2 channels for enjoying surround sounds.
NORMAL	Multi-channel audio signals are downmixed to 2 channels for use with your stereo.

DIGITAL OUT

Selects if audio signals are output via the DIGITAL OUT (OPTICAL or COAXIAL) jack.

ON	Normally select this position. When you select "ON," see "Setting the digital output signal" for further settings (page 67).
OFF	The influence of the digital circuit upon the analog circuit is minimal.

65

66

Setting the digital output signal

Switches the method of outputting audio signals when you connect a component such as an amplifier (receiver) or MD deck with a digital input jack.

For connection details, see page 18. Select "DOLBY DIGITAL," "MPEG," "DTS," and "48kHz/96kHz PCM" after setting "DIGITAL OUT" to "ON." If you connect a component that is incompatible with the selected audio signal, a loud noise (or no sound) may be heard from the speakers, risking damage to your ears or speakers.

◆ DOLBY DIGITAL (DVD VIDEO/DVD-VR mode only)

Selects the type of Dolby Digital signal.

D-PCM	Select this when the player is connected to an audio component without a built-in Dolby Digital decoder. You can select whether the signals conform to Dolby Surround (Pro Logic) or not by making adjustments to the "DOWNMIX" item in "AUDIO SETUP" (page 66).
DOLBY DIGITAL	Select this when the player is connected to an audio component with a built-in Dolby Digital decoder.

◆ MPEG (DVD VIDEO/DVD-VR mode only)

Selects the type of MPEG audio signal.

PCM	Select this when the player is connected to an audio component without a built-in MPEG decoder. If you play multi-channel MPEG audio sound tracks, only the Front (L) and Front (R) signals will be output from your two front speakers.
MPEG	Select this when the player is connected to an audio component with a built-in MPEG decoder.

◆ DTS

Selects whether or not to output DTS signals.

OFF	Select this when the player is connected to an audio component without a built-in DTS decoder.
ON	Select this when the player is connected to an audio component with a built-in DTS decoder.

◆ 48kHz/96kHz PCM (DVD VIDEO only)

Selects the sampling frequency of the audio signal.

48kHz/16bit	The audio signals of DVD VIDEOs are always converted to 48kHz/16bit.
96kHz/24bit	All types of signals including 96kHz/24bit are output in their original format. However, if the signal is encrypted for copyright protection purposes, the signal is only output as 48kHz/16bit.

Note

The analogue audio signals from the LINE OUT L/R (AUDIO) jacks are not affected by this setting and keep their original sampling frequency level.

Operation

The remote does not function.

- ➔ The batteries in the remote are weak.
- ➔ There are obstacles between the remote and the player.
- ➔ The distance between the remote and the player is too far.
- ➔ The remote is not pointed at the remote sensor on the player.

The disc does not play.

- ➔ The disc is turned over. Insert the disc with the playback side facing down.
- ➔ The disc is skewed.
- ➔ The player cannot play certain discs (page 6).
- ➔ The region code on the DVD does not match the player.
- ➔ Moisture has condensed inside the player (page 3).
- ➔ The player cannot play a recorded disc that is not correctly finalized (page 7).

The MP3 audio track cannot be played (page 48).

- ➔ The DATA CD is not recorded in an MP3 format that conforms to ISO 9660 Level 1/Level 2 or Joliet.
- ➔ The DATA DVD is not recorded in MP3 format that conforms to UDF (Universal Disk Format).
- ➔ The MP3 audio track does not have the extension ".MP3."
- ➔ The data is not formatted in MP3 even though it has the extension ".MP3."
- ➔ The data is not MPEG-1 Audio Layer III data.
- ➔ The player cannot play audio tracks in mp3PRO format.
- ➔ "MODE (MP3, JPEG)" is set to "IMAGE (JPEG)" (page 51).
- ➔ The DATA CD/DATA DVD contains a DivX video file.

The JPEG image file cannot be played (page 48).

- ➔ The DATA CD is not recorded in a JPEG format that conforms to ISO 9660 Level 1/Level 2, or Joliet.
- ➔ The DATA DVD is not recorded in JPEG format that conforms to UDF (Universal Disk Format).
- ➔ The file has an extension other than ".JPEG" or ".JPG."
- ➔ The image is larger than 3072 (width) × 2048 (height) in normal mode, or more than 3,300,000 pixels in progressive JPEG. (Some progressive JPEG files cannot be displayed even if the file size is within this specified capacity.)
- ➔ The image does not fit the screen (the image is reduced).
- ➔ "MODE (MP3, JPEG)" is set to "AUDIO (MP3)" (page 51).
- ➔ The DATA CD/DATA DVD contains a DivX video file.

The MP3 audio tracks and JPEG image files start playing simultaneously.

- ➔ "MODE (MP3, JPEG)" is set to "AUDIO" (page 51).

The DivX video file cannot be played.

- ➔ The file is not created in DivX format.
- ➔ The file has an extension other than ".AVI" or ".DIVX."
- ➔ The DATA CD (DivX video)/DATA DVD (DivX video) is not created in a DivX format that conforms to ISO 9660 Level 1/Level 2 or Joliet/UDF.
- ➔ The DivX video file is larger than 720 (width) × 576 (height).

The album/track/file names are not displayed correctly.

- ➔ The player can only display numbers and alphabet. Other characters are displayed as "•".

The disc does not start playing from the beginning.

- ➔ Programme Play, Shuffle Play, Repeat Play, or A-B Repeat Play is selected (page 27).
- ➔ Resume play has taken effect (page 24).

Additional Information

Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

Power

The power is not turned on.

- ➔ Check that the mains lead is connected securely.

Picture

There is no picture/picture noise appears.

- ➔ Re-connect the connecting cord securely.
- ➔ The connecting cords are damaged.
- ➔ Check the connection to your TV (page 15) and switch the input selector on your TV so that the signal from the player appears on the TV screen.
- ➔ The disc is dirty or flawed.
- ➔ If the picture output from your player goes through your VCR to get to your TV or if you are connected to a combination TV/VIDEO player, the copy-protection signal applied to some DVD programmes could affect picture quality. If you still experience problems even when you connect your player directly to your TV's S VIDEO input (page 15).
- ➔ The disc is recorded in a colour system that is different from your TV.
- ➔ You have selected "PROGRESSIVE AUTO" or "PROGRESSIVE VIDEO" using the PROGRESSIVE button on the front panel (the PROGRESSIVE indicator lights up) even though your TV cannot accept the progressive signal. In this case, select "NORMAL (INTERLACE)" so that the PROGRESSIVE indicator turns off.
- ➔ If the colour system of your player does not match with that of your TV, change the colour system of the player. For details, see page 16. (You cannot change the colour system of the DVD disc itself.)

- ➔ Even if your TV is compatible with progressive format 525p/625p signals, the image may be affected when you set the player to progressive format. In this case, select "NORMAL (INTERLACE)" using the PROGRESSIVE button on the front panel so that the PROGRESSIVE indicator turns off and the player is set to normal (interlace) format.

The picture does not fill the screen, even though the aspect ratio is set in "TV TYPE" under "SCREEN SETUP."

- ➔ The aspect ratio of the disc is fixed on your DVD.

Sound

There is no sound.

- ➔ Re-connect the connecting cord securely.
- ➔ The connecting cord is damaged.
- ➔ The player is connected to the wrong input jack on the amplifier (receiver) (page 18).
- ➔ The amplifier (receiver) input is not correctly set.
- ➔ The player is in pause mode or in Slow-motion Play mode.
- ➔ The player is in fast forward or fast reverse mode.
- ➔ If the audio signal does not come through the DIGITAL OUT (OPTICAL or COAXIAL) jack, check the audio settings (page 66).
- ➔ While playing a Super VCD on which the audio track 2 is not recorded, no sound will come out when you select "2:STEREO," "2:1/L," or "2:2/R."
- ➔ When playing multichannel MPEG audio soundtracks, only the Front (L) and Front (R) signals will be output from two front speakers.

Sound distortion occurs.

- ➔ Set "AUDIO ATT" in "AUDIO SETUP" to "ON" (page 66).

The sound volume is low.

- ➔ The sound volume is low on some DVDs. The sound volume may improve if you set "AUDIO DRC" in "AUDIO SETUP" to "TV MODE" (page 66).
- ➔ Set "AUDIO ATT" in "AUDIO SETUP" to "OFF" (page 66).

The player starts playing the disc automatically.

- ➔ The disc features an auto playback function.
- ➔ "AUTO PLAY" in "CUSTOM SETUP" is set to "ON" (page 64).

Playback stops automatically.

- ➔ While playing discs with an auto pause signal, the player stops playback at the auto pause signal.

Some functions such as Stop, Search, Fast Play, Slow Play, Slow-motion Play, Repeat Play, Shuffle Play, or Programme Play cannot be performed.

- ➔ Depending on the disc, you may not be able to do some of the operations above. Refer to the operating manual that comes with the disc.

The language for the sound track cannot be changed.

- ➔ Try using the DVD's menu instead of the direct selection button on the remote (page 25).
- ➔ Multilingual tracks are not recorded on the DVD being played.
- ➔ The DVD prohibits the changing of the language for the sound track.

The subtitle language cannot be changed or turned off.

- ➔ Try using the DVD's menu instead of the direct selection button on the remote (page 25).
- ➔ Multilingual subtitles are not recorded on the DVD being played.
- ➔ The DVD prohibits the changing of subtitles.

The angles cannot be changed.

- ➔ Try using the DVD's menu instead of the direct selection button on the remote (page 25).
- ➔ Multi-angles are not recorded on the DVD being played.
- ➔ The angle can only be changed when the "PAUSE" indicator lights up on the front panel display (page 9).
- ➔ The DVD prohibits changing of the angles.

The player does not operate properly.

- ➔ When static electricity, etc., causes the player to operate abnormally, unplug the player.

5 numbers or letters are displayed on the screen and on the front panel display.

- ➔ The self-diagnosis function was activated. (See the table on page 71.)

The disc tray does not open and "LOCKED" appears on the front panel display.

- ➔ Child Lock is set (page 23).

The disc tray does not open and "TRAY LOCKED" appears on the front panel display.

- ➔ Contact your Sony dealer or local authorized Sony service facility.

"Data error" appears on the TV screen when playing a DATA CD or DATA DVD.

- ➔ The MP3 audio track/JPEG image file/DivX video file you want to play is broken.
- ➔ The data is not MPEG-1 Audio Layer III data.
- ➔ The JPEG image file format does not conform to DCF (page 46).
- ➔ The JPEG image file has the extension ".JPG" or ".JPEG," but is not in JPEG format.
- ➔ The file you want to play has the extension ".AVI" or ".DIVX," but is not in DivX format, or is in DivX format but does not conform to a DivX Certified profile.

Self-diagnosis Function

(When letters/numbers appear in the display)

When the self-diagnosis function is activated to prevent the player from malfunctioning, a five-character service number (e.g., C 13 50) with a combination of a letter and four digits appears on the screen and the front panel display. In this case, check the following table.



First three characters of the service number	Cause and/or corrective action
C 13	The disc is dirty or recorded in a format that this player cannot play (page 6). ➡ Clean the disc with a cleaning cloth or check its format (page 2).
C 31	The disc is not inserted correctly. ➡ Re-insert the disc correctly.
E XX (xx is a number)	To prevent a malfunction, the player has performed the self-diagnosis function. ➡ Contact your nearest Sony dealer or local authorized Sony service facility and give the 5-character service number. Example: E 61 10

Glossary

Album (page 48, 54)

A unit in which to store DivX video files, JPEG image files or MP3 audio tracks on a DATA CD/DATA DVD. ("Album" is an exclusive definition for this player.)

Chapter (page 9)

Sections of a picture or a music feature that are smaller than titles. A title is composed of several chapters. Depending on the disc, no chapters may be recorded.

DivX® (page 53)

Digital video technology created by DivX, Inc. Videos encoded with DivX technology are among the highest quality with a relatively small file size.

Dolby Digital (page 19, 67)

Digital audio compression technology developed by Dolby Laboratories. This technology conforms to multi-channel surround sound. The rear channel is stereo and there is a discrete subwoofer channel in this format. Dolby Digital provides the same discrete channels of high quality digital audio found in "Dolby Digital" theatre surround sound systems. Good channel separation is realized because all of the channel data is recorded discretely and little deterioration is realized because all channel data processing is digital.

DTS (page 19, 67)

Digital audio compression technology that Digital Theater Systems, Inc. developed. This technology conforms to multi-channel surround sound. The rear channel is stereo and there is a discrete subwoofer channel in this format. DTS provides the same discrete channels of high quality digital audio. Good channel separation is realized because all of the channel data is recorded discretely and little deterioration is realized because all channel data processing is digital.

DVD VIDEO (page 5)

A disc that contains up to 8 hours of moving pictures even though its diameter is the same as a CD.

The data capacity of a single-layer and single-sided DVD is 4.7 GB (Giga Byte), which is 7 times that of a CD. The data capacity of a double-layer and single-sided DVD is 8.5 GB, a single-layer and double-sided DVD is 9.4 GB, and double-layer and double-sided DVD is 17 GB.

The picture data uses the MPEG 2 format, a worldwide standard of digital compression technology. The picture data is compressed to about 1/40 (average) of its original size. The DVD also uses a variable rate coding technology that changes the data to be allocated according to the status of the picture. Audio information is recorded in a multi-channel format, such as Dolby Digital, allowing you to enjoy a more realistic audio presence.

Furthermore, various advanced functions such as the multi-angle, multilingual, and Parental Control functions are provided with the DVD.

DVD-RW (page 5)

A DVD-RW is a recordable and rewritable disc that is the same size as a DVD VIDEO. The DVD-RW has two different modes: VR mode and Video mode. DVD-RWs created in Video mode have the same format as a DVD VIDEO, while discs created in VR (Video Recording) mode allow the contents to be programmed or edited.

DVD+RW (page 5)

A DVD+RW (plus RW) is a recordable and rewritable disc. DVD+RWs use a recording format that is comparable to the DVD VIDEO format.

File (page 47, 53)

A JPEG image or DivX video recorded on a DATA CD/DATA DVD ("File" is an exclusive definition for this player.) A single file consists of a single image or movie.

Film based software, Video based software (page 17)

DVDs can be classified as Film based or Video based software. Film based DVDs contain the same images (24 frames per second) that are shown at movie theatres. Video based DVDs, such as television dramas or sit-coms, displays images at 30 frames/60 fields (25 frames/50 fields) per second.

MPEG audio (page 19, 67)

International standard coding system used to compress audio digital signals authorized by ISO/IEC. MPEG 1 conforms to up to 2-channel stereo. MPEG 2, used on DVDs, conforms to up to 7.1-channel surround.

Normal (Interlace) format (page 17)

Normal (Interlace) format shows every other line of an image as a single "field" and is the standard method for displaying images on television. The even number field shows the even numbered lines of an image, and the odd numbered field shows the odd numbered lines of an image.

Progressive format (page 17)

Compared to the Interlace format that alternately shows every other line of an image (field) to create one frame, the Progressive format shows the entire image at once as a single frame. This means that while the Interlace format can show 25 or 30 frames (50-60 fields) in one second, the Progressive format can show 50-60 frames in one second. The overall picture quality increases and still images, text, and horizontal lines appear sharper. This player is compatible with the 525 or 625 progressive format.

Progressive JPEG

Progressive JPEGs are used mostly on the internet. They are different from other JPEGs in that they "fade in" gradually instead of being drawn from top to bottom when displayed on a browser. This lets you view the image while it is being downloaded.

Title (page 9)

The longest section of a picture or music feature on a DVD, movie, etc., in video software, or the entire album in audio software.

Additional Information

→ continued 71

72

Specifications

System

Laser: Semiconductor laser
Signal format system: PAL/NTSC (See page 16 to switch)

Audio characteristics

Frequency response: DVD VIDEO (PCM 96 kHz): 2 Hz to 44 kHz (±1.0 dB)/DVD VIDEO (PCM 48 kHz): 2 Hz to 22 kHz (±0.5 dB)/CD: 2 Hz to 20 kHz (±0.5 dB)

Signal-to-noise ratio (S/N ratio): 115 dB (LINE OUT L/R (AUDIO) jacks only)

Harmonic distortion: 0.003 %

Dynamic range: DVD VIDEO: 103 dB/CD: 99 dB

Wow and flutter: Less than detected value (±0.001% W PEAK)

Outputs

(Jack name: Jack type/Output level/Load impedance)

LINE OUT (AUDIO): Phono jack/2 Vrms/10 kilohms

DIGITAL OUT (OPTICAL): Optical output jack/-18 dBm (wave length 660 nm)

DIGITAL OUT (COAXIAL): Phono jack/0.5 Vp-p/75 ohms

COMPONENT VIDEO OUT (Y, Pb/Cb, Pr/Cr): Phono jack/Y: 1.0 Vp-p, Pb/Cb, Pr/Cr: 0.7 Vp-p/75 ohms

LINE OUT (VIDEO): Phono jack/1.0 Vp-p/75 ohms

S VIDEO OUT: 4-pin mini DIN/Y: 1.0 Vp-p, C: 0.3 Vp-p (PAL), 0.286 Vp-p (NTSC)/75 ohms

General

Power requirements:

Taiwan model: 110 V AC, 60 Hz
Models for other areas: 110 – 240 V AC, 50/60 Hz
See page 2 for further information.

Power consumption: 9 W

Dimensions (approx.):

430 × 43 × 208 mm (width/height/depth) incl. projecting parts

Mass (approx.): 1.72 kg

Operating temperature: 5 °C to 35 °C

Operating humidity: 25 % to 80 %

Supplied accessories

See page 14.

Specifications and design are subject to change without notice.


ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® Partner, Sony Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Additional Information


SECTION 2 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.


2-1. UPPER CASE

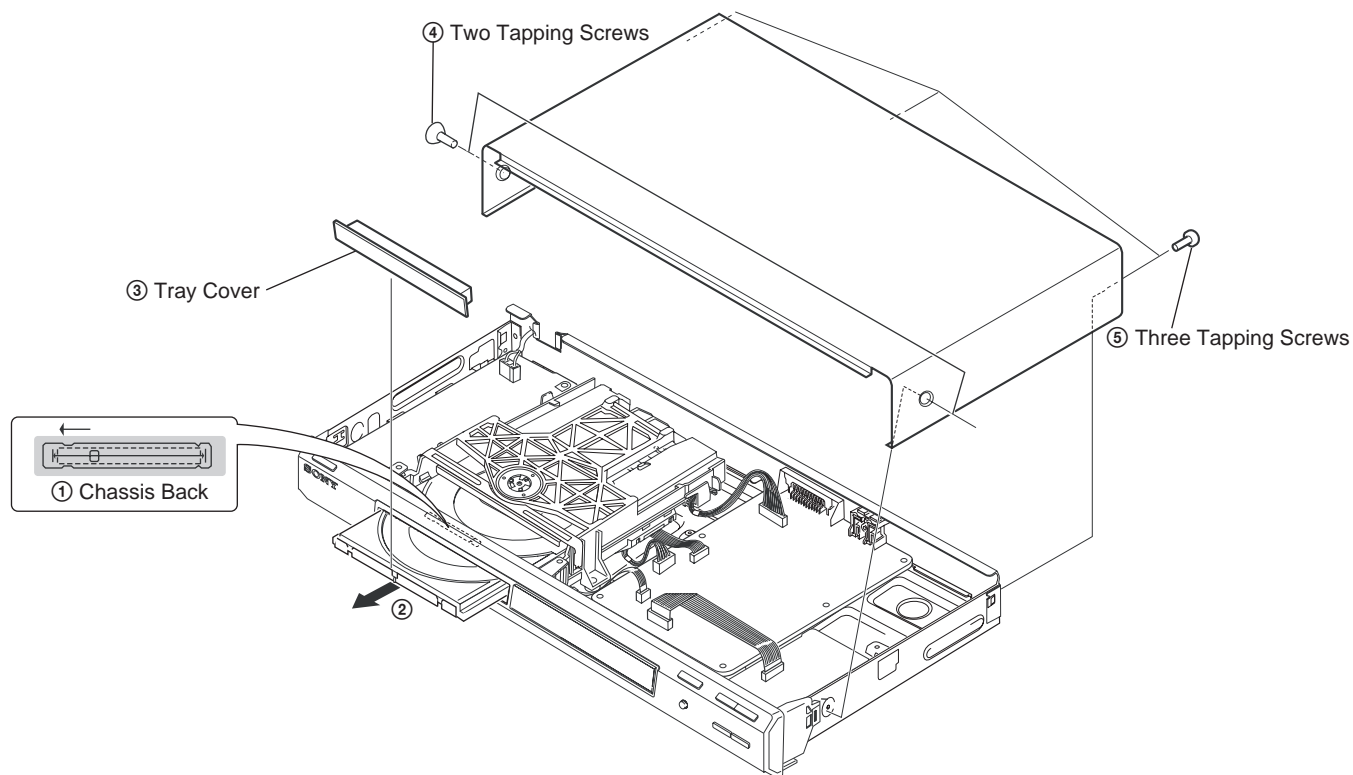


2-2. FRONT PANEL ASSEMBLY

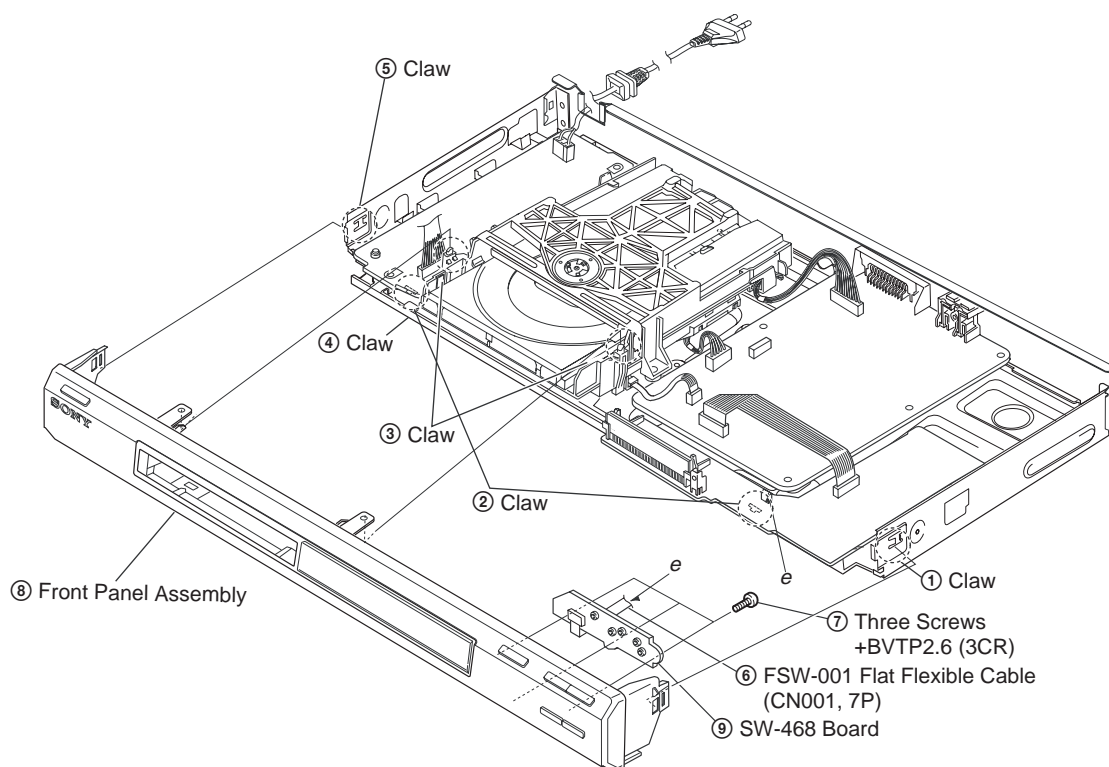

2-3. LOADING ASSEMBLY


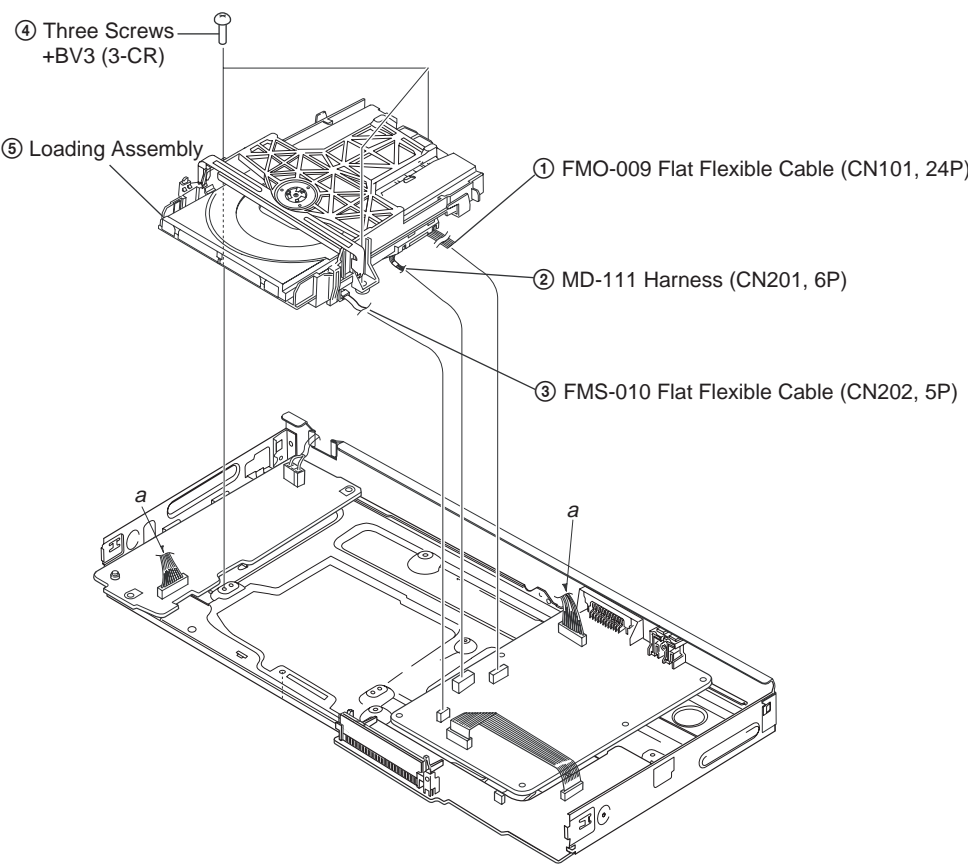


2-4. OPTICAL PICK-UP (DEVICE, OPTICAL KHM-313CAA/C2RP)

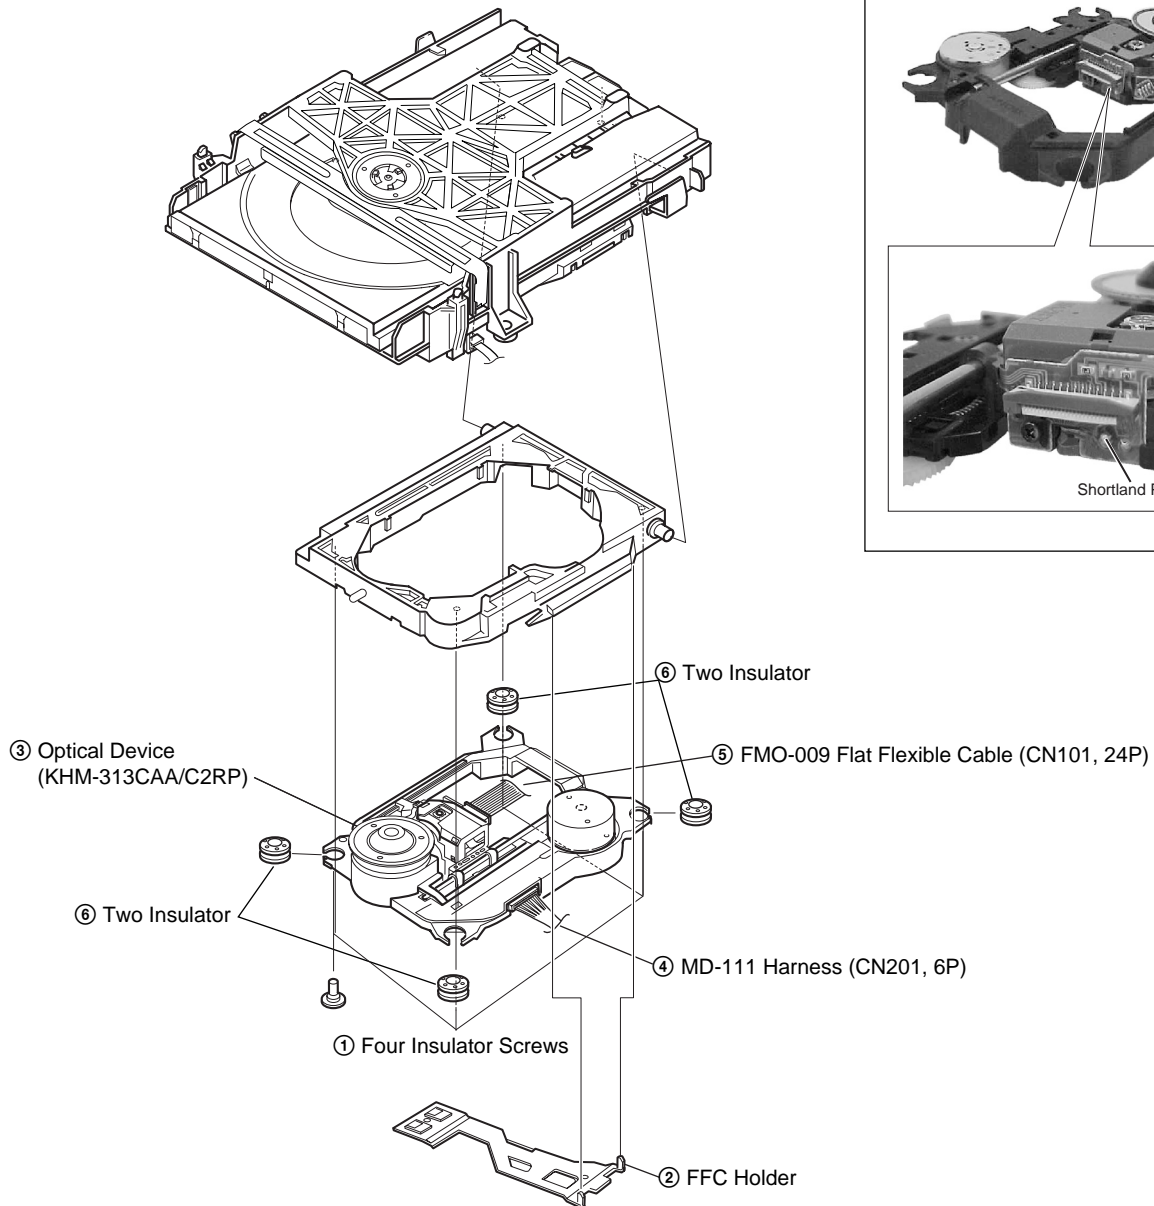

Note:


Solder shortland before remove the FMO-009 Flat Flexible Cable from 24 pin BU connector.

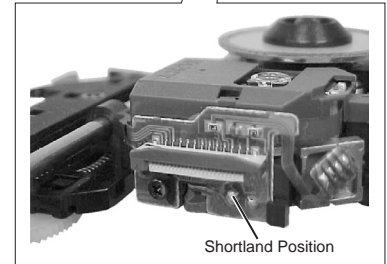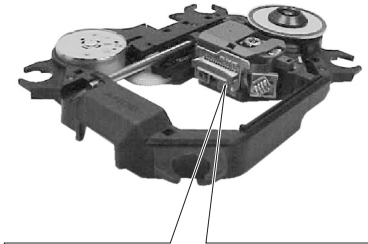

Caution Point on the Laser Diode:


Laser Diode in the optical Device is very sensitive to Surge Current or ElectroStatic Discharge (ESD):

After take-out FMO-009 Flat Flexible Cable from CN101 of MV-50/MV-51 board immediately ground FMO-009 Flat Flexible Cable pattern using short clip. Metal paper clip can be used as short clip.

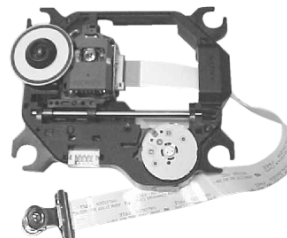


2-5. REAR PANEL, MV BOARD and IF BOARD
2-5-1. REAR PANEL, MV-51 and IF-144/IF-145 BOARDS
(DVP-NS45P/NS55P/NS61P/NS63P/NS36:RUS)


Note:
Caution Point on the PWB IF-144/IF-145
When handling IF-144/IF-145 PWB avoid contact with the sharp metal edge on the top side of Vacuum Fluorescent Display (ND401).

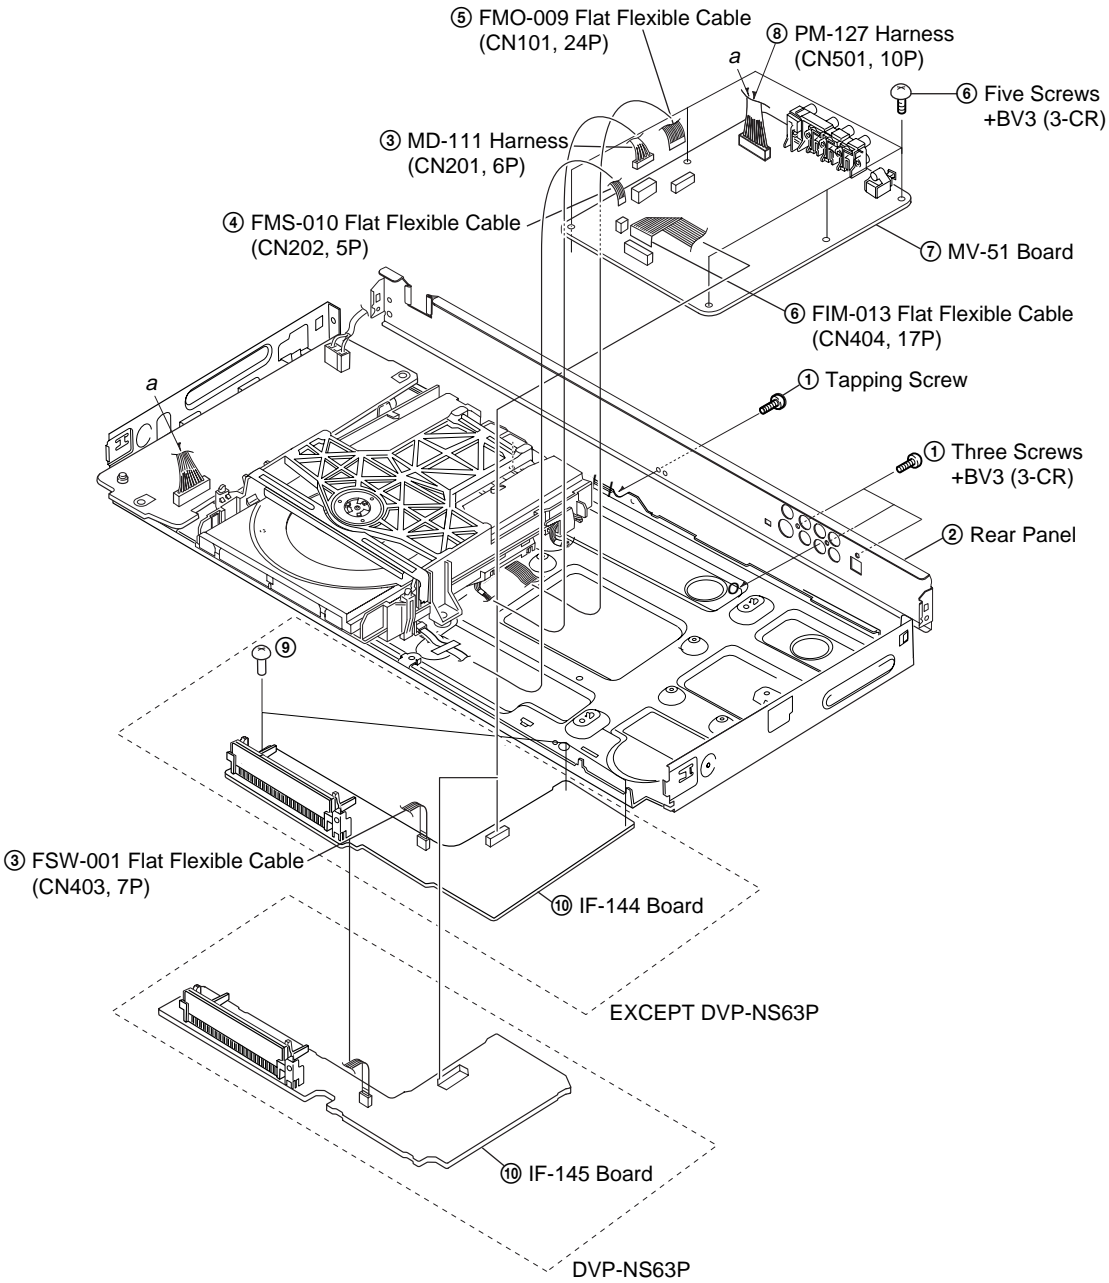


2-5-2. REAR PANEL, MV-50 and IF-144 BOARDS (DVP-NS36:AEP/NS37)

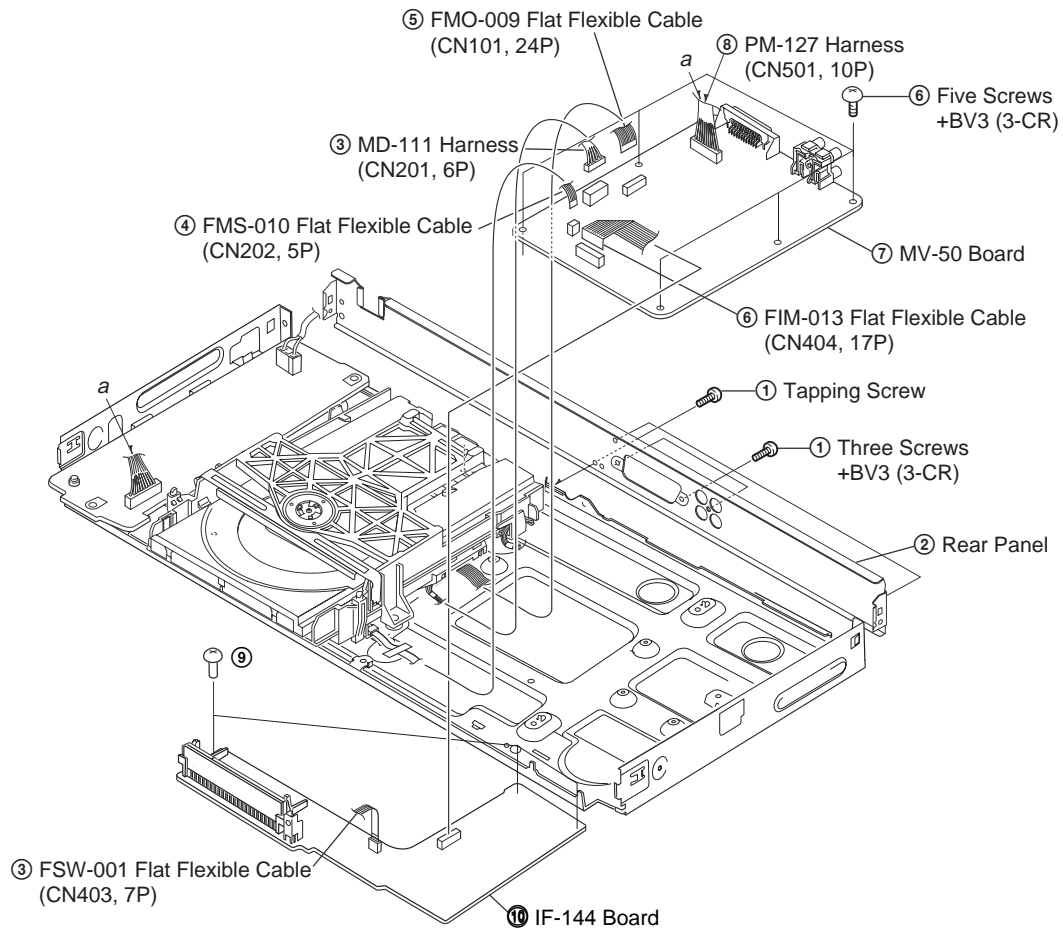


2-6. SWITCHING REGULATOR

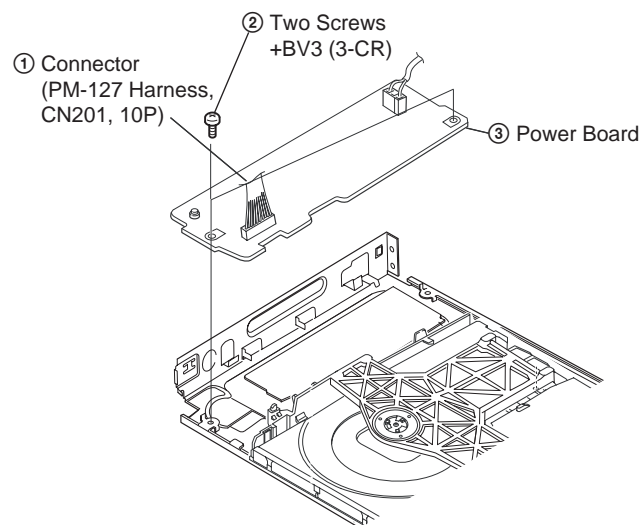

2-7. INTERNAL VIEWS

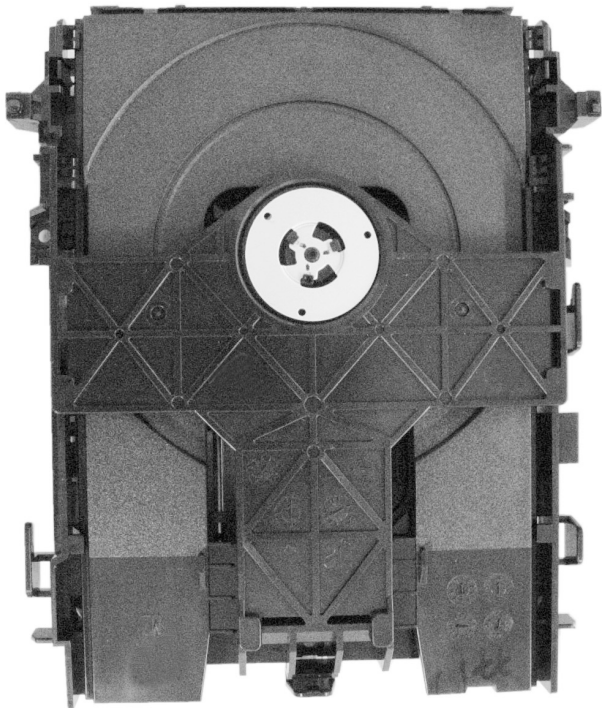


TOP VIEW

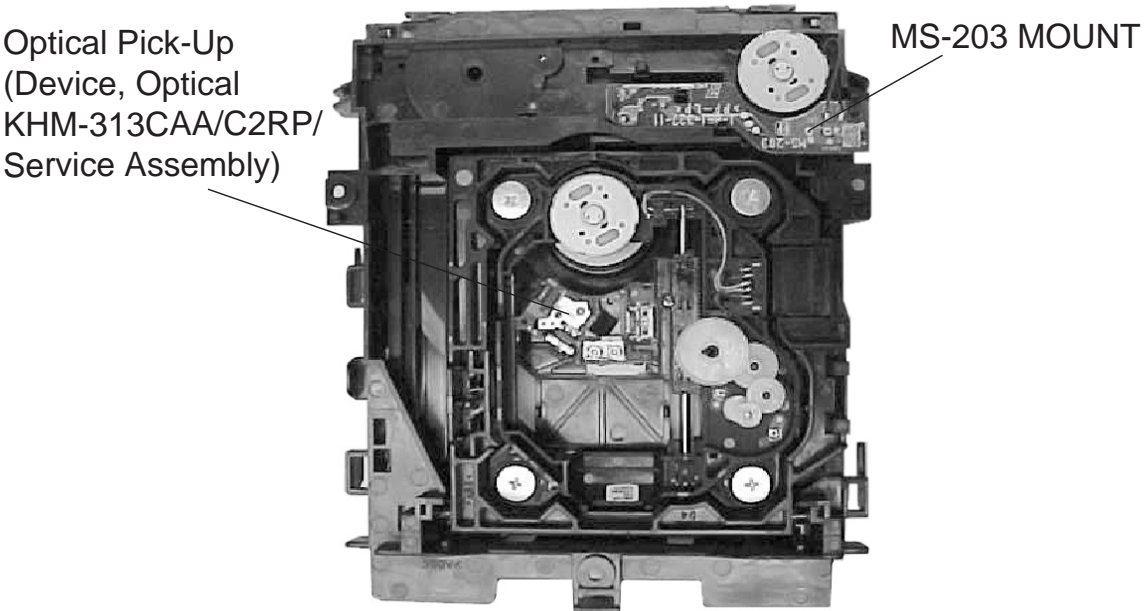

BOTTOM VIEW

2-8. CIRCUIT BOARDS LOCATION

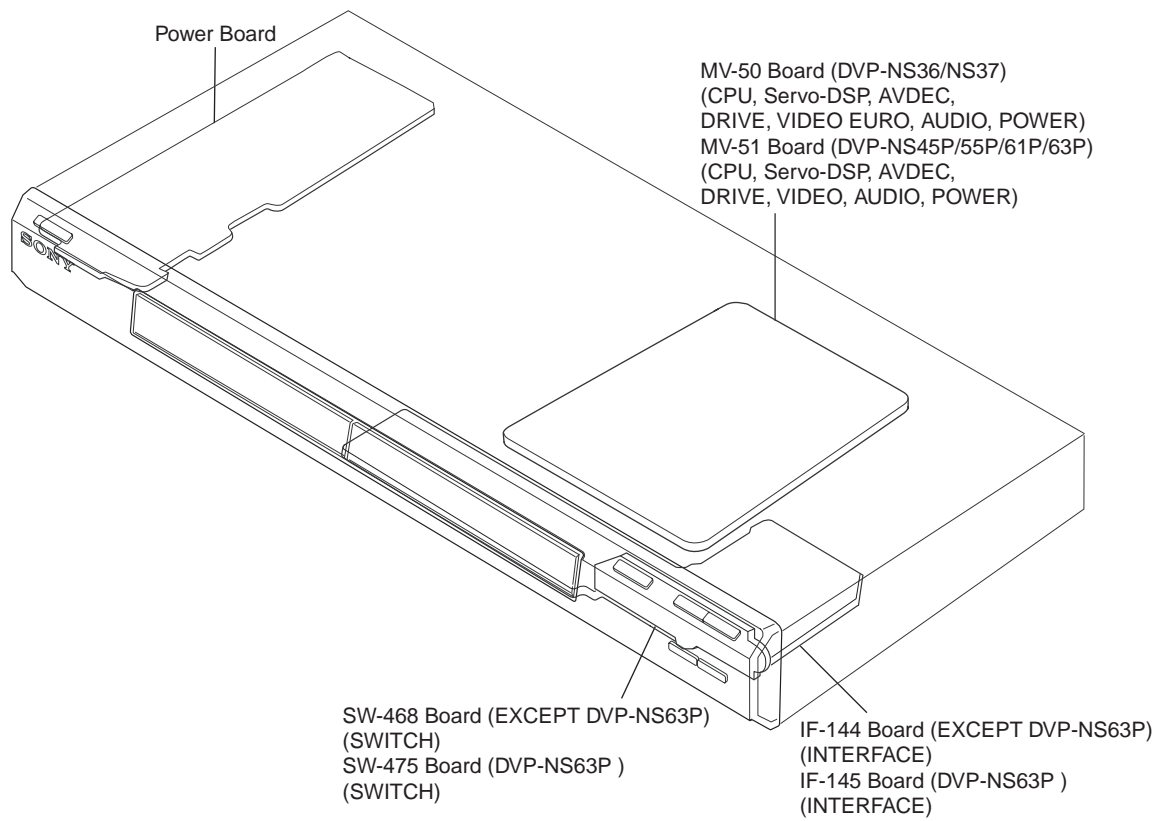


SECTION 3
BLOCK DIAGRAMS


3-1. OVERALL BLOCK DIAGRAM



- Abbreviation
AEP : AEP Model
RUS : Russian Model
UK : UK Model
CND : Canadian Model
US : USA Model
AR : Argentina Model
BR : Brazilian Model
E : Latin America Model
PX : PX Model
AUS : Australia/New Zealand Model
CH : Chinese Model
ME : Middle East
SP : Singapore Model

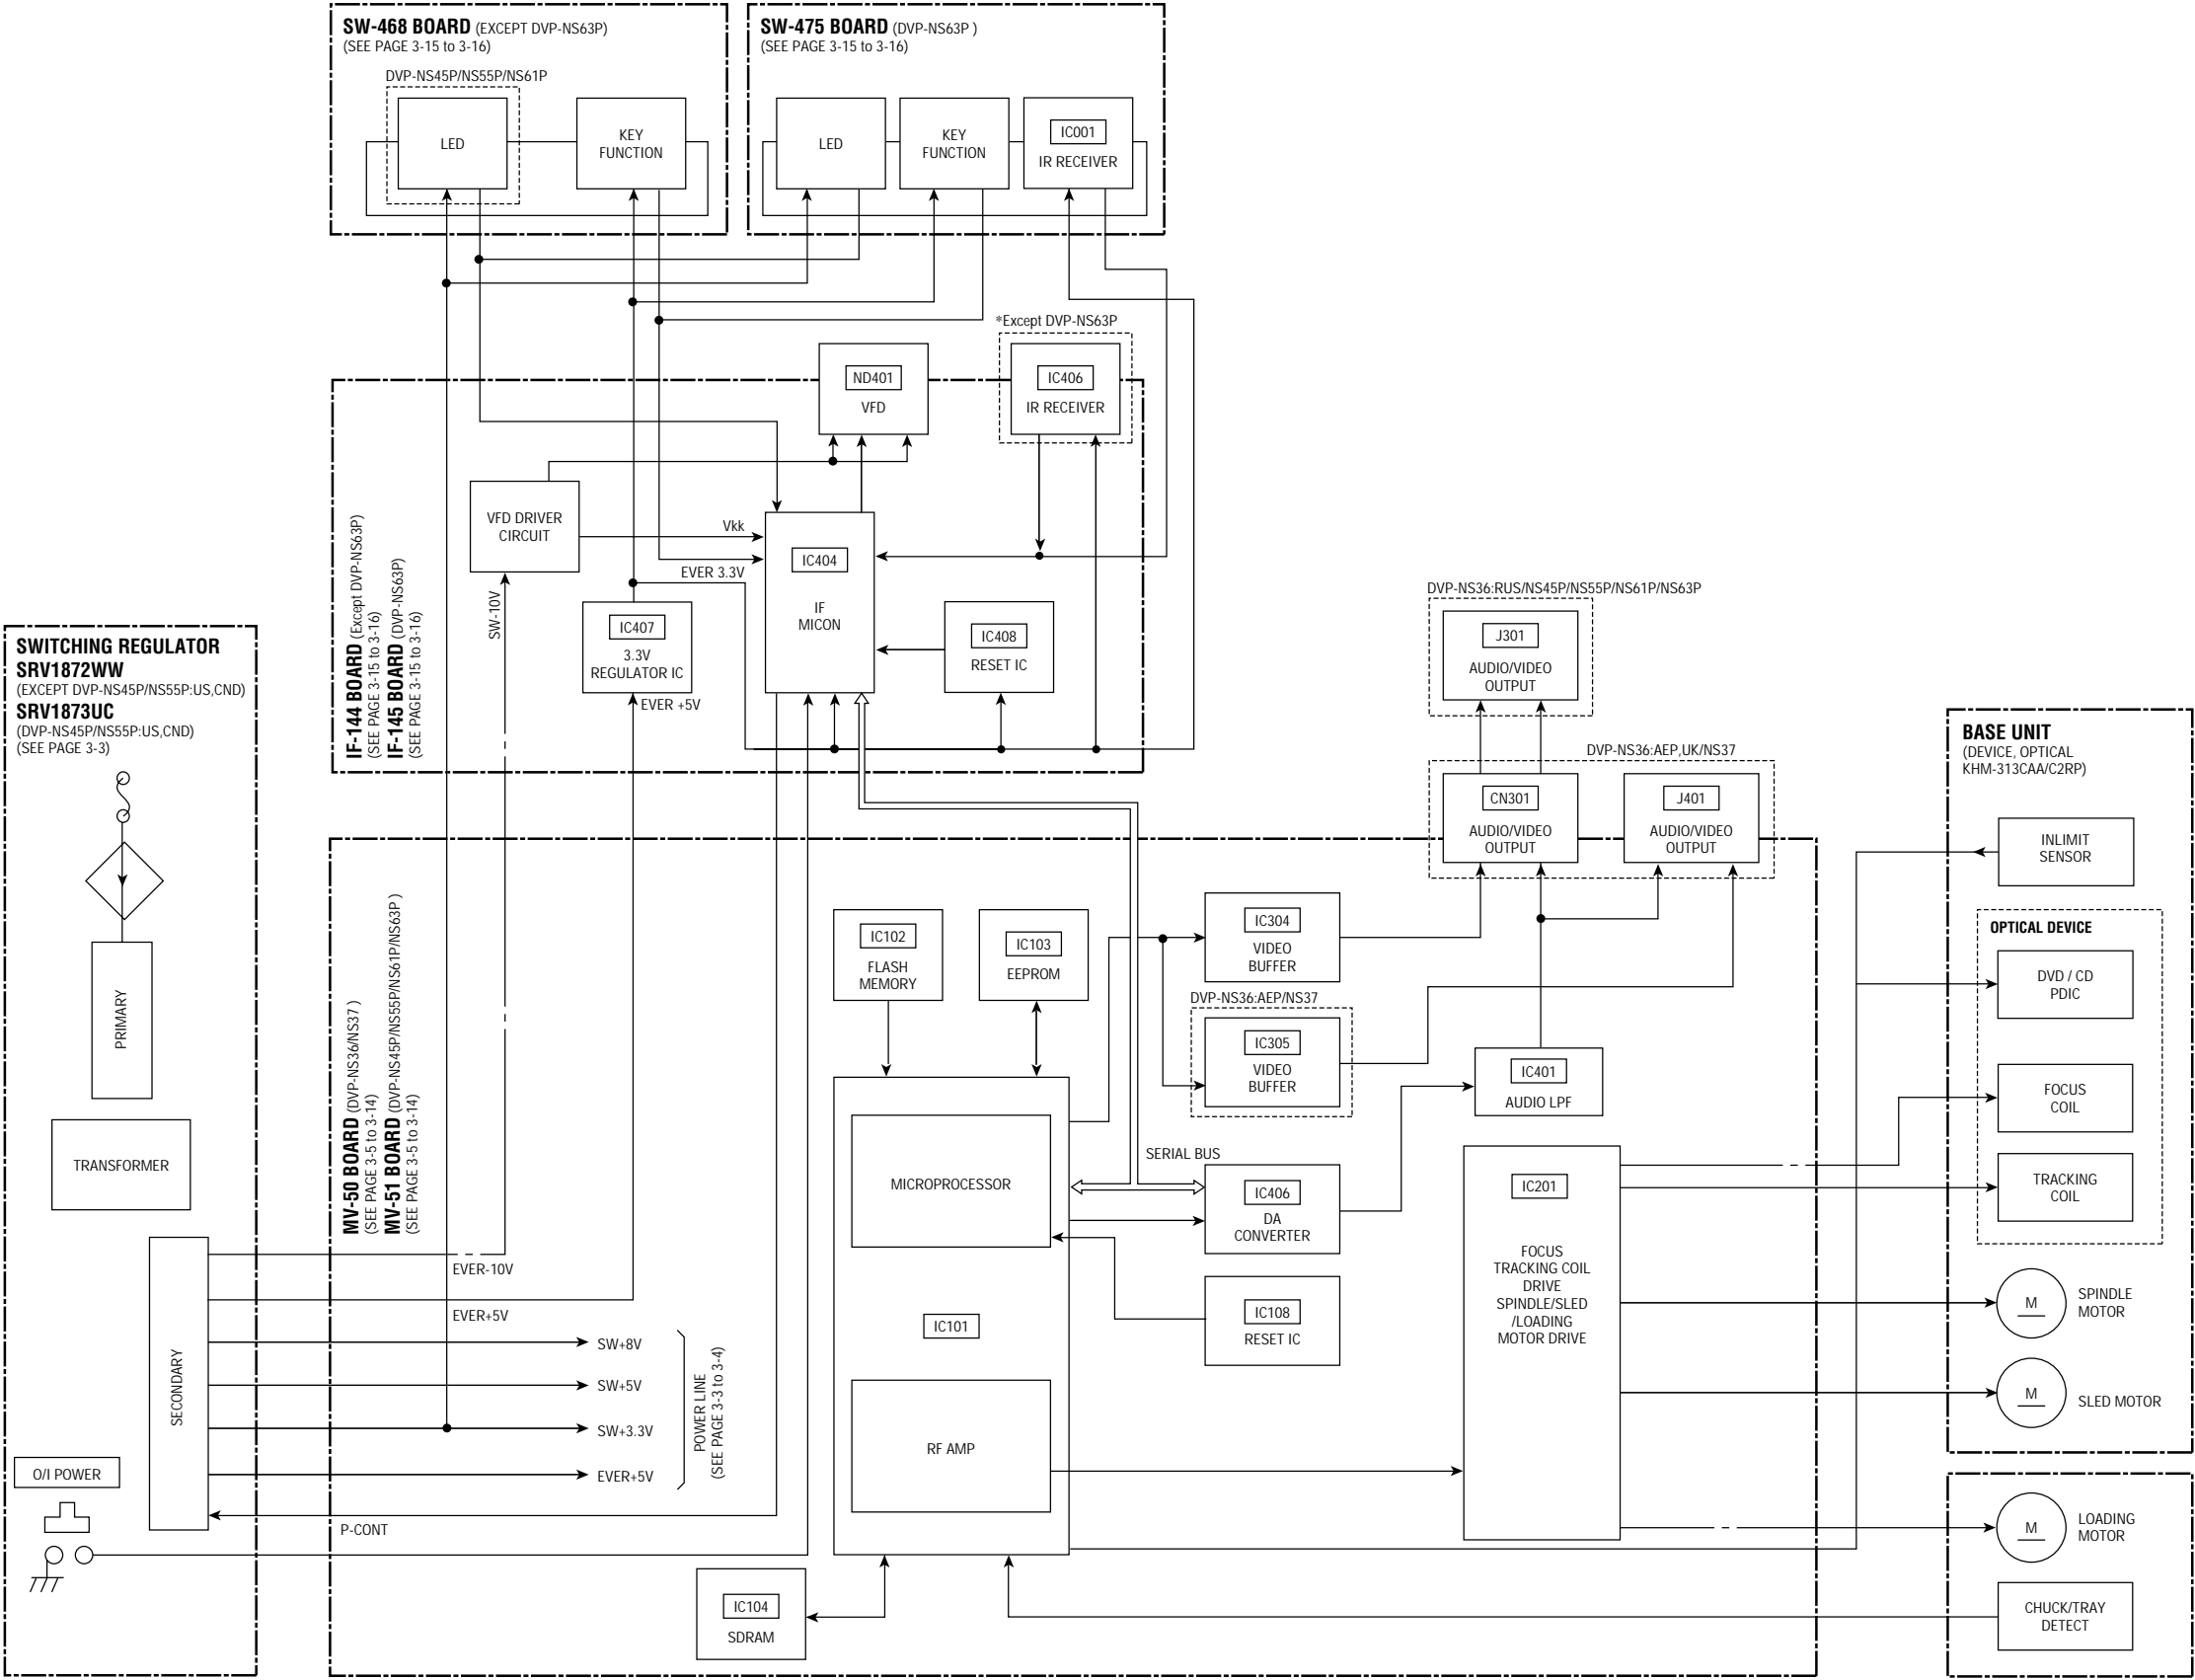Notes:
MV-50/MV-51 mounted PWB must be replaced if IC103 (EEPROM IC) is damaged or not functioning.
The old MV-50/MV-51 mounted PWB must be completely disposed.

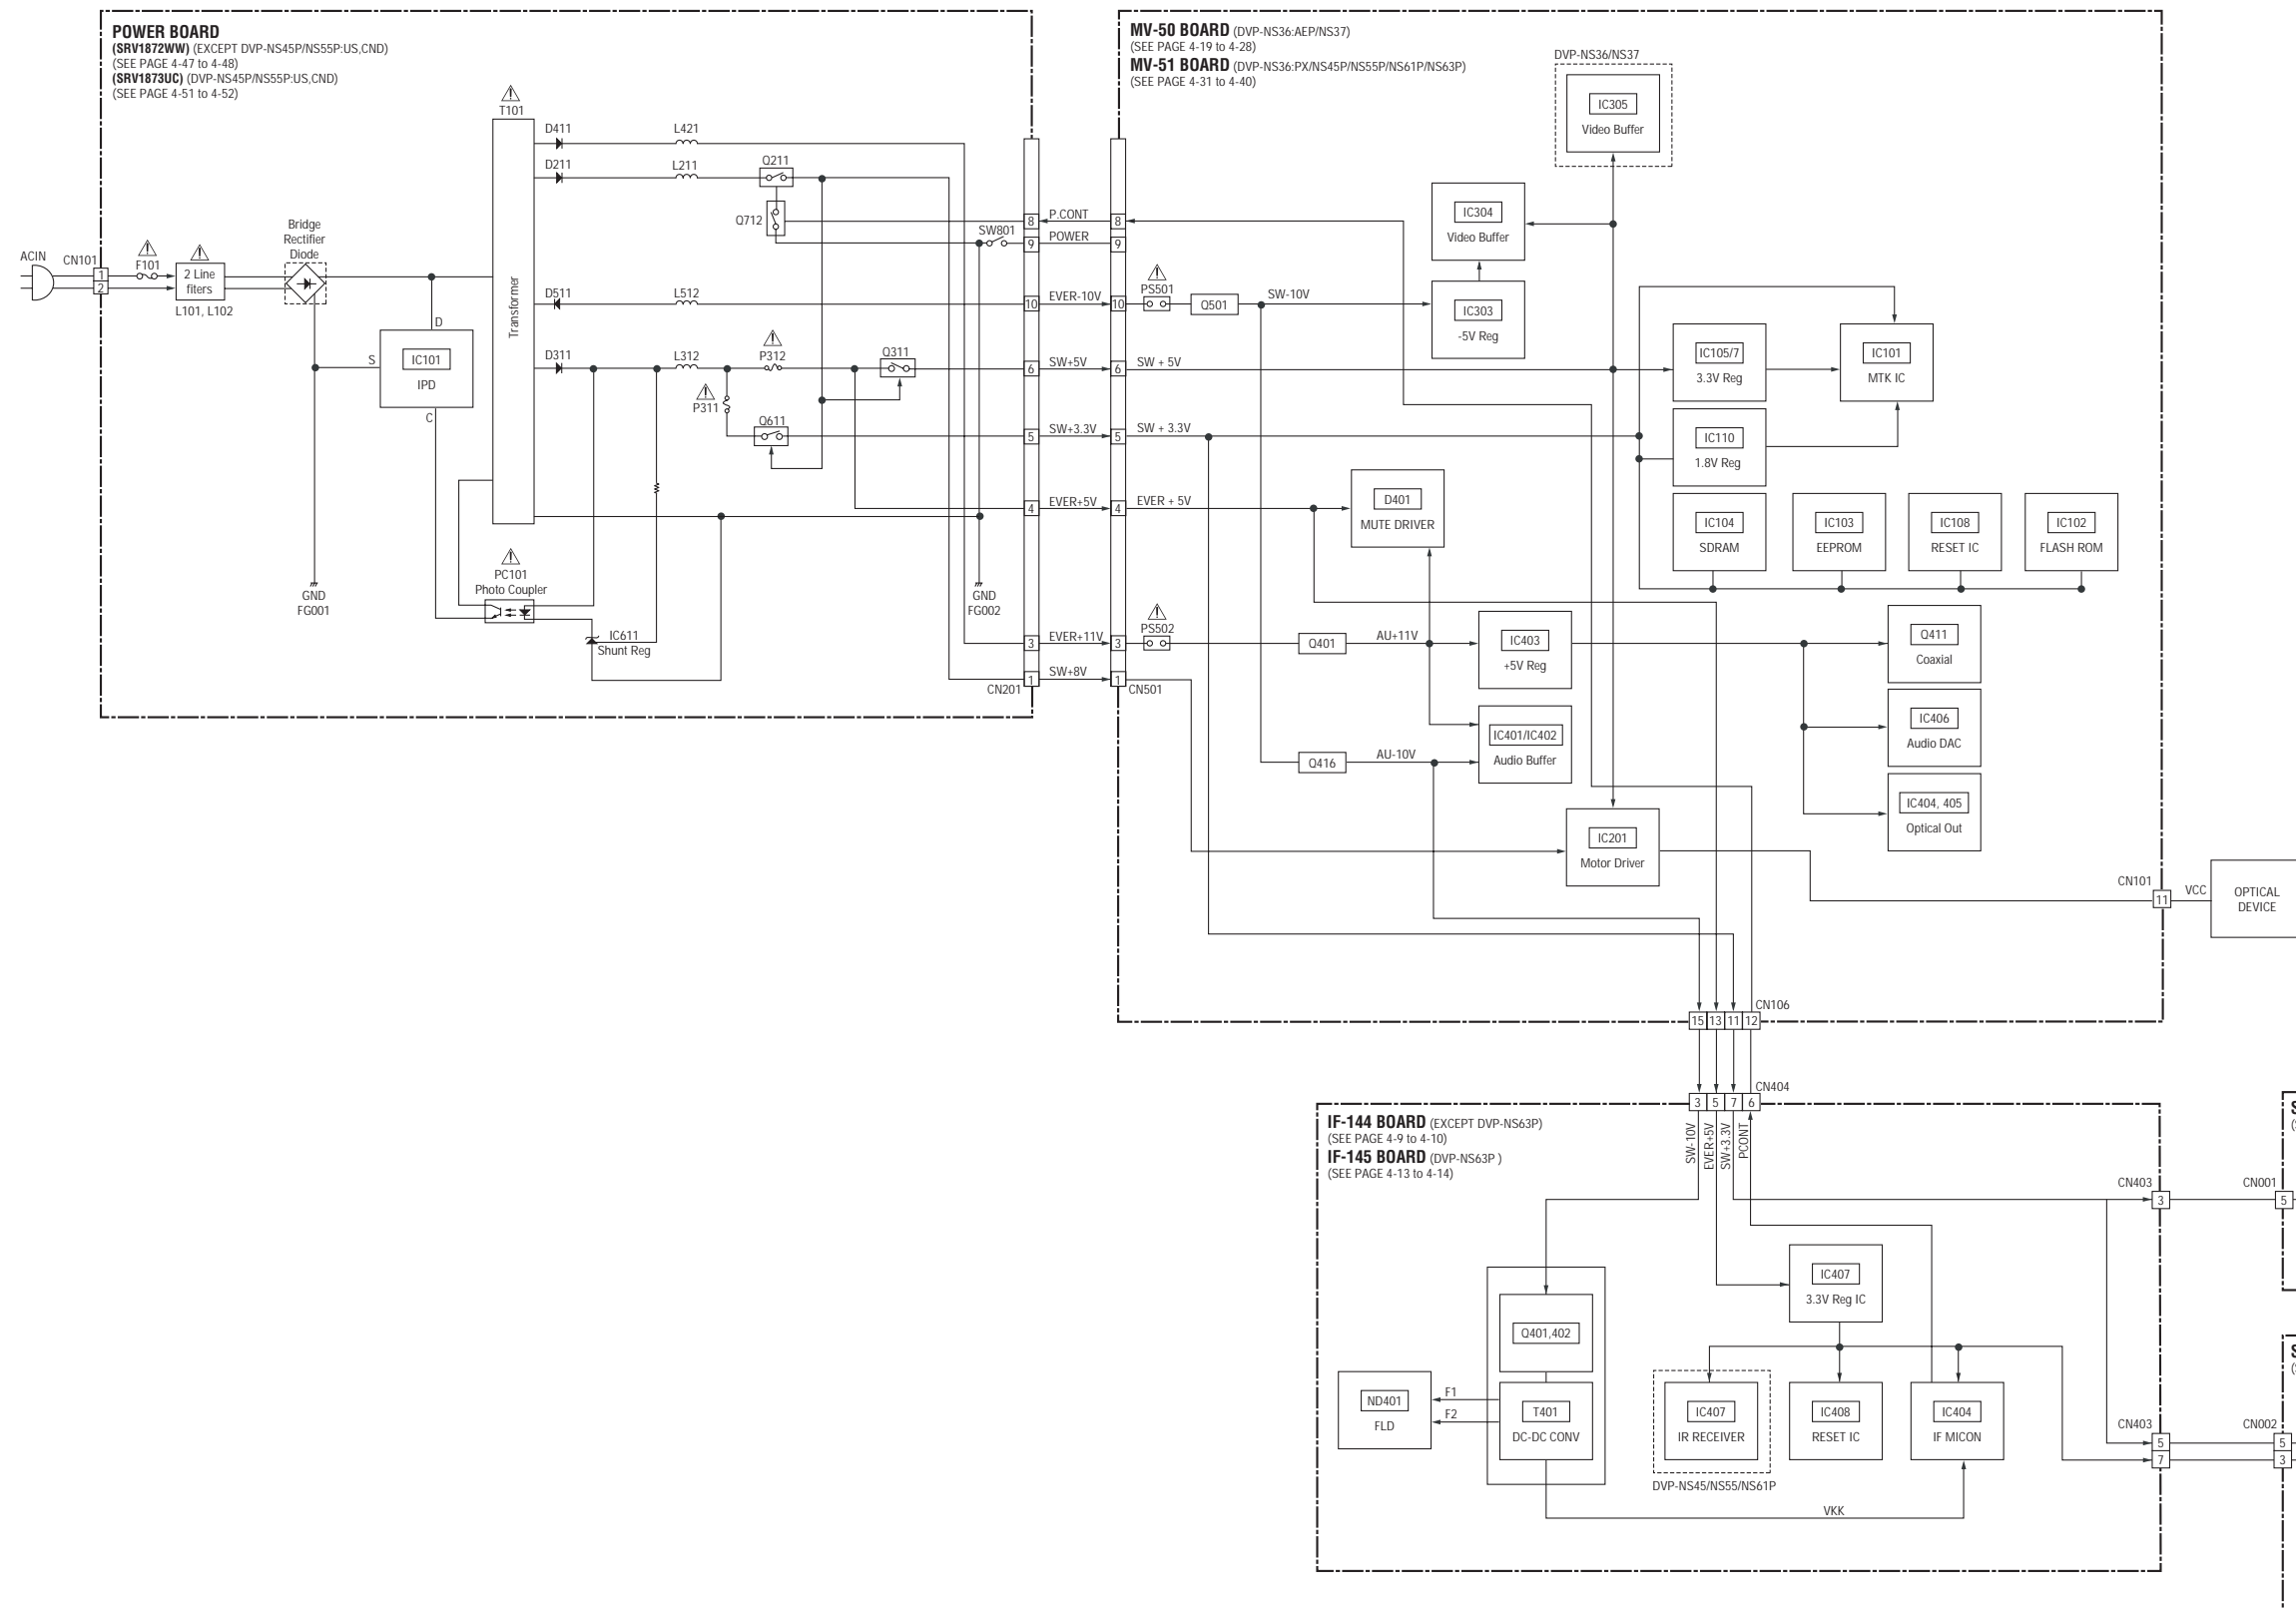


3-2. POWER LINE BLOCK DIAGRAM




The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.


3-3. SYSTEM CONTROL/SIGNAL PROCESSOR BLOCK DIAGRAM

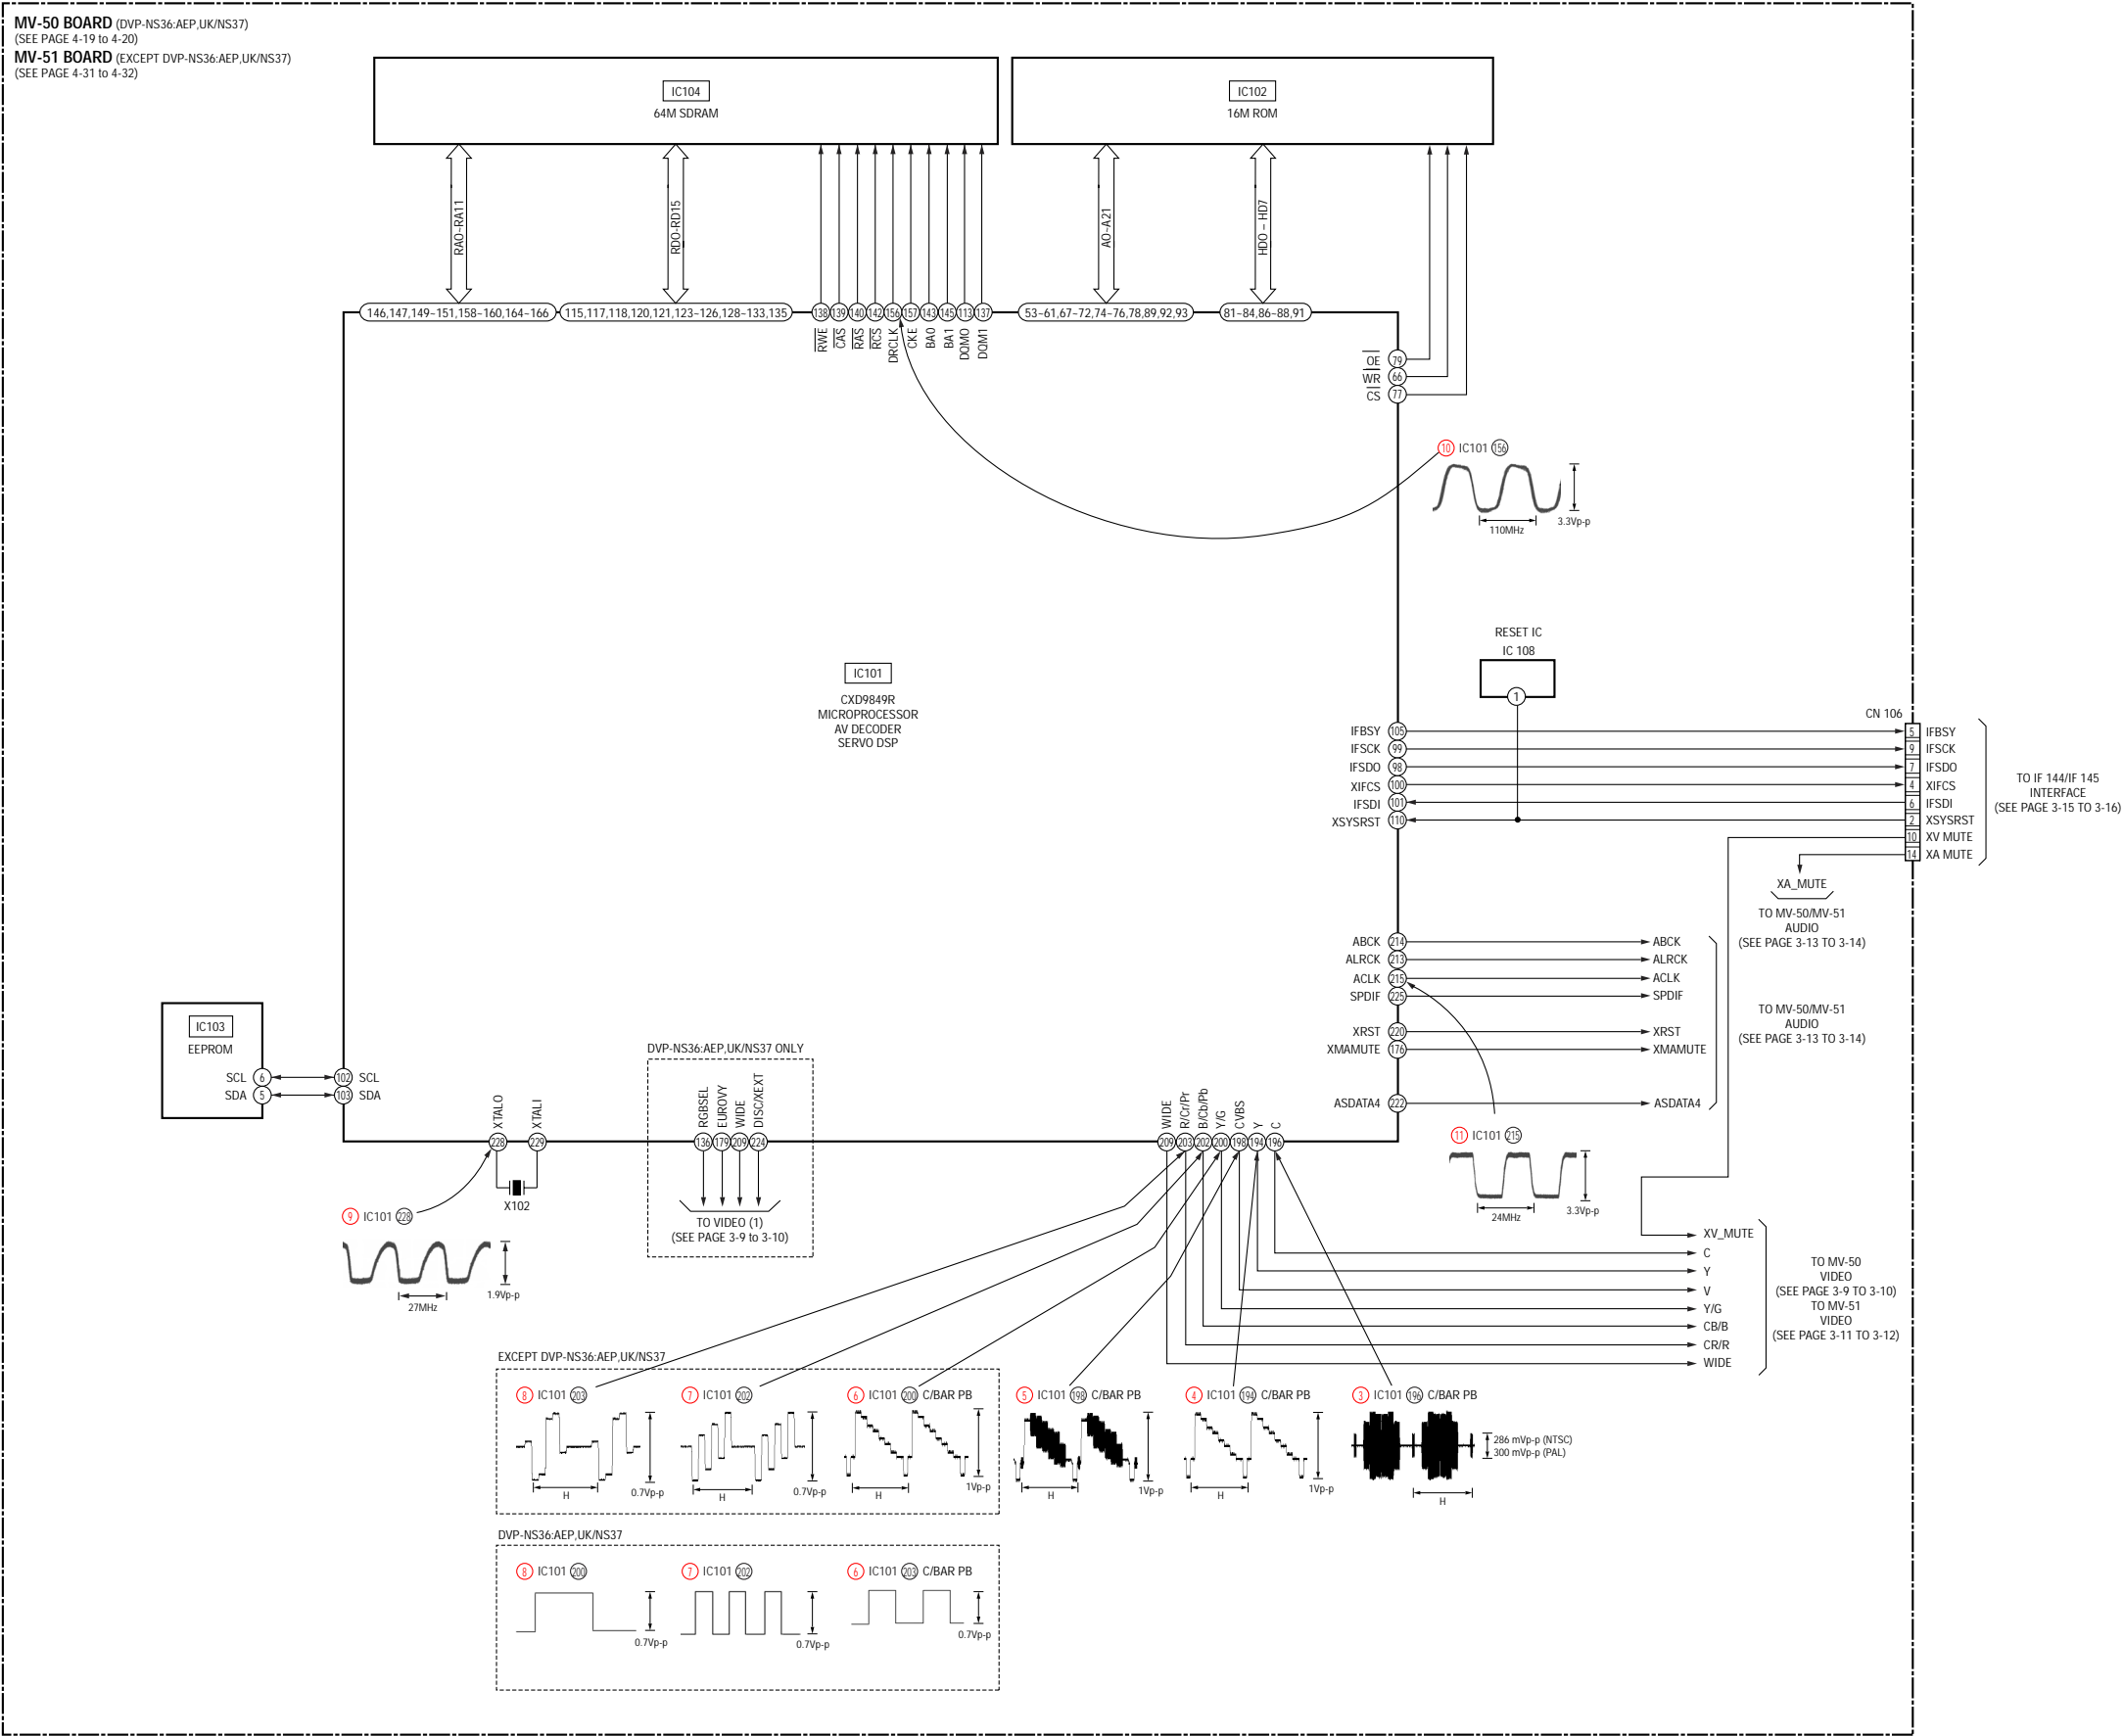


3-4. RF/SERVO BLOCK DIAGRAM

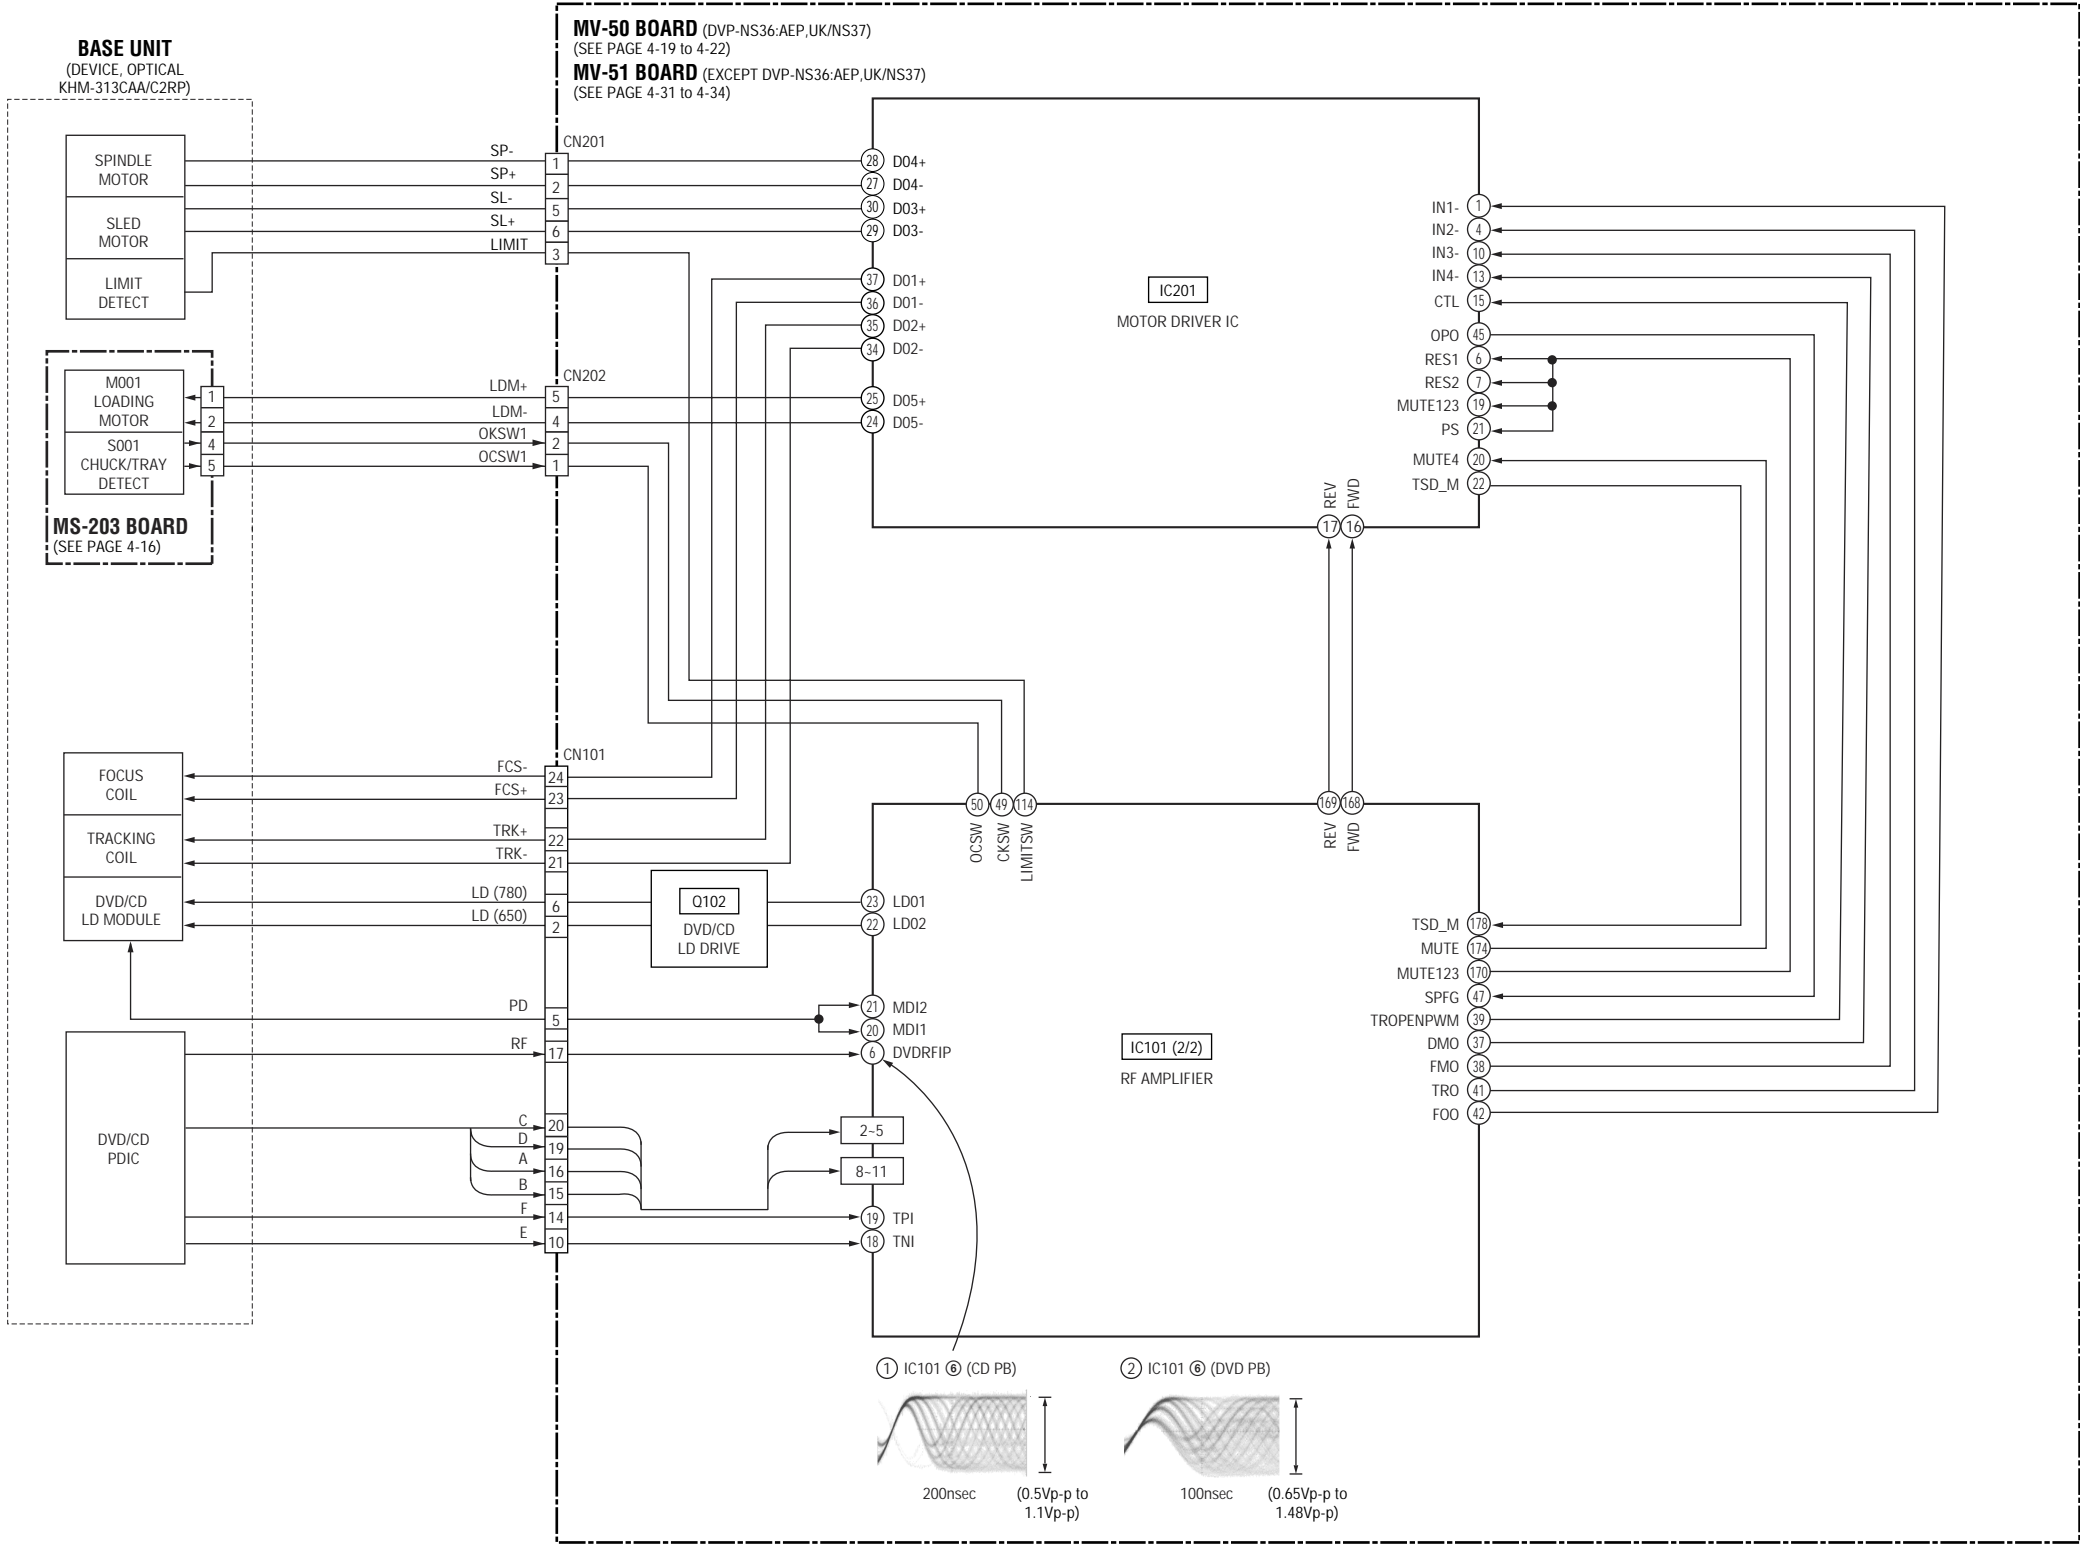


3-5. VIDEO (1) BLOCK DIAGRAM

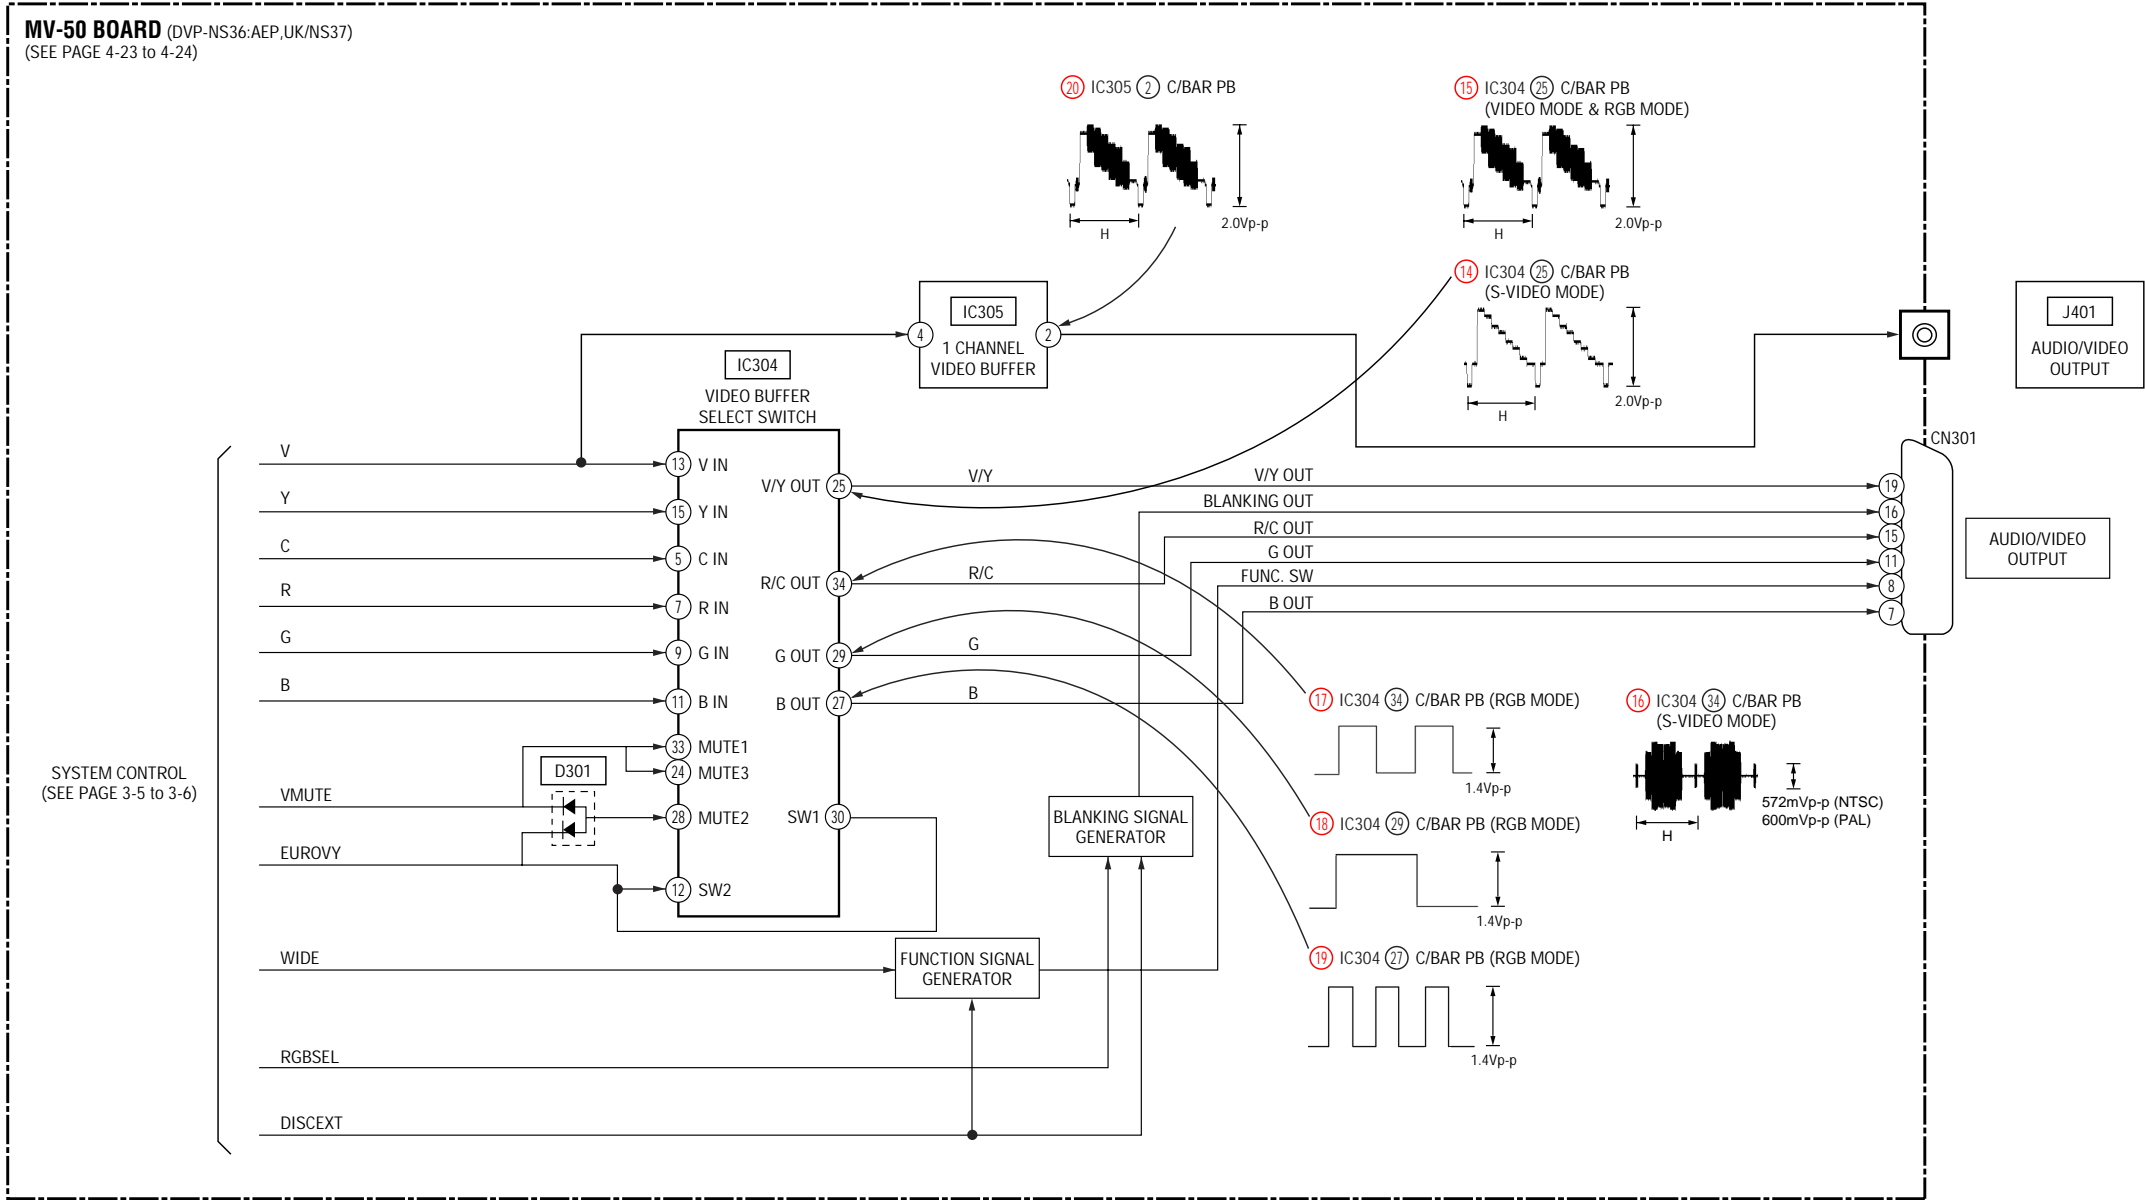


3-6. VIDEO (2) BLOCK DIAGRAM

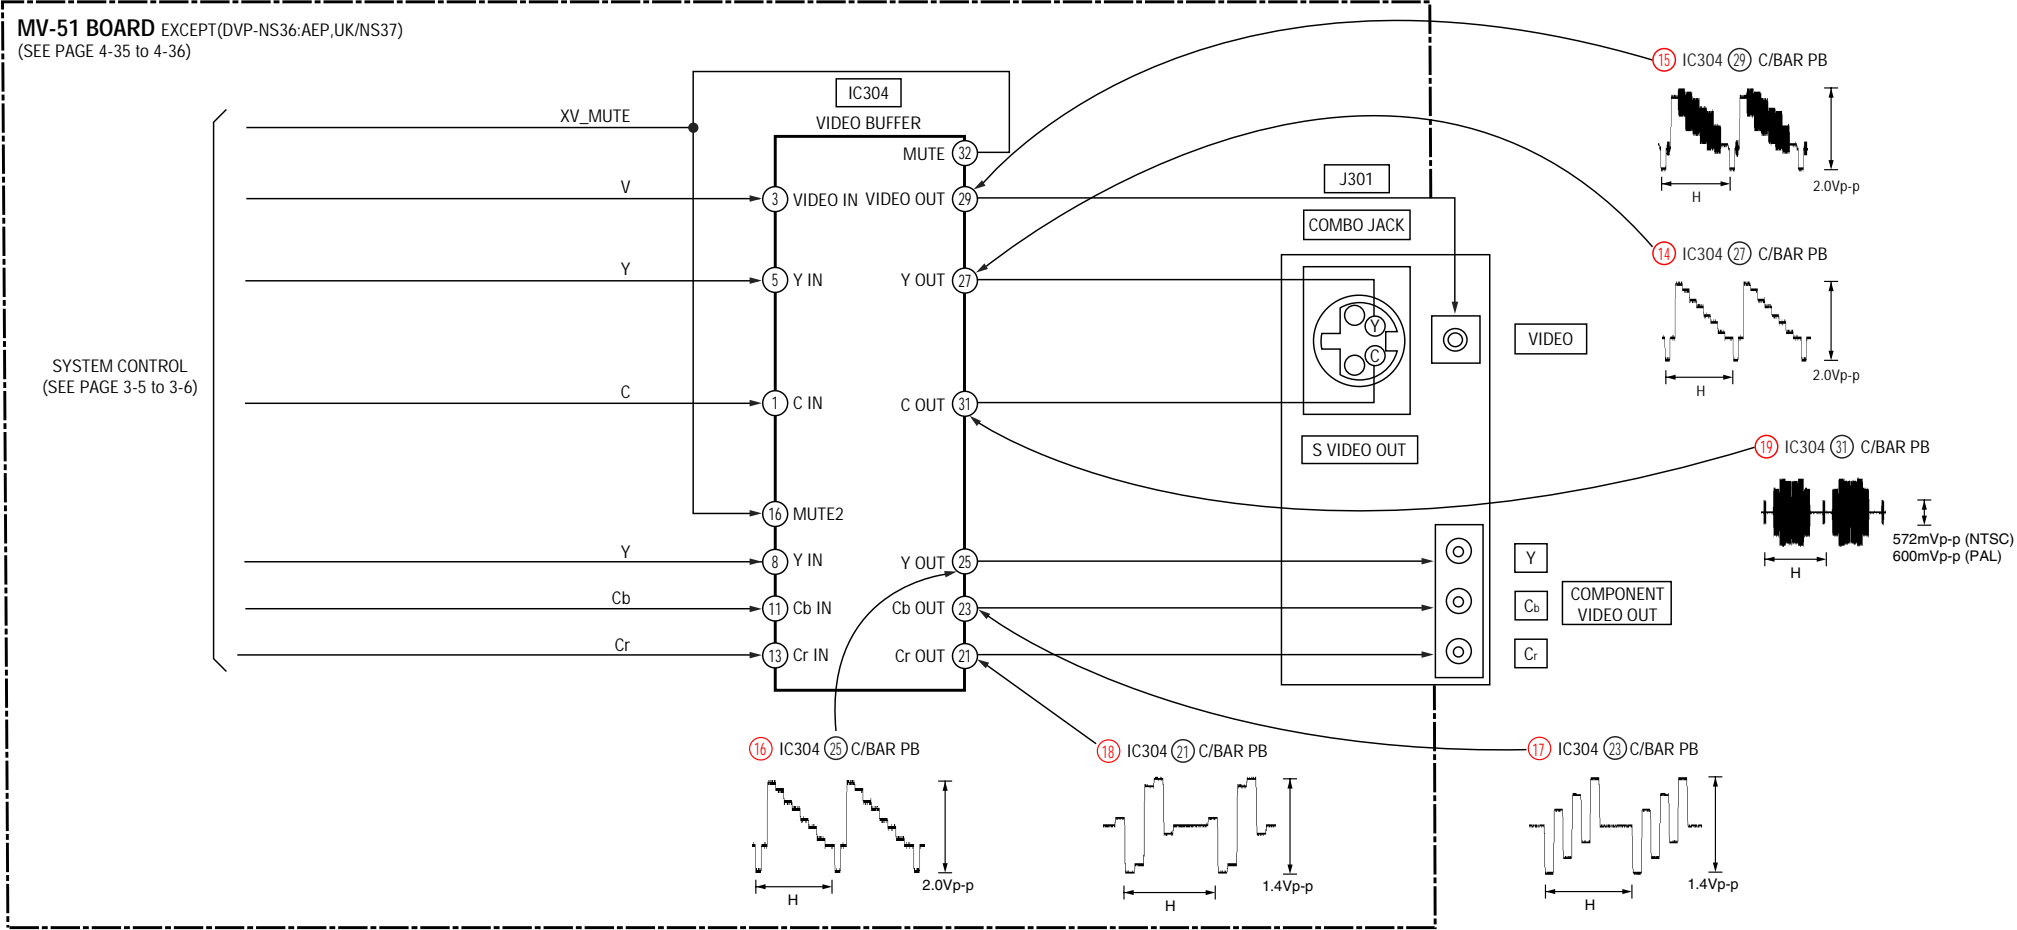

3-7. AUDIO BLOCK DIAGRAM

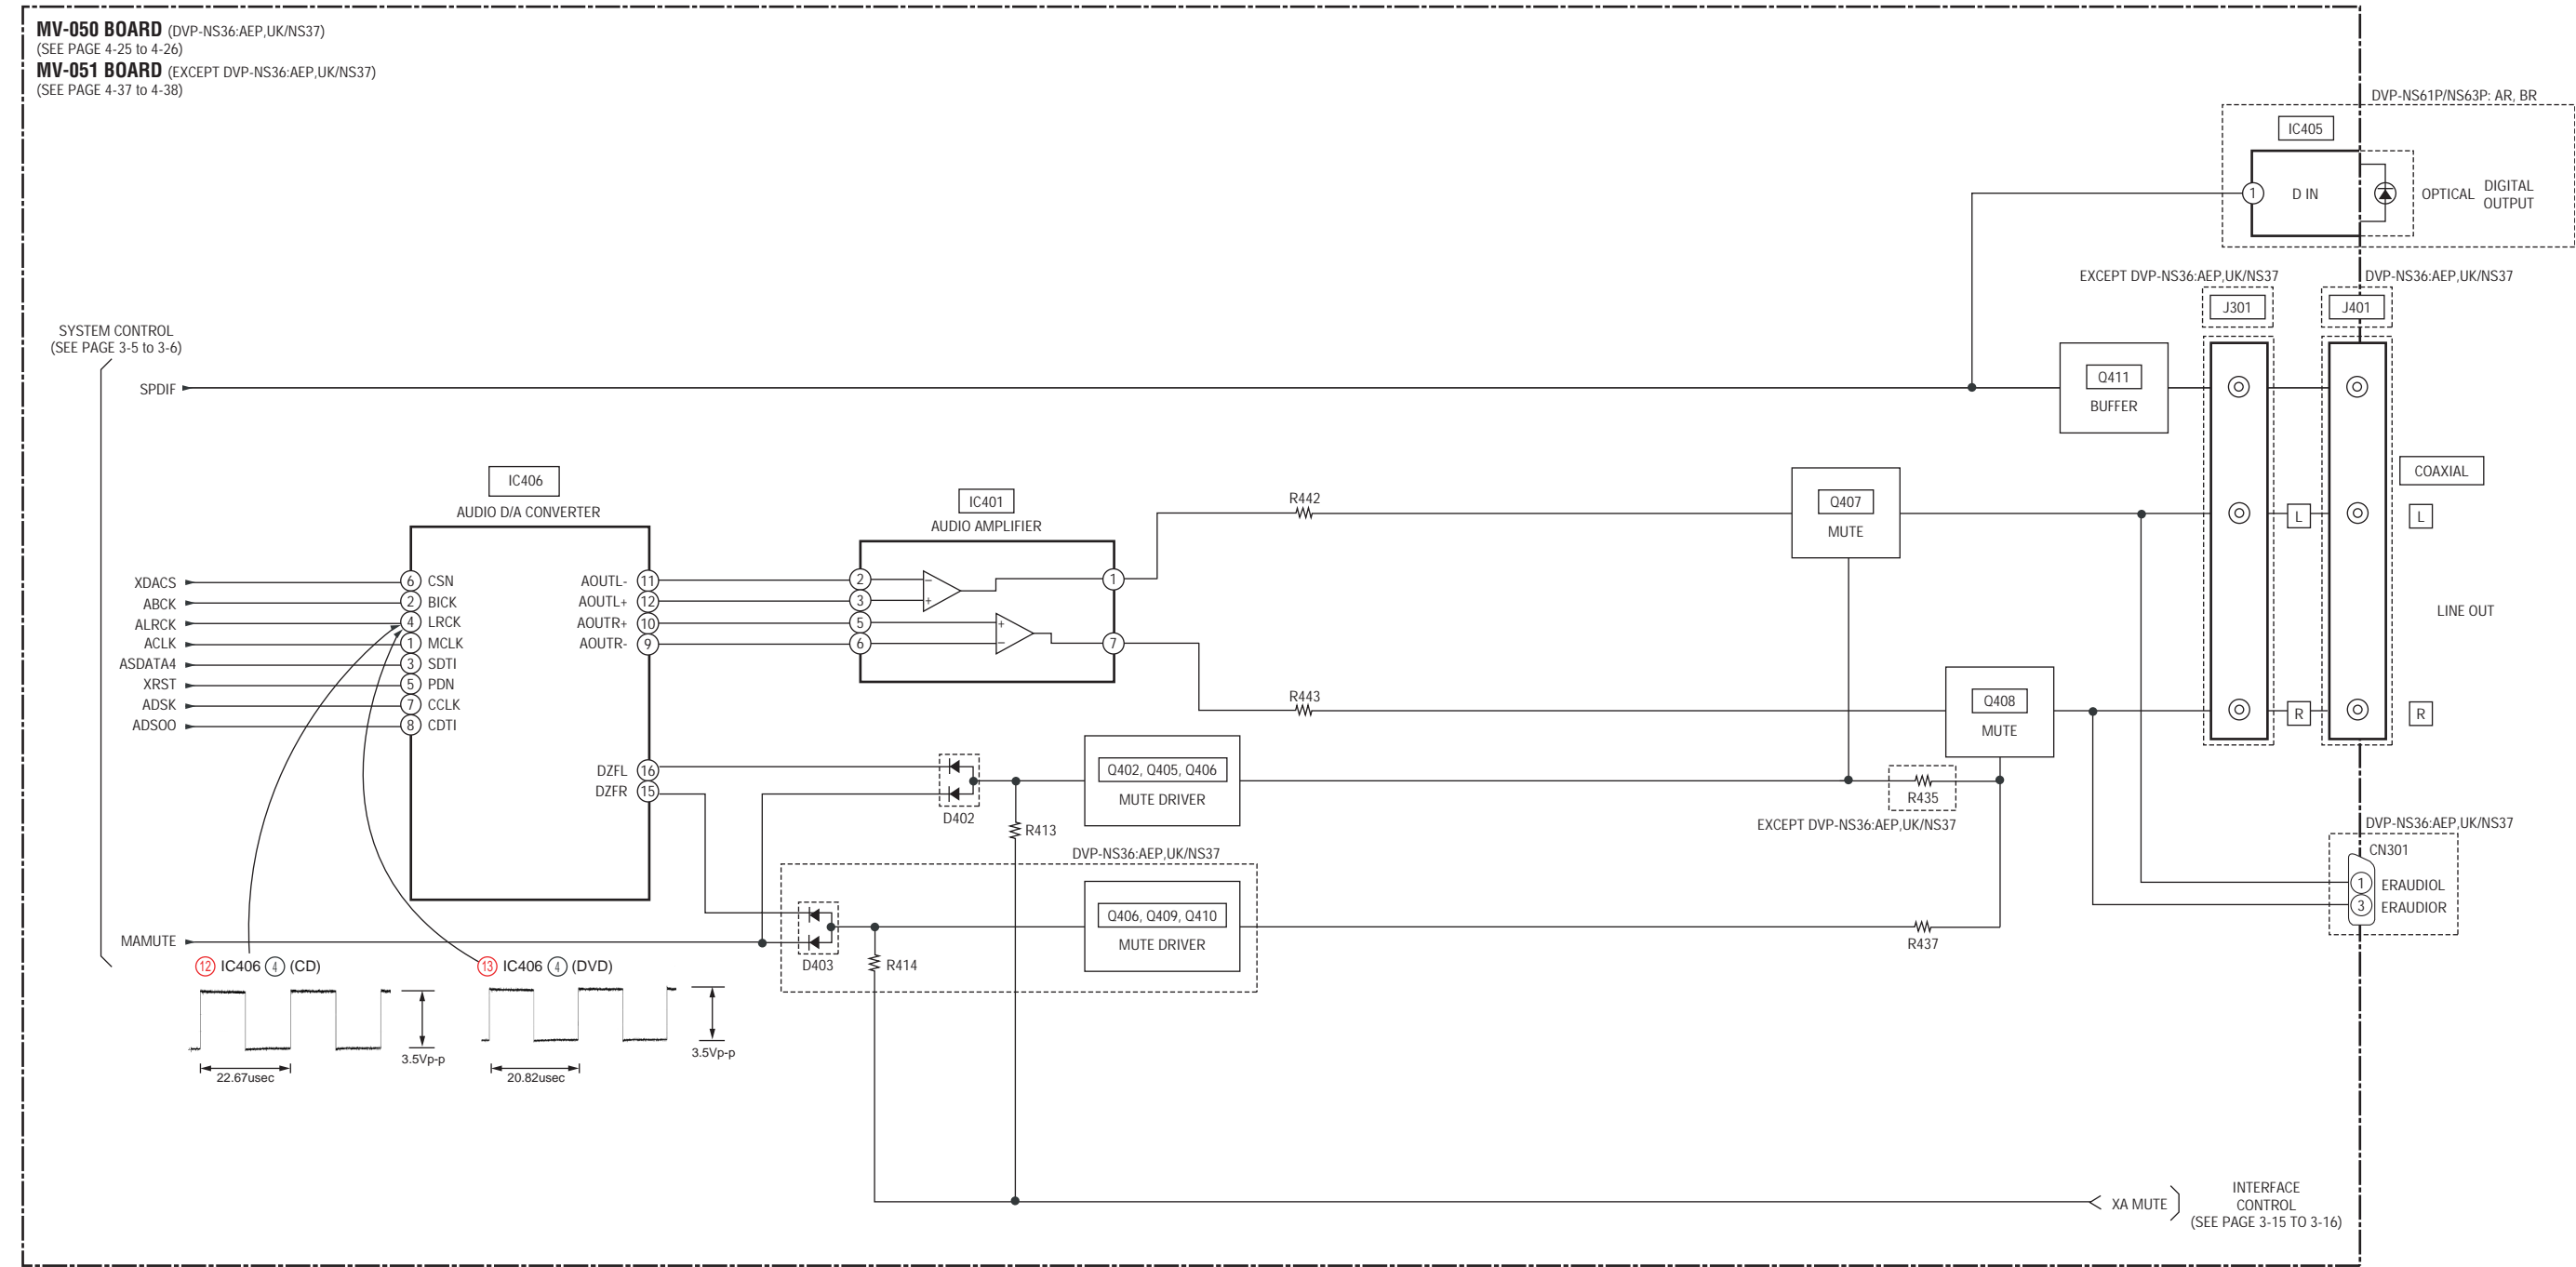


3-8. INTERFACE CONTROL BLOCK DIAGRAM

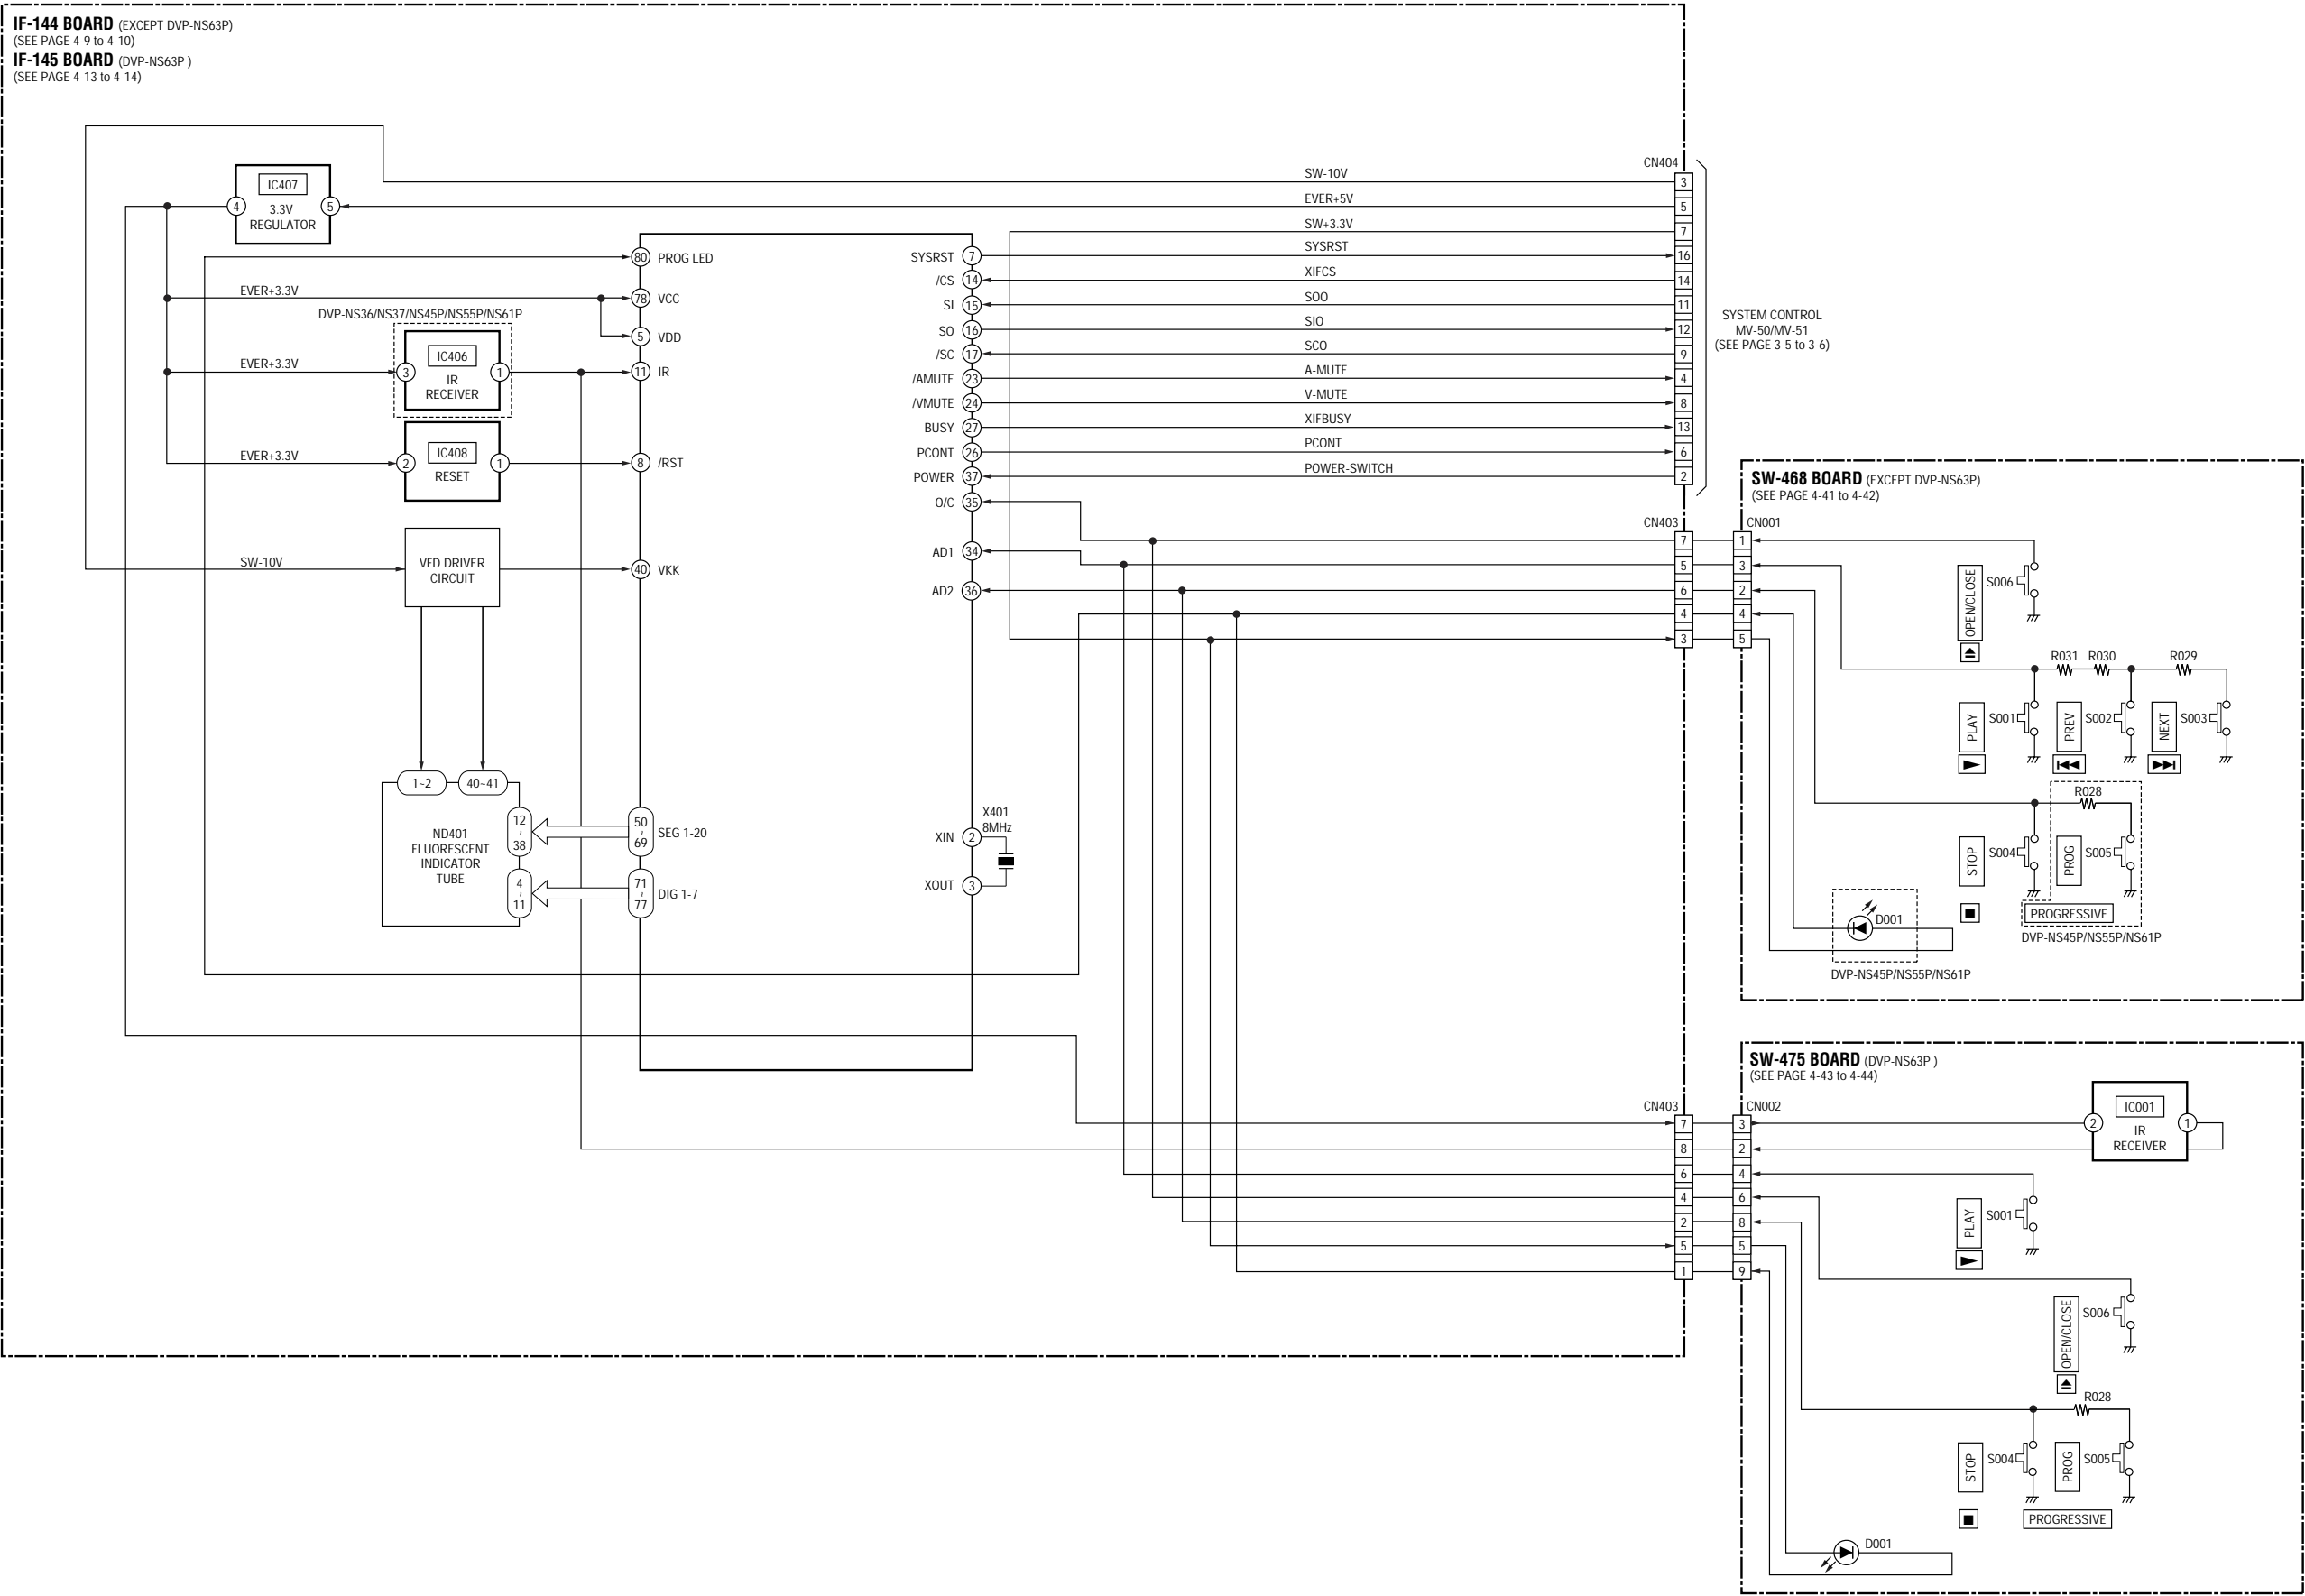

SECTION 4
PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM

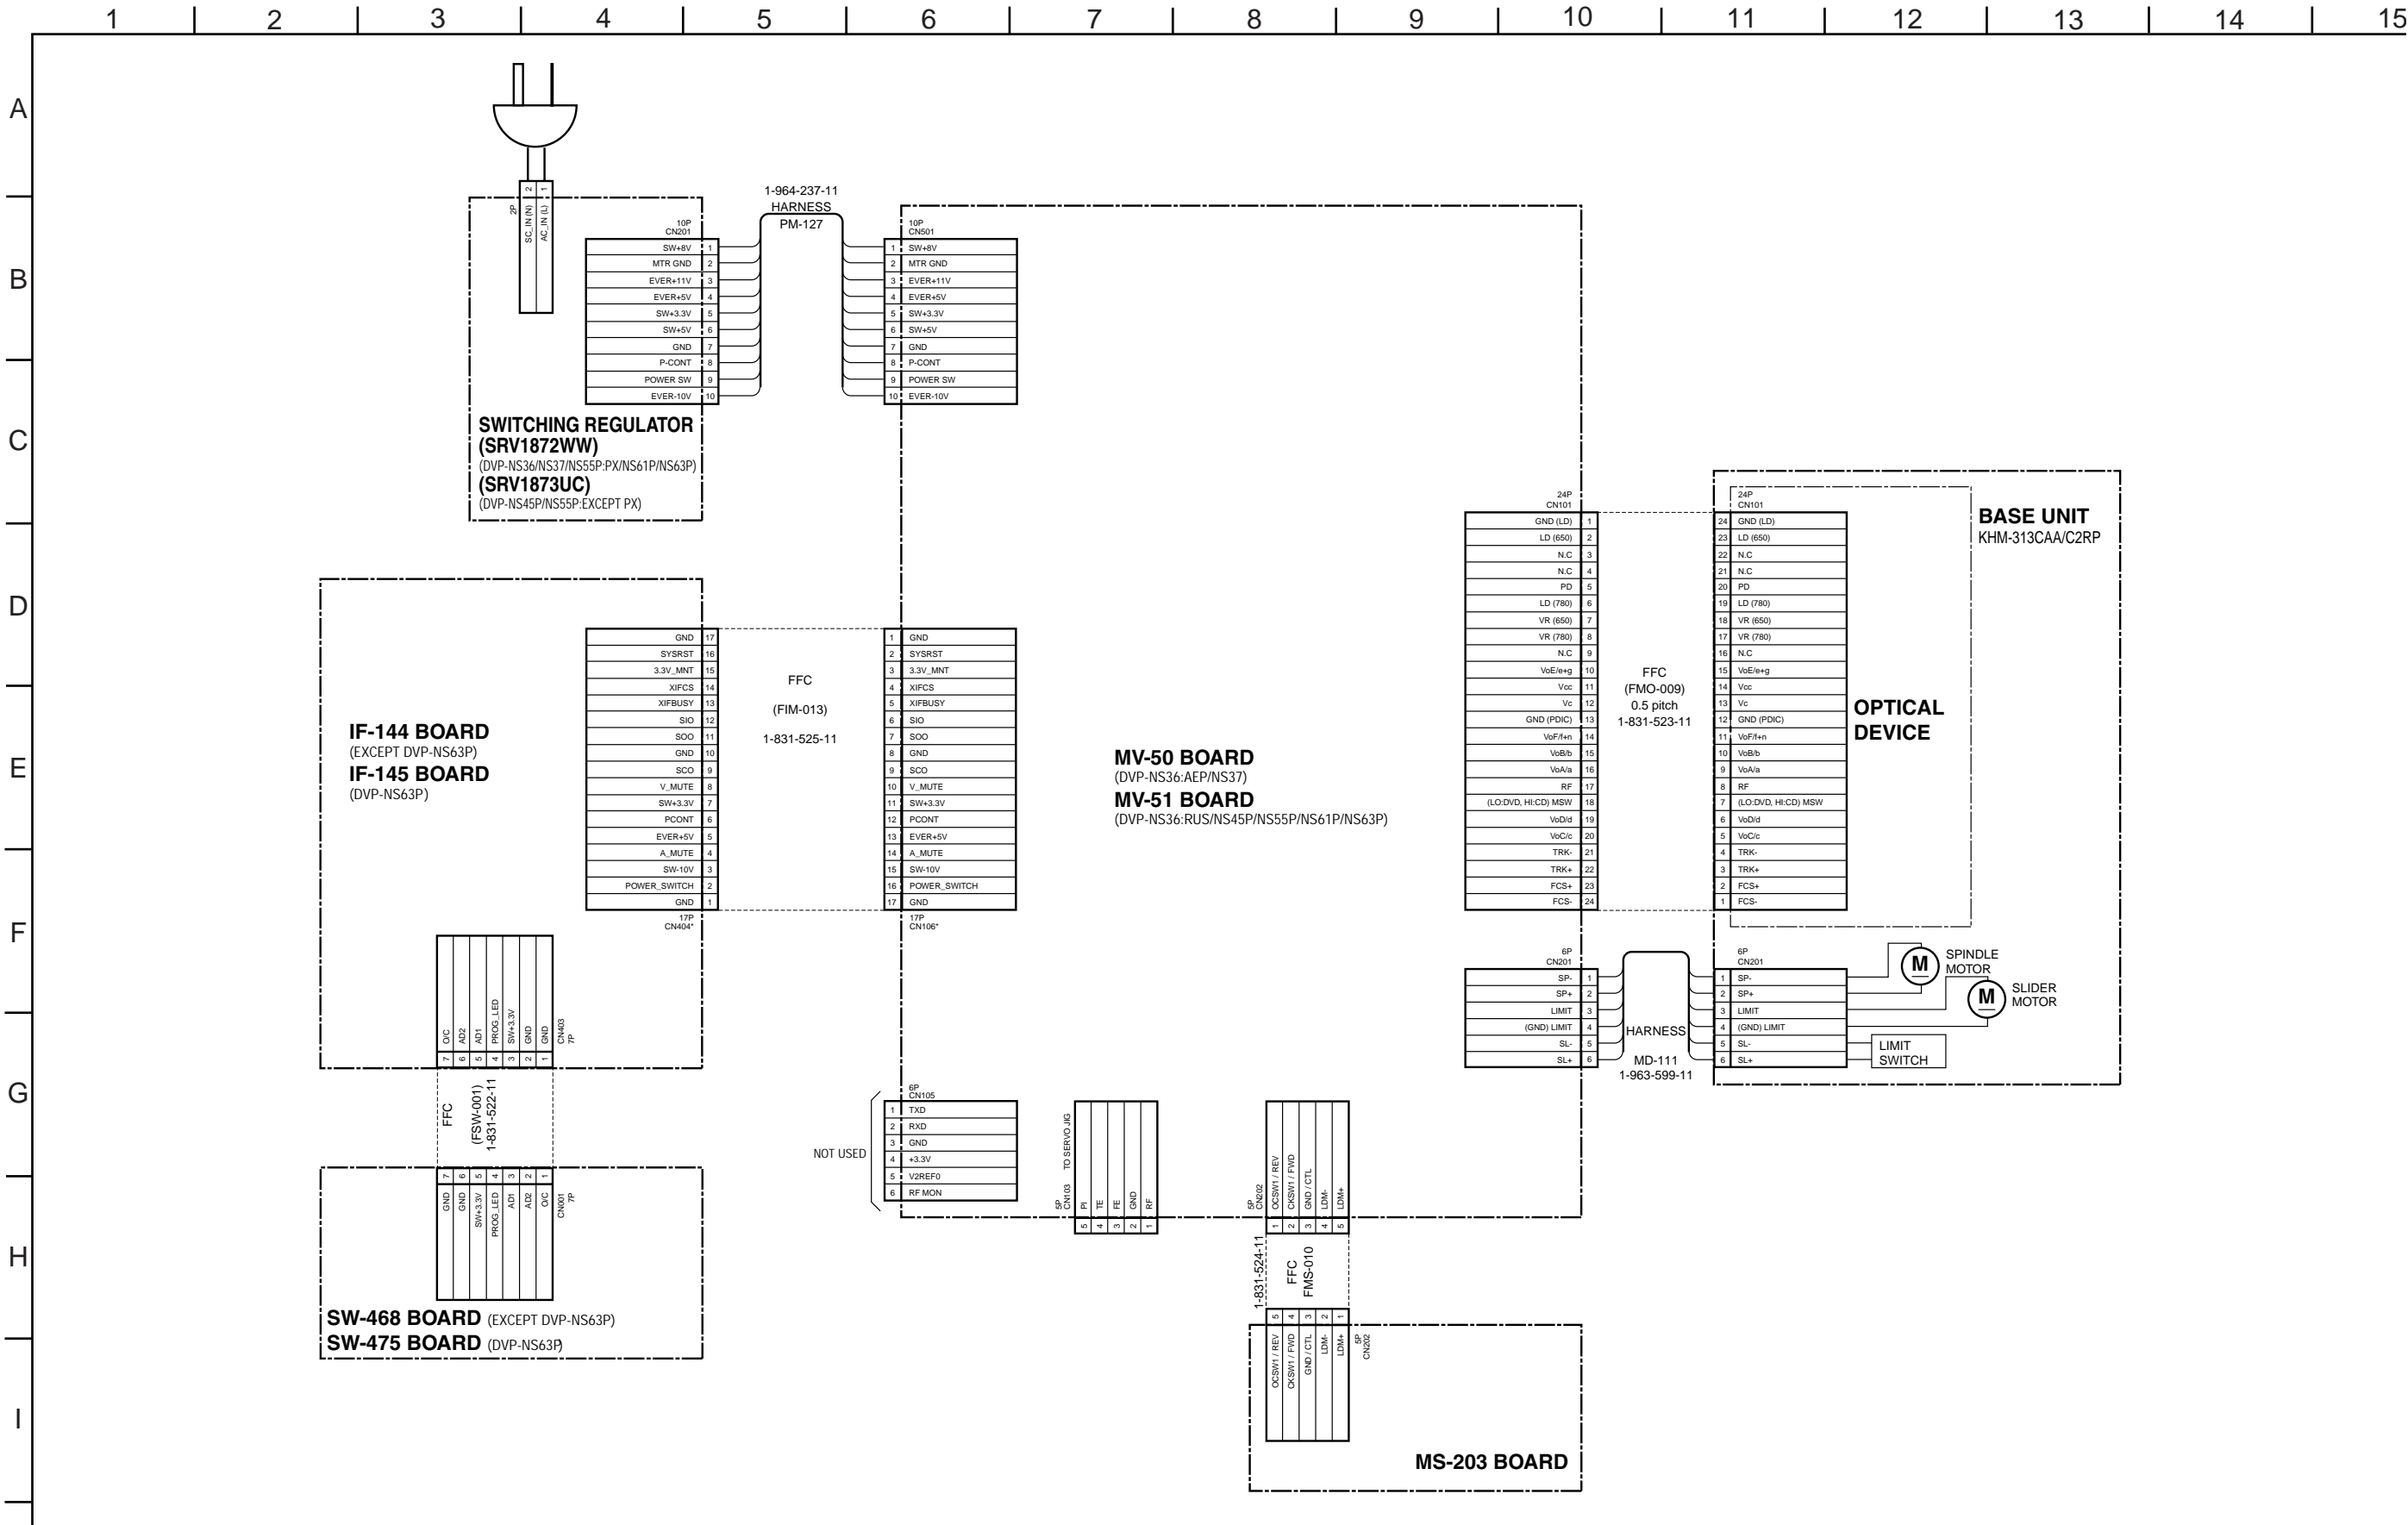

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block)

For printed wiring boards:

- — : indicates a lead wire mounted on the component side.
- — : indicates a lead wire mounted on the printed side.
- : Through hole.
- : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)

Caution:
Pattern face side: Parts on the pattern face side seen from
(Side A) the pattern face are indicated.
Parts face side: Parts on the parts face side seen from
(Side B) the parts face are indicated.

- Abbreviation
AEP : AEP Model
RUS : Russian Model
UK : UK Model
CND : Canadian Model
US : USA Model
AR : Argentina Model
BR : Brazilian Model
E : Latin America Model
PX : PX Model
AUS : Australia/New Zealand Model
CH : Chinese Model
ME : Middle East
SP : Singpaore Model

For schematic diagrams:


- All capacitors are in μF unless otherwise noted. pF : μF .
50V or less are not indicated except for electrolytics and tantalums.
- All resistors are in ohms, 1/4W (Chip resistors : 1/10W)
un-less otherwise specified.
 $\text{k}\Omega = 1000\Omega$, $\text{M}\Omega = 1000\text{k}\Omega$.
- Caution when replacing chip parts.
New parts must be attached after removal of chip.
Be careful not to heat the minus side of tantalum capacitor,
because it is damaged by the heat.
- All variable and adjustable resistors have characteristic
curve B, unless otherwise noted.
- ⎓ : non flammable resistor.
- ⎓ : fusible resistor.
- : panel designation.
- △ : internal component.
- : adjustment for repair.
- Circled numbers refer to waveforms.
- Voltages are dc between measurement point.
- Readings are taken with a color-bar signal on DVD refer-
ence disc and when playing CD reference disc.
- Readings are taken with a digital multimeter (DC 10M Ω).
- Voltage variations may be noted due to normal production
tolerances.

Note:
The components identified by
mark △ or dotted line with mark
△ are critical for safety.
Replace only with part number
specified.


When indicating parts by reference
number, please include the board
name.

4-3. WAVEFORMS

MV-50 BOARD (DVP-NS36/NS37)

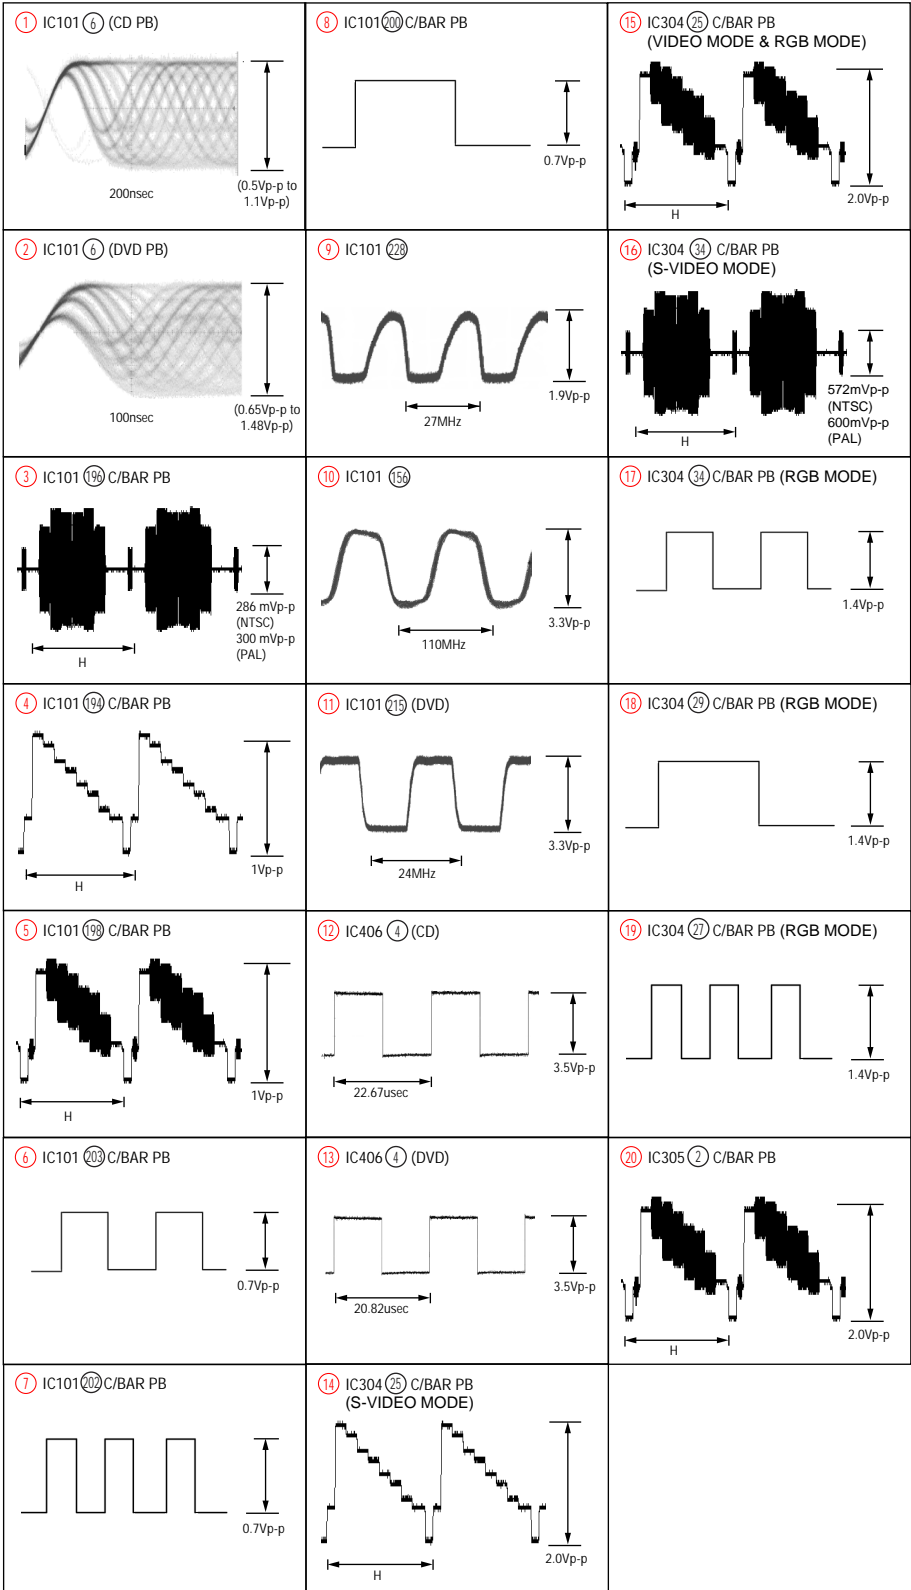


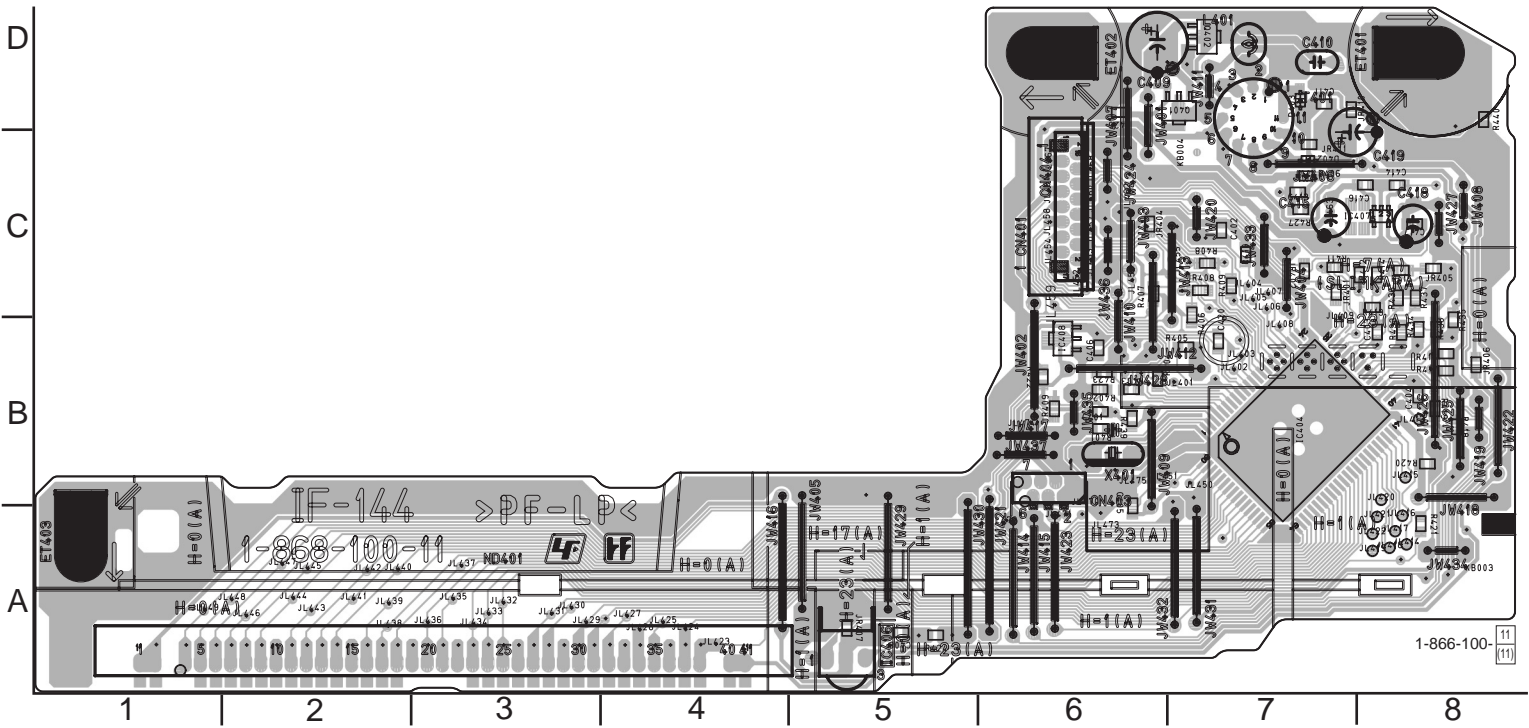
MV-51 BOARD (DVP-NS45P/55P/61P/63P)

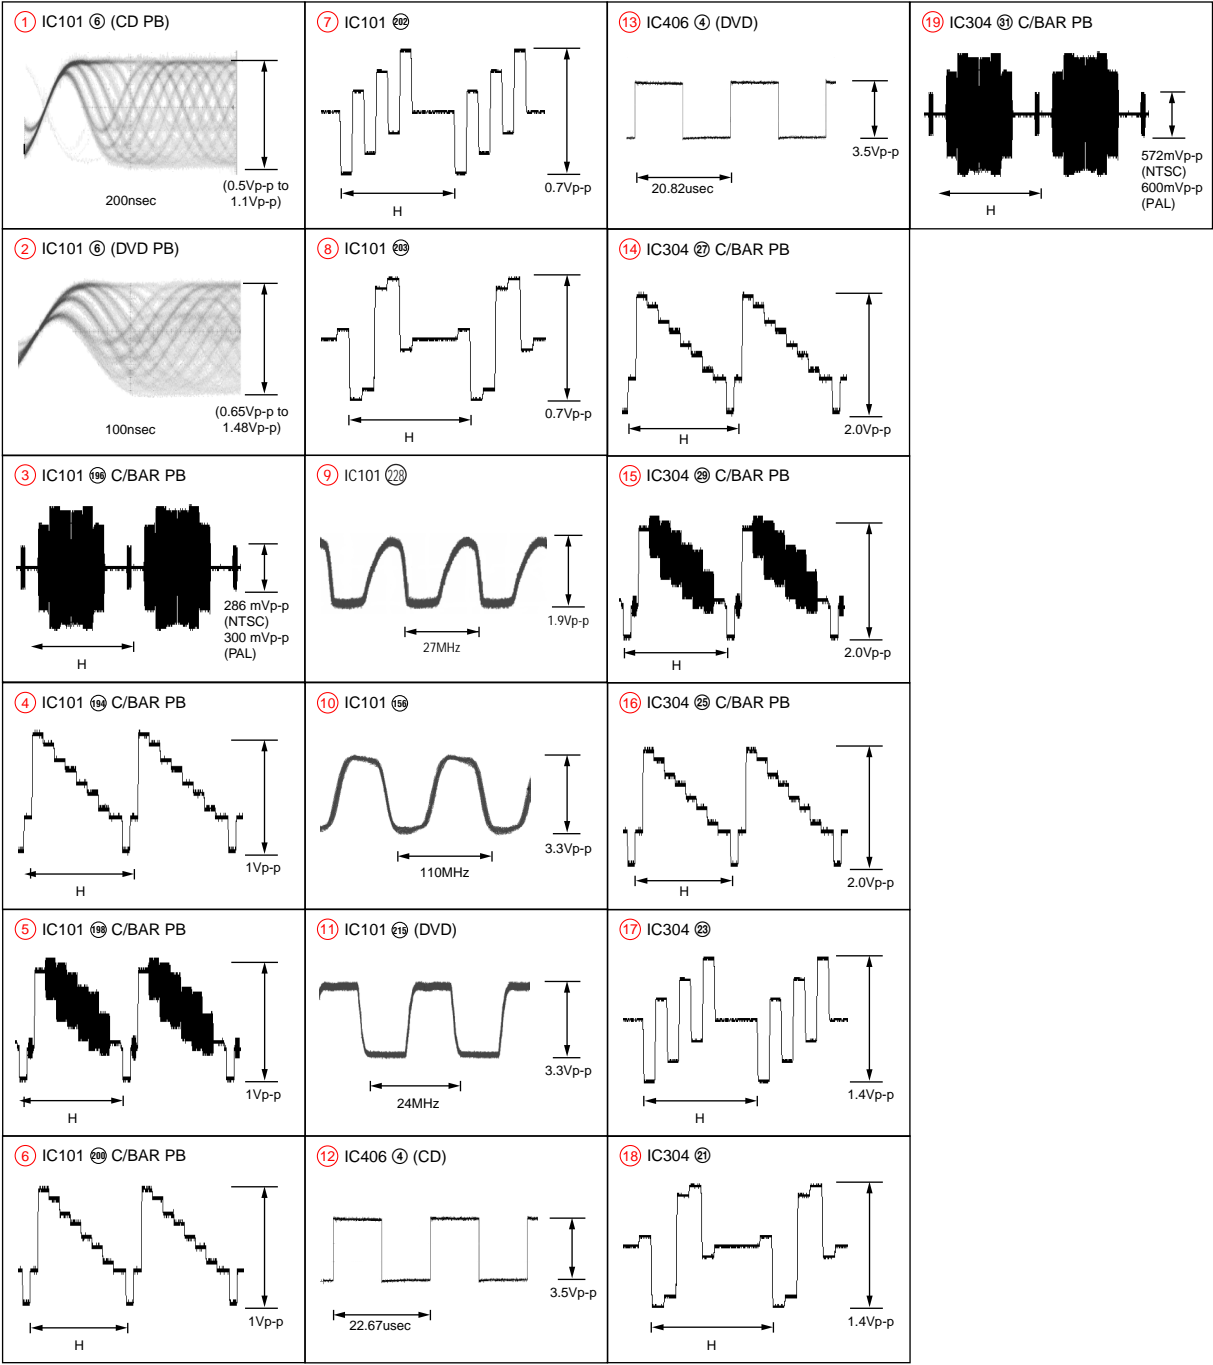

IF-144 (INTERFACE) PRINTED WIRING BOARD


IF-144 BOARD (EXCEPT DVP-NS63P)

•  : Uses unleaded solder.



For printed wiring board

There are a few cases that the part printed on this diagram isn't mounted in this model.

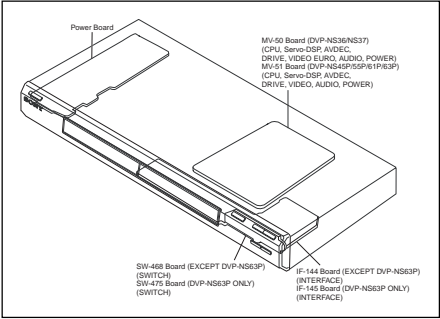


IF-144 BOARD

IC404	B-7
IC406	A-5
IC407	C-7
IC408	B-6
Q401	D-7
Q402	D-7
D402	C-7
D403	D-7
D406	C-7


For Schematic Diagram


- Refer to page 4-7 for printed wiring board of IF-144 board.

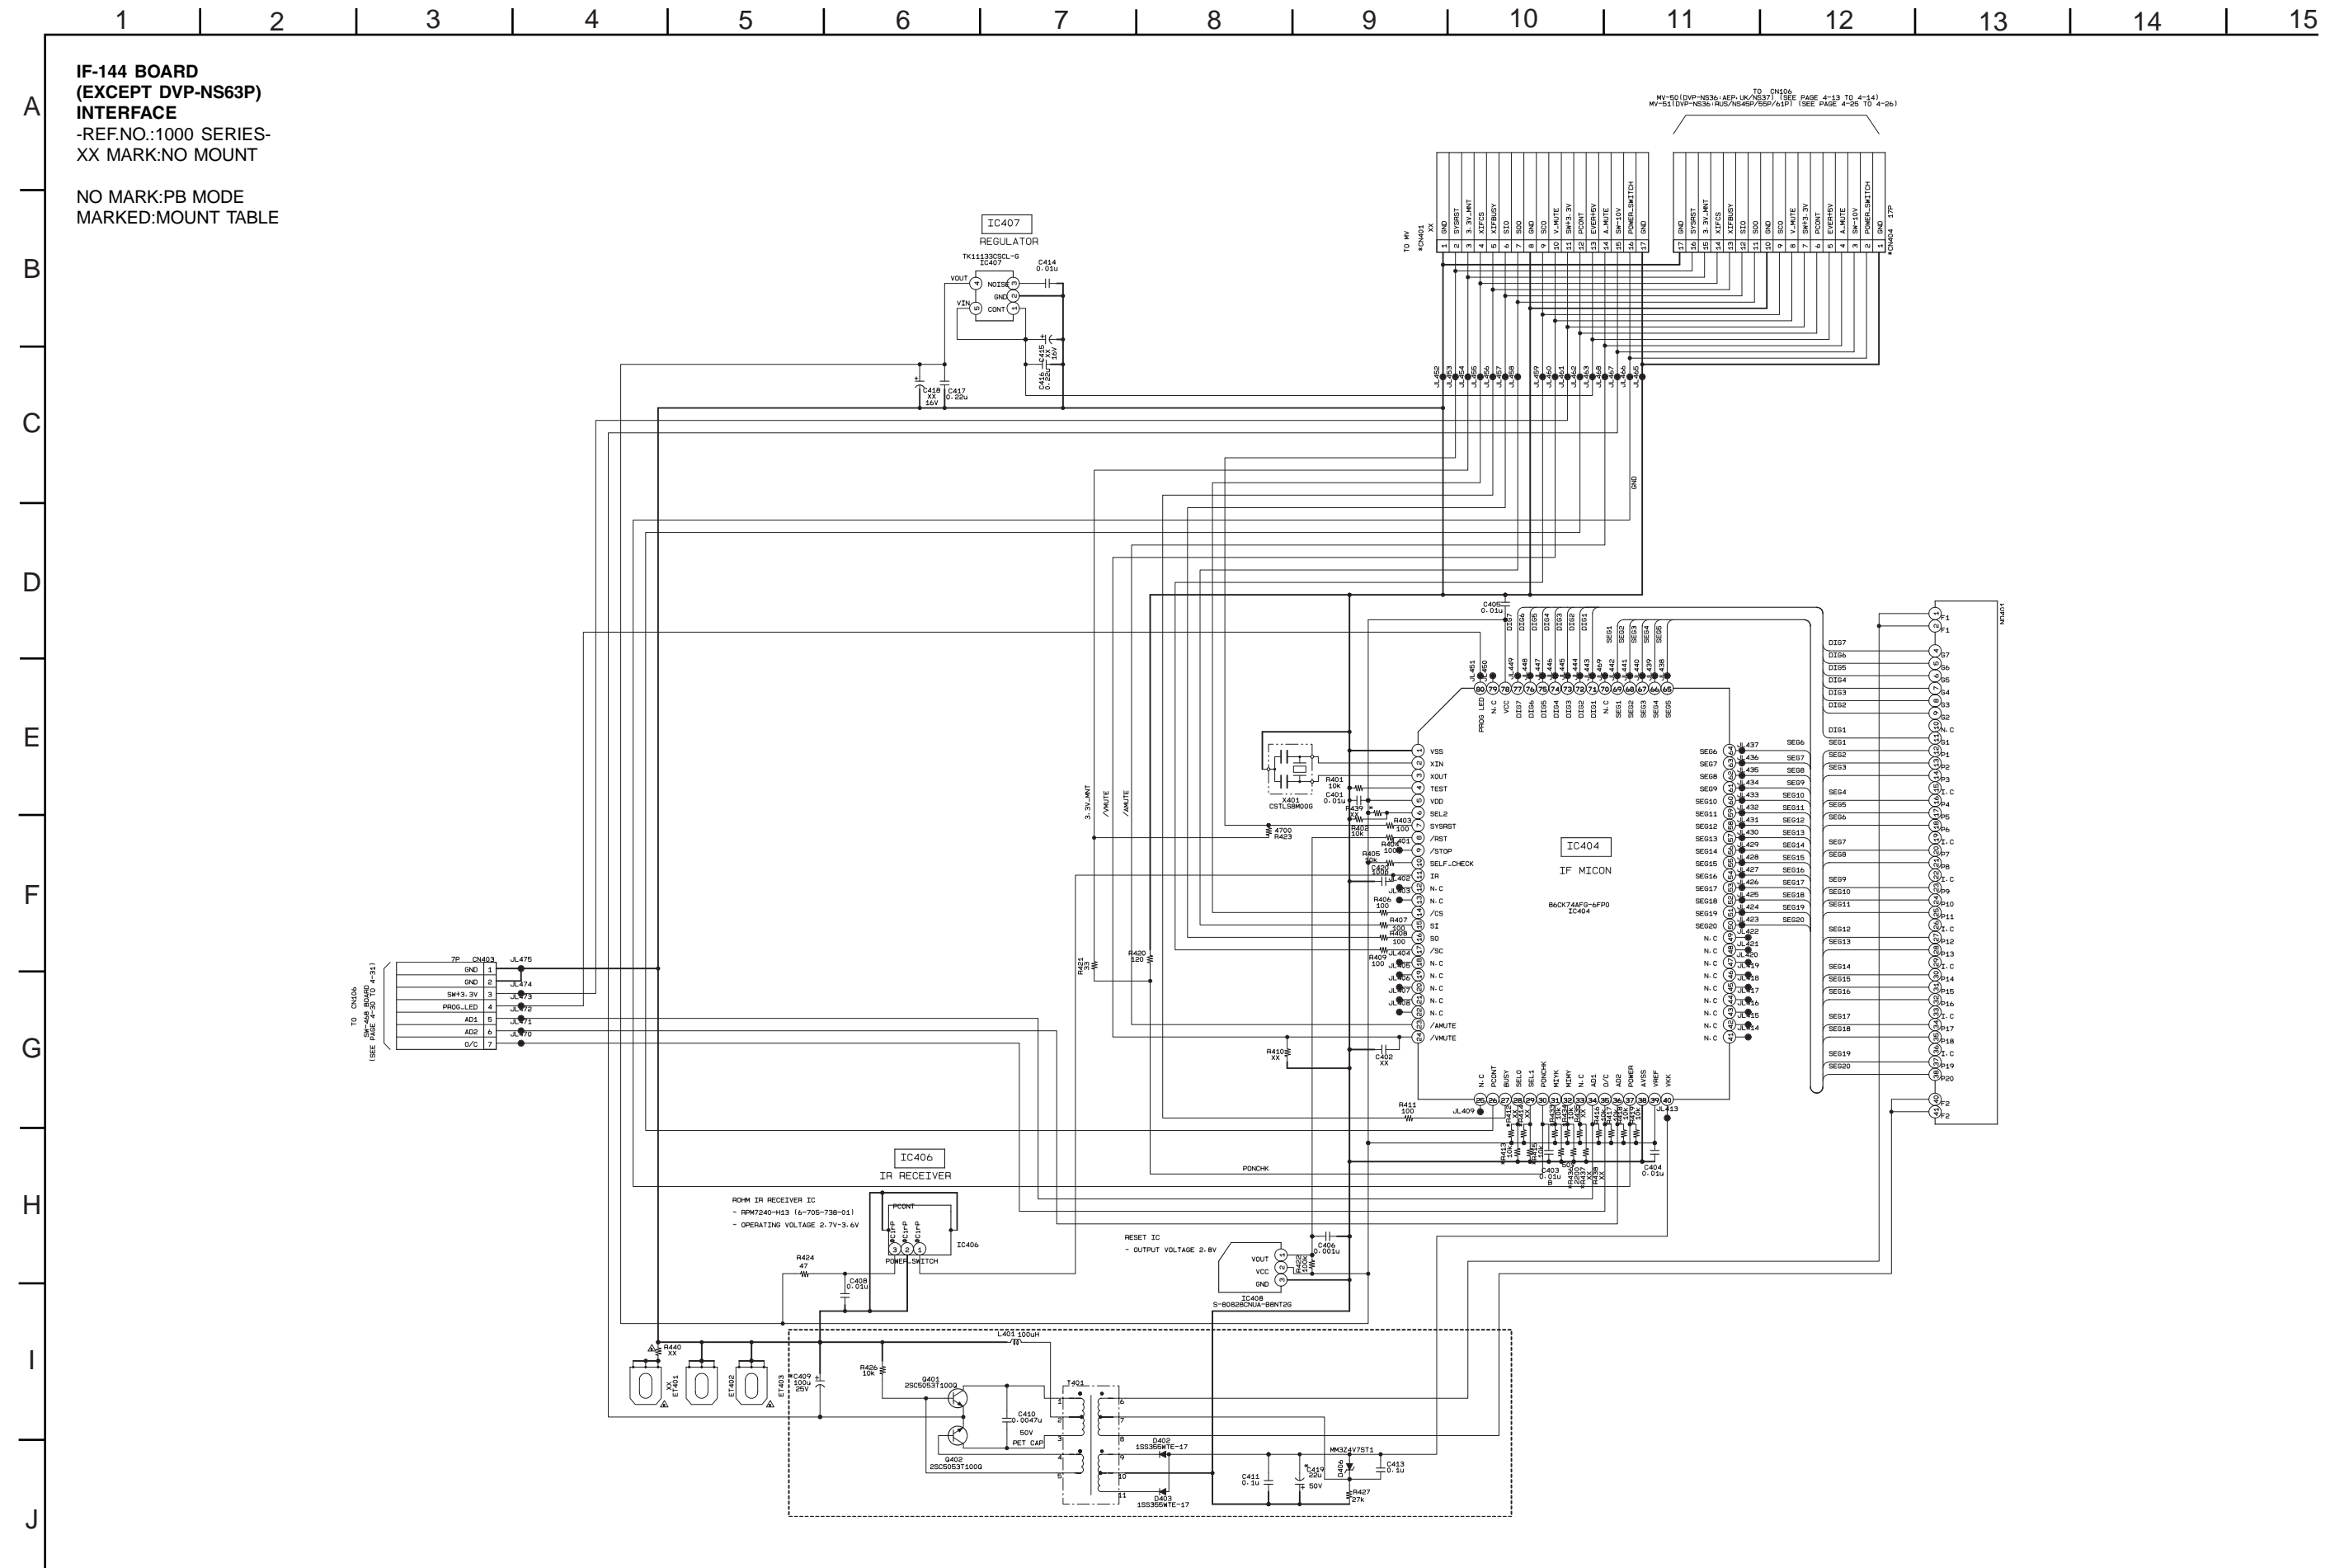

IF-145 (INTERFACE) PRINTED WIRING BOARD


IF-145 BOARD (DVP-NS63P)

•  : Uses unleaded solder.

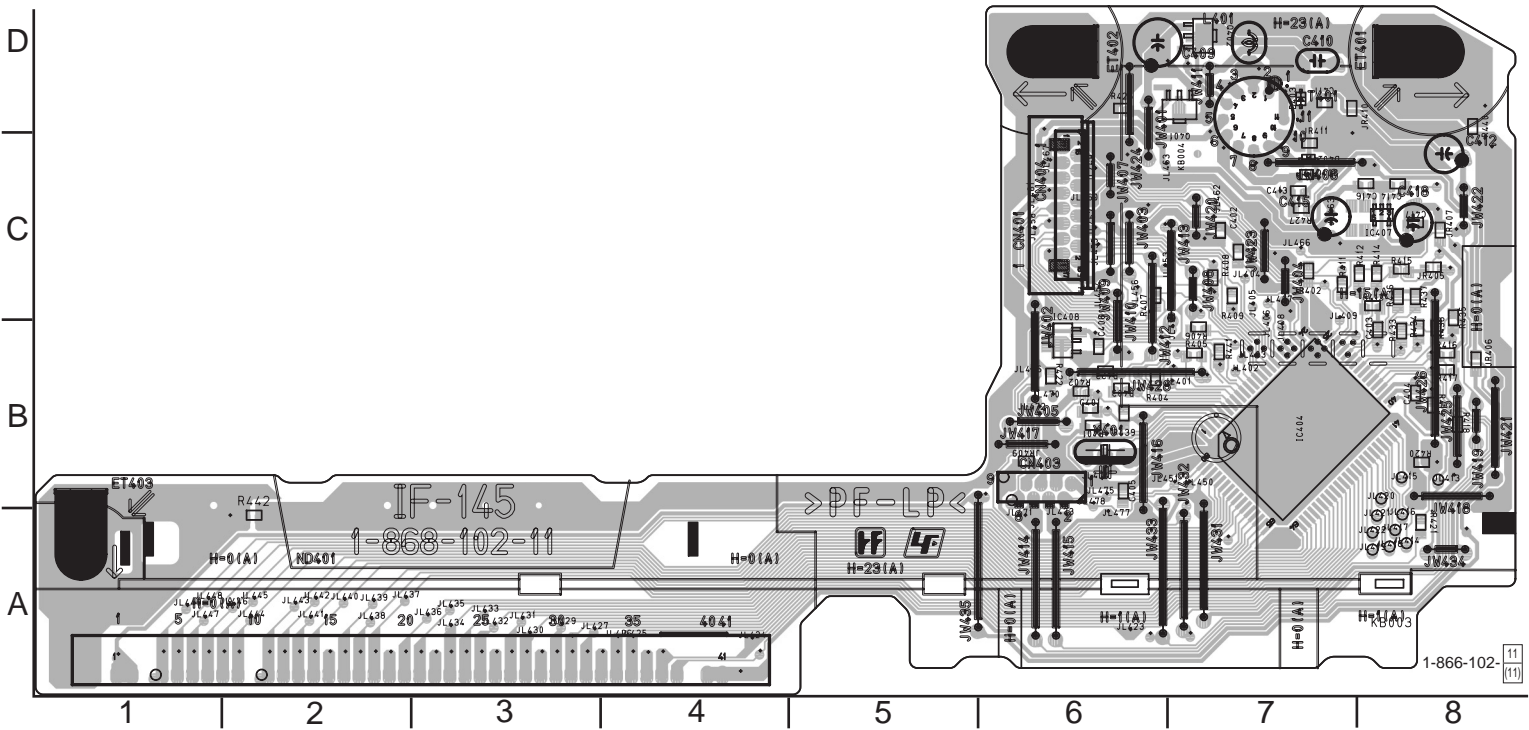

For printed wiring board

There are a few cases that the part printed on this diagram isn't mounted in this model.

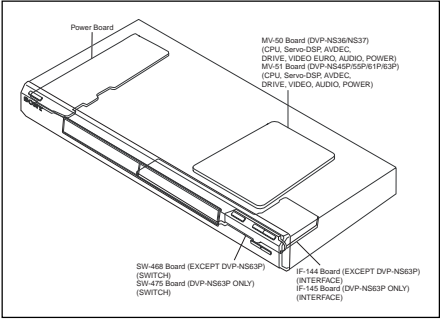

IF-145 BOARD


IC404	B-7
IC407	B-6
IC408	C-8
Q401	D-7
Q402	D-7
D402	C-7
D403	D-7
D406	C-7

For Schematic Diagram

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----


**IF-145 BOARD
(DVP-NS63P)
INTERFACE**
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT


NO MARK:PB MODE
MARKED:MOUNT TABLE

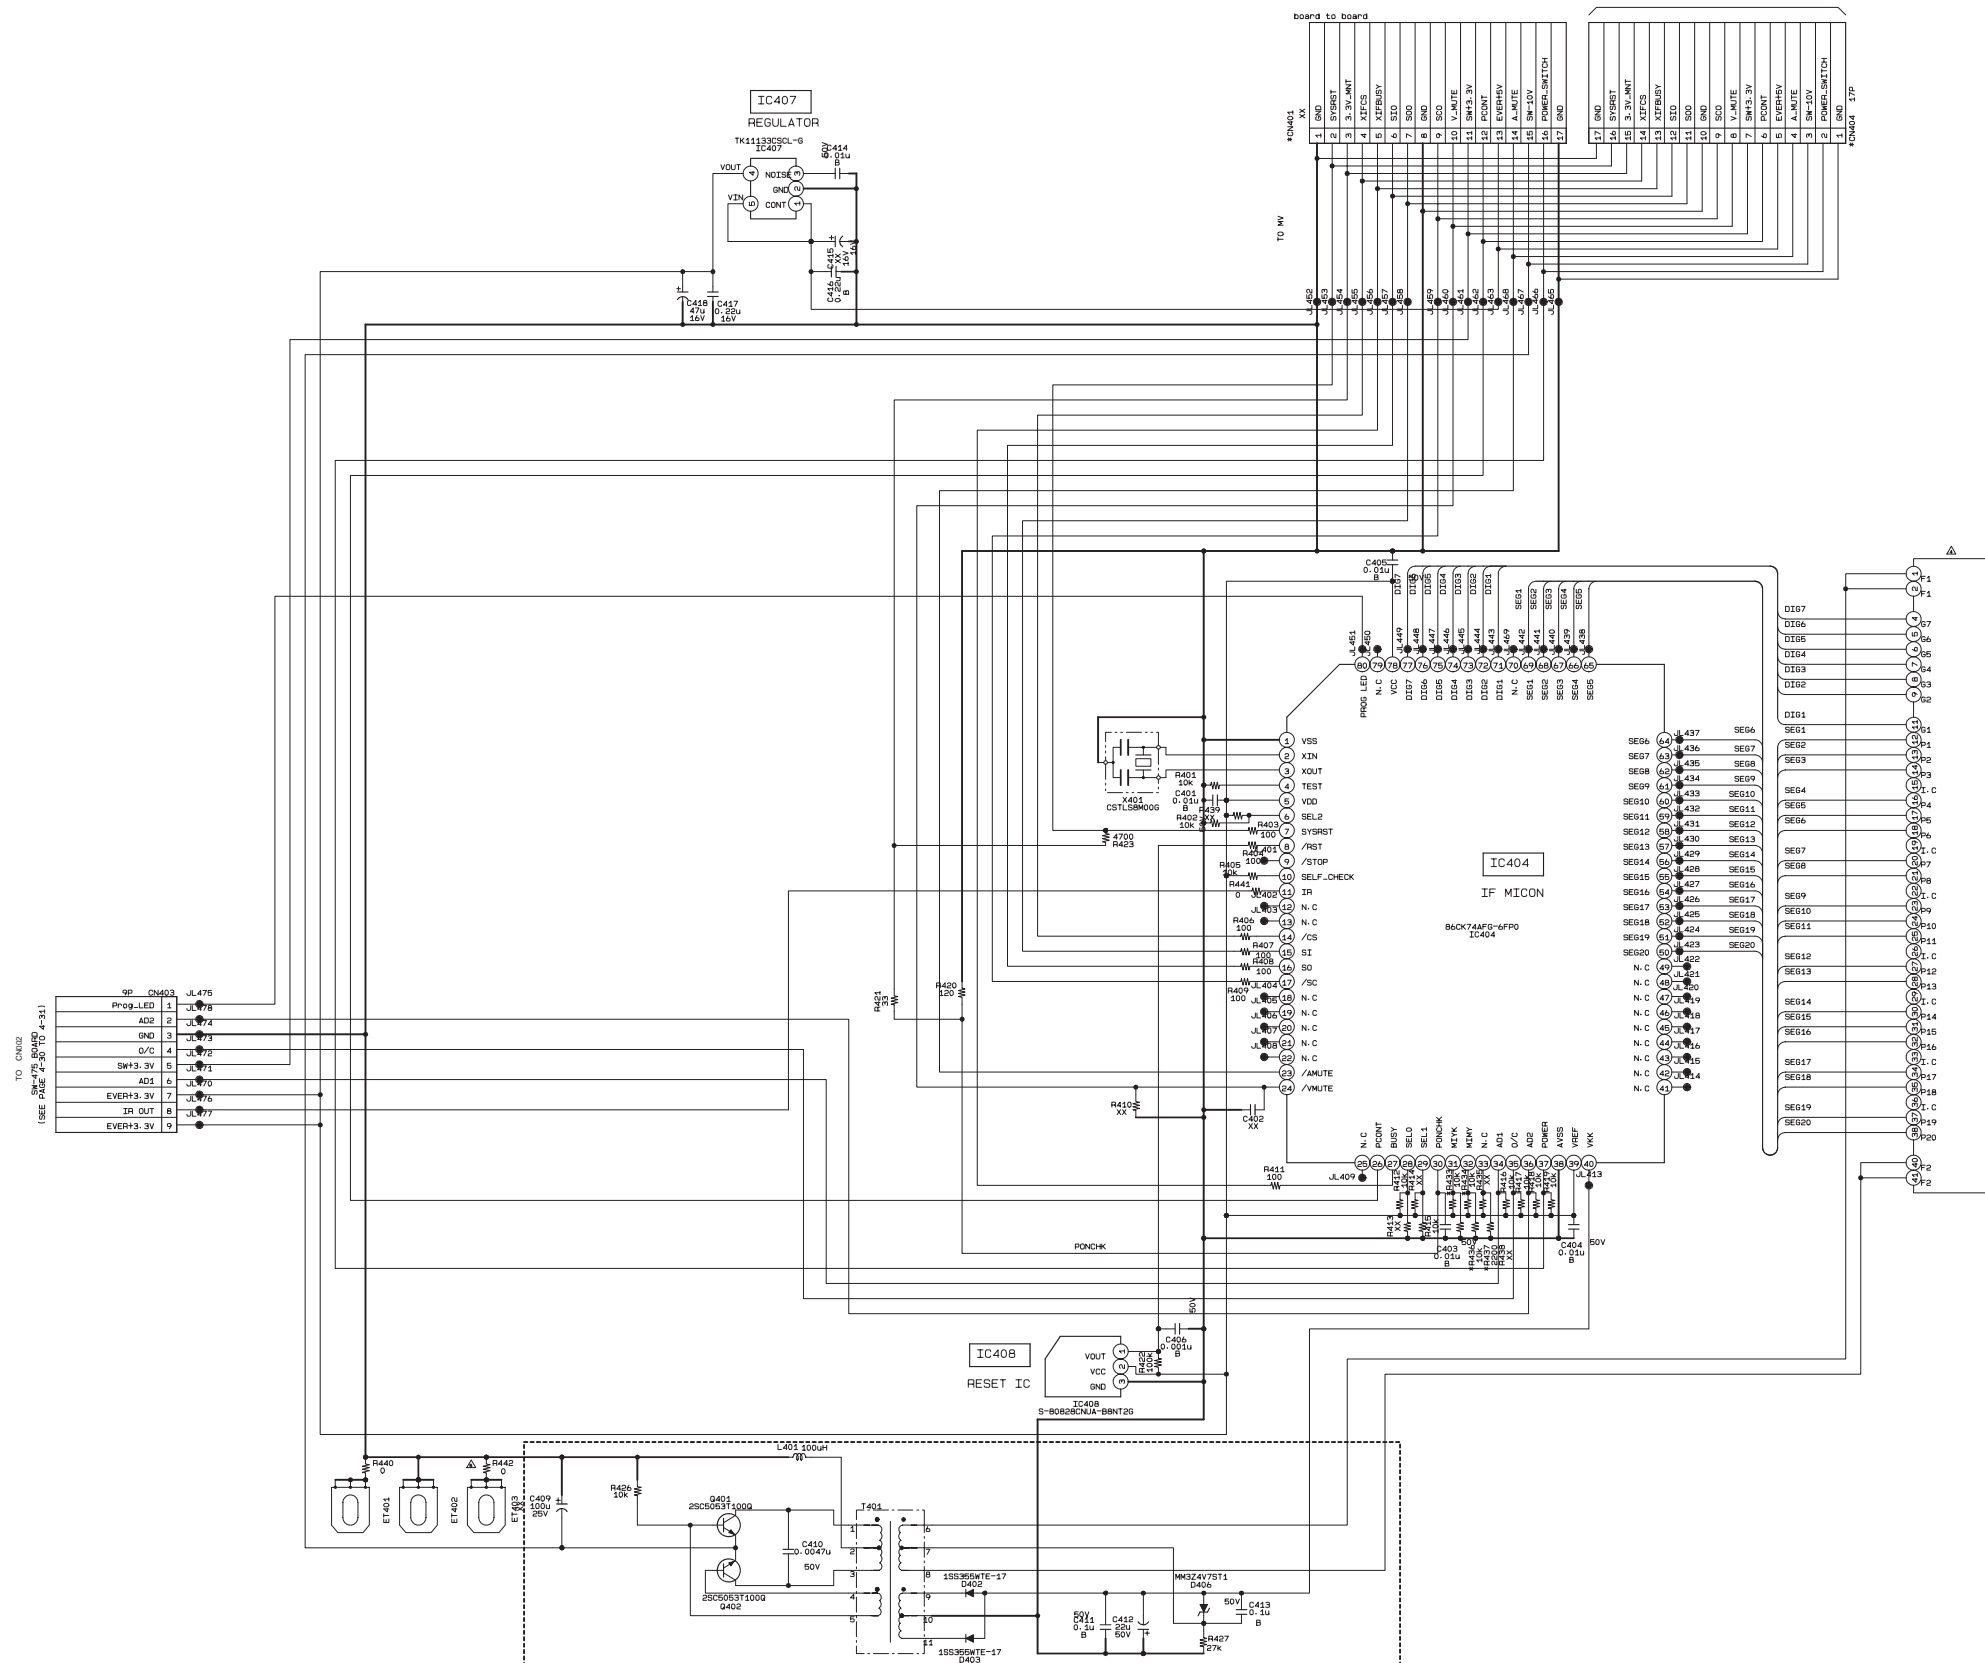

MS-203 (LOADING MOTOR) PRINTED WIRING BOARD


MS-203 BOARD

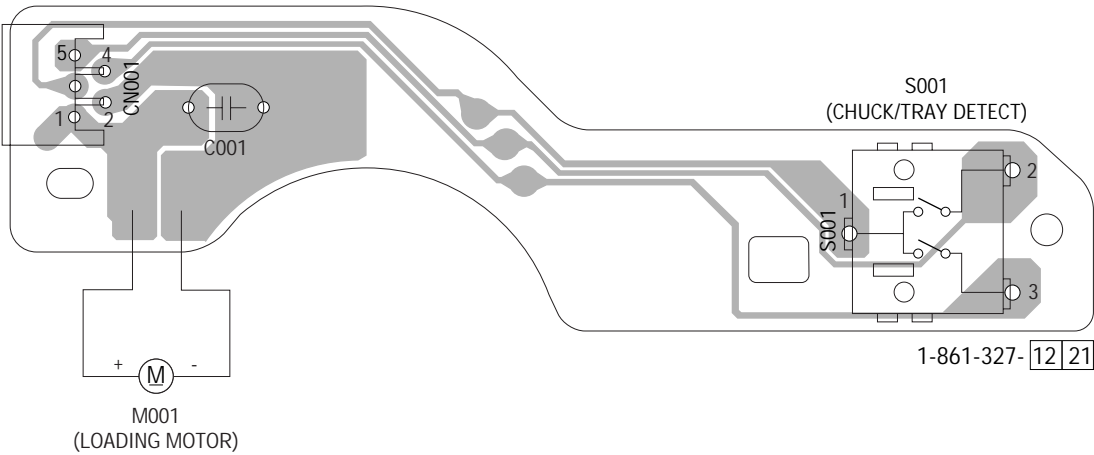

-  : Uses unleaded solder.


For printed wiring board

There are a few cases that the part printed on this diagram isn't mounted in this model.

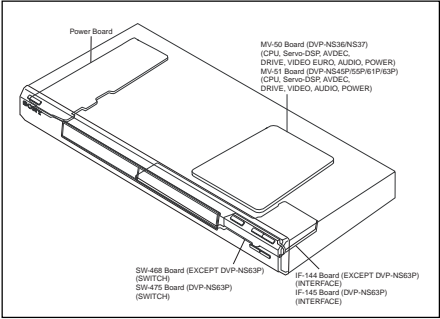


For Schematic Diagram


- Refer to page 4-15 for printed wiring board of MS-203 board.

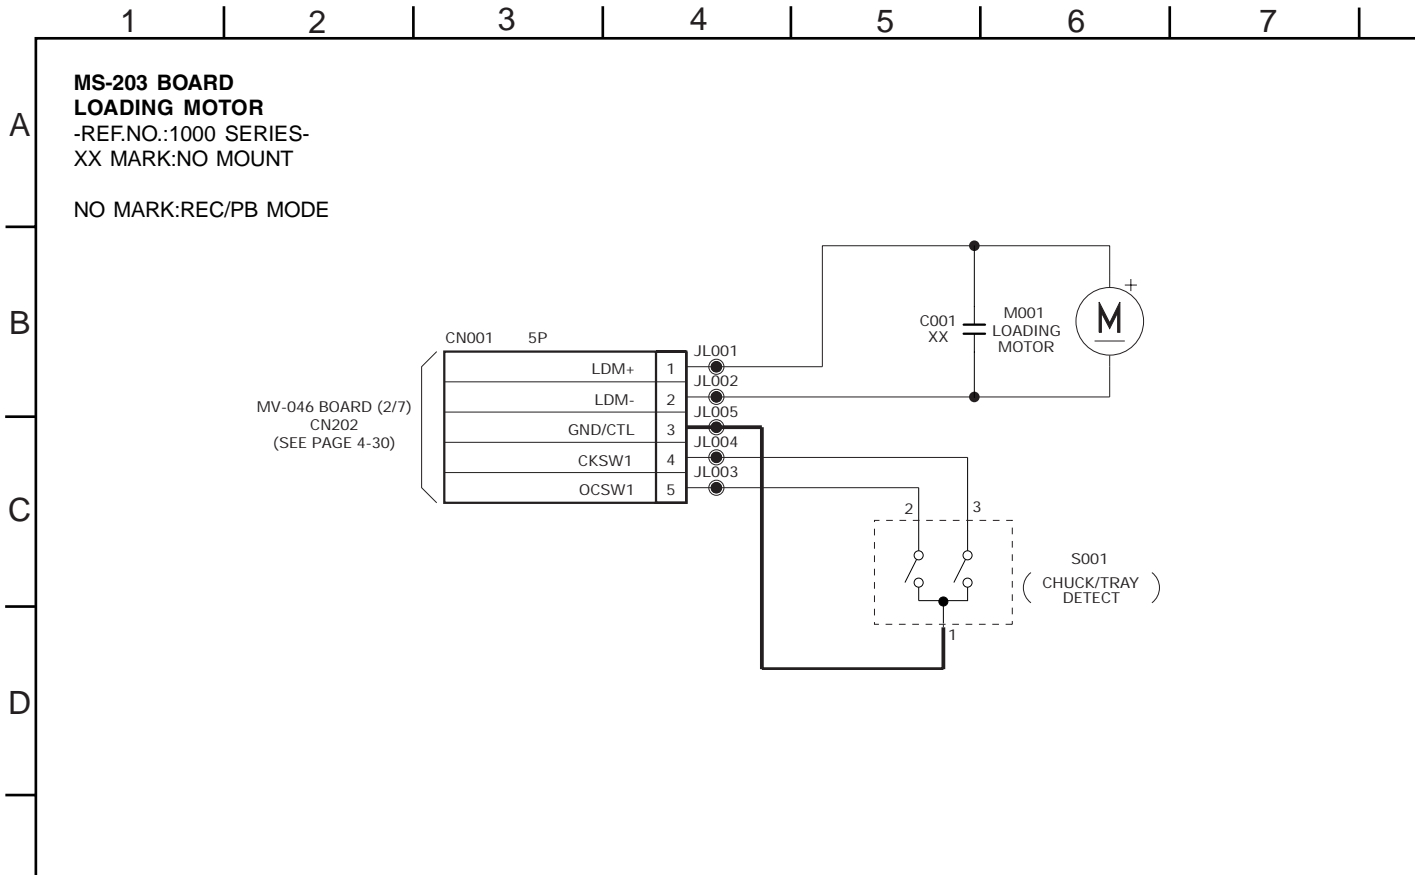


MV-50 (CPU, Servo-DSP, AVDEC, DRIVE, VIDEO EURO, AUDIO, POWER) PRINTED WIRING BOARD

•  : Uses unleaded solder.

MV-50 BOARD (DVP-NS36/NS37) SIDE A

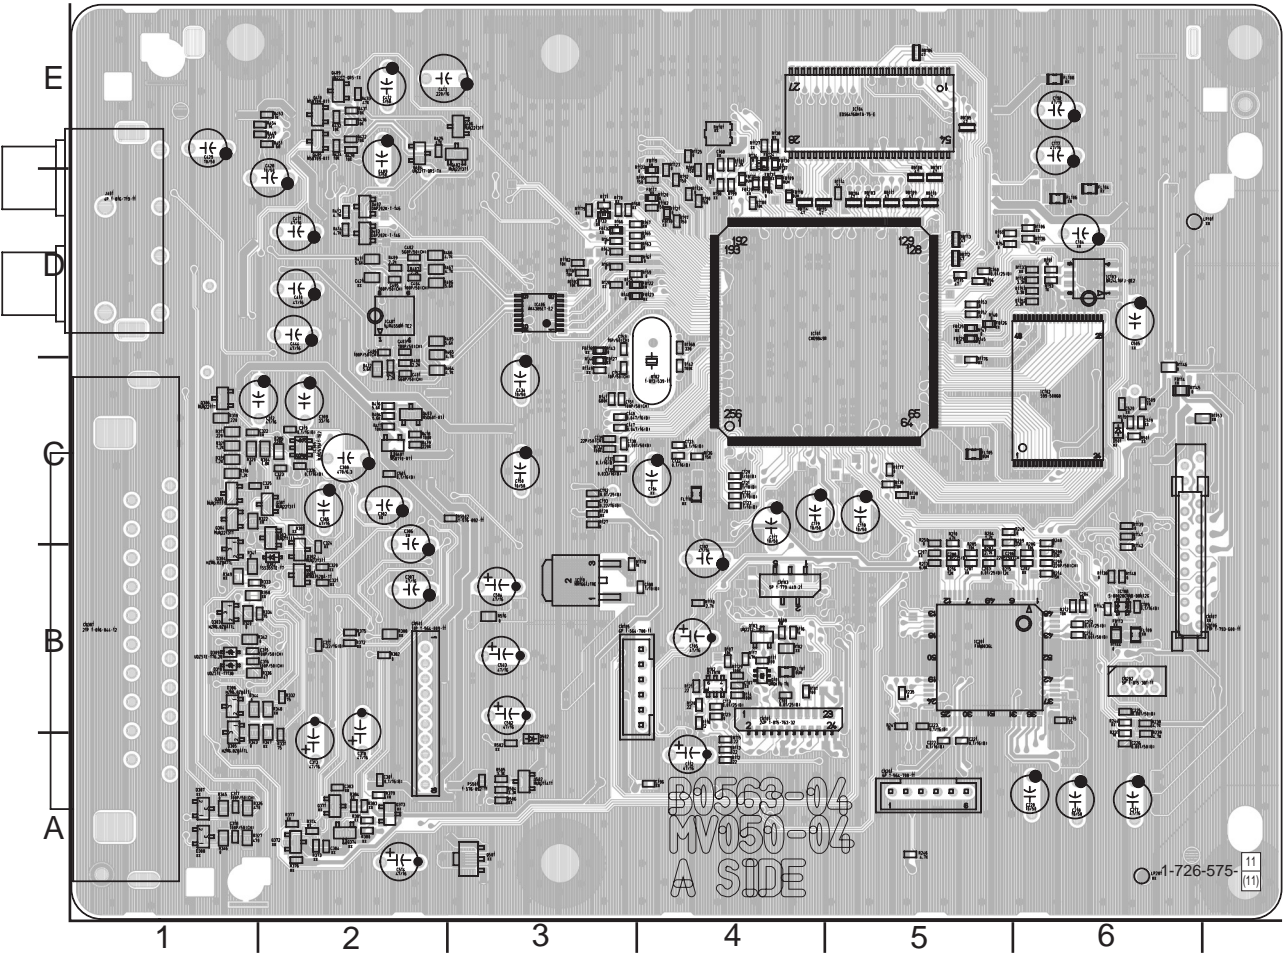

MV-50 BOARD (DVP-NS36/NS37) SIDE B

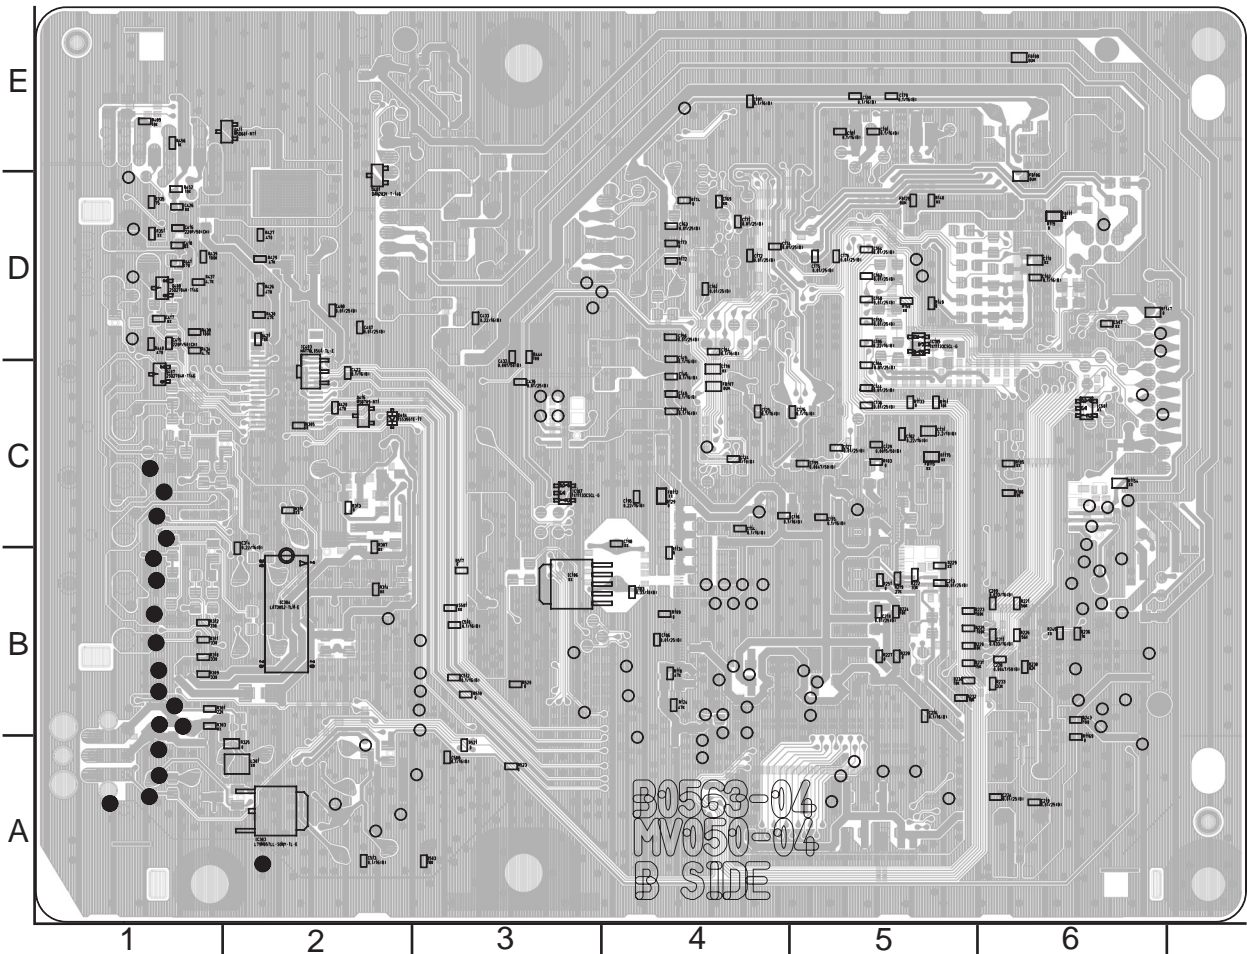

MV-50 BOARD
SIDE A


IC101	D-4	Q101	B-4
IC102	C-6	Q102	B-4
IC103	D-6	Q103	B-4
IC104	E-5	Q301	C-2
IC108	B-6	Q302	B-2
IC110	B-3	Q303	C-2
IC201	B-5	Q304	C-1
IC305	C-2	Q305	C-1
IC401	D-2	Q306	C-1
IC406	D-3	Q401	C-2
		Q402	E-3
		Q403	C-2
		Q404	D-2
		Q405	E-2
		Q406	E-3
		Q409	E-2
		Q410	E-2
		Q502	A-3
D301	B-2		
D302	B-2		
D303	B-1		
D304	B-1		
D305	A-1		
D306	B-1		
D309	B-1		
D310	B-1		
D402	D-2		
D403	D-2		

SIDE B


IC105	D-5
IC107	C-3
IC303	A-2
IC304	B-2
IC403	D-2
D401	D-2
D404	C-2
Q416	C-2
Q411	E-2
Q408	D-1
Q407	C-1

For printed wiring board

There are a few cases that the part printed on this diagram isn't mounted in this model.

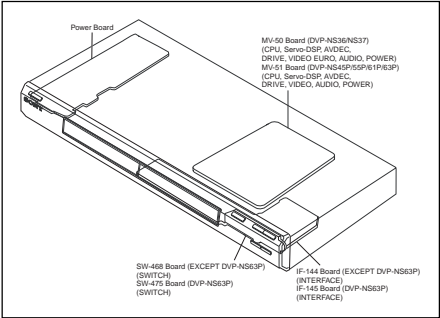


- Refer to page 4-17 for printed wiring board of MV-50 board.
- Refer to page 4-4 for waveform

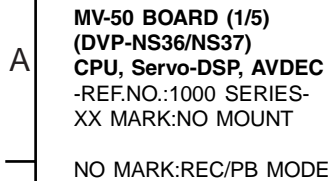

For Schematic Diagram

- Refer to page 4-17 for printed wiring board of MV-50 board.
- Refer to page 4-4 for waveform

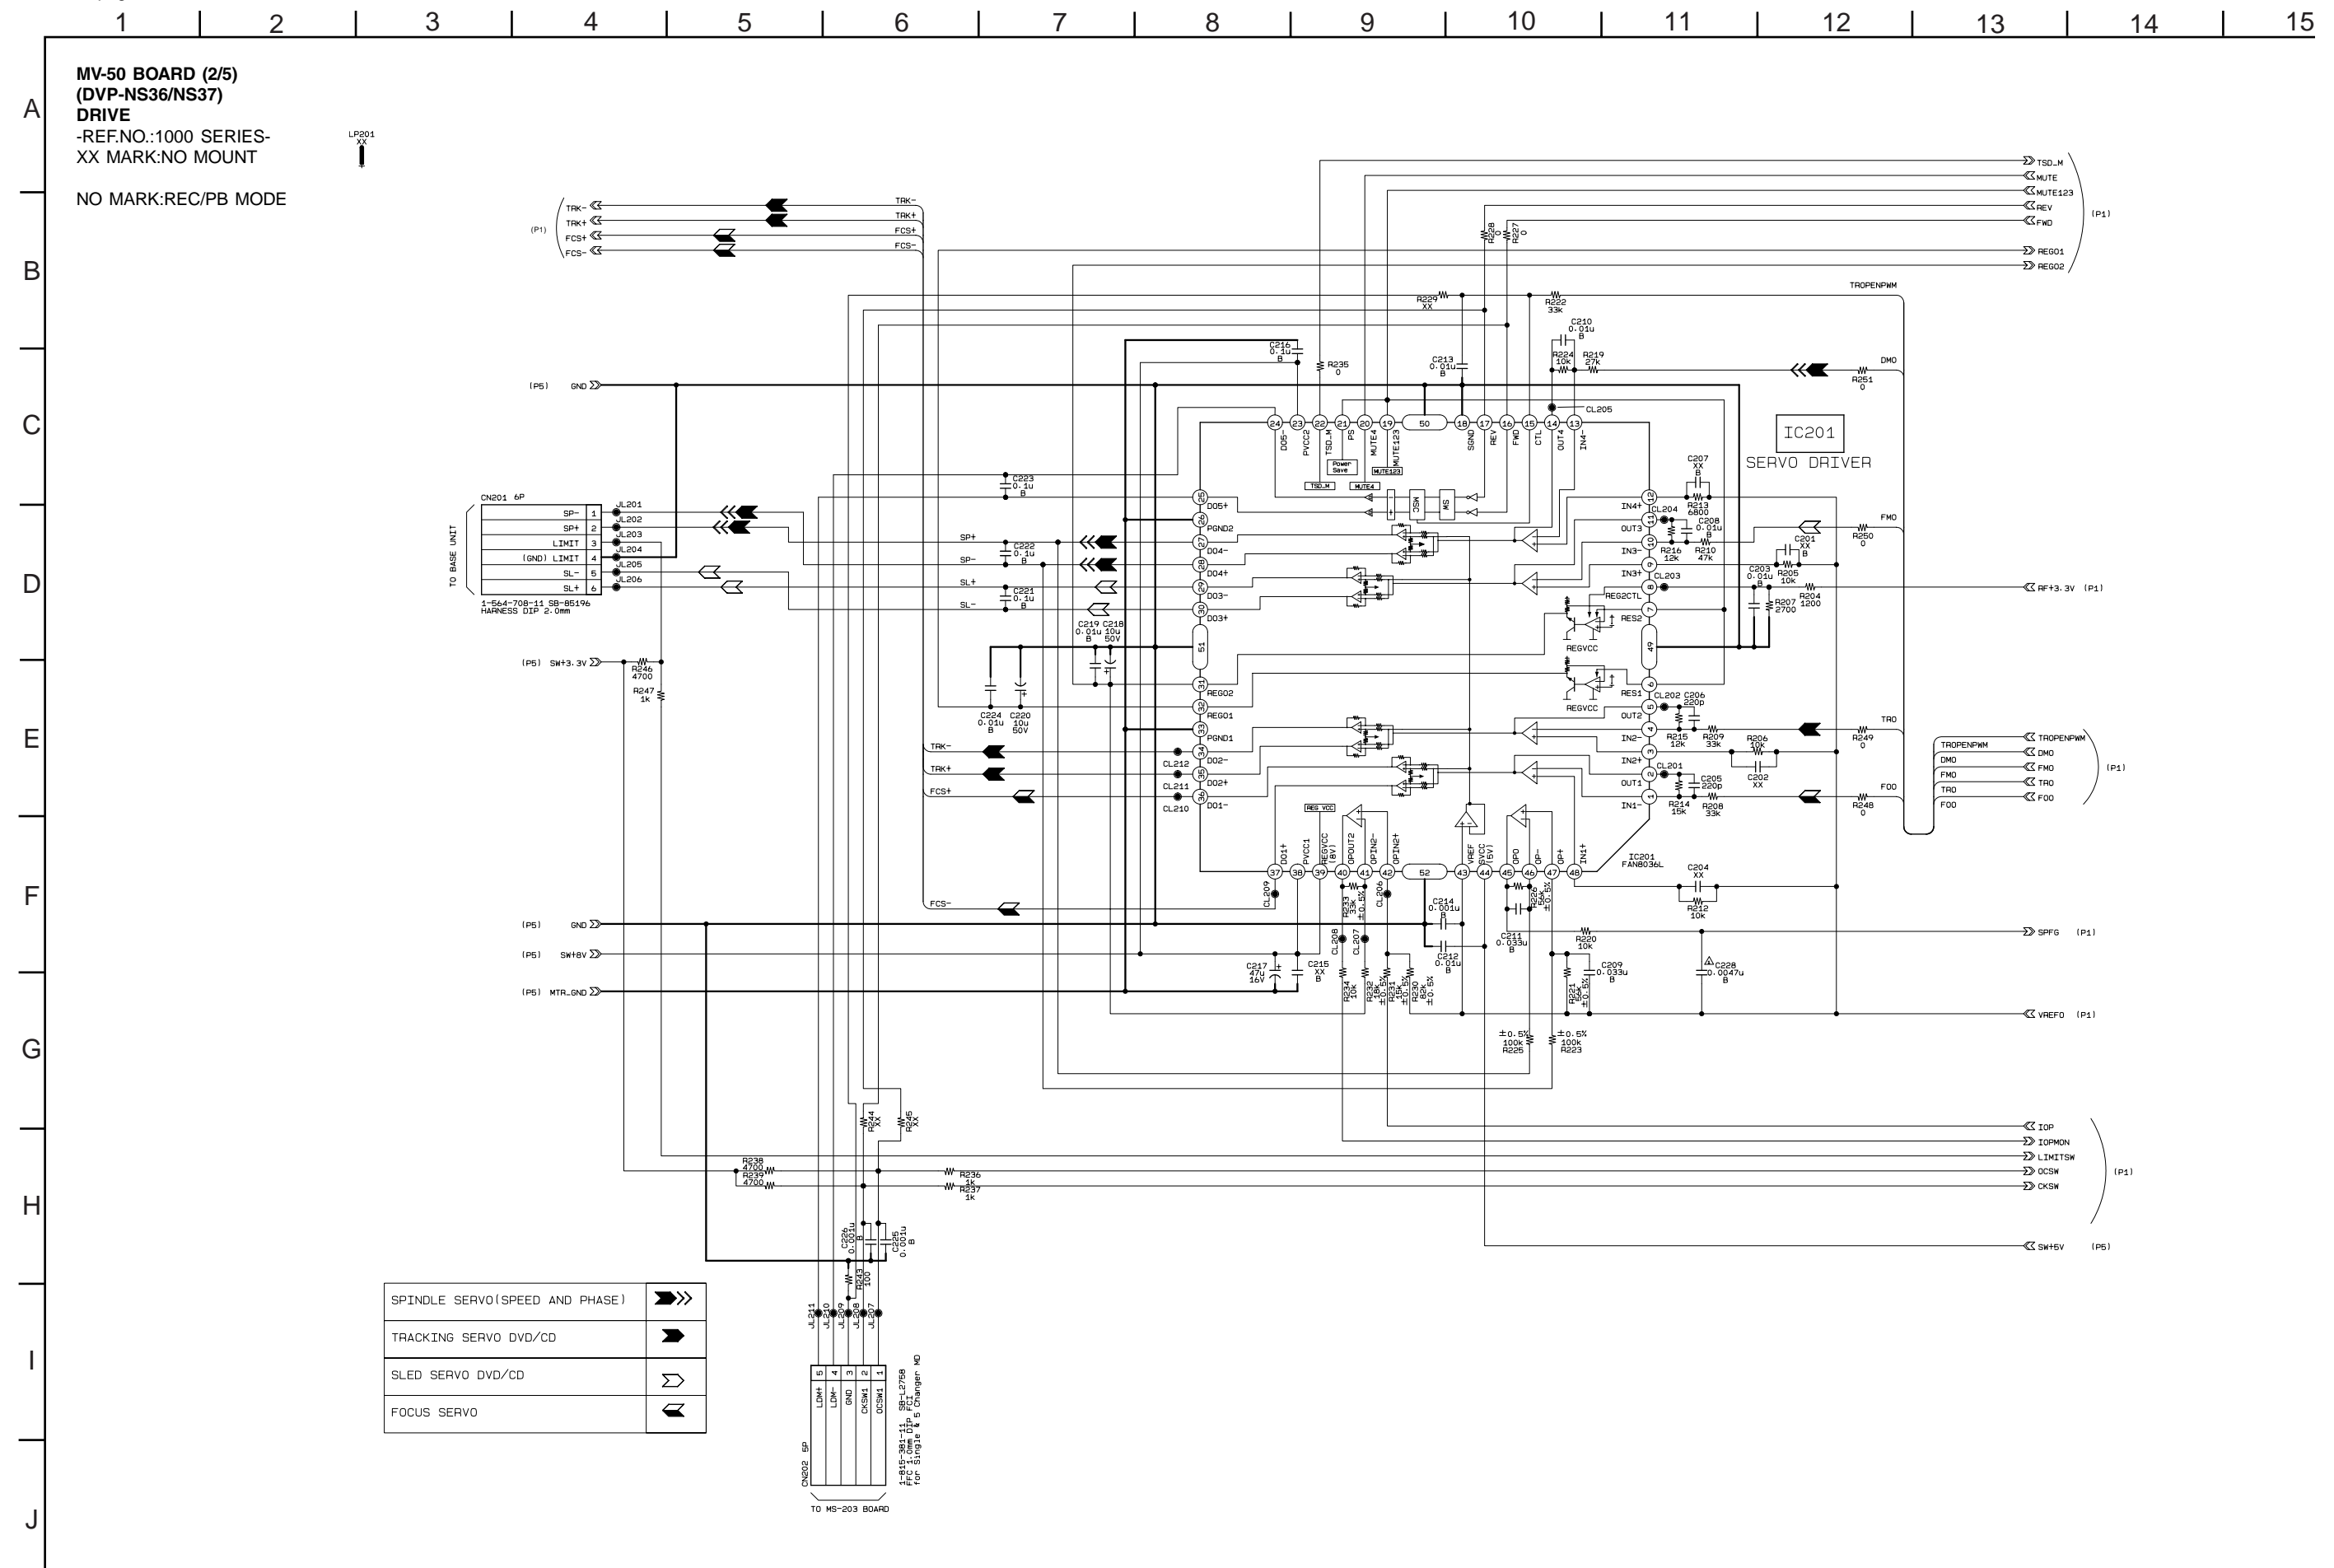


- Refer to page 4-17 for printed wiring board of MV-50 board.
- Refer to page 4-4 for waveform




For Schematic Diagram


- Refer to page 4-17 for printed wiring board of MV-50 board.
- Refer to page 4-4 for waveform

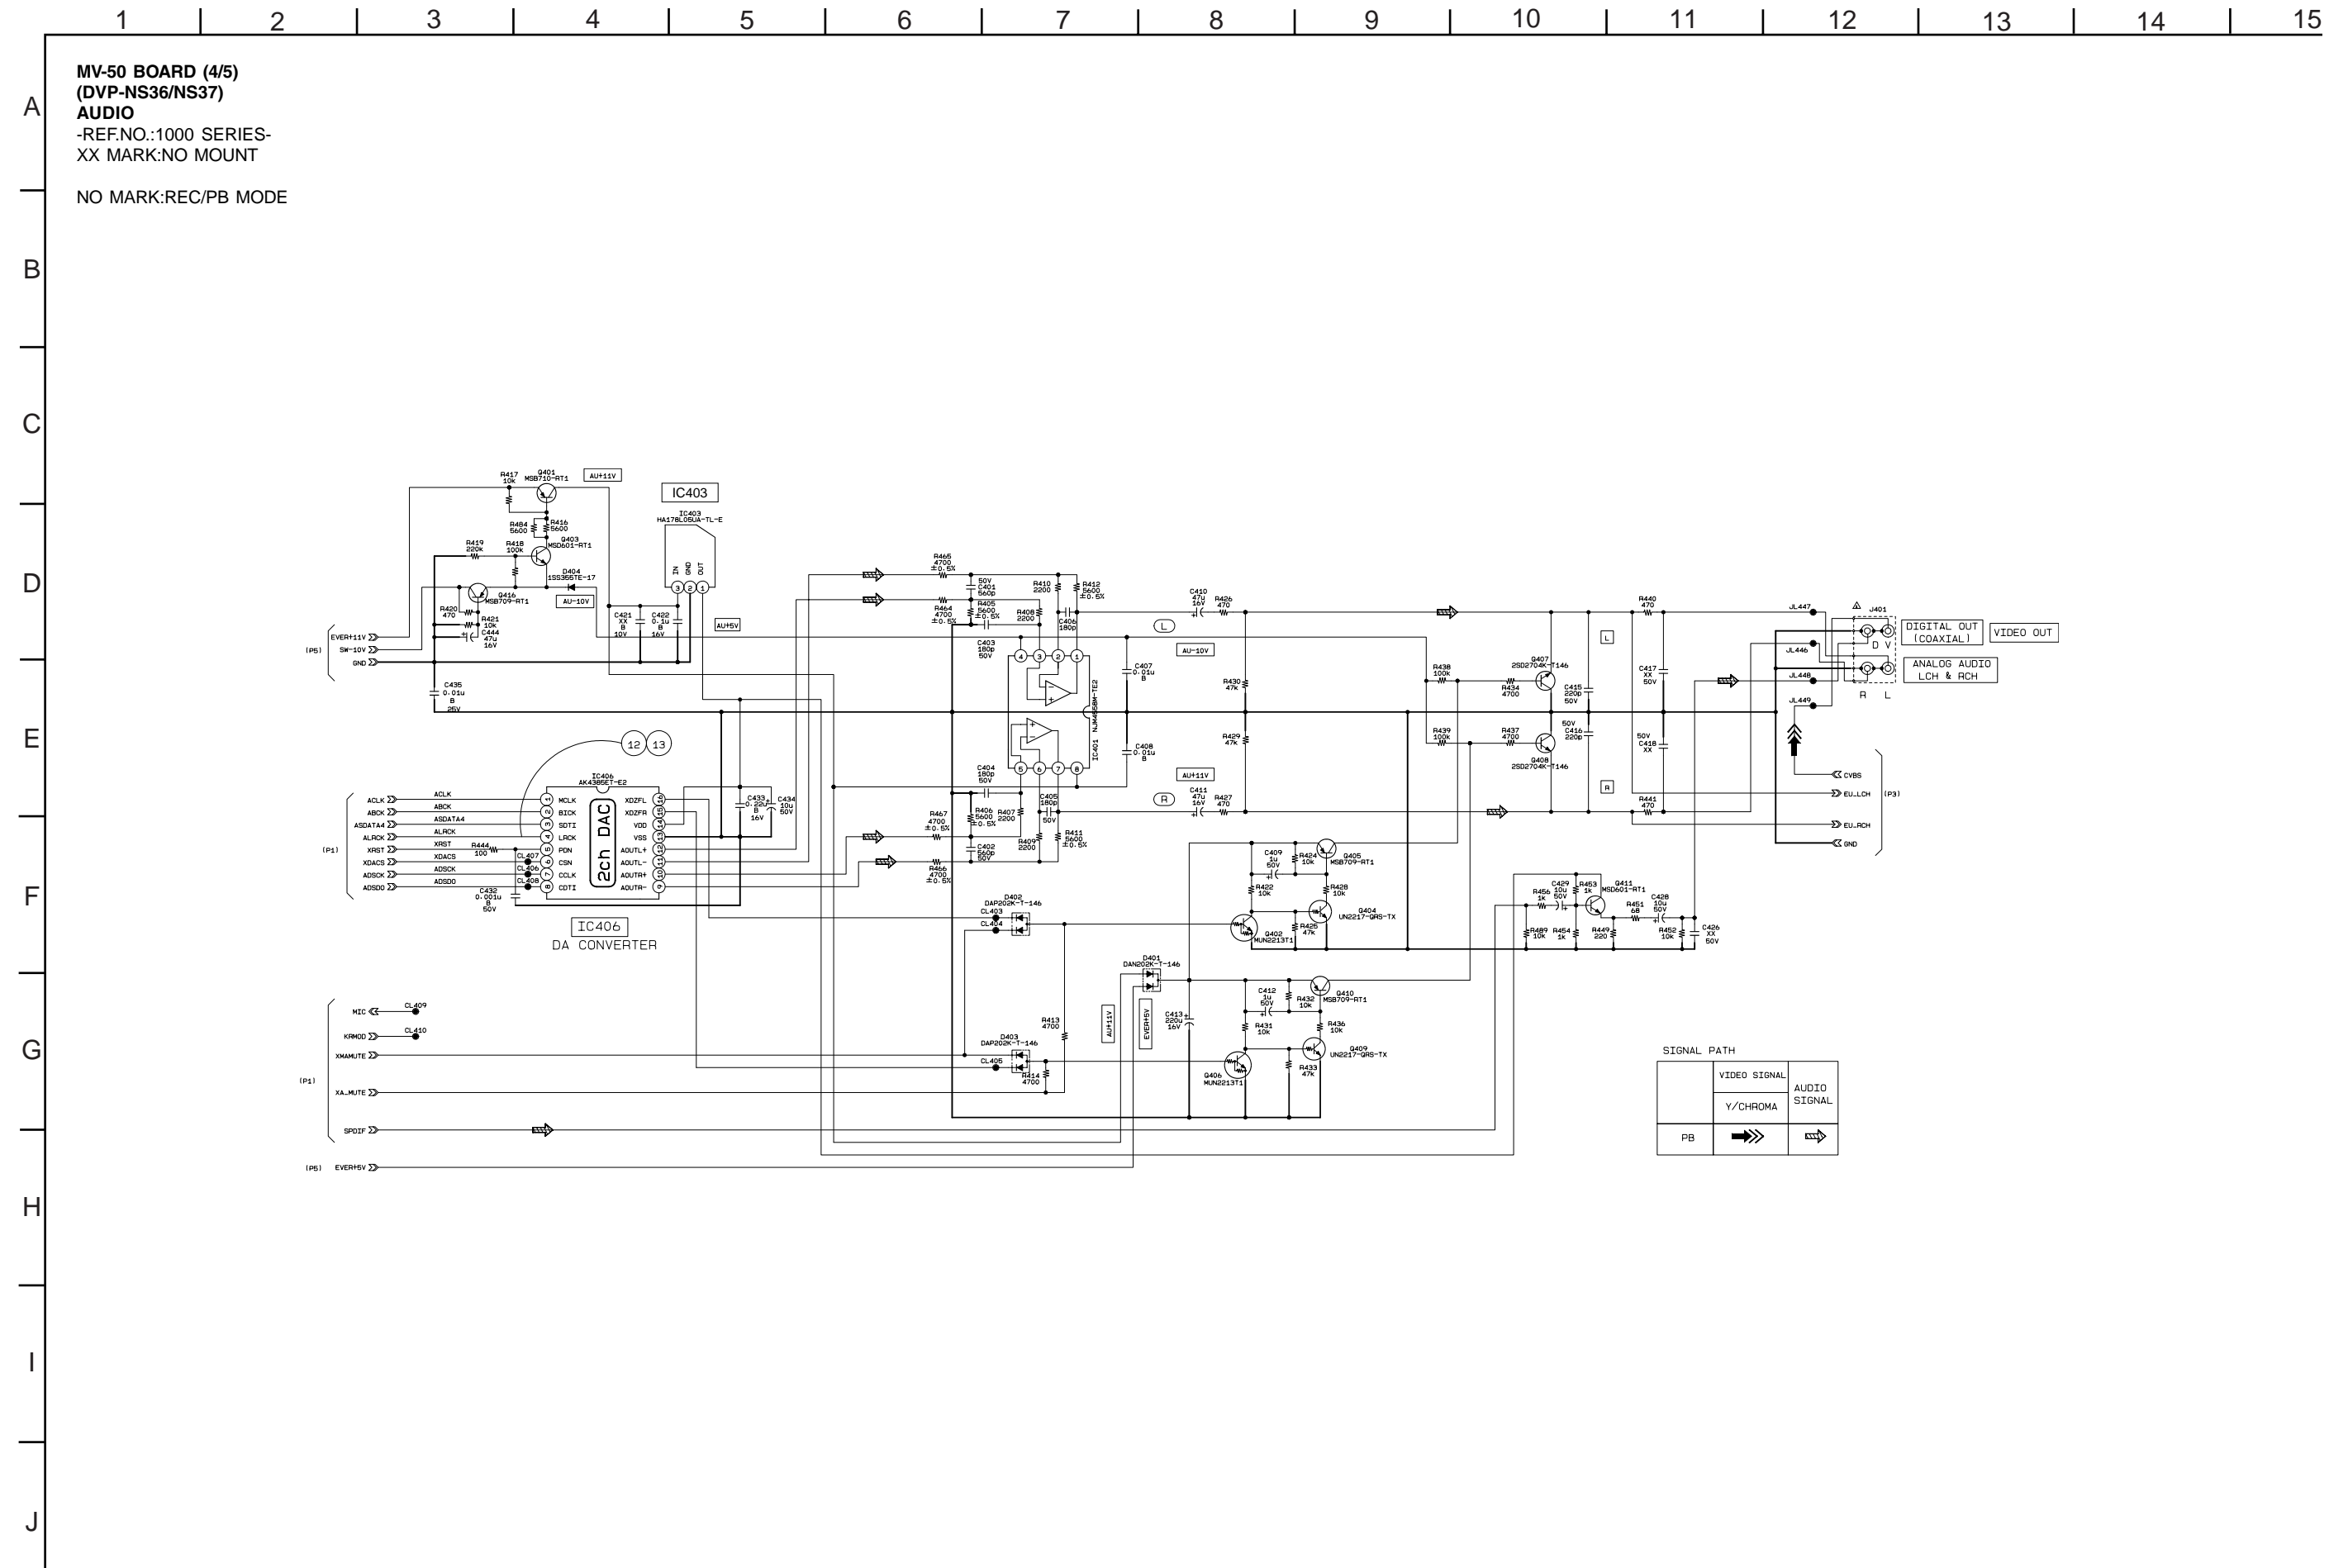


- Refer to page 4-17 for printed wiring board of MV-50 board.
- Refer to page 4-4 for waveform

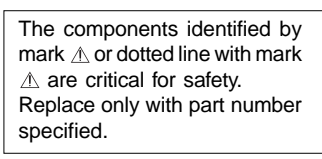


MV-51 (CPU, Servo-DSP, AVDEC, DRIVE, VIDEO, AUDIO, POWER) PRINTED WIRING BOARD

•  : Uses unleaded solder.

MV-51 BOARD (DVP-NS45P/55P/61P/63P) SIDE A

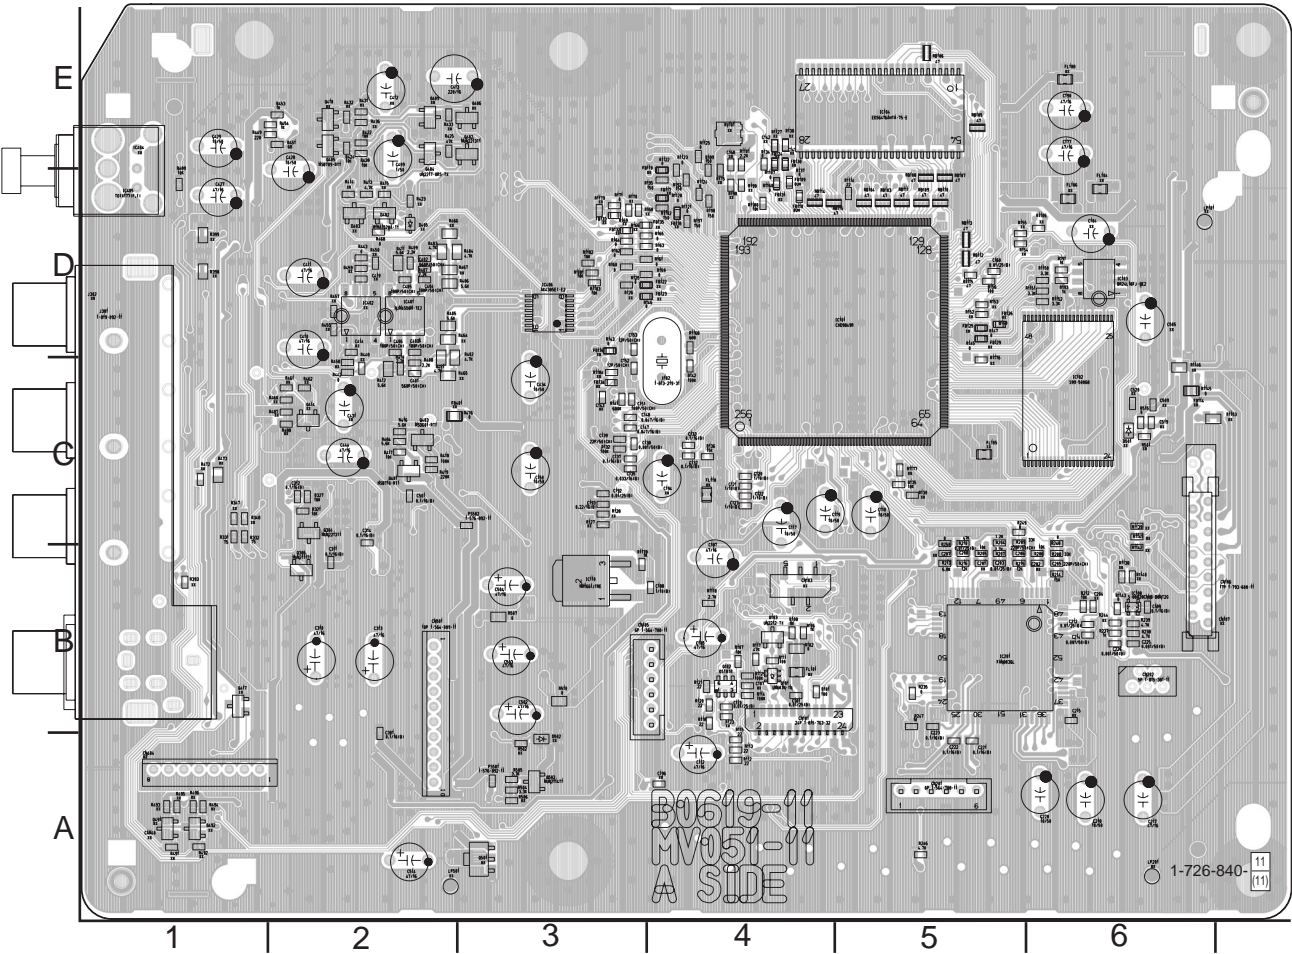


MV-51 BOARD (DVP-NS45P/55P/61P/63P) SIDE B

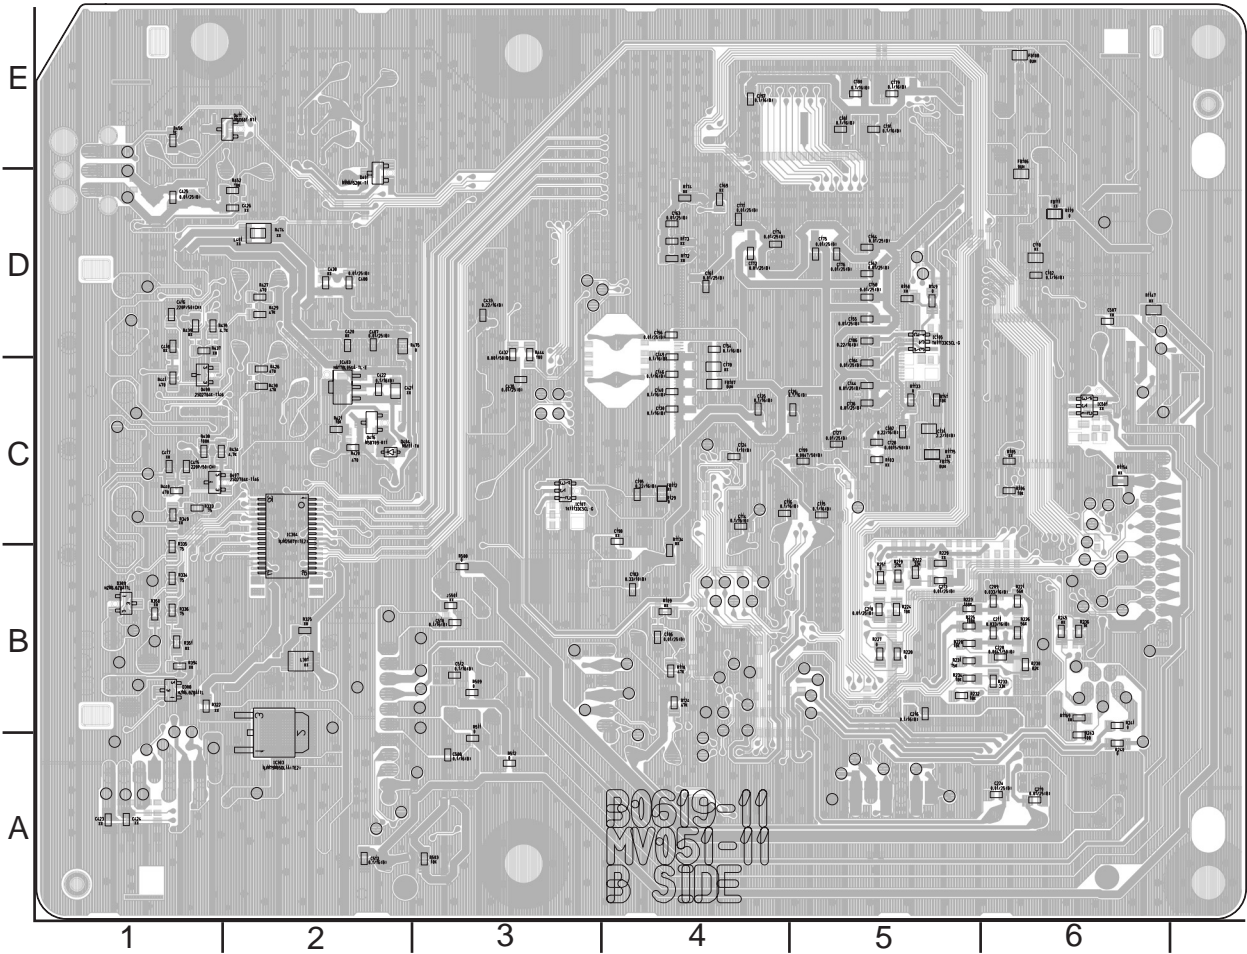

MV-51 BOARD		SIDE B	
SIDE A			
IC101	D-5	IC105	D-5
IC102	C-6	IC107	C-6
IC103	D-6	IC303	D-6
IC104	E-5	IC304	E-5
IC108	B-6	IC403	B-6
IC201	B-5	IC501	B-5
IC110	B-3		
IC401	D-2	D308	B-1
IC405	D-1	D309	B-1
		D401	D-2
D402	D-2	D404	C-2
Q101	B-4	Q407	C-2
Q102	B-4	Q408	C-1
Q103	B-4	Q411	E-2
Q304	C-2	Q416	C-2
Q305	B-2		
Q502	A-3		

For printed wiring board
There are a few cases that the part printed on this diagram isn't mounted in this model.

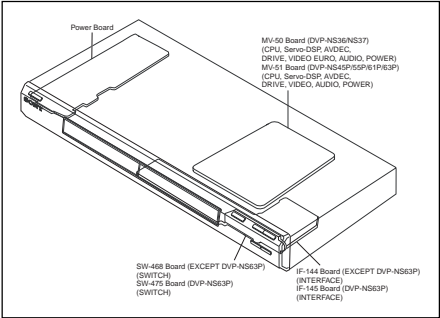


- Refer to page 4-29 for printed wiring board of MV-51 board.
- Refer to page 4-5 for waveform




For Schematic Diagram

- Refer to page 4-29 for printed wiring board of MV-51 board.
- Refer to page 4-5 for waveform

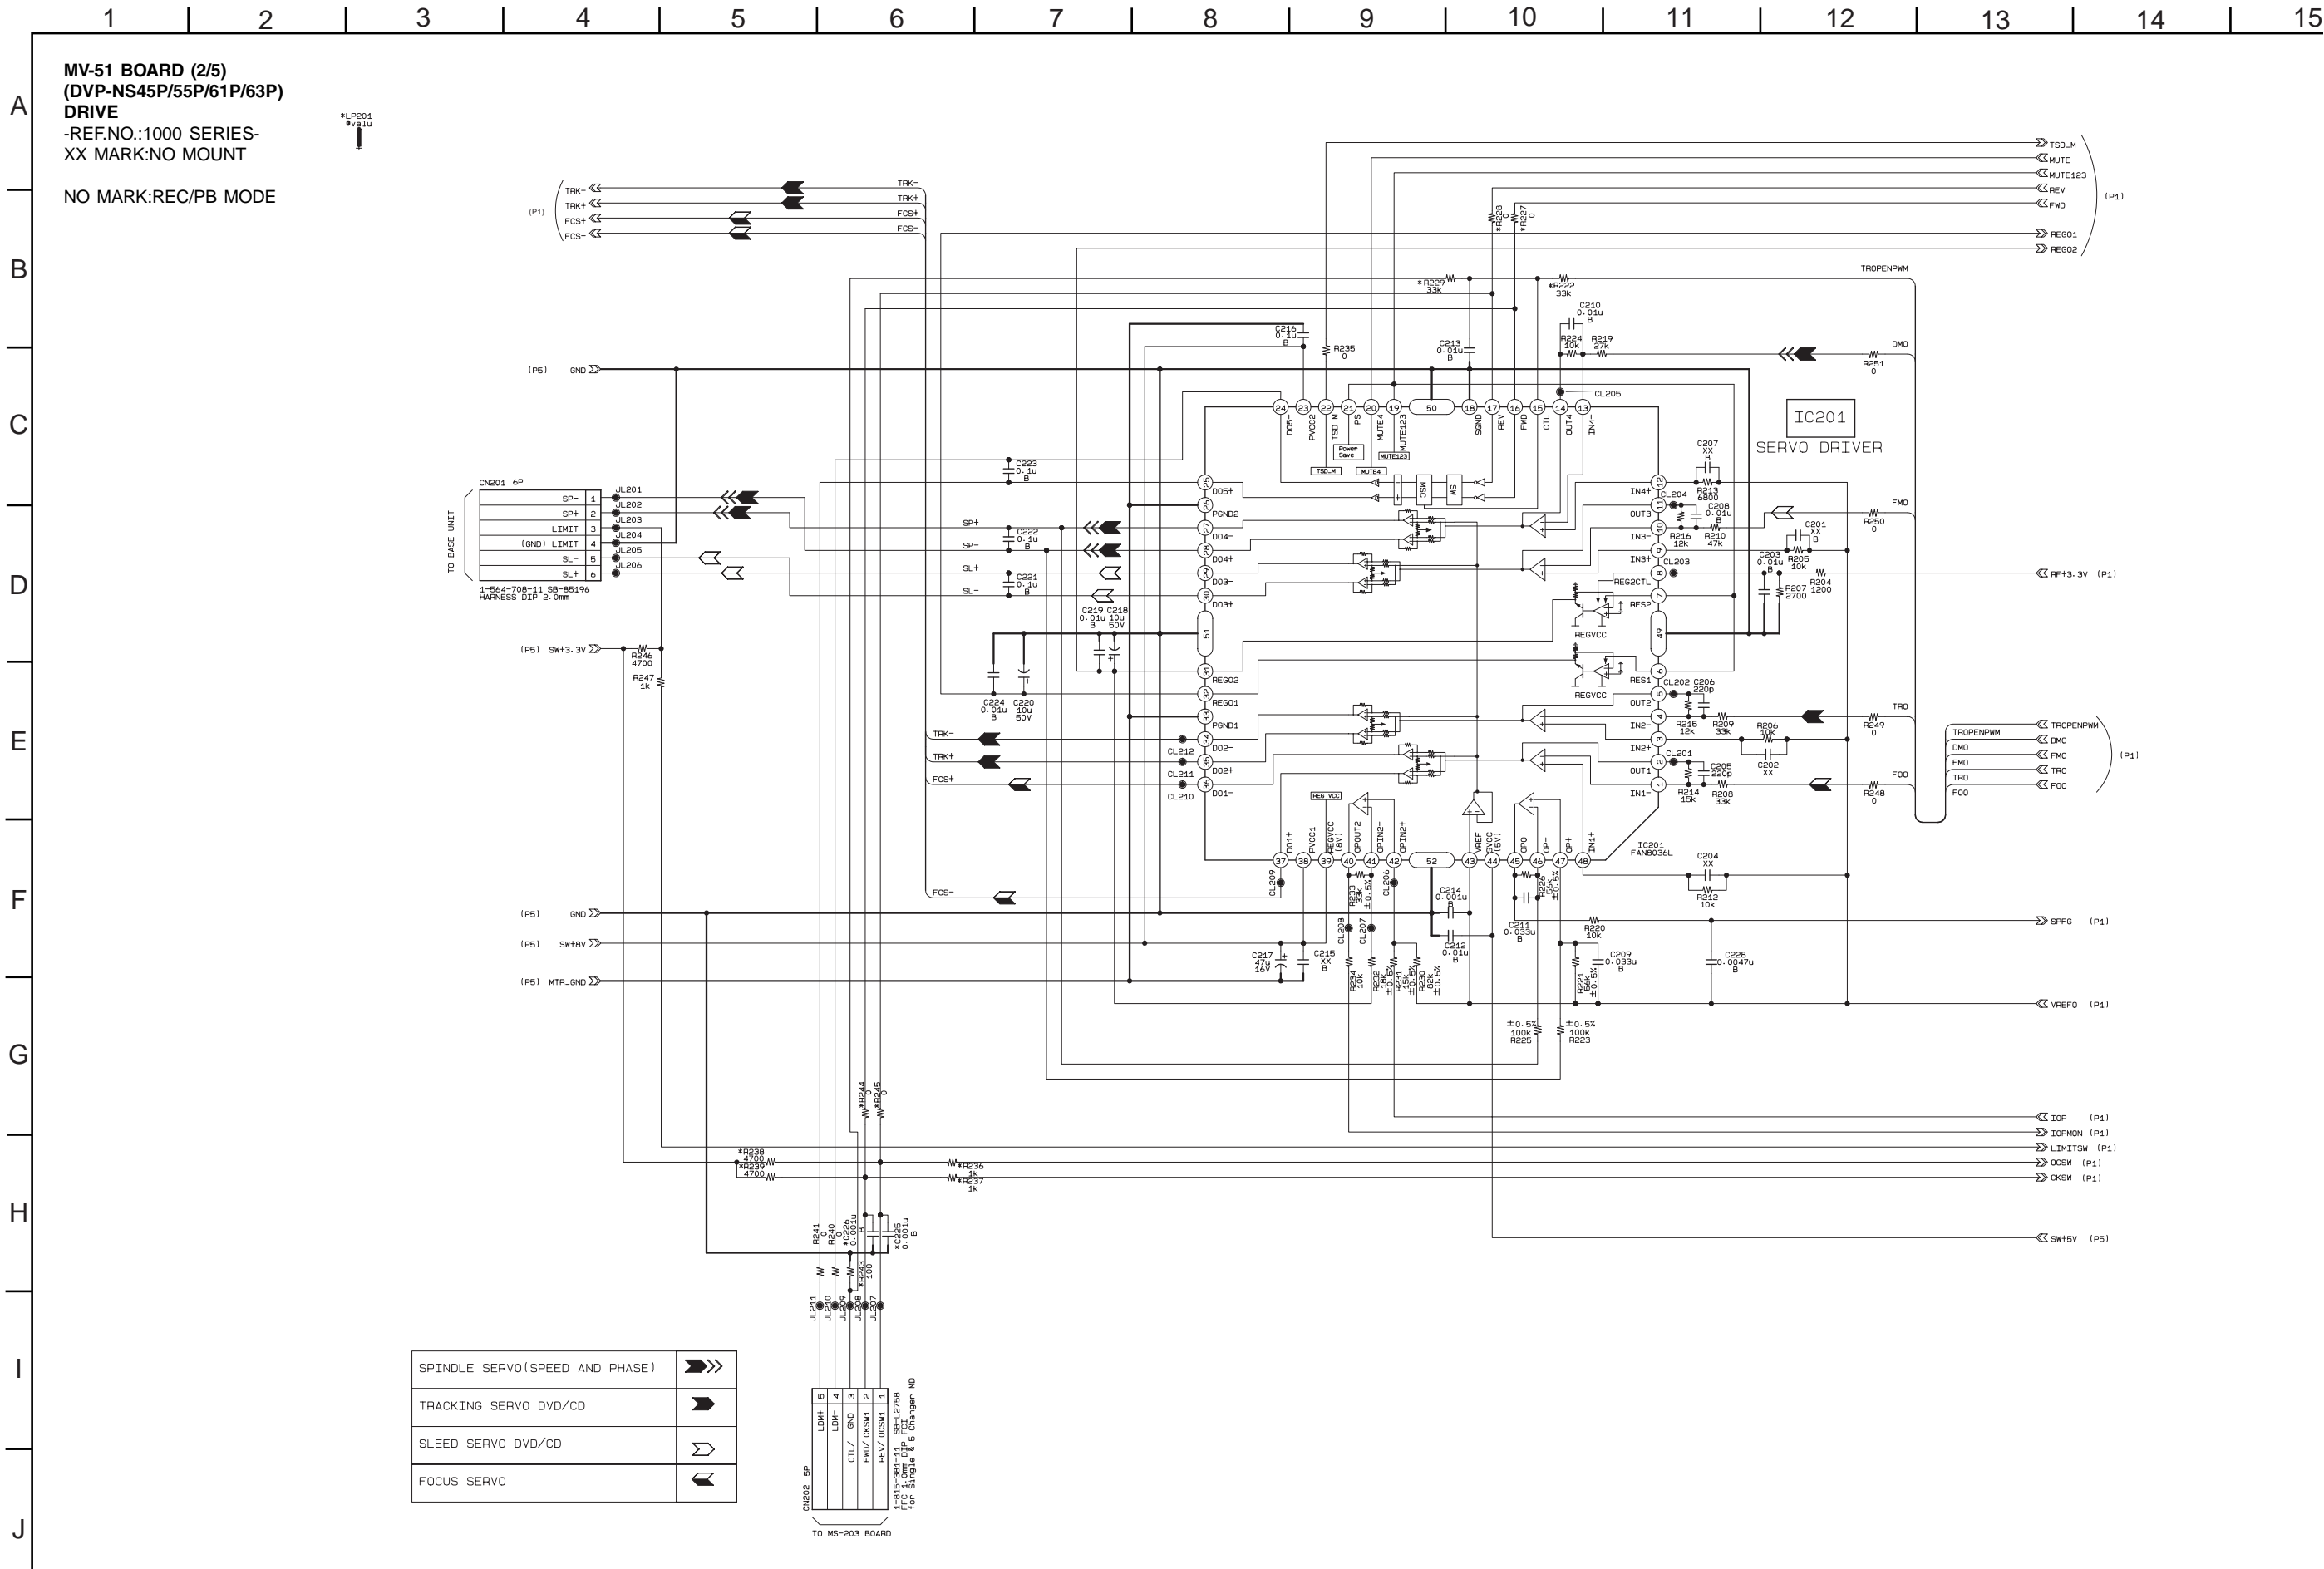


For Schematic Diagram

- Refer to page 4-29 for printed wiring board of MV-51 board.
- Refer to page 4-5 for waveform

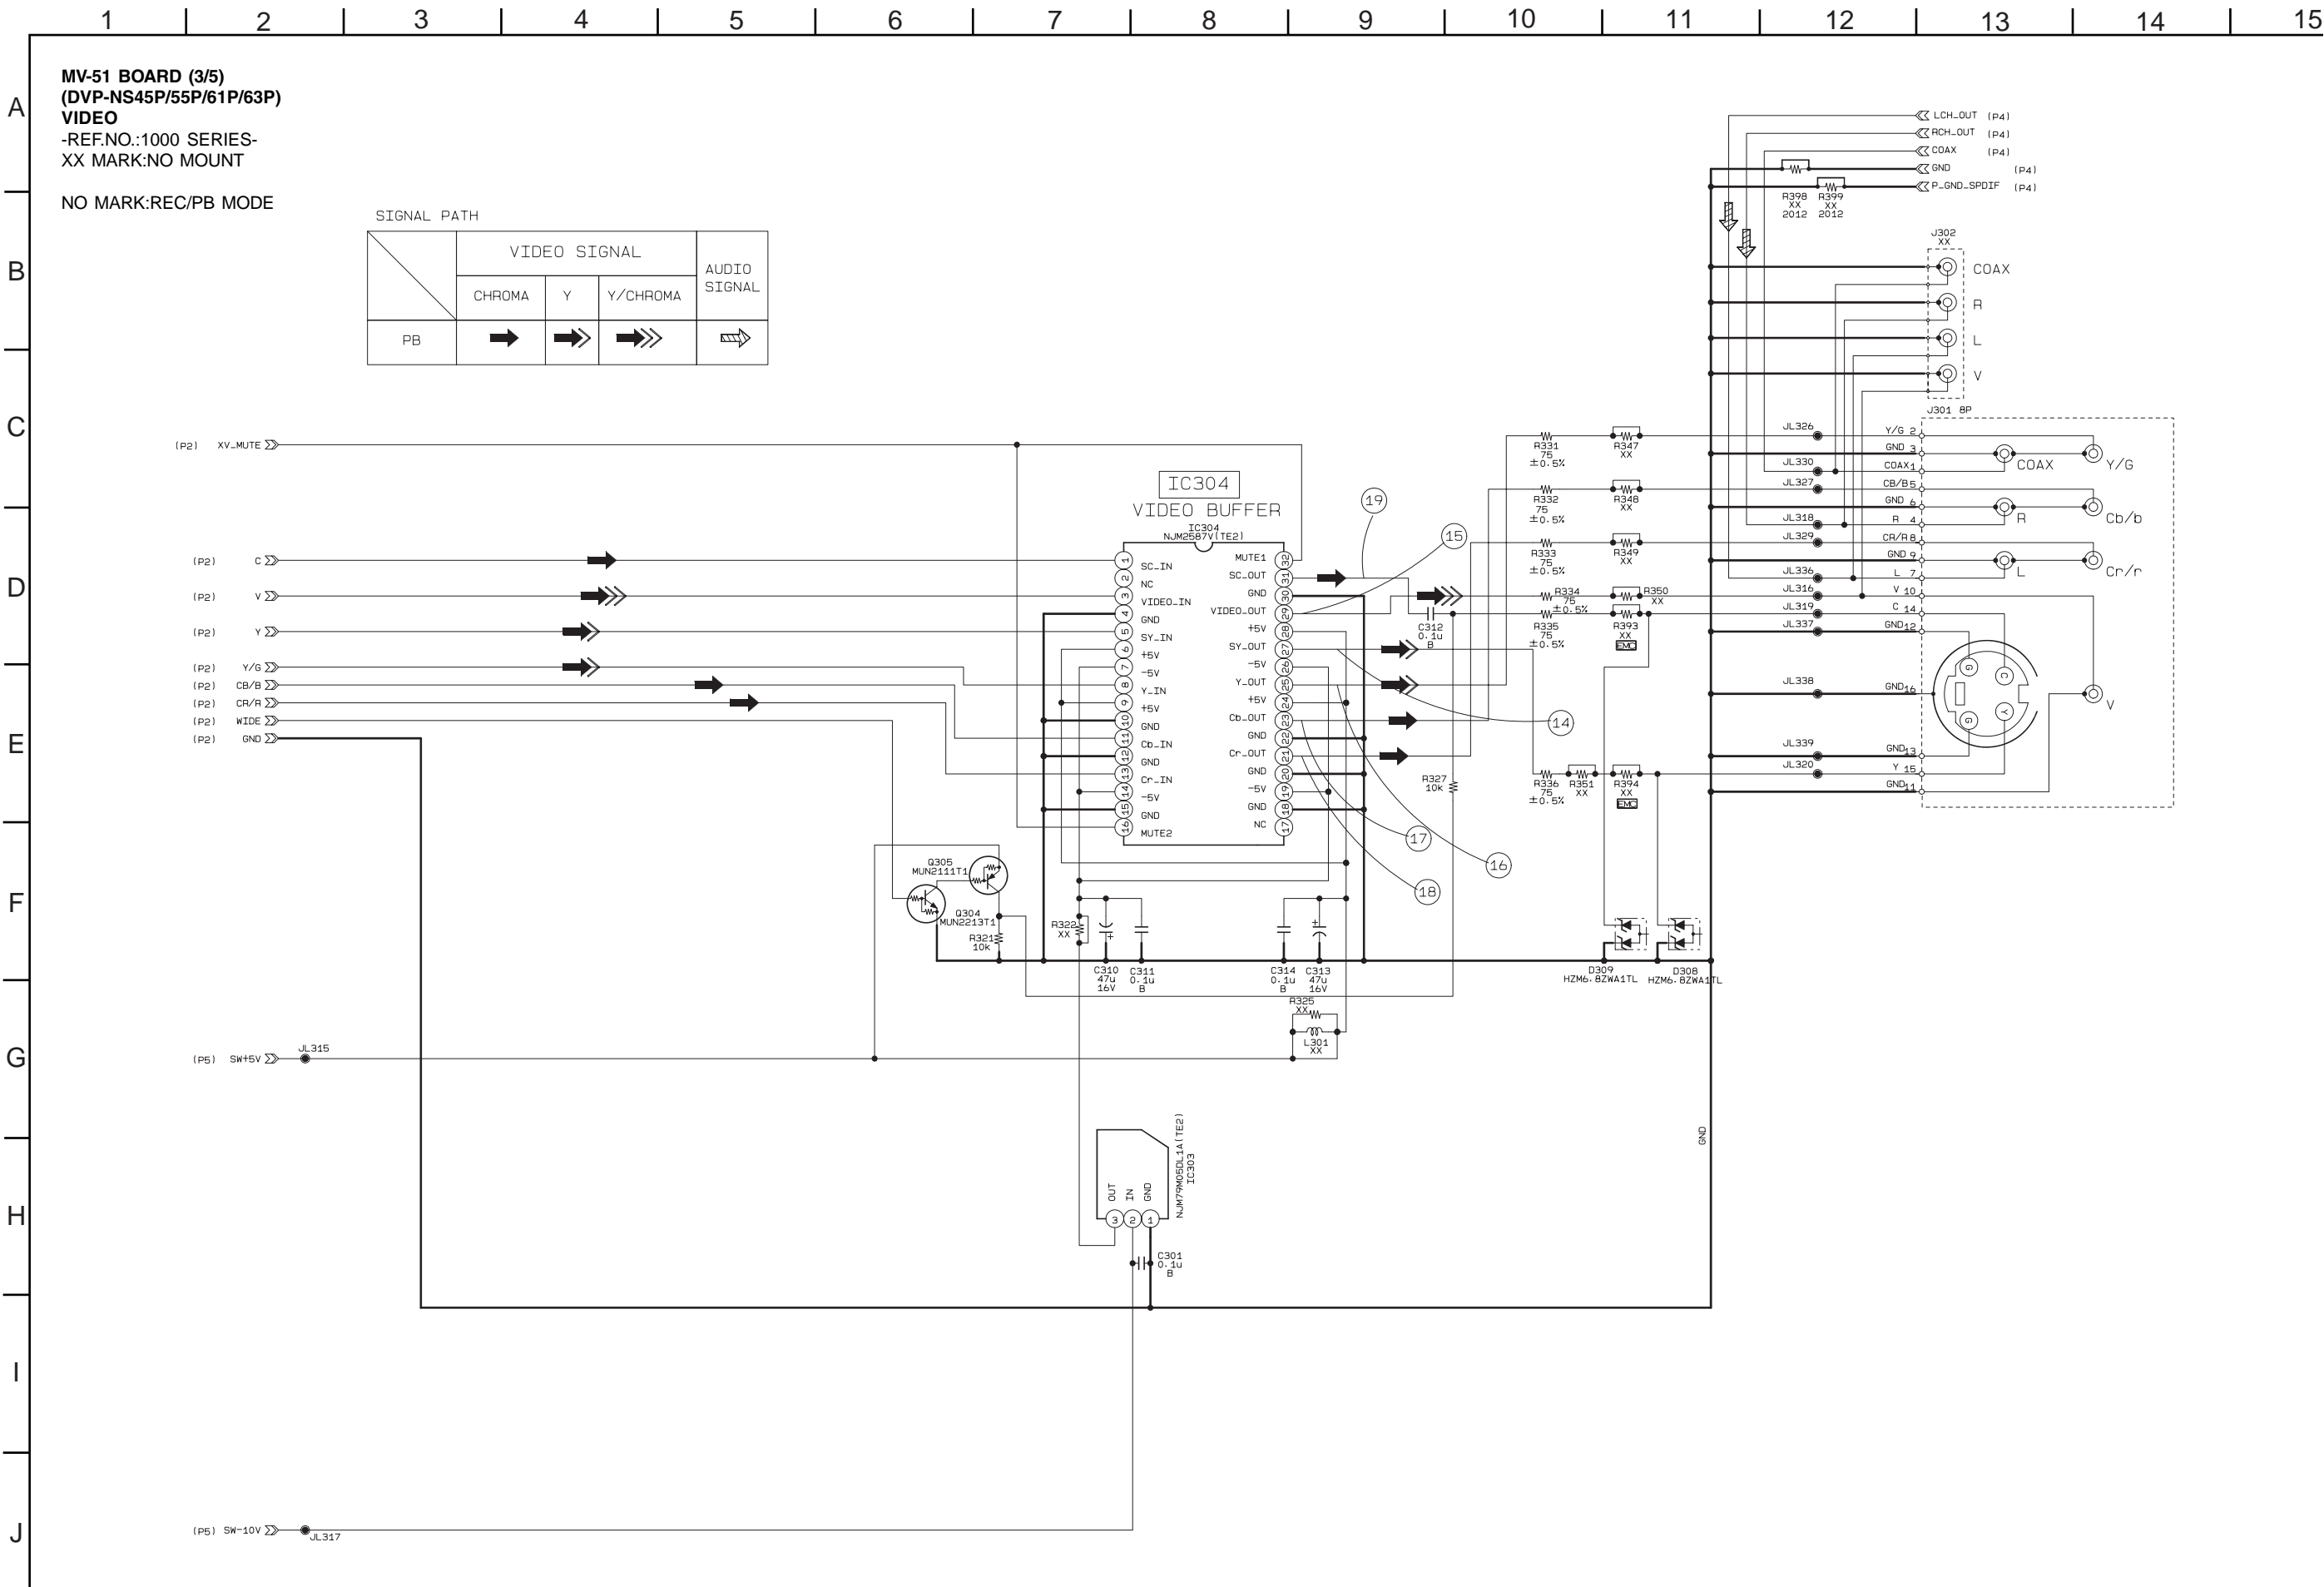


For Schematic Diagram

- Refer to page 4-29 for printed wiring board of MV-51 board.
- Refer to page 4-5 for waveform

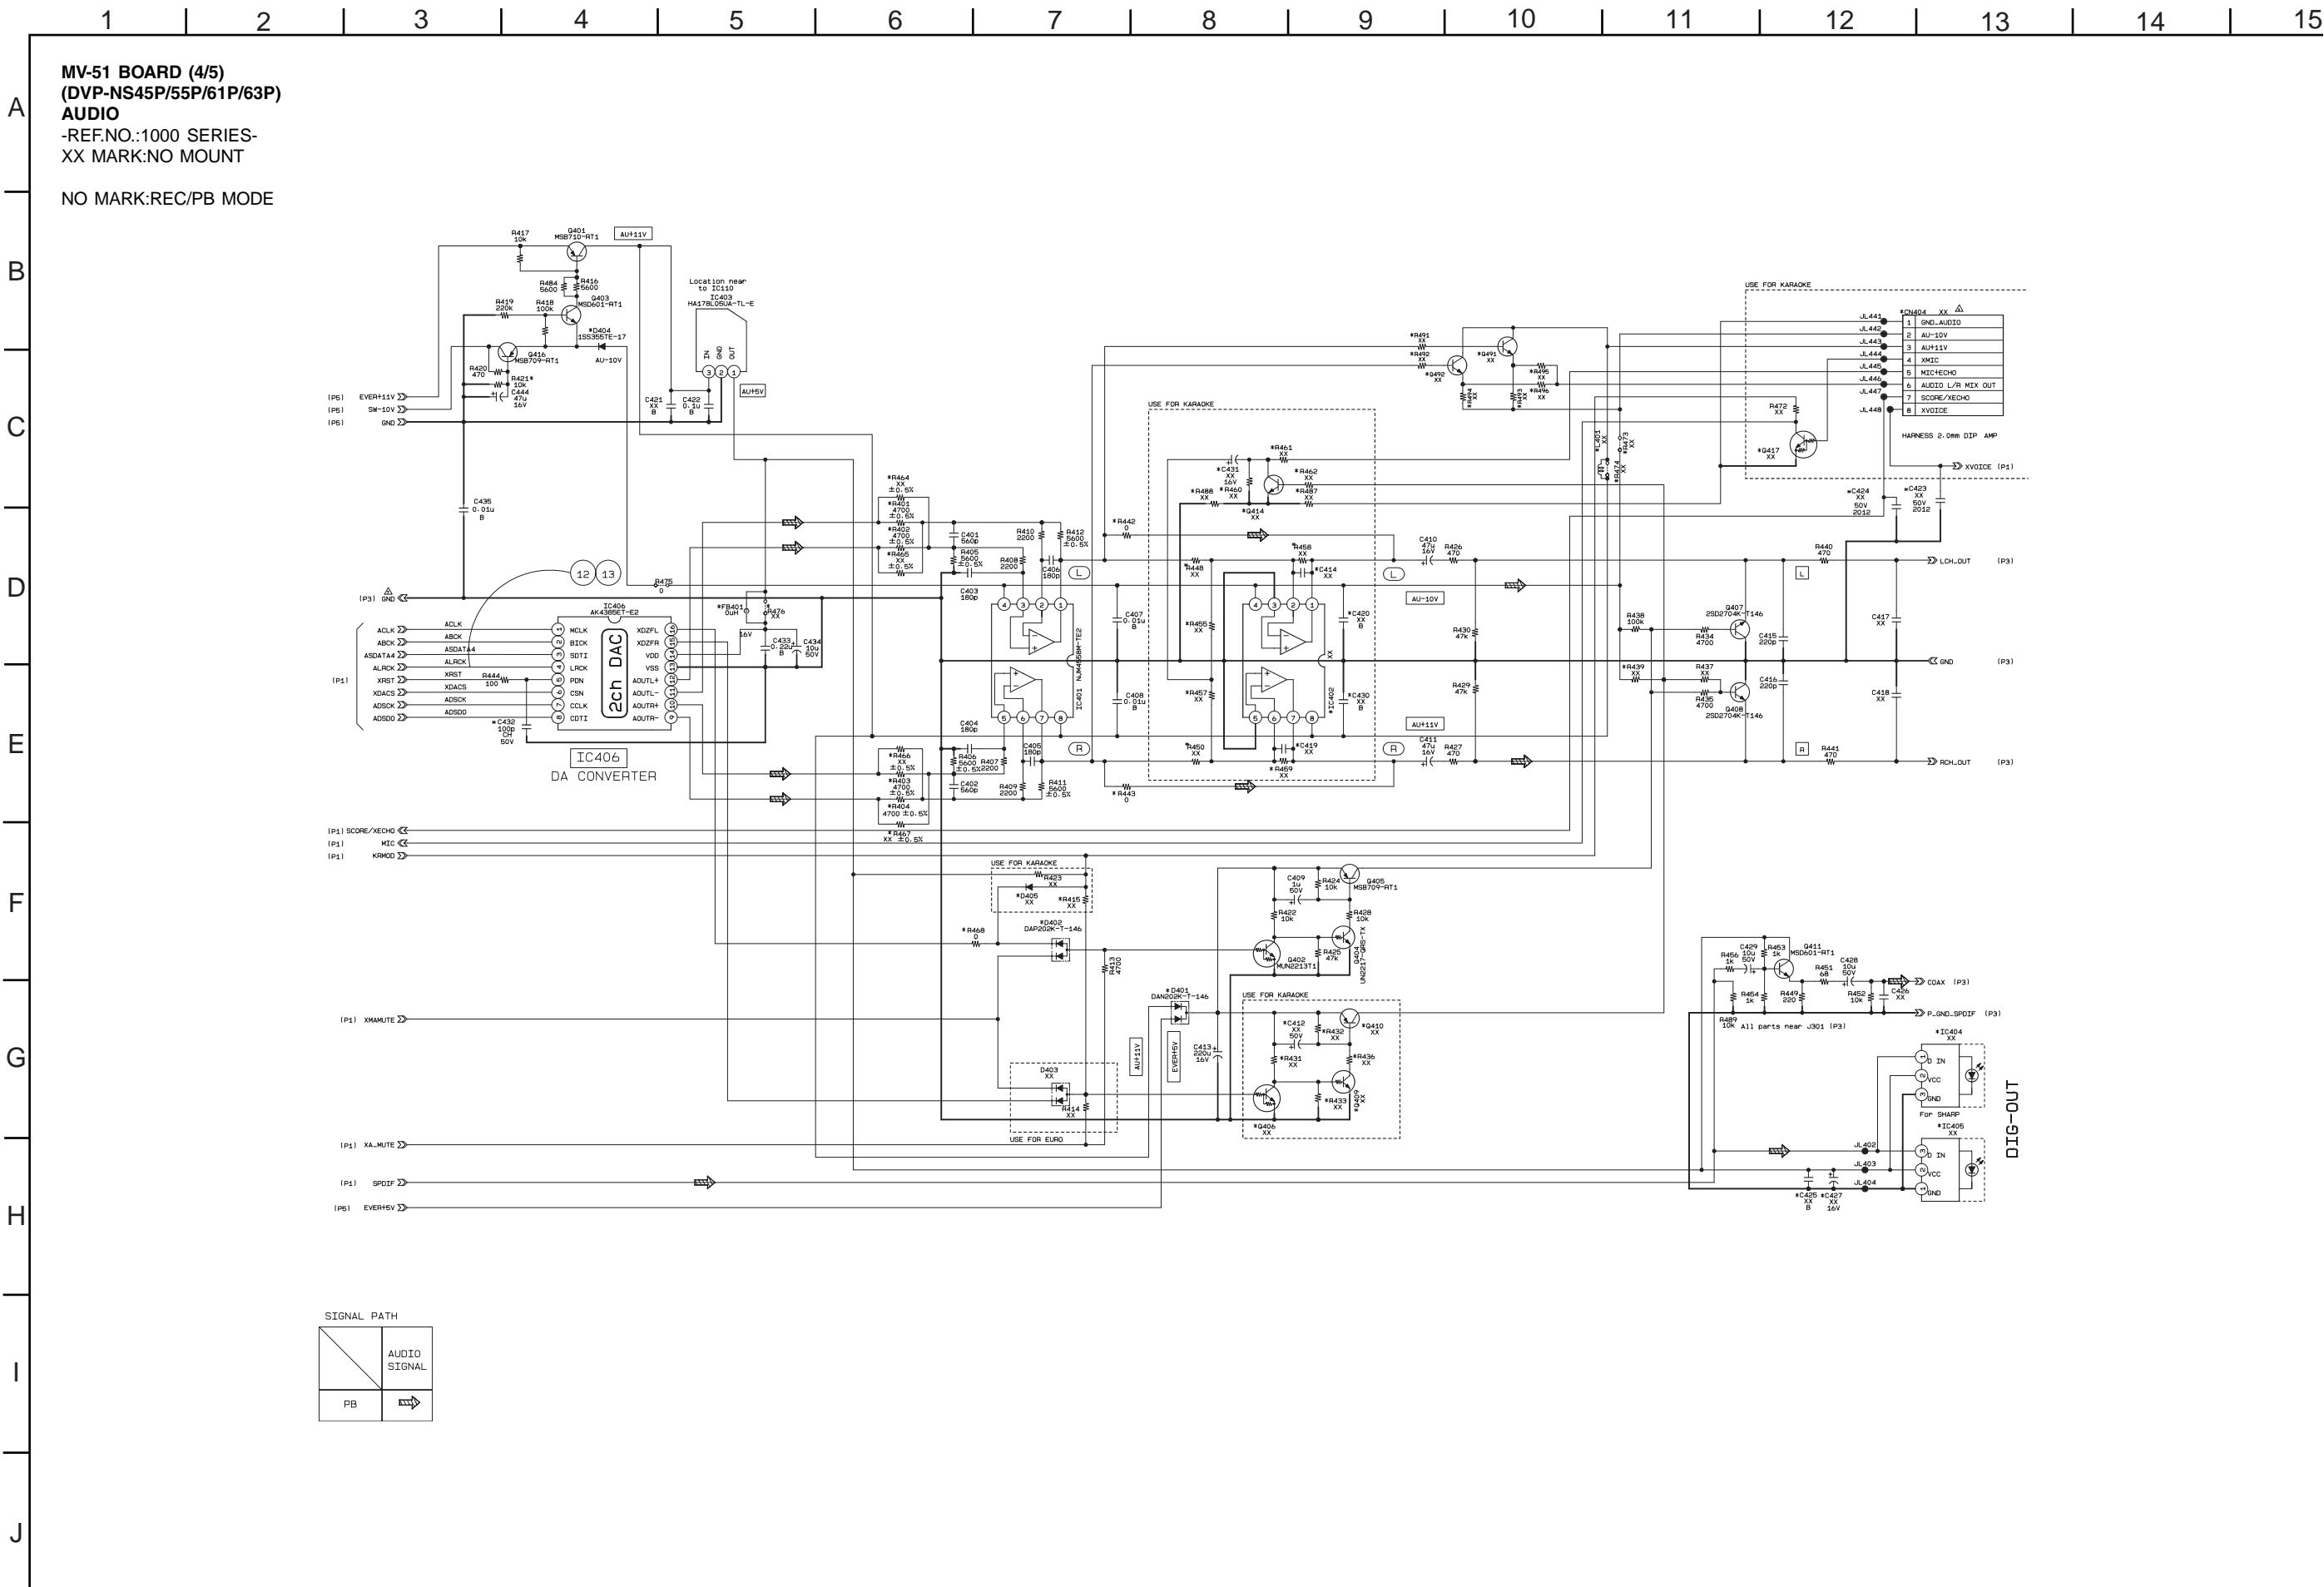



- Refer to page 4-29 for printed wiring board of MV-51 board.
- Refer to page 4-5 for waveform

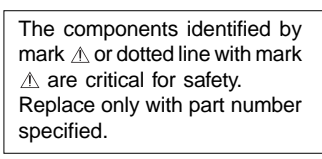

SW-468 (SWITCH) PRINTED WIRING BOARD


SW-468 BOARD (EXCEPT DVP-NS63P)

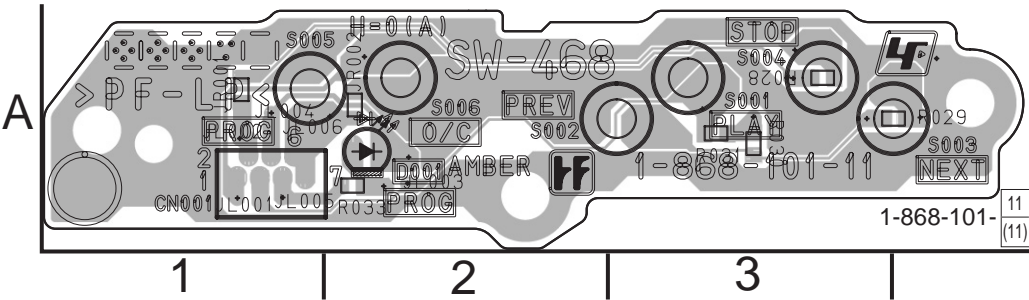

-  : Uses unleaded solder.

For printed wiring board

There are a few cases that the part printed on this diagram isn't mounted in this model.

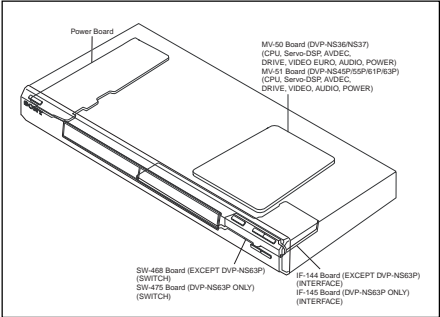


SW-468 BOARD

D001 A-2


For Schematic Diagram

- Refer to page 4-41 for printed wiring board of SW-468 board.

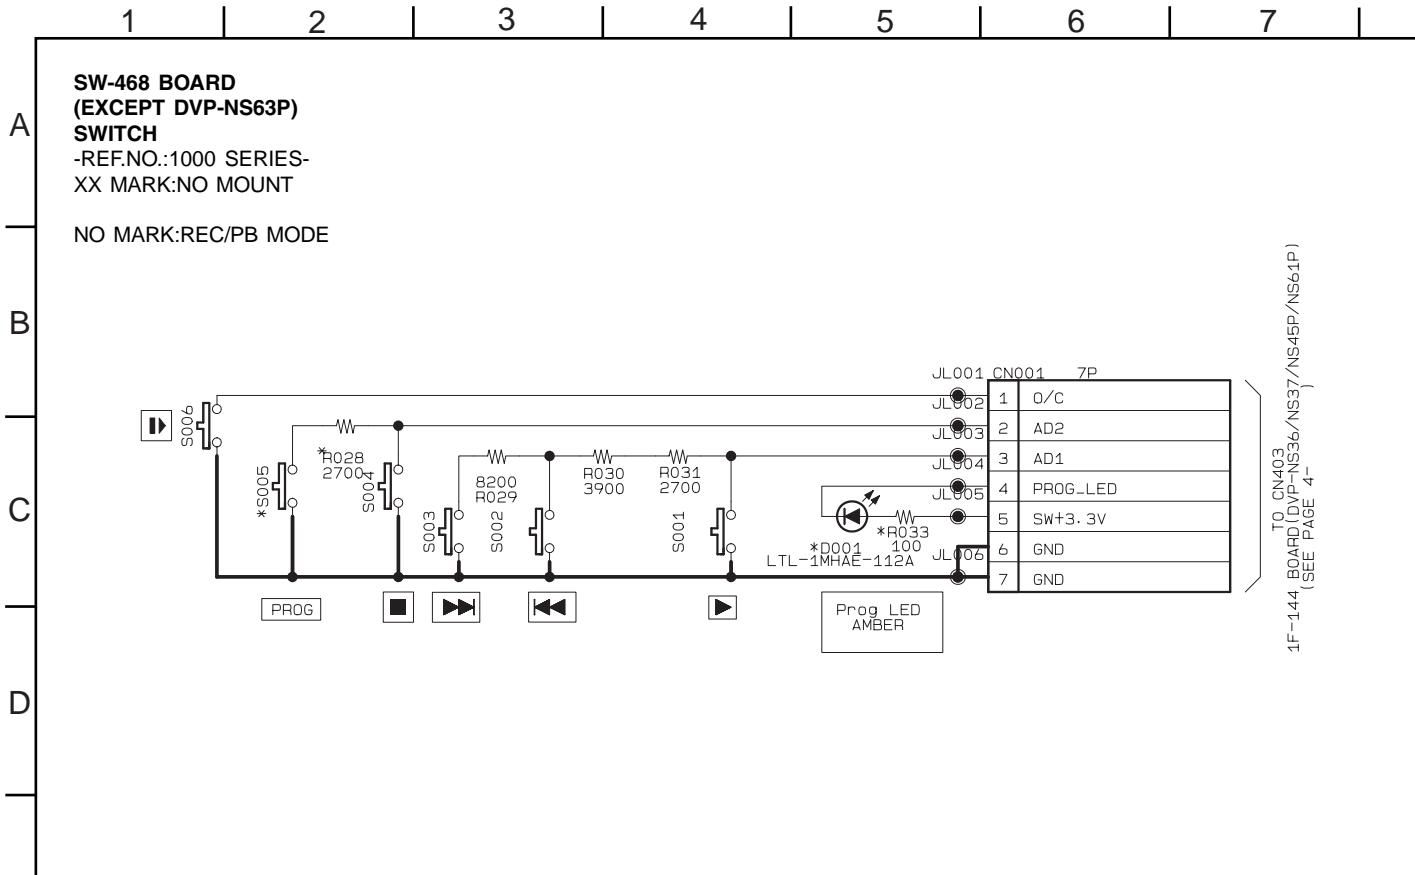

SW-475 (SWITCH) PRINTED WIRING BOARD


SW-475 BOARD (DVP-NS63P)

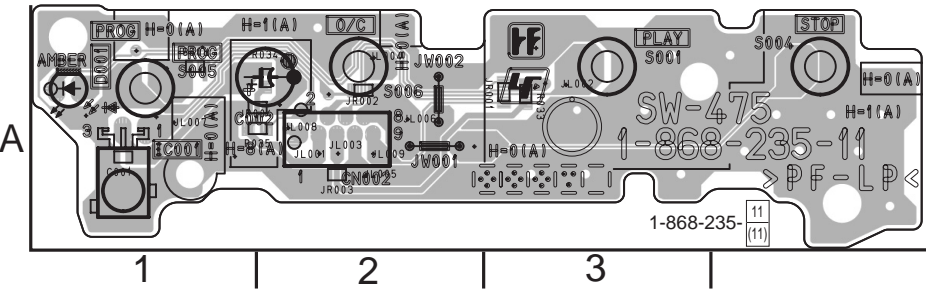

- : Uses unleaded solder.


For printed wiring board

There are a few cases that the part printed on this diagram isn't mounted in this model.

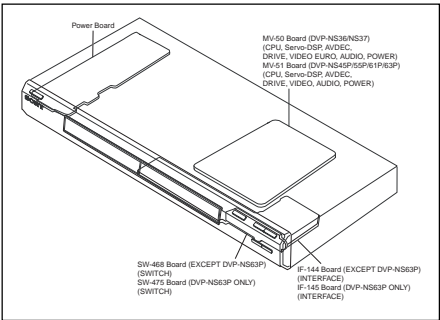

For Schematic Diagram

- Refer to page 4-43 for printed wiring board of SW-475 board.

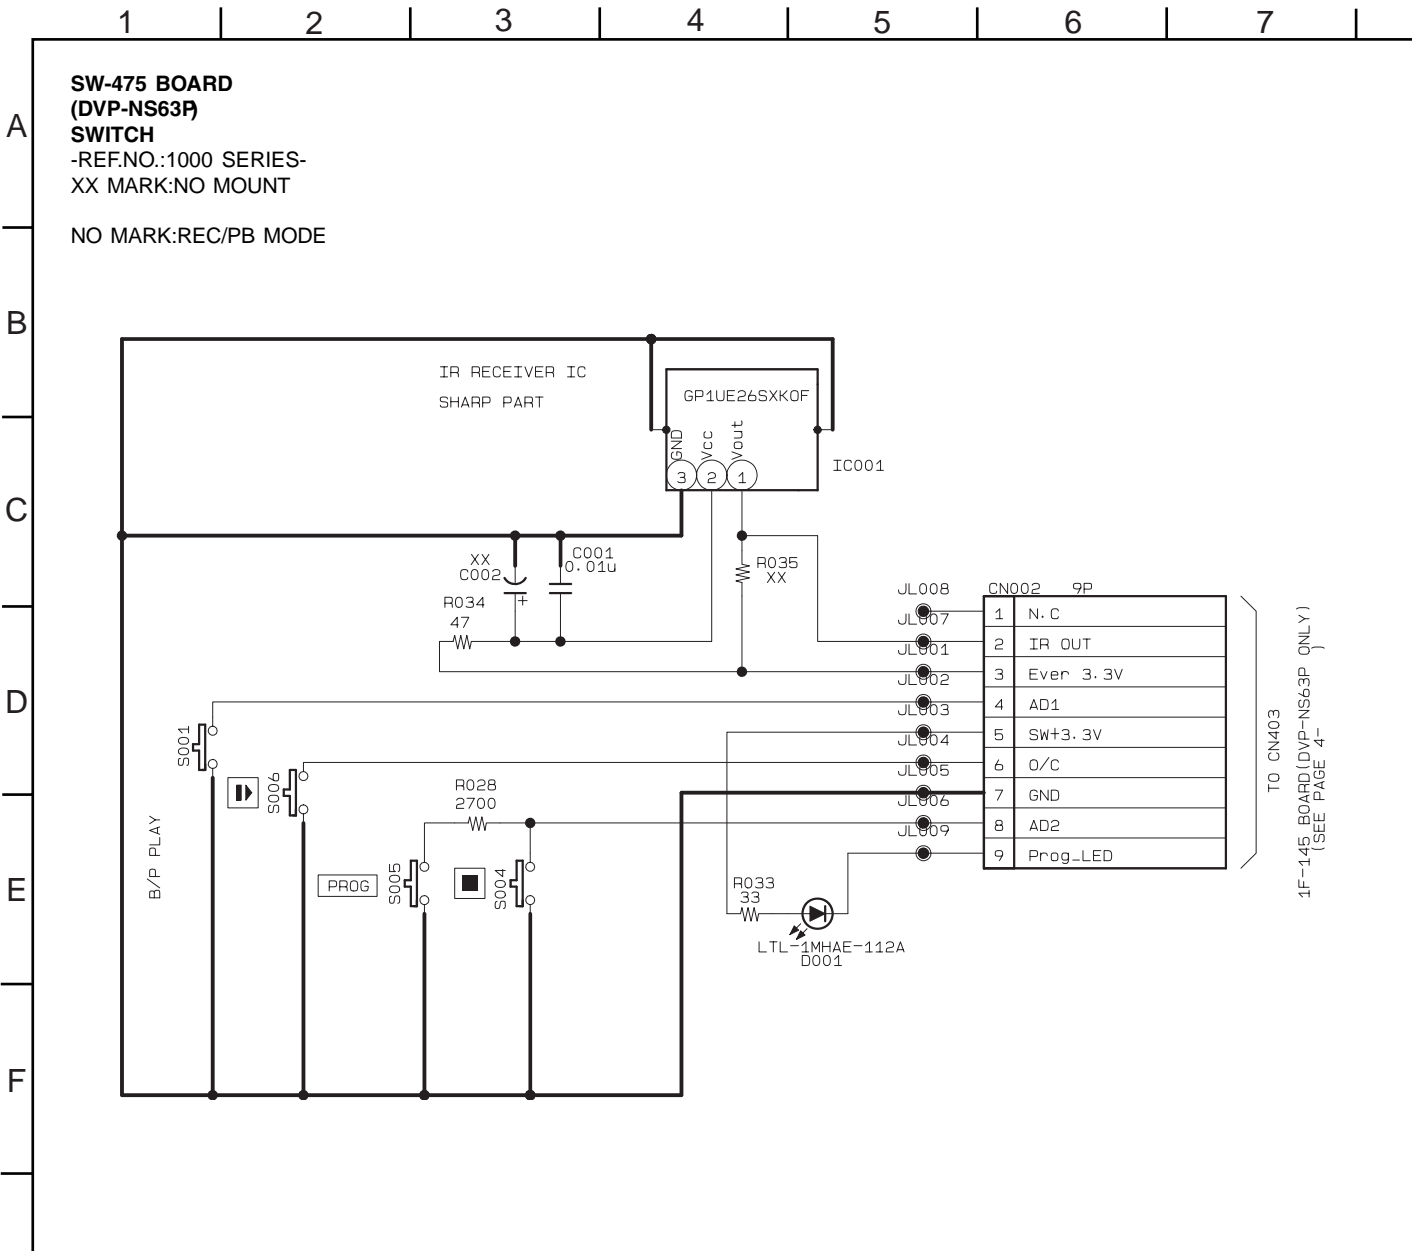


SW-475 BOARD

IC001 A-1


D001 A-1


POWER BLOCK (SRV1872WW) PRINTED WIRING BOARD

POWER BOARD (SRV1872WW) (SIDE A)
(DVP-NS36/NS37/NS55P:PX/NS61P/NS63P)

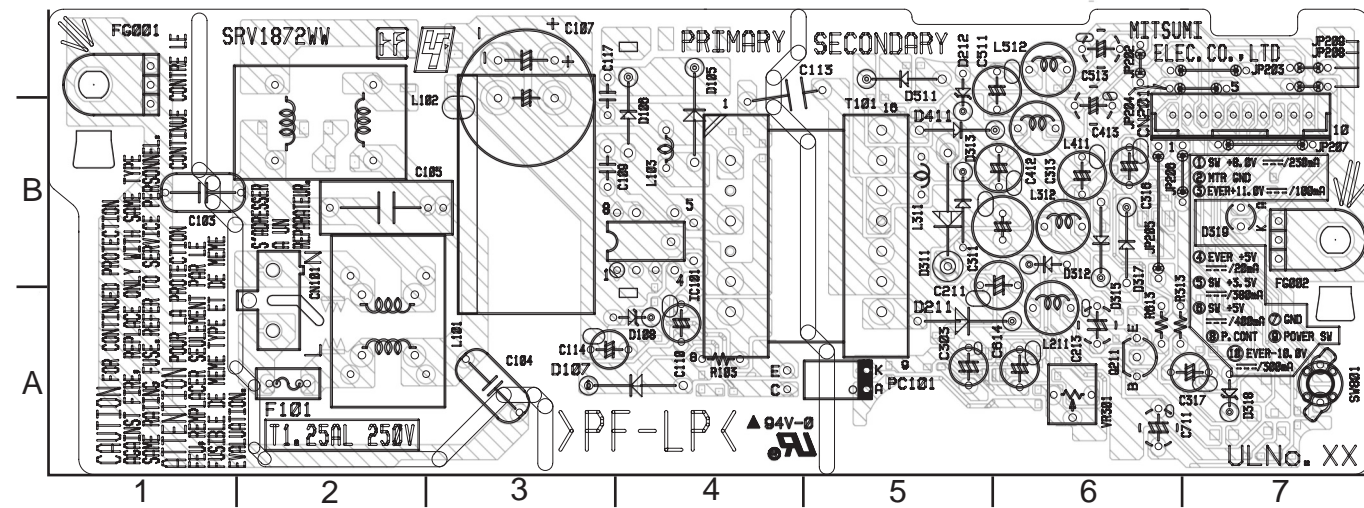


POWER BOARD (SRV1872WW) (SIDE B)
(DVP-NS36/NS37/NS55P:PX/NS61P/NS63P)

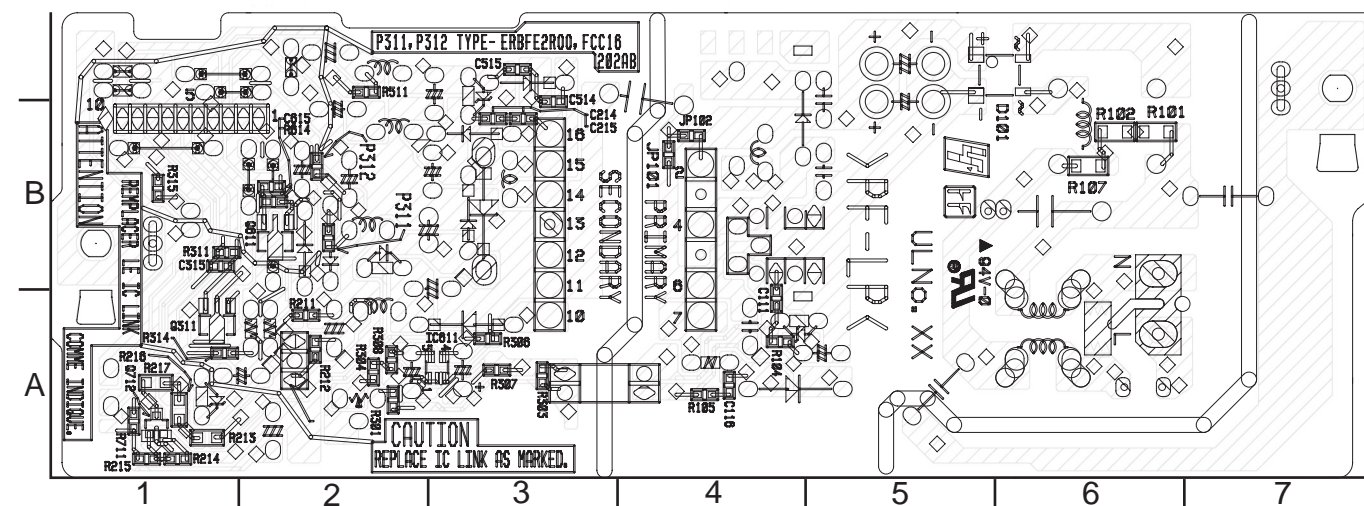

-  : Uses unleaded solder.

For printed wiring board

There are a few cases that the part printed on this diagram isn't mounted in this model.

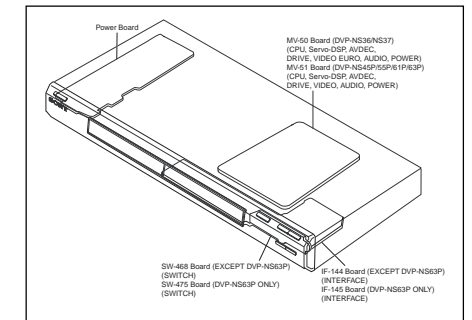

**POWER BOARD
(SRV1872WW)**

SIDE A

IC101	A-4
Q211	A-6
D105	C-4
D106	B-4
D107	A-3
D108	A-4
D211	A-5
D212	C-5
D311	B-5
D312	B-6
D313	B-5
D315	A-6
D317	A-6
D318	A-7
D319	B-7
D411	B-5
D511	C-5

SIDE B


IC611	A-3
D101	B-6
Q311	A-1
Q611	B-2
Q712	A-1

POWER BOARD

POWER BLOCK (SRV1872WW)

- Refer to page 4-45 for printed wiring board of Power board.


- Refer to page 4-45 for printed wiring board of Power board.

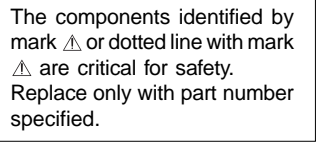

IC611	A-3
Q311	A-1
Q611	B-2
Q712	A-1
D101	B-6

- Refer to page 4-49 for printed wiring board of Power board.

- Refer to page 4-49 for printed wiring board of Power board.

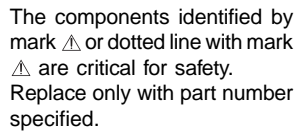

SECTION 5

IC PIN FUNCTION DESCRIPTION

5-1. SYSTEM CONTROL PIN FUNCTION (MV-50/51 BOARDS IC101)

Pin No.	Pin name	Type	Function
1	AGND		Ground pin for analog circuitry
2	DVDA	Analog Input	AC coupled input path A
3	DVDB	Analog Input	AC coupled input path B
4	DVDC	Analog Input	AC coupled input path C
5	DVDD	Analog Input	AC coupled input path D
6	DVDRFIP	Analog Input	AC coupled DVD RF signal input RFIP
7	DVDRFIN	Analog Input	AC coupled DVD RF signal input RFIN
8	MA	Analog Input	DC coupled main-beam RF signal input A
9	MB	Analog Input	DC coupled main-beam RF signal input B
10	MC	Analog Input	DC coupled main-beam RF signal input C
11	MD	Analog Input	DC coupled main-beam RF signal input D
12	SA	Analog Input	DC coupled sub-beam RF signal input A
13	SB	Analog Input	DC coupled sub-beam RF signal input B
14	SC	Analog Input	DC coupled sub-beam RF signal inputC
15	SD	Analog Input	DC coupled sub-beam RF signal input D
16	SDFON	Analog Input	CD focusing error negative input
17	SDFOP	Analog Input	CD focusing error positive input
18	TNI	Analog Input	3 beam satellite PD signal negative input
19	TPI	Analog Input	3 beam satellite PD signal positive input
20	MDI1	Analog Input	Laser power monitor input
21	MDI2	Analog Input	Laser power monitor input
22	LDO2	Analog Output	Laser driver output
23	LDO1	Analog Output	Laser driver output
24	SVDD3	Power	Analog 3.3V power
25	CSO	Analog Output	Central servo
26	RFLVL	Analog Output	RFRP low pass output
27	SGND	Ground	Ground pin for analog circuitry
28	V2REFO	Analog Output	Reference voltage 2.8V
29	V20	Analog Output	Reference voltage 2.0V
30	VREFO	Analog Output	Reference voltage 1.4V
31	FEO	Analog Output	Focus error monitor output
32	TEO	Analog Output	Tracking error monitor output
33	TEZISLV	Analog Output	TE Slicing Level
34	OP_OUT	Analog Output	OP amp output
35	OP_INN	Analog Input	OP amp negative input
36	OP_INP	Analog Input	OP amp positive input
37	DMO	Analog Output	Disc motor control output.PWM output
38	FMO	Analog Output	Feed motor control. PWM output
39	TROPENPWM	Analog Output	Tray PWM output/Tray open output
40	V_ADIN9	Analog Input	General A/D input -> Iop Monitor
41	TRO	Analog Output	PDM output of tracking servo compensator
42	FOO	Analog Output	PDM output of focus servo compensator
43	DVSS	Ground	Ground pin for internal digital circuitry
44	NC		Not used
45	NC		Not used
46	DVDD3	Power Input LVTTL	3.3V power pin for internal digital circuitry
47	SPFG	3.3 V, SMT,PU	General A/D input -> Brake for Tray open/close

DVP-NS36/NS37/NS45P/NS55P/NS61P/NS63P

Pin No.	Pin name	Type	Function
48	MSW	Analog Output	Laser Mode SW (H:DVD, L:CD)
49	CKSW	Analog Input	Disc chucking SW sensor
50	OCSW	Input	Servo GPIO 1
51	EEWP	Output	EEPROM write Protect Control (L:write allowed)
52	DVDD18	Power	1.8V power pin for internal digital circuitry
53	HA2	Output PU	Host address bit2
54	HA3	Output PU	Host address bit3
55	HA4	Output PU	Host address bit4
56	HA5	Output PU	Host address bit5
57	HA6	Output PU	Host address bit6
58	HA7	Output PU	Host address bit7
59	HA8	Output PU	Host address bit8
60	HA18	Output SMT	Host address bit18
61	HA19	Output SMT	Host address bit19
62	DVSS	Ground	Ground pin for internal digital circuitry
63	APLLCAP	Analog Input	APLL External Capacitance connection
64	APLLVSS	Ground	Ground pin for audio clock circuitry
65	APLLVDD3	Power	3.3V power for audio clock circuitry
66	xWR	Output SMT	Write enable, active Low
67	HA16	Output	Host address bit16
68	HA15	Output PU	Host address bit15
69	HA14	Output PU	Host address bit14
70	HA13	Output PU	Host address bit13
71	HA12	Output PU	Host address bit12
72	HA11	Output PU	Host address bit11
73	DVDD3	Power	3.3V power pin for internal digital circuitry
74	HA10	Output PU	Host address bit10
75	HA9	Output PU	Host address bit9
76	HA20	Output SMT	Host address bit20
77	xROMCS	Output PU, SMT	Chip select, active Low
78	HA1	Output PU	Host address bit1
79	xRD	Output SMT	Read enable, active Low
80	DVDD3	Power	3.3V power pin for internal digital circuitry
81	HD0	Output	Host data bit0
82	HD1	Output	Host data bit1
83	HD2	Output	Host data bit2
84	HD3	Output	Host data bit3
85	DVSS	Ground	Ground pin for internal digital circuitry
86	HD4	Output	Host data bit4
87	HD5	Output	Host data bit5
88	HD6	Output	Host data bit6
89	HA21	Output SMT	Host data bit21
90	ALE	Output PU,SMT	Address latch enable
91	HD7	Output	Host data bit7
92	HA17	Output	Host address bit17
93	HA0	Output PU	Host address bit0
94	DVSS	Ground	Ground pin for internal digital circuitry
95	UWR	Output PU,SMT	8032 write strobe
96	URD	Output PU,SMT	8032 read strobe
97	DVDD18	Power Output PU,SMT	1.8V power pin for internal digital circuitry
98	IFSDO	Default High Output PU,SMT	Ext. CPU Serial data output (H/W method)
99	IFCK	Default High Output PU,SMT	Ext. CPU Serial clock (H/W method)

Pin No.	Pin name	Type	Function
100	xIFCS	Default High	Chip select for Ext.CPU (Low Active, H/W method)
101	IFSDI	Input PU, SMT	Ext. CPU Serial data Input
102	SCL	Default High-Z Output PU, SMT	Hardware IIC clock (use 52.5/105 kHz)
103	SDA	Default High-Z Output PU, SMT	Hardware IIC data
104	GPIO		Not used
105	IFBSY	Int PU, SMT	Ext. CPU Ready/Busy interrupt signal (H: Busy, L: Ready)
106	RXD	Input PU, SMT	Hardwared RS232C RXD
107	TXD	Default High Output PU, SMT	Hardwared RS232C TXD
108	DVDD3	Power	3.3V power pin for internal digital circuitry
109	ICE	Output PU,SMT	ICE mode enable
110	xsYSRST	Input PU,SMT	MT1389 reset input, active Low
111	IR	Input SMT	IR control signal input
112	INT0	Input PU,SMT	8032 external interrupt 0 (for ICE)
113	DQM0	Output Output Default	Mask for DRAM input/output byte 0
114	LIMIT SW	Low	Inlimit SW sensor input signal
115	RD7	Output	DRAM data bit7
116	DVSS	Ground	Ground pin for internal digital circuitry
117	RD6	Output	DRAM data bit6
118	RD5	Output	DRAM data bit5
119	DVSS	Ground	Ground pin for internal digital circuitry
120	RD4	Output	DRAM data bit4
121	RD3	Output	DRAM data bit3
122	DVDD18	Power	1.8V power pin for internal digital circuitry
123	RD2	Output	DRAM data bit2
124	RD1	Output	DRAM data bit1
125	RD0	Output	DRAM data bit0
126	RD15	Output	DRAM data bit15
127	DVDD3	Power	3.3V power pin for internal digital circuitry
128	RD14	Output	DRAM data bit14
129	RD13	Output	DRAM data bit13
130	RD12	Output	DRAM data bit12
131	RD11	Output	DRAM data bit11
132	RD10	Output	DRAM data bit10
133	RD9	Output	DRAM data bit9
134	DVSS	Ground	Ground pin for internal circuitry
135	RD8	Output Output Default	DRAM data bit8
136	RGBSEL (MV-50 only)	Low	RGB/YCbCr select output signal (H:RGB Disable, L:RGB)
	GPIO (MV-51 only)		Not Used
137	DQM1	Output	Mask for DRAM input/output byte 1
138	RWE#	Output	DRAM write enable
139	CAS#	Output	DRAM column address strobe
140	RAS#	Output	DRAM row address strobe
141	DVDD3	Power	3.3V power pin for internal digital circuitry
142	RCS#	Output	DRAM chip select
143	BA0	Output	DRAM bank address 0
144	DVSS	Ground	Ground pin for internal digital circuitry
145	BA1	Output	DRAM bank address 1
146	RA10	Output	DRAM address bit10
147	RA0	Output	DRAM address bit0
148	DVSS	Ground	Ground pin for internal digital circuitry

DVP-NS36/NS37/NS45P/NS55P/NS61P/NS63P

Pin No.	Pin name	Type	Function
149	RA1	Output	DRAM address bit1
150	RA2	Output	DRAM address bit2
151	RA3	Output	DRAM address bit3
152	DVDD18	Power	1.8V power pin for internal digital circuitry
153	NC		Not used
154	NC		Not used
155	DVDD3	Power	3.3V power pin for internal digital circuitry
156	DRCLK	Output	DRAM clock
157	CKE	Output	DRAM clock enable
158	RA11	Output PD	DRAM address bit11
159	RA9	Output	DRAM address bit9
160	RA8	Output	DRAM address bit8
161	DVSS	Ground	Ground pin for internal digital circuitry
162	RA7	Output	DRAM address bit7
163	DVSS	Ground	Ground pin for internal digital circuitry
164	RA6	Output	DRAM address bit6
165	RA5	Output	DRAM address bit5
166	RA4	Output	DRAM address bit4
167	DVDD3	Power	3.3V power pin for internal digital circuitry
168	FWD	Output PU	Roading control signal (Forward)
169	REV	Output PU	Roading control signal (Reverse)
170	MUTE123	Output PU	Servo driver MUTE signal
171	NC		Not used
172	NC		Not used
173	DVDD18	Power Output Default	1.8V power pin for internal digital circuitry
174	MUTE	Output PD	Servo driver MUTE signal
175	NC		Not used
176	xMAMUTE	Default LOW	Main Audio Mute Signal (H: Unmute, L: Mute)
177	DSEL (MV-50 only)	Output	Interlace/Prog select output signal (H: 480i, L:480P)
	GPIO (MV-51 only)		Not used
178	TSD_M	Input PU	SERVO GPIO 3
179	EUROVY (MV-50 only)	Output PU	CVBS/S terminal select output signal (H: CBVS, L: S-Terminal)
	GPIO (MV-51 only)		Not used
180	NC		Not used
181	NC		Not used
182	DVDD3	Power	3.3V power pin for internal digital circuitry
183	NC		Not used
184	NC		Not used
185	NC		Not used
186	NC		Not used
187	NC		Not used
188	NC		Not used
189	DACVDDC	Power	3.3V power for Video DAC circuitry
190	VREF	Analog Input	Bandgap Ref Voltage (No connect)
191	FS	Analog Input	Full Scale Adjustment
192	CIN	Output	Compensation Capacitor
193	DACVSSC	Ground	Ground pin for Video DAC circuitry
194	Y	Output	Analog Y output
195	DACVddb	Power	3.3V power for Video DAC circuitry
196	C	Output	Analog chroma output
197	DACVSSB	Ground	Ground pin for Video DAC circuitry
198	CVBS	Output	Analog composit output
199	DACVDDA	Power	3.3V power for Video DAC circuitry

Pin No.	Pin name	Type	Function
200	Y/G	Output	Green signal or Y signal output
201	DACVSSA	Ground	Ground pin for Video DAC circuitry
202	B/Cb/Pb	Output	Blue signal or Cb signal output
203	R/Cr/Pr	Output	Red signal or Cr signal output
204	DVDD3	Power	3.3V power pin for Video DAC digital circuitry
205	MIC	Input SMT	Karaoke Microphone detect signal
206	VOICE (MV-50 only)	Output SMT	Karaoke voice function (not used)
	SCORE (MV-51 only) (Full Karaoke model only)	LOW	Karaoke score function
	ECHO_ON OFF (MV-51 only) (5 Karaoke model only)	LOW	Karaoke Echo function status output (H: Echo on; L: Echo off)
207	KRMOD	Output SMT Output Default	Karaoke Mode Status Output (H: Normal, L: Karaoke)
208	SCK	Output	ADAC Serial Clock (S/W method by 8032)
209	WIDE	Output Output Default	Video aspect ratio control SW
210	SDO	Output	ADAC Serial data output (S/W method by 8032)
211	xSCS	Output	Chip select for ADAC (Low active, SW method by 8032)
212	DVDD3	Power	3.3V power pin for internal digital circuitry
213	ALRCK	Output PD,SMT	Audio left/right channel clock (ADAC LRCK output)
214	ABCK	Output	Audio Bit Clock output (ADAC BCK output)
215	ACLK	Output	Master clock output for Audio DAC (ADAC CLK Master clock output)
216	DVSS	Ground	Ground pin for internal digital circuitry
217	ASDATA0	Output	Not used
218	ASDATA1	Output	Not used
219	ASDATA2	Output	Not used
220	xRST	Default Low	Reset output signal for ADAC (Low Active)
221	DVDD18	Power	1.8V power pin for intenal digital circuitry
222	ASDATA4	Output PD,SMT	Audio serial data 4: Down-mixed L/R
223	DVSS	Ground	Ground pin for internal digital circuitry
224	Disc/XEXT (MV-50 only)	Output	Disc/External input select output signal (H: Disc, L: External)
	XVOICE (MV-51 only)	Input	Karaoke Voice function
225	SPDIF	Output	SPDIF output
226	RFGND18	Ground	Ground pin for internal analog circuitry
227	RFVDD18	Power	1.8V power pin for internal analog circuitry
228	XTALO	Output	27M crystal output
229	XTALI	Input	27M crystal input
230	JITFO	Analog Output	The output terminal of RF jitter
231	JITFN	Analog Input	The input terminal of RF jitter
232	PLLSS	Ground	Ground pin for data PLL and related analog circuitry
233	IDACEXP	Analog Output	Data PLL DAC Low-pass filter
234	PLLVD3	Power	3.3V power pin for data PLL and related analog circuitry
235	LPFON	Analog Output	The negative output terminal of loop filter amplifier
236	LPFIP	Analog Input	The positive input terminal of loop filter amplifier
237	LPFIN	Analog Input	The negative input of loop filter amplifier
238	LPFOP	Analog Output	The positive output of loop filter amplifier
239	ADCVD3	Power	Power pin for ADC circuitry
240	NC		Not used
241	ADCVSS	Ground	Ground pin for ADC circuitry
242	NC		Not used
243	NC		Not used
244	RFVDD3	Power	3.3V power pin for RF digital circuitry
245	RFRPDC	Analog Output	RF ripple detect output
246	RFRPAC	Analog Input	RF ripple detect input (through AC-coupling)

DVP-NS36/NS37/NS45P/NS55P/NS61P/NS63P


Pin No.	Pin name	Type	Function
247	HRFZC	Analog Input	High frequency RF ripple zero crossing capasitor connecting
248	CRTPLP	Analog Output	Defect level filter capacitor connecting
249	RFGND	Ground	Ground pin for RF digital circuitry
250	NC		Not used
251	NC		Not used
252	OSP	Analog Output	RF Offset cancellation capacitor connecting
253	OSN	Analog Output	RF Offset cancellation capacitor connecting
254	RFGC	Analog Output	RF AGC loop capacitor conecting for DVD-ROM
255	IREF	Analog Input	Input reference current input
256	AVDD3	Power	3.3V power pin for analog circuirtry

SECTION 6 TEST MODE


6-1. EXECUTING IOP MEASUREMENT

In order to execute IOP measurement, the following standard procedures must be followed.


- (1) In standby mode, press **[TOP MENU]**, **[CLEAR]**, **[POWER]** to enter Remocon Diagnosis Mode.

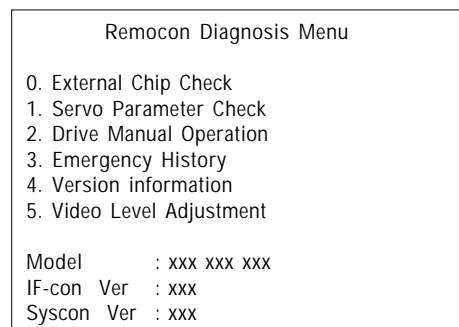

- (2) Select “2. Drive Manual Operation” by pressing the **[2]** key on the remote commander. The screen will appear as below.

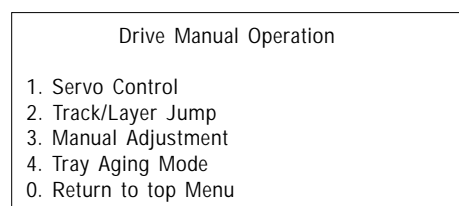


- (3) Select “3. Manual Adjustment” by pressing the **[3]** key on the remote commander. The screen will appear as below.

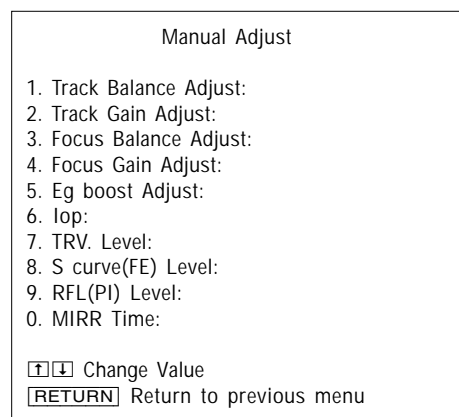

- (4) Select Iop by pressing **[6]** key on the remote commander.

- (5) Wait until a hexadecimal number appear.

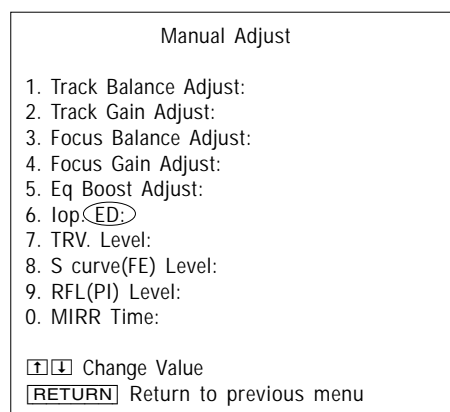

- (6) Convert data from hexadecimal to decimal.

- (7) Use the following formula to calculate IOP in mA
IOP (mA)=IOP (decimal) x 0.622678.

- (8) Press **[RETURN]** to return back to previous menu.


- (9) Press **[0]** to return to Top Menu and power OFF the DVD Player.

6-2. EMERGENCY HISTORY CHECK

Information of Emergency History.

- (1) In standby mode, press **[TOP MENU]**, **[CLEAR]**, **[POWER]** to enter Remocon Diagnosis Mode.


- (2) Select “3. Emergency History”.

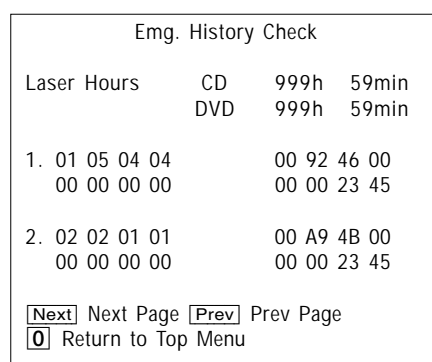

- (3) Laser Hours
DVD Laser ON time. (Total ON time)
CD Laser ON time. (Total ON time)

- (4) Emergency History
The history information from last “1” to “10” can be scrolled with **[NEXT]** key or **[PREV]** key.

- (5) Error code

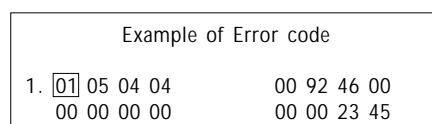

- (6) Error code list
- 01: Communication error (No reply from syscon)
 - 02: Syscon hung up
 - 03: Power OFF request when syscon hung up
 - 19: Thermal shutdown
 - 24: MoveSledHome error
 - 25: Mecha move error (5 Changer)
 - 26: Mecha move stack error
 - 30: DC Motor adjustment error
 - 31: DPD offset adjustment error
 - 32: TE Balance adjustment error
 - 33: TE Sensor adjustment error
 - 34: TE loop gain adjustment error
 - 35: FE loop gain adjustment error
 - 36: Bad jitter after adjustment
 - 40: Focus NG
 - 42: Focus Layer Jump NG
 - 52: Open kick spindle error
 - 51: Spindle stop error
 - 60: Focus on error
 - 61: Seek fail error
 - 62: read Qdata/ID error
 - 70: Lead In Data Read Fail
 - 71: TOC read time out (CD)
 - 80: Can't Buffering
 - 81: Unknown media type

- (7) Error code parameters

Example of Error code			
1.	01	05 04 04	00 92 46 00
		00 00 00 00	00 00 23 45

This is the detailed contents of error information

- (8) Laser hours at error happend.

Example of Error code			
1.	01	05 04 04	00 92 46 00
		00 00 00 00	00 00 23 45

This is Laser hours when an error happened.

- (9) How to Clear laser hours
- Press **[DISPLAY]**, **[CLEAR]** keys in this order.
- Both CD and DVD data are cleared.

Emg. History Check			
Laser Hours	CD	0h	0min
	DVD	0h	0min
1.	01	05 04 04	00 92 46 00
		00 00 00 00	00 00 23 45
2.	02	02 01 01	00 A9 4B 00
		00 00 00 00	00 00 23 45
[Next] Next Page [Prev] Prev Page			
[0] Return to Top Menu			

- (10) How to Clearing Emergency code
- Press **[TOPMENU]**, **[CLEAR]** keys in this order.
- All emergency code are cleared.

Emg. History Check			
Laser Hours	CD	999h	59min
	DVD	999h	59min
1.	00 00 00 00	00 00 00 00	00 00 00 00
	00 00 00 00	00 00 00 00	00 00 00 00
2.	00 00 00 00	00 00 00 00	00 00 00 00
	00 00 00 00	00 00 00 00	00 00 00 00
[Next] Next Page [Prev] Prev Page			

- (11) Press - key, return to TOP MENU.

6-3. INITIALIZING SETUP DATA

How to initializing setup data.

- (1) In standby mode, press **[TOP MENU]**, **[CLEAR]**, **[POWER]** to enter Remocon Diagnosis Mode.
- (2) Select “3. Emergency History”.

Emg. History Check			
Laser Hours	CD	999h	59min
	DVD	999h	59min
1.	01	05 04 04	00 92 46 00
		00 00 00 00	00 00 23 45
2.	02	02 01 01	00 A9 4B 00
		00 00 00 00	00 00 23 45
[Next] Next Page [Prev] Prev Page			
[0] Return to Top Menu			

- (3) Initializing setup data
- Press **[MENU]**, **[CLEAR]** keys in this order.
- The data have been initialized when “Initialize setup data...” mesage is displayed.

Emg. History Check			
Laser Hours	CD	999h	59min
	DVD	999h	59min
Initialize setup data ...			
[Next] Next Page [Prev] Prev Page			
[0] Return to Top Menu			

- (4) The Emergency history display screen will be restored soon.

Emg. History Check				
Laser	Hours	CD	999h	59min
		DVD	999h	59min
1.	01 05 04 04		00 92 46 00	
	00 00 00 00		00 00 23 45	
2.	02 02 01 01		00 A9 4B 00	
	00 00 00 00		00 00 23 45	
<input type="button" value="Next"/> Next Page <input type="button" value="Prev"/> Prev Page				

- (12) Press key, return to TOP MENU.

6-4. VERSION INFORMATION

Information of firmware version.

- (1) In standby mode, press , , to enter Remocon Diagnosis Mode.

- (2) Select "4. Version Information".

Version information	
Firm (Main)	: Ver. xxxxx
Firm (Sub)	: xxxxx
RISC	: xxxxx
8032	: xxxxx
Audio DSP	: xxxxx
Servo DSP	: xxxxx
<input type="button" value="0"/> Return to Top Menu	

- (3) Press key, return to TOP MENU.

6-5. IF CON SELF DIAGNOSTIC FUNCTION

1. IF-144/IF-145 BOARDS (IF CON) TEXT MODE

The IF-144/IF-145 boards (IF CON) test mode is the IF CON self-diagnosis mode. The IF CON can diagnose the functions of the IF-144/IF-145 boards that the IF CON controls. Normally, the IF CON makes a serial communication with the SYSTEM CONTROL and operates following the commands from the SYSTEM CONTROL, but in the Test mode, the IF CON operates independently from the SYSTEM CONTROL.

In the test mode, the following functions can be checked.

1. Button function
2. Remote commander receiving function
3. SYSTEM CONTROL-IF CON serial communication
4. Fluorescent display tube lighting check
 - Grid check
 - Anode check
5. LED control function

In the test mode, the main unit operates same as usual, except voltage monitoring, communication, display of fluorescent display tube, and LED control.

1. The routine that monitors +3.3V (PCONT) of MV-50/MV-51 boards is not provided.
2. The monitoring timer for serial communication with the SYSTEM CONTROL is not provided. The main unit is not placed in the Standby mode, even if the communication with SYSTEM CONTROL is normal.
3. Display of fluorescent display tube.
(Normally, display is mode following the commands from SYSTEM CONTROL).
4. LED control.
(Normally, control is mode made following the commands from SYSTEM CONTROL).

2. OPERATION OF SELF CHECK MODE

The Self Check mode is the function to conduct the basic test to the FL display and DVD panel section.


2-1. Self Check Mode Transition Processing

At the AC Power ON after reset of IF CON is released, while pressing with the MV-50/MV-51 boards are not connected to the IF-144/IF-145 boards, or while pressing the key on the main unit with the IF CON in STANDBY mode, enter → (or) on the remote commander, and the main unit transits to the Self Check Mode.


2-2. Operation of Auto Self Check

When the Self Check mode becomes active at the AC Power ON or by key input, the test display of the following steps (1) to (4) is repeated.


- (1) FLD and LED all ON (for 5 seconds)

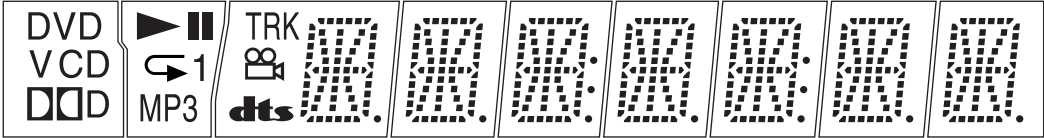


- (2) MODEL display (for 2 seconds) (NS36/NS37)

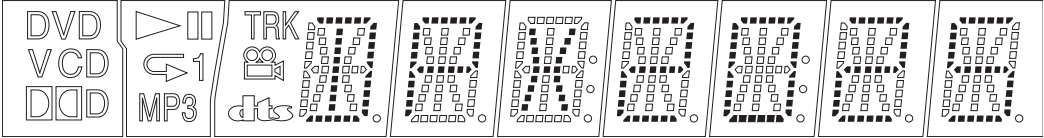


MODEL display (for 2 seconds) (NS45P/55P/61P)

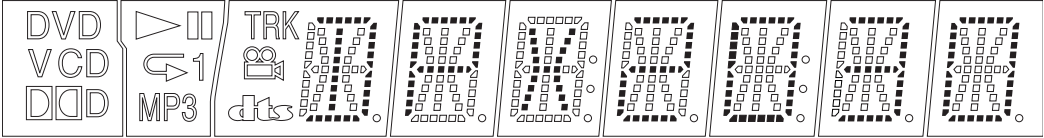


MODEL display (for 2 seconds) (NS63P)

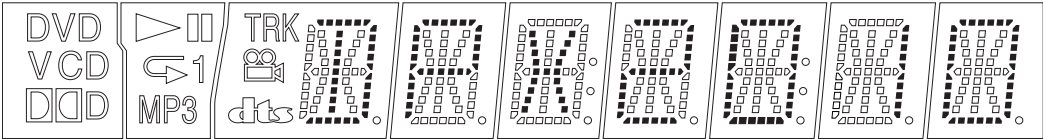

- (3) Version display (for 2 seconds)

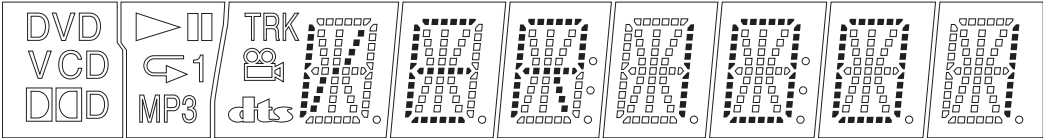

- (4) ROM creation date display (for 2 seconds)

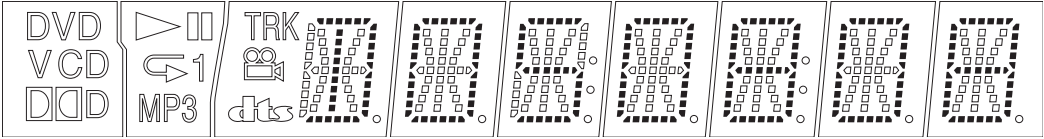




2-3. Each Self Check Function

Each Self Check function tests the FLD display, LED display, and key input.

Input Voltage [V]	IC404: Pin No. (Signal)			
	PIN ③④ (AD1)	PIN ③⑤ (O/C)	PIN ③⑥ (STOP)	PIN ③⑦
0 - 0.20	PLAY	OPEN/CLOSE	STOP	POWER
0.60 - 0.82	-	-	PROGRESSIVE	-
1.16 - 1.47	PREVIOUS	-	-	-
1.80 - 2.12	NEXT	-	-	-
2.48 - 2.70	-	-	-	-

2-3-1. FLD and LED All ON

 
2-3-1-1. Transition Keys in Self Check Mode

-  key and  key on the main unit
-  key on the remote commander

2-3-1-2. Operation and display

In this mode, all LEDs and all segments of FLD turn ON.

- Example of FLD all ON

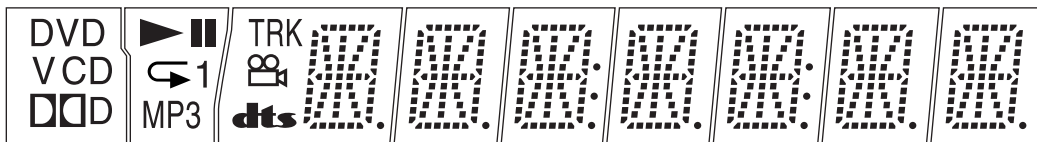


2-3-2. Main Unit Key Name Display and Key Code Display


2-3-2-1. Transition Keys in Self Check Mode

 
- Keys on the main unit except keys transitioned in Self Check Mode


2-3-2-2. Operation and Display

When a key on the main unit is pressed in the Self Check mode, the name of that key is displayed on the FLD. Also, the key name display and the key code display can be switched with the **DISPLAY** key on the remote commander, "NOTHING" is displayed when nothing is entered. Also, DVD, V, CD segments turn on when a communication error occurred.


- FLD display (at input of  key on the main unit)

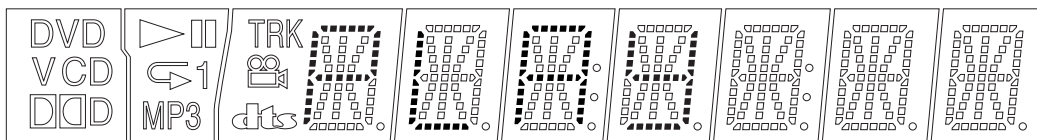


- Key code display
(at input of  key, key code: 0Ah)

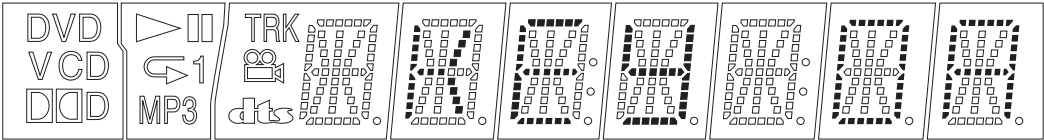

- At input of faulty voltage

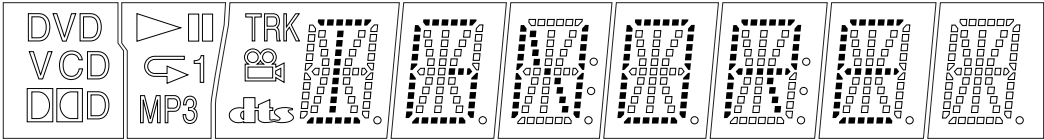

- When key is pressed double

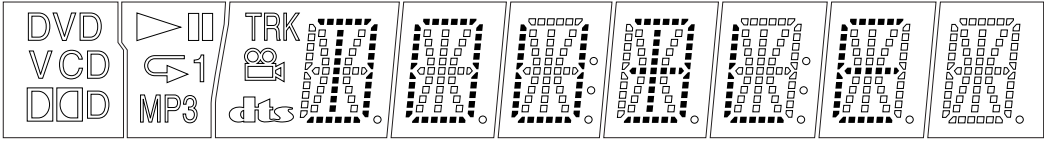


2-3-3. Remote Commander Key Name Display and Key Code Display


2-3-3-1. Transition Keys in Self Check Mode


- Remote commander keys except keys transited in Self Check Mode


2-3-3-2. Operation and Display

When a key on the remote commander is pressed in the Self Check Mode, the name of that key is displayed on the FLD. Also, the key name display and the key code display can be switched with the DISPLAY key on the remote commander. “NOTHING” is displayed when nothing is entered. Also, VIDEO CD, DVD, and CD segments turn on when a communication error occurred.

- Remote commander key name display (at input of  key)

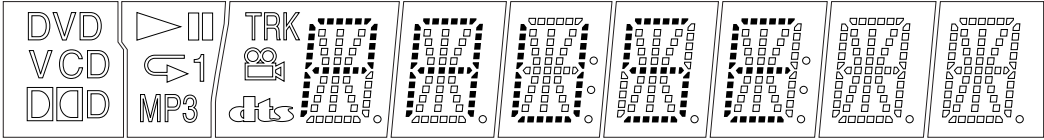


- Remote commander key code display (at input of  key, key code:39h)

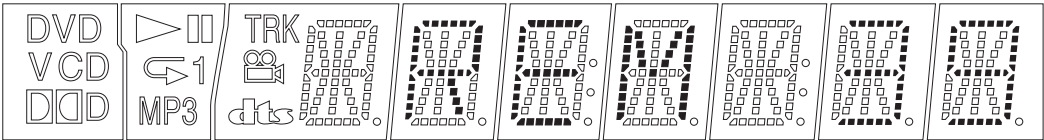


2-3-4. Communication Monitoring Display

The communication state is monitored and displayed while the key name on the main unit and the remote commander is displayed. When the communication to the System Controller failed, VIDEO CD, DVD, and CD segments turn on.

- Communication error display (at no input of key and remote commander)

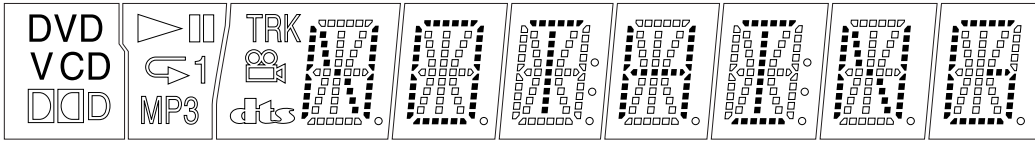

- Communication error display (at code display without input of the remote commander)

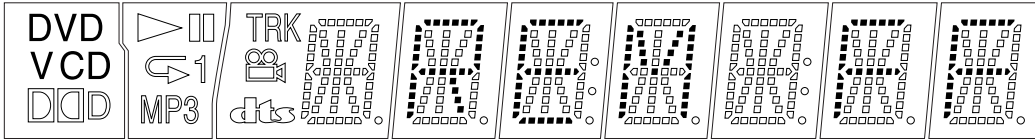

2-3-5. FLD Anode Test Display and SHUTTLE Click Operation Test


2-3-5-1. Transition Keys in Self Check Mode

- key on the remote commander
- SHUTTLE on the remote commander during Anode Test display (This unit does not provide JOG/SHUTTLE, and therefore use another DVD remote commander having the JOG/SHUTTLE)


2-3-5-2. Operation and Display

The Self Check Mode transits to this mode when → key is entered. This tests whether each segment turns on individually. Only the first segment of each grid of FLD turns on, and each time the SHUTTLE is entered, the segment of each grid switched in order. When SHUTTLE input is clockwise, the segment switches in 1 - 2 - 3 direction, or counterclockwise it switches in 3 - 2 - 1 direction.

- Display at the start of Anode Test

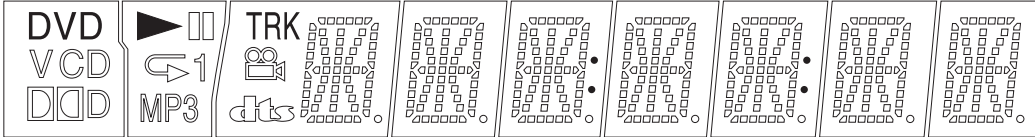


↓ (Input in CW direction)

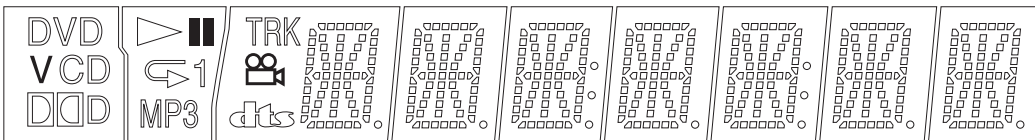


2-3-6. FLD Grid Test Display and SHUTTLE Click Operation Test



2-3-6-1. Transition Keys in Self Check Mode

-  key on the remote commander
- SHUTTLE on the remote commander during Grid Test display
(This unit does not provide JOG/SHUTTLE, and therefore use another DVD remote commander having the JOG/SHUTTLE)

2-3-6-2. Operation and Display


The Self Check Mode transits to this mode when  key is entered. This tests whether each grid turns on individually. The first grid only of FLD turns on and other grid turn off. Each time the SHUTTLE is entered, the grid is switched in order. When SHUTTLE input is clockwise, the grid is switched in 1 - 2 - 3 direction, or counterclockwise it switches in 3 - 2 - 1 direction.

- Display at the start of Grid Test

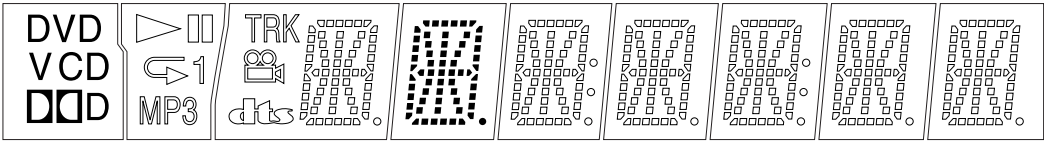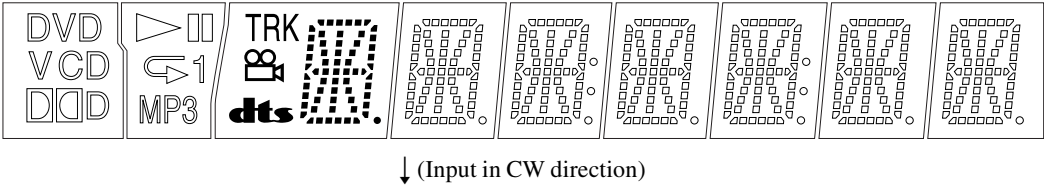

2-3-7. LED Test Display


2-3-7-1. Transition Keys in Self Check Mode



-  key on the remote commander
- SHUTTLE on the remote commander during Grid Test display
(This model does not provide JOG/SHUTTLE, and therefore use another DVD remote commander having the JOG/SHUTTLE)

2-3-7-2. Operation and Display

LED is switched in order by the input JOG/SHUTTLE on the remote commander. Also, LED ON/OFF is switched by the input of same key as the function that turns on the LED concerned.

- FLD display during LED Test

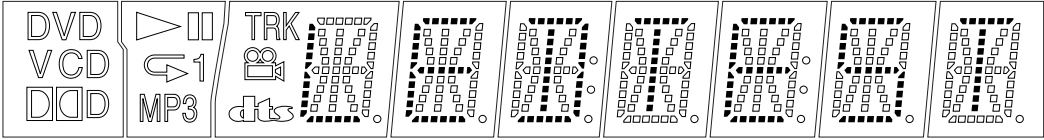

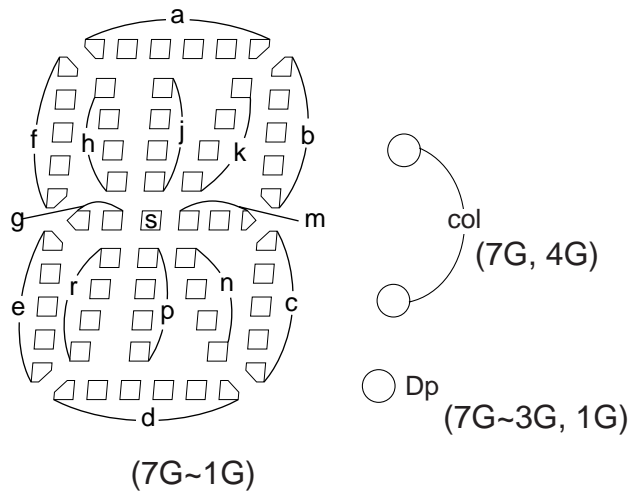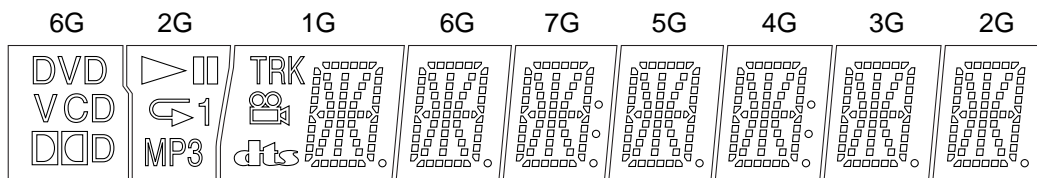

ANODE CONNECTION

	7G	6G	5G	4G	3G	2G	1G
P1	col	DVD	-	col	-	▷	TRK
P2	-	V	-	-	-		8
P3	-	CD	-	-	-	↶	dts
P4	-	DCD	-	-	-	1	-
P5	Dp	Dp	Dp	Dp	Dp	MP3	Dp
P6	a	a	a	a	a	a	a
P7	k	k	k	k	k	k	k
P8	j	j	j	j	j	j	j
P9	h	h	h	h	h	h	h
P10	b	b	b	b	b	b	b
P11	f	f	f	f	f	f	f
P12	m	m	m	m	m	m	m
P13	s	s	s	s	s	s	s
P14	g	g	g	g	g	g	g
P15	c	c	c	c	c	c	c
P16	d	d	d	d	d	d	d
P17	r	r	r	r	r	r	r
P18	p	p	p	p	p	p	p
P19	n	n	n	n	n	n	n
P20	e	e	e	e	e	e	e

SECTION 7

ELECTRICAL ADJUSTMENT

This section describes procedures and instructions necessary for adjusting electrical circuits in this unit.

Instruments required:

- (1) Color monitor TV
- (2) Oscilloscope 1 or 2 phenomena, band width over 100 MHz, with delay mode
- (3) Frequency counter (over 8 digits)
- (4) Digital multimeter
- (5) Standard commander
(RMT-D175A/RMT-D175P/RMT-D175C)
- (6) DVD reference disc
HLX-501 (J-6090-071-A) (dual layer) (NTSC)
HLX-503 (J-6090-069-A) (single layer) (NTSC)
HLX-504 (J-6090-088-A) (single layer) (NTSC)
HLX-505 (J-6090-089-A) (dual layer) (NTSC)

7-1. POWER SUPPLY OUTPUT VOLTAGE CHECK

Mode	Except standby
Instrument	Digital multimeter
EVER +5 V Check	
Test point	CN201 pin ④
Specification	5.0 ± 0.3 Vdc
SW +3.3 V Check	
Test point	CN201 pin ⑤
Specification	3.35 ± 0.2 Vdc
SW+5 V Check	
Test point	CN201 pin ⑥
Specification	$5.0^{+0.2}_{-0.3}$ Vdc
SW +8 V Check	
Test point	CN201 pin ①
Specification	8.0 ± 0.5 Vdc
EVER +11 V Check	
Test point	CN201 pin ③
Specification	$11.0^{+1.0}_{-0.5}$ Vdc
EVER -10 V Check	
Test point	CN201 pin ⑩
Specification	$-10.0^{+0.5}_{-1.0}$ Vdc

Checking method:

- (1) Confirm that each voltage satisfies the specification.

Caution!

Please do not touch any electrical parts at primary circuit to avoid electrical shock.

7-2. ADJUSTMENT OF VIDEO SYSTEM
(DVP-NS36:AEP,UK/NS37)

1. Checking Video Level

<Purpose>

Checking Video Level the NTSC/PAL standard, and if not correct, the brightness will be too large or small.

Mode	HLX-504 play back
Signal	Color bars 100%
Test point	LINE OUT (VIDEO) connector (75 Ω terminated)
Instrument	Oscilloscope
Specification	1.0 ± 0.08 Vp-p

Adjusting method:

- (1) In the Video Signal menu “1” Color Bar 100% play back.
- (2) Confirm that the Video Level is 1.0 ± 0.08 Vp-p.

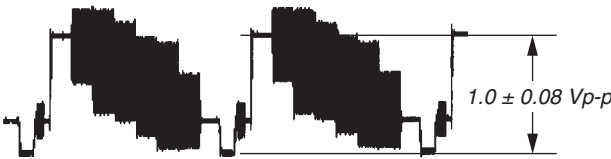


Fig. 7-1.

2. Checking Scart Video Output Level (Video Mode)

<Purpose>

Check scart video output level. If it is incorrect, correct brightness will be too large or small.

Mode	HLX-504 play back
Signal	Color bars 100%
Test point	VIDEO OUT (19p) connector (75 W terminated)
Instrument	Oscilloscope
Specification	1.0 ± 0.08 Vp-p

Adjusting method:

- (1) In the Video Signal menu “1” Color Bar 100% play back.
- (2) Confirm that the Y level is 1.0 ± 0.08 Vp-p.



Fig. 7-2.

3. Checking Scart S Video Output S-Y
(S-Video Mode)

<Purpose>

Check S-terminal video output. If it is incorrect, pictures will not be displayed correctly in spite of connection to the TV with a S-terminal cable.

Mode	HLX-504 play back
Signal	Color bars 100%
Test point	S VIDEO OUT (S-Y) (19p) (75 Ω terminated)
Instrument	Oscilloscope
Specification	1.0 ± 0.08 Vp-p

Checking method:

- (1) In the Video Signal menu “1” Color Bar 100% play back.
- (2) Confirm that the S-Y level is 1.0 ± 0.08 Vp-p.

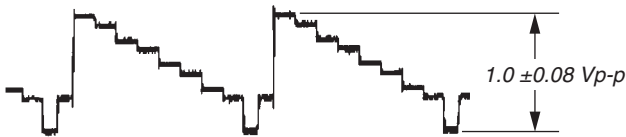


Fig. 7-3.

4. Checking Scart S Video Output S-C
(S-Video Mode)

<Purpose>

This checks whether the S-C satisfies the NTSC/PAL standard. If it is not correct, the colors will be too dark or light.

Mode	HLX-504 play back
Signal	Color bars 100%
Test point	S VIDEO OUT (S-C) (15p) (75 Ω terminated)
Instrument	Oscilloscope
Specification	A = 286 ± 50 mVp-p (NTSC) A = 300 ± 50 mVp-p (PAL)

Checking method:

- (1) In the Video Signal menu “1” Color Bar 100% play back.
- (2) Confirm that the S-C burst is “A”.



Fig. 7-4.

5. Checking RGB Output G (RGB Mode)

<Purpose>

This checks RGB video output G level. If it is incorrect, correct color will not be remain some.

Mode	HLX-504 play back
Signal	Color bars
Test point	Green Out (11p) (75 Ω terminated)
Instrument	Oscilloscope
Specification	$A = 700 \pm 70 \text{mVp-p}$

Checking method:

- (1) In the Video Signal menu "1" Color Bar 100% play back.
- (2) Confirm that the G level is $1.0 \pm 0.08 \text{ Vp-p}$.

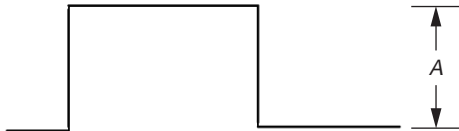


Fig. 7-5.

6. Checking RGB Output B (RGB Mode)

<Purpose>

This checks RGB video output B level. If it is incorrect, correct colors will not be displayed when connected to, for instance, projector.

Mode	HLX-504 play back
Signal	Color bars
Test point	Blue Out, (7p) (75 Ω terminated)
Instrument	Oscilloscope
Specification	$B = 700 \pm 70 \text{ mVp-p}$

Checking method:

- (1) In the Video Signal menu "1" Color Bar 100% play back.
- (2) Confirm that the B level is A.

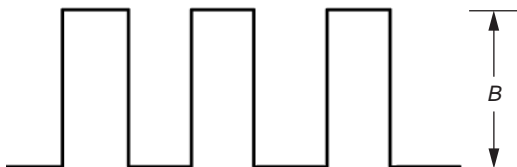


Fig. 7-6.

7. Checking RGB Output R (RGB Mode)

<Purpose>

This checks RGB video output R level. If it is incorrect, correct colors will not be displayed when connected to, for instance, projector.

Mode	HLX-504 play back
Signal	Color bars
Test point	Red Out, (15p) (75 Ω terminated)
Instrument	Oscilloscope
Specification	$C = 700 \pm 70 \text{ mVp-p}$

Checking method:

- (1) In the Video Signal menu "1" Color Bar 100% play back.
- (2) Confirm that the R level is B.

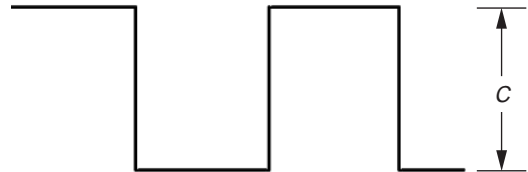


Fig. 7-7.

7-3. ADJUSTMENT OF VIDEO SYSTEM
(EXCEPT DVP-NS36:AEP,UK/NS37)

1. Checking Video Level

<Purpose>

Checking Video Level the NTSC/PAL standard, and if not correct, the brightness will be too large or small.

Mode	HLX-504 play back
Signal	Color bars 100%
Test point	LINE OUT (VIDEO) connector (75 Ω terminated)
Instrument	Oscilloscope
Specification	1.0 ± 0.08 Vp-p

Adjusting method:

- (1) In the Video Signal menu “1” Color Bar 100% play back.
- (2) Confirm that the Video Level is 1.0 ± 0.08 Vp-p.

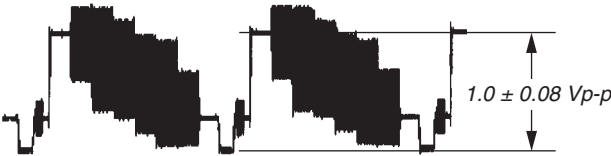


Fig. 7-1.

2. Checking Progressive Video Output Level

<Purpose>

Check progressive video output level. If it is incorrect, correct brightness will not be attained when connected to, for instance, projector.

Mode	HLX-504 play back
Signal	Color bars 100%
Test point	COMPONENT VIDEO OUT (Y) connector (75 Ω terminated)
Instrument	Oscilloscope
Specification	1.0 ± 0.08 Vp-p

Adjusting method:

- (1) In the Video Signal menu “1” Color Bar 100% play back.
- (2) Confirm that the Y level is 1.0 ± 0.08 Vp-p.



Fig. 7-2.

3. Checking S Video Output S-Y

<Purpose>

Check S-terminal video output. If it is incorrect, pictures will not be displayed correctly in spite of connection to the TV with a S-terminal cable.

Mode	HLX-504 play back
Signal	Color bars 100%
Test point	S VIDEO OUT (S-Y) connector (75 Ω terminated)
Instrument	Oscilloscope
Specification	1.0 ± 0.08 Vp-p

Checking method:

- (1) In the Video Signal menu “1” Color Bar 100% play back.
- (2) Confirm that the S-Y level is 1.0 ± 0.08 Vp-p.

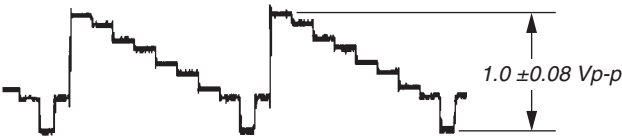


Fig. 7-3.

4. Checking S Video Output S-C

<Purpose>

This checks whether the S-C satisfies the NTSC/PAL standard. If it is not correct, the colors will be too dark or light.

Mode	HLX-504 play back
Signal	Color bars 100%
Test point	S VIDEO OUT (S-C) connector (75 Ω terminated)
Instrument	Oscilloscope
Specification	A = 286 ± 50 mVp-p (NTSC) A = 300 ± 50 mVp-p (PAL)

Checking method:

- (1) In the Video Signal menu “1” Color Bar 100% play back.
- (2) Confirm that the S-C burst is “A”.



Fig. 7-4.

5. Checking Component Video Output Y

<Purpose>

This checks component video output Y. If it is incorrect, correct brightness will not be attained when connected to, for instance, projector.

Mode	HLX-504 play back
Signal	Color bars
Test point	COMPONENT VIDEO OUT (Y) connector, (75 Ω terminated)
Instrument	Oscilloscope
Specification	1.0 ± 0.08 Vp-p

Checking method:

- (1) In the Video Signal menu "1" Color Bar 100% play back.
- (2) Confirm that the Y level is 1.0 ± 0.08 Vp-p.



Fig. 7-5.

6. Checking Component Video Output B-Y

<Purpose>

This checks component video output B-Y. If it is incorrect, correct colors will not be displayed when connected to, for instance, projector.

Mode	HLX-504 play back
Signal	Color bars
Test point	COMPONENT VIDEO OUT (P _B) connector (75 Ω terminated)
Instrument	Oscilloscope
Specification	$A = 700 \pm 70$ mVp-p

Checking method:

- (1) In the Video Signal menu "1" Color Bar 100% play back.
- (2) Confirm that the B-Y level is A.

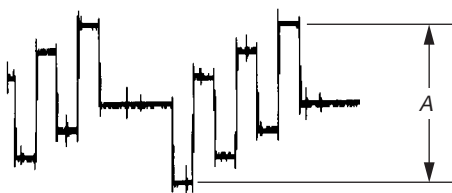


Fig. 7-6.

7. Checking Component Video Output R-Y

<Purpose>

This checks component video output R-Y. If it is incorrect, correct colors will not be displayed when connected to, for instance, projector.

Mode	HLX-504 play back
Signal	Color bars
Test point	COMPONENT VIDEO OUT (P _R) connector (75 Ω terminated)
Instrument	Oscilloscope
Specification	$B = 700 \pm 70$ mVp-p

Checking method:

- (1) In the Video Signal menu "1" Color Bar 100% play back.
- (2) Confirm that the R-Y level is B.

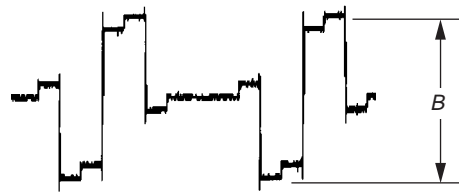


Fig. 7-7.

SECTION 8

REPAIR PARTS LIST

8-1. EXPLODED VIEWS

NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

Color Indication of Appearance Parts

Example:

KNOB, BALANCE (WHITE) . . . (RED)

↑ ↑
Parts Color Cabinet's Color

Abbreviation

AEP : AEP Model

RUS : Russian Model

UK : UK Model

CND : Canadian Model

US : USA Model

AR : Argentina Model

BR : Brazilian Model

E : Latin America Model

PX : PX Model

AUS : Australia/New Zealand Model

CH : Chinese Model


ME : Middle East

SP : Singapore Model

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

8-1-1. MAIN SECTION

ns : not supplied

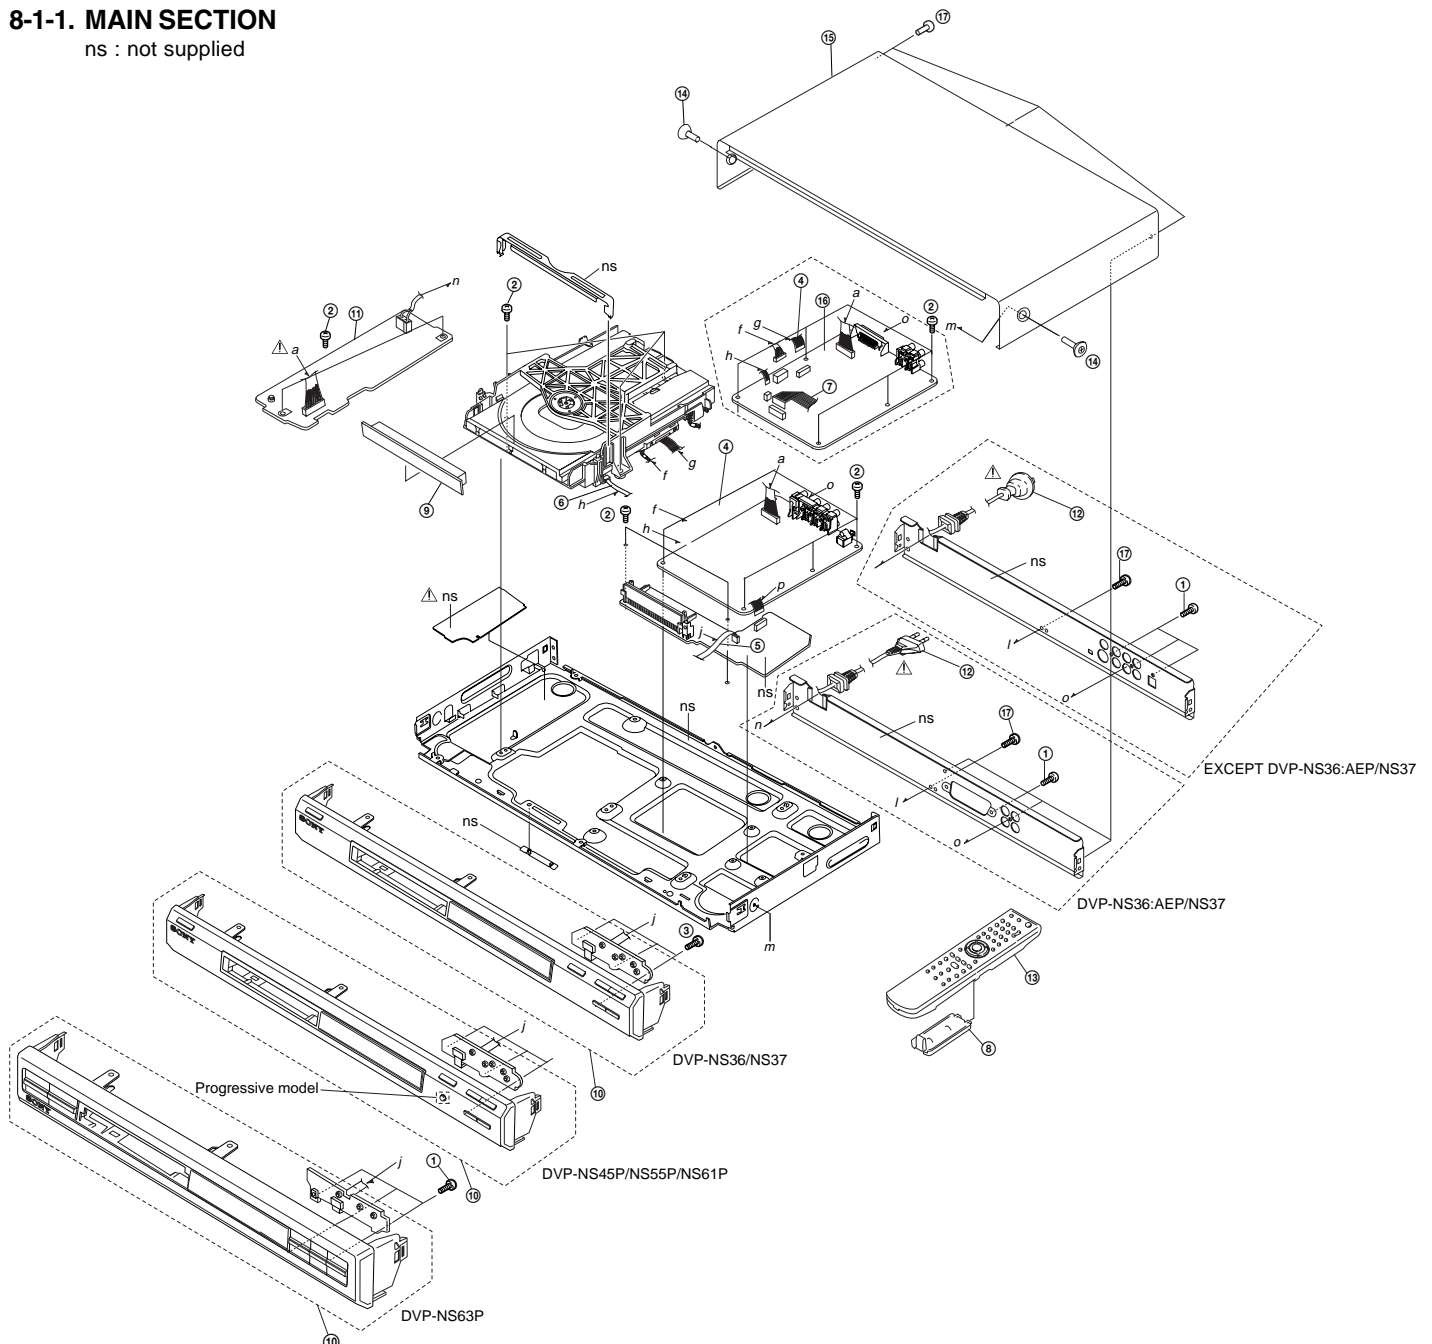


DVP-NS36/NS37/NS45P/NS55P/NS61P/NS63P

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-077-331-11	+BV3 (3-CR)		16	A-1158-445-A	SERVICE ASSY, MV (DVP-NS61P:AUS)	
2	3-077-331-21	+BV3 (3-CR)		16	A-1158-444-A	SERVICE ASSY, MV (DVP-NS61P:ME)	
3	3-087-053-01	+BVTP2.6 (3CR)					
4	1-831-523-11	CABLE, FLEXIBLE FLAT (FMO-009)		16	A-1163-457-A	SERVICE ASSY, MV (DVP-NS61P:CH)	
5	1-831-522-11	CABLE, FLEXIBLE FLAT (FSW-001)	(EXCEPT NS63P)	16	A-1169-017-A	SERVICE ASSY, MV (DVP-NS63P:E)	
* 6	1-831-524-11	CABLE, FLEXIBLE FLAT (FMS-010)					
* 7	1-831-525-11	CABLE, FLEXIBLE FLAT (FIM-013)		16	A-1169-215-A	SERVICE ASSY, MV (DVP-NS63P:AR)	
				16	A-1169-183-A	SERVICE ASSY, MV (DVP-NS63P:BR)	
5	1-831-569-11	CABLE, FLEXIBLE FLAT (FSW-002)	(NS63P)	17	3-710-901-71	TAPPING SCREW	
8	3-071-119-91	COVER, BATTERY (EXCEPT NS61P:CH)					
8	3-081-834-21	BATTERY COVER (SMK7G)	(NS61P:CH)				
9	2-660-717-01	COVER, TRAY (NS36/NS37/NS45P/NS55P)					
9	2-660-717-11	COVER, TRAY (NS61P:EXCEPT CH)					
9	2-664-754-11	COVER, TRAY (NS61P:CH)					
9	2-666-787-12	COVER, TRAY (P) (NS63P:E)					
9	2-666-787-22	COVER, TRAY (P) (NS63P:AR,BR)					
10	X-2103-134-1	PANEL ASSY, FRONT (DVP-NS36)	SILVER				
10	X-2103-135-1	PANEL ASSY, FRONT (DVP-NS36)	BLACK				
10	X-2103-351-1	PANEL ASSY, FRONT (DVP-NS37)					
10	X-2103-137-1	PANEL ASSY, FRONT	SILVER				
		(NS55P:US,CND,PX)					
10	X-2103-131-1	PANEL ASSY, FRONT	BLACK				
		(DVP-NS55P:US,CND)					
10	X-2103-224-1	PANEL ASSY,FRONT (DVP-NS45P)					
10	X-2103-310-1	PANEL ASSY, FRONT (DVP-NS61P:EXCEPT CH)					
10	X-2108-005-1	PANEL ASSY, FRONT (DVP-NS61P:CH)					
10	X-2108-337-1	PANEL ASSY, FRONT (DVP-NS63P:E)					
10	A-1169-195-A	PANEL ASSY, FRONT (DVP-NS63P:AR,BR)					
△11	1-468-971-11	POWER SUPPLY BLOCK					
		(NS36/NS37/NS55P:PX/NS61P/NS63P)					
△11	1-468-972-11	POWER SUPPLY BLOCK					
		(DVP-NS45P/NS55P:EXCEPT PX)					
△12	1-832-166-11	POWER-SUPPLY CORD					
		(DVP-NS36:EXCEPT UK/NS37/NS55P:PX/NS61P:ME,SP/NS63P)					
△12	1-832-167-11	POWER SUPPLY CORD (DVP-NS36:UK)					
△12	1-828-451-11	POWER-SUPPLY CORD					
		(DVP-NS45P/NS55P:EXCEPT PX)					
△12	1-828-450-11	POWER-SUPPLY CORD (DVP-NS55P:PX/NS61P:EXCEPT AUS,CH/NS63P:E,BR)					
△12	1-828-452-11	POWER-SUPPLY CORD (DVP-NS61P:AUS)					
△12	1-828-901-12	CORD, POWER (DVP-NS61P:CH)					
△12	1-828-460-11	CORD, POWER (DVP-NS63P:AR)					
13	1-479-179-21	REMOTE COMMANDER (RMT-D175P)					
		(NS36/NS37/NS61P:EXCEPT CH)					
13	1-479-671-11	REMOTE COMMANDER (RMT-D175C)(NS61P:CH)					
13	1-479-179-11	REMOTE COMMANDER (RMT-D175A)					
		DVP-NS45/55P/NS63P					
14	3-070-883-41	SCREW, TAPPING	SILVER				
14	3-070-883-31	SCREW, TAPPING	BLACK				
15	A-1158-160-A	SERVICE ASSY, CASE UPPER	SILVER				
15	A-1158-161-A	SERVICE ASSY, CASE UPPER	BLACK				
16	A-1158-174-A	SERVICE ASSY, MV (DVP-NS36:AEP,UK)					
16	A-1158-175-A	SERVICE ASSY, MV (DVP-NS36:RUS)					
16	A-1158-177-A	SERVICE ASSY, MV (DVP-NS37)					
16	A-1158-439-A	SERVICE ASSY, MV (DVP-NS45P/55P)					
16	A-1158-443-A	SERVICE ASSY, MV (DVP-NS61P:SP)					

Note :
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

8-1-2. MECHANISM DECK ASSEMBLY

ns : not supplied

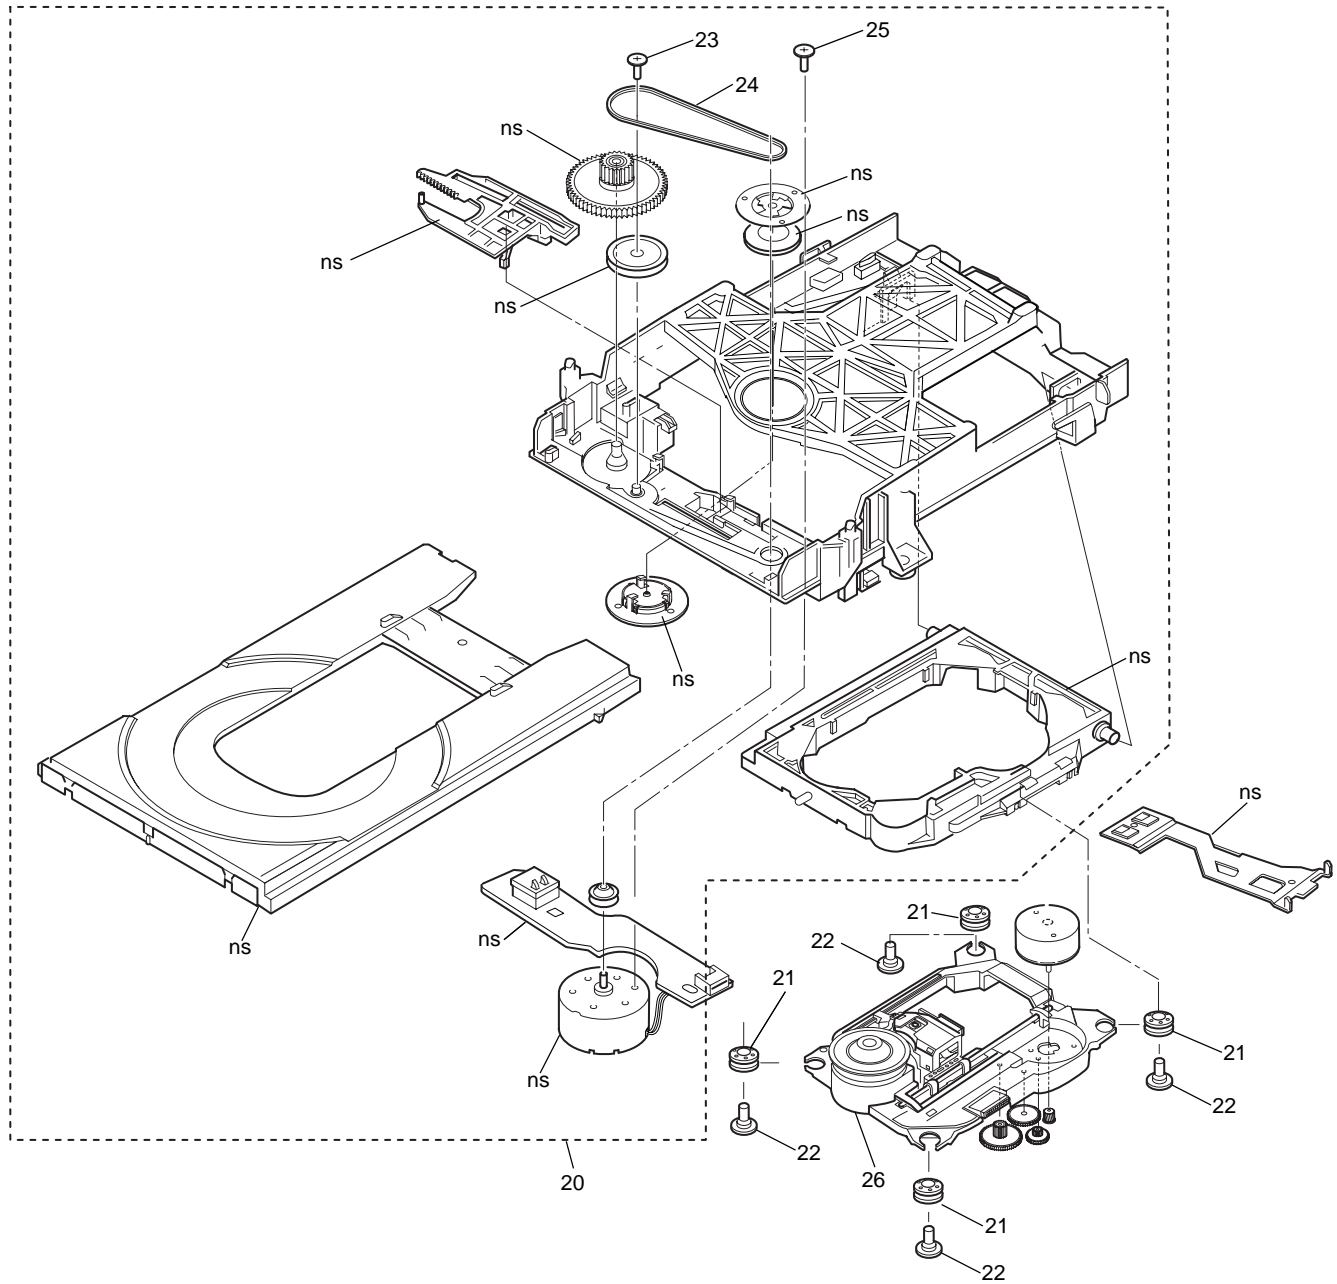

Ref. No.	Part No.	Description	Remark
20	A-6071-669-C	LOADING ASSY(M)	
21	3-088-372-01	INSULATOR	
22	3-087-599-01	INSULATOR SCREW	
23	4-674-137-11	SCREW (PTP2X5)	
24	3-088-371-01	BELT	
25	4-974-725-11	SCREW (M1.7X2.5), P	
26	8-820-321-05	DEVICE, OPTICAL KHM-313CAA/C2RP	

IF-144

IF-145

8-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- Not all of the parts for POWER BLOCK (HS12S2U) are listed.
- Items marked * are not stocked since they are seldom required for routine service.
Some delay should be anticipated when ordering these items.

- SEMICONDUCTORS
In each case, u: μ , for example:
uA. . : μ A. . uPA. . : μ PA. .
uPB. . : μ PB. . uPC. . : μ PC. .
uPD. . : μ PD. .
- CAPACITORS
uF: μ F
- COILS
uH: μ H
- Abbreviation
AEP : AEP Model
RUS : Russian Model
UK : UK Model
CND : Canadian Model
US : USA Model
AR : Argentina Model
BR : Brazilian Model
E : Latin America Model
PX : PX Model
AUS : Australia/New Zealand Model
CH : Chinese Model
ME : Middle East
SP : Singapore Model

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		IF-144 MOUNTED PWB (EXCEPT DVP-NS63P)				<TERMINAL>	
		IF-145 MOUNTED PWB (DVP-NS63P)					
		*****		* ET401	1-537-738-21	TERMINAL, EARTH (DVP-NS61P:CHNS63P)	
				* ET402	1-537-738-21	TERMINAL, EARTH	
				* ET403	1-537-738-21	TERMINAL, EARTH (EXCEPT DVP-NS61P:CH/NS63P)	
		<CAPACITOR>					
C401	1-163-021-91	CERAMIC CHIP	0.01UF 10.00% 50V			<IC>	
C403	1-163-021-91	CERAMIC CHIP	0.01UF 10.00% 50V	IC404	6-806-296-01	IC 86CK74AFG-6FP0	
C404	1-163-021-91	CERAMIC CHIP	0.01UF 10.00% 50V	IC406	6-705-738-01	IC RPM7240-H13 (EXCEPT DVP-NS63P)	
C405	1-163-021-91	CERAMIC CHIP	0.01UF 10.00% 50V	IC407	6-702-302-01	IC TK11133CSCL-G	
C406	1-163-009-91	CAP,CHIP CERAMIC	1000PF B 2012	IC408	6-704-114-01	IC S-80828CNUA-B8NT2G	
C408	1-163-021-91	CERAMIC CHIP	0.01UF 10.00% 50V			<CHIP	CONDUCTOR>
		EXCEPT (DVP-NS63P)		JR401	1-216-295-91	SHORT CHIP	0 (EXCEPT DVP-NS63P)
C409	1-104-665-91	ELECT	100UF 20.00% 25V	JR402	1-216-295-91	SHORT CHIP	0
C410	1-130-479-91	MYLAR	0.0047UF 5.00% 50V	JR404	1-216-295-91	SHORT CHIP	0 (EXCEPT DVP-NS63P)
C411	1-115-339-91	CERAMIC CHIP	0.1UF 10.00% 50V	JR405	1-216-295-91	SHORT CHIP	0
C412	1-126-965-91	ELECT	22UF 20.00% 50V	JR406	1-216-295-91	SHORT CHIP	0
		(DVP-NS63P)		JR407	1-216-295-91	SHORT CHIP	0
C413	1-115-339-91	CERAMIC CHIP	0.1UF 10.00% 50V	JR408	1-216-295-91	SHORT CHIP	0 (EXCEPT DVP-NS63P)
C414	1-163-021-91	CERAMIC CHIP	0.01UF 10.00% 50V	JR410	1-216-295-91	SHORT CHIP	0
C416	1-164-489-91	CERAMIC CHIP	0.22UF 10.00% 16V	JR411	1-216-295-91	SHORT CHIP	0
C417	1-164-489-91	CERAMIC CHIP	0.22UF 10.00% 16V			<INDUCTOR>	
C418	1-104-660-91	CAP, ELECT	47UF 20.00% 16V	L401	1-408-982-81	INDUCTOR	100UH
		(DVP-NS63P)				<FLUORESCENT>	
C419	1-126-965-91	ELECT	22UF 20.00% 50V	ND401	1-519-795-11	VACUUM FLUORESCENT DISPLAY (EXCEPT DVP-NS63P)	
		(EXCEPT DVP-NS63P)		ND401	1-519-795-21	VACUUM FLUORESCENT DISPLAY (EXCEPT DVP-NS63)	
C420	1-163-251-91	CERAMIC CHIP	100PF 5.00% 50V	ND401	1-519-868-11	VACUUM FLUORESCENT DISPLAY (DVP-NS63P)	
		(EXCEPT DVP-NS63P)				<TRANSISTOR>	
		<CONNECTOR>		Q401	8-729-056-46	TRANSISTOR 2SC5053T100Q	
CN403	1-815-382-11	CONNECTOR, FPC/FFC 7P (EXCEPT DVP-NS63P)		Q402	8-729-056-46	TRANSISTOR 2SC5053T100Q	
CN403	1-794-479-11	CONNECTOR, FPC/FFC 9P (DVP-NS63P)					
CN404	1-793-600-11	CONNECTOR, FFC/FPC (ZIF) 17P					
		<DIODE>					
D402	6-501-193-01	DIODE 1SS355WTE-17					
D403	6-501-193-01	DIODE 1SS355WTE-17					
D406	6-500-021-01	DIODE MM3Z4V7ST1					

IF-144

IF-145

MV

Ref. No.	Part No.	Description	Remark		
<RESISTOR>					
R401	1-216-073-91	RES, CHIP	10K (2012)		
R402	1-216-073-91	RES, CHIP	10K (2012)		
R403	1-216-025-91	RES-CHIP	100	5%	1/10W
R404	1-216-025-91	RES-CHIP	100	5%	1/10W
R405	1-216-073-91	RES, CHIP	10K (2012)		
R406	1-216-025-91	RES-CHIP	100	5%	1/10W
R407	1-216-025-91	RES-CHIP	100	5%	1/10W
R408	1-216-025-91	RES-CHIP	100	5%	1/10W
R409	1-216-025-91	RES-CHIP	100	5%	1/10W
R411	1-216-025-91	RES-CHIP	100	5%	1/10W
R412	1-216-073-91	RES, CHIP	10K (2012) (DVP-NS63P)		
R413	1-216-073-91	RES, CHIP	10K (2012) (EXCEPT DVP-NS63P)		
R414	1-216-073-91	RES, CHIP	10K (2012) (DVP-NS45P/NS55P/NS61P)		
R415	1-216-073-91	RES, CHIP	10K (2012) (DVP-NS36/NS37/NS63P)		
R416	1-216-073-91	RES, CHIP	10K (2012)		
R417	1-216-073-91	RES, CHIP	10K (2012)		
R418	1-216-073-91	RES, CHIP	10K (2012)		
R419	1-216-073-91	RES, CHIP	10K (2012)		
R420	1-216-027-91	RES-CHIP	120	5%	1/10W
R421	1-216-013-91	RES-CHIP	33	5%	1/10W
R422	1-216-097-91	RES-CHIP	100K	5%	1/10W
R423	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R424	1-216-017-91	RES-CHIP	47	5%	1/10W
		(EXCEPT DVP-NS63P)			
R426	1-216-073-91	RES, CHIP	10K (2012)		
R427	1-216-083-91	RES-CHIP	27K	5%	1/10W
R433	1-216-073-91	RES, CHIP	10K (2012) (EXCEPT DVP-NS45P/NS55P)		
R434	1-216-073-91	RES, CHIP	10K (2012) (EXCEPT DVP-NS45P/NS55P)		
R436	1-216-057-91	RES-CHIP	2.2K	5%	1/10W
		(DVP-NS36:AEP/NS61P:ME)			
R436	1-216-081-91	RES-CHIP	22K	5%	1/10W
		(DVP-NS36:RUS)			
R436	1-216-073-91	RES, CHIP	10K (2012) (DVP-NS45P/NS55P/NS61P:AUS/NS63P)		
R436	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
		(DVP-NS61P:SP)			
R437	1-216-081-91	RES-CHIP	22K	5%	1/10W
		(DVP-NS36:RUS)			
R437	1-216-073-91	RES, CHIP	10K (2012) (DVP-NS45P/NS55P/NS61P:SP)		
R437	1-216-057-91	RES-CHIP	2.2K	5%	1/10W
		(DVP-NS61P:AUS/NS63P)			
R437	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
		(DVP-NS61P:CH)			
R440	1-216-295-91	SHORT CHIP	0 (DVP-NS61P:CH/NS63P)		
R441	1-216-295-91	SHORT CHIP	0 (DVP-NS63P)		
R442	1-216-295-91	SHORT CHIP	0 (DVP-NS63P)		
<TRANSFORMER>					
T401	1-443-906-11	DC-DC CONVERTER TRANSFORMER (EXCEPT DVP-NS61P:CH)			
<VIBRATOR>					
X401	1-781-472-21	VIBRATOR, CERAMIC			

Ref. No.	Part No.	Description	Remark		
A-1158-174-A		SERVICE ASSY, MV (DVP-NS36:AEP,UK)			
A-1158-175-A		SERVICE ASSY, MV (DVP-NS36:RUS)			
A-1158-177-A		SERVICE ASSY, MV (DVP-NS37)			
A-1158-439-A		SERVICE ASSY, MV (DVP-NS45P/55P)			
A-1158-445-A		SERVICE ASSY, MV (DVP-NS61P:AUS)			
A-1158-444-A		SERVICE ASSY, MV (DVP-NS63P:E)			
A-1158-443-A		SERVICE ASSY, MV (DVP-NS61P:SP)			
A-1163-457-A		SERVICE ASSY, MV (DVP-NS61P:CH)			
A-1169-017-A		SERVICE ASSY, MV (DVP-NS63P:E)			
A-1169-215-A		SERVICE ASSY, MV (DVP-NS63P:AR)			
A-1169-183-A		SERVICE ASSY, MV (DVP-NS63P:BR)			

<CAPACITOR>					
C101	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C102	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C105	1-126-786-11	ELECT	47UF	20%	16V
C106	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C112	1-126-786-11	ELECT	47UF	20%	16V
C113	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C114	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C115	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C116	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C117	1-126-964-11	ELECT	10UF	20.00%	50V
C118	1-126-964-11	ELECT	10UF	20.00%	50V
C119	1-126-964-11	ELECT	10UF	20.00%	50V
C120	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C121	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C122	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C123	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C124	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C125	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C126	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C127	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C128	1-162-965-11	CERAMIC CHIP	0.0015UF	10.00%	50V
C130	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C131	1-125-889-91	CERAMIC CHIP	2.2UF	10%	10V
C132	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C133	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C135	1-164-677-11	CERAMIC CHIP	0.033UF	10.00%	16V
C136	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C137	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C138	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C139	1-162-919-11	CERAMIC CHIP	22PF	5.00%	50V
C140	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C141	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
		(DVP-NS45P/NS55P)			
C142	1-162-927-91	CERAMIC CHIP	100PF	5.00%	50V
		(DVP-NS45P/NS55P)			
C143	1-162-927-91	CERAMIC CHIP	100PF	5.00%	50V
		(DVP-NS45P/NS55P)			
C144	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C146	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C147	1-165-176-11	CERAMIC CHIP	0.047UF	10.00%	16V
C148	1-165-176-11	CERAMIC CHIP	0.047UF	10.00%	16V
C149	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C150	1-126-964-11	ELECT	10UF	20.00%	50V

DVP-NS36/NS37/NS45P/NS55P/NS61P/NS63P



Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C151	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V	C223	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C152	1-162-915-11	CERAMIC CHIP	10PF	0.50PF	50V	C224	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
		EXCEPT (DVP-NS61P/NS63P:E)				C225	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C152	1-162-916-91	CERAMIC CHIP	12PF	5.00%	50V	C226	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
		(DVP-NS61P/NS63P:E)				C228	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C153	1-162-917-11	CERAMIC CHIP	15PF	5.00%	50V						
		EXCEPT (DVP-NS61P/NS63P:E)				C301	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C153	1-162-916-91	CERAMIC CHIP	12PF	5.00%	50V	C305	1-104-660-91	ELECT	47UF	20.00%	16V
		(DVP-NS61P/NS63P:E)						(DVP-NS37)			
						C307	1-104-660-91	ELECT	47UF	20.00%	16V
								(DVP-NS37)			
C154	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V	C308	1-104-655-91	ELECT	470UF	20.00%	6.3V
C155	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V			(DVP-NS37)			
C156	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C310	1-126-786-11	ELECT	47UF	20%	16V
C158	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V						
C160	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V						
						C311	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V
								(DVP-NS36:AEP/NS37)			
C161	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C311	1-107-826-91	CERAMIC CHIP	0.1UF	10.00%	16V
C162	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V			(EXCEPT DVP-NS36:AEP/NS37)			
C163	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C312	1-104-660-91	ELECT	47UF	20.00%	16V
C164	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V			(DVP-NS37)			
C171	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C312	1-107-826-91	CERAMIC CHIP	0.1UF	10.00%	16V
						C313	1-126-786-11	ELECT	47UF	20%	16V
C172	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C314	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V
C174	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V			(DVP-NS37)			
C175	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C314	1-107-826-91	CERAMIC CHIP	0.1UF	10.00%	16V
C176	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C315	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C177	1-126-786-11	ELECT	47UF	20%	16V			(DVP-NS37)			
		(EXCEPT DVP-NS61P:CH)				C316	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
								(DVP-NS37)			
C177	1-126-947-11	CAP, ELECT	47MF (DVP-NS61P:CH)			C317	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C179	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V			(DVP-NS37)			
C180	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V						
C182	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V						
C183	1-128-934-91	CERAMIC CHIP	0.33UF	20%	10V						
						C318	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
								(DVP-NS37)			
C184	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C319	1-107-826-91	CERAMIC CHIP	0.1UF	10.00%	16V
C186	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V			(DVP-NS37)			
C187	1-104-660-91	ELECT	47UF	20.00%	16V	C326	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C188	1-165-908-11	CERAMIC CHIP	1UF	10%	10V			(DVP-NS37)			
C189	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V						
						C401	1-164-739-11	CERAMIC CHIP	560PF	5.00%	50V
						C402	1-164-739-11	CERAMIC CHIP	560PF	5.00%	50V
C190	1-126-786-11	ELECT	47UF	20%	16V						
		(EXCEPT DVP-NS61P:CH)				C403	1-164-218-11	CERAMIC CHIP	180PF	5.00%	50V
C190	1-126-947-11	CAP, ELECT	47MF (DVP-NS61P:CH)			C404	1-164-218-11	CERAMIC CHIP	180PF	5.00%	50V
C191	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V	C405	1-164-218-11	CERAMIC CHIP	180PF	5.00%	50V
C192	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C406	1-164-218-11	CERAMIC CHIP	180PF	5.00%	50V
C193	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V	C407	1-162-970-11	CERAMIC CHIP	0.01U	10.00%	25V
C195	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V	C408	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C197	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V	C409	1-126-960-11	ELECT	1UF	20.00%	50V
C199	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V	C410	1-104-660-91	ELECT	47UF	20.00%	16V
C203	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C411	1-104-660-91	ELECT	47UF	20.00%	16V
C205	1-164-230-11	CERAMIC CHIP	220PF	5.00%	50V	C412	1-126-960-11	ELECT	1UF	20.00%	50V
								(NS36:AEP,UK/NS37)			
C206	1-164-230-11	CERAMIC CHIP	220PF	5.00%	50V						
C208	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C413	1-126-934-11	ELECT	220UF	20.00%	16V
C209	1-164-677-11	CERAMIC CHIP	0.033UF	10.00%	16V	C415	1-164-230-11	CERAMIC CHIP	220PF	5.00%	50V
C210	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C416	1-164-230-11	CERAMIC CHIP	220PF	5.00%	50V
C211	1-164-677-11	CERAMIC CHIP	0.033UF	10.00%	16V	C422	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
						C425	1-162-970-91	CERAMIC CHIP	0.01UF	10.00%	25V
								(DVP-NS61P/NS63P)			
C212	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V						
C213	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C427	1-104-660-91	ELECT	47UF	20.00%	16V
C214	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V			(DVP-NS61P/NS63P)			
C216	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V	C428	1-126-964-11	ELECT	10UF	20.00%	50V
C217	1-104-660-91	ELECT	47UF	20.00%	16V	C429	1-126-964-11	ELECT	10UF	20.00%	50V
						C432	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C218	1-126-964-11	ELECT	10UF	20.00%	50V			EXCEPT (DVP-NS45P/NS55P)			
C219	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C432	1-162-927-91	CERAMIC CHIP	100PF	5.00%	50V
C220	1-126-964-11	ELECT	10UF	20.00%	50V			(DVP-NS45P/NS55P)			
C221	1-107-826-11	CERAMIC CHI	0.1UF	10.00%	16V						
C222	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V						

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C433	1-127-715-91	CERAMIC CHIP	0.22UF 10% 16V	* FB114	1-400-974-21	FERRITE	0UH (DVP-NS45P/NS55P)
C434	1-126-964-11	ELECT	10UF 20.00% 50V	* FB115	1-400-974-21	FERRITE	0UH
C435	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V			(EXCEPT NS36:AEP/NS37)	
C444	1-104-660-91	ELECT	47UF 20.00% 16V	FB116	1-469-118-21	FERRITE	0UH (DVP-NS45P/NS55P)
C501	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V	FB117	1-469-118-21	FERRITE	0UH (DVP-NS45P/NS55P)
				FB118	1-469-118-21	FERRITE	0UH (DVP-NS45P/NS55P)
C502	1-126-786-11	ELECT	47UF 20% 16V				
C503	1-126-786-11	ELECT	47UF 20% 16V	FB119	1-469-118-21	FERRITE	0UH
C504	1-126-786-11	ELECT	47UF 20% 16V			(DVP-NS45P/NS55P EXCEPT US,CND CHINA FACT)	
C508	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V	FB121	1-469-118-21	FERRITE	0UH (NS36:AEP/NS37)
C510	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V	FB122	1-469-128-21	FERRITE	0UH (DVP-NS45P/NS55P)
				FB123	1-414-226-21	FERRITE	0UH (DVP-NS45P/NS55P)
C513	1-107-826-11	CERAMIC CHIP	0.1UF 10.00% 16V	FB124	1-469-128-21	FERRITE	0UH (DVP-NS45P/NS55P)
C514	1-126-786-11	ELECT	47UF 20% 16V				
		<CONNECTOR>					
CN101	1-815-763-32	CONNECTOR, FFC/FPC 24P		FB125	1-414-226-21	FERRITE	0UH (DVP-NS45P/NS55P)
* CN105	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P		FB126	1-469-128-21	FERRITE	0UH (DVP-NS45P/NS55P)
CN106	1-793-600-11	CONNECTOR, FFC/FPC (ZIF) 17P		FB128	1-469-836-21	FERRITE	0UH (NS36:AEP/NS37)
* CN201	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P		* FB401	1-400-974-21	FERRITE	0UH
CN202	1-815-381-11	CONNECTOR, FPC/FFC 5P				(DVP-NS45P/NS55P/NS36:RUS)	
				FL101	1-234-177-21	FERRITE	0UH (NS36:AEP/NS37)
CN301	1-816-044-11	CONNECTOR, SQUARE TYPE 21P					
* CN501	1-564-009-11	PIN, CONNECTOR 10P		FL105	1-234-177-21	FERRITE	0UH (NS36:AEP/NS37)
		<DIODE>				<IC>	
D301	8-719-050-37	DIODE M1MA152WA-T1 (NS36:AEP/NS37)		IC101	6-707-535-01	IC CXD9849R	
D302	8-719-988-61	DIODE 1SS355TE-17 (NS36:AEP/NS37)		* IC102	6-806-445-01	IC S99-50068E-1010E (NS36/NS37)	
D303	8-719-071-15	DIODE HZM6.8ZWA1TL (NS36:AEP/NS37)		* IC10 2	6-806-224-01	IC S99-50068E-10GPDXXXU (NS45P/NS55P/NS63P:E)	
D304	8-719-071-15	DIODE HZM6.8ZWA1TL (NS36:AEP/NS37)		* IC102		IC(ROM)	
D305	8-719-071-15	DIODE HZM6.8ZWA1TL (NS36:AEP/NS37)		* IC102		IC(ROM)	
				* IC102		IC(ROM)	
D306	8-719-071-15	DIODE HZM6.8ZWA1TL (NS36:AEP/NS37)		* IC102		IC(ROM)	
D308	8-719-071-15	DIODE HZM6.8ZWA1TL (EXCEPT NS36:AEP/NS37)					
D309	8-719-069-56	DIODE UDZSTE-176.2B (NS36:AEP/NS37)		IC104	6-707-897-01	IC EDS6416AHTA-75-E	
D309	8-719-071-15	DIODE HZM6.8ZWA1TL (EXCEPT NS36:AEP/NS37)		IC105	6-702-302-01	IC TK11133CSCL-G	
D310	8-719-083-63	DIODE UDZSTE-1713B (NS36:AEP/NS37)		IC107	6-702-302-01	IC TK11133CSCL-G	
				IC108	6-703-224-01	IC S-80828CNNB-B8NT2G	
D401	8-719-914-43	DIODE DAN202K-T-146 (EXCEPT DVP-NS61P/NS63P)		IC110	6-707-739-01	IC MM1661JTRE	
				IC201	6-704-524-01	IC FAN8036L	
D401	8-719-050-38	DIODE M1MA152WK-T1 (DVP-NS61P/NS63P)		IC303	8-759-667-17	IC L79M05TLL-SONY-TL-E (NS36:AEP/NS37)	
D402	8-719-914-45	DIODE DAP202K-T-146 (EXCEPT DVP-NS61P/NS63P)		IC303	8-759-662-86	IC NJM79M05DL1A(Te2) (EXCEPT NSS36:AEP/NS37)	
				IC304	6-706-453-01	IC NJM2587V(Te2) (EXCEPT NS36:AEP/NS37)	
D402	8-719-050-37	DIODE M1MA152WA-T1 (DVP-NS61P/NS63P)		IC304	6-705-924-01	IC LA73052-TLM-E (NS36:AEP/NS37)	
D403	8-719-914-45	DIODE DAP202K-T-146 (NS36:AEP/UK/NS37)		IC305	6-703-378-01	IC NJM2575F1-TE2 (NS36:AEP/NS37)	
D404	8-719-988-61	DIODE 1SS355TE-17 (EXCEPT DVP-NS61P/NS63P)		IC401	8-759-249-16	IC NJM4558M-TE2	
D404	8-719-404-50	DIODE MA111-TX (DVP-NS61P/NS63P)		IC403	6-706-025-01	IC HA178L05UA-TL-E	
				IC405	6-600-430-01	IC TOTX177(F,T) (NS61P/NS63P:AR,BR)	
				IC406	6-707-490-01	IC AK4385ET-E2	
		<FERRITE>				<FUSE>	
FB106	1-469-324-21	FERRITE	0UH (EXCEPT DVP-NS45P/NS55P)	△ PS501	1-576-892-11	FUSE	1A 32V
* FB106	1-400-974-21	FERRITE	0UH (DVP-NS45P/NS55P)	△ PS502	1-576-892-11	FUSE	1A 32V
FB107	1-469-324-21	FERRITE	0UH (NS36:AEP/NS37)				
* FB107	1-400-973-21	FERRITE	0UH			<TRANSISTOR>	
		(EXCEPT NS36:AEP/NS37)		Q101	6-550-008-01	TRANSISTOR UM6K1N-TN	
FB108	1-469-324-21	FERRITE	0UH (EXCEPT DVP-NS45P/NS55P)	Q102	6-550-653-01	TRANSISTOR QST8TR	
				Q103	8-729-424-59	TRANSISTOR UN2212-TX	
* FB108	1-400-974-21	FERRITE	0UH (DVP-NS45P/NS55P)	Q301	8-729-024-89	TRANSISTOR MUN2213T1 (NS36:AEP/NS37)	
FB109	1-414-760-21	FERRITE	0UH	Q302	8-729-024-89	TRANSISTOR MUN2213T1 (NS36:AEP/NS37)	
FB110	1-414-760-21	FERRITE	0UH				
* FB111	1-400-974-21	FERRITE	0UH (DVP-NS45P/NS55P)				
* FB112	1-400-974-21	FERRITE	0UH (DVP-NS45P/NS55P)				

Note :
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

DVP-NS36/NS37/NS45P/NS55P/NS61P/NS63P



Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
Q303	8-729-024-83	TRANSISTOR MUN2111T1 (NS36:AEP/NS37)		R154	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)
Q304	8-729-024-89	TRANSISTOR MUN2213T1		R155	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)
Q305	8-729-024-83	TRANSISTOR MUN2111T1		R156	1-216-809-11	METAL CHIP	100 5% 1/10W
Q306	8-729-024-87	TRANSISTOR MUN2211T1 (NS36:AEP/NS37)		R159	1-216-864-11	SHORT CHIP	0
Q401	8-729-010-10	TRANSISTOR MSB710-RT1		R160	1-216-864-11	SHORT CHIP	0
Q402	8-729-024-89	TRANSISTOR MUN2213T1		R161	1-216-864-11	SHORT CHIP	0
Q403	8-729-010-25	TRANSISTOR MSD601-RT1		R162	1-216-864-11	SHORT CHIP	0
Q404	8-729-424-70	TRANSISTOR UN2217-QRS-TX		R163	1-216-864-11	SHORT CHIP	0
Q405	8-729-010-05	TRANSISTOR MSB709-RT1		R164	1-216-864-11	SHORT CHIP	0
Q406	8-729-024-89	TRANSISTOR MUN2213T1 (NS36:AEP/UK/NS37)		R165	1-216-864-11	SHORT CHIP	0
Q407	6-551-287-01	TRANSISTOR 2SD2704K-T146		R171	1-216-864-11	SHORT CHIP	0
Q408	6-551-287-01	TRANSISTOR 2SD2704K-T146		R172	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)
Q409	8-729-424-70	TRANSISTOR UN2217-QRS-TX (NS36:AEP/UK/NS37)		R173	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)
Q410	8-729-010-05	TRANSISTOR MSB709-RT1 (NS36:AEP/UK/NS37)		R174	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)
Q411	8-729-010-25	TRANSISTOR MSD601-RT1		R175	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)
Q416	8-729-010-05	TRANSISTOR MSB709-RT1		R189	1-218-827-11	METAL CHIP	150 0.5% 1/10W
Q501	6-551-458-01	TRANSISTOR KTD1624-B		R190	1-218-827-11	METAL CHIP	150 0.5% 1/10W
Q502	8-729-024-86	TRANSISTOR MUN2114T1		R191	1-216-821-11	METAL CHIP	1K 5% 1/10W
		<RESISTOR>		R192	1-218-827-11	METAL CHIP	150 0.5% 1/10W
				R193	1-216-821-11	METAL CHIP	1K 5% 1/10W
R101	1-216-809-11	METAL CHIP	100 5% 1/10W	R195	1-218-827-11	METAL CHIP	150 0.5% 1/10W
R102	1-216-295-71	SHORT CHIP	0 (EXCEPT NS36:AEP/NS37)	R197	1-218-827-11	METAL CHIP	150 0.5% 1/10W
R103	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)	R204	1-216-822-11	METAL CHIP	1.2K 5% 1/10W
R106	1-216-833-11	METAL CHIP	10K 5% 1/10W	R205	1-216-833-11	METAL CHIP	10K 5% 1/10W
R107	1-216-833-11	METAL CHIP	10K 5% 1/10W	R206	1-216-833-11	METAL CHIP	10K 5% 1/10W
R108	1-216-857-11	METAL CHIP	1M 5% 1/10W	R207	1-216-826-11	METAL CHI	2.7K 5% 1/10W
R109	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)	R208	1-216-839-11	METAL CHIP	33K 5% 1/10W
R110	1-216-841-11	METAL CHIP	47K 5% 1/10W	R209	1-216-839-11	METAL CHIP	33K 5% 1/10W
R111	1-216-809-11	METAL CHIP	100 5% 1/10W	R210	1-216-841-11	METAL CHIP	47K 5% 1/10W
R112	1-211-977-11	METAL CHIP	22 0.5% 1/10W	R212	1-216-833-11	METAL CHIP	10K 5% 1/10W
R113	1-211-977-11	METAL CHIP	22 0.5% 1/10W	R213	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R114	1-216-845-11	METAL CHIP	100K 5% 1/10W	R214	1-216-835-11	METAL CHIP	15K 5% 1/10W
R115	1-211-977-11	METAL CHIP	22 0.5% 1/10W	R215	1-216-834-11	METAL CHIP	12K 5% 1/10W
R116	1-216-821-11	METAL CHIP	1K 5% 1/10W	R216	1-216-834-11	METAL CHIP	12K 5% 1/10W
R117	1-216-841-11	METAL CHIP	47K 5% /10W	R219	1-216-838-11	METAL CHIP	27K 5% 1/10W
R118	1-216-801-11	METAL CHIP	22 5% 1/10W	R220	1-216-833-11	METAL CHIP	10K 5% 1/10W
R119	1-216-295-91	SHORT CHIP	0 (EXCEPT NS45P/NS55P)	R221	1-218-889-11	METAL CHIP	56K 0.5% 1/10W
R120	1-216-801-11	METAL CHIP	22 5% 1/10W	R222	1-216-839-11	METAL CHIP	33K 5% 1/10W
R121	1-216-801-11	METAL CHIP	22 5% 1/10W	R223	1-218-895-11	METAL CHIP	100K 0.5% 1/10W
R123	1-216-864-11	SHORT CHIP	0 (DVP-NS36:AEP/NS37)	R224	1-216-833-11	METAL CHIP	10K 5% 1/10W
R124	1-216-841-11	METAL CHIP	47K 5% 1/10W	R225	1-218-895-11	METAL CHIP	100K 0.5% 1/10W
R125	1-216-864-11	SHORT CHIP	0	R226	1-218-889-11	METAL CHIP	56K 0.5% 1/10W
R127	1-216-864-11	SHORT CHIP	0	R227	1-216-864-11	SHORT CHIP	0
R129	1-216-295-91	SHORT CHIP	0 (EXCEPT DVP-NS45P/NS55P)	R228	1-216-864-11	SHORT CHIP	0
R132	1-216-845-11	METAL CHIP	100K 5% 1/10W	R230	1-218-893-11	METAL CHIP	82K 0.5% 1/10W
R134	1-216-864-11	SHORT CHIP	0	R231	1-218-875-11	METAL CHIP	15K 0.5% 1/10W
R135	1-216-833-11	METAL CHIP	10K 5% 1/10W	R232	1-218-877-11	METAL CHIP	18K 0.5% 1/10W
R136	1-216-835-11	METAL CHIP	15K 5% 1/10W	R233	1-218-883-11	METAL CHIP	33K 0.5% 1/10W
R137	1-216-864-11	SHORT CHIP	0	R234	1-216-833-11	METAL CHIP	10K 5% 1/10W
R141	1-216-855-11	METAL CHIP	680K 5% 1/10W	R235	1-216-864-11	SHORT CHIP	0
R142	1-216-845-11	METAL CHIP	100K 5% 1/10W	R236	1-216-821-11	METAL CHIP	1K 5% 1/10W
R143	1-216-864-11	SHORT CHIP	0 (EXCEPT DVP-NS45P/NS55P)	R237	1-216-821-11	METAL CHIP	1K 5% 1/10W
R145	1-216-864-11	SHORT CHIP	0	R238	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R146	1-216-864-11	SHORT CHIP	0 (EXCEPT DVP-NS45P/NS55P)	R239	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R147	1-216-864-11	SHORT CHIP	0 (EXCEPT DVP-NS45P/NS55P)	R240	1-216-864-91	SHORT CHIP	0 (EXCEPT NS36:AEP/NS37)
R148	1-216-864-11	SHORT CHIP	0 (EXCEPT DVP-NS45P/NS55P)	R241	1-216-864-91	SHORT CHIP	0 (EXCEPT NS36:AEP/NS37)
R149	1-216-864-11	SHORT CHIP	0	R243	1-216-809-11	METAL CHIP	100 5% 1/10W
R151	1-216-833-11	METAL CHIP	10K 5% 1/10W	R246	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R152	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)	R247	1-216-821-11	METAL CHIP	1K 5% 1/10W
R153	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)	R248	1-216-864-11	SHORT CHIP	0

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R249	1-216-864-11	SHORT CHIP	0			R404	1-208-798-91	METAL CHIP	4.7K	0.5%	1/10W
R250	1-216-864-11	SHORT CHIP	0					(EXCEPT NS36:AEP/NS37)			
R251	1-216-864-11	SHORT CHIP	0			R405	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
R301	1-216-081-00	RES-CHIP	22K	5%	1/10W	R406	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
		(NS36:AEP/NS37)									
R304	1-216-055-00	RES-CHIP	1.8K	5%	1/10W	R407	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
		(NS36:AEP/NS37)				R408	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
						R409	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R305	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)			R410	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R306	1-216-105-91	RES-CHIP	220K	5%	1/10W	R411	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
		(NS36:AEP/NS37)									
R309	1-216-037-00	RES-CHIP	330	5%	1/10W	R412	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
		(NS36:AEP/NS37)				R413	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R310	1-216-037-00	RES-CHIP	330	5%	1/10W	R414	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
		(NS36:AEP/NS37)						(NS36:AEP,UK/NS37)			
R311	1-216-037-00	RES-CHIP	33	5%	1/10W	R416	1-216-830-11	METAL CHIP	5.6K	5%	1/10W
		(NS36:AEP/NS37)				R417	1-216-833-11	METAL CHIP	10K	5%	1/10W
R312	1-216-037-00	RES-CHIP	330	5%	1/10W	R418	1-216-845-11	METAL CHIP	100K	5%	1/10W
		(NS36:AEP/NS37)				R419	1-216-849-11	METAL CHIP	220K	5%	1/10W
R313	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)			R420	1-216-817-11	METAL CHIP	470	5%	1/10W
R316	1-216-051-00	RES-CHIP	1.2K	5%	1/10W	R421	1-216-833-11	METAL CHIP	10K	5%	1/10W
		(NS36:AEP/NS37)				R422	1-216-833-11	METAL CHIP	10K	5%	1/10W
R317	1-216-033-00	RES-CHIP	220	5%	1/10W						
		(NS36:AEP/NS37)				R424	1-216-833-11	METAL CHIP	10K	5%	1/10W
R318	1-216-033-00	RES-CHIP	220	5%	1/10W	R425	1-216-841-11	METAL CHIP	47K	5%	1/10W
		(NS36:AEP/NS37)				R426	1-216-817-11	METAL CHIP	470	5%	1/10W
						R427	1-216-817-11	METAL CHIP	470	5%	1/10W
R319	1-216-051-00	RES-CHIP	1.2K	5%	1/10W	R428	1-216-833-11	METAL CHIP	10K	5%	1/10W
		(NS36:AEP/NS37)									
R320	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)			R429	1-216-841-11	METAL CHIP	47K	5%	1/10W
R321	1-216-051-00	RES-CHIP	1.2K	5%	1/10W	R430	1-216-841-11	METAL CHIP	47K	5%	1/10W
		(NS36:AEP/NS37)				R431	1-216-833-91	METAL CHIP	10K	5%	1/10W
R321	1-216-833-91	METAL CHIP	10K	5%	1/10W			(NS36:AEP,UK/NS37)			
		(EXCEPT NS36:AEP/NS37)				R432	1-216-833-91	METAL CHIP	10K	5%	1/10W
R325	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)					(NS36:AEP,UK/NS37)			
R326	1-216-041-00	RES-CHIP	470	5%	1/10W	R433	1-216-841-91	METAL CHIP	47K	5%	1/10W
		(NS36:AEP/NS37)						(NS36:AEP,UK/NS37)			
R327	1-216-041-00	RES-CHIP	470	5%	1/10W	R434	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
		(NS36:AEP/NS37)				R435	1-216-829-91	METAL CHIP	4.7K	5%	1/10W
R327	1-216-833-91	METAL CHIP	10K	5%	1/10W			(EXCEPT NS36:AEP,UK/NS37)			
		EXCEPT(NS36:AEP/NS37)				R436	1-216-833-11	METAL CHIP	10K	5%	1/10W
R331	1-211-990-91	METAL CHIP	75	0.5%	1/10W			(NS36:AEP,UK/NS37)			
R332	1-211-990-91	METAL CHIP	75	0.5%	1/10W	R437	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
								(NS36:AEP/NS37)			
R333	1-211-990-91	METAL CHIP	75	0.5%	1/10W	R438	1-216-845-11	METAL CHIP	100K	5%	1/10W
R334	1-211-990-91	METAL CHIP	75	0.5%	1/10W						
R335	1-211-990-91	METAL CHIP	75	0.5%	1/10W	R439	1-216-845-11	METAL CHIP	100K	5%	1/10W
R336	1-216-017-91	RES-CHIP	47	5%	1/10W			(NS36:AEP/NS37)			
		(NS36:AEP/NS37)				R440	1-216-817-11	METAL CHIP	470	5%	1/10W
R336	1-211-990-91	METAL CHIP	75	0.5%	1/10W	R441	1-216-817-11	METAL CHIP	470	5%	1/10W
		(EXCEPT NS36:AEP/NS37)				R442	1-216-864-91	SHORT CHIP	0 (EXCEPT NS36:AEP/NS37)		
						R443	1-216-864-91	SHORT CHIP	0 (EXCEPT NS36:AEP/NS37)		
R340	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)			R444	1-216-809-11	METAL CHIP	100	5%	1/10W
R341	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)			R449	1-216-813-11	METAL CHIP	220	5%	1/10W
R342	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)			R451	1-208-807-11	METAL CHIP	68	5%	1/10W
R343	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)			R452	1-216-833-11	METAL CHIP	10K	5%	1/10W
R344	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)			R453	1-216-821-11	METAL CHIP	1K	5%	1/10W
R345	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)			R454	1-216-821-11	METAL CHIP	1K	5%	1/10W
R346	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)			R456	1-216-821-11	METAL CHIP	1K	5%	1/10W
R375	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)			R464	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R382	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)			R465	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R401	1-208-798-91	METAL CHIP	4.7K	0.5%	1/10W	R466	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
		(EXCEPT NS36:AEP/NS37)									
R402	1-208-798-91	METAL CHIP	4.7K	0.5%	1/10W	R467	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
		(EXCEPT NS36:AEP/NS37)				R468	1-216-864-91	SHORT CHIP	0 (EXCEPT NS36:AEP/NS37)		
R403	1-208-798-91	METAL CHIP	4.7K	0.5%	1/10W	R475	1-216-295-91	SHORT CHIP	0 (EXCEPT NS36:AEP/NS37)		
		(EXCEPT NS36:AEP/NS37)				R476	1-216-295-91	SHORT CHIP	0 (EXCEPT NS36:AEP/NS37)		
						R484	1-216-830-11	METAL CHIP	5.6K	5%	1/10W

DVP-NS36/NS37/NS45P/NS55P/NS61P/NS63P

MV	SW-468	SW-475
----	--------	--------

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark			
R489	1-216-833-11	METAL CHIP	10K	5%	1/10W	RB107	1-234-371-21	RES, NETWORK	47 (1005X4)			
R503	1-216-833-11	METAL CHIP	10K	5%	1/10W	RB108	1-234-371-21	RES, NETWORK	47 (1005X4)			
R504	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	RB109	1-234-371-21	RES, NETWORK	47 (1005X4)			
R505	1-216-827-11	METAL CHIP	3.3K	5%	1/10W							
R507	1-216-295-91	SHORT CHIP	0 (EXCEPT NS36:AEP/NS37)			RB110	1-234-371-21	RES, NETWORK	47 (1005X4)			
						RB111	1-234-371-21	RES, NETWORK	47 (1005X4)			
R508	1-216-295-91	SHORT CHIP	0 (EXCEPT NS36:AEP/NS37)			RB112	1-234-371-21	RES, NETWORK	47 (1005X4)			
R509	1-216-295-91	SHORT CHIP	0 (EXCEPT NS36:AEP/NS37)			RB113	1-234-371-21	RES, NETWORK	47 (1005X4)			
R510	1-216-295-91	SHORT CHIP	0 (EXCEPT NS36:AEP/NS37)			RB114	1-234-371-21	RES, NETWORK	47 (1005X4)			
R511	1-216-295-91	SHORT CHIP	0 (EXCEPT NS36:AEP/NS37)									
R515	1-216-864-11	SHORT CHIP	0 (EXCEPT NS36:AEP/NS37)			RB115	1-234-371-21	RES, NETWORK	47 (1005X4)			
R516	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)						<CRYSTAL>			
R517	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)									
R518	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)									
R520	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)			X102	1-813-539-11	QUARTZ CRYSTAL UNIT (EXCEPT DVP-NS61P)				
R521	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)			X102	1-813-219-31	QUARTZ CRYSTAL UNIT (DVP-NS61P)				
R523	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)									
R1101	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W							
R1102	1-218-827-11	METAL CHIP	150	0.5%	1/10W							
R1107	1-216-864-11	SHORT CHIP	0 (EXCEPT DVP-NS45P/NS55P)									
R1110	1-216-826-11	METAL CHIP	2.7K	5%	1/10W			SW-468 PWB MOUNTED BOARD (EXCEPT DVP-NS63P)				
								SW-475 PWB MOUNTED BOARD (DVP-NS63P)				

R1114	1-216-801-11	METAL CHIP	22	5%	1/10W							
R1115	1-216-805-11	METAL CHIP	47	5%	1/10W							
R1120	1-216-864-11	SHORT CHIP	0 (EXCEPT DVP-NS45P/NS55P)									
R1121	1-216-864-11	SHORT CHIP	0 (EXCEPT DVP-NS45P/NS55P)						<CAPACITOR>			
R1122	1-216-864-11	SHORT CHIP	0 (EXCEPT DVP-NS45P/NS55P)									
R1123	1-216-864-11	SHORT CHIP	0 (EXCEPT DVP-NS45P/NS55P)									
R1124	1-216-864-11	SHORT CHIP	0			C001	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V	
R1125	1-216-864-11	SHORT CHIP	0					(DVP-NS63P ONLY)				
R1129	1-216-845-11	METAL CHIP	100K	5%	1/10W							
R1133	1-216-864-11	SHORT CHIP	0						<CONNECTOR>			
R1134	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)			CN001	1-815-569-11	CONNECTOR, FFC/FPC 7P (EXCEPT DVP-NS63P)				
R1138	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)			CN002	1-794-473-11	CONNECTOR, FPC/FFC 9P (DVP-NS63P)				
R1139	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)									
R1140	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)						<DIODE>			
R1141	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)									
R1142	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)			D001	6-501-147-01	DIODE LTL-1MHAЕ-112A (EXCEPT DVP-NS36/NS37)				
R1143	1-216-864-11	SHORT CHIP	0									
R1144	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)						<IC>			
R1145	1-216-295-91	SHORT CHIP	0 (EXCEPT DVP-NS45P/NS55P)									
R1146	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)			IC001	6-703-744-01	IC GP1UE26SXKOF (DVP-NS63P)				
R1147	1-216-295-91	SHORT CHIP	0 (NS36:AEP/NS37)									
R1150	1-216-827-11	METAL CHIP	3.3K	5%	1/10W				<			
R1151	1-216-827-11	METAL CHIP	3.3K	5%	1/10W							
R1152	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	JR001	1-216-295-91	SHORT CHIP	0			
R1160	1-216-864-11	SHORT CHIP	0			JR002	1-216-295-91	SHORT CHIP	0			
						JR003	1-216-295-91	SHORT CHIP	0 (DVP-NS63P)			
R1168	1-216-815-11	METAL CHIP	330	5%	1/10W	JR004	1-216-295-91	SHORT CHIP	0 (DVP-NS63P)			
		(EXCEPT DVP-NS61P/NS63P:E)										
R1168	1-216-819-91	METAL CHIP	680	5%	1/10W				<RESISTOR>			
		(DVP-NS61P/NS63P:E)										
R1169	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)									
R1177	1-216-864-11	SHORT CHIP	0 (NS36:AEP/NS37)			R028	1-216-059-91	RES-CHIP	2.7K	5%	1/10W	
R1178	1-216-821-11	METAL CHIP	1K	5%	1/10W			(EXCEPT DVP-NS36/NS37)				
R1180	1-216-833-11	METAL CHIP	10K	5%	1/10W	R029	1-216-071-91	RES-CHIP	8.2K	5%	1/10W	
R1181	1-216-833-11	METAL CHIP	10K	5%	1/10W			(EXCEPT DVP-NS63P)				
						R030	1-216-063-91	RES-CHIP	3.9K	5%	1/10W	
R1183	1-216-833-11	METAL CHIP	10K	5%	1/10W			(EXCEPT DVP-NS63P)				
RB103	1-234-371-21	RES, NETWORK	47 (1005X4)			R031	1-216-059-91	RES-CHIP	2.7K	5%	1/10W	
RB104	1-234-371-21	RES, NETWORK	47 (1005X4)					(EXCEPT DVP-NS63P)				
						R033	1-216-025-91	RES-CHIP	100	5%	1/10W	
RB105	1-234-371-21	RES, NETWORK	47 (1005X4)					(DVP-NS45P/NS55P/NS61P)				
RB106	1-234-371-21	RES, NETWORK	47 (1005X4)									

SW-468**SW-475****POWER BLOCK (SRV1872WW)****POWER BLOCK (SRV1873UC)**

Ref. No.	Part No.	Description			Remark
R033	1-216-013-91	RES-CHIP (DVP-NS63P)	33	5%	1/10W
R034	1-216-017-91	RES-CHIP (DVP-NS63P)	47	5%	1/10W
		<SWITCH>			
S001	1-771-410-21	SWITCH, TACT			
S002	1-771-410-21	SWITCH, TACT (EXCEPT DVP-NS63P)			
S003	1-771-410-21	SWITCH, TACT (EXCEPT DVP-NS63P)			
S004	1-771-410-21	SWITCH, TACT			
S005	1-771-410-21	SWITCH, TACT (EXCEPT DVP-NS36/NS37)			
S006	1-771-410-21	SWITCH, TACT			

△ 1-468-971-11 POWER BLOCK (SRV1872WW)
(NS36/NS37/NS55P:PX/NS61P/NS63P)

△ 1-468-972-11 POWER BLOCK (SRV1873UC)
(NS45P/NS55P: EXCEPT PX)

Ref. No.	Part No.	Description	Remark
		ACCESSORIES *****	
	1-751-271-71	CORD, CONNECTION (AV) (EXCEPT NS36: AEP, RUS/NS37)	
	1-569-008-22	ADAPTOR, CONVERSION 2P (NS55P:PX/NS63P:E)	
	2-661-162-11	MANUAL, INSTRUCTION (ENGLISH) (NS55P:US,CND,PX)	
	2-661-162-21	MANUAL, INSTRUCTION (FRENCH) (NS55P:CND)	
	2-661-162-51	MANUAL, INSTRUCTION (ENGLISH) (NS45P:US,CND)	
	2-661-162-61	MANUAL, INSTRUCTION (FRENCH) (NS45P:CND)	
	2-661-163-11	MANUAL, INSTRUCTION (GERMAN) (NS36:AE1/NS37:AE1)	
	2-661-163-21	MANUAL, INSTRUCTION (FRENCH) (S36:AE1/NS37:AE1)	
	2-661-163-31	MANUAL, INSTRUCTION (DUTCH) (NS36:AE1/NS37:AE1)	
	2-661-163-41	MANUAL, INSTRUCTION (ITALIAN) (NS36:AE1/NS37:AE1)	
	2-661-163-51	MANUAL, INSTRUCTION (SPANISH) (NS36:AE2/NS37:AE2)	
	2-661-163-61	MANUAL, INSTRUCTION (PORTUGIS) (NS36:AE2/NS37:AE2)	
	2-661-163-71	MANUAL, INSTRUCTION (GREEK) (NS36:AE2/NS37:AE2)	
	2-661-164-61	MANUAL, INSTRUCTION (RUSSIAN) (NS36:RUS/NS37:RUS)	
	2-661-647-11	MANUAL, INSTRUCTION (ENGLISH) (DVP-NS61P:SP,AUS,ME)	
	(
	2-661-647-21	MANUAL, INSTRUCTION (THAI) (NS61P:SP)	
	2-661-647-31	MANUAL, INSTRUCTION (ARABIC) (NS61P:ME)	
	2-662-869-12	MANUAL, INSTRUCTION (CHINESE SIMPLIFIED)(NS61P:CH)	
	2-665-738-11	MANUAL, INSTRUCTION (SPANISH) (NS63P:E)	
	2-665-740-11	MANUAL, INSTRUCTION (SPANISH) (NS63P:AR)	
	2-665-739-11	MANUAL, INSTRUCTION (PORTUGUESE) (NS63P:BR)	
	1-479-179-21	REMOTE COMMANDER (RMT-D175P) (NS36/NS37/NS61P EXCEPT CH)	
	1-479-179-11	REMOTE COMMANDER (RMT-D175A) (NS45/NS55P/NS63P)	
	1-479-671-11	REMOTE COMMANDER (RMT-D175C) (NS61P:CH)	
	2-661-164-21	MANUAL, INSTRUCTION (NS36:AE3)	
	2-661-164-31	MANUAL, INSTRUCTION (NS36:AE3)	
	2-661-164-41	MANUAL, INSTRUCTION (NS36:AE3)	
	2-661-164-51	MANUAL, INSTRUCTION (NS36:AE3)	
	2-678-471-11	MANUAL, INSTRUCTION (NS36:UK)	
	2-662-869-11	MANUAL, INSTRUCTION (NS61:CH)	

Note :

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

