

Contents

Welcome.....	9
---------------------	----------

Using Your VAIO Notebook.....	11
--------------------------------------	-----------

Using the Keyboard.....	12
Combinations and functions with the Windows key	14
Indicators	15
Indicator lights	16
Combinations and functions with the Fn key	17
Using the Touchpad	19
VAIO Action Setup.....	21
Center Jog Dial Control.....	22
Using the center Jog Dial control	22
Launcher mode	23
Guide mode	24
Center Jog Dial back button.....	24
Using the center Jog Dial control with Sony software	25
Using the center Jog Dial control with other software	25
Using the Removable Hard Disk Drive.....	26
Notes on Removable Hard Disk Drive	26

Using the Optical Disc Drive	27
To insert a disc	27
To eject a disc	28
To play a DVD	29
To play an audio CD	30
Notes on CD and DVD discs	31
To write data to a CD-RW or CD-R disc	31
Using PC Cards	33
To insert a PC Card	33
To remove a PC Card	34
Using a Second Battery Pack	35
To insert a second battery pack	35
To charge the second battery pack	36
To remove the second battery pack	37
Using the Weight Saver	38
To attach the weight saver	38
To remove the weight saver	39
Using Memory Stick Media	40
Types of Memory Stick media	40
Write-protecting Memory Stick media	42
Formatting Memory Stick media	42
When using Memory Stick media	43
Power Saving Modes	45
Normal mode	45
Standby mode	45
Hibernate mode	45
Connecting a Phone Line	47
Connecting with another VAIO computer	48
Connecting to a Local Area Network (LAN)	49
Setting up your Ethernet connection	49

Connecting Peripheral Devices51

Connecting an External Floppy Disk Drive	52
To connect an external floppy disk drive.....	52
To insert a floppy disk	53
To remove a floppy disk	53
Removing an external floppy disk drive when the notebook is on	53
To carry an external floppy disk drive.....	54
Handling floppy disks	54
Connecting a Port Replicator	55
To attach your notebook to the port replicator	55
To remove your notebook from the port replicator	57
Connecting a PS/2 External Mouse or Keyboard.....	59
To connect an external mouse or keyboard	59
Connecting an Audio Device	60
Connecting a CD player, active speaker, or an amplifier ..	60
Connecting an Audio-Video Device	62
Connecting a Parallel Port Printer	65
To connect a printer	65
Connecting a USB Printer	66
To connect a USB printer	66
Connecting an External Display.....	67
To connect a computer display	67
To connect a multimedia computer display	69
To connect a projector	69
To select a display.....	69
Connecting a Universal Serial Bus Device	71
To connect a USB device.....	71
Connecting an i.LINK Device.....	72
To connect a digital video camera recorder.....	73

Connecting External Speakers	75
Before you connect external speakers.....	75
To connect external speakers	75
Connecting an External Microphone	76
To connect an external microphone	76
Expanding Your Notebook Capabilities	77
Personal Digital Assistant	77
Wireless LAN Access Point.....	77
Wireless LAN PC Card	78

Customizing Your VAIO Notebook 79

Displaying the Sony Notebook Setup Screen	80
To display the Sony Notebook Setup screen:	80
Sony Notebook Setup tabs	81
Controlling Power Management	82
Viewing the Power Management status icons	82
Power Management profiles	83
Power Management commands	86
Conserving battery power	86
Optimizing clock speed settings	86
Displaying Battery Information	88
Battery icon descriptions.....	88
Displaying detailed battery information	90
Selecting the Display Mode	91
Changing the window design of Sony software.....	93

Adding Memory 95

Precautions and Procedures	96
Typical expansion memory configuration	97
Models with 256 MB memory	97

Removing a memory module	98
Installing a memory module.....	100
Viewing the amount of memory.....	101

About the Software on Your Notebook .103

Software Overview	104
Application, Driver, and System Recovery CDs.....	109
Using Your Recovery CDs.....	110
To use the Application Recovery CD(s)	110
To use the Driver Recovery CD(s)	111
To use the System Recovery CD(s).....	111

VAIO AV Applications115

Overview of Preinstalled Software	115
DigitalPrint Software.....	119
Using PhotoCapture	119
Using PhotoCollection.....	122
Using PhotoDecor	124
Using PhotoAlbum	125
Using LabelMaker	127
DVgate Software	129
Connecting a digital video camcorder	129
MovieShaker Software	131
Creating movies with MovieShaker software.....	132
Using ImageStation online service with MovieShaker software.....	136
PictureGear Software	139
Managing your pictures	139
Creating a photo album.....	140

Smart Capture	143
Using Still Mode	144
Using Net Movie Mode.....	147
Using ImageStation with Smart Capture software.....	150
SonicStage Software	153
Electronic Music Distribution (EMD) Services.....	153
Starting SonicStage	153
Recording from a CD	155
Transferring songs (Check-In/Check-Out)	156
Additional features	158
SonicStage Premium Software	161
Overview of SonicStage Premium Software	161
To Use SonicStage Premium Software	164
To Use Playback and Recording Features	169
To Use the Visualizer, Equalizer, and Sound Effects	175
To Use the FM Tuner.....	177
To Use the Timer Functions.....	179
Additional Information	181
VisualFlow Software	183
Using VisualFlow software.....	183

Additional Software Information..... 185

VAIO Edit Components Software	185
-------------------------------------	-----

Troubleshooting..... 187

Troubleshooting Your Notebook	188
Troubleshooting the LCD Screen	192
Troubleshooting the Mouse and Touchpad	193
Troubleshooting Drives, PC Cards and Peripheral Devices	195

Troubleshooting Software	198
Troubleshooting the Modem	199
Troubleshooting Audio	200
Troubleshooting the Printer.....	202
<i>Getting Help</i>	<i>203</i>
Support Options.....	203
Software Support Information.....	205
Sony Service Center.....	206
<i>Index</i>	<i>207</i>

Welcome

Congratulations on your purchase of this Sony VAIO® computer, and welcome to the VAIO User Guide.

This User Guide provides detailed information on all aspects of using your new VAIO computer, from keyboard functions to preinstalled software applications.

In the left navigation window, click the topics you want to learn more about, and that information will be displayed in this main window.

Using Your VAIO Notebook


This section describes how to use your keyboard, touchpad, and optical drive. You will also find information on how to connect your notebook to another computer or network.

- ☐ Using the Keyboard
- ☐ Using the Touchpad
- ☐ VAIO Action Setup
- ☐ Center Jog Dial Control
- ☐ Using the Removable Hard Disk Drive
- ☐ Using the Optical Disc Drive
- ☐ Using PC Cards
- ☐ Using a Second Battery Pack
- ☐ Using the Weight Saver
- ☐ Using Memory Stick Media
- ☐ Power Saving Modes
- ☐ Connecting a Phone Line
- ☐ Connecting with another VAIO computer
- ☐ Connecting to a Local Area Network (LAN)



Using the Keyboard

Your notebook keyboard is very similar to that of a typewriter, but the keyboard has additional keys that perform specific computer-related tasks.

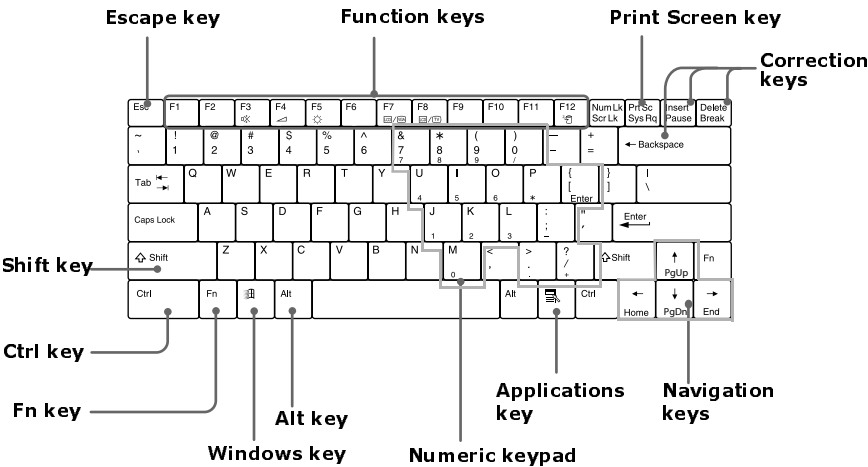









Keyboard




 
 


Key	Description
Numeric keypad	Contains the keys found on a typical calculator. Use the numeric keypad area to type numbers or to perform mathematical calculations such as addition and subtraction. Note that you must press the Num Lock key to activate the numeric keypad. (When you do so, the Num Lock light will be on.)
Navigation keys	Several keys are devoted to moving the cursor on the screen.
Correction keys	The Insert, Back Space, and Delete keys enable you to make corrections in your documents.

Key	Description
Function keys	The twelve function keys along the top of the keyboard are used to perform designated tasks. For example, in many applications, F1 is the Help key. The task associated with each function key may vary from one application to the next.
Escape key	The Esc (Escape) key is used to cancel commands.
Print Screen key	The Print Screen key takes an electronic snapshot of the screen and places it in the Windows Clipboard. You can then paste the screen shot into a document and print it.
Operator keys (Shift, Ctrl, Alt keys)	Several keys are always used with at least one other key: Ctrl, Alt, and Shift. When held down with another key, the Ctrl (Control) and Alt (Alternate) keys offer another way to give commands. For example, in many applications, instead of choosing the Save command from a menu, you can hold down Ctrl and press S (referred to as Ctrl+S). The Shift key operates the same way as on a typewriter; it is used to produce capital letters or special symbols such as @ and \$.
Windows key 	The key with the Windows logo displays the Windows Start menu; it is the equivalent of clicking the Start button on the taskbar. See “Combinations and functions with the Windows key” for more information.
Fn key	The Fn key is used in combination with other keys to issue commands. See “Combinations and functions with the Fn key” for more information.
Applications key 	The Applications key displays a shortcut menu of context-sensitive choices. Pressing this key is the equivalent of clicking the right mouse button.

Combinations and functions with the Windows key

<i>Combination</i>	<i>Function</i>
 + F1	Displays Windows Help.
 + Tab	Switches the selected button on the taskbar.
 + D	Displays the desktop.
 + E	Displays Windows Explorer.
 + F	Displays the Windows Find: All Files window to find a file or folder. This is the equivalent of selecting Find and then Files or Folders from the Start menu.
 + Ctrl + F	Displays the Windows Find: Computer window where you can locate other computers. This is the equivalent of selecting Find and then Computer from the Start menu.
 + M	Minimizes all displayed windows.
Shift +  + M	Returns all minimized windows to their previous size.
 + R	Displays the Run window. This is the equivalent of selecting Run from the Start menu.
Fn +  + Insert	Displays the Properties window. This is the equivalent of double-clicking the System icon in the Control Panel.

Indicators

Indicator	Function
Power 	Light is green when the power to the notebook is turned on, flashes amber in Standby mode, and turns off when the notebook is in Hibernate mode or powered off.
Battery 1 1 	Indicates the status of the battery inserted in the battery bay on the right side of the notebook.
Battery 2  2	Indicates the status of the battery inserted in the multipurpose drive bay on the left side of the notebook.
Memory Stick 	Indicates that the Memory Stick® slot is in use.
Hard disk 	This indicator will light when data is being read from or written to the hard disk. Do not enter Standby mode or turn off the notebook when this indicator is on.


Indicator lights

<i>Light</i>	<i>On</i>	<i>Off</i>
Num Lock	The number keys in the numeric keypad are active.	The alphanumeric character keys in the keypad area are active.
Caps Lock	The letters appear in uppercase as you type. The Shift key lowers the case of typed letters when Caps Lock is on.	Letters appear in lower case as you type (unless you hold down the Shift key).
Scroll Lock	The screen scrolls differently. (Exactly how it scrolls depends on the display specific application. It has no effect in many applications.)	Information moves across the display normally.

Combinations and functions with the Fn key





Combinations/ Feature


Function





Fn+  (F3)
Mute On/Off



Toggles the built-in speaker off and on.


Fn+  (F4)
Speaker volume

 
Adjusts the built-in speaker volume.
To increase volume, press Fn+F4, then  or .
To decrease volume, press Fn+F4, then  or .

Fn+  (F5)
Brightness control



Adjusts the brightness of the LCD.
To increase light intensity, press Fn+F5 and then  or .
To decrease light intensity, press Fn+F5 and then  or .

Fn+  /  (F7)
Switch to the
external
monitor/LCD

Toggles through the LCD, external display (connected to the
 Monitor connector) and both LCD and external display.




Connect the cable before you turn on the notebook, otherwise
Fn + F7 will not work.

Fn+  only/
 (F8)
Control AV out

Toggles between LCD-only, external-only, and dual LCD/TV
display modes.



Connect the cable before you turn on the notebook, otherwise
Fn + F8 will not work.

Fn+  (F12)
Hibernate

Provides for the lowest level of power consumption.
When you run this command, the state of the system and state
of the peripheral devices are written to the hard disk and the
system power is turned off. To return the system to its
original state, use the power button to turn on power.

Change text in this variable definition to document title.

<i>Combinations/ Feature</i>	<i>Function</i>
---	------------------------

Fn + Esc Standby	Puts the system into Standby mode, a power management state. To return the system to the active state, press any key or press the power button on your notebook.
---------------------	--

Fn + E	Ejects CD.
--------	------------

Fn + F	Display control. Minimizes and maximizes the LCD screen. If the default display resolution is reduced, this function maximizes the display resolution to fit the screen size. Maximizing the display screen enables you to view the display at a greater resolution.
--------	--




Some functions are not available until Windows® launches.

Using the Touchpad

The keyboard contains a cursor-pointing device called a touchpad. You can point to, select, drag, and scroll objects on the screen using the built-in touchpad.

Touchpad

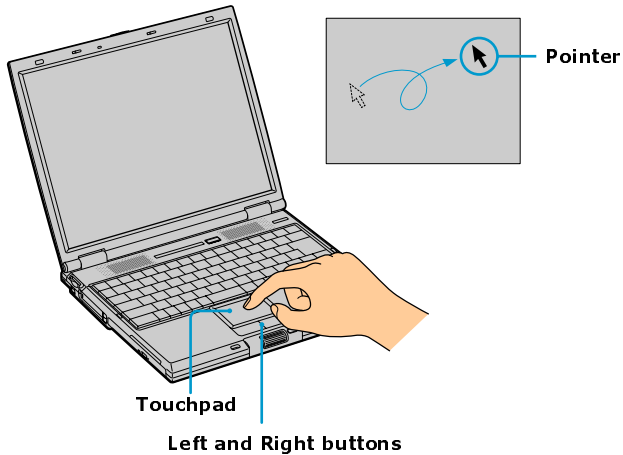

Action	Description
Point	Slide one finger on the touchpad to place the pointer on an item or object.
Click	Press the left button once.
Double-click	Press the left button twice.



Change text in this variable definition to document title.

Action	Description
Right-click	Press the right button once. In many applications, this action displays a shortcut menu of context-sensitive choices.
Drag	Slide one finger while pressing the left button.
Scroll	Move your finger along the right edge of the touchpad to scroll vertically. Move your finger along the bottom to scroll horizontally. (The scroll function is available only with applications that support a touchpad scroll feature.)



See Mouse Properties for information on touchpad features, such as clicking both buttons simultaneously, adjusting touchpad speed, and Easy Launcher functions. To access Mouse Properties, open the Start menu, point to Settings, Control Panel, and then click the Mouse icon in the Control Panel.

VAIO Action Setup


VAIO Action Setup manages the settings for your notebook's center Jog Dial™ control, Memory Stick® media, and i.LINK®* interface. An overview of some of the functions controlled by VAIO Action Setup is provided in this section. For more information on changing the settings using VAIO Action Setup, right-click the Jog Dial Utility icon  or  in the taskbar and click Help Topics.

* i.LINK is a trademark of Sony used to designate that a product contains an IEEE 1394 connection. The i.LINK connection may vary, depending on the software applications, operating system, and compatible i.LINK devices. All products with an i.LINK connector may not communicate with each other. Refer to the documentation that came with your compatible i.LINK device for information on operating conditions and proper connection. Before connecting compatible i.LINK PC peripherals to your system, such as a CD-RW or hard disk drive, confirm their operating system compatibility and required operating conditions.

Center Jog Dial Control



Your notebook is equipped with a center Jog Dial control located below the left and right buttons. The center Jog Dial control enables you to open an application, folder, or document from a predefined list by rotating and pressing the center Jog Dial control. In addition, when you press the center Jog Dial control, you can turn on your notebook automatically and start the selected application or document.

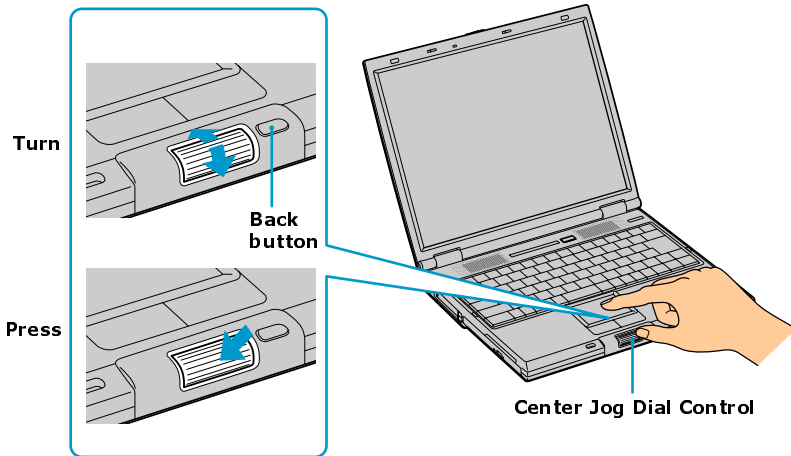Center Jog Dial Control



The center Jog Dial control window always appears in the display. It is either in the launcher mode or in the guide mode.

Using the center Jog Dial control

This section explains how to use the center Jog Dial control. For information on how to change the settings of the center Jog Dial control, right-click the Jog Dial Utility icon  or  in the task tray and click Help Topics.

Launcher mode

The center Jog Dial control window is in launcher mode until a software application is launched or the Jog Dial control window becomes active. When you select an item in the Jog Dial control window and it is displayed between orange bars, you can press the center Jog Dial control to view a submenu of that item.

Using Launcher mode

To use the center Jog Dial control, click the Jog Dial control window or the Jog Dial Utility icon in the taskbar. Alternatively, you can press the Ctrl key and the center Jog Dial control while the Jog Dial control window is active to switch to launcher mode.

Jog Dial Launcher



To select a desired item, proceed as follows:

- 1 Rotate the center Jog Dial control to select the item you want, then press the center Jog Dial control. The Jog Dial Launcher window switches to guide mode and shows the function of the center Jog Dial control.

Jog Dial Guide



- 2 Rotate or press the center Jog Dial control to use the desired function.
- 3 To select another item, repeat steps 1 through 3 above.

Guide mode

The Jog Dial control window is in the guide mode when software is in use and the software window is active. Depending on the software you are using, you can select items from the displayed list using the center Jog Dial control. You can switch between guide mode and launcher mode by pressing the Ctrl key and the center Jog Dial control.

Using Guide mode

The Jog Dial control window displays the function of the center Jog Dial control.

Center Jog Dial back button

The center Jog Dial control includes a back button located to the right of the control. Pressing this button brings you back to the previous screen.

Using the center Jog Dial control with Sony software

If Sony software that supports the center Jog Dial control is active, you can use the functions of the center Jog Dial control that are allocated to that software. For more information on functions allocated to software, see the software application's Help.

Using the center Jog Dial control with other software

If the software you are using supports the center Jog Dial control, you can still use the center Jog Dial control to scroll the window or adjust the window size.

Using a Dialog box


When a window such as Screen Properties is active, the Dialog box is displayed in the Jog Dial window. You can select an item in the window by rotating the center Jog Dial control. Pressing the center Jog Dial control is the equivalent of pressing Enter or Select.

Jog Dial Guide Dialog Box



Using the Removable Hard Disk Drive

Your notebook is equipped with a removable, preformatted hard disk drive, located on the right side next to the battery bay.

 Sony does not guarantee interoperability with removable hard disk drives other than the one provided with your VAIO® notebook.

Notes on Removable Hard Disk Drive

Electrostatic discharge (ESD) can damage the hard disk drive and related components. Sony cannot guarantee the hard disk drive against any damage caused by its removal from the drive bay, or from any mishandling of the unit resulting in physical damage. If removing the hard disk drive, take care not to expose it to ESD or static electricity.

The hard drive is sensitive to shock and mishandling; therefore, it is important to handle the hard disk drive by its edges, avoid applying pressure or squeezing the top of the hard drive case, and avoid dropping it.

Before you remove the hard disk drive, close open programs, and shut down the notebook; disconnect the computer and peripheral devices from electrical outlets; and remove the battery.

Removing the hard disk drive

- 1 Shut down your notebook and locate the latch for the hard disk drive.
- 2 Loosen and remove the screw on the bottom of the notebook that secures the hard disk drive. Use an appropriate screwdriver.
- 3 Slide the hard disk drive out of the drive bay.

Installing the hard disk drive

- 1 Slide the hard disk drive into the drive bay until it clicks into place.
- 2 Replace and tighten the screw that secures the hard disk drive.

Using the Optical Disc Drive

Your notebook comes with a removable optical disc drive located in the multipurpose bay. Depending on the system you purchased, your optical disc drive is either a CD-RW/DVD Combo Drive or a DVD-ROM drive.



The optical disc drive is removable when the power is on, but do not remove the drive when your notebook is in a power saving mode. Any attempt to do so may result in malfunction and/or data loss.

To insert a disc

- 1 Turn on the notebook.




When the notebook is in Standby or Hibernate mode, you cannot insert a disc. See “Controlling Power Management” for more information on Standby and Hibernate modes.

- 2 Press the Eject button to open the optical drive.

The tray slides out.


Ejecting the tray

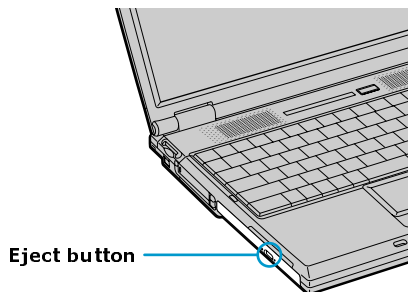

Avoid using adhesive labels to identify your discs. Adhesive labels may come off while the disc is in use in your optical drive, and may cause damage to the unit.

- 3 Place an optical disc on the tray with the label side facing up. For DVDs that can be played on both sides, the side of the disc facing up is the side that plays.
- 4 Press the disc onto the hub until the disc clicks securely into place.

Inserting an optical disc

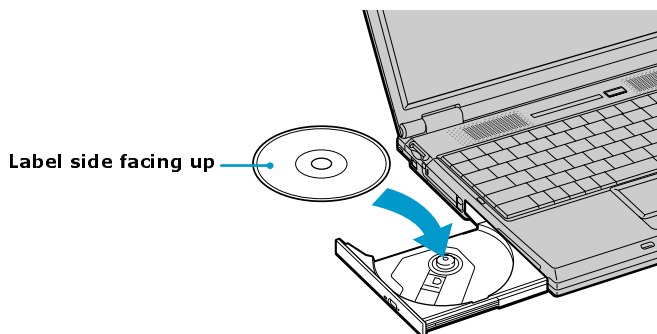

- 5 Close the tray by pushing it gently.

To eject a disc

When you finish using a disc, wait until the LED indicator turns off, and then press the Eject button to remove the disc.


When the notebook is in a power saving mode, you cannot remove an optical disc. See “Controlling Power Management” for more information about power saving modes.

If the optical disc does not slide out when you press the Eject button, turn off the notebook and insert a thin, pointed object (such as a paper clip) into the manual eject hole.



Make sure to seat the disc firmly over the hub fingers. If you do not seat the disc firmly, you could damage your optical drive and you may not be able to open the tray.

Manual eject hole

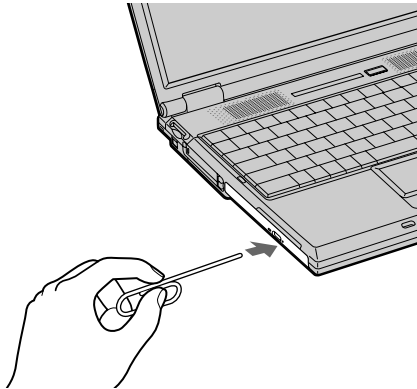

To play a DVD

To play a DVD, you may use the optical disc drive and the preinstalled WinDVD® software. For more information on WinDVD, see the Help manual that comes with your software.



Before you use the optical disc drive to play a DVD, quit any open applications.

Systems equipped with a CD-RW/DVD Combo Drive can read DVD-R media, but systems equipped with a DVD-ROM drive cannot read DVD-R media. When you are ready to play a DVD, read the suggestions below to maximize your video viewing experience.

- ❑ When playing a DVD on battery power, set the power management profile to DVD. You can also set the power management profile to Automatic Profile Selection if the display is not clear when using other profiles.



Automatic Profile Selection sets the power management profile to DVD whenever a DVD is inserted. See “Controlling Power Management” for more information.

- ❑ If you connect your notebook to a TV display, you may need to adjust the display resolution. Read the suggestions below to set the display resolution to the proper dimensions. Also see “Selecting the Display Mode” for more information.
- ❑ If the notebook is set to the default display setting, part of the video screen will not appear. To view the entire screen, adjust the display resolution to 640 x 480.



Some discs recorded at 20 or 24 bits may produce noise while playing. If you have audio devices connected, this may cause damage to your hearing and the speakers. Reduce the volume before playing a DVD.

You cannot use the Fn + F8 function to switch between LCD and TV once a DVD is inserted into the optical drive.

Do not switch between LCD and the external display while the DVD is playing. This may cause a malfunction, and you may need to restart the DVD software.

Do not switch the power saving modes while you are playing the DVD.

Change the settings to disable the screen saver and the virus checker.

Do not use memory-resident utility software to speed up disc access. This may cause the notebook to malfunction.

To play an audio CD

To play an audio CD, make sure the audio function is turned on. To do this, complete the following procedure.



The optical disc drive must be installed in the multipurpose bay before you begin.

- 1 Click Start in the Windows taskbar, select Settings, and then click System. The System Properties window appears.
- 2 Select the Hardware tab and then click Device Manager in the Device Manager box. A window appears, listing your notebook hardware devices.
- 3 Double-click DVD/CD-ROM drives. From the drop-down list, double-click the drive name. A properties window appears.
- 4 Select the “Enable digital CD audio for this CD-ROM device” check box if it is not already selected and then click OK.

Notes on CD and DVD discs


- ☐ Do not drop or bend the disc.
- ☐ Do not touch the surface of the disc. Fingerprints and dust on the surface of a disc may cause reading errors. Proper care of the disc is essential to maintain its reliability. Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray, as they may cause damage to the disc.
- ☐ For normal cleaning, hold the disc by its edge and use a soft cloth to wipe the surface from the center out.
- ☐ If the disc is badly soiled, moisten a soft cloth with water, wring it out well, and use it to wipe the surface of the disc from the center out. Wipe off any remaining moisture with a dry, soft cloth.

To write data to a CD-RW or CD-R disc *

You can use Easy CD Creator® software to write data to a CD-R or CD-RW disc. Easy CD Creator works only if the CD-R or CD-RW disc is formatted; otherwise, your notebook will not recognize it. To create a CD-R disc that is readable in a

* For notebook models equipped with a CD-RW/DVD Combo Drive.

CD-ROM drive, make sure you finish the writing process before ejecting it. For more information, see the instructions included with the Easy CD Creator software.

 For optimal writing speed, deactivate the screen saver and exit anti-virus software before writing data to a disc.

For best results, use CD-Rs that are compatible with 8x speed, as Easy CD Creator® is preset to that speed. Your notebook does not support 1x writing speed. If you use CD-RW or CD-R writing software other than Easy CD Creator, use PowerPanel to select the DVD Profile. Memory-resident disc utilities may cause unstable operation or data loss. Deactivate these utilities before writing data to a disc.

When using Easy CD Creator Standard, be sure to exit all other applications.

If your notebook computer has preinstalled Microsoft® Office applications, such as Excel, Word, and Outlook, turn off the FindFast application.

Do not put your notebook into power saving mode while using Easy CD Creator.




Do not strike or shake the notebook while writing data to a disc.

Always use the AC adapter as the power source for your notebook if you are writing data to a CD-RW or CD-R disc. Using battery power may result in data transfer failure.

Using PC Cards


Your notebook includes two PC Card slots. PC Cards enable you to connect portable external devices such as another hard disk drive or a PC Network Interface Card (NIC) to connect to a network.


 The PC Card slots can accommodate two Type I/II PC Cards, or one Type III PC Card. These slots are compatible with CardBus. Use the lower slot for Type III PC Cards. You do not need to shut down your notebook before inserting or removing a PC Card.

To insert a PC Card

- 1 Insert the PC Card into the PC Card slot. Make sure the front label of the PC Card is facing up.

Inserting a PC Card

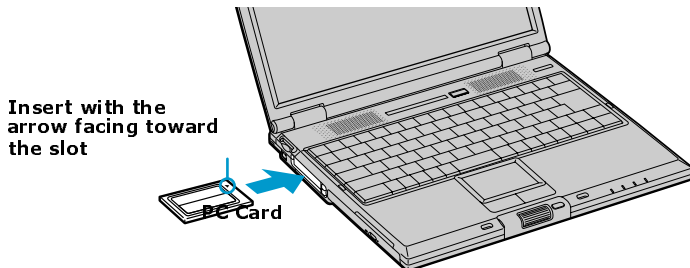

- 2 Push the the PC Card slot gently into the connector. The PC Card is automatically detected by your system. The  Unplug or Eject Hardware icon appears in the taskbar.




Do not force a PC Card into the slot as this may damage the connector pins.

Do not carry your notebook while touching the head of a PC Card (such as a wireless LAN card), as pressure or shock may damage the connector pins.

To remove a PC Card

The following procedure describes how to remove the PC Card while the notebook is on. If you want to remove the PC Card while the notebook is off, skip to step number 6 (below).

- 1 Double-click  in the taskbar. The “Unplug or Eject Hardware” dialog box appears.
- 2 Select the hardware device you wish to remove.
- 3 Click Stop. In the “Stop a Hardware device” dialog box, confirm that the device can be safely removed from the system.
- 4 Click OK. The message, “PC Card can now be safely removed from the system” appears.
- 5 Click OK again and then click Close.
- 6 Push the Release button. The Release button pops out.
- 7 Push the Release button a second time. The PC Card pops out. Gently grasp the card and pull it out of the slot.

Notes on using PC Cards

- ❑ For some PC Cards, if you alternate between normal power operation and the Standby or Hibernate power management modes while the card is inserted, you may find that a device connected to your system is not recognized. Restart your system to correct the problem.
- ❑ Some PC Cards may require that you disable idle devices when using the PC Card. You can use Sony Notebook Setup to disable devices. See “Displaying the Sony Notebook Setup Screen” for more information.
- ❑ Be sure to use the most recent software driver provided by the PC Card manufacturer.
- ❑ If an exclamation mark (!) appears on the Device Manager tab in the System Properties dialog box, remove the software driver and then reinstall it.
- ❑ You may not be able to use some PC Cards or some functions of the PC Card with this notebook. If you have difficulty inserting a card, check that you are orienting the card correctly. See the manual that came with your PC Card for more information on its use.

Using a Second Battery Pack


You can purchase a second rechargeable battery pack. With two battery packs, you can extend the time that you use your notebook with battery power. When using two battery packs, the battery pack you insert first charges first. The battery pack you insert second begins charging when the first battery pack is 85 percent full. You can monitor which battery pack is charging by observing the battery indicators.

To insert a second battery pack

- 1 If another device is in the multipurpose bay, remove that device.
- 2 Insert the battery pack into the multipurpose bay.

If the battery is being used, the battery 2 indicator turns on.


Second battery in multipurpose bay

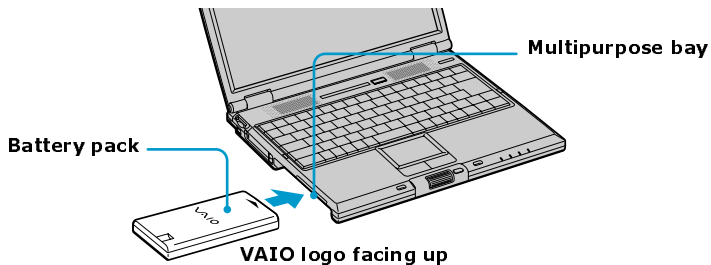

- 3 Attach the weight saver to the notebook to stabilize the battery pack. See “Using the Weight Saver” for more information.


To charge the second battery pack


Using weight saver for second battery cover

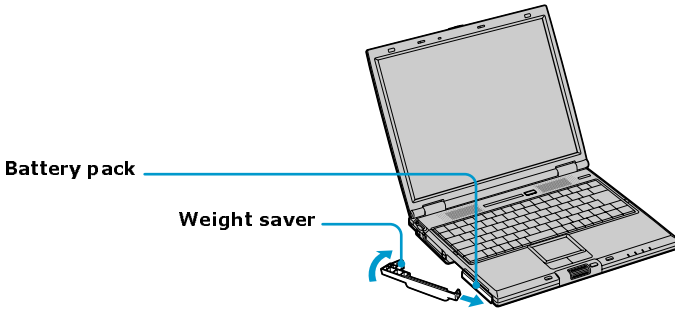

Keep the battery pack in the notebook while it is connected to AC power. The battery indicator flashes while the battery is charging. See also “To charge the battery pack” in the printed Quick Start for more information.

Charging the second battery

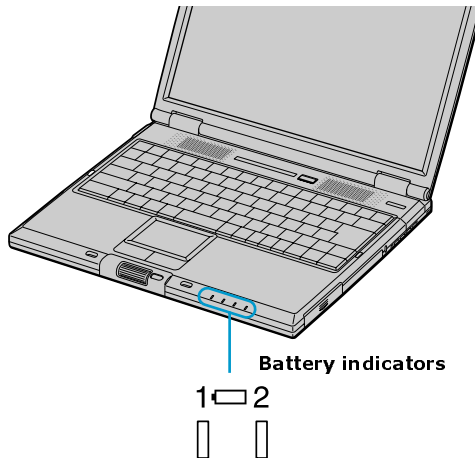


 To determine the amount of time the battery lasts, see “Displaying Battery Information” for details.

To remove the second battery pack

If you attach two battery packs, you can remove either of them without shutting down the notebook. When removing one battery pack, make sure that the other battery pack's indicator is on. If the indicator of the battery pack you are removing is on, right-click the battery icon on the taskbar and click the "Switch discharge battery" option.

- 1 To remove the battery pack, first slide the multipurpose bay Release lever in the direction of the arrow to unlock the weight saver.

Multipurpose bay Release lever

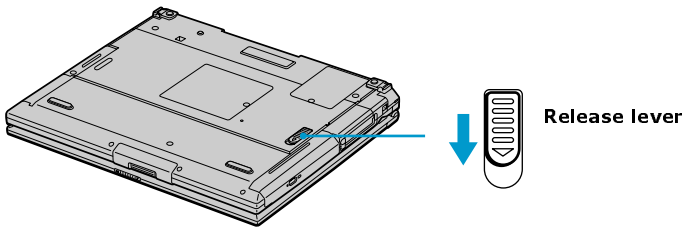

- 2 Remove the weight saver, and then pull out the battery pack.
- 3 Reinsert the weight saver. See "Using the Weight Saver" for more information.


Using the Weight Saver

The weight saver protects the multipurpose bay when it is empty, and secures the secondary battery when it is installed in the multipurpose bay.

To attach the weight saver

- 1 If another device, such as a battery pack, is in the multipurpose bay, remove that device. See “To remove the second battery pack” for more information.
- 2 Slide the weight saver in the direction of the arrow until it clicks into place.


Inserting the weight saver

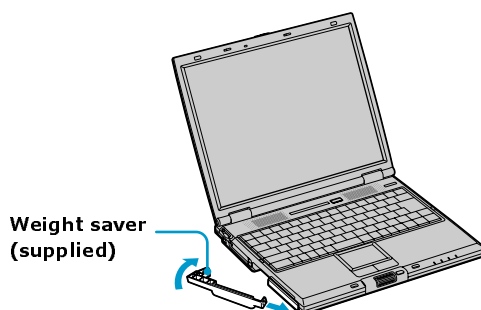

To remove the weight saver

- 1 To remove the weight saver, first slide the multipurpose bay Release lever in the direction of the arrow.

Multipurpose bay Release lever

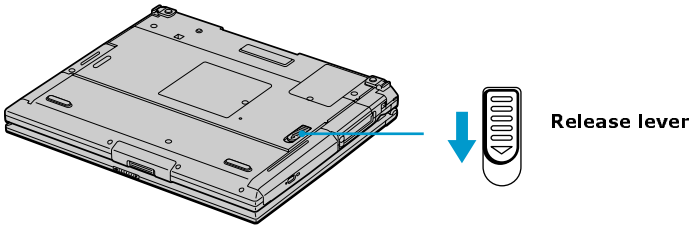



- 2 Remove the weight saver.

Using Memory Stick Media

This compact, portable, and versatile recording medium has a data capacity exceeding that of a floppy disk. The medium is specially designed for exchanging and sharing digital data with compatible products. Because it is removable, the media can be used for external data storage.

Types of Memory Stick media

The following two types of Memory Stick media can be used with your notebook:

- ❑ MagicGate™  Memory Stick media (hereafter called MG Memory Stick media), which is provided with copyright protection
- ❑ Memory Stick  Memory Stick media, which does not have the same copyright protection as MagicGate Memory Stick media

Some music files with secure copyright protection may be stored on MG Memory Stick media but not on regular Memory Stick media. You can also use MagicGate media-compatible devices to record and playback music when they are connected to your notebook.

You can store mixed data on the Memory Stick media. For example, you can copy an ordinary file on a MG Memory Stick media that already contains music.

What is MagicGate Memory Stick media?

MagicGate Memory Stick media provides copyright protection that consists of authentication and encryption technology. Authentication technology ensures that protected content is only transferred between compliant devices and media. Protected content is recorded and transferred in an encrypted format to prevent unauthorized duplication or playback.

 MG Memory Stick media has the MG mark .


To insert Memory Stick media


- 1 Insert the Memory Stick media with the arrow facing up and toward the Memory Stick media slot.

 Inserting the media in the wrong direction may damage the connector pins.

- 2 Carefully slide the Memory Stick media into the slot until it clicks in place.

Inserting Memory Stick media

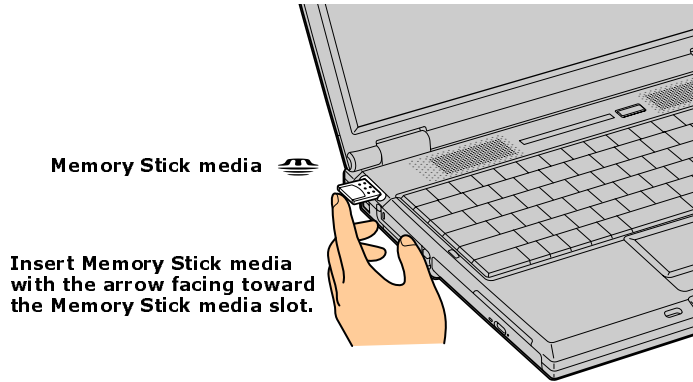

 At the default setting, the Visual Flow application starts automatically when you insert a Memory Stick media. You can change this setting in VAIO Action Setup.

To view the contents of Memory Stick media

Click the Removable Disk (S:) icon under My Computer to see the contents of the Memory Stick media.

To remove Memory Stick media

- 1 Check that the access light is off.
- 2 Push the Memory Stick media in toward the notebook.
- 3 When the Memory Stick media ejects, pull it out.


 Be careful when removing the Memory Stick media, as it may eject completely from the slot.

Write-protecting Memory Stick media

Memory Stick media is designed with a write-protect tab to protect valuable data from accidental erasure or overwriting. Move the tab to the right or left to set or release write-protection.

Write-protect off	Data can be saved on the Memory Stick media.
Write-protect on	Data can be read from but not saved on the Memory Stick media.

Using the Write-protect tab

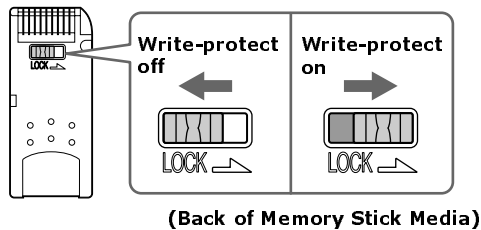

Formatting Memory Stick media

Memory Stick media is formatted for immediate use when you purchase it. If you need to reformat Memory Stick media, use the Memory Stick Formatter that is provided with the media. Follow the procedures included here. For more details about using Memory Stick Formatter, refer to Formatter Help.



Reformatting erases all current data that is stored on Memory Stick media. Before you reformat, confirm that the media does not contain files you want to keep.

- 1 Insert the Memory Stick media into the notebook. See “To insert Memory Stick media” for more information on inserting Memory Stick media.
- 2 Click the Start button, point to Programs, click Memory Stick Utility, and then click Memory Stick Formatter.

3 Click Start Formatter. Memory Stick Formatter begins.

 Do not try to format the Memory Stick using the Windows formatting function.

When using Memory Stick media

 When the write-protect tab of the Memory Stick media is set to LOCK, data cannot be recorded or erased.

Before using Memory Stick media, back up important data.

Wait a minimum of 10 seconds after the Memory Stick media finishes reading or writing data before removing the media.

If the media is removed prematurely, a blue screen with an error message appears, prompting you to continue or exit. Reinsert the media into the slot and press Enter to continue. This enables the media to finish reading or writing data.

You can view video clips that you have recorded with Memory Stick media-compatible video camera recorders.

The media slot can accommodate one Memory Stick media at a time.

You may copy images from a digital video camera using Memory Stick media.

Only MagicGate Memory Stick media can be used with copyright protected data such as music.

Copyright protected music cannot be checked-out to any Memory Stick media other than MG Memory Stick media.

Recorded music is limited to private use only. Using recorded music for any other purpose requires permission of the copyright holders.

Sony is not responsible for music files that cannot be recorded from a CD or downloaded from other sources.

Formatting Memory Stick media erases all data (including music data) previously saved to it. Before you format Memory Stick media, confirm that the media does not contain files you want to keep.



Do not use the media in locations that are subject to static electricity or electrical noise.

Do not touch the media connector with your finger or metallic objects.

Do not attach labels other than the supplied label to a media.

Do not bend, drop, or apply strong shock to the media.

Do not disassemble or modify the media.

Do not allow the media to get wet.


Do not use or store the media in a location that is subject to:

- ☐ **Extremely high temperatures, such as in a car parked in the sun**
- ☐ **Direct sunlight**
- ☐ **High humidity or places with corrosive substances**

To prolong the life of the media, use the supplied storage case. See the instructions that come with your media for more information on its use.

Power Saving Modes

When you use a battery as the source of power for your notebook, you can take advantage of power management settings to conserve battery life. In addition to the normal operating mode, which allows you to turn off specific devices, your notebook has two distinct power saving modes: Standby and Hibernate. When using battery power, be aware that the notebook automatically enters Hibernate mode when the remaining battery charge drops below 5 percent, regardless of the power management setting you select.

 If the battery level falls below 10 percent, you should either attach the AC adapter to recharge the battery or shut down your notebook and insert a fully charged battery.

Normal mode

Normal mode is the normal state of your notebook when it is in use. The power indicator displays green when your notebook is in this mode. To save power, you can turn off a specific device such as the LCD or the hard disk drive.

Standby mode

In Standby Mode the notebook saves the current state of the system in RAM and switches off power to the CPU. The amber power indicator flashes in this mode.

To activate Standby mode

To activate Standby mode, press Fn + Esc simultaneously. You can also click Start on the Windows taskbar, select Shut Down, and then use the drop-down arrow to choose Standby.

To return to normal mode

Press any key to return to normal mode.

Hibernate mode

In the Hibernate mode, the state of the system is saved on the hard disk drive and power is turned off. The power indicator is off in this mode.

To activate Hibernate mode


To activate Hibernate mode, press the key combination Fn+F12.

 The “Save to Disk Manager” screen appears, and then the notebook enters Hibernate mode.

Do not move the notebook until its power indicator turns off.

To return to normal mode


To return to normal mode, turn on the notebook by pressing the power button. The notebook returns to its previous state.

 When returning from Hibernate mode, the system status stored on the hard disk is erased and the notebook starts normally if you press the power button and hold for more than four seconds.

- ☐ Time required to return to normal mode
Standby requires less time than Hibernate to return to normal mode.
- ☐ Power consumption
Standby uses more power than Hibernate.


Connecting a Phone Line

You need to connect a phone line to take advantage of online services and the Internet.


 In order to register your Sony VAIO® notebook, register your software online, and use Sony Customer Support, you must connect to a phone line.

- 1 Plug one end of the phone cable into the modem port on the notebook.

Connecting phone cable

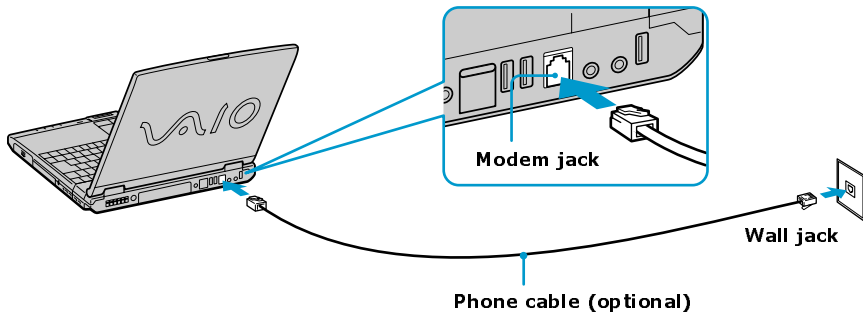

- 2 Plug the other end of the phone cable into the wall jack.

 Your notebook does not work with party lines, cannot be connected to a coin-operated telephone, and may not work with multiple phone lines or a private branch exchange (PBX). Some of these connections may result in excess electrical current and could cause a malfunction in the internal modem.


If you connect a phone line coming through a splitter, the modem or connected device may not work properly.

Connecting with another VAIO computer

The preinstalled Smart Connect software enables you to use an optional i.LINK®* cable to connect your VAIO notebook to another computer that also has Smart Connect. You can then use one computer to edit, copy or delete files on the other computer. You can also print from a printer attached to either computer.

See Smart Connect online help for more information.

Connecting with an i.LINK cable

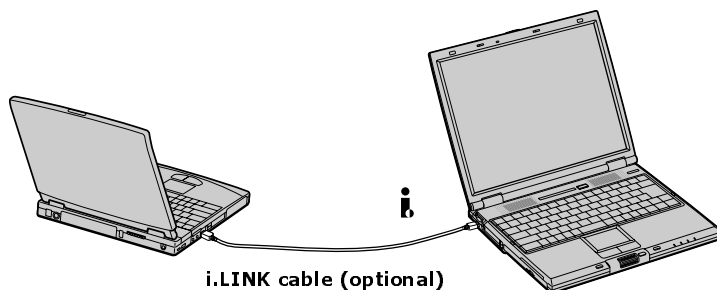

When you connect two VAIO computers, you must assign each computer a unique name. The computers can be identified by this unique name when the two computers are networked together


If you have purchased a VAIO computer or notebook that does not have Smart Connect 3.0 software preinstalled, consult the Sony Computing Support Web site at <http://www.sony.com/pcsupport> for more information..

 
* i.LINK is a trademark of Sony used to designate that a product contains an IEEE 1394 connection. The i.LINK connection may vary, depending on the software applications, operating system, and compatible i.LINK devices. All products with an i.LINK connector may not communicate with each other. Refer to the documentation that came with your compatible i.LINK device for information on operating conditions and proper connection. Before connecting compatible i.LINK PC peripherals to your system, such as a CD-RW or hard disk drive, confirm their operating system compatibility and required operating conditions.

Connecting to a Local Area Network (LAN)

You can connect your notebook to 10BASE-T and 100BASE-TX-type networks. For the detailed settings and devices needed to connect to the network, ask your network administrator.

Connecting to LAN

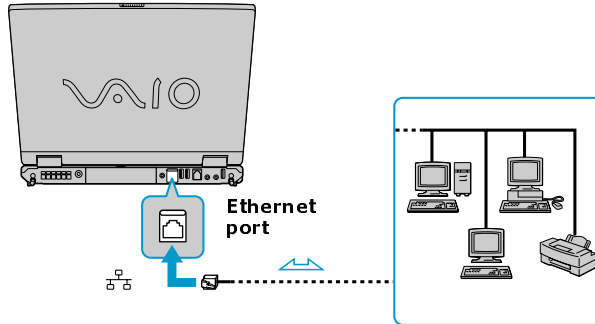

Warning: Only connect 10BASE-T and 100BASE-TX cables to the  Ethernet port. Do not connect any other type of network cable or phone cable. Connecting cables other than those listed above may result in an electric current overload and could cause a malfunction, excessive heat, or fire in the port. To connect the unit to the network, contact your network administrator.

Setting up your Ethernet connection

To connect to the network

- 1 Right-click My Network Places and select Properties.
- 2 Click Advanced and select Network Identification to set the computer name, domain, workgroup, and DNS suffix. You can also use the Network Identification Wizard.

To set the connections, bindings, and provider order

- 1 Right-click My Network Places and select Properties.
- 2 Click Advanced and select Advanced Settings. This will give you access to Adapters and Protocol Bindings and Provider Order.

Connecting Peripheral Devices

You can add functionality to your notebook by connecting a variety of peripherals, as discussed in the following sections:

- ☐ Connecting an External Floppy Disk Drive
- ☐ Connecting a Port Replicator
- ☐ Connecting a PS/2 External Mouse or Keyboard
- ☐ Connecting an Audio Device
- ☐ Connecting an Audio-Video Device
- ☐ Connecting a Parallel Port Printer
- ☐ Connecting a USB Printer
- ☐ Connecting an External Display
- ☐ Connecting a Universal Serial Bus Device
- ☐ Connecting an i.LINK Device
- ☐ Connecting External Speakers
- ☐ Connecting an External Microphone
- ☐ Expanding Your Notebook Capabilities

Connecting an External Floppy Disk Drive


You can connect a Sony USB floppy disk drive (not supplied) to the ♪ USB port on your notebook.

To connect an external floppy disk drive

 You do not need to shut down your notebook before connecting or disconnecting a floppy disk drive.

Plug the USB cable from the optional floppy disk drive into the ♪ USB port on the back panel of the notebook. The VAIO logo on the disk drive should be facing upward.


Connecting an External Floppy Disk Drive

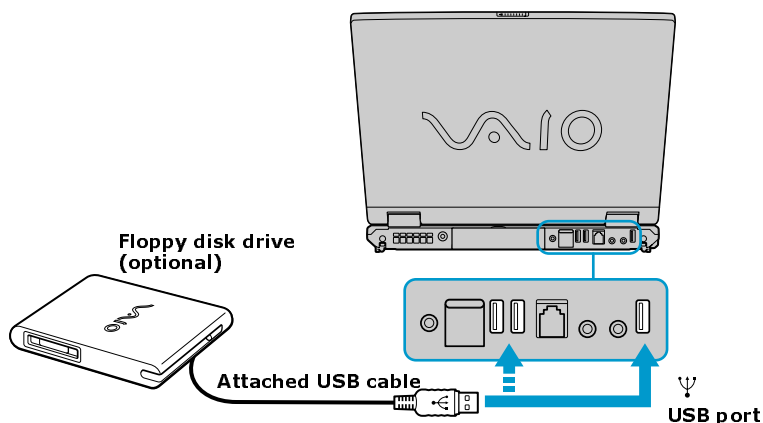

To insert a floppy disk

- 1 Hold the floppy disk with the label side facing upward.
- 2 Gently push the floppy disk into the drive until it clicks into place.


Inserting a Floppy Disk

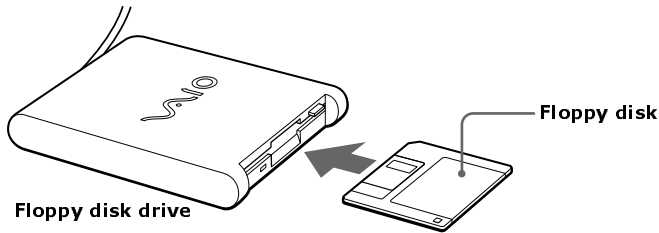


To remove a floppy disk


- ❑ When you finish using the floppy disk, wait until the LED indicator turns off and then press the Eject button to remove the floppy disk.

Removing a Floppy Disk

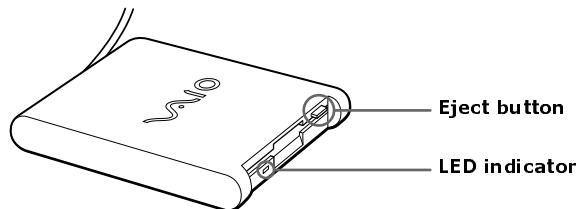

Removing an external floppy disk drive when the notebook is on

 If your notebook is turned off, you do not have to follow these instructions.

- 1 Double-click  in the task tray.
- 2 The “Unplug or Eject Hardware” dialog displays.
- 3 Select the USB Floppy Disk Drive by clicking it.
- 4 Click Stop.
- 5 Confirm the USB Floppy Disk Drive is selected in the “Stop a hardware device” dialog box.
- 6 The message “Floppy Disk Drive can now be safely removed from the system” appears. Click OK.
- 7 Unplug the floppy disk drive from the notebook.

To carry an external floppy disk drive

Fold the floppy disk cable into the side compartment on the floppy disk drive.

Carrying an External Floppy Disk Drive




Handling floppy disks

- ☐ Do not open the shutter manually and touch the surface of the floppy disk.
- ☐ Keep floppy disks away from magnets.
- ☐ Keep floppy disks away from direct sunlight and other heat sources.


Connecting a Port Replicator

Your notebook supports the use of a port replicator (not supplied). Attaching a port replicator enables you to connect additional peripherals to your notebook.

Port replicator

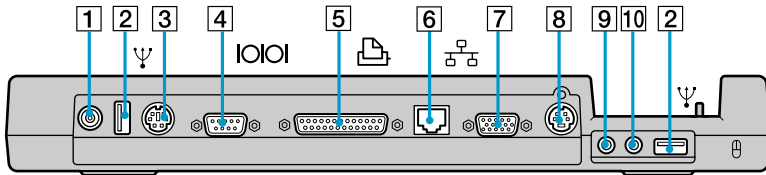


1	DC In port	6	Network port (Ethernet 10BASE-T/100BASE-TX)
2	USB ports	7	VGA port
3	Mouse/Keyboard (PS/2) port	8	S-Video out jack
4	Serial port	9	Video out jack
5	Printer port	10	Line-In jack

 The port replicator can be powered only with an AC adapter. Do not remove the AC adapter from the port replicator or the AC outlet when using the port replicator; this may cause data damage or hardware malfunctions.

To attach your notebook to the port replicator


To supply power to your notebook while it is connected to the port replicator, connect the AC adapter directly to the port replicator.

 When attaching your notebook to the port replicator, do not attempt to insert or remove the battery pack. Lifting and turning the notebook with an attached port replicator could cause a temporary loss of power.


When connecting the video cables to S Video and Video Out simultaneously, only the S Video port can be used.

- 1 Turn off the notebook and disconnect all peripheral devices.
- 2 Plug the cable attached to the AC adapter into the **DC IN** port on the port replicator. Plug the power cord into the AC adapter and an AC outlet.


Connecting AC adapter to port replicator

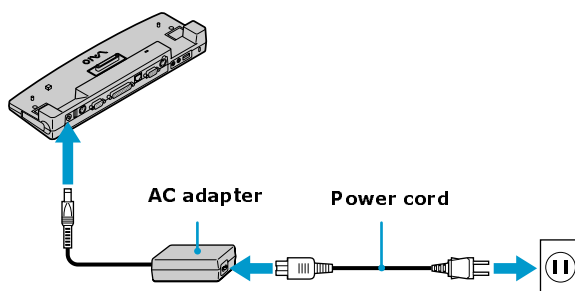

The power indicator on top of the port replicator turns green.

 Use the AC adapter that comes with your notebook or the optional Sony adapter.


Power indicator

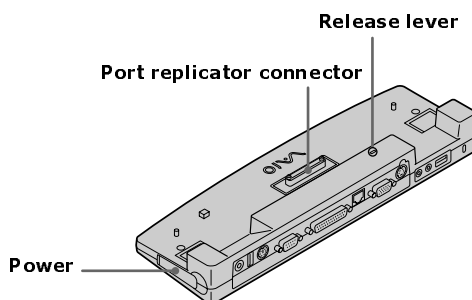

- 3 Close the tilt stands before attaching the notebook to the port replicator.

- 4 Align the bottom connector of the notebook with the connectors on the port replicator and push down until it clicks into place.

Attaching notebook to port replicator

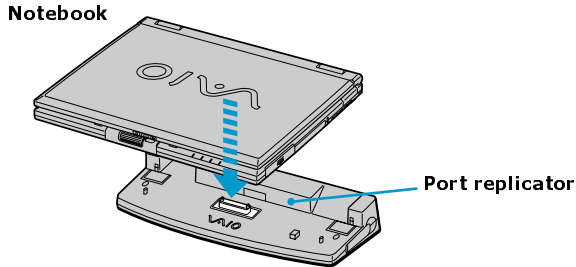


- 5 Turn on the notebook.

To remove your notebook from the port replicator

- 1 Use the Unplug/Hardware box to stop all connected peripherals, then disconnect the peripherals from the port replicator.
- 2 Pull the levers on each side of the port replicator to release the notebook from the port replicator.


Releasing notebook from port replicator

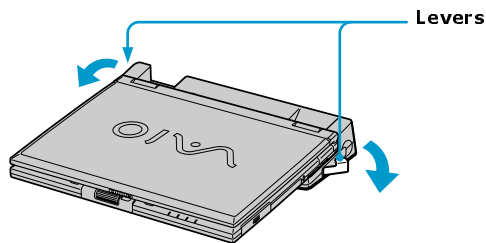

Change text in this variable definition to document title.


- 3 Lift the notebook away from the port replicator.

Removing notebook from port replicator

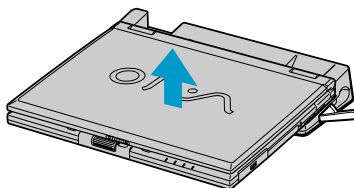



Connecting a PS/2 External Mouse or Keyboard

You can connect an external mouse or keyboard to the optional port replicator using a similar type PS/2® plug or adapter.


 Before you connect or disconnect the mouse or keyboard, turn off the notebook.


You can only connect one external device at a time. Therefore, it is impossible to connect both a PS/2® mouse and PS/2 keyboard simultaneously.

To connect an external mouse or keyboard

- ❑ Locate the mouse and keyboard port on the port replicator identified by the  /  symbols.
- ❑ Plug the mouse or the keyboard cable into this port with the arrow facing upward.


Connecting external mouse or keyboard

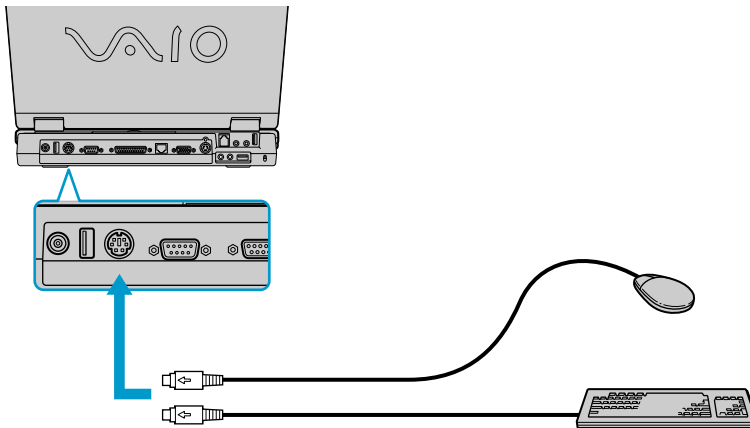

 See the manual that came with your mouse or keyboard for more information on its installation and use.

Connecting an Audio Device


You can connect an audio device to the optional port replicator or the notebook. See the manual and online help that came with your audio device for detailed instructions.

 To connect an audio device, use mini-plug cables shorter than 2 meters and with no resistance .

Connecting a CD player, active speaker, or an amplifier


Use the optional port replicator to connect a CD, MiniDisc, or audio cassette player to the LINE IN jack and experience higher quality audio. You may also take advantage of audio output sources and connect an active speaker or an amplifier to the Headphone jack on the notebook.

Connecting an Audio Device to the Port Replicator

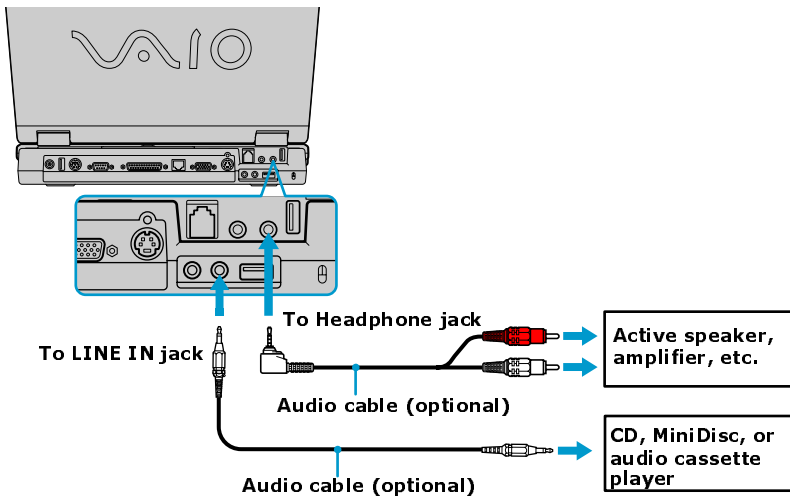


Without the optional port replicator, simply connect an audio output device to the Headphone jack on the notebook.

Connecting an Audio Device to the Notebook

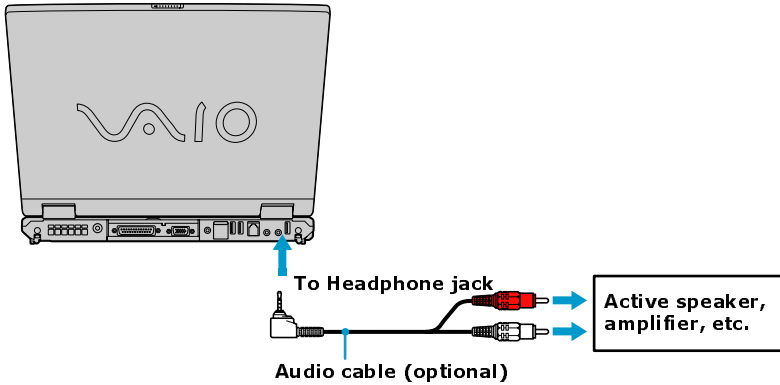


Connecting an Audio-Video Device

You can connect an audio-video (AV) device, such as a TV or a VCR, to the optional port replicator or the notebook.

 Prior to attaching a video device, unplug the connecting cable from the Monitor jack.


To connect an AV device to the optional port replicator, use the S-video jack and the Headphone jack, which require a S-video cable and an audio cable. To connect an AV device to the notebook, use the AV out jack, which requires an audio-video cable. Remember to switch the TV input channel to external input and set up the TV configuration system. See “Selecting the Display Mode” for more information.


Connecting a TV to the Port Replicator S-video Jack

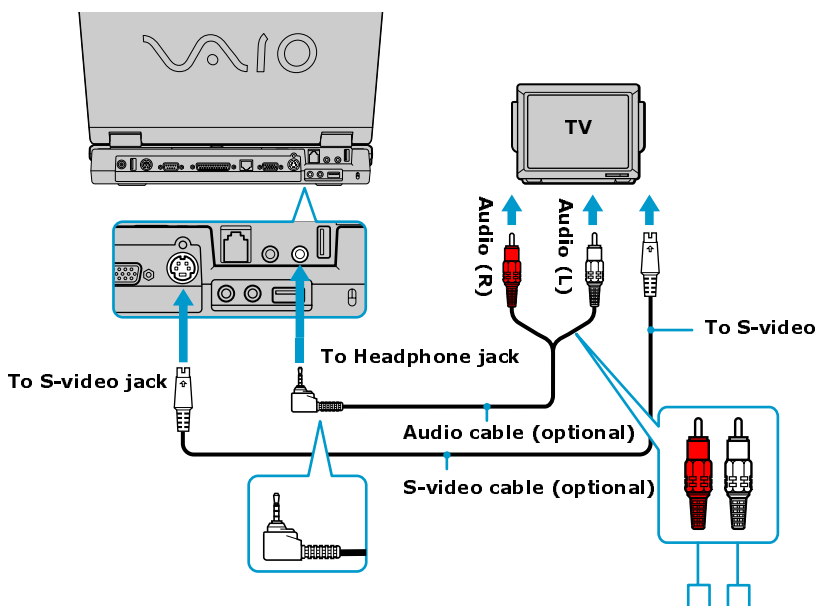

If you connect an AV device to the S-video jack, you must use the Audio (L) and the Audio (R). Also, the S-video jack and the AV out jack are not designed to be used simultaneously. If you connect cables to both jacks, only the S-video jack will function.

Connecting a TV to the Notebook

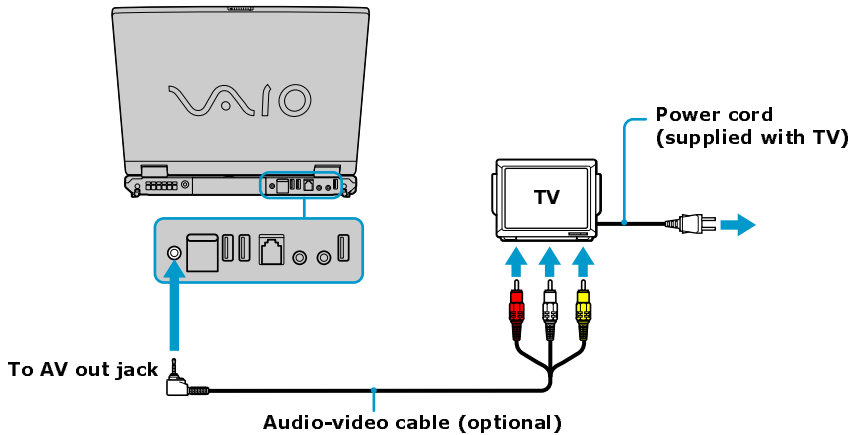

 See the manual that came with your peripheral device for more information on its installation and use.

If you insert a DVD in your optical drive to watch a video on your TV, the Fn+F8 key combination might not activate the function to toggle between your LCD and TV. Do the following steps:

- 1 Connect the TV to the notebook.
- 2 Restart the notebook and wait until it finishes.

- 3 Toggle between your LCD and your TV with the Fn+F8 key combination. Your image is now displayed on both LCD and TV. Re-insert your DVD to launch your DVD software.




A part of the image cannot be displayed on your TV display if the resolution of your notebook is more than 1024 x 768 dots.


Connecting a Parallel Port Printer

You can connect a Windows 2000 operating system-compatible printer to your notebook to print documents.

To connect a printer

- ❑ Locate the Printer port identified by the  symbol. Plug the printer cable (supplied with the printer) into this port on the notebook.

Printer connector

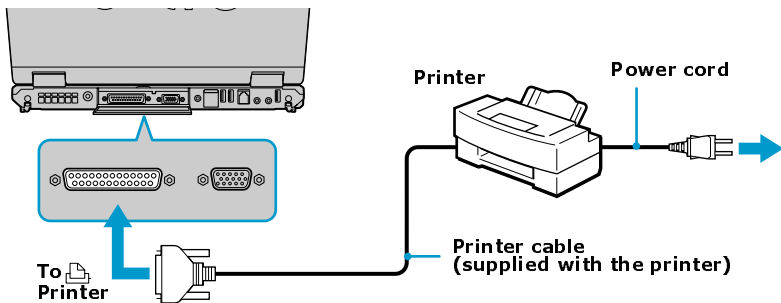

 See the manual that came with your printer for more information on its installation and use.

If your printer stops functioning after resuming from a power saving mode, see “Troubleshooting the Printer” for more information.

Before using the printer, you may need to change the Printer setting in the Sony Notebook Setup software. See “Displaying the Sony Notebook Setup Screen” for more information.

Connecting a USB Printer


You can connect a Windows 2000 operating system-compatible USB printer to any of your notebook's three USB ports to print documents.

 To use a printer, first install the driver software that came with your printer.

To connect a USB printer

Plug the optional USB printer cable into one of the three USB ports on your notebook and the USB port on your printer.

Connecting a USB Printer

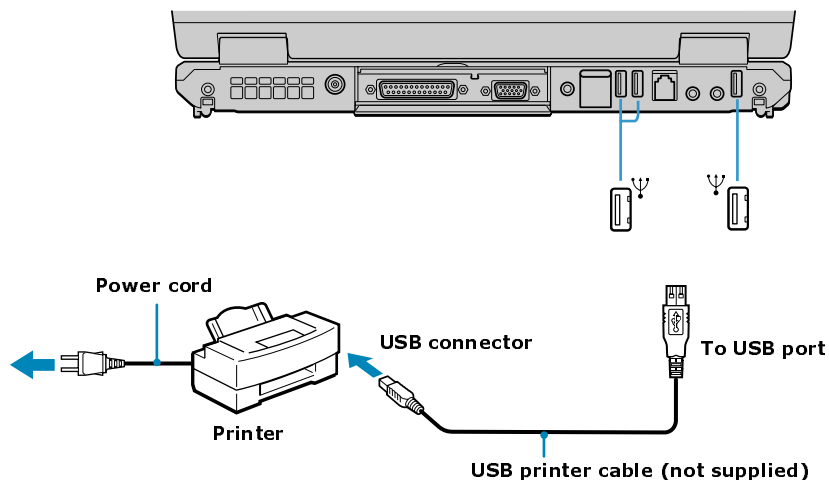

 See the manual that came with your printer for more information on its installation and use.

Connecting an External Display


You can connect an external display to your notebook. For example, you can use the notebook with any of the following:

- ☐ Computer display (monitor)
- ☐ Multimedia computer display
- ☐ Projector




Connect the external display before you turn on the notebook.


To connect a computer display

- ☐ Locate the Monitor jack identified by the  symbol on the back of the notebook. Plug the display cable (not supplied) into this port.


- ❑ If necessary, plug one end of the display power cord into the display, and the other end into an AC outlet.

Connecting an external computer display

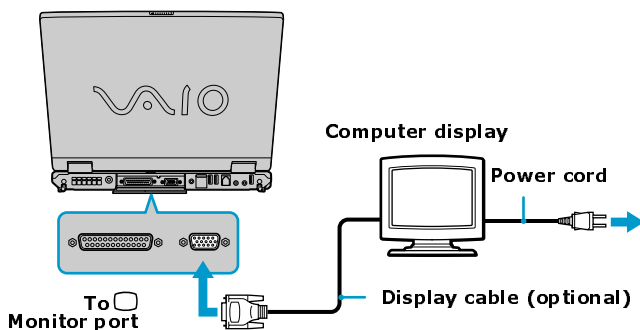


 See the manual that came with your computer display for more information on its installation and use.

Connecting a multimedia display

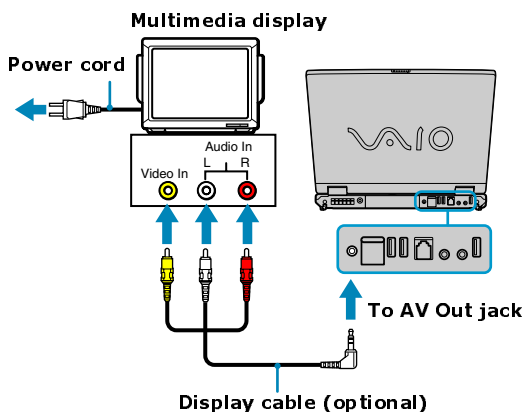

To connect a multimedia computer display


You can connect your notebook to a multimedia computer display that includes built-in speakers and a microphone.

 See the manual that came with your multimedia computer display for more information on its installation and use.

To connect a projector

You can use a projector, such as the Sony LCD Projector, as an external display.

Connecting a projector

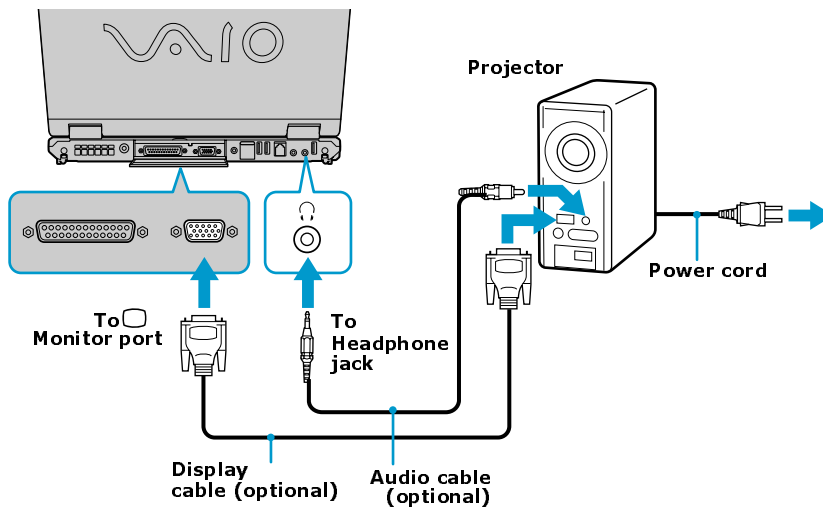


 See the manual that came with your projector for more information on its installation and use.

To select a display

When you connect an external display to the Monitor port, you can toggle the output between the Liquid Crystal Display (LCD), the external monitor, or both devices.

Change text in this variable definition to document title.

 Use the Fn+F7 keys to select a display. See also “Selecting the Display Mode” for more information.

<i>To</i>	<i>Press</i>	<i>Result</i>
Switch to an external display	Fn+F7	<p>Toggles between the LCD, the external display connected to the Monitor port, or both the LCD and external display.</p>  <pre>graph LR; A[Only LCD] --> B[LCD and external display]; B --> C[Only external display]; C --> A;</pre>




Connect the cable before you turn on the notebook, otherwise Fn + F7 will not work.


Connecting a Universal Serial Bus Device

You can connect a Universal Serial Bus (USB) device such as an external mouse, keyboard, speaker, and microphone to your notebook.


To connect a USB device

 The following steps describe the procedure for connecting a USB mouse to your notebook.

Refer to the manual that came with your USB device for specific installation instructions.

- ❑ Locate the USB device identified by the  symbol. Plug one end of the USB cable into this port and the other end into the USB device.


Connecting USB device to USB port

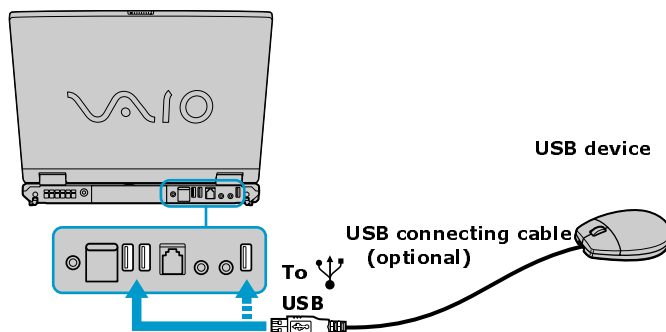

You can use an optional Sony USB mouse PCGA-UMS1 series (not supplied) with this notebook. Since the USB mouse software driver is preinstalled in the notebook, you simply plug the USB mouse into the USB port to use it. One USB port supports one USB device.

 See the manual that came with your USB device for more information on its installation and use.

Connecting an i.LINK Device


You can connect an i.LINK®* enabled digital video camera recorder to the i.LINK® S400  (IEEE1394) port.


* i.LINK is a trademark of Sony used to designate that a product contains an IEEE 1394 connector. The i.LINK connection may vary, depending on the software application, operating system, and compatible i.LINK devices. All products with an i.LINK connection may not communicate with each other. Refer to the documentation that came with your compatible i.LINK device for more information on operating conditions and proper connection. Before connecting compatible i.LINK PC peripherals to your system, such as a CD-RW or hard disk drive, confirm their operating system compatibility and required operating conditions.

To connect a digital video camera recorder

- ❑ Plug one end of the i.LINK® cable (not supplied) into the i.LINK port on the left side of the notebook and the other end into the DV In/Out port on the digital video camera recorder.

Connecting digital video camera recorder to i.LINK port

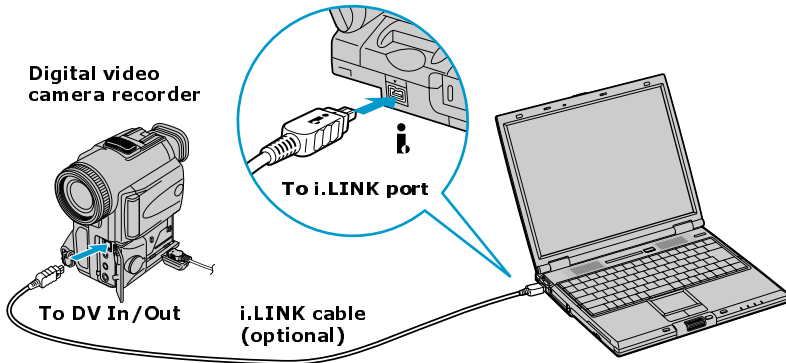

 The above figure displays a connection to a Sony digital video camera recorder; your digital video camera recorder may need to be connected differently.

Only Sony digital video camera ports labeled “DV In/Out” or “i.LINK” are i.LINK-compatible.

See the manual that came with your digital video camera recorder for more information on its installation and use.

Do not connect more than one digital video camera at a time. The software supplied with your notebook will not recognize multiple cameras.

The i.LINK port on the notebook does not supply power to external devices. If the external device requires power from the i.LINK port, you cannot use the device with the notebook.

The notebook supports transfer rates up to 400 Mbps; however, the actual transfer rate is the lowest transfer rate of the external device.

The i.LINK features available may vary depending on the software applications you use. See the documentation that accompanied your software for more information.

i.LINK cables compatible with your VAIO notebook include cables with the following part numbers: VMC-IL4415 (a 1.5-meter cable with a 4-pin connector at each end) and VMC-IL4615 (a 1.5 meter-cable with a 4-pin connector at one end and a 6-pin connector at the other). You can purchase these cables from your local retailer, through the Sony VAIO® Direct Web site (<http://www.sonydirect.com>), or by calling 1-888-315-7669 (toll free).

Connecting External Speakers

You can enhance the sound quality of your notebook by purchasing and connecting external speakers. See the manual supplied with the speakers for more information on their installation and use.

 


Do not place floppy disks on the speakers; the speakers' magnetic field may damage the data on the floppy disks.


Before you connect external speakers

- ☐ Make sure your speakers are designed for notebook use.
- ☐ Turn down the volume of the speakers before you turn them on.

To connect external speakers

- ☐ Locate the Headphone jack identified by the  symbol on the back panel of the notebook. Plug the speaker cable into this jack.


Connecting speakers to the headphone jack

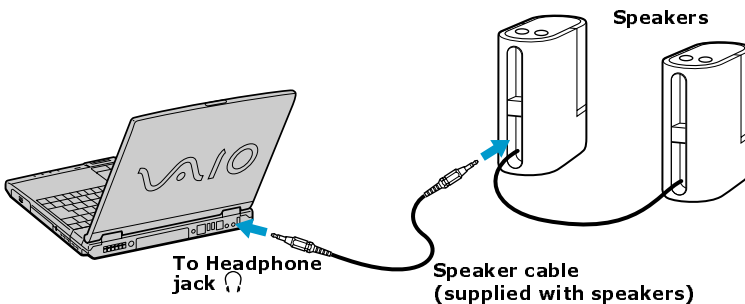


See the manual that came with your speakers for more information on their installation and use.

Connecting an External Microphone


You can enhance the quality of sound input by using an external microphone.


 Make sure your microphone is designed for notebook use. The microphone should be compliant with the plug-in power microphone.

To connect an external microphone

- ❑ Locate the Microphone jack identified by the  symbol on the back panel of the notebook. A protruding dot above the Microphone jack further distinguishes this jack from other jacks and ports. Plug the microphone cable into the Microphone jack.

Connecting microphone to microphone jack

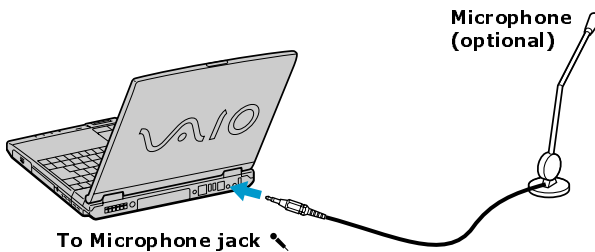

 See the manual that came with your microphone for more information on its installation and use.

Expanding Your Notebook Capabilities

The following peripheral devices can be connected to your notebook, to expand the capabilities of your computer and enhance its versatility to meet your various business or personal needs:

- ☐ A Personal Digital Assistant (PDA)
- ☐ A Wireless LAN Access Point
- ☐ A Wireless LAN PC Card

Personal Digital Assistant

A handheld PDA is the quintessential personal planner and entertainment center that fits in your pocket. With a PDA, you can easily perform the following functions:

- ☐ Enter your schedule details in the calendar and view them by the day, week, or month, and even set an alarm to remind you of important events.
- ☐ Keep your contact names, addresses, phone numbers, and other details in the address book, and find them when you need them.
- ☐ Add tasks to the To Do List, prioritize them, and assign them due dates.
- ☐ Synchronize your data with the software on your notebook, to back up your data.
- ☐ Track expenses when you are out of the office, then transfer the data to your notebook.
- ☐ Exchange data with your notebook.

Wireless LAN Access Point

The Wireless LAN Access Point is designed for building a wireless Local Area Network (LAN) environment. The Access Point comes with the Wireless LAN PC Card and required software. You can easily build a wireless LAN environment by plugging the Access Point into an AC power outlet, installing the Wireless LAN PC Card in your notebook, and using the provided software. Because a wireless LAN configuration requires no wiring, you can operate multiple computers more freely than ever before.

You can also connect your Access Point to a telephone line, Integrated Services Digital Network (ISDN) router, cable modem, or Digital Subscriber Line (xDSL) modem to share access to the Internet among multiple computers.

Wireless LAN PC Card

The Wireless LAN PC Card, which comes with the Wireless LAN Access Point, can be purchased separately and is designed for building a wireless LAN environment. The Wireless LAN PC Card can be used with or without the Access Point. With the Access Point, you can build a wireless LAN between computers that are equipped with the Wireless LAN PC Card and gain access to the Internet. Without the Access Point, you can achieve direct communication (Peer to Peer mode) between computers.



For information on available Sony products, go to <http://www.sonymstyle.com/vaio/>.

Customizing Your VAIO Notebook

You can customize the settings of your notebook. The following sections briefly describe how to change your notebook's default settings. You can also refer to Sony Notebook Setup Help for more detailed information.


- ☐ Displaying the Sony Notebook Setup Screen
- ☐ Controlling Power Management
- ☐ Displaying Battery Information
- ☐ Selecting the Display Mode

Displaying the Sony Notebook Setup Screen

To display the Sony Notebook Setup screen:

- 1 Click the Start button on the Windows® taskbar.
- 2 Select Programs, Sony Notebook Setup, and then click Sony Notebook Setup.

Sony Notebook Setup Screen

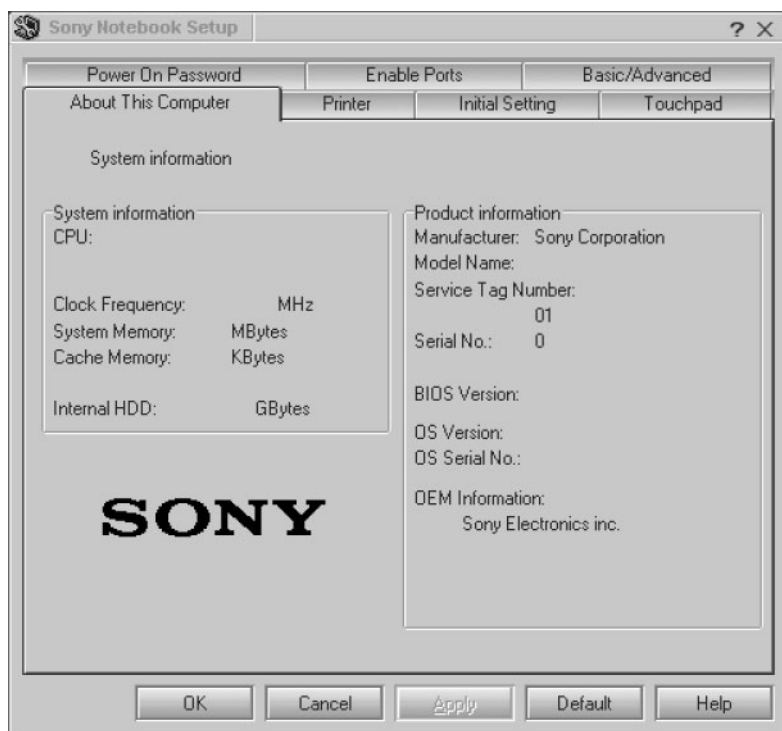

- 3 Select the tab for the item you want to change. See “Sony Notebook Setup tabs” for more information.
- 4 After you finish making your changes, click OK.

Sony Notebook Setup tabs

Tab	Description
About This Computer	Display system information, including memory capacity, serial number, and BIOS version.
Printer	Select printer port mode settings.
Initial Setting	Change the volume of the sounds that play while the operating system is loading. Select the order of drives and devices from which you want to load the operating system. You can specify the hard drive as well as other drives inserted into your computer.
Touchpad	When you connect an optional mouse to your notebook, you can make your touchpad inactive. You can also customize the settings of your mouse using the mouse utility.
Power On Password	Set the password to secure your computer.
Enable Ports	Enable or disable ports. Disabling ports releases resources to the system. To change the serial settings, click Advanced on the Basic/Advanced tab.
Basic/Advanced	Switch between Advanced mode (additional screens with advanced settings) and Basic mode of display.



For more information about each option, click Help on the Sony Notebook Setup screen to display the Help file.

Controlling Power Management

The PowerPanel™ utility allows you to control the power management of your notebook and provides key information about system activity and battery life. The following sections briefly describe how to conserve your computer's battery power. You can also refer to PowerPanel Help for more detailed information. To activate a profile or command, see "Displaying Battery Information" for more information.

Viewing the Power Management status icons

The Power Management status icons are displayed in the taskbar at the lower-right corner of your screen. Move the pointer over the Battery icon to see the tool tip that displays information about the active profile. Double-click the icon for additional information. The Battery status icon indicates the battery power level and the Intel SpeedStep™ Technology status icon indicates the performance level of the CPU.

To activate the Power Management toolbar

- 1 Right-click the taskbar at the bottom of the screen.
- 2 Select Toolbars from the pop-up menu, and then click Power Management. The Power Management toolbar appears on the taskbar.

The current profile icon is highlighted on the Power Management toolbar. It is the first icon farthest to the left, and its appearance changes depending on which power management profile is currently selected. To change the power management profile, click the current profile icon, and then select a profile from the pop-up list. See "Power Management profiles" for a description of available options. To select another power management profile, click that icon in the Power Management toolbar.



When you use the battery pack to power your notebook, your system selects the Maximum Battery Life power management profile by default. If you select a different power management profile while using battery power, that profile is selected automatically the next time you use the battery pack to power your notebook.

Refer to the PowerPanel Help for information on customizing the Power Management toolbars.

You can change the power management settings, such as the system timer and the brightness of the screen.









To customize Power Management settings

- 1** Click the Current Profile icon on the Power Management toolbar.
- 2** Select Edit/Create Profiles from the menu.
- 3** Click a profile whose setting you want to change from the list in the left field.
- 4** Double-click an item whose setting you want to change from the list in the right field.
- 5** Click the desired setting.
- 6** Click the File menu, and then click Save.
- 7** Click the File menu, and then click Exit.

Power Management profiles

The PowerPanel utility provides several predefined power management profiles. Each profile consists of a group of power management settings that are designed to meet specific power management goals — ranging from maximum power management to no power management. You can change the settings for any of

the predefined profiles (except for the Disable Power Management profile), or you can create your own profile to suit your portable computing needs. The predefined profiles are:

Icon	Description
	Maximum Performance Provides the best system performance while still conserving power.
	Maximum Battery Life Provides power saving features to give you maximum battery life and good performance. It slows the notebook and puts it into Standby mode after a specified time period.
	Disable Power Management Turns off all power management features such as Standby and Hibernate modes. You cannot change the settings of this profile.
	AC Power The power management state when AC power is in use. Similar to the Power Management Off setting. Power Management automatically loads the AC profile unless you disable this feature.
	Games Disables the display and the Hard Disk Standby timer.
	Presentation Keeps the display on at all times while it conserves power. This option is ideal for slide show presentations. You can establish settings for LCD (Video) Standby, Hard Disk Standby, and Standby mode to optimize power management for your system.
	Camera Optimizes performance and power requirements for camera usage.
	DVD Optimizes performance and power requirements for DVD usage.

Icon**Description**

**Word Processing**

Optimizes power management with longer timeouts on the hard disk and display screen. You can also establish settings for LCD (Video) Standby, Hard Disk Standby, and Standby mode to optimize power management for your system.

**Spreadsheet**

Optimizes performance and power requirements for spreadsheet applications.

**Communications**



Extends battery life by initiating a quick display timeout. The Internal modem remains powered. You can also establish settings for LCD (Video) Standby, Hard Disk Standby, and Standby mode to optimize power management for your system.

**Automatic Profile Selection**

Automatically switches to a profile suitable for active applications.

Power Management commands

PowerPanel also provides power management commands that you can use to activate specific power management functions and to control power for a specific device. You can use these commands to override a profile setting or initiate an immediate action.

Icon	Description
	Standby Puts the system into Standby mode, a power management state that saves the state of the system and peripheral devices in memory (RAM). Power consumption reduces to a minimum, and the system remains on. To return the system to the active state, press any key or the power button on your computer. Your notebook is preset to enter Standby mode after 25 minutes.
	Hibernate Provides for the lowest level of power consumption. The system writes the state of the system and peripheral devices to the hard disk and turns off the system power. To return the system to the original state, use the power button to turn on power. The system saves the data in the Save to Disk Partition on the hard drive.

Conserving battery power


When using your notebook with a battery, the LCD display and the hard drive can be set to switch off automatically to conserve battery power.

See “Power Management profiles” for more information.




Optimizing clock speed settings

To customize your notebook’s CPU performance, you can set the clock speed according to one of three available modes: Maximum performance, Auto performance, and Battery optimized.

Changing the clock speed mode

- ☐ Right-click the  flag icon on the lower-right portion of the taskbar, and select Properties. The “Intel SpeedStep™ technology” dialog box appears.

- ☐ Select one of the following modes:

Icon	Mode Description
	Maximum performance The Maximum performance mode sets the CPU's clock speed to its maximum speed at all times.
	Auto performance In Auto performance mode, the CPU clock speed changes automatically, depending on usage.
	Battery optimized The Battery optimized mode reduces the CPU clock speed and battery voltage to conserve power when the notebook is operating on battery power.

Displaying Battery Information

 
You can display information for each of the batteries in your notebook. The following sections briefly describe how to display your notebook's general battery information. Refer to PowerPanel Help for more detailed information.

To activate the Battery Information toolbar

- 1 Right-click the taskbar at the bottom of the screen.
- 2 Select Toolbars from the pop-up menu, and then click Battery Information. The Battery Information toolbar appears on the taskbar.

To view the total charge remaining in the battery, place the pointer over the battery status icon in the taskbar on the lower-right corner of the screen.

Battery Information Toolbar



- ☐ **Percentage indicator** — Displays the percentage of the remaining charge.
- ☐ **Time indicator** — Displays estimated time (hours : minutes) remaining before the battery fully discharges, also known as the time-to-empty.

Battery icon descriptions

Battery icon	Battery status
--------------	----------------



Charging

<i>Battery icon</i>	<i>Battery status</i>
----------------------------	------------------------------



Fully charged



Discharging




No battery

Displaying detailed battery information

Double-click the battery icon on the taskbar to display the Battery Information window. The Battery tab contains information such as battery charging time and duration of the battery charge.

Battery Information Window

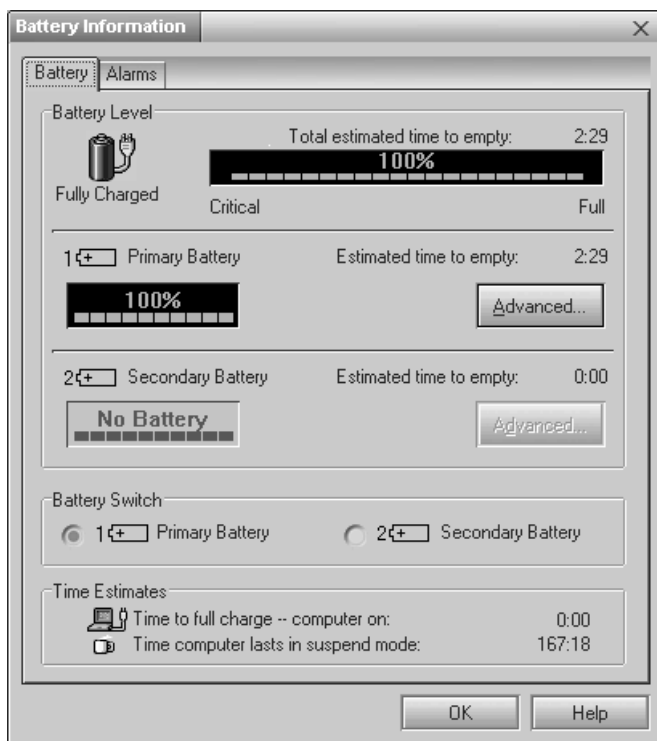

Customizing the Battery Information toolbar and alarm system


You can customize the Battery Information toolbar and modify the alarm settings, to suit your portable computing needs. Refer to PowerPanel Help for more information.




Selecting the Display Mode


This notebook uses the ATI video controller. You can select which display is used when the notebook is connected to an external monitor. When you connect an external display, you can switch the display mode between your notebook's LCD display and the external monitor.

- 1** Click the Start button, point to Settings, and then point to Control Panel.
- 2** Click the Display icon. The Display Properties window appears.
- 3** Click the Settings tab, and then click the Advanced button. The ATI Mobility RADEON™-M dialog box appears.

Change text in this variable definition to document title.


- 4 Click the Displays tab and select the display settings by clicking the  icon on the panel of your display choice. For more information, click the Help button.

 If you cannot see your movie or DVD on the external display, change the monitor or TV setting by clicking on the Secondary  icon and changing it to Primary .

 You may not be able to display the notebook LCD screen and an external display or projector at the same time, depending on the types of computer displays and projectors you are using.

Turn on the notebook after you connect the external display.

(Multiple Monitors) and Mobility Radeon Properties screen

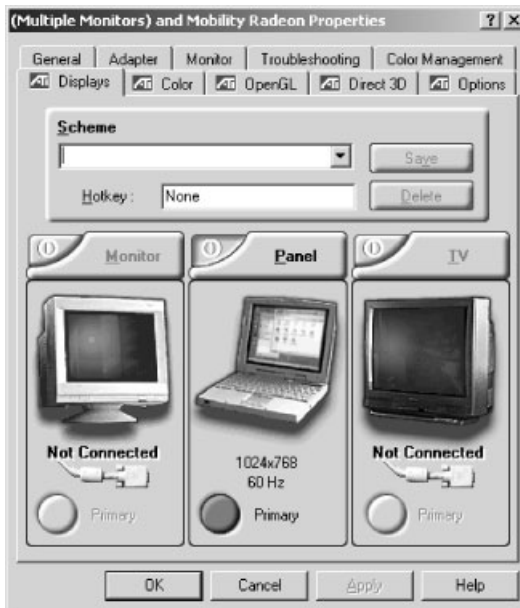

Changing the window design of Sony software

To change the window design

- 1** Click the Start button, point to Settings, and then point to Control Panel.
- 2** Click UI Design Selector.
- 3** Click << or >> and select the desired design.
- 4** Click Apply. The “UI Design Selector” window design changes. The window design for your Sony software will match the “UI Design Selector” window.
- 5** To try another selection, click << or >> then click OK.
- 6** The UI Design Selector closes and the Sony software window design displays.



This feature is available with UI Design Selector-compatible software only.

Adding Memory

In the future you may want to install memory modules to expand the functionality of your notebook. The amount of memory on your notebook will vary depending on the model you purchased. See the Specifications flyer that came with your notebook for the amount of memory pre-installed. Expansion memory modules are available as options. For memory upgrades, use only unbuffered PC133 (CL2) SDRAM SO-DIMMs (gold lead contacts). This section describes how to replace memory modules in your computer:

- ☐ Precautions and Procedures
- ☐ Typical expansion memory configuration
- ☐ Removing a memory module
- ☐ Installing a memory module
- ☐ Viewing the amount of memory

Precautions and Procedures

The procedures described below assume that you are familiar with the general terminology associated with personal notebooks and with common safety practices required for using and modifying electronic equipment. Personal injury or equipment damage may result from failure to take these precautions.



Make sure you observe the proper safety precautions when you install memory modules in your notebook. See the bulleted list below. Be careful when adding memory. Mistakes made when installing or removing a memory module may cause a malfunction.

- ❑ Disconnect your system from its power source and from any telecommunications links, networks, or modems before you open the system or follow any of the procedures described below. Personal injury or equipment damage may result from failure to take these precautions.
- ❑ Electrostatic discharge (ESD) can damage memory modules and other components. Perform the procedures described below only at an ESD workstation. If such a station is not available, do not work in a carpeted area, and do not handle materials that produce or hold static electricity (cellophane wrappers, for example). Ground yourself by maintaining contact with an unpainted metal portion of the chassis while performing the procedure.
- ❑ Do not open the memory module package until you are ready to install the module. The package protects the module from ESD.
- ❑ Use the special bag for preventing ESD or use aluminum foil when you store the memory module.

Typical expansion memory configuration

Models with 256 MB memory*


<i>Total System Memory (MB)</i>	<i>Slot 1 (MB)</i>	<i>Slot 2 (MB)</i>
256	256	
384	256	128
512	256	256

* The 384 MB and 512 MB memory configurations may require the removal and replacement of original factory-installed memory modules.

Removing a memory module

- 1 Shut down your notebook and disconnect all peripheral devices, such as your printer.
- 2 Unplug your notebook and remove the battery pack(s).
- 3 After your notebook has cooled, loosen and remove the screw that secures the cover of the memory bay on the bottom of your notebook. Use an appropriate screwdriver.


Removing the memory module cover

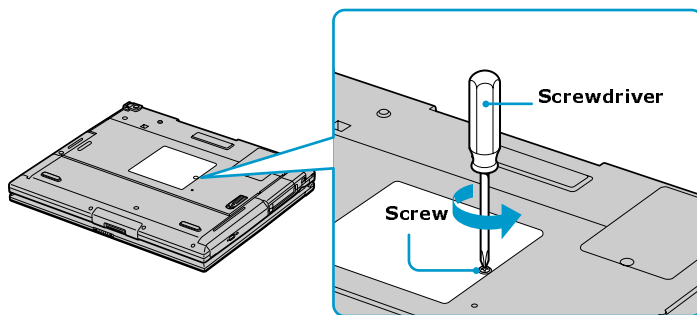

- 4 Touch a metal object (such as the connector panel on the back of your notebook) to discharge any static electricity.

- 5 Remove the memory module.

Removing memory module

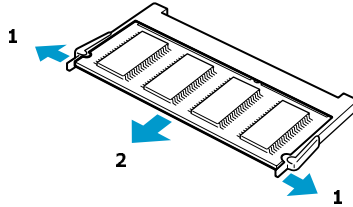

- 1 Pull the tabs in the direction of the arrow** The memory module is released. **2 Pull the memory module in the direction of the arrow.**

- 6 Tighten the screw on the memory bay cover.




Your notebook comes with a memory module installed in the memory slot. To upgrade your memory, removal of these modules may be necessary before installing your upgrade memory module.

Installing a memory module

- 1 Follow steps 1 to 4 of “Removing a memory module” for removing the preinstalled memory.
- 2 Remove the new memory module from its packaging.
- 3 Install the memory module by sliding it into the memory module slot. Press the module into place until it clicks.

Installing memory module

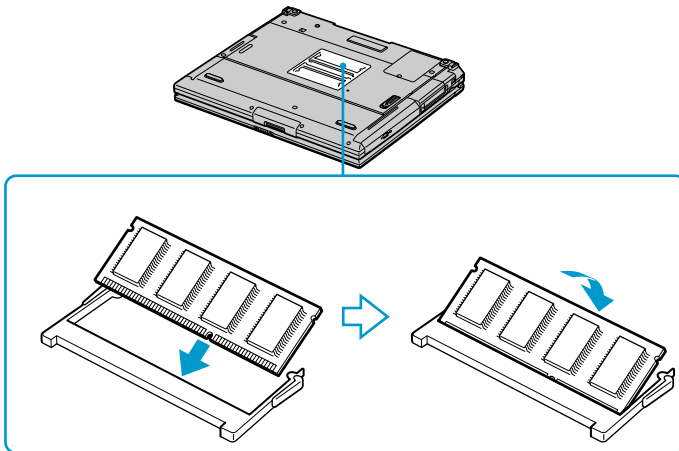

- 1 Slide the memory module into the slot.
- 2 Press the module into place until it clicks.
- 4 Tighten the screw on the cover of the memory bay.

Viewing the amount of memory

- 1** Restart the notebook.
- 2** Click Start on the Windows® taskbar, select VAIO, and then click “Sony Notebook Setup.” The Sony Notebook Setup screen appears.
- 3** Click the “About This Computer” tab to view the amount of system memory. If the additional memory is not shown, repeat the steps described in the “Installing a Memory Module” section.



The amount of memory displayed in the Sony Notebook Setup screen is not always correct. The video adapter uses some system memory, and that amount of memory does not appear as part of the total memory shown in the Sony Notebook Setup screen.

About the Software on Your Notebook

Your VAIO® notebook is ready to help you work, play, learn, and communicate as soon as you turn it on. This section provides the following information:

- ❑ Software Overview
- ❑ Application, Driver, and System Recovery CDs
- ❑ “Using Your Recovery CDs”

Software Overview

Your computer may not be supplied with all of the software listed below, depending on the configuration you purchased. Preinstalled software may not be identical to retail versions, or include supporting documentation.

Adobe® Acrobat® Reader™

Adobe Systems Inc.

Acrobat Reader software allows you to view, navigate, and print electronic documents in Adobe Portable Document Format (PDF), an open file format that is intended to preserve the fidelity of documents created on all major computer platforms.

Adobe® Photoshop® Elements (on selected models)

Adobe Systems Inc.

Using state-of-the-art image editing tools, you can unleash your artistic ability and create digital images for print, e-mail and posting to the Web. The versatile image capturing options allow you to start working with digital and traditional photos immediately. Explore endless creative possibilities for your personal images with Adobe Photoshop Elements.

DigitalPrint

Sony Electronics Inc.

This image management software makes it fun and easy to edit, import, and organize your digital pictures in a photo album for rich digital printing to any standard color laser or inkjet printer. Digital Print can also be used to make custom CD labels for your audio CDs.

Drag'n Drop CD

DigiOn Inc. and Easy Systems Japan Ltd.

Drag'n Drop CD is designed to be the most simple software to make your own CD. Users can create their own best AudioCD or data CD that can be read in many PCs. With Drag'n Drop CD you can also create your own backup CD from the original CD that you own.

DVgate™ (on selected models)

Sony Electronics Inc.

Connect a digital video camera recorder to the i.LINK®* port and capture your own video clips and still images. You can edit clips from your video, add new clips, and combine clips into new movie segments. You can also save your images in a variety of popular file formats.

Microsoft® Word (on selected models)

Microsoft Corp.

Microsoft Word makes it easy to create common Web, e-mail, and print documents for use around the world. It embraces HTML as a first-class file format and extends Word's ease-of-use to the Web and e-mail. Word also extends that ease-of-use to international users, making it simple to create multilingual documents.

MovieShaker™ (on selected models)

Sony Electronics Inc.

Sony's original MovieShaker software creates personal movies that have transitions, background music and text. Just import your video clips and "shake" with a click of the mouse. Your personal movies are easy to create and fun to share with family and friends.

PictureGear™

Sony Electronics Inc.

This image management software displays images from your hard drive, a Sony digital still camera, or a Sony Mavica® camera. The images appear in a convenient light-table format, so that you can easily view the contents of an entire folder.

* i.LINK is a Sony trademark used only to designate that a product contains an IEEE 1394 connection. The i.LINK connection may vary, depending on the software applications, operating system, and compatible i.LINK devices. All products with an i.LINK connection may not communicate with each other. Refer to the documentation that came with your compatible i.LINK device for information on operating conditions and proper connection. Before connecting compatible i.LINK PC peripherals to your system, such as a CD-RW or hard disk drive, confirm their operating system compatibility and required operating conditions.

PC-Cillin®

Trend Micro, Inc.

PC-Cillin provides portable, easy-to-use, real-time antivirus security at your computer's entry point (beaming, synchronization, Internet access) to defend against potential threats hidden inside files, e-mail, or on the Web.

Quicken®

Intuit Inc.

Quicken software is the fastest, easiest way to organize your finances. Quicken software works just like your checkbook, so it's easy to learn and use. You can even pay your bills online. Quicken software manages all of your finances, bank accounts, credit cards, investments, and loans.

QuickTime®

Apple Computer, Inc.

The versatile QuickTime software is used to play hundreds of different kinds of files, including video, audio, and virtual reality (VR) movies. You can play QuickTime files (referred to as "QuickTime movies") using QuickTime Player or any other application, such as a Web browser or word processor, that supports QuickTime software.

Smart Capture

Sony Electronics Inc.

Smart Capture is a fun new way to send multimedia messages via e-mail. Smart Capture manages the i.LINK®* connection between your computer and a Sony Digital Handycam® Camcorder that supports the i.LINK interface. It allows you to capture compressed video or still images that you can save or share via e-mail. A smart solution to computer, digital audio/video and network convergence.

* i.LINK is a Sony trademark used only to designate that a product contains an IEEE 1394 connection. The i.LINK connection may vary, depending on the software applications, operating system, and compatible i.LINK devices. All products with an i.LINK connection may not communicate with each other. Refer to the documentation that came with your compatible i.LINK device for information on operating conditions and proper connection. Before connecting compatible i.LINK PC peripherals to your system, such as a CD-RW or hard disk drive, confirm their operating system compatibility and required operating conditions.

VAIO Support Agent*Sony Electronics Inc.*

VAIO Support Agent provides immediate, interactive, online support with information about your preinstalled software and answers to frequently asked questions.

VisualFlow™*Sony Electronics Inc.*

VisualFlow software is a state-of-the-art Sony multimedia browser designed specifically for Memory Stick® media. It displays any still picture, movie, or sound file stored in a Memory Stick media in a visually pleasing, artistic manner. VisualFlow software not only plays a selected movie or sound file, but also enables playback of files by other applications such as PictureGear, Memory Stick Slideshow, and Windows Explorer.

WinDVD®*InterVideo Inc.*

WinDVD is a simple-to-use DVD player including all the features you would expect to find in a standard consumer DVD player, while also offering advanced display and navigation features such as zoom, pan, bookmark, and time search.

Application, Driver, and System Recovery CDs

Your notebook comes with the following application and system recovery CDs. To use your recovery CDs, see “Using Your Recovery CDs” for more information.

Application Recovery CD(s)

Sony Electronics Inc.

This CD enables you to reinstall individual applications if they become corrupted or are erased.

Driver Recovery CD(s)

Sony Electronics Inc.

This CD enables you to reinstall individual device drivers if they become corrupted or are erased.

System Recovery CD(s)

Sony Electronics Inc.

This CD enables you to restore the operating system and software that shipped with your computer if they become corrupted or are erased. This CD restores your computer to its original factory settings, so user data and applications installed since you started using your computer will be lost.

Using Your Recovery CDs


The following sections describe how to use the Application Recovery, Driver Recovery, and System Recovery utilities.

To use the Application Recovery CD(s)

The Application Recovery CD(s) allows you to reinstall individual applications if they become corrupted or are accidentally erased. Reinstalling an individual software title may correct a problem you are experiencing with your notebook or software application; you may not need to reinstall the entire contents of your hard drive. If you need to reinstall all the software titles that shipped with your notebook, use the System Recovery CD(s). See “To use the System Recovery CD(s)” for more information. If you have any questions on using the Application Recovery CD, contact Sony Customer Support.

 You must be in Windows to run the Application Recovery CD. If you have any questions on using the Application Recovery CD, contact Sony Customer Support.

- 1** Turn on your notebook. If your notebook is already on, close all applications.
- 2** When the Windows desktop appears, insert the Sony Application Recovery CD in the optical drive. The Application Recovery utility loads automatically.
- 3** When the Application Recovery menu appears, select the icon for the application you want to restore and then follow the on-screen instructions to complete the recovery process.

 Your system may include one or more Application Recovery CDs. If you have more than one Application Recovery CD, insert the first CD to run the Application Recovery program. You may be prompted to insert the next CD, depending on the application you wish to restore.

To use the Driver Recovery CD(s)

The Driver Recovery CD utility enables you to reinstall individual drivers if they become corrupted or are accidentally erased. You can reinstall an individual driver to correct a problem that you are experiencing with your notebook, hardware, or software application. VAIO Support Agent uses a vault feature on the Driver Recovery CD(s) to repair software applications.

- 1 Turn on your notebook. If your notebook is already on, close all applications.
- 2 When the Windows desktop appears, insert the Driver Recovery CD in the optical drive.
- 3 Use My Computer or Windows Explorer to view the contents of the Driver Recovery CD.
- 4 Select the appropriate driver.

To repair software applications using VAIO Support Agent

The Driver Recovery CD utility has an information vault that contains the original characteristics for the preinstalled software applications that are protected by VAIO Support Agent.

To use the System Recovery CD(s)

The System Recovery utility formats your hard disk drive and restores all original software applications. Your computer is returned to the original factory settings.



The System Recovery process removes all software that you may have installed since you started using your computer. Reinstall any applications that were not included with the computer when you purchased it.

You can use the System Recovery CD(s) to reinstall the operating system and software titles that shipped with your notebook if they become corrupted or erased. You may not need to reinstall the entire contents of your hard drive. If you experience a problem with your notebook, reinstalling an individual device driver or software title may correct the problem. Use the Application Recovery

CD(s) to reinstall individual applications or use the Driver Recovery CD(s) to reinstall device drivers. See “To use the Application Recovery CD(s)” or “To use the Driver Recovery CD(s)” for more information.

The System Recovery CD contains a backup copy of all the software originally installed on your hard disk drive. It can be used only to recover the hard disk of the notebook you purchased.

System Recovery options

- ☐ **System Drive Recovery** — All data on Drive C is deleted. The factory default settings and software applications are restored on this drive only.
- ☐ **Change Partition Size** — All partitions, custom installations, and changes are removed from the hard disk drive. You can set the partition sizes for both the Drive C and Drive D. The original, preinstalled operating system and software applications are restored.
- ☐ **Recovery to Original Factory Defaults** — All data and partitions are removed from the hard disk drive. All original factory settings, operating system, and preinstalled software is restored.



The System Recovery utility does not back up your system's data. If you wish to retain your system data, perform a backup to an external media.

Using the System Recovery CD(s)

Your system may take a few minutes to load necessary files. A blue screen appears during the downloading process.

- 1 Insert the Sony System Recovery CD in the optical drive. The System Recovery utility starts from the optical drive. The first CD must be in the drive when you turn on the computer.
- 2 Shut down your notebook as described in the “Shutting Down Your Notebook” section of your printed Quick Start.
- 3 Wait 30 seconds and turn on your notebook.
- 4 The VAIO System Recovery Utility dialog box appears. Click Next.
- 5 At the pop-up prompt, select Yes to begin the system recovery process. Follow the on-screen instructions.

If your notebook does not start from the Recovery CD

- 1 Press the power button and hold it for more than four seconds to turn off the notebook.
- 2 Turn on the notebook. When the Sony logo is displayed, press the F2 key. The BIOS setup menu screen appears.
- 3 Press the arrow keys to select the Exit menu.
- 4 Press the arrow keys to select “Get Default Values,” and then press Enter.
- 5 Make sure “Yes” is selected, then press Enter.
- 6 Press the arrow keys to select “Save and Exit,” and then press Enter. The message “Save configuration changes and exit now?” appears.
- 7 Make sure “Yes” is selected, then press Enter. The notebook restarts from the Recovery CD.




Your system may include one or more System Recovery CDs. If you have more than one System Recovery CD, insert the first CD to run the System Recovery program. You are prompted to insert the next CD once the information from the first CD has been installed.

The recovery process takes from 30 minutes to 60 minutes to complete.

After recovering your system using the System Recovery CD(s), you may be prompted to insert your Application Recovery CD(s) after restarting Windows. Insert the Application Recovery CD to automatically complete recovery of your system.

VAIO AV Applications

Your VAIO® computer is preconfigured with a collection of audio and video (AV) applications that make it easy to use advanced multimedia technology. This section describes the VAIO® AV applications.

 Your computer may not be supplied with all of the software applications listed, depending on the system configuration you purchased.

Your computer's visual presentation of the VAIO AV applications may not appear exactly as shown in this section, depending on the specific computer model you purchased.

Overview of Preinstalled Software

DigitalPrint

Sony Electronics Inc.

This image management software makes it fun and easy to edit, import, and organize your digital pictures in a photo album for rich digital printing to any standard color laser or inkjet printer. DigitalPrint can also be used to make custom CD labels for your audio CDs.

DVgate™

Sony Electronics Inc.

Connect a digital video camera recorder to the i.LINK® port and capture your own video clips and still images. You can edit clips from your video, add new clips, and combine clips into new movie segments. You can also save your images in a variety of popular file formats.

Media Bar® DVD Player

Sony Electronics Inc.

Media Bar DVD Player is created especially for high-quality DVD playback. You can enjoy the superior digital video quality and the effects features. You can rewind or fast-forward scenes from the DVD Player monitor as you would with any ordinary DVD player, to easily find the scene you want to view. Typical DVD playback features are available, such as multiple angles, audio language tracks, and subtitles. Media Bar DVD Player seamlessly integrates a premium audio/visual experience with an easy-to-use software interface.

MovieShaker™

Sony Electronics Inc.

Sony's original MovieShaker software creates personal movies that have transitions, background music, and text. Just import your video clips and "shake" with a click of the mouse. Your personal movies are easy to create and fun to share with family and friends.

PictureGear™

Sony Electronics Inc.

This image management software displays images from your hard drive, a Sony digital still camera, or a Sony Mavica® camera. The images appear in a convenient light-table format, so that you can easily view the contents of an entire folder.

Smart Capture

Sony Electronics Inc.

Smart Capture is a fun new way to send multimedia messages via e-mail. Smart Capture manages the i.LINK® connection between your notebook and a Sony Digital Handycam® Camcorder that supports the i.LINK interface. It allows you to capture compressed video or still images and save them to your hard disk drive or share via e-mail. A smart solution for computer, digital audio/video and network convergence.

SonicStage*Sony Electronics Inc.*

This new jukebox application adds a host of new features to its predecessor, OpenMG™ Jukebox. Continuing to take advantage of Sony's copyright-protected ATRAC3™ format for high-quality digital audio storage, SonicStage sports a new music visualizer, a sleek new player skin design, audio CD burning capability, and a parametric equalizer for fine-tuning audio playback.

SonicStage Premium*Sony Electronics Inc.*

SonicStage Premium is a special jukebox application that supports high quality digital audio playback and recording from the NetMD, FM Tuner, and DVD-RW devices in your VAIO MX Desktop PC. Recording from external analog and digital audio devices, such as CD players and MiniDisc players, is also supported. SonicStage Premium includes several standard jukebox features, including a music visualizer, audio CD burning capability, and a parametric equalizer for fine-tuning audio playback.


VisualFlow™*Sony Electronics Inc.*

VisualFlow software is a state-of-the-art Sony multimedia browser designed specifically for Memory Stick® media. It displays any still picture, movie or sound file stored in a Memory Stick media in a visually pleasing, artistic manner. VisualFlow software not only plays a selected movie or sound file, but also enables playback of files by other applications like PictureGear™ software or Memory Stick Slideshow.

DigitalPrint Software


DigitalPrint is designed to creatively manage your digital pictures. With its easy-to-use features, you can quickly load images from your digital camera or camcorder, print high-quality photos, and make personalized photo albums and labels to share with friends and family.

DigitalPrint main window

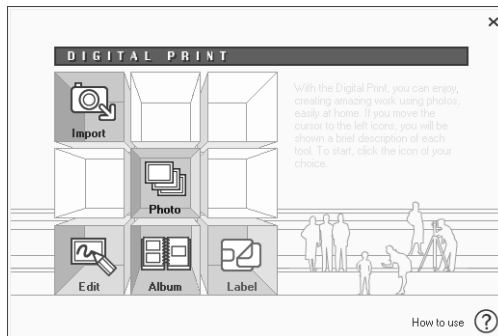

Using PhotoCapture

Capture and import your digital pictures from your digital camera or camcorder into your computer. You can select your favorite pictures and place them in handy folders for future use.

- 1 Click  (Import) to open the PhotoCapture window. Your connected digital camera, camcorder, or Memory Stick® media is indicated in the window.



Properly connect your digital camera, camcorder, or insert your Memory Stick media in your computer.

Change text in this variable definition to document title.

PhotoCapture window



- 2 Click the camera icon to open the Enter Photo Folder Name dialog box. You can enter a name for a new folder or click Select Photo Folder to import your pictures to an existing folder. Click OK.



Enter Photo Folder Name dialog box



-
- 3 Click Capture to capture still images. You can preview a thumbnail version of your pictures in the selection view window.

Capture Pictures from Video window



- 4 Select the desired pictures, and click Get Pictures. The PhotoCapture picture editor window appears.
- 5 Click View to see an enlarged version of a selected picture. You can use   (Rotate) to change the position of a selected picture. Click Delete to eliminate any unwanted pictures.


Change text in this variable definition to document title.

PhotoCapture editing window



Using PhotoCollection

You can select and print your favorite digital pictures, using your computer and home printer.

- 1 Click  (Photo) to open the PhotoCollection window. A list of folders is displayed on the left side of the window, with the folder contents displayed as thumbnail pictures on the right.


PhotoCollection window



- 2 Select the desired folder. From the thumbnail view, click to select the pictures you want to print.
- 3 Click Photo Print at the top of the window. Select the number of prints you want to make, using the scroll arrows. Click OK.
- 4 Select the paper, based on the picture positioning desired. A layout preview is displayed on the left side of the window.
- 5 Use the configuration buttons and drop-down lists to select the printer and to set margins.

Change text in this variable definition to document title.


Printer and Paper selection window

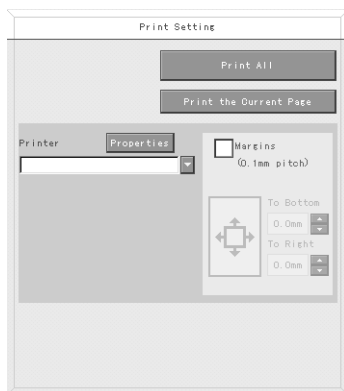

- 6 Click Print All to print all pages, or click “Print the selected page only” to print a specific page of photos.

Using PhotoDecor

You can decorate your favorite photos with clip art, stamps, or your own drawing talent. Add, remove, and change your designs to create your own unique photo art.

-
- 1 Click  (Edit) to open the PhotoDecor - New PhotoDecor window. A list of folders is displayed on the left side of the window, with the folder contents displayed as thumbnail pictures on the right.

PhotoDecor-New PhotoDecor window



- 2 Select the desired folder. From the thumbnail view, click to select the pictures you want to decorate. The PhotoDecor editing window appears.
- 3 Use the decoration features on the right side of the window by clicking on the desired decoration icon, and then dragging the decoration onto your photo.
- 4 Click Print when your photo is ready to be printed. You can save your decorated pictures before printing. Name the new picture, and click Save.

 The default location for your saved decorated pictures is in the Decorated Photos folder, which can be viewed from the PhotoDecor - New PhotoDecor window.

Using PhotoAlbum


Capture your special photos in an organized photo album. You can share your custom-made photo albums with friends and family.

Change text in this variable definition to document title.

- 1 Click  (Album) to open the PhotoAlbum - New Album window.


PhotoAlbum - New Album window



 If you wish to work on a previously created album, do not click Create New Album. Instead, select the desired album from the Album Collection view on the right side of the window.


- 2 Click Create New Album. The Select Photo window appears.
- 3 Select the photos you want to include in your album from the available folders displayed. Click List to select individual pictures from each folder. The Select Design window appears.
- 4 Select a design template for your album. Use the scroll bar to see all available designs. When you have selected the design, the Select Layout window appears.
- 5 Select a page layout for your album. A preview of your selected design and page layout is displayed. Scroll through the album using the book icons at the bottom of the window.

- 6 Click Page List to edit your album. Customize your album by adding more pictures, decorations, comments, or deleting pages.
- 7 You can save your album before printing by clicking Save.
- 8 Click Print. Select an album type, and click Print again.


 For information on stitching your album, click Stitch Album. See the online Help file for more details.

Using LabelMaker

Use LabelMaker to design original labels to personalize your media, such as Memory Stick® media, CDs, or video cassettes.

- 1 Click  (Label) to open the Label - New Label window.


Label - New Label window

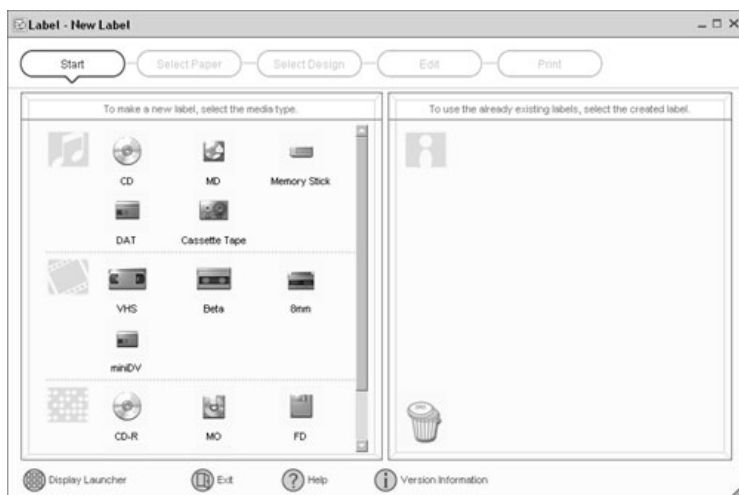


- 2 Click an icon to select a media type. A new window opens.
- 3 Click the paper layout icon. The Select Design window appears.

Change text in this variable definition to document title.

- 4 Select a design template. Use the decoration and customization features on the right by clicking an icon and dragging it onto your template.

 A new window appears, enabling you to list the contents of your audio or video media. You can create a song or video list, depending on the type of media label being created.

Design Edit window

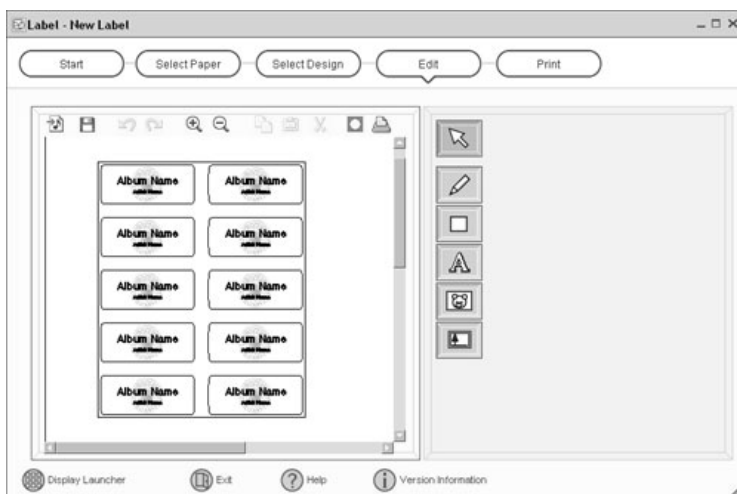

- 5 Click Print to complete the label making process. Use the configuration buttons and drop-down lists to select the printer and to set margins.

 See the online Help for detailed information on using DigitalPrint software.

DVgate Software

Connecting a digital video camcorder

Turn off the power to your digital video camcorder before connecting it to your computer. After connecting the device, turn its power back on. You do not need to turn off the computer when connecting the camcorder.

To use DVgate™ software with a digital video camcorder

- ❑ Do not use DVgate™ software when the connected digital video device is in Timer Recording mode, as this may produce a malfunction in the device.
- ❑ Video captures larger than 2 GB (9 minutes and 30 seconds) are automatically continued in a second file.
- ❑ You can record stereo audio (stereo 1) while capturing video, or you can add audio on the stereo 2 track after capturing the video data.
- ❑ You cannot use different audio modes on the same tape. Perform a separate capture for each audio mode you wish to use.
- ❑ DVgate software does not support hard disk compression. Do not use disk compression if you are planning to work with DVgate software.
- ❑ Title data is saved in the flash memory of a digital video camera and is not transferred to tape by DVgate software.
- ❑ Disable your screen saver program to avoid interruption during your capture sessions.
- ❑ The drop frame compensation feature does not provide accurate compensation adjustments for tapes recorded in LP mode.
- ❑ The information displayed by the capture progress indicator may not be accurate for tapes that are recorded using a mixture of both SP and LP modes.
- ❑ Keep the video head of your digital video device properly cleaned. Anomalies that you see in captured data may be due to dust or other particles on the video head.
- ❑ The last frame captured is one frame before your selected [OUT] point. The frame you see immediately after clicking the [OUT] button is not captured.

To use DVgate software to record AVI files to tape


 You can record only AVI files. MPEG files cannot be recorded.

- ☐ Do not use DVgate™ software when the connected digital video device is in Timer Recording mode, as this could produce a malfunction in the device.
- ☐ Avoid recording problems, such as a single frame appearing in multiple frames, by closing other applications on your system while recording.
- ☐ You cannot use multiple audio modes on the same tape. If you have AVI files that use different audio modes, the files cannot be recorded at the same time, but must be recorded separately.
- ☐ The DVgate software does not support AVI files that are smaller than 4 MB.
- ☐ The DVgate software does not support hard disk compression.
- ☐ To maximize recording capabilities, video and audio data are not available while you are recording.
- ☐ If the DVgate software indicates that frames are dropped, try closing all open applications or defragmenting your hard drive.

MovieShaker Software

MovieShaker™ software can be used to create fun and innovative movies without any previous knowledge of film editing. In a few simple steps, video files can be made from still images with added special effects and music. You can save your personal video creation in a format that is compatible with most computers.


MovieShaker main window

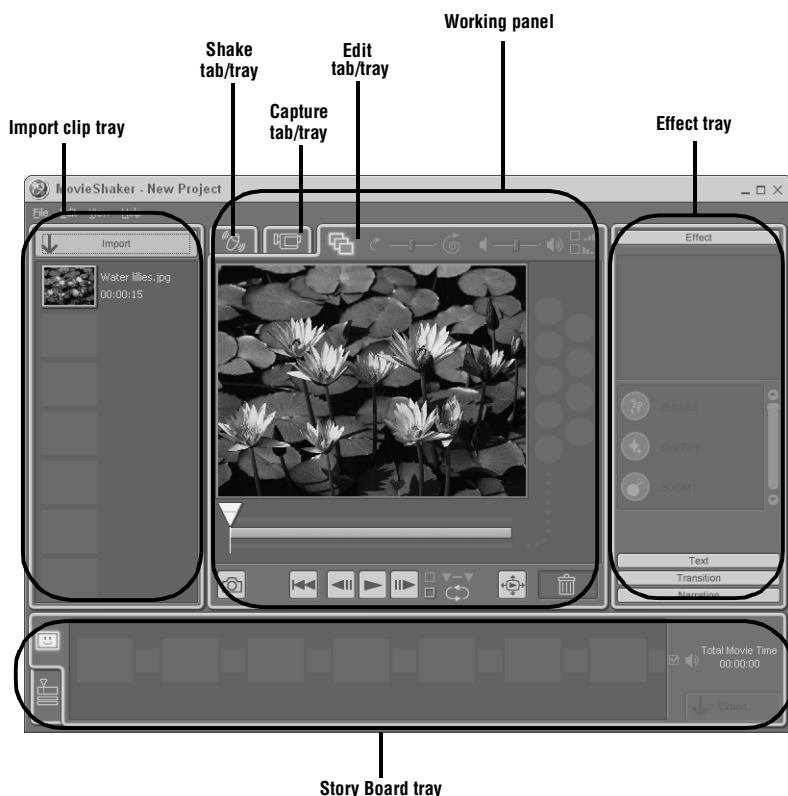

Creating movies with MovieShaker software

Using your imported clips, you can create a short movie using the Shake feature. The Shake feature selects clips from the Story Board tray, adds effects, and combines them randomly into a 30-second movie. After you “Shake” your video, you can edit it by adding effects and text, by adjusting the color and contrast, and by modifying its length.

 Importing images and sound clips

- 1 Click . The Import file browser window appears.
- 2 Find the clips you want to add.
- 3 Click the clips. The files are added to the Import clip tray.
- 4 Repeat this process to gather each of the images and video and sound clips you want to use in your movie.



You can delete a clip from the Import clip tray by dragging the clip's icon to the trash icon located on the Edit tray of the working panel.




Importing image or sound files that are over 30 seconds in length may cause the MovieShaker software to stop responding.


Using the Shake feature

- 1 Click the Shake tab. The Shake tray appears
- 2 Select a mood by clicking a face in the Shake pattern tray.

Shake tray

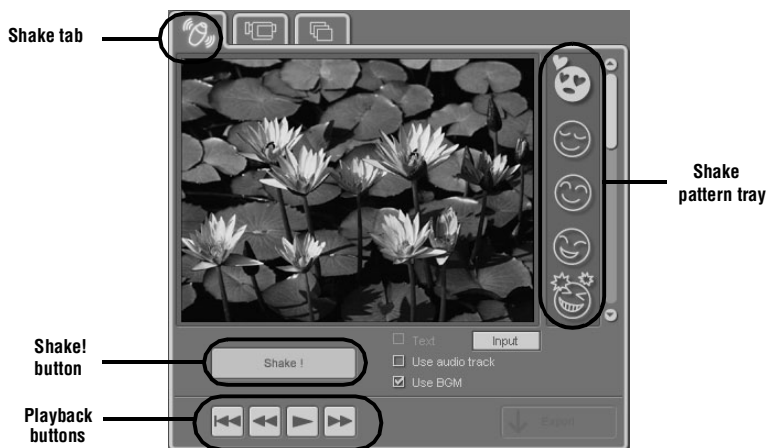

- 3 Click the Shake! button. A 30-second movie is automatically generated.
- 4 Optional: Add text to your new movie by clicking on the Input button.
- 5 To preview, rewind, or fast forward your movie, use the Playback buttons.


 Scenes created with the Shake feature begin with a black screen in the Shake tray window. Your scenes appear during movie playback.

You can improve the image quality produced by the Shake feature (at the cost of longer Shake times) by turning off the “Shorten the Shake time” feature in the General panel of the Setting dialog box. See the “Menu reference” section of the online Help file for details.


Adding effects to a scene or a clip

- 1 Double-click or drag the desired clip or scene to move it to the Story Board tray.
- 2 Click the Effect button on the Effect tray.

Effect tray window (Effect button selected)

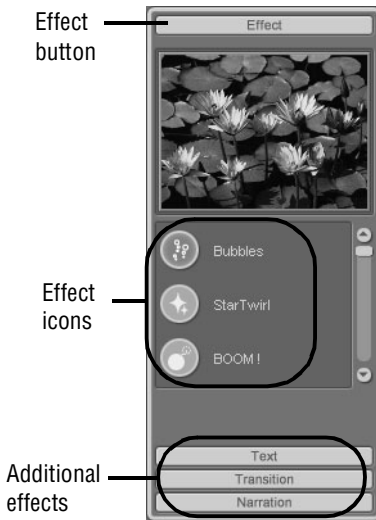


- 3 Drag the Effect icon you want to add from the Effect tray to the Effect palette on the Edit tray.
- 4 Click the Play button on the Edit tray to preview the effect. The added effect previews on the clip displayed in the Effect tray window.

 A preview of the added effect is displayed in the Effect tray window. You can eliminate an effect by dragging it from the Effect palette to the trash icon on the Edit tray. See the online Help file for more information on adjusting effect duration and replaying clips and scenes.


Adding text effects to a scene or clip

- 1 Double-click or drag the clip or scene to move it to the Story Board tray.
- 2 Click the Text button on the Editing tray.

Effects Tray (Text button selected)

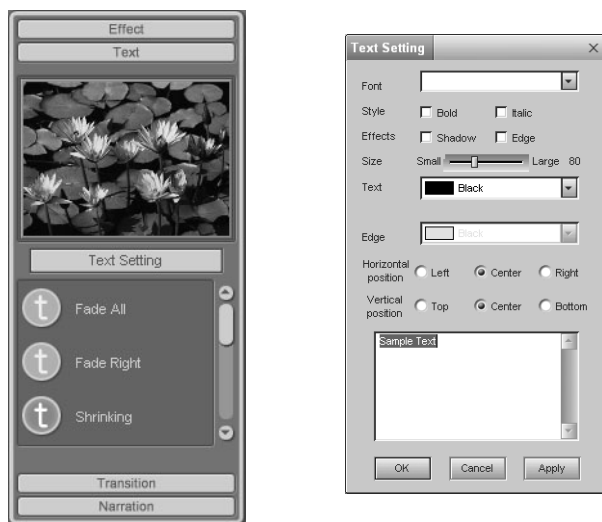

- 3 Click the Text Setting button to create customized text. The Text Setting dialog box appears. Enter your text, and select the font, size, color, and positioning for your text.
- 4 Drag the Text effect icon you want to add from the Effect tray to the Effect palette on the Edit tray.
- 5 Click the Play button on the Edit tray to preview the text effect. The clip displays the text effect in the Effect tray window.


 A preview of the added text and text effect is displayed in the Effects tray window. From the Edit tray, you can eliminate a text effect by dragging it from the Effect palette to the trash icon. See the online Help file for more information on adjusting Text effects.

Saving a movie


- 1 Verify that the movie or clips you want to save are located on the Story Board tray.
- 2 Click the Export button on the Story Board tray.

Change text in this variable definition to document title.


- 3 Select the format in which you want the movie to be saved.

 You can click on each export format to view its description and use.

Export window

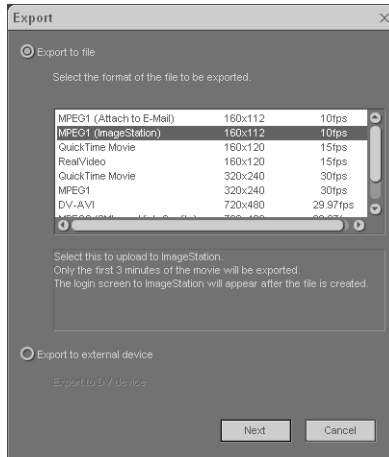

- 4 Click Next.
- 5 Confirm that you want to continue.
- 6 Locate the folder to which you want to save the file, name your file, and click Save.


 The time required to export your movie file may vary, depending on the format selected. See the online Help file for more information on exporting a movie.

Using ImageStation online service with MovieShaker software

ImageStationSM is an online service that allows you to store your pictures and movies on the Internet to share with family and friends. ImageStation requires an Internet connection and registration for the Web-based service. You must be connected to the Internet before uploading your pictures or movies using MovieShaker and ImageStation applications.

To upload MovieShaker files

- 1 Locate the clips or video files that you want to upload to the ImageStation service, and import them to the Import Clip tray.
- 2 Drag the desired clips or video files to the Story Board tray.
- 3 Click the Export button. The Export window appears.
- 4 Select “MPEG1 (ImageStation)” and click Next.

 The MovieShaker application creates a temporary file to store your images prior to uploading to ImageStation. This file is deleted after the upload process.

- 5 If you are a registered member, provide your login name and password.
For first-time users, click “Register to ImageStation.” The ImageStation registration wizard appears and guides you through the initial registration process. Follow the on-screen instructions.


ImageStation Login window



- 6 When the ImageStation application on your computer connects with ImageStation online, your files are uploaded to the Web site. The Image Uploader window appears and displays the Internet connection and upload status.

Change text in this variable definition to document title.

Image Uploader window

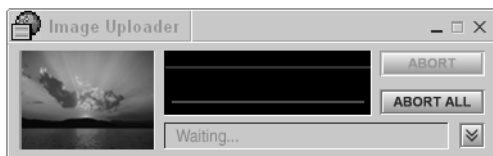

- 7 Go to <http://www.imagestation.com> to view your uploaded pictures or movies. Follow the on-screen instructions to access your ImageStation account.



The ImageStation Web site may ask you to complete a full login again if your current session is not active.

PictureGear Software

PictureGear™ software is a digital image management application that allows you to view all the images stored in any directory on your computer. Thumbnail views provide quick reminders of your pictures. Use PictureGear software to brighten, add contrast, enhance, resize, crop, and color-correct your pictures. Create animations, screen savers, wallpaper, still pictures from MPEG, and HTML photo albums.

PictureGear main window



Managing your pictures


Use the Collection feature to manage your pictures.

- 1 From the Collection menu, click Create New Collection.
- 2 Enter a name for your collection, then click OK.
- 3 Click the Folder tab in the main window, and browse to locate your pictures.
- 4 Select the pictures you want to include in your collection.
- 5 From the Collection menu, click Add File to Collection.
- 6 In the Add File to My Collection message box, select the name of your collection, and click OK.

Creating a photo album


- 1 Click the Folder tab in the main window and browse to locate your pictures.
- 2 Select the pictures you want to include in your album.


PictureGear Album Maker dialog box

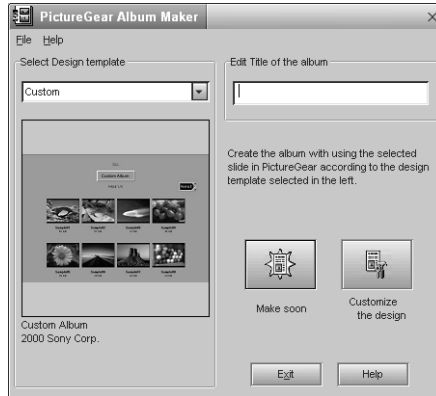


- 3 From the Utilities menu, select Album Maker.
- 4 Choose a Design template for your album.
- 5 Click the “Make soon” button to create your album immediately, using the PictureGear default settings.
- 6 Click the “Customize the design” button to add pictures, frames, text, and effects.

Custom Album dialog box

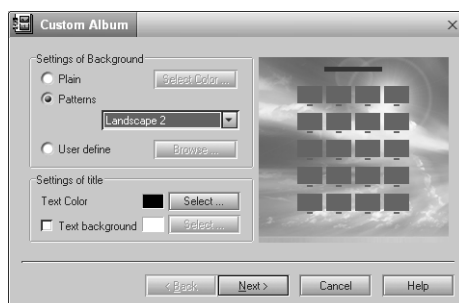

 If you select the Custom Album process, the final album is created when you click the Finish button in the last dialog box.


Custom album “Completed” dialog box

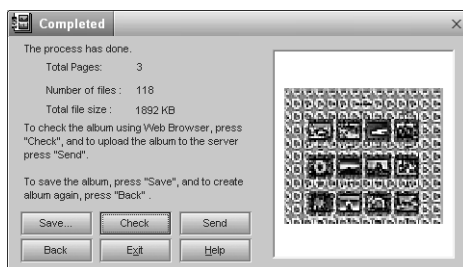

- 7 Click Save to designate the location where you want to save your album.
- 8 Enter a name for the target folder and click OK.
- 9 The PictureGear™ Custom Album feature creates the new folder in the designated location.


Smart Capture

Smart Capture is a Sony application that manages the i.LINK® connection between your computer and a compatible i.LINK digital camera or camcorder. You can capture and enhance video or still images to share with your family and friends over the Internet or through e-mail.

 i.LINK is a trademark of Sony used only to designate that a product contains an IEEE1394 connection. The i.LINK connection may vary, depending on the software applications, operating system and compatible i.LINK devices. All products with an i.LINK connection may not communicate with each other.

Please refer to the documentation that came with your compatible i.LINK device for information on operating conditions and proper connection. Before connecting compatible i.LINK PC peripherals to your system, such as an optical disc drive or hard disk drive, confirm their operating system compatibility and required operating conditions.

Smart Capture main window

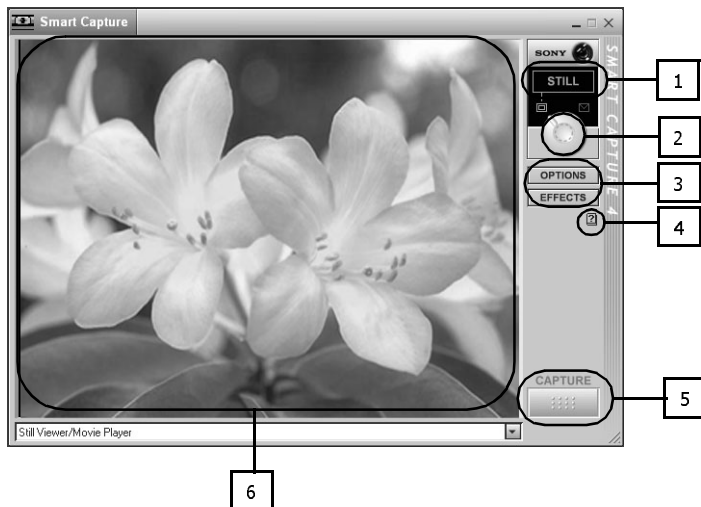

1 Mode indicator Displays the current mode (Still or Net Movie).	4 Help button Connects you directly to the online Smart Capture Help.
2 Mode dial Switches Smart Capture from Still mode to Net Movie mode with a single click of your mouse.	5 Capture button Captures your individual still images in the same manner as a camera. You can select different characteristics for the Capture button when capturing a Net Movie.
3 Options button Displays the configuration options available for either Still or Net Movie mode. Effects button Displays the special effects that you can apply to your pictures or video clips.	6 Image window Displays the still or video image from your digital camera or camcorder.


The Smart Capture main window opens with a blue screen image, indicating that there is no data input from a digital camera or camcorder. When you connect your digital camera or camcorder to your system with an i.LINK cable and turn it on, an image appears in the main window. Some cameras and camcorders need to have a recording media inserted before an image can be displayed in the Smart Capture window. Consult the manual supplied with your digital camera or camcorder for more information.

Using Still Mode

- 1** Click Start in the Windows® taskbar and click All Programs.
- 2** Select Smart Capture and then click Smart Capture. The Smart Capture main window appears.
- 3** Connect your compatible i.LINK digital camera or camcorder to your computer with an i.LINK cable (optional). An image appears in the Smart Capture main window.
- 4** Check that the Mode dial is set to Still. Click the Mode dial to switch between Still mode and Net Movie mode.

-
- 5 Click the Options button to view the available options for your still image capture. The Still Image Options window appears.


Still Image Options window

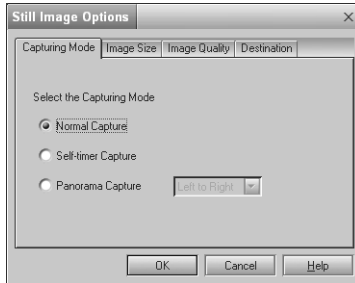


The Still Image Options window has four tabs:

- ❑ **Capturing Mode** — You can choose between Normal, Self-timer, or Panorama Capture modes.
 - ❑ **Image Size** — Select the image size, horizontal by vertical, in pixels.
 - ❑ **Image Quality** — Set the quality of your pictures as they are being saved by selecting Fine, Standard, or Economy image quality.
 - ❑ **Destination** — Select a file destination for your pictures.
- 6 Click the Effects button to select a special image effect. The Effect Settings window appears. Use the drop-down list to view and customize the available effects.

Effect Settings window

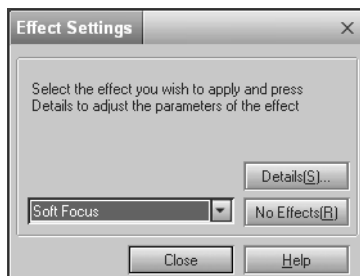

 You can use a different special effect for each picture, or you can remove all special effects by clicking the No Effects button.

To capture a picture in Still mode

- 1 Use your digital camera or camcorder to locate the image you want to capture. When you see the desired image in the Smart Capture window, click the Capture button. The Still Viewer window appears. You can capture one picture or several pictures at a time.

Still Viewer window



- 2 Click the arrows or drag the scroll bar to view the pictures. As each image is captured, it appears in the Still Viewer window with a text balloon to add your comments and an identifying number in the viewer queue.

To manage pictures in Still mode

From the Still Viewer window, you can perform various functions using the task buttons:

- ❑ **Delete** — Discard any or all of your still images by clicking the Delete button. Select a single image or all and the image(s) is “torn” and removed from the Still Viewer window.
- ❑ **Upload** — Send your still images online to the ImageStation Web site to share with your family and friends. The ImageStation service stores your still images online when you become a registered user. See “Using ImageStation with Smart Capture software.”

-
- ❑ **Mail** — E-mail your still images to your family and friends. Click the Mail button and your e-mail application launches with a new message window containing the still image as an attachment.
 - ❑ **Save** — Click the Save button to save your still image in a variety of formats, to a location of your choice.




You must be connected to the Internet before attempting to upload or e-mail your still images or videos.

Using Net Movie Mode

- 1 From the Start button in the Windows taskbar, select All Programs, select Smart Capture, and then click Smart Capture. The Smart Capture main window appears.
- 2 Connect your compatible i.LINK digital camcorder to your computer with an i.LINK cable (optional). An image appears in the Smart Capture main window.
- 3 Verify that the Mode dial is set to Net Movie. Click the Mode dial to switch between Still mode and Net Movie mode.
- 4 Click the Options button to view the available options for your movie capture. The Recording Options window appears.

Recording Options window

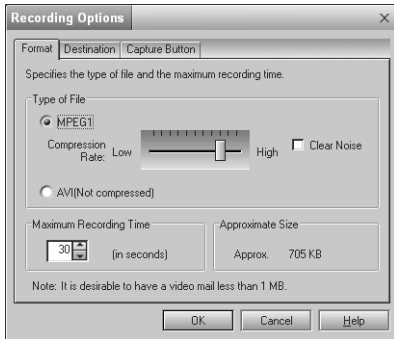

Format tab view



Capture Button tab view

The Recording Options window has three tabs:


- ❑ **Format** — You can adjust the compression rate for your movies in MPEG1 format or choose the AVI option for no compression. You can also set the maximum recording time for your movie capture.
 - ❑ **Destination** — Select a file destination for your movies when recording video clips.
 - ❑ **Capture Button** — Set the characteristics of the software's on-screen Capture button. You can start and stop recording by clicking the Capture button (this is the default characteristic). You can select Anti-Ground Shooting, which allows recording to occur only while you click and hold the Capture button. Recording will stop when you release the button. (
- 5 Click the Effects button to select a special image effect. The Effect Settings window appears. Use the drop-down list to view and customize the available effects.



You can remove all special effects by clicking the No Effects button.

To capture a movie in Net Movie mode

- 1 Use your digital camcorder to locate the view(s) you want to capture. When you see the desired view in either the Smart Capture window or your camcorder's viewfinder, click the Capture button to begin recording your movie. The Movie Player window appears.
- 2 Click the Capture button when you have finished recording your movie and the first frame of your movie appears in the Movie Player window. You can record a movie for approximately 30 seconds. The Movie Player feature automatically stops recording when this time limit is reached.

 If you have set the Capture button to use the Anti-Ground setting, you must click and hold the Capture button to record your movie.

Movie Player window



- 3 You can review your movie from the Movie Player window by using the play, pause, and stop buttons. Click the arrows or drag the scroll bar to view your movie. Each frame is displayed with an identifying number in the queue.

To manage your movie in Net Movie mode

From the Movie Player window, you can perform various functions using the task buttons:

- ❑ **Delete** — Discard any frame or the entire movie by clicking the Delete button. The frame or movie is removed from the Movie Player window.
- ❑ **Upload** — Send your movies online to the ImageStation Web site to share with your family and friends. The ImageStation service stores your movies online when you become a registered user. See “Using ImageStation with Smart Capture software”.
- ❑ **Mail** — E-mail your movies to family and friends. Click the Mail button and your e-mail application launches with a new message window containing the movie as an attachment.
- ❑ **Save** — Click the Save button to compress and save your movie in a variety of formats, to a location of your choice.


Using ImageStation with Smart Capture software


ImageStationSM is an online service that allows you to store your pictures and movies on the Internet to share with family and friends. The ImageStation service requires an Internet connection and registration for the Web-based service. You must be connected to the Internet before uploading your pictures or movies with Smart Capture and ImageStation applications.


To upload with Movie Player

- 1 Click the Upload Button in Movie Player to begin transfer of your movie to the ImageStation Web site. The Image Uploader window appears and displays the Internet connection and upload status.

Image Uploader window

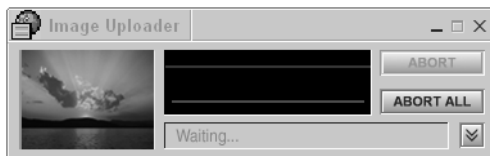

-
- 2 Click  to see thumbnail previews of your pictures or movies.


 The ImageStation preview feature is available when you upload two or more pictures or a movie. No preview is shown if a single picture is being uploaded.


To upload with Still Viewer

- 1 Click the Upload button in Still Viewer. The ImageStation Login window appears.


ImageStation Login window



- 2 For first-time users, the ImageStation registration wizard guides you through the initial registration process. Follow the on-screen instructions. If you are already a registered member, provide your login name and password. The Image Uploader window appears.
- 3 From the Still Viewer window, click the Upload button to transfer your pictures or movies to the ImageStation Web site. The Image Uploader window displays your Internet connection and upload status. Click  to see thumbnail previews of your pictures or movies.

 The ImageStation preview feature is available when you upload two or more pictures or a movie. No preview is shown if a single picture is being uploaded.

- 4 Go to <http://www.imagestation.com> to view your uploaded pictures or movies. Follow the on-screen instructions to access your ImageStation account. The ImageStation Web site may ask you to complete a full login again, if your current session is not active.

 Sony recommends that your movie file size not exceed 254 MB if compressed, or 2 GB if not compressed. Large movie files take longer to upload to the ImageStation Web site.


SonicStage Software

SonicStage software is a new jukebox application that adds a host of new features to its predecessor, OpenMG™ Jukebox. SonicStage software lets you play and record from audio CDs and import digital audio files while maintaining copyright information. Continuing to take advantage of Sony's copyright-protected ATRAC3™ format for high-quality digital audio storage, SonicStage sports a new music visualizer, a sleek new player skin design, audio CD burning capability, and a parametric equalizer for fine-tuning audio playback.

Electronic Music Distribution (EMD) Services


EMD enables you to download music files via the Internet. To use Internet services that are compatible with SonicStage, you need:

- ❑ Access to the Internet from your computer. Sign up with an Internet Service Provider (ISP) and configure your computer for Internet access before using EMD services.
- ❑ An EMD service provider. Consult the provider for service information.

 To protect your personal data, Sony uses Secure Sockets Layer (SSL), an encryption protocol for communication between your browser and Sony's World Wide Web (WWW) server. If you are accessing the Internet from an enterprise Local Area Network (LAN), you may not be able to use SSL due to the proxy server of the LAN. Contact your network administrator for more information.







Starting SonicStage

- 1 Click Start in the Windows taskbar and then click All Programs.
- 2 Select SonicStage and then click SonicStage.

 The CDDB® (Compact Disc Database) Music Recognition Service registration wizard enables you to register with CDDB. You need Internet access from your computer to register and use this service. For more information regarding CDDB registration, click the Help button.


- 3 When you have registered with CDDB, the "Confirm the setup of SonicStage..." dialog box appears.
- 4 Click Yes to continue.


SonicStage feature tabs (Main window)

- ❑ **CD tab**  — The contents of your inserted audio CD are displayed, enabling functions such as recording to the computer's hard disk drive.
- ❑ **Import tab**  — Import MP3, WAV or audio files on your computer to a Playlist.
- ❑ **Playlist tab**  — View the available Playlists as “tree + list” or “list” only.
- ❑ **Transfer tab**  — View the available Playlists on your computer. You can transfer the audio files to an external device or media.
- ❑ **Device/Media tab**  — View the status of your audio files, connected external device, or inserted media.
- ❑ **Internet tab**  — The browser view displays your connection to the Internet, enabling you to locate audio files and use EMD services.

SonicStage main window


Playlist view

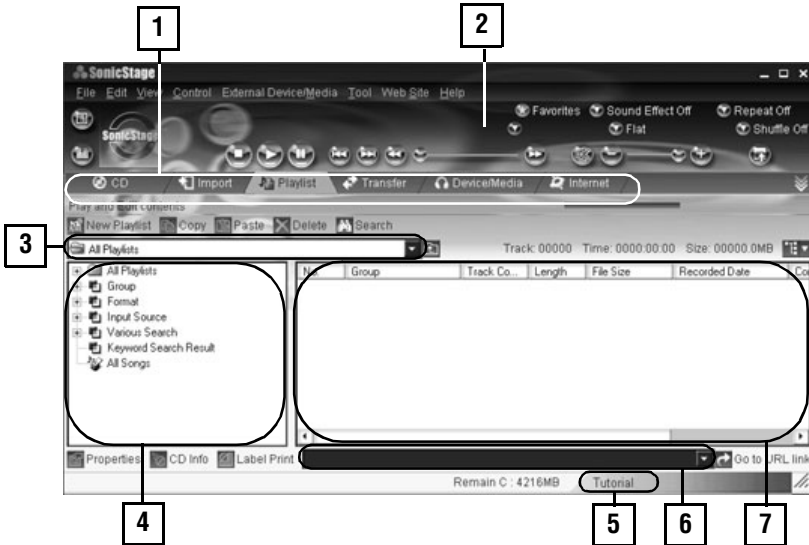

1 Feature tabs Changes the screen view according to the selected feature.	5 Tutorial Click to open or close the Tutorial feature.
2 Player control buttons Controls playback functions, such as play, pause, stop, fast forward, and reverse. You can increase or decrease volume and switch view modes.	6 Internet address drop-down list Displays current and recently visited Internet addresses. Click the “Go to URL link” button to immediately connect to your favorite Web sites.
3 Playlist drop-down list (Playlist view) Displays available playlists and audio files.	7 File list view (Playlist view) Displays the contents of the folder selected in the file tree view.
4 File tree view (Playlist view) Displays the folders available on your computer, enabling you to locate your audio files. Expand the views for the file list or Playlist drop-down using the Playlist switch  button.	

Recording from a CD

You can record songs from audio CDs and import them to playlists in SonicStage.

 When you record from an audio CD from your optical disc drive for the first time, the “CD Drive Optimization” dialog box appears. Click Start to verify your optical disc drive. After the verification is performed, recording begins.


- 1 Insert an audio CD into your system’s optical disc drive.
- 2 Click the CD tab.
- 3 Use the drop-down lists to select the ATRAC3 bit rate, CD drive, and Record To destination.


Change text in this variable definition to document title.


CD tab window



- You can identify specific tracks on your CD by clearing the check marks from the tracks you don't want to record. You can clear all selected tracks by selecting the empty checkbox next to Select All, and then selecting the tracks you want to record.

If your Internet connection is active, you can use the  CD Info button to view the name of your CD and its song titles.

 The CD Info button feature is not supported for all audio CDs.

- Click  (Rec to Jukebox) to begin recording. When the recording is finished, the new playlist appears in the File tree view of the Playlist window.

Transferring songs (Check-In/Check-Out)

You can transfer songs between the playlists in the SonicStage software and external devices or media. For more information on using your external devices or media, see the instructions supplied with the device or media.


These instructions are for using the Check-In/Check-Out “1-step” method. For information on using another method, see “Changing the check-in/check-out settings” in the SonicStage online Help file.



Check-Out

- 1 Connect the external device or insert the media into your computer.
- 2 Click the Transfer tab to display the Transfer window. Your computer automatically recognizes the connected external device or media and lists the content information in a new panel on the right side of the Transfer window.


Transfer window







- 3 Select the Playlist that contains the song that you want to check out. The songs in the playlist are shown in the Playlist view panel located in the center of the Transfer window.
- 4 From the Playlist view panel, select the song to be checked out. To check out more than one song at a time, hold down the Ctrl key and select the additional songs.
- 5 Click  (Out), or drag the song to the desired position in the song list of the external device or media. Check Out begins.

 To cancel Check Out, click  (Stop), or click Cancel in the Processing dialog box that is displayed during the Check Out process.

Check In

 The songs that you transfer to external devices or media can only be checked in to the hard drive of the same computer from which the songs were checked out.

- 1 Connect the external device or insert the media into your computer.
- 2 Click the Transfer tab to display the Transfer window. Your computer automatically recognizes the connected external device or media and lists the content information in a new panel on the right side of the Transfer window.
- 3 Select the song to be checked in from the song list of the external device or media. To check in more than one song at a time, hold down the Ctrl key and click the additional songs.
- 4 Click  (In), or drag the song(s) to the Playlist view panel. If you want to check in all of the songs in the external device or media, click  (In All). Check In begins.

 To cancel Check In, click  (Stop), or click Cancel in the Processing dialog box that is displayed during the Check Out process.

For more information about using SonicStage software, go to the online SonicStage Help. You can access the online help file as follows:

- 1 Click the Start button in the Windows taskbar, select All Programs.
- 2 Select SonicStage, then select SonicStage Help.

Additional features

- ❑ **SonicStage Tutorial** — SonicStage features are described in the Tutorial. The user-friendly interface instructs you on how to use all SonicStage features.
- ❑ **SonicStage Backup Tool** — You can back up and restore music, graphics, and information data managed by SonicStage. You must be connected to the Internet to use the SonicStage Backup Tool.
- ❑ **Import audio files in various formats** — You can import audio files in various formats, such as MP3 or WAV standards. You can also import audio

files that comply with the Microsoft® Windows Media™ Technologies (WMT) standard, identified by .asf or .wma extensions. Manage your audio files through the Playlist feature of SonicStage.


- ❑ **Manage imported songs on the Playlist** — Additional features are available when you register your imported songs through the Playlist feature of SonicStage. You can manage your music by creating your own list of songs categorized by genre or artist, displaying your song list in the Playlist feature, and arranging your songs in a customized order using the Playlist folders. Edit your music by combining multiple songs into a single song, or divide one song into two, by using the Combine and Divide features.
- ❑ **Simple mode** — The main SonicStage window viewed in Simple mode, is a smaller, compact version of Full mode. This may be convenient when you want to listen to music with SonicStage software, while using other applications, or whenever you feel the Full mode view is intrusive. The design of the main SonicStage window in simple mode can be changed by selecting a new “Skin,” which enhances the window’s appearance. The Simple mode feature enables you to perform playback operations only.

SonicStage Premium Software

SonicStage™ Premium software is a unique integrated software application that supports high quality digital audio playback and recording using the MiniDisc drive, FM tuner, or DVD-RW drive of your VAIO® MX computer. You can easily record your favorite music from external analog and digital audio devices, such as a CD player. SonicStage Premium software has several jukebox features, including a music Visualizer, audio CD-burning capability, and an equalizer for fine-tuning your audio playback.*

 SonicStage™ Premium software is available only on VAIO® MX computer models."


Overview of SonicStage Premium Software

SonicStage Premium software has unique features that integrate with your MiniDisc drive, FM tuner and DVD-RW drive. The features expand the compatibility of the built-in audio devices, enabling you to create your own music database  (M drive) and share audio files using other audio media and devices.

SonicStage Premium software enables you to play and record audio CDs and import digital audio files while maintaining the copyright information of the contents.

When you record an audio CD, it is encoded in ATRAC3 format onto your computer's hard disk drive. You can also download (import) digital audio files from Electronic Music Distribution (EMD) services. The imported data can be played on your computer or transferred to external portable audio devices or media. SonicStage Premium software converts your existing MP3 and WAV format audio files into ATRAC3 format.

* Your VAIO® MX computer has SonicStage™ Premium software preinstalled. Some manuals or online help files may provide information about SonicStage™ software, which is a lighter version with fewer features. Follow the information provided in this guide or in the SonicStage Premium online Help file, to learn how to use SonicStage Premium software.

 You have the option of formatting your audio files in ATRAC3, MP3 or WAV formats. See the SonicStage Premium Help file for more information.

SonicStage Premium software features

The software features enable you to:

- ☐ Listen to music from different audio sources, such as FM radio stations, audio CDs, or an Electronic Music Distribution (EMD) service.
- ☐ Import your songs from various audio sources and create your own music database.
- ☐ Manage information about your audio files, such as the artist name, song title, and media jacket image, by grouping into Playlists.
- ☐ Use search criteria to locate specific songs in your music database.
- ☐ Create custom CDs by selecting songs from different audio CDs or transferring songs from your music database.
- ☐ Transfer the imported songs in your music database to a MiniDisc, MagicGate™ Memory Stick® media, or other external device or media.
- ☐ Use SonicStage Premium software's sound effects, equalizer, or visualizer, to enhance your listening experience.
- ☐ Set up timed events using Timer Playback, Timer Recording, and Sleep Timer.

For more information about SonicStage Premium software features, follow these steps to access the SonicStage Premium Help file:

- 1 Click Start in the Windows® taskbar and select All Programs.
- 2 Select SonicStage Premium and click SonicStage Premium Help.

SonicStage Premium software compatibility

The software is compatible with several media, devices, and types of audio files. You can play back, listen to, and record, with the following:

Media

- ☐ **Audio CDs (Including CD Extra and CD Text)** — You can play back, record to the hard disk drive, and make backup CDs.


- ❑ **MiniDiscs** — You can play back MiniDiscs that are recorded in LP stereo, stereo and mono recording modes. The M drive enables recording (check-out) to MiniDisc media.
- ❑ **MagicGate™ Memory Stick® media*** — You can play back songs from the media, using the Memory Stick slot on your computer. The M drive enables recording (check-out) to MagicGate Memory Stick media.

Devices

- ❑ **FM Tuner** — Your VAIO® MX computer features a built-in FM tuner, enabling you to listen to and record from FM stations. Your recorded material is converted into OpenMG format or WAV format.
- ❑ **Devices that are compliant with OpenMG technology standards** — The USB ports on your computer enable you to connect a compatible device that can play and record your audio files.
- ❑ **Devices that are connected to the computer's external input ports or jacks** — You can listen to and record from a connected device.

Audio file formats

- ❑ OpenMG format: ATRAC3 files with the file extension .omg.
- ❑ WAV format
- ❑ MP3 format
- ❑ Audio files that are compliant with WMT (Windows® Media Technology).

 Some MP3, WAV and WMT compliant files may have incompatible sampling rates and cannot be imported. For details on importing files, see the SonicStage Premium Help file.

Electronic Music Distribution (EMD) Services

EMD enables you to download music files via the Internet. To use Internet services that are compatible with SonicStage, you need:


- ❑ Access to the Internet from your computer. Sign up with an Internet Service Provider (ISP) and configure your computer for Internet access before using EMD services.

* SonicStage Premium software does not support standard Memory Stick media (blue color).

- ❑ An EMD service provider. Consult the provider for information about service.

To Use SonicStage Premium Software

When you start SonicStage Premium software for the first time, certain settings must be enabled in order to use the software to listen to FM radio stations and to play audio files.

 Connect the FM Tuner before attempting to scan the frequencies of available FM radio stations in the SonicStage Premium software application.

Starting SonicStage Premium Software (First time)

- 1 Click Start in the Windows taskbar and select All Programs.
- 2 Point to SonicStage Premium and then click SonicStage Premium.
- 3 At the first use of SonicStage Premium software, a dialog box appears and prompts you to register with the Compact Disc Database (CDDDB) music service. From this dialog box, you can choose to:
 - ❑ Click Cancel and end the CDDDB registration process for the current session. The CDDDB registration dialog box displays the next time you start SonicStage Premium software.
 - ❑ Create a new CDDDB account. If you are connected to the Internet before launching SonicStage Premium software, follow these steps:
 - 1 Select “This is a new CDDDB Registration.” Click Next.
 - 2 Follow the on-screen instructions to complete the registration process.
 - ❑ Access your existing CDDDB account. If you are connected to the Internet before launching SonicStage Premium software, follow these steps:
 - 1 Select “I already have a CDDDB Nickname.” Click Next.
 - 2 Follow the on-screen instructions to log on and access your existing account.


The SonicStage Premium main window appears, enabling you to continue your launch of the SonicStage Premium software.

- 1 In the software's main window, a dialog box appears. You are prompted to start scanning FM radio station frequencies. Click Yes.

Your computer starts scanning and displays a progress window.

- 2 A dialog box appears with the message, "Confirm the setup of SonicStage Premium." From this dialog box, you can choose to:
 - ☐ Set up SonicStage Premium software to automatically launch when you double-click audio files.
 - ☐ Select the type of audio files that can be played back with SonicStage Premium software.
 - ☐ Confirm playback settings each time SonicStage Premium software is launched.

SonicStage Premium main window

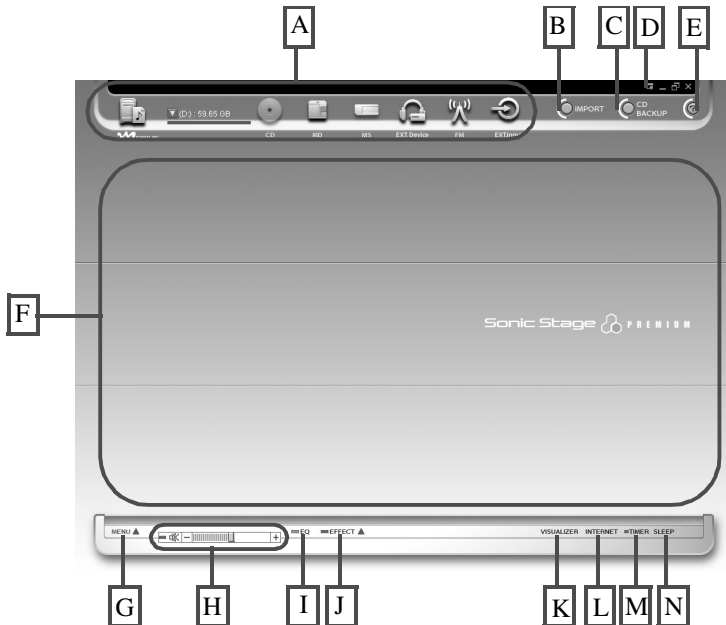

-
- | | |
|----------|--|
| A | Audio source icons
Identifies the audio sources. |
|----------|--|
-
- | | |
|----------|---|
| B | IMPORT button
Displays the Import window. |
|----------|---|
-
- | | |
|----------|--|
| C | CD BACKUP button
Displays the Create Audio CDs window. |
|----------|--|
-
- | | |
|----------|--|
| D | Simple Mode Switch button
Switches the main window view to the simple mode view. |
|----------|--|
-
- | | |
|----------|--|
| E | Help button
Displays the SonicStage Premium Help file. |
|----------|--|
-
- | | |
|----------|---|
| F | Operation area
Displays the operation panels for the audio sources. |
|----------|---|
-
- | | |
|----------|---|
| G | MENU button
Displays the main menu. |
|----------|---|
-
- | | |
|----------|---|
| H | Volume Control button
Increase or decrease sound volume when playing back songs from audio sources. |
|----------|---|
-
- | | |
|----------|--|
| I | Equalizer button
Displays the MX Equalizer dialog box, enabling you to change the equalizer options. |
|----------|--|
-
- | | |
|----------|---|
| J | Sound Effect button
Enables or disables the current sound effect selection. |
|----------|---|
-
- | | |
|----------|---|
| K | Visualizer button
Minimizes or maximizes the Visualizer window. The Visualizer window offers various images that respond to music playback. |
|----------|---|
-

L Internet button

Minimizes or maximizes the Internet connection window. The Internet window enables you to download or listen to audio files from EMD services.

M Timer Set button

Minimizes or maximizes the Timer Setting window. The Timer Setting window enables you to set up timed playback or recording events.

N Sleep Timer button

Your computer can be set up to automatically enter Stand by mode using the Sleep Timer button.

Using the audio source icons

The audio source icons initiate the functions of SonicStage Premium software for the related audio media or device. You can play back or record music using a drag-and-drop or double-clicking operation.

- ☐ Click on an audio source icon to view a Playback panel.
- ☐ Double-click on an audio source icon to begin music playback.
- ☐ Right-click on an audio source icon to view a shortcut menu of available functions.
- ☐ Drag an audio source icon onto another to perform recording or check-in/check-out functions.

Icon	Description
-------------	--------------------








Audio source is the **M DRIVE** (music database) on your hard disk drive. The Playlist icon also identifies audio files that are registered to a specific playlist in the M drive.



Audio source is a CD, CD-R or CD-RW inserted into your computer's optical drive.



Audio source is a MiniDisc inserted into your computer's MiniDisc drive.

Icon	Description
	Audio source is a MagicGate  Memory Stick media inserted into your computer's Memory Stick slot. (Note: A standard Memory Stick media (blue color) is not compatible with SonicStage Premium software.)
	Audio source is an external device or media connected to the USB port on your computer.
	Audio source is your computer's built-in FM tuner.
	Audio source is for recording purposes. This icon identifies a device connected to the external input port or jack on your computer, such as the LINE IN, OPT IN, or MIC.

Using the basic operations

The functions and operation of each audio source is controlled through three windows:

- ❑ **Playback Panel** — This window enables you to play songs from the selected audio source. You can control the music by using functions such as repeat, shuffle, fast forward and rewind. The available functions on the Playback panel may vary, depending on the selected audio source icon.
- ❑ **Contents Panel** — This window displays a list of songs from the audio source or from a Playlist. You can also view information about the song, such as the artist name, song title, or duration of playback.
- ❑ **Edit Panel** — This window enables editing of the songs from the audio source. You can rearrange song order or add/delete songs from the audio source or Playlist.





If you select the FM tuner or external device icons, a Listening panel is displayed. The functions of the Listening panel differ from the Playback panel. See the SonicStage Premium Help file for more information.



To Use Playback and Recording Features

Playing an audio CD




When you play an audio CD in your computer's optical drive for the first time, you are prompted to select playback options and to check the operation of the drive. Follow the instructions in the dialog boxes, and set up SonicStage Premium software to automatically play your audio CDs and to verify the optical drive operation.

- 1 Insert the audio CD into the optical drive. The CD Playback panel appears.

 If the Playback panel does not automatically display, click the  icon. You can double-click the icon to automatically start playback of the audio CD.

- 2 Click  (Play) on the Playback panel to begin playback from the beginning of the audio CD.
- 3 Click  (Show List) on the Playback panel to view the Contents panel. A song list of the music on the audio CD is displayed.
- 4 Select the song you wish to play. Click Play on the Playback panel to begin the selected song.

 You can double-click on a specific song to automatically begin playback.

- 5 Click  (Stop) on the Playback panel to stop playback.
- 6 Click  (Play) during playback to pause the song. Click on the icon again to resume playback.
- 7 Click  (Eject) on the Playback panel to eject the audio CD from the drive.

 The Timer Playback and Sleep Timer functions are disabled during song playback.






Do not open or close the optical drive during playback.


Recording an audio CD

You can record songs from an audio CD and register them to a Playlist on your hard disk drive.


To record all songs on an audio CD

- 1 Insert the audio CD into the optical drive. The CD Playback panel appears.
- 2 Select and drag  (CD), and drop it on  (M drive). The Record window appears.
- 3 Click Show List on the Record window. The songs on the audio CD are listed in the List panel. You can click  (CD Info) to view information about the songs on your CD if you are connected to the Internet.
- 4 Select the format and bit rate for your recording session. Click Record All to begin recording all the songs on the CD.

To record specific songs on an audio CD

- 1 Follow steps 1-3 as described in the previous section.
- 2 From the List panel, use a check mark to select the songs you want to record. Delete the check marks from those songs you do not wish to record.
- 3 Select the format and bit rate for your recording session. Click  (record) to begin recording the selected songs.

Playing songs on your hard disk drive (Playlist)

- 1 Click  (M drive). The Playlist Playback panel appears.
- 2 Click Show List on the Playback panel to view the Contents panel. The Playlists on your hard disk drive are displayed.


You can find a specific Playlist using the categories function. Search for the desired Playlist by artist name, genre, or keywords.

- 3 Double-click to select a Playlist.
- 4 Double-click on a song to begin playback.

Playing a MiniDisc

- 1 Insert the MiniDisc into the MiniDisc drive. The MiniDisc Playback panel appears.



If the Playback panel does not automatically display, click the  (MiniDisc audio source) icon. You can double-click the icon to automatically start playback of the MiniDisc.

- 2 Click Play on the Playback panel to begin playback from the beginning of the MiniDisc.
- 3 Click Show List on the Playback panel to view the Contents panel. A song list of the music on the MiniDisc is displayed.
- 4 Select the song you wish to play. Click Play on the Playback panel to begin the selected song.
- 5 Click Stop on the Playback panel to stop playback.
- 6 Click Play during playback to pause the song. Click on the icon again to resume playback.
- 7 Click Eject on the Playback panel to eject the MiniDisc from the drive.



Do not eject the MiniDisc media during playback.



Recording songs to a MiniDisc (Check-out)



When you record songs from an audio CD to a MiniDisc, the songs are recorded into a Playlist on your hard disk drive, and then checked out to the MiniDisc.



Before recording to a MiniDisc, verify that the media is not write-protected.


To record songs to a MiniDisc



- 1 Insert the audio CD into the optical drive.
- 2 Insert the MiniDisc media into the MiniDisc drive.
- 3 Select and drag  (CD), and drop it on  (MiniDisc). The Record window appears.

- 4 Click Show List on the Record window. The songs on the audio CD are listed in the List panel. You can click the CD Info button to view information about the songs on your CD if you are connected to the Internet.
- 5 Select the format and bit rate for your recording session.
- 6 Click . The MD Recording Mode dialog box appears. Choose the appropriate recording mode, depending on format and bit rate selected previously. For details on setting the format and bit rate, see the SonicStage Premium Help file.
 - ☐ LP2 Stereo Recording mode
 - ☐ LP4 Stereo Recording mode
 - ☐ Stereo Recording mode
 - ☐ Mono Recording mode
- 7 Select the recording (check-out) mode. Click OK.
- 8 Click  (Stop Record) to stop or cancel the recording session.

 For more information on recording to a MiniDisc (Check-out), see the SonicStage Premium Help file.


Playing songs from a MagicGate Memory Stick media






- 1 Click  (MagicGate™ Memory Stick® media) audio source icon. The Memory Stick media Playback panel appears.

The Check-in/Check-out window appears if the Memory Stick media is inserted while SonicStage Premium software is running. You can play songs by using the Playback panel on the right side of this window.
-  If the Playback panel does not automatically display, click the  icon with the Memory Stick media inserted into the Memory Stick slot of your computer. You can double-click the icon to automatically start playback of the Memory Stick media.
- 2 Click Show List on the Playback panel to view the Contents panel. A song list of the music on the Memory Stick media is displayed.
 - 3 Select the song you wish to play.
 - 4 Click Play on the Playback panel to start the selected song.

Recording songs to a Memory Stick media or portable audio device (Check-out)

You can record songs from an audio CD to a MagicGate™ Memory Stick® media or external device that is compliant with OpenMG™ software standards. The songs are recorded to the M drive on your hard disk drive, and then checked out to the Memory Stick media or portable audio device.

 Before recording to a Memory Stick media, verify that the media is not write-protected.

- 1 Insert the audio CD into the optical drive.
- 2 Insert the Memory Stick media into the Memory Stick media slot, or connect the external device to the computer.
- 3 Select and drag  (CD), and drop it on  (Memory Stick media), or  (external device or media). The Record window appears.
- 4 Click Show List on the Record window. The songs on the audio CD are listed in the List panel. You can click CD Info to view information about the songs on your CD if you are connected to the Internet.
- 5 Select the format and bit rate for your recording session. For details on setting the format and bit rate, see the SonicStage Premium Help file.
- 6 Click  (Record). The recording session starts.
- 7 Click  (Stop Record) to stop or cancel the recording session.

Playing songs from a portable audio device

SonicStage™ Premium software is preinstalled in your computer and is designed to be immediately compatible with most portable audio devices. If your portable audio devices use OpenMG™ software, you must set up and configure each device before using it with SonicStage Premium software. Follow these steps to install your OpenMG software and configure a device:


- 1 Insert the OpenMG software CD supplied with your audio device.
- 2 When you are prompted to select installation options, select the option to install drivers only.
- 3 Select the driver option that corresponds with the model name and number of your audio device. Click Install.

- 4 Follow the onscreen instructions to complete the driver installation.
- 5 Restart your computer when prompted.
- 6 Connect your audio device to a USB port on your computer and wait for Windows® to detect it. (A message may display in the Windows task tray.)


Open SonicStage Premium software, as follows:

- 1 Click Start in the Windows taskbar and select All Programs.
- 2 Point to SonicStage Premium and then click SonicStage Premium. The SonicStage Premium main window appears.



Your audio device is configured for use with SonicStage Premium software.

 Earlier versions of OpenMG Jukebox software (version 2.1 or earlier) are not compatible with SonicStage Premium software. If you have difficulty installing your portable audio device, go to the manufacturer's support Web site to locate and download the latest drivers.

To play songs from an portable audio (external) device or media

- 1 Click  (External device or media). The External device Playback panel appears.

The Check-in/Check-out window appears if the external device or media is connected or inserted while SonicStage Premium is running. You can play songs by using the Playback panel on the right side of this window.

 If the Playback panel does not automatically display, click the  icon with the external device/media connected or inserted into your computer. You can double-click the icon to automatically start playback of the songs on the device or media.


- 2 Click Show List on the Playback panel to view the Contents panel. A song list of the music on the external device or media is displayed.
- 3 Select the song you wish to play. Click Play on the Playback panel to start the selected song.

 You may not be able to play back songs on the audio device or media that were checked out from a different computer.

To Use the Visualizer, Equalizer, and Sound Effects

Your VAIO® MX computer has special features to enhance your music experience. You can view synchronized images while listening to music, enhance the sound quality and add special effects to your favorite songs.


Using the Visualizer

- 1 Click . The Visualizer window appears.
- 2 Click the Options button and point to Select Visualizer. The images on the Visualizer window change, enabling you to select your preference.
- 3 Click the Full Screen button or double-click anywhere on the Visualizer window to view the images in full-screen mode. You can restore the original window size by pressing the Esc key or double-clicking anywhere on the Visualizer window.
- 4 Click Visualizer again to close the Visualizer window.



The movements of Visualizer images do not synchronize with songs that are on a MiniDisc.


Using the MX Equalizer

- 1 Click . The MX Equalizer window appears. Select the desired sound mode from the drop-down list.


Sound Mode	Description
Flat	Equalizes the gain in each frequency range. Use this mode if you do not want to apply equalization during playback.
Pop	Selects the settings that are most suitable for Pop music.
Rock	Selects the settings that are most suitable for Rock music.
Jazz	Selects the settings that are most suitable for Jazz music.
Classic	Selects the settings that are most suitable for Classical music.
User1/User2	Selects your customized equalizer settings. See “To use custom equalizer settings”.

- 2 Click Close. The next time you play a song, the selected sound mode is applied to the song.

To use custom equalizer settings

- 1 Click  . The MX Equalizer Editor dialog box appears.
- 2 Select User1 or User2, and click Edit.
- 3 Set your desired adjustments to the Center frequency, Q-value and gain, by using the sliders.
- 4 Set the Bass Boost, as desired, by selecting the On option of the Bass boost. Move the slider to adjust levels.
- 5 Set the Treble, as desired, by selecting the On option of the Treble. Move the slider to adjust levels.
- 6 Click OK. The MX Equalizer Editor dialog box closes and the settings are registered for User1 or User2, depending on your selection.
- 7 Click OK. The MX Equalizer window closes.

Using sound effect settings


- 1 Click  . A sound effects menu displays.
- 2 Select the desired sound effect from the menu.



You may hear distortion during playback of some songs when sound effects have been added. If this occurs, select "Sound Effect Off" to turn off the sound effect.

<i>Effect</i>	<i>Description</i>
Vocal Canceller	Reduce or cancel the vocals in a song. You can also change the pitch of a song.
Reverb	Add reverberation to the sound, emulating different sound fields.
Settings	Make fine adjustments to each sound effect. See the SonicStage Premium Help file for more information on adjusting sound effects.

- 3 Click Close. The next time you play a song, the selected sound effect is applied to the song.

 You cannot apply sound effects to songs on a MiniDisc, audio from an FM radio station, or music from an external output.

To Use the FM Tuner


Your VAIO® MX computer is equipped with a built-in FM tuner, enabling you to listen to and record from FM radio stations. Your FM antenna wire or FM coaxial antenna (supplied) must be connected to your computer before you can listen to FM radio stations.





Listening to FM radio stations

The first time that you use your FM tuner, you are prompted to start automatic frequency scanning.

- 1 At the first use of SonicStage Premium software, a dialog box appears and prompts you to start scanning frequencies of FM radio stations. Click Yes.

Your computer starts scanning and displays a progress window. After scanning is complete, the frequencies of available FM radio stations are sorted in ascending order and assigned a sequential number on the Preset panel.

 Subsequent scanning overwrites the FM radio stations listed on the Preset panel. If you wish to keep the current list of FM radio stations, select “No” when the scanning dialog box appears.


- 2 Click . The FM Listening panel displays. The computer tunes in to the preset FM radio station that is currently selected.
- 3 You can use preset or manual tuning to change FM radio stations:
 - ☐ To use preset tuning, click  (FM Menu) and select Tuning Mode - Preset from the menu.
 - ☐ To use manual tuning, click FM Menu and select Tuning Mode - Manual from the menu.
 Click  or  on the FM Listening panel to locate a specific station or


frequency.


For more information on selecting FM radio stations, see the SonicStage Premium Help file.


Recording from an FM radio station

You can record from an FM radio station and register the audio file to a Playlist on your hard drive.

- 1 Click . The FM Listening panel appears.
- 2 Select the desired FM radio station.
- 3 Set up your audio input and recording settings by clicking REC Setting. Your audio input and recording options are:
 - ☐ Noise Reduction: Enable or disable noise reductions during recording.
 - ☐ Time Machine Recording: Set up a timer recording session.
 - ☐ Recording Format: Specify the desired recording file format.
 - ☐ Edit FM Playlist: Set up a Playlist to hold your recording session as a song.


 The maximum recording time is 150 minutes, regardless of format or bit rate settings. File size may vary, depending on audio input, recording format, or bit rate.

- 4 Move the Level Adjust slider to adjust the audio input level, if necessary.
- 5 Click  on the FM Listening panel to begin recording.
- 6 Click STOP on the FM Listening panel to stop recording. The recording session is registered to a Playlist as a song.

 You cannot change FM radio stations during a recording session.


To use Quick Timer Recording

To quickly set the amount time remaining to record:

- 1 Click  on the FM Listening panel during the recording session, to automatically set the recording time to 10 minutes.
- 2 Continue clicking on the icon to extend the recording duration by 10 minute increments.

To Use the Timer Functions


You can use the timer functions to schedule one-time, daily, and weekly playback or recording events. SonicStage Premium enables you to select the date, start time, end time, and timer event duration for the available audio sources.


 Timer events can only be performed when your computer's power is on, such as during active use, Stand by, or hibernation modes.

You cannot set up timer events for external devices or media.

Setting up a timer event

You can set up a timer event by dragging an audio source icon directly onto the Calendar.

- 1 Click  (Timer). The Timer Setting window appears.
- 2 Use the directional icons to locate the start date for your timer event.
- 3 Drag the desired audio source icon to the Calendar and drop it on the date you want the timer event to begin. A confirmation message appears.
- 4 Click OK.

 If you use the M drive audio source icon, the Select Playlist dialog box displays. Select the Playlist for the timer event and click OK.

A Timer Bar (a thick, vertical line) appears in the Calendar, marking the duration of the timer event, and the event is added to the Event List on the Timer Setting window.

- 5 Adjust the start, end, and duration of the timer event by dragging either side of the Timer Bar to the desired location.

To move the Timer Bar to a new location, click on the center of the bar and drag it to a new time period.

The timer event setup is completed. At the scheduled time, SonicStage™ Premium software automatically starts the event from the selected audio source.

To set up daily or weekly timer events

- 1 From the Timer Setting window, click New. The Timer Programming Settings window appears.
- 2 Set the date, time, audio source, and repetition of the timer event. Click OK.

The daily or weekly timer event setup is completed. At every scheduled time, SonicStage Premium software automatically starts the event from the selected audio source.

 You can display the Timer Programming Setting window by double-clicking anywhere on the Calendar that does not have a Timer Bar displayed.

Setting the Sleep Timer

The Sleep Timer function places your computer into Stand by mode after a predetermined period of time.

- 1 Click **SLEEP** (Sleep). The default Sleep Timer duration is 90 minutes. When the timer countdown is completed, the computer goes into Stand by mode.
- 2 Click the Sleep button to decrease the countdown duration by 10-minute increments.

Additional information about Timer events

If you perform any of the following operations when a timer event is set to begin, the scheduled event does not occur:

- ☐ Playing back songs or listening to audio from any audio source.
- ☐ Recording songs from an audio CD to a Playlist.
- ☐ Creating a backup audio CD.
- ☐ Writing songs from a Playlist to a CD-R media.
- ☐ Performing a check-in or check-out of songs.
- ☐ Importing audio files.
- ☐ Leaving the computer turned off.

When you attempt to change a timer event, the following aspects cannot be altered:

- ❑ The date, time, and duration of a completed or incomplete timer event.
- ❑ The date, time, and duration of a timer event in progress or about to start within three minutes. You can change the ending time if it is at least five minutes before the scheduled end time.
- ❑ The day of the week that a weekly timer event is scheduled to start. Use the Timer Programming Settings dialog box to change this information.

For more information about Timer functions, see the SonicStage Premium software Help file.

Additional Information

- ❑ **SonicStage™ Premium Backup Tool** — You can back up and restore all of the music, graphics and information data managed by SonicStage Premium software. You must be connected to the Internet to use the SonicStage Premium Backup Tool.
- ❑ **Simple mode** — The main SonicStage Premium window in Simple mode is a smaller, compact version of the Full mode view. This can be useful when you want to listen to songs with SonicStage Premium software while using other software, or whenever you feel that Full mode view is intrusive. The Simple mode feature enables you to perform playback operations only.

VisualFlow Software


VisualFlow™ software is a Sony state-of-the-art multimedia browser designed specifically for Memory Stick® media. It displays any still picture, movie or sound files stored in a Memory Stick media in a visually pleasing, artistic manner. VisualFlow software plays a selected movie or sound file and enables playback of files by other applications like PictureGear™, PictureToy™, and Memory Stick Slideshow.

Using VisualFlow software

You can navigate in the VisualFlow application by using your mouse, the directional arrows on your keyboard, or the Sony Jog Dial™ control (on those models that offer the Sony Jog Dial™ control).

- 1 Click Start in the Windows taskbar, then select All Programs.
- 2 Select VisualFlow, then click VisualFlow.

VisualFlow main window

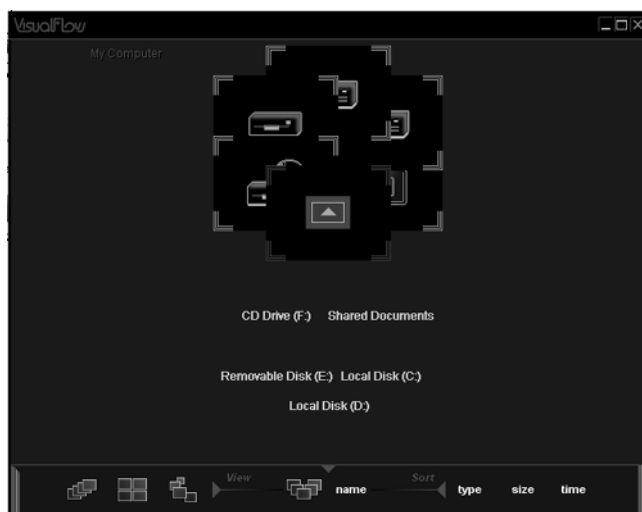

- 3 Click an icon in the View section on the main toolbar to select a display layout.

- 4 Click an icon in the Sort section on the main toolbar to select a sorting method.
- 5 Placing your cursor on the left end of the main toolbar activates the current Memory Stick properties.
- 6 Placing your cursor on the right end of the main toolbar activates a secondary toolbar with more functions.
- 7 Click an image to show a normal view centered on the screen.
Double-clicking an image shows an enlarged view.
- 8 The movie file starts playback when the view is enlarged. Click on the movie files again to restore the view to normal.



While an image is enlarged, the Launch toolbar appears at the bottom of the window. Any associated application can be activated from this point.

Additional Software Information

VAIO Edit Components

Sony Electronics Inc.

VAIO Edit Components is a software plug-in for Adobe® Premiere® that provides maximum compatibility and video quality for capturing video from your Sony digital camcorder. If your VAIO® computer did not have Adobe® Premiere® software preinstalled and you subsequently purchase and install Adobe® Premiere®, install this software to ensure maximum compatibility with Sony digital camcorders.

VAIO Edit Components Software

VAIO Edit Components is a software plug-in for Adobe® Premiere® that provides maximum compatibility and video quality for capturing video from your Sony digital camcorder. If your VAIO® computer did not have Adobe® Premiere® software preinstalled and you subsequently purchase and install Adobe® Premiere®, install this software to ensure maximum compatibility with Sony digital camcorders.

Installing VAIO Edit Components

- 1 Insert your Driver Recovery CD into your optical drive.
- 2 Click Start, click My Computer, and click your optical drive.
- 3 Click Support, and click VEC.
- 4 Double-click Setup.

The VAIO Edit Components installation wizard starts.

- 5 Follow the on-screen instructions in the installation wizard.
- 6 Restart your computer when prompted to do so.

Troubleshooting

This section describes how to solve common problems you may encounter when using your notebook. Many problems have simple solutions, so try these suggestions before you visit the Sony Computing Support Web site at <http://www.sony.com/pcsupport>.

- ☐ Troubleshooting Your Notebook
- ☐ Troubleshooting the LCD Screen
- ☐ Troubleshooting the Mouse and Touchpad
- ☐ Troubleshooting Drives, PC Cards and Peripheral Devices
- ☐ Troubleshooting Software
- ☐ Troubleshooting the Modem
- ☐ Troubleshooting Audio
- ☐ Troubleshooting the Printer

Troubleshooting Your Notebook


My notebook does not start.

- ❑ Check that the notebook is plugged into a power source and that it is turned on. Check that the power indicator on the front panel of the notebook indicates that the power is on.
- ❑ Check that the battery packs are inserted properly and that they are charged.
- ❑ If you have connected an external, optional floppy disk drive, make sure there is no floppy disk in the floppy disk drive.
- ❑ Confirm that the power cord and all cables are connected firmly, as described in the “Connecting a Power Source” section of your Quick Start.
- ❑ If you plugged the notebook into a power strip or Uninterruptible Power Supply (UPS), make sure the power strip or UPS is turned on and working.
- ❑ If you are using an external display, check that it is plugged into a power source and turned on. Check that the brightness and contrast controls are adjusted correctly. See the manual that came with the display for details.
- ❑ Condensation may cause the notebook to malfunction. If this occurs, do not use it for at least one hour.
- ❑ Take the battery pack out of the notebook, unplug the power cord, plug it in again, and then turn on the power.

My notebook starts but a BIOS error appears.

- ❑ When the internal backup battery is low on power, it may not start your system properly. The message, “Press <F1> to resume, <F2> to setup” appears at the bottom of the screen. Follow these steps:
 - 1 Press the F2 key. The BIOS Setup menu appears.
 - 2 Set the date (month/day/year). Press the Enter key.
 - 3 Press ↓ to select System Time, then set the time (hour: minute: second). Press the Enter key.
 - 4 Press → to select Exit, then press ↓ to select Get Default Values. The message “Load default values for all SETUP items” appears.
 - 5 Press the Enter key. The Setup Confirmation window appears.
 - 6 Select Yes, and press the Enter key.

- 7 Select Exit (Save Changes), then press the Enter key. The Setup Confirmation window appears.
- 8 Select Yes, then press the Enter key. The notebook restarts.

 If this occurs on a regular basis, visit the Sony Computing Support Web site at <http://www.sony.com/pcsupport>.

My notebook starts, but the message “Operating system not found” appears and Windows does not start.

- ❑ If you have connected an external, optional floppy disk drive, make sure there is no floppy disk in the floppy disk drive (non-bootable).
- ❑ If a non-bootable floppy disk is in a connected floppy disk drive, follow these steps:
 - 1 Turn off the notebook, and then remove the floppy disk.
 - 2 Restart the notebook and confirm that Windows starts properly.
- ❑ If Windows still does not start, follow the steps below to start the BIOS:
 - 1 Turn off the notebook.
 - 2 Remove any peripheral devices connected to the notebook.
 - 3 Turn the notebook on again.
 - 4 Press the F2 key when the Sony logo appears. The BIOS setup menu screen appears.
 - 5 Set the date (month/day/year). Press the Enter key.
 - 6 Press ↓ to select System Time, then set the time (hour: minute: second). Press the Enter key.
 - 7 Press → to select Exit, then press ↓ to select Get Default Values. The message “Load default values for all SETUP items” appears.
 - 8 Press the Enter key. The Setup Confirmation window appears.
 - 9 Select Yes, and press the Enter key.
 - 10 Select Exit (Save Changes), then press the Enter key. The Setup Confirmation window appears.
 - 11 Select Yes, then press the Enter key. The notebook restarts.

If your notebook continues to display the message “Operating system not found,” and Windows does not start, use your supplied System Recovery CD to restore the software titles shipped with your notebook. See “To use the System Recovery CD(s)” for more information.



The System Recovery CD restores your notebook to its original state, therefore user data and applications will be lost.

My notebook stops responding or does not shut down.

It is best to shut down your notebook using the Shut Down command on the Windows Start menu. Using other methods, including those listed here, may result in loss of unsaved data.

- ❑ Try restarting the notebook. On the Windows taskbar, click Start and select Shut Down. Use the drop-down arrow to select Restart, and click OK.
- ❑ If the notebook does not restart, press the Ctrl+Alt+Delete keys simultaneously, and then click Shut Down on the Windows Security screen.
- ❑ If the previous step does not work, press and hold the power button for at least four seconds. This turns off the power.
- ❑ If your notebook stops responding while playing a CD or DVD, stop the CD/DVD, restart the notebook by pressing the Ctrl+Alt+Delete keys simultaneously, and then clicking Shut Down on the Windows Security screen.
- ❑ Unplug the notebook from the AC adapter and remove the battery pack from your notebook.



Pressing the Ctrl+Alt+Delete keys simultaneously or turning off the notebook with the power switch may result in data loss in files that are currently open.

The power management setting is not responding.

Your notebook's operating system may become unstable if it is interrupted or if you attempt to make changes before the notebook completely enters a lower power state, such as Hibernate.

- ❑ To restore the notebook to its normal operating stability:
 - 1 Close all open applications.
 - 2 Restart the notebook by clicking Start on the Windows® taskbar and selecting Shut Down. Use the drop-down arrow to select Restart, and click OK.



If this procedure does not work, press and hold the power button for four seconds or longer to shut down the notebook.

The sound of my notebook's fan is too loud.

Use the PowerPanel utility to change the Thermal Control Strategy setting to Quiet. This setting slows down the CPU speed. See PowerPanel Help for more information.

Why does the System Properties dialog box display a slower CPU speed than advertised?

- ❑ Your computer uses speed-controlling technology. The System Properties dialog box may display the CPU's current speed rather than the maximum speed.

Troubleshooting the LCD Screen

My LCD screen is blank.

- ☐ Check that the notebook is plugged into a power source and that it is turned on.
- ☐ Check that the power indicator on the notebook is on.
- ☐ Check that the battery pack is inserted properly and that it is charged.
- ☐ The notebook may be in LCD (Video) Standby mode. Press any key to activate the screen.
- ☐ The display mode may be set to external display mode. Press and hold the Fn key while pressing the F7 key several times.

My LCD screen continues to show the previous screen.

Press the Windows key and the D key twice to refresh the screen.

The image on my connected external display is not centered or sized properly.

Use the controls on your external display to adjust the image. See the manual that came with your display for more information.

I want to change the video resolution of my display.

Follow this procedure to change the video resolution of your display.

- ☐ Click Start, select Settings, Control Panel, and then click the Display icon. The Display Properties dialog box appears.
- ☐ Click the Settings tab.
- ☐ Move the Screen Area slider to change your video resolution.

I cannot switch the LCD display to TV, and vice versa.

- ☐ Make sure that the TV is connected, configured and powered on correctly before starting the notebook. See “Selecting the Display Mode” in the online User Guide for more information.

Troubleshooting the Mouse and Touchpad

My mouse does not work.

- ❑ If you are using an external mouse, check that the mouse is plugged into the mouse connector. See “Connecting a PS/2 External Mouse or Keyboard” for more information.
- ❑ If you are using an optional Sony USB mouse PCGA-UMS1 series, check that the mouse is plugged into the USB port.
- ❑ If you are still experiencing problems, use your supplied Driver Recovery CD to reinstall the mouse drivers. See “To use the Driver Recovery CD(s)” for more information.

My touchpad does not work properly.

- ❑ You may have disabled the touchpad without connecting a mouse to the notebook. To enable the touchpad:
 - 1 Press the Windows key and use the arrow keys to select Programs. Press the Enter key.
 - 2 Use the arrow keys to select Sony Notebook Setup, and press the Enter key.
 - 3 Select Sony Notebook Setup, and press the Enter key.
 - 4 Select the Touchpad tab, and then Enable Touchpad.
 - 5 Press the Enter key.
- ❑ You must restart the notebook to make the touchpad work again.
- ❑ If your touchpad is interpreting a single tap as a double-click, you must adjust the button assignments. Follow these steps:
 - 1 Press the Windows key and use the arrow keys to select Control Panel, and then Mouse.
 - 2 Change the button assignments in the Mouse Properties dialog box. (One of the buttons is assigned to the double-click action.)
- ❑ If you are still experiencing problems, check that another mouse was not installed.
- ❑ You may need to use your Driver Recovery CD to reinstall the mouse drivers. See “To use the Driver Recovery CD(s)” for more information.

The pointer does not move while using the Touchpad or Mouse.

- ❑ You should restart your Notebook. Follow these steps:
 - 1 Press the Windows key.
 - 2 Press the “U” key to open the Shut Down Windows screen.
 - 3 Press the “R” key to restart your computer, and click OK.
- ❑ If your Notebook does not restart, press the Ctrl+Alt+Delete keys simultaneously, and then select Shut Down. The Shut Down Windows screen appears. Press the “R” key to restart your Notebook, and click OK.
- ❑ If your Notebook still does not start, press and hold the power button for more than four seconds to turn off the notebook.
- ❑ If the pointer does not move while playing a disc, press the Ctrl+Alt+Delete keys simultaneously to stop playback and restart the notebook.
- ❑ If you are still experiencing problems, check that another mouse was not installed.
- ❑ You may need to use your supplied Driver Recovery CD to reinstall the touchpad or mouse drivers. See “To use the Driver Recovery CD(s)” for more information.

Troubleshooting Drives, PC Cards and Peripheral Devices

I cannot establish a connection between two VAIO® computers when using an i.LINK cable*

- 1 Disconnect the i.LINK cable from both computers, and then reconnect it.
- 2 Wait for the computers to respond. If neither computer responds after a few moments, restart both computers.



The computers may not recognize an i.LINK connection after returning from a power saving mode (Standby or Hibernate). If this happens, restart the computers to establish a connection.

My floppy disk drive (optional) cannot write to a floppy disk.

- ❑ Check that the optional, external floppy disk drive is properly connected to your notebook. See “Connecting an External Floppy Disk Drive” for more information.
- ❑ If the floppy disk is write-protected, disable the write-protect feature or use a floppy disk that is not write-protected.

My optical disc drive is not playing my CD or DVD properly.

- ❑ Check that the label of the disc is facing up.
- ❑ If the disc requires software, check that the software is installed according to the manufacturer’s instructions.
- ❑ A dirty or damaged disc may cause the notebook to stop responding while it tries to read the disc. If necessary, restart the notebook, remove the disc, and then check it for dirt or damage.
- ❑ If you see video but cannot hear audio, check all of the following:
 - ❑ Check that your optical drive does not have the mute setting enabled.

* i.LINK is a Sony trademark used to designate that a product contains an IEEE 1394 connection. The i.LINK connection may vary, depending on the software applications, operating system, and compatible i.LINK devices. All products with an i.LINK connector may not communicate with each other. Refer to the documentation that came with your compatible i.LINK device for information on operating conditions and proper connection. Before connecting compatible i.LINK PC peripherals to your system, such as a CD-RW or hard disk drive, confirm their operating system compatibility and required operating conditions.

- ☐ Check the volume setting in the audio mixer.
- ☐ If you are using external speakers, check the volume settings, and then check the connections between your external speakers and the notebook.
 - 1 Click Start, Settings, Control Panel, System, and then select the Hardware tab.
 - 2 Click Device Manager, and make sure the correct drivers are properly installed.
- ☐ Do not use adhesive labels to identify the CD. The label may come off while the disc is in use in the optical drive and cause the drive to malfunction.
- ☐ If a region code warning appears when you try to use your optical drive, it may be that the DVD you are trying to play is incompatible with the optical drive. Check the region code listing on the DVD packaging.
- ☐ Condensation may cause the notebook to malfunction. If this occurs, do not use it for at least one hour.

My optical drive tray does not open.

- ☐ Check that the notebook is turned on.
- ☐ Press the Eject button on the optical drive.
- ☐ If the Eject button does not work, open the tray by inserting a thin, pointed object (such as a paper clip) in the hole to the right of the Eject button.

I cannot use Digital Video (DV) devices. The message "DV equipment seems to be disconnected or turned off" appears.

- ☐ Check that the DV device is turned on and that the cables are properly connected.
- ☐ If you are using multiple i.LINK® devices, the combination or order of the devices may be causing the problem. In this case, turn off your notebook and all connected devices. Disconnect the devices that are not in use. Check the connections for each device, and then restart your notebook.

My PC Card is not working.

- ☐ Check that the PC Card is installed properly.
- ☐ Check that the PC Card is compatible with Microsoft® Windows®.

- ❑ Use the Sony Notebook Setup utility to disable devices you are not currently using.
- ❑ If you are using two PC Cards, use the Sony Notebook Setup utility to disable the devices you are not currently using.
- ❑ Check that any necessary drivers were installed properly. See “Using Your Recovery CDs” for more information on installing the drivers.

I cannot establish a connection between two VAIO computers when using an i.LINK cable.

- 1 Disconnect the i.LINK® cable from both computers and reconnect it.
- 2 Wait for the computers to respond. If neither computer responds after a few moments, restart both computers.



The computers may not recognize an i.LINK connection after returning from a power saving mode (Standby or Hibernate). If that happens, restart the computers to establish a connection.

Troubleshooting Software

My software program stops responding or crashes.

Contact the software publisher or designated provider for technical support. Refer to “Application, Driver, and System Recovery CDs” for more information.

When I click an application icon, the message “You must insert the application CD into your optical drive” appears and the software does not start.

- ☐ Some titles require specific files that are located on the application CD. Insert the disc and try starting the program again.
- ☐ Make sure you place the CD in the tray with the label side facing up.

What software do I use for CD-R/CD-RW software functions?

- ☐ Sony recommends using the preinstalled Drag’n Drop CD software to create any CDs on your VAIO® computer.

I cannot use the DVgate™ software.

- ☐ If your notebook is using the Ultimate Battery Life profile for its power saving mode, you cannot use DVgate or Smart Connect software. Please select another profile. Preferably, connect your notebook to AC power when using these features.

Troubleshooting the Modem

My modem does not work.

- ❑ Check that the phone line is plugged into the line jack. See “Connecting a Phone Line” in the online user guide for more information.
- ❑ Check that the phone line is working. You can check the line by plugging in an ordinary phone and listening for a dial tone.
- ❑ Check that the phone number the program is dialing is correct.
- ❑ Check that the software you are using is compatible with the notebook’s modem. (All preinstalled Sony programs are compatible.)
- ❑ If you are still experiencing problems, use your supplied Driver Recovery CD to reinstall the modem drivers. See “To use the Driver Recovery CD(s)” for more information.

My modem connection is slow.

Your notebook is equipped with a V.90/K56flex-compatible modem. Many factors may influence modem connection speed, including telephone line noise or compatibility with telephone equipment (such as fax machines or other modems). If you think your modem is not connecting properly to other PC-based modems, fax machines, or your Internet Service Provider (ISP), check the following:

- ❑ Ask your phone company to check that your phone line is free from any line noise.
- ❑ If your problem is fax-related, check that there are no problems with the fax machine you are calling and that it is compatible with fax modems.
- ❑ If you are having a problem connecting with your Internet Service Provider, check that the ISP is not experiencing technical problems.
- ❑ If you have a second phone line available, try connecting the modem to that line.

Troubleshooting Audio

My speakers make no sound.

- ❑ If the built-in speakers are turned off, press the key combination Fn+F3 to turn on the speakers. You can also turn on the speakers using the center Jog Dial™ control.
- ❑ If the speaker volume is turned to the minimum, press the key combination Fn+F4, and then press **↑** or **→** to increase the volume or you can use the center Jog Dial control to adjust the volume.
- ❑ If nothing is displayed when you press the key combination Fn+F3 or Fn+F4:
 - 1 Click Start on the Windows® taskbar.
 - 2 Select Settings, Control Panel, and then System. The System Properties window opens.
 - 3 Select the Hardware tab, and click Device Manager. The Device Manager window opens.
 - 4 Double-click Sound, video and game controllers. The SoundMAX Integrated Digital Audio Properties window opens.
 - 5 Make sure the General tab is open, and select Use this device (enable) in the Device usage box.
- ❑ If your notebook is powered by batteries, check that the battery packs are inserted properly and that they are charged.
- ❑ If you are using an application that has its own volume control, check that the volume is turned up.
- ❑ Check the volume controls in the Windows® taskbar.
- ❑ If you connect external speakers, check that the speakers are properly connected and the volume is turned up. If the speakers have a mute button, make sure it is off. If the speakers are powered by batteries, check that the batteries are inserted properly and that they are charged.
- ❑ If you have connected an audio cable to the Headphone jack, disconnect the cable.
- ❑ If you are still experiencing problems, use the supplied Driver Recovery CD to reinstall the drivers. See “To use the Driver Recovery CD(s)” for more information.

My microphone does not work.

If you are using an external microphone, make sure the microphone is turned on, and check that the microphone is plugged into the Microphone jack. See “Connecting an External Microphone” for more information.

Troubleshooting the Printer

I cannot print.

- ❑ The default setting for the printer port mode is correct for most printers. If you cannot print, try changing the printer port mode. From the Control Panel, select Sony Notebook Setup, and then the Printer tab. If the printer port mode is set to ECP, change it to bi-directional. If the printer port mode is set to bi-directional, change it to ECP. See “Displaying the Sony Notebook Setup Screen” for details on using Sony Notebook Setup.
- ❑ Your connected printer may not function after the notebook resumes from a power saving mode. If this occurs, follow these steps to reset the printer connection:
 - 1 Click Start, point to Settings, and then select Printer.
 - 2 Right-click the icon of the printer that is not functioning, and then select Properties to open the Properties window.
 - 3 Click OK to close the Properties window. The printer should now function properly.

Getting Help

Sony provides you with several support resources to answer questions about your VAIO® notebook or the preinstalled software. Refer to these resources in the order they are listed.

- ☐ Support Options
- ☐ Software Support Information

Support Options

If you have questions about your notebook or the preinstalled software, refer to the following sources for answers in the sequence listed below.

-
- 1 VAIO® Notebook User Guide**
The online VAIO® Notebook User Guide and this printed VAIO® Notebook Quick Start provide you with information on how to maximize your notebook capabilities and solve common problems. The Quick Start is supplied with your notebook.

 - 2 Software Manuals and Online Help Files**
The software preinstalled on your notebook may come with an online manual. These manuals are stored on the hard disk drive as online Help files. You can find the Help files from the Help menu under the specific software application. Some software applications may come with a printed manual.

 - 3 Operating System Online Support**
Your notebook comes preinstalled with Microsoft® Windows®. For operating system support, contact Sony Customer Support by calling: 1-888-4-SONY-PC (1-888-476-6972).
-

4 VAIO® Support Agent

(Windows® 2000) You can find VAIO Support Agent from the Windows desktop. (Windows XP) You can find VAIO Support Agent by clicking the Start button and then Help and Support. Using advanced diagnostic technology, Sony's VAIO Support Agent runs scheduled protections of your applications, network settings, and other important software settings. When your software is protected, you can use VAIO Support Agent to repair software problems by restoring your software to any of the previously protected states.

5 Sony Computing Support

This service provides instant access to information on commonly encountered problems. Enter a description of your problem and the Knowledge Database searches for the corresponding solutions online. You can access Sony Computing Support at:
<http://www.sony.com/pcsupport>.

6 Sony Fax-on-Demand

This service, which requires a fax machine or your fax software, provides answers to commonly asked questions. You can use this automated service to request a list of available topics, then select the topics that you want to receive. To contact the Sony fax-on-demand service, call: 1-888-4-SONY-PC (1-888-476-6972).

7 Sony Customer Support

Software support is available free of charge for 90 days after the original date of purchase. You can call and speak with a Sony Customer Support Representative without using your notebook by calling: 1-888-4-SONY-PC (1-888-476-6972).

Software Support Information

Adobe® Acrobat® Reader®, Photoshop® Elements (Adobe Systems Inc.)

Web site	http://www.adobe.com/
phone	206-675-6126 (fee-based support)
fax	206-628-5737
e-mail	techdocs@adobe.com
hours	M-F, 6 AM - 5 PM (PST)

America Online® (America Online, Inc.)

Web site	http://www.aol.com/
phone	800-827-6364
hours	7 days a week, 24 hours a day

PC-Cillin® 2000 (Trend Micro, Inc.)

Web site	http://www.antivirus.com/pc-cillin/
phone	949-387-7800
e-mail	support@trendmicro.com
hours	7 days a week, 6 AM - 6 PM (PT)

QuickTime® (Apple Computer Inc.)

Web site	http://www.apple.com/
phone	512-674-8700
hours	7 days a week, 6 AM - 6 PM (PST)

RealJukebox®, RealPlayer® (RealNetworks Inc.)

Web site	http://service.real.com/rjoptions.html
e-mail	http://service.real.com/help/call.html (online form)

Sony Applications (Sony Electronics Inc.)

Web site	http://www.sony.com/pcsupport/
phone	888-4-SONY-PC (888-476-6972)*
hours	7 days a week, 24 hours a day

* Support from 1-888-4-SONY-PC is free of charge for 90 days after the original date of purchase.

Windows® Operating System, Office, Outlook® Express, Word, (Microsoft Corporation)

Web site	http://www.sony.com/pcsupport/
phone	888-4-SONY-PC (888-476-6972) *
hours	7 days a week, 24 hours a day

* Support from 1-888-4-SONY-PC is free of charge for 90 days after the original date of purchase.

WinDVD® (InterVideo Inc.)

Web site	http://www.intervideo.com
phone	510-651-0888
e-mail	support@intervideo.com

Sony Service Center

For the Sony Service Center nearest you, call 1-888-4-SONY-PC (1-888-476-6972) or find Sony Customer Service on the Web at <http://www.sony.com/pcsupport>.

Index

A

- About This Computer tab 81
- AC Profile power setting 84
- Access Point, Wireless LAN 77
- adding
 - hardware 51
 - memory 95
 - peripherals 51
 - printers 65–??, 66
- Alt key 13
- Application Recovery CD 110
- Applications key 13
- attaching port replicator 55
- audio
 - connecting 60
 - connecting external speakers 75
 - external microphone 76
 - troubleshooting 200
- Audio file formats 163
- audio file formats 158
- audio source icons 167
- audio-video (AV)
 - connecting 62

B

- Basic/Advanced tab 81
- Battery Information toolbar 88
- battery pack
 - Battery Information toolbar 88
 - power management settings 82
 - power saving modes 45
 - using a second 35
- battery packs

- charge status icons 88
- charging 36
- indicator lights 15, 35
- removing 35, 37

- brightness
 - adjusting 17
- Browser security 153
- built-in speakers
 - See also speakers 17
- buttons
 - Eject 27

C

- cameras
 - digital video recorder 73
- canceling commands 13
- Caps Lock
 - indicator light 16
- CD/DVD discs
 - ejecting 28
 - inserting 27
- CD-RW/DVD Combo Drive or DVD-ROM drive 27
- charging battery packs 36
- Check-In/Check-out 156
- coin-operated telephones 47
- Compact Disc Database (CDDb) 164
- computer
 - connecting to another 48
 - customizing 79
 - expanding capabilities of 77
 - setup screen 80
 - troubleshooting 188

computer support 203

connecting

another computer 48

audio device 60

coin-operated telephones 47

digital video recorder 73

external speakers 75

floppy disk drive 52

hard drives 33

i.LINK device 72

Local Area Network (LAN) 49

microphone 76

monitor 67

multimedia computer display 69

multiple phone lines 47

network 33

party phone lines 47

PBX 47

phone line 47

port replicator 55

printer 65–??, 66

projector 69

PS/2 keyboard 59

PS/2 mouse 59

TV/VCR 62

USB device 71

Contents Panel 168

correction keys 13

CPU clock speed

optimizing 86

CPU clock speed setting

Auto performance mode 87

Battery optimized mode 87

Maximum performance mode 87

Ctrl key 13

customizing your computer 79

D

digital video camera 73

DigitalPrint software 119

LabelMaker 127

PhotoAlbum 125

PhotoCapture 119

PhotoCollection 122

PhotoDecor 124

disconnecting port replicator 57

display

mode 91

options 69

selecting 69

Driver Recovery CD 111

drives

floppy disk 52

installing additional hard disk 33

optical 27

DV In/Out 73

DVgate software 129

AVI files 130

using a digital video device 129

E

Edit Panel 168

Eject button 27, 28, 53

ejecting

battery packs 37

CD/DVD discs 28

floppy disks 53

weight saver 39

Electronic Music Distribution 163

Electronic Music Distribution service
153

EMD service 153

encryption 153

Equalizer 175

Escape key 13

expanding your notebook capabilities
77

expansion memory configuration 97

external devices

display 69

display, see also monitor 67
speakers 17, 75

external display
connecting 67

F

floppy disk drive
connecting 52
disconnecting 54
troubleshooting 195

floppy disks
ejecting 53
handling 54

FM radio station scanning 165

FM tuner 177

FM radio stations 177
recording from FM radio stations
178

Fn key 13
combination commands 17

Full mode 159

function keys 13

G

getting help 203

Guide Mode 24

H

handling
floppy disks 54

hard disk drive
removable 26

hard drives
indicator light 15
installing additional 33

hardware
online support 203

help 203

Hibernate mode 17, 45

I

i.LINK 73

connecting 72
VAIO Action Setup 21

IEEE-1394 73

ImageStation 136

indicator lights 15
battery 15, 35
Caps Lock 16
hard disk 15
Num Lock 16
Scroll Lock 16

indicators 15–16

Initial Setting tab 81

installing
hard drives 33
hardware 51
memory module 100
peripherals 51

J

Jog Dial 183

using 22

VAIO Action Setup 21

K

keyboard
key combinations 14, 17
PS/2 59
using 12

L

LAN

see Local Area Network

Launcher Mode 23

LCD

selecting to display output 69
troubleshooting 192

Local Area Network
connecting 49

M

MagicGate 40

Maximum Battery Life power setting

- 84
- Maximum Performance power setting
 - 84
- memory
 - adding 95
- memory module
 - expansion 97
 - installing 100
 - removing 98
- Memory Stick 183
 - using 40
 - VAIO Action Setup 21
- Memory Stick media 40
 - displaying contents 41
 - inserting 40
- microphone
 - connecting 76
 - troubleshooting 200, 201
- modem
 - troubleshooting 199
- monitor
 - connecting 67
 - selecting 69
 - switching among 17
- mouse
 - PS/2 59
 - troubleshooting 193
- Mouse Properties screen 20
- Mouseware
 - accessing help 20
 - features 20
- MovieShaker software 131
 - adding effects 133
 - creating movies 132
 - saving a movie 135
 - uploading to Internet 137
 - using ImageStation 136
 - using the Shaker feature 132
- multimedia
 - audio device 60
 - multimedia computer display 69
 - multiple phone lines 47
- N**
 - navigation keys 12
 - network
 - connecting 33
 - Notebook Computer 203
 - Notebook Setup tabs 81
 - Num Lock
 - indicator light 16
- O**
 - operator keys 13
 - optical disc drive
 - closing tray 28
 - opening tray 27
 - optical discs
 - ejecting 28
 - optical drive
 - using 27
 - optical drive tray
 - troubleshooting 196
 - output devices
 - adding 66
- P**
 - party phone lines 47
 - PBX 47
 - PC Card 33
 - inserting 33
 - troubleshooting 195, 196
 - using 33
 - Wireless LAN Access Point 77
 - PDA 77
 - peripheral device
 - TV/VCR 62
 - peripheral devices
 - troubleshooting 195
 - Personal Digital Assistant 77

- phone
 - connecting line 47
- PictureGear software 139
 - creating a photo album 140
 - managing pictures 139
- Playback Panel 168
- port replicator
 - connecting 55
 - lever 57
 - removing Notebook 57
- ports
 - printer 65–??, 66
 - Serial port 55
- power 15
- power management 82
 - activate 82
 - disable 84
 - settings 83
- Power On
 - Password tab 81
- power saving modes 45
 - Hibernate 17, 45
 - Normal mode 45
 - Standby 45
- power setting
 - AC Profile 84
 - Maximum Battery Life 84
 - Maximum Performance 84
 - Power Management Off 84
 - Standby 86
- PowerPanel
 - activating 82
 - changing clock speed 86
 - customizing toolbar 86
 - settings 84
- Print Screen key 13
- printer
 - connecting 65–??, 66
 - port 65–??, 66
 - troubleshooting 202
- Printer tab 81
- projector 69
- PS/2 mouse or keyboard 59
- Q**
- Quick Timer
 - Recording 178
- R**
- Recovery CD 110
- removable hard disk drive 26
- removing
 - floppy disk drive 54
 - floppy disks 53
 - memory module 98
- replacing
 - battery packs 35
- restoring data 110
- Reverb 176
- S**
- Scroll Lock
 - indicator light 16
- second battery pack 35
 - using 35
- Secure Sockets Layer 153
- selecting
 - display 69
 - LCD 69
 - monitor 69
- Serial port 55
- setup screen
 - About This Computer tab 81
 - Basic/Advanced tab 81
 - displaying 80
 - Enable Ports tab 81
 - Initial Setting tab 81
 - Power On Password tab 81
 - Printer tab 81
 - Touchpad tab 81

- setup tabs 81
- Shift key 13
- Simple mode 159, 181
- Skins 159
- Sleep Timer 180
- Smart Connect 48
- software 103
 - changing window design 93
 - Smart Connect 48
 - support information 205
 - troubleshooting 198
- Software list 103
- SonicStage Premium
 - audio file formats 163
 - Audio source icons 167
 - Backup Tool utility 181
 - basic operations 168
 - compatibility 162
 - Devices 163
 - Equalizer 175
 - features 162
 - FM radio station scanning 165
 - Media 162
 - Overview 161
 - Playback and Recording 169
 - Setting up a timer event 179
 - Simple mode 181
 - Sleep Timer 180
 - Software 161
 - Sound Effects 175
 - Timer Functions 179
 - Visualizer 175
- SonicStage software 153
 - Backup Tool 158
 - Electronic Music Distribution service 153
 - importing audio files 158
 - Main Features 154
 - managing imported songs 159
 - recording from a CD 155
 - Secure Sockets Layer (SSL) 153
 - Simple mode 159
 - transferring songs 156
 - Tutorial 158
- Sony Computing Support 204
- Sony Fax-on-Demand service 204
- Sony Notebook Setup screen 80
- Sony Service Center 206
- Sound effect settings 176
- Sound Effects 175
- speakers
 - external 75
 - switching 17
 - troubleshooting 200
 - volume 17
- Standby mode 45, 86
- support
 - software 205
- support, technical 203
- switching
 - display 17
 - monitor 17
- T**
- technical support 203
- touchpad 19
 - troubleshooting 193
- Touchpad tab 81
- troubleshooting 187, 188
 - audio 200
 - drives, PC Cards, and peripheral devices 195
 - LCD 192
 - modem 199
 - mouse and touchpad 193
 - printer 202
 - software 198
- TV or a video deck 62, 63
- TV or video deck 62

TV/VCR 62

U

USB

- connecting 71

- mouse 71

- port 71

using 19

- Jog Dial 22

- keyboard 12

- Memory Stick 40

- optical drive 27

- removable hard disk drive 26

- second battery pack 35

- touchpad 19

- weight saver 38

using PC Card 33

Using the Jog Dial Control 25

V

VAIO Action Setup 21

VAIO Edit Components software 185

video camera 73

viewing the amount of memory 101

VisualFlow software 183

- navigating 183

Visualizer 175

Vocal Cancellor 176

volume control 17

W

weight saver

- attaching 38

- removing 39

- using 38

Windows

- Explorer 14

- Find window 14

- help 14

- key 13

- key combinations 14

taskbar 190, 191

Wireless LAN Access Point 77

