

1

Unpacking and Setting Up Your Computer

- Unpack your VAIO PCV-J100 computer. To check the complete contents of the box, see the QuickStart.
- Install your equipment so that you can easily reach the outlet in the event of an emergency.

* Display sold separately.

2


Connecting a Display

- Plug the display cable into the MONITOR connector and, if necessary, plug the display cord into the rear of the display.

3

Connecting the Speakers

- Plug the cable attached to the right speaker into the R OUT connector on the back of the left speaker.
- Plug one end of the speaker cable into the INPUT connector on the back of the left speaker. Plug the other end into the HEADPHONES connector.
- Plug the power cord into the DC IN connector on the back of the left speaker and plug the other end into a grounded AC wall outlet or power strip.

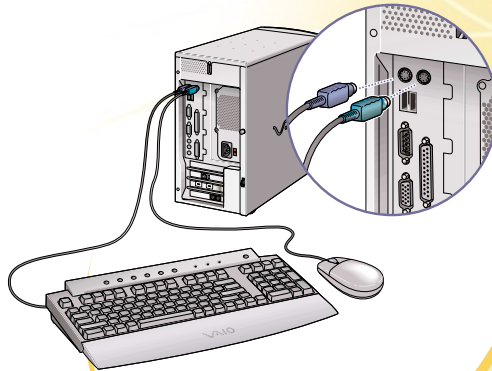

4

Connecting the keyboard and mouse

- Plug the keyboard cable into the PS/2[®] KEYBOARD connector on the back of the computer.
- Plug the mouse cable into the MOUSE connector.

5

Connecting the phone line and power cords

- Unplug your phone from the wall jack, and plug it into the TELEPHONE jack on the computer.
- Plug the phone cable that came with your computer into the LINE jack on the computer, and then plug the other end of the cable into the wall jack.
- Plug the power cord into the back of the computer.
- Plug both the display and power cords into a grounded AC wall outlet or a power strip.

6

Turning on your VAIO PCV-J100 Computer

- Press the power switch on the display to turn on the power.
- Press the power switch on the computer to turn on the power.
- You may sign up for Internet access with a Sony preferred Internet service provider.

Setting up your VAIO PCV-J100 Computer

For more information, see your VAIO PCV-J100 Computer User Guide.