

SONY®

RM-AV3000

Component code numbers Codes d'appareils Números de código de componentes

TV and VCR Téléviseurs et magnétoscopes Televisores y videograbadoras			
Brand Marque Marca	Component Appareil Componente	Code No. Code Núm. de código	Brand Marque Marca
Sony	VCR	1001 (VTR-Beta) 1002 (VTR-8 mm) 1003 (VTR-3: VHS) 1004, 1005, 1006 (VTR-4, 5, 6: DV)	Emerson
	TV		Fisher
	TV		Furui
	TV		General Electric
	VCR		Goldstar/LG
	TV		CO VIDEO
	VCR		Gradiente
	TV		Hinachi
	VCR		HQ
	TV		Instant Replay
Brosonic	TV	8003, 8012	JC Penny
Canon	VCR	1012, 1011	JVC
CCE	VCR	1018, 1044, 1035, 1064 8063, 8072, 8011, 8041, 8073	
Chineral	VCR	1044, 1064	
	TV	8035, 8034	Kenwood
Citizen	VCR	1035	KTV
Craig	VCR	1018, 1035	LXI (Seans)
	TV	8022, 8023, 8020, 8021 8011	
Croslex	TV	8023	Magnum
Crown	VCR	1007, 1041, 1012	
Curtis Mathis	TV	8003, 8019, 8023	
Daewoo	VCR	1044, 1015, 1012, 1064	Marantz
	TV	8035, 8036, 8003, 8041, 8073	
Daytron	TV	8013	Marta
DBX	VCR	1017, 1039, 1040	Memorex
Dimensia	VCR	1007	Minolta

Brand Marque Marca	Component Appareil Componente	Code No. Code Núm. de código	Brand Marque Marca	Component Appareil Componente	Code No. Code Núm. de código
Mitsubishi/MCA	VCR	1026, 1027, 1028, 1029, 1056, 1057, 1065, 1059	Shinon	VCR	1018
	TV	8024, 8003, 8012, 8066	Signature 2000	VCR	1041, 1020
Multitech	VCR	1028, 1041, 1024		TV	8014, 8009
NEC	VCR	1017, 1039, 1040	Sylvania	VCR	1013, 1011, 1012, 1041, 1063
	TV	8003, 8012		TV	8011, 8012, 8003
Noblex	TV	8057, 8061, 8062	Symphonic	VCR	1041
Nokia	VCR	1044, 1064		TV	8023, 8039, 8040, 8074
Olympic	VCR	1012, 1011	Tashiro	VCR	1035
Optimus	VCR	1027	Tatung	VCR	1017, 1039, 1040
Orion	VCR	1055	Teac	VCR	1017, 1039, 1041, 1040
Panasonic	TV	1009, 1010, 1011, 1012, 1060 8018, 8016, 8017, 8007, 8049, 8067	Technics	VCR	1012, 1011
	TV		Toshiba	VCR	1015, 1014, 1052
Pentax	VCR	1008, 1007		TV	8019, 8014, 8059, 8060
Philco	VCR	1011, 1012, 1064, 1044, 1020	Videch	TV	8031, 8003, 8012
	TV	8011, 8013, 8003, 8068, 8035, 8031	Wards	VCR	1030, 1031, 1038, 1034, 1035
Philips	VCR	1055, 1013, 1011, 1012, 1063	Yamaha	VCR	1033, 1017, 1039, 1040
	TV	8011, 8056, 8043	Zenith	VCR	1034
Pioneer	VCR	1011		TV	8009, 8010
	TV	8037, 8018, 8019			
Portland	TV	8003, 8008			
Proton	TV	8071			
Quasar	VCR	1011, 1012, 1009, 1010, 1066 8018, 8007, 8048			
	TV				
Radio Shack	TV	8002, 8012, 8024, 8023			
RCA/PROSCAN	VCR	1007, 1008, 1011, 1042, 1013, 1014, 1015, 1016, 1063 8007, 8008, 8044, 8045, 8046, 8053			
	TV				
Realistic	VCR	1012, 1033, 1031, 1038, 1027, 1041			
Sanyo	VCR	1017			
Sanyo	VCR	1018			
Sanyo	VCR	1025, 1016, 1024			
Sanyo	VCR	8026, 8012, 8013, 8003, 8055 1033, 1038, 1064, 1046, 1044, 1035			
Scott	TV	8025, 8054, 8069, 8023			
	VCR	1015, 1016, 1024, 1038, 1026, 1027, 1028, 1029			
	TV	8023, 8012			
SEMP Toshiba	VCR	1025			
	TV	8019			
Serie Dorada	TV	8058			
Sharp	VCR	1030, 1031			
	TV	8014, 8013, 8015, 8070			

TV/VCR Combo Combi téléviseur/magnétoscope Combinación de TV/VCR

Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección	TV	VCR
Sony	8001	1003	
Daewoo	8036	1044	
Emerson	8021	1023	
	8021	1022	
General Electric	8027	1028	
	8027	1024	
	8027	1025	
Goldstar/LG	8003, 8013, 8012, 8030, 8046, 8050, 8051, 8049	1035	
Gradiente	8046	1035	
Magnum	8011, 8018, 8047	1012, 1013	
Panasonic	8018	1011	
	8018	1012	
Quasar	8018, 8048	1012, 1009, 1010	
RCA/PROSCAN	8018	1011	
Samsung	8023, 8027	1024, 1025, 1029	
Symphonic	8023	1041	

Analog Cable Box

Décodeur analogique de câblodistribution

Decodificador analógico

Brand/Marque/Marca	Code No./Code/Num. de código
Hamlin/Regal	9022, 9023, 9024, 9025, 9026
Jerrold/G.I.	9004, 9001, 9002, 9003, 9004, 9005, 9006, 9007, 9008, 9018, 9043
NET	9042
Oak	9027, 9028, 9029
Panasonic	9019, 9020, 9021
Pioneer	9014, 9015
Scientific Atlanta	9009, 9010, 9011
Tocom	9016, 9017, 9043
Zenith	9012, 9013

Digital Cable Box

Décodeur de télévision numérique

Decodificador digital

Brand/Marque/Marca	Code No./Code/Num. de código
Sony	3101
Jerrold/G.I.	3103
Motorola	3103
Panasonic	3203
Philips	3104
Scientific Atlanta	3102

Mini Hi-Fi component system

Appareils d'une minichaine Hi-Fi

Minisistemas de componentes de alta fidelidad

Brand Marque	Code No. for each section Code pour chaque section Num. de código para cada sección	Receiver/ amplifier/ Récepteurs	CD/lecteur CD / Reproductores de discos	Tape/ cassette/ Dicks de cassettes	MD/lecteur MD/Deck de minidisques	
Sony	4001	5001	6001	7001		
	4001	5001	6002			
	4002	5001	6001	7001		
	4002	5001	6002			
	4003	5002	6002			
	4003	5002	6003			
	4003	5002	6004			
	4003	5002	6005			
	Admiral	4095	5085	-	-	
	Alwa	4022	5021	-	-	
	4023	5022	6025	-		
	4023	5022	6026	-		
	4040	5037	6042	-		
	4079	5074	6072	7012		
Alai	4074	5068	6068			
B&O	4068	5063	6059	-		
(Regelklausen)	Crown	4062	5059	-	-	
	Daewoo	4005	5003	-	-	
	Denon	4010	5008	6009	-	
		4028	5099	6028	-	
		4028	5009	6029	-	
		4028	5009	6010	-	
		4024	5023	6027	-	
		4037	5009	6028	7003	
	Garrard	4058	5054	-	-	
	Harman/ Kardon	4035	5090	-	-	
Jensen	4061	5084	6033	-		
JVC	4019	5018	6022	7005		
	4019	5018	6023	-		
	4020	5019	6024	-		
	4070	5018	6060	-		
	4070	5018	6061	-		
	4019	5018	6060	7005		
	4019	5018	6061	-		
	4078	5073	6071	7008		

Brand	Code No. for each section	Code pour chaque section	Num. de código para cada sección	
Marque	Receiver/ amplifier/ Récepteurs	CD/lecteur CD / cassette/ Reproductores de discos	Tape/ cassette/ Dicks de cassettes	MD/lecteur MD/Deck de minidisques
Kenwood	4015	5014	6015	-
	4016	5015	6017	-
	4016	5015	6018	-
	4025	5004	6036	-
	4025	5004	-	-
	4071	5065	6064	7014
	4071	5065	6065	-
	4071	5065	6015	7014
	4071	5065	6016	-
	4082	5077	6074	7011
GoldStar/IG	4083	5078	6075	7014
	4009	5007	6008	-
Marantz	4017	5016	6019	-
	4029	5039	6019	-
McIntosh	4094	5016	6050	-
	4097	5090	-	-
Onkyo	4034	5035	6038	-
	4034	5035	6039	-
	4034	5030	6038	-
	4034	5030	6039	-
Panasonic	4084	5079	6076	7015
	4008	5006	-	-
Philips	4008	5005	6067	-
	4077	5072	6070	7010
	4099	5094	-	-
	4017	5016	6019	-
Pioneer	4006	5004	6006	-
	4090	5028	6034	-
RCA	4018	5017	6020	-
	4018	5017	6021	-
	4006	5017	6006	-
	4018	5017	6006	-
	4072	5066	6066	-
	4081	5076	6073	7016
SABA	4091	5080	6082	-
	4091	5080	6083	-
Samsung	4041	5042	-	-
Sansui	4042	5043	-	-
Sanyo	4087	5083	6077	-
Schneider	4011	5010	6011	-
	4069	5064	6062	-

Brand	Code No. for each section	Code pour chaque section	Num. de código para cada sección	
Marque	Receiver/ amplifier/ Récepteurs	CD/lecteur CD / cassette/ Reproductores de discos	Tape/ cassette/ Dicks de cassettes	MD/lecteur MD/Deck de minidisques
Sharp	4037	5009	6028	7003
	4016	5015	-	-
	4028	5009	6028	-
	4028	5009	6010	-
	4080	5075	-	7013
	4100	5095	-	-
Sherwood	4012	5011	6012	-
	4013	5012	6013	-
Sound-sign	4096	5087	-	-
T+A	4063	5060	6058	-
Teac	4055	5060	6064	-
	4055	5050	6065	-
	4088	-	6077	-
	4088	-	6078	-
Technics	4007	5005	6007	-
	4008	5005	6067	-
	4045	5025	6046	-
	4026	5032	6007	-
	4073	5067	6066	-
Toshiba	4101	5096	-	-
Yamaha	4014	5013	6014	-
	4030	5027	6014	-
	4030	5027	6030	-
	4030	5027	6063	-

Separate Components Appareils indépendants Componentes separados

Receiver/Amplifier Amplis-tuner/amplificaterus Receptores/amplificadores	
Brand/Marque/Marca	Code No./Code/Num. de código
Sony	4001, 4002
Admiral	4095
Alwa	4022, 4023, 4040, 4079
Alai	4074
B&O (Bang&Olufsen)	4068
Crown	4062
Daewoo	4005
Denon	4010, 4024, 4027, 4028, 4036, 4037
Finearts	4044
Goldstar/LG	4009
Hartman/Kardon	4035
JVC	4019, 4020, 4047, 4070, 4078, 4098
Kenwood	4015, 4016, 4025, 4071, 4082, 4083
Magnavox	4021
Marantz	4029, 4094, 4044
Mcintosh	4097
NAD	4103, 4033
Nakamichi	4104, 4087, 4086
Onkyo	4034, 4039, 4043, 4084
Panasonic	4008, 4077, 4099
Parasund	4066
Philips	4017
Pioneer	4006, 4018, 4032, 4072, 4081, 4085, 4090
RCA	4105, 4091, 4092, 4093
Rebox	4050
Rohel	4067
SABA	4041
Samsung	4042
Sansui	4086, 4087, 4089, 4038
Sanyo	4011
Sharp	4028, 4037, 4080, 4100
Sherwood	4012, 4013, 4031
Schneider	4004, 4069
Sounde-sign	4096
T+A	4083
Tec	4088
Technics	4007, 4026, 4045, 4073
Toshiba	4101
Yamaha	4102, 4014, 4030, 4046

CD Player Lecteurs CD Reproductores de discos compactos	
Brand/Marque/Marca	Code No./Code/Num. de código
Sony	5001, 5002, 5099
Admiral	5085
Alwa	5021, 5022, 5037, 5074
Alai	5068
B&O (Bang&Olufsen)	5063
Crown	5059
Daewoo	5003
Denon	5008, 5009, 5023, 5026
Emerson	5091
Fisher	5040
Goldstar/LG	5098, 5007
Hartman/Kardon	5031
Hitachi	5041
Jensen	5084
JVC	5018, 5019, 5033, 5073
Kenwood	5014, 5015, 5024, 5034, 5065, 5077, 5078
Magnavox	5016, 5026
Marantz	5071
Mcintosh	5090
NAD	5029
Nakamichi	5044, 5082
Onkyo	5030, 5035, 5038, 5079
Optimus	5092
Panasonic	5006, 5072, 5094
Philips	5016
Pioneer	5004, 5017, 5028, 5066, 5076
RCA	5080, 5081, 5088, 5089
SABA	5042
Samsung	5043
Sansui	5082, 5083, 5086
Sanyo	5010
Sharp	5075, 5095
Sherwood	5011, 5012, 5039
Schneider	5064
Sounde-sign	5087
T+A	5060
Tec	5005, 5025, 5032, 5067
Technics	5096, 5097
Toshiba	5013, 5027, 5036
Yamaha	

Cassette Deck Platines à cassette Decks de cassettes	
Brand/Marque/Marca	Code No./Code/Num. de código
Sony	6001, 6002, 6005
Alwa	6042, 6045, 6025
Denon	6028, 6029, 6009, 6010
Fisher	6011
Goldstar/LG	6008
Hartman/Kardon	6033
JVC	6022, 6023, 6024
Kenwood	6036, 6037, 6015, 6016
Marantz	6047
NAD	6031, 6032
Nakamichi	6079
Onkyo	6038, 6039, 6040, 6041, 6043, 6044
Panasonic	6067
Philips	6047
Pioneer	6034, 6035, 6020, 6021, 6006
RCA	6084, 6085
Sansui	6079, 6077, 6078
Sanyo	6011
Sharp	6028
Tec	6077, 6078, 6080, 6081
Technics	6046, 6007, 6067 ---
Yamaha	6030, 6014

DVD Lecteur DVD Reproducteur de videodiscs digitales	
Brand/Marque/Marca	Code No./Code/Num. de código
Sony	0001, 0024, 0023
Alwa	0015
Denon	0006, 0017
Hartman/Kardon	0018
Hitachi	0008
JVC	0007
KLH	0010
Onkyo	0016
Panasonic	0002, 0006
Philips	0012
Pioneer	0004, 0019, 0021
RCA	0005
Sharp	0011
Shinco	0022
Samsung	0014
Sylvania	0020
Thomson	0013
Toshiba	0003
Yamaha	0006
Zenith	0009

MD Deck/DAT Deck Platines MD/DAT Decks de minidisques/cinta audiodigital	
Brand/Marque/Marca	Code No./Code/Num. de código
Sony	7001, 7002, 7101 (DAT)
Aliva	7012
Akai	7018
Deion	7003
JVC	7008
Kenwood	7004, 7011, 7014
Marrantz	7007
Onkyo	7015, 7102 (DAT)
Panasonic	7006, 7010
Pioneer	7016, 7102 (DAT)
Sansui	7009
Sharp	7013
Tec	7005
Yamaha	7017

Digital Satellite Receiver Recepteur satellite Receptor de satélite digital	
DirectV (for the U.S.A./pour les États-Unis/para EE.UU.)	
Brand/Marque/Marca	Code No./Code/Num. de código
Sony	3001
Hitiachi	3005
Hughes	3004
Panasonic	3003
RC/A/Proscan	3002, 3007
Toshiba	3006
Star Choice (for Canada/pour le Canada/para Canadá)	
Brand/Marque/Marca	Code No./Code/Num. de código
General Instrument	3009*
Express Vu (for Canada/pour le Canada/para Canadá)	
Brand/Marque/Marca	Code No./Code/Num. de código
Echo Star	3010*

* as of 1998 / en 1998 / en 1998

LD (Laser Disc) LD (Disque laser) LD (Disco láser)	
Brand/Marque/Marca	Code No./Code/Num. de código
Sony	0101, 0102, 0103, 0104
Hitiachi	0108
Kenwood	0113, 0114
Magnavox	0110
Panasonic	0105, 0106, 0107
Philips	0115
Pioneer	0109
Sanyo	0112
Sharp	0111, 0116

Light Appareil d'éclairage Luz

Brand Marque Marca	Product Produit Producto	Code No Num. de código
Lutron	Grafik Eye	2001
	HomeWorks interactive	2004
	Radio RA	2002
	Spacer	2001
	Spacer System	2003
X10		2005

HDVR (Hard Disc Video Recorder) HDVR (Magnétoscope numérique avec disque dur) HDVR (Videograbadora de disco duro)	
Brand/Marque/Marca	Code No./Code/Num. de código
Sony	3205, 3206, 3207
Tivo	
Brand/Marque/Marca	Code No./Code/Num. de código
Sony	3201
Philips	3202
Replay	
Brand/Marque/Marca	Code No./Code/Num. de código
Panasonic	3203
Replay	3204