

FM Stereo/AM Radio

Operating Instructions

SRF-39FP

©1999 Sony Corporation

 
 
Printed in China

<http://www.sony.net/>

For customers who purchased this product in the USA
Please register this product on line at <http://www.sony.com/productregistration>. Proper registration will enable us to send you periodic mailings about new products, services, and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the product needs adjustment or modification. Thank you.

WARNING

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

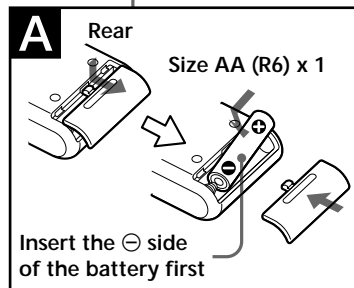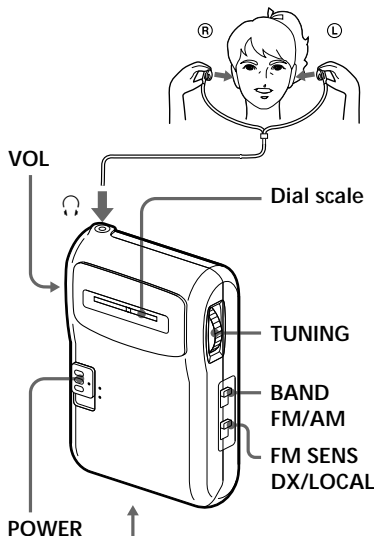

Before You Begin

Thank you for choosing the Sony radio! It will give you many hours of reliable service and listening pleasure. Before operating the radio, please read these instructions thoroughly and retain them for future reference.

Installing the Battery (See Fig. A)

- 1 Open the battery compartment lid at the rear of the radio.
- 2 Insert one size AA (R6) battery (not supplied) with the ⊕ and ⊖ marks aligned correctly.
- 3 Close the battery compartment lid.

Battery life (JEITA*)

Using Sony alkaline size AA (LR6) battery:

Approx. 110 hours

Using Sony size AA (R6) battery:

Approx. 40 hours

* Measured by JEITA (Japan Electronics and Information Technology Industries Association) standards. The actual battery life may vary depending on the circumstance of the unit.

When to replace the battery

Replace the battery when the sound becomes weak or distorted. Remove the old battery and insert a new one.

Notes on the battery

 
- Align the battery correctly.
- The dry battery cannot be charged.
- To avoid damage from possible battery leakage, remove the battery when unit will not be used for a long time.

Playing the Radio


- 1 Connect the supplied earphones to Ⓡ (earphones) jack and adjust them to your head.
- 2 Set **POWER** to **ON** to turn on the radio.
- 3 Set **BAND** to select **FM** or **AM**.
- 4 Turn **TUNING** to tune in a station.
- 5 Adjust **VOL** (volume).

- To turn off the radio, set **POWER** to **OFF**.
- To improve reception
FM: Extend the earphones cord which functions as the FM antenna.
AM: Rotate the unit horizontally for optimum reception. A ferrite bar antenna is built in the unit.
- Set **FM SENS** to **LOCAL** if interference is prevalent when radio wave intensity is dramatically stronger.
 To listen to stereo programs, set to **DX**.

Using the Belt Holder

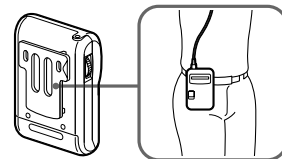

To detach the belt holder

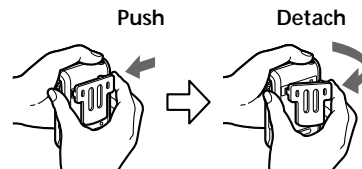 

Precautions

- Operate the unit only on 1.5 V DC.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- When the case becomes soiled clean it with a soft cloth dampened with a mild detergent solution. Never use abrasive cleansers or chemical solvents, as they may mar the case.
- In vehicles or in buildings, radio reception may be difficult or noisy. Try listening near a window.

Notes on Earphones

Road safety

Do not use earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in many areas. It can also be potentially dangerous to play your earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Avoid using earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to people around you.

Warning

If there is lightning when you are using the unit, take off the earphones immediately.

If you have any questions or problem concerning your unit, please consult the nearest Sony dealer.

Specifications

Frequency range

FM: 87.5 – 108 MHz

AM: 530 – 1 710 kHz

Output

⌀ (Earphones) jack (ø 3.5 mm stereo minijack)

Power output

3.6 mW + 3.6 mW (at 10% harmonic distortion) with earphones having impedance of 32 Ω at DC operation

Power requirements

1.5 V DC, one size AA (R6) battery

Dimensions

Approx. 63 × 91.5 × 26 mm
(w/h/d) (2 1/2 × 3 5/8 × 1 1/16 in)
(not incl. belt holder)

Mass

Approx. 82g (2.9 oz) incl. a battery

Accessories supplied

Stereo earphones (1)

Belt holder (1)

Design and specifications are subject to change without notice.

SONY®

Tape Cassette Player/Recorder/CD Player/Mini Disc
DAT/Radio/Head Phone/Speaker/MIC/Personals

Portable Audio

LIMITED WARRANTY

Sony Electronics Inc. ("Sony") warrants this Product (including any accessories) against defects in material or workmanship as follows:

1. For a period of one (1) year from the date of purchase if this Product is determined to be defective, Sony will repair or replace the Product, at its option, at no charge. After this one (1) year period, you must pay for the replacement unit. This warranty does not cover costs incurred in connection with the removal and re-installation of radios, speakers or accessories, nor does it cover any other contingent expenses.

2. To obtain warranty service, you must take the Product, or deliver the Product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to any Factory Sony Service facility or to the Laredo Fulfillment Center. See below for additional information.

This warranty does not cover customer instruction, installation, set up adjustments or signal reception problems.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of, or to any part of the Product, including the antenna. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Sony to service the Product. This warranty does not cover Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries). This warranty is valid only in the United States.

Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service.

This warranty is invalid if the factory applied serial number has been altered or removed from the Product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract with the Sony Partnership within 90 days of the date of sale, the limitation on how long an implied warranty lasts does not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

The Address of the Laredo Fulfillment Center is:

Laredo Fulfillment Center
10227 Crossroads Loop Suite B
Laredo, TX 78045

For your convenience, Sony Electronics Inc. has established telephone numbers for frequently asked questions:

To locate the servicer or dealer nearest you, or for service assistance or resolution of a service problem, or for product information or operation, call:

Sony Customer Information Services Center

1-800-222-7669
or visit the Sony Web Site:
www.sony.com

For an accessory or part not available from your authorized dealer, call:

1-800-488-SONY (7669)