



2-661-942-01(1)  
7819901261



VRD-MC1

# Quick Start Guide



- Video Recording
- One Touch Recording
- Photo Recording
- Photo Printing
- About Finalize
- About Main Menu


## Video Recording

Target discs: DVD-R DVD-RW DVD+R(DL) DVD+R DVD+RW

You can create a video DVD directly from a connected video device.

1

Connect your video device to DVDirect with an audio/video cable (not supplied).  
Connect the AC adapter/power cord.

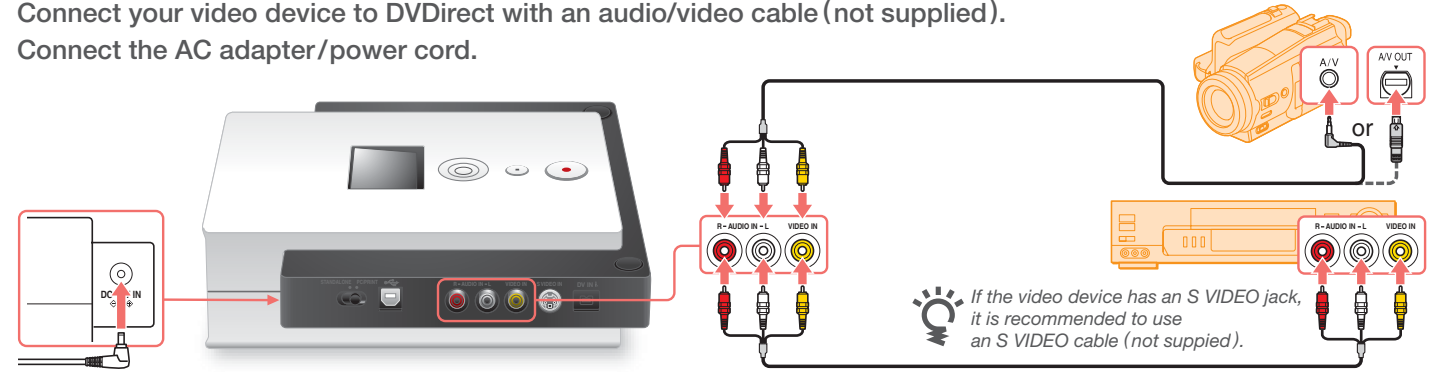


If the video device has an S VIDEO jack, it is recommended to use an S VIDEO cable (not supplied).

2




Turn on the video device, and ready it for playback.

3

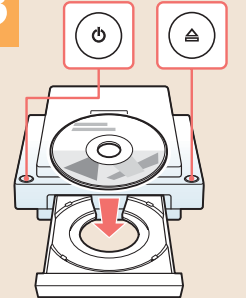


Press to turn on DVDirect and press to insert a disc.

4

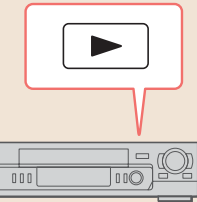

Press the start button of the video device.

5

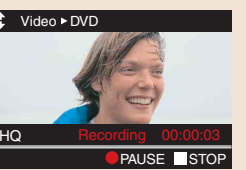

Press to start recording.

6



Press to stop recording, and press to eject the disc.  
When ejecting the disc, see "About Finalize."

## One Touch Recording


Target discs: DVD-R DVD-RW DVD+R(DL) DVD+R DVD+RW

You can burn the entire contents of your digital video on DVD by one touch of a button.  
Before you start recording, change the [DV Full Dubbing] setting to [ON] in the setup menu. (See Operating Instructions for details.)


1

Connect your digital video camera\* to DVDirect with a DV ( i.LINK ) cable ( not supplied ).  
Connect the AC adapter/power cord.

\*DV/Digital8 camcorder input only. MICROMV camcorder is not supported.

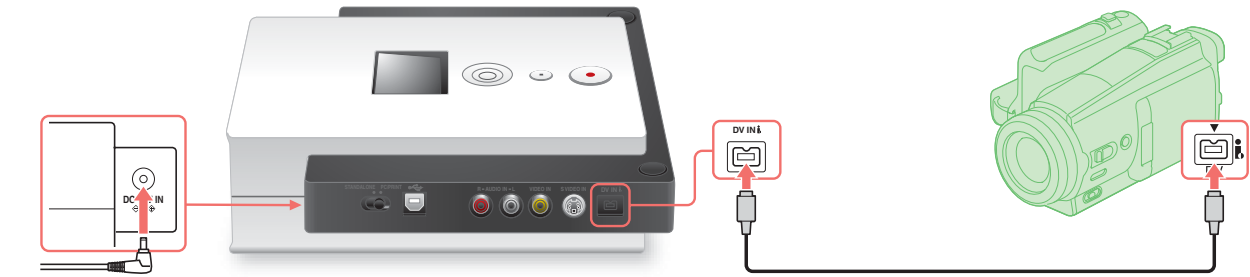


2

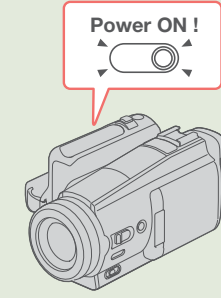


Turn on the digital video camera, and ready it for playback.

3

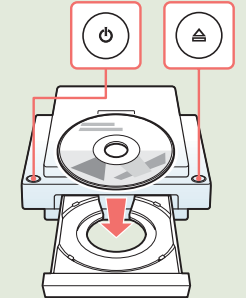


Press to turn on DVDirect and press to insert a disc.

4

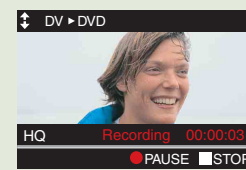

Press to start recording.  
The DVDirect controls the digital video camera for the whole process.

5

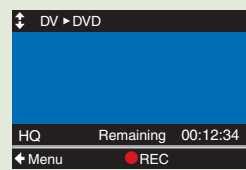


Recording is completed automatically. Press to eject the disc.  
When ejecting the disc, see "About Finalize."

# Photo Recording

Target discs: **DVD-R** **DVD-RW**

You can burn a photo DVD directly from a memory card.

**1** Connect the AC adapter/power cord. Insert a memory card into DVDirect.

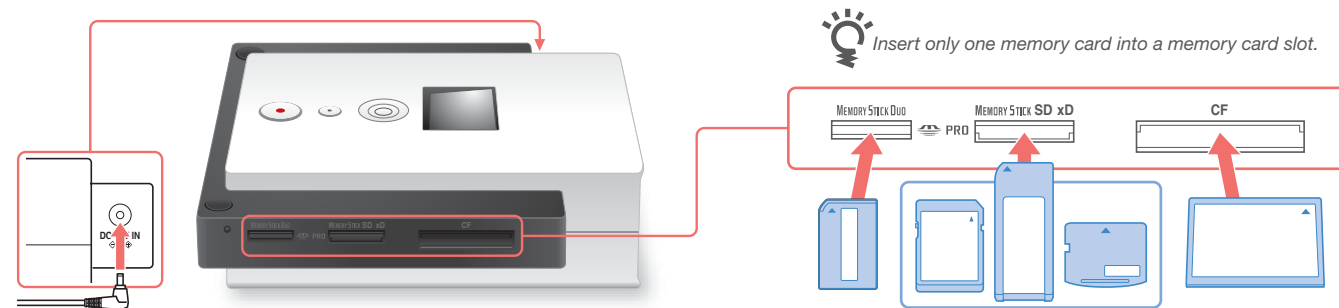

**2** Press to turn on DVDirect and press to insert a disc.

**3** Mark (to record)/unmark (to not record) photos by pressing / and .

Mark (to record) (to not record) photos by pressing / and .

1/123 Menu Mark/Unmark REC

All photos in the memory card are automatically selected as default.

**4** Writing photos to disc.  
HINT : Slideshow created when disc is ejected.

Press to start recording.

**5** Complete

Recording is completed automatically. Press , and then press to eject the disc.


When ejecting the disc, see "About Finalize."

# Photo Printing

Target media: **DVD-R** **DVD-RW** **Memory Card**

You can print out photos in a photo DVD or memory card by connecting to a printer.

**1** Connect a USB cable to DVDirect.  
Connect the AC adapter/power cord and set the mode switch to [ PC/PRINT ].

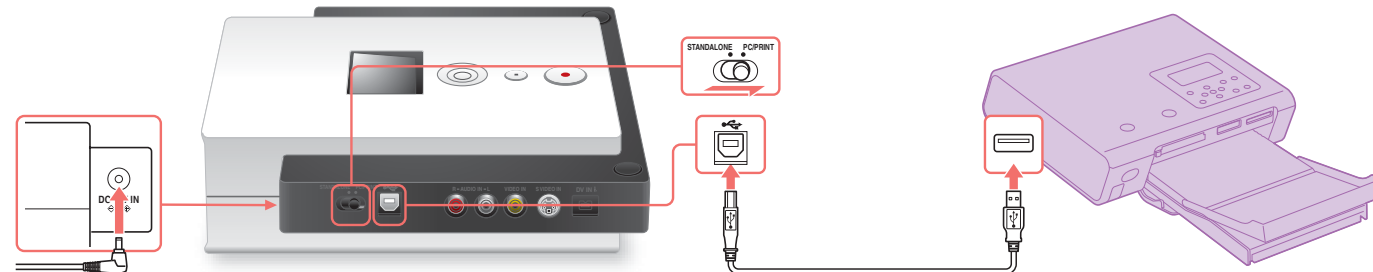

**2** Power ON !

Turn on the printer, and make it ready for printing.

**3** Press to turn on DVDirect and press to insert a photo DVD.

Insert a memory card if printing out from a memory card.

**4** Press / to select and display a photo to print.

**5** Printing...

Press , and then connect a USB cable to the printer to start printing.


**6** Printing is completed.

## About Finalize

To finalize the disc means to make the created disc playable on other DVD devices.  
For DVDirect, the "Finalize" message appears when ejecting a disc immediately after recording.

### When ejecting after recording


Press / to select "Yes" or "No," and press .

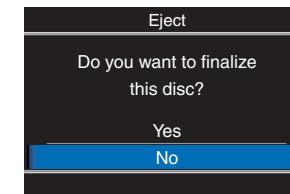

#### Selecting "Yes" to finalize

Finalize the disc before ejecting.

- To view the created DVD on other DVD devices
- To distribute the created DVD
- To complete the disc 100 % (no plan to record on the same disc)

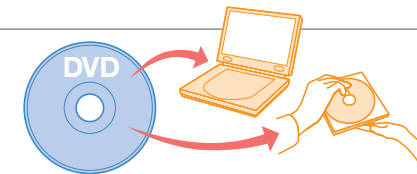

**When using DVD+RW discs**  
Finalizing is unnecessary for a DVD+RW disc. The "Finalize" message does not appear and disc can be ejected.

#### Selecting "No" to not finalize

Eject the disc without finalizing.


- To further record videos or photos later on the same disc
- In the middle of creating the disc (not playable on other DVD devices yet)



## About the Main Menu

You can start recording from the main menu.

**1** Press when [ Menu] is displayed in the bottom left of the display window. The main menu appears.

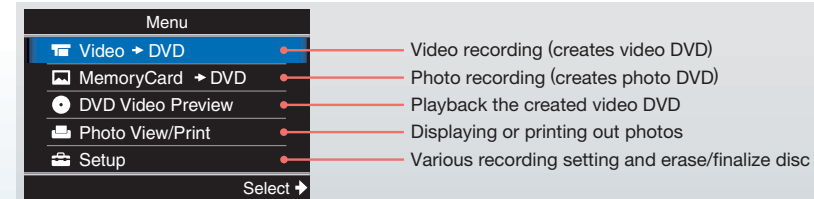

**2** Press / to select the desired option, and then press or .