

SONY®

3-810-895-11(1)

CD Radio Cassette-Corder



Operating Instructions

***CFD-565/DW565
CFD-567***

©1996 by Sony Corporation

Warning

To prevent fire or shock hazard, do not expose the player to rain or moisture.

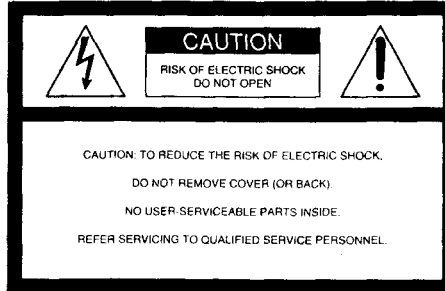

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

The use of optical instruments with this product will increase eye hazard.

For customers in Canada

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Information

For customers in the United States

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Owner's Record

The model and serial numbers are located at the rear of the CD radio cassette-corder. Record these numbers in the spaces provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. _____

Serial No. _____

About This Manual

The instructions in this manual are for the CFD-565, CFD-DW565 and CFD-567. Before you start reading, check your model number. The CFD-565 is the model used for illustration purposes.

Table of contents

Basic Operations

Basic Operations

- 4 Playing a CD
- 6 Listening to the radio
- 8 Playing a tape
- 10 Recording on a tape

The CD Player

- 12 Using the display
- 13 Locating a specific track
- 14 Playing tracks repeatedly (Repeat Play)
- 15 Creating your own program (Program Play)

The Radio

- 17 Presetting radio stations
- 18 Playing preset radio stations

The Tape Player

- 19 Recording through a microphone/Using as a PA system

The Timer

- 20 Setting the clock
- 21 Waking up to music
- 23 Falling asleep to music

Setting Up


- 24 Hooking up the system
- 27 Adjusting the audio emphasis (MEGA BASS/ROTARY EQUALIZER/SURROUND)

Additional Information

- 29 Precautions
- 31 Troubleshooting
- 33 Maintenance
- 34 Specifications
- 35 Index

Warning

To prevent fire or shock hazard, do not expose the player to rain or moisture.

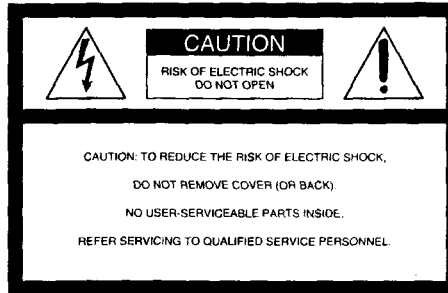

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

The use of optical instruments with this product will increase eye hazard.

For customers in Canada

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Information

For customers in the United States

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Owner's Record

The model and serial numbers are located at the rear of the CD radio cassette-corder. Record these numbers in the spaces provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. _____

Serial No. _____

About This Manual

The instructions in this manual are for the CFD-565, CFD-DW565 and CFD-567. Before you start reading, check your model number. The CFD-565 is the model used for illustration purposes.

Table of contents

Basic Operations

- 4 Playing a CD
- 6 Listening to the radio
- 8 Playing a tape
- 10 Recording on a tape

The CD Player

- 12 Using the display
- 13 Locating a specific track
- 14 Playing tracks repeatedly (Repeat Play)
- 15 Creating your own program (Program Play)

The Radio

- 17 Presetting radio stations
- 18 Playing preset radio stations

The Tape Player

- 19 Recording through a microphone/Using as a PA system

The Timer

- 20 Setting the clock
- 21 Waking up to music
- 23 Falling asleep to music


Setting Up

- 24 Hooking up the system
- 27 Adjusting the audio emphasis (MEGA BASS/ROTARY EQUALIZER/SURROUND)

Additional Information

- 29 Precautions
- 31 Troubleshooting
- 33 Maintenance
- 34 Specifications
- 35 Index

Playing a CD

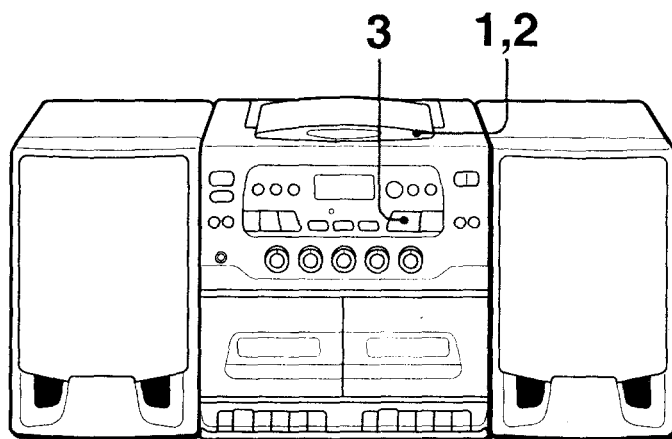


For hookup instructions, see pages 24 – 26.

1

OPEN/CLOSE
○ ○ ○ ○

Press OPEN/CLOSE down to open the CD compartment and place the CD on the CD compartment.

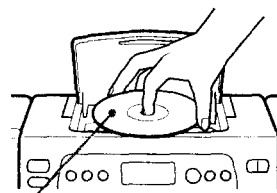


With the label side up

2

OPEN/CLOSE
○ ○ ○ ○

Close the lid of the CD compartment.

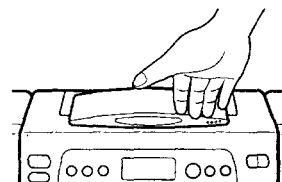

3



Press ►|| (direct power-on).


The player plays all the tracks once.

Display



Track number Playing time

Use these buttons for additional operations

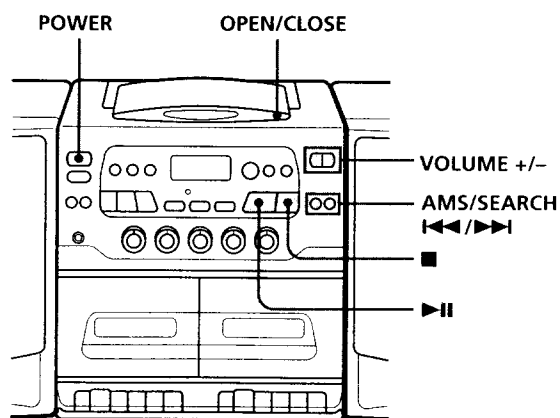


Basic Operations

Tip

Next time you want to listen to a CD, just press **▶||**. The player turns on automatically and starts playing the CD.


To	Press
Adjust the volume	VOLUME +/-
Stop playback	■
Pause playback	▶ Press again to resume play after pause.
Go to the next track	AMS/SEARCH ▶▶▶
Go back to the previous track	AMS/SEARCH ◀◀◀
Remove the CD	OPEN/CLOSE
Turn on/off the player	POWER

Listening to the radio

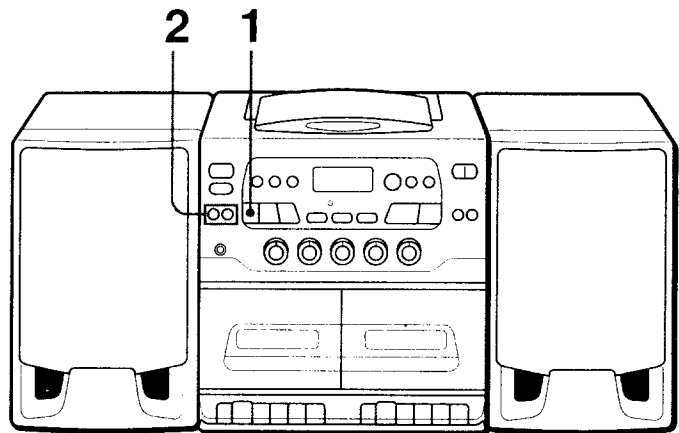


For hookup instructions, see pages 24 – 26.

1



Press BAND until the band you want appears in the display (direct power-on).

Display



2



Hold down TUNING +/- until the frequency digits begin to change in the display.


The player automatically scans the radio frequencies and stops when it finds a clear station.

If you can't tune in a station, press the button once at a time.

Indicates an FM stereo broadcast.



Use these buttons for additional operations

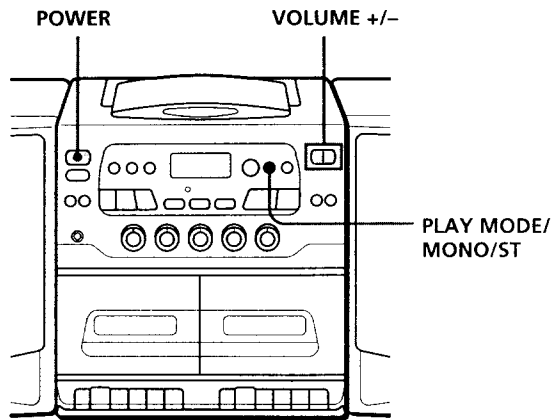


Tips

- If the FM broadcast is noisy, press PLAY MODE/MONO/ST until "Mono" appears in the display and the radio will play in monaural.
- Next time you want to listen to the radio, just press the BAND button. The player turns on automatically and starts playing the previous station.


To	Press
Adjust the volume	VOLUME +/-
Turn on/off the radio	POWER

To improve broadcast reception

Reorient the antenna for FM. Reorient the player itself for AM.

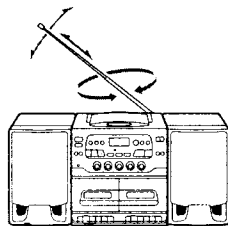


for FM

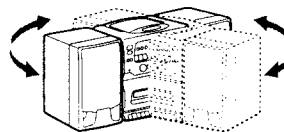

for AM


Playing a tape

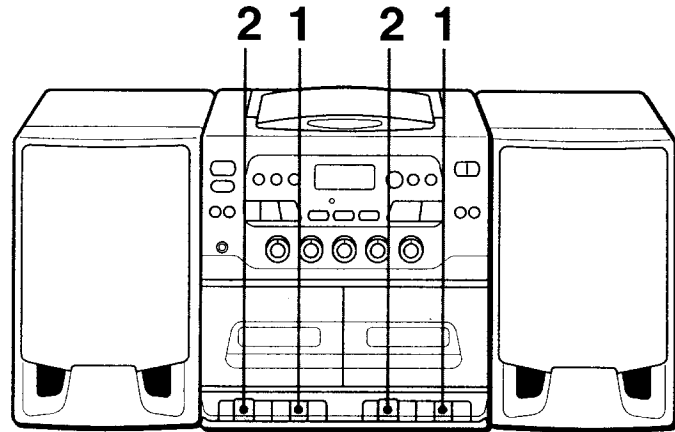


For hookup instructions, see pages 24 – 26.

1





Press  to open the tape compartment and insert a recorded tape. Close the compartment.

With the side you want to play facing forward

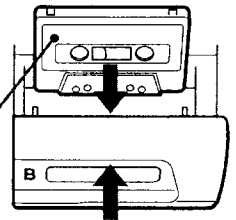

2




Press .

The player turns on (direct power-on) and starts playing.

Display



Use these buttons for additional operations

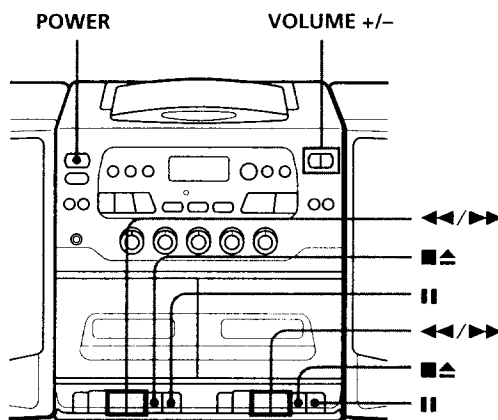

Basic Operations

Note


During playback, do not press buttons on the other deck. Otherwise the playback speed may change.

Tips

- Next time you want to listen to a tape, just press ►. The player turns on automatically and starts playing the tape.
- For the best results, use TYPE I (normal) tape.

To	Press
Adjust the volume	VOLUME +/-
Stop playback	■▲
Fast-forward or rewind the tape	▶▶ or ◀◀
Pause playback	
	Press the button again to resume play after pause.
Eject the cassette	■▲
Turn on/off the player	POWER

Recording on a tape

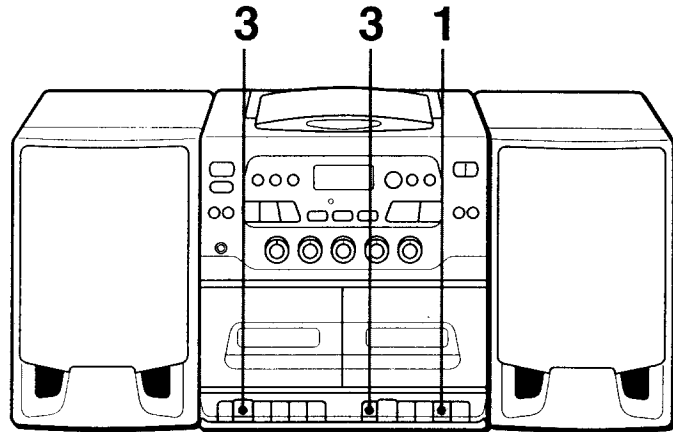

For hookup instructions, see pages 24 – 26.


1

STOP/EJECT



Press to open the tape compartment on deck B and insert a blank tape.

With the side you want to record on facing forward

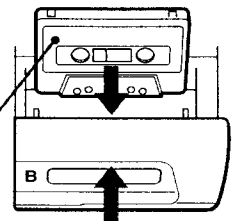


2



Select the program source you want to record.

To record from the CD player, insert a CD (see page 4) and press on the CD section.

Display



To record from the radio, press BAND and tune in the station you want (see page 6.)



To record from the tape, insert a recorded tape into deck A. Then press TAPE/DUBBING until "DUB" appears in the display window.



3 Deck B

REC



Deck B

REC



Deck A

HI-SPEED
DUBBING


Start recording.

To record from the CD player and the radio, press ● on deck B (▶ is depressed automatically).

To record from the tape, press ● on deck B (▶ is depressed automatically), and then press ▶ on deck A. (For high speed dubbing, press HI-SPEED DUBBING instead.)

Tips


- Adjusting the volume or the audio emphasis (see page 27) will not affect the recording level.
- If the AM program makes a whistling sound after you've pressed ● in step 3, set the ISS (Interference Suppress Switch) at the rear to the position that most decreases the noise. Normally set the switch to "2".
- For the best results, use the AC power as a power source and use TYPE I(normal) tape for recording.
- To erase a recording, proceed as follows:
 - 1 Disconnect the microphone if connected to the MIX MIC jack.
 - 2 Press TAPE until "TAPE" appears in the display window.
 - 3 Press ●.

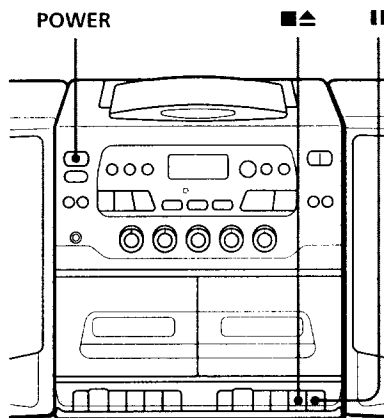Use these buttons for additional operations

To	Press
Stop recording	■◀ on deck B
Pause recording	on deck B Press the button again to resume recording.
Turn on/off the player	POWER

Using the display


You can check information about the CD using the display.

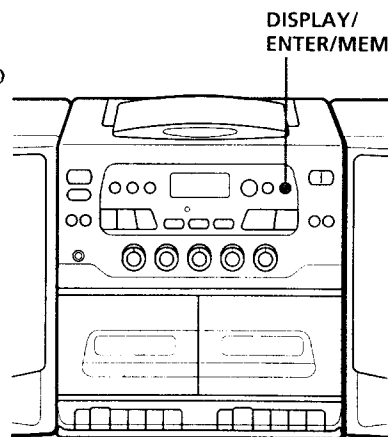

Checking the total track numbers and playing time

Press DISPLAY/ENTER/MEM in stop mode.

If the CD has more than 12 tracks, "OVER 12" appears in the display.



Checking the remaining time

Press DISPLAY/ENTER/MEM while playing a CD.


The track numbers in the music calendar disappear after they are played.

To display	Press DISPLAY/ENTER/MEM
The current track number and the remaining time on the current track*	Once
Remaining time on the CD and the number of tracks left	Twice
The current track number and playing time	Three times

* For a track whose number is more than 20 the remaining time appears as "--:--".

Locating a specific track

You can quickly locate any track using the number buttons. You can also find a specific point in a track while playing a CD.

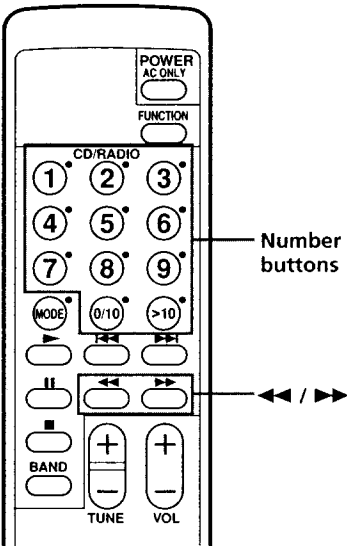

The CD Player

Note

You cannot locate a specific track if “SHUF REP” or “PGM” is lit in the display. Turn off the indication by pressing ■.

Tip


When you locate a track numbered over 10, press >10 first, then the corresponding number buttons.
Example:
To play track number 23, press >10 first, then 2 and 3.

To locate	Press
a specific track directly	number button of the track.
a point while listening to the sound	▶▶ (forward) or ◀◀ (backward) while playing and hold down until you find the point. When you use the buttons on the player, use AMS/SEARCH ◀◀/▶▶.
a point while observing the display	▶▶ (forward) or ◀◀ (backward) in pause and hold down until you find the point. When you use the buttons on the player, use AMS/SEARCH ◀◀/▶▶.

Playing tracks repeatedly

(Repeat Play)

You can play tracks repeatedly in normal, shuffle or program play modes (see pages 15 and 16).

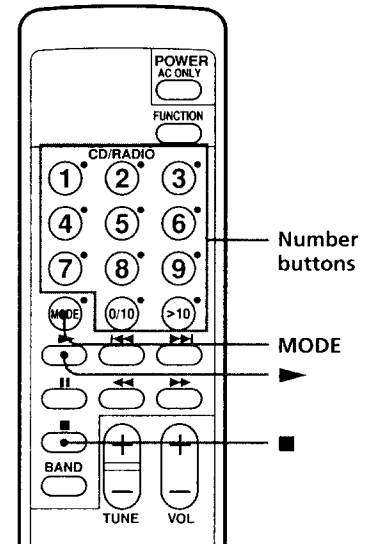

- 1 Press ■.

"CD" appears in the display.

- 2 Press MODE until the repeat mode you want appears in the display.

To repeat	Select
a single track	REP 1
all the tracks	REP ALL
tracks in random order	SHUF REP
programed tracks	PGM REP and then program tracks (see step 3 on page 15).


- 3 Do either of the following to start repeat play:

- When you've selected REP1, select the track by pressing the number button.
- When you've selected REP ALL, SHUF REP or PGM REP, press ►.

Creating your own program

(Program Play)

You can make a program of up to 20 tracks in the order you want them to be played.

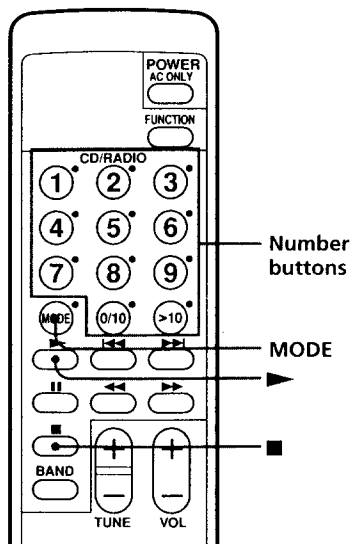


The CD Player

Tips

- You can select the track on the player. Press AMS/SEARCH ◀◀ / ▶▶ then press DISPLAY/ENTER/MEM instead of the number buttons.
- You can play the same program again, since the program is saved until you open the disc compartment.
- You can record your own program. After you've created the program, insert a blank tape into deck B and press ● on deck B to start recording.

- 1 Press ■.
- 2 Press MODE until "PGM" appears in the display.
- 3 Press the number buttons for the tracks you want to program in the order you want. You can program up to 20 tracks.

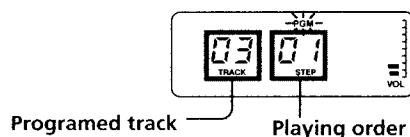

- 4 Press ▶ to start program play.

continued

To cancel Program Play

Press MODE until no indication appears in the display.

To check the order of tracks before play

Press DISPLAY/ENTER/MEM on the player.


Every time you press the button, the track number appears in the programed order.

To change the current program

Press ■ once if the CD is stopped and twice if the CD is playing. The current program will be erased. Then create a new program following the programming procedure.

Presetting radio stations

You can store radio stations into the player's memory. You can preset up to 20 radio stations, 10 for each FM or AM in any order.

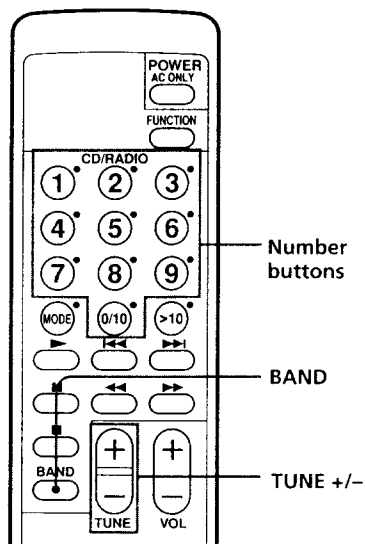

The Radio

Tip


To preset radio stations on the player, proceed as follows:

- 1 Select the band and tune in a station you want.
- 2 Hold down DISPLAY/ENTER/MEM for about 2 seconds. A preset number flashes in the music calendar.
- 3 Decide on a preset number for the station (1 to 10) by pressing PRESET +/-.
- 4 Press DISPLAY/ENTER/MEM.

- 1 Press BAND until the band you want appears in the display.
- 2 Tune in a station you want.
- 3 Hold down the number buttons that you want to preset the new station for about 2 seconds. The new station replaces the old one.

Playing preset radio stations

Once you've preset the stations, use the number buttons to tune in your favorite stations.

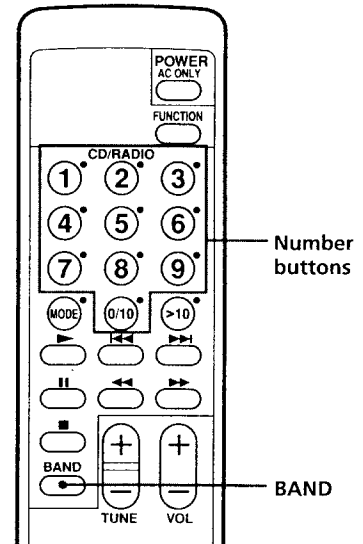


Tip

You can tune in a preset station with the player. Use PRESET +/- instead of the number buttons.

- 1 Press BAND to select the band.
- 2 Press the number buttons to tune in a stored station.

Recording through a microphone/Using as a PA system

You can record sound using a microphone (not supplied) or use the player as a public address (PA) system.

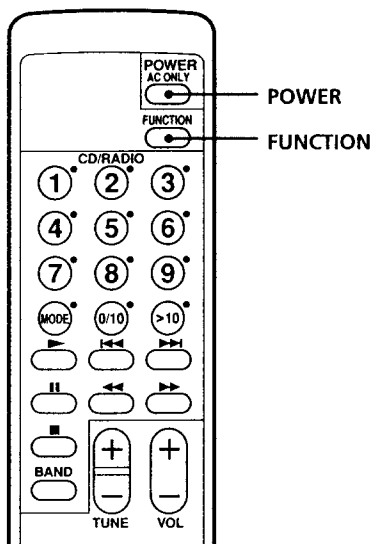

The Tape Player

Tip


You can mix CD or radio sounds and record them by adding your voice or other audio through the microphone.

Notes

- Acoustic feedback (howling) tends to occur when you use a microphone with echo function.
- If acoustic feedback (howling) occurs, turn down the volume or move the microphone away from the speaker.

Recording through a microphone

- 1 Plug the microphone into the MIX MIC jack and turn on the microphone if it has a power switch.
- 2 Turn on the power.
- 3 Press FUNCTION until "TAPE" appears in the display.
- 4 Insert a cassette for recording into deck B and press ● to start recording.

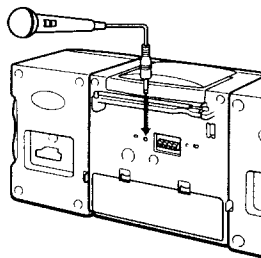


Using as a PA system

- 1 Do steps 1 and 2 above.
- 2 Sing or speak into the microphone and adjust the volume.

Setting the clock

Before you set the clock, insert four size AA (R6) batteries and connect the AC power cord (see page 24 and 25.)
As long as the clock goes, ":" flashes.

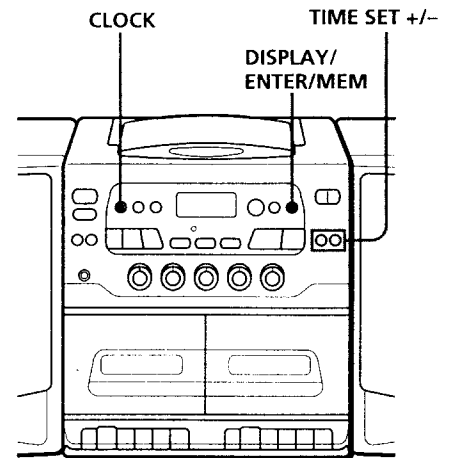


Tip

The time display system of this player is the 12-hour system:
AM12:00 = midnight
PM12:00 = noon

- 1** Press and hold CLOCK for about two seconds until "AM" or "PM" and the hour digit flash.
- 2** Press TIME SET +/- until you set the current hour. Then press DISPLAY/ENTER/MEM.


The minute digits flash. Set the minutes by pressing TIME SET +/- until the current minute is displayed.



- 3** Press DISPLAY/ENTER/MEM.
The clock starts from 00 seconds.

Waking up to music

You can wake up to music at a preset time. Make sure you have set the clock ("Setting the clock" on page 20).

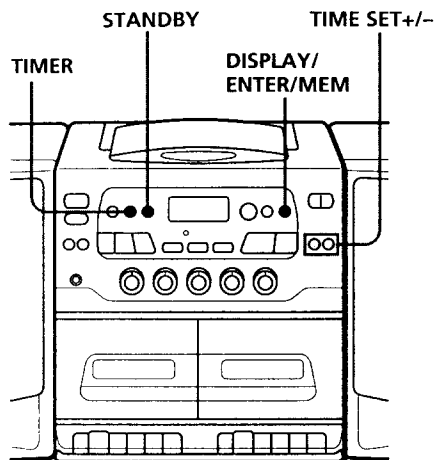

The Timer

- 1 Prepare the music source you want to play.

To play	Do this
the radio	Tune in a station
a CD	Insert a CD.

- 2 Press TIMER.

The ⏰ (clock) and the music source ("CD" or "RADIO") flash.

- 3 Select the music source ("CD" or "RADIO") by pressing TIME SET +/-, then DISPLAY/ENTER/MEM.

- 4 Set the timer to the hour you want the music to start by pressing TIME SET +/- then DISPLAY/ENTER/MEM. Set the minutes, then press DISPLAY/ENTER/MEM.

- 5 Set the timer to the hour you want the music to go off by pressing TIME SET +/- then DISPLAY/ENTER/MEM. Set the minutes, then press DISPLAY/ENTER/MEM.

continued

Tips


- The display window dims while the waking up timer is on.
- You can have the player go on the next day at the same time. Just press **STANDBY** until the ☉ indication appears in the display. The preset settings remain until you reset them.

Note

The timer mode is canceled:

- when you press **TAPE** or **▶PLAY** while music plays in the timer mode.
- when you select "TAPE" using **FUNCTION** on the remote.

- 6** Press **TIME SET +/-** to set the volume, then **DISPLAY/ENTER/MEM**.



- 7** Press **STANDBY**.

The ☉ indication lights up and the power goes off. At the preset time, the power will go on and music will play.

To check/change when the playback will start

Press **TIMER**, then **DISPLAY/ENTER/MEM**. Each time you press **DISPLAY/ENTER/MEM**, a stored setting lights up. Change the setting if you need to when the setting lights up. When you finish checking, press **TIMER** again.

To use the player before a timer playback starts

Just turn on the player, and then you can use it.

If you turn off the player before the preset time, timer playback will start at the preset time.


In case of the radio, however, if you listen to the station which is different from the one you tuned in in step 1 on page 21, you will hear that station at the preset time. Make sure to tune in the station you want to listen to before you turn off the player.

To stop play

Press **POWER**.

Falling asleep to music

You can set the player to turn off automatically after about 2 hours, allowing you to fall asleep while listening to music.

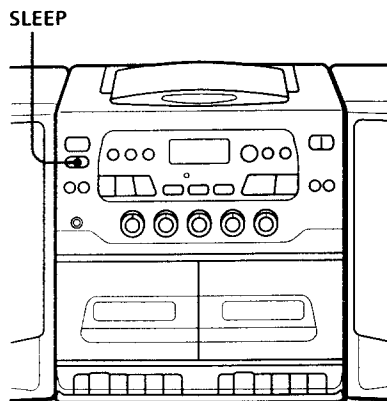

Tip

The display window dims while the sleep timer is on.

- 1 Play the music source you want.
- 2 Press SLEEP.
"SLEEP" appears in the display. The player shuts off automatically after about 2 hours.


To cancel the sleep function

Press SLEEP again to turn off the power.

The Timer


Hooking up the system

Make sure you turn off the power before making any connections.

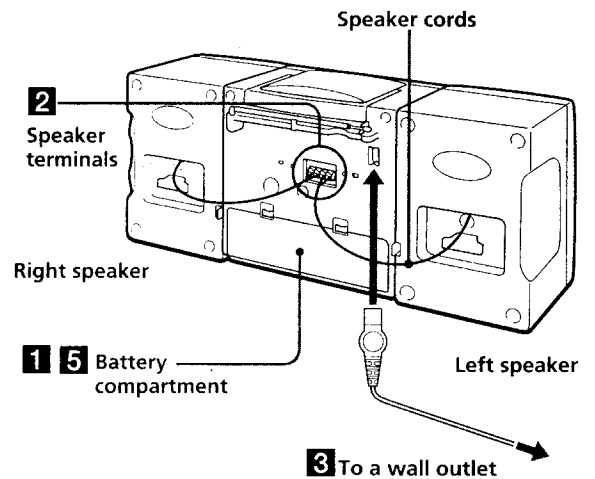

1 Inserting the back-up batteries

Insert four size AA (R6) batteries (not supplied) into the battery compartment. These batteries work to save the memory data.

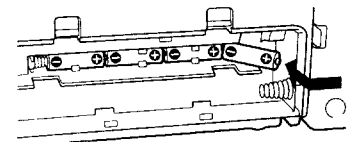


Tips

- To detach the speakers, unlock speaker (see B on the diagram) and slide the speaker box all the way up and away from the player.
- Connect the speakers for this unit only to the speaker terminals of this unit. If you connect any other speakers or equipment, malfunction may occur.

2 Hooking up the speakers


- 1 Align the grooves and slide the speaker box down until it snaps into place A.

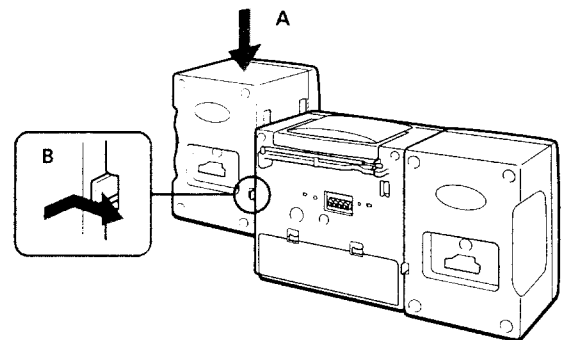

- 2** Twist the speaker cable coating and strip it from the end of the cable.



- 3** Connect the black wires to (-) minus and the red wires to (+) plus terminals; the right speaker wires to the R and the left speaker wires to the L terminals.

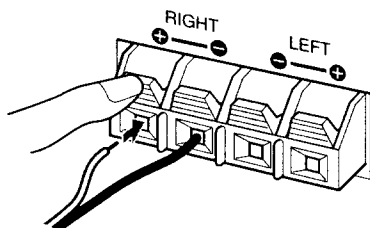


Setting Up

3 Connecting the AC power cord

Insert one end of the supplied AC power cord to the AC IN socket located at the rear of the player, and the other end to the wall outlet.

4 Inserting batteries into the remote

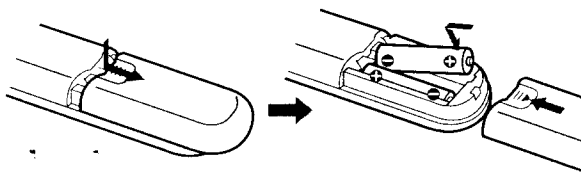

Insert two size AA (R6) batteries (not supplied)

Replacing batteries

With normal use, the batteries should last for about six months. When the remote no longer operates the player, replace all the batteries with new ones.

Notes

- When you operate the player with the batteries, you cannot turn on the player using the remote.
- When you operate the player with batteries, the backlight does not work even if the player is on.

continued


Tip

Replace the batteries when the OPR/BATT indicator dims or when the player stops operating. Replace all the batteries with new ones. Before you replace the batteries, be sure to take out the CD from the player.

5 Using the player on batteries

Insert eight size D (R20) batteries (not supplied) into the battery compartment.

To use the player on batteries, disconnect the AC power cord from the player.

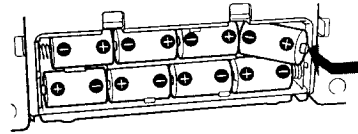


Adjusting the audio emphasis

(MEGA BASS/ROTARY EQUALIZER/SURROUND)

You can adjust the audio emphasis of the sound you are listening to.

CFD-567

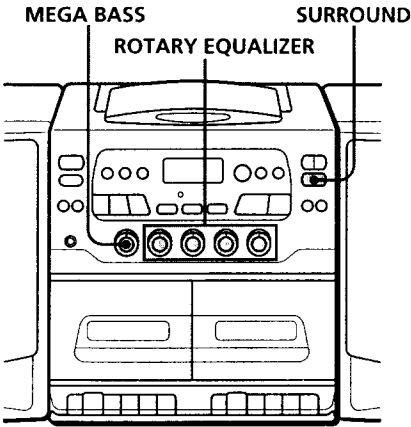

Setting Up

Selecting the sound characteristic

Turn MEGA BASS/ROTARY EQUALIZER to select the audio emphasis you want.

Frequency coverage	Turn the control clockwise (to +10)	Turn the control counterclockwise (to -10)
MEGA BASS	to increase heavy bass sounds	to decrease heavy bass sounds
100 Hz		
400 Hz	to emphasize speaking voice, middle frequencies of instrumental music	to de-emphasize speaking voice, middle frequencies of instrumental music
1 kHz	to provide more presence of vocals	to provide less presence of vocals
4 kHz	to heighten overall brightness of sound	to lessen overall brightness of sound
10 kHz	to increase high treble sounds	to decrease high treble sounds or reduce high frequency noise/tape hiss

continued

Getting the surround effect (CFD-567 only)

Press SURROUND.

The "SURROUND" indication appears in the display.

You can get the surround effect without connecting surround speakers.

Precautions

On safety

- As the laser beam used in the CD player section is harmful to the eyes, do not attempt to disassemble the casing. Refer servicing to qualified personnel only.
- Should any solid object or liquid fall into the player, unplug the player, and have it checked by qualified personnel before operating it any further.

On power sources

- For AC operation use the supplied AC power cord; do not use any other type.
- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- Unplug the player from the wall outlet when it is not to be used for an extended period of time.
- For battery operation, use eight size D (R20) batteries.
- When the batteries are not to be used, remove them to avoid damage that can be caused by battery leakage or corrosion.
- The nameplate indicating operating voltage, power consumption, etc. is located at the rear.

On placement

- Do not leave the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Do not place the player on an inclined or unstable place.
- Do not place anything within 10 mm of the side of the cabinet. The ventilation holes must be unobstructed for the player to operate properly and prolong the life of its components.
- If the player is left in a car parked in the sun, be sure to choose a location in the car where the player will not be subjected to the direct rays of the sun.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring-wound watches away from the player to prevent possible damage from the magnet.

On operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the CD player section. Should this occur, the player will not operate properly. In this case, remove the CD and wait about an hour for the moisture to evaporate.
- If the player has not been used for a long time, set it in the playback mode to warm it up for a few minutes before inserting a cassette.

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

continued

Precautions (continued)

Notes on CDs

- Before playing, clean the CD with a cleaning cloth. Wipe the CD from the center out.




- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight as there can be a considerable rise in temperature inside the car.
- Do not stick paper or sticker on the CD, nor scratch the surface of the CD.
- After playing, store the CD in its case.

If there is a scratch, dirt or fingerprints on the CD, it may cause tracking error.

Notes on cassettes

- Break off the cassette tab from side A or B to prevent accidental recording. If you want to reuse the tape for recording, cover the broken tab with adhesive tape.

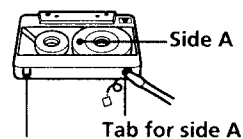

- To record on a tape with its tab broken off, cover the respective tab hole for side A or B with adhesive tape.
- The use of a cassette with more than 90 minutes of play time is not recommended except for long, continuous recording or playback.

Troubleshooting

	Symptom	Remedy
General	The power is not on.	<ul style="list-style-type: none"> • Connect the AC power cord to a wall outlet securely. • Make sure the batteries are inserted correctly. • You cannot turn on the player with the remote when you operate the player on batteries.
	There is no audio.	<ul style="list-style-type: none"> • Make sure the function you want to use appears in the display window. • Adjust the volume. • Unplug the headphones when listening through speakers.
	"no disc" lights in the display even when a CD is in place.	<ul style="list-style-type: none"> • Insert the CD with the label surface up.
CD Player	The CD does not play.	<ul style="list-style-type: none"> • Make sure that the CD compartment is closed. • Place the CD with the label surface up. • Clean the CD. • Take out the CD and leave the CD compartment open for about an hour to dry moisture condensation. • Make sure "CD" appears in the display.
	The sound drops out.	<ul style="list-style-type: none"> • Reduce the volume. • Clean the CD, or replace it if the CD is badly damaged • Place the player in a location free from vibration.
Radio	The audio is weak or has poor quality.	<ul style="list-style-type: none"> • Replace all the batteries with new ones if they are weak. • Move the player away from the TV. • If you are using the remote while listening to AM radio, noise may be heard. This is unavoidable.
	The picture of your TV becomes unstable.	<ul style="list-style-type: none"> • If you are listening to an FM program near the TV with an indoor antenna, move the player away from the TV.

continued

Troubleshooting (continued)

	Symptom	Remedy
Tape Player	The tape does not move when you press an operation button.	<ul style="list-style-type: none"> • Close the cassette compartment securely.
	The REC ● button does not function/The tape does not play.	<ul style="list-style-type: none"> • Make sure the safety tab on the cassette is in place. • Make sure "TAPE" appears in the display.
	The tape does not erase completely.	<ul style="list-style-type: none"> • Clean the erasing head (see page 33.) • Replace all the batteries with new ones if they are weak.
	The tape does not record.	<ul style="list-style-type: none"> • Make sure the tape is inserted properly. • Make sure the safety tab of the cassette is in place.
	The audio is weak/The audio quality is poor.	<ul style="list-style-type: none"> • Clean the heads, pinch rollers and capstans (See page 33). • Demagnetize the heads using a demagnetizer (see page 33).
	The sound is distorted.	<ul style="list-style-type: none"> • The TYPE II (high position) or TYPE IV (metal) tape is being used. Use TYPE I (normal) tape only.
Timer	The timer does not operate.	<ul style="list-style-type: none"> • Make sure the time on the clock is correct. • Check to see if the AC power had been cut off. • Make sure the ☉ (clock) indication is displayed.
Remote	The remote does not function.	<ul style="list-style-type: none"> • Replace all the batteries in the remote with new ones if they are weak. • Make sure that you are pointing the remote at the remote sensor on the player. • Remove any obstacles in the path of the remote and the player. • Make sure the remote sensor is not exposed to strong light such as direct sunlight or fluorescent lamp light. • Move closer to the player when using the remote.

After trying the above remedies, if the player still does not function properly, unplug the AC power cord and remove all the batteries. After all the indications in the display disappear, plug the power cord and insert the batteries again. If the problem persists, please consult your nearest Sony dealer.

Maintenance



Cleaning the lens

If the lens becomes dirty, it may cause a skipping of sound during CD operation. Clean with a commercially available blower.


Cleaning the tape heads and tape path

Wipe the heads, the pinch rollers and the capstans with a cleaning swab slightly moistened with cleaning fluid or alcohol after every 10 hours of operation for optimum playback and recording quality. To make the best possible recording, however, we recommend that you clean all surfaces over which tape travels before each recording.

deck A

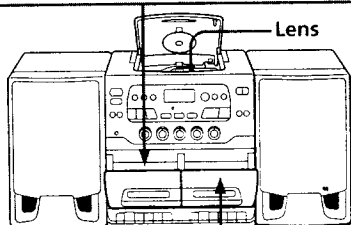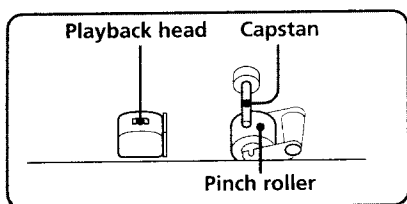

deck B

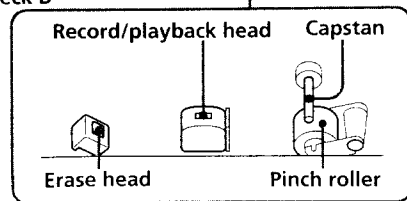

After cleaning, insert a tape when the areas cleaned are completely dry.

Demagnetizing the tape heads

After 20 to 30 hours of use, enough residual magnetism will have built up on the tape heads to begin to cause loss of high frequency sound and hiss. At this time, you should demagnetize the heads and all metal parts in the tape path with a commercially available tape head demagnetizer.

Cleaning the cabinet

Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzine.

Specifications

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION

With 3.2-ohm loads, both channel driven from 150 - 15,000 Hz; rated 3.5 W per channel-minimum RMS power, with no more than 10 % total harmonic distortion in AC operation.

Other Specifications

CD player section

System

Compact disc digital audio system

Laser diode properties

Material: GaAlAs

Wave length: 780 nm

Emission duration: Continuous

Laser output: Less than 44.6 μ W

(This output is the value measured at a distance of about 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.)

Spindle speed

200 r/min (rpm) to 500 r/min (rpm) (CLV)

Number of channels

2

Frequency response

20 - 20,000 Hz $\pm 0/-1$ dB

Wow and flutter

Below measurable limit

Radio section

Frequency range

FM: 87.6 - 108 MHz

AM: 531 - 1,602 kHz (Australian model)

530 - 1,710 kHz (Other models)

Aerials

FM: Telescopic aerial

AM: Built-in ferrite bar aerial

Cassette-corder section

Recording system

4-track 2 channel stereo

Fast winding time

Approx. 120 s (sec.) with Sony cassette C-60

Frequency response

TYPE I (normal): 80 - 12,000 Hz

General

Speaker

Full range: 12 cm (4 $\frac{3}{4}$ in.) dia.,
3.2 ohms, cone type (2)

Tweeter: 2 cm ($\frac{1}{2}$ in.) dia. (2)

Inputs

Mixing microphone input jack (minijack):

Sensitivity 2.45 mV

For low impedance microphone

Outputs

Headphones jack (stereo minijack)

For 16 - 68 ohms impedance headphones

Power output (excluding US model)

4.3 W + 4.3 W (at 3.2 ohm, 10 % harmonic distortion)

Power requirements

For CD radio cassette-corder:

230 - 240 V AC, 50 Hz (Australian model)

120 V AC, 60 Hz (Other models)

12 V DC, 8 size D (R20) batteries

For memory back-up:

6 V DC, 4 size AA (R6) batteries

For remote:

3 V DC, 2 size AA (R6) batteries

Power consumption

AC 28 W

Battery life

For CD radio cassette-corder:

FM recording

Sony R20P: approx. 11 h

Sony alkaline LR20: approx. 16 h

Tape playback

Sony R20P: approx. 6 h

Sony alkaline LR20: approx. 10 h

CD playback

Sony R20P: approx. 4 h

Sony alkaline LR20: approx. 6 h

Dimensions

Approx. 653 \times 267 \times 207 mm (w/h/d)
(25 $\frac{3}{4}$ \times 10 $\frac{5}{8}$ \times 8 $\frac{1}{4}$ inches) (incl. projecting parts)

Mass

Approx. 11.3 kg (24 lb. 15 oz) (incl. batteries)

Supplied accessory

AC power cord (1)

Remote controller (1)

Design and specifications are subject to change without notice.

Optional accessories

Sony MDR headphone series

Index

A

Audio emphasis 27

B

Batteries

for player 26

for memory back-up 24

for remote 25

C

CD player 12

Cleaning

cabinet 33

tape heads and tape
path 33

Connecting

AC power cord 25

Creating your own
program 15

D, E, F, G, H

Demagnetizing the tape
heads 33

Display 12

I, J, K

Improving broadcast
reception 7

L

Listening to the radio 6

Locating a specific track
13

M, N, O

MEGA BASS 27

Microphone 19

P, Q

PA system 19

Playing

a CD 4

a tape 8

preset radio stations 18

tracks repeatedly 14

Presetting radio stations
17

Program Play 15

Public address system.

See PA system

R

Radio stations

playing 18

presetting 17

Recording

on a tape 10

through a microphone
19

Repeat Play 14

ROTARY EQUALIZER
27

S

Selecting

audio emphasis 27

tracks 13

Setting the clock 20

Setting up 24

SURROUND 28

T

Tape player 19

Timer

Falling asleep to music
23

Waking up to music 21

Troubleshooting 31

U, V, W, X, Y, Z

Using

as a PA system 19

the display 12