


Software Quick Start Guide

Windows

This guide contains an outline of each program on the software disc, which you can use to start using the software as quickly as possible. For details on the operation of each program on the software disc, refer to the appropriate user's guide or Help.

Installing Software

- 1 Insert the software disc into a drive. The installer starts.
- 2 In the [Language Selection] screen of the installer, click the language of your choice.
- 3 Click the software that you want to install in the [Application Install] screen of the installer.
- 4 Click [Install].
- 5 Follow the instructions on the screen to perform the installation.

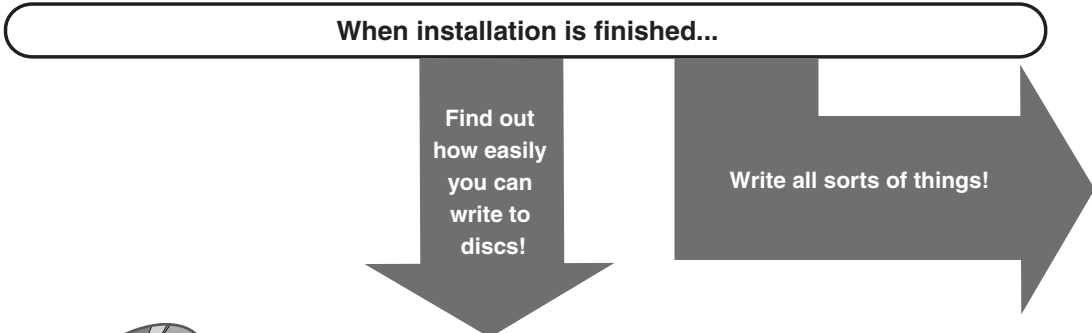


B's CLiP


B's CLiP is makes it possible to write individual files to discs. This makes CD-RW discs as easy to use as floppy disks or other removable media.

Notes

- You cannot use B's CLiP at the same time as Windows XP CD writing functions.
- The version of B's CLiP provided with the drive does not support writing to CD-R, DVD-R, or DVD+R discs.

Writing to unformatted CD-RW discs

- 1 Insert the CD-RW disc into the drive.
- 2 Click [B's CLiP] in the dialog box on the right.
- 3 Follow the instructions on the screen to format the CD-RW disc.
- 4 When formatting ends, drag the files that you want to write over the drive icon. Writing starts.
- 5 Click  (B's CLiP icon) on the taskbar, and click [Eject] on the shortcut menu that appears.

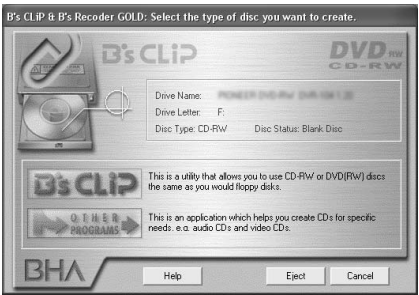

B's Recorder GOLD5

B's Recorder GOLD5 makes it possible to create a variety of data and audio discs, such as CD-ROMs, music CDs, and video CDs, as well as to back up discs. B's Recorder GOLD5 comes with an easy-to-use wizard that helps you accomplish your tasks.

Main features of B's Recorder GOLD

- Wizards make it easy to access frequently used functions, such as creating or copying music CD. Using wizards, you can create any type of disc simply by following the instructions on the screen.
- Copy music CDs or CD-ROMs without the need for complicated settings, which makes it easy to make several copies in a row.
- Use the Best CD function to copy music from several different CDs and create your own compilation. Further, using this function, you can equalize the sound level of music sampled from different music CDs.
- Save music on CDs as WAV, MP3¹, or TwinVQ files on the hard disk of your computer, and use these files to create other audio discs. You can play back the discs that you create with CD players, CD-ROM drives (using software such as Windows Media Player), or MP3 players.
- The Direct Cut function converts analog audio from a microphone or line feed (tape or MD player) into a format that you can directly write to disc or save to the hard disk of your computer.
- Create video CDs that you can play back with your computer or home DVD player.
- Follow the instructions on the screen and back up an overloaded hard drive with ease. Also create startup disks with the same ease.
- Restore discs for which errors occurred during writing, causing the operation to fail. (In some cases, restoration may not be possible.)

¹ The version of B's Recorder GOLD5 provided with the drive is a trial version. It supports MP3 file creation function until 30 days after the first use or 20 tracks are created. Access the BHA Web site to purchase the B's GOLD MP3 Encoder Key Code add-on, which allows you the full use of B's Recorder GOLD5 MP3 encoding capabilities.

Serial numbers




- B's Recorder GOLD5: ER45AA-AACI-3704-3854
- B's Clip: ES45AA-AAAC-8177-6893

When you register your products on the BHA Web site, buy add-on programs, or download updaters and utilities, you need the appropriate serial number.

Creating files from music CDs

You can sample files from music CDs and save them to your hard disk as MP3 or WAV files.



- 1 Click [Rip].
- 2 In the [CD/DVD Copyright] dialog box, click [Yes].
- 3 Insert a music CD into the drive.
- 4 Select the tracks that you want to rip from the music CD, and click [Start].
- 5 Specify a save destination, and click [Save].

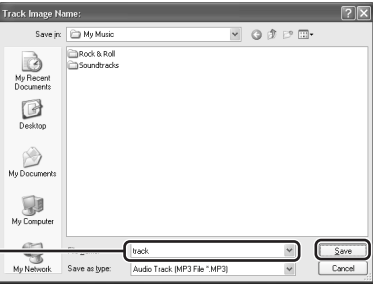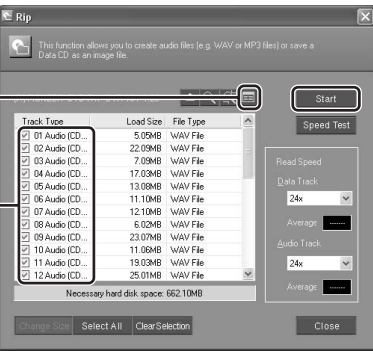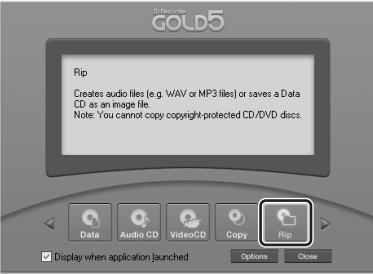

Copying discs

You can make complete copies of music CDs or CD-ROMs onto blank discs.


- 1 Click [Copy].
- 2 Click [Yes].
- 3 Insert the disc into the drive.
- 4 Click [Start] and follow the instructions on the screen to start writing to disc.

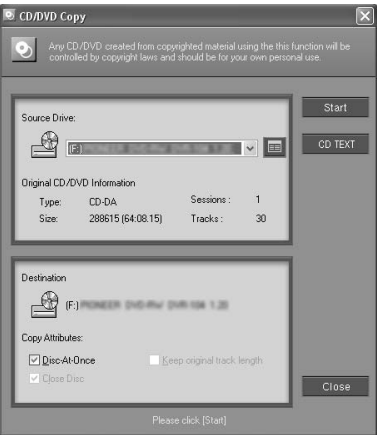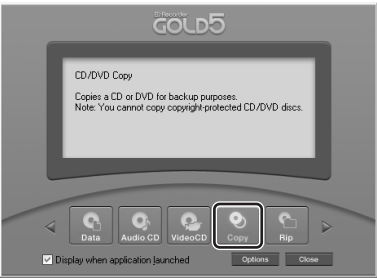

Creating CDs from music files

You can create music CDs from MP3 and/or WAV files on your hard disk.



- 1 Click [Audio CD].
- 2 Select the files that you want write to disc.
- 3 Insert a blank disc into the drive, and click [Start] to write to disc.

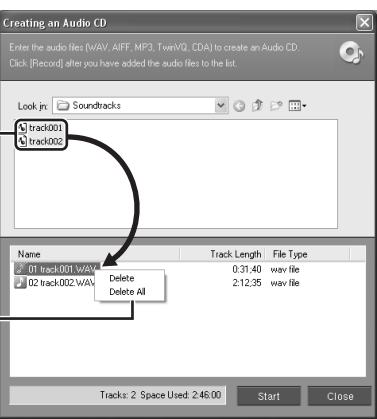

Creating original CDs

Select the music of your choice from several different CDs, and create your own original CD.


- 1 Click [Close].
- 2 On the [Tools] menu, click [Best CD].
- 3 Insert a music CD into the drive.
- 4 Select the tracks that you want to add.
- 5 Follow the instructions on the screen to change the music CD and add other tracks.
- 6 Insert a blank disc into the drive, click [Next], and follow the instructions on the screen to start writing to disc.

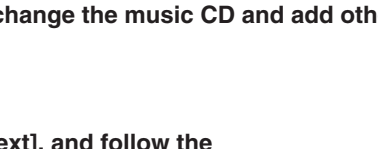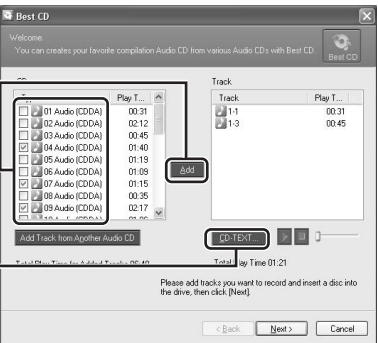

Copying data from your hard disk

You can take data on the hard disk of your computer and write it to disc.

- 1 Click [Data].
- 2 Select the files that you want to write to disc.
- 3 Insert a blank disc into the drive, and click [Start] to write to disc.

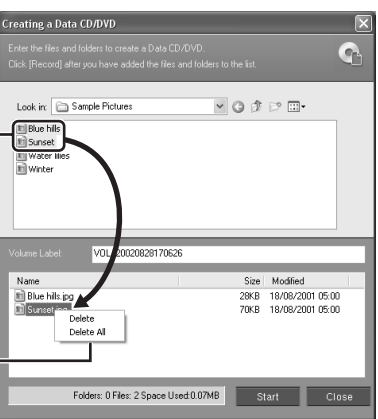

ソフトウェア クイックスタートガイド

Windows

ここでは、目的に合ったソフトウェアを見つけて使い始めていただくために、ソフトウェアの概要と簡単な操作方法を説明しています。詳しい操作方法については、各ソフトウェアのユーザーズガイドやヘルプをご覧ください。

ソフトウェアのインストール方法


- 1 ドライブにソフトウェアディスクをセットします。
- 2 [Language Selection]ダイアログボックスで言語をクリックします。
- 3 インストールするソフトウェアをクリックします。
- 4 [インストール]をクリックします。
- 5 画面の指示に従って、インストールを行います。



インストールが終わったら・・・

手軽に
書き込み
してみよう！

いろいろ書き込み
してみよう！

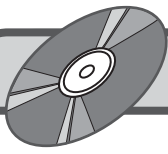

B's CLiP

データをパケット単位で簡単にディスクに書き込めるパケットライティングソフトウェアです。CD-RWディスクをフロッピーディスクやMOのように手軽に扱うことができます。

ご注意


- Windows XPのCD書き込み機能と同時に使用できません。
- 付属のB's CLiPは、CD-R、DVD-R、DVD+Rディスクへの書き込みには対応していません。

未フォーマットのCD-RWに書き込むには

- 1 CD-RWディスクをセットする。
- 2 [B's CLiP]を選択する。



- 3 表示される内容に従ってディスクをフォーマットする。
- 4 書き込みたいファイルを、ドライブのアイコンにドラッグ&ドロップして書き込む。
- 5 タスクトレイの [B's CLiPインジケータ] をクリックし、[取り出し]を選択してディスクを取り出す。

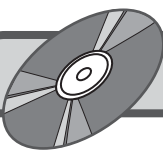

B's Recorder GOLD5

CD-ROMや音楽CD、ビデオCDなどのさまざまなデータ/オーディオディスクを作成したり、ディスクのバックアップを作成できるライティングソフトウェアです。わかりやすいウィザードが操作をナビゲートしてくれます。

B's Recorder GOLD5のおもな機能

- ディスクのコピーや音楽CDの作成など、よく使用する機能をウィザード形式で操作できます。画面に表示される内容に従って操作するだけで、お好みのディスクを作成できます。
- 音楽CDやCD-ROMディスクを、複雑な設定をすることなくブランクディスクにバックアップできます。複数枚のディスクに連続して書き込むこともできます。
- 複数の音楽CDから音楽データを読み込み、「マイベストCD」を作成できます。異なる音楽CDの音量を均一化する機能もあります。
- 音楽CD内の曲を、WAV、MP3*、TwinVQ形式のファイルにしてハードディスクに保存し、ディスクに書き込んでオーディオディスクを作成できます。作成したディスクは、CDプレーヤー、CD-ROMドライブ（Windows Media Playerなどのソフトウェアを使用）、またはMP3プレーヤーで再生できます。
- LPレコードやマイク入力などのアナログ音声を、ディスクやハードディスクにダイレクトに記録できます（ダイレクトカッティング機能）。
- 家庭用のDVDプレーヤーやコンピューターで再生可能なビデオCDが作成できます。
- 画面の表示に従って操作するだけで、大容量ハードディスクも手軽にバックアップできます。起動用フロッピーディスクも作成できます。
- エラーが発生して書き込みに失敗したディスクを、復旧することができます。（状況により復旧できない場合もあります。）

* 付属のB's Recorder GOLD5のMP3ファイル作成機能は、初回起動時より30日間または20曲までの制限付き試用版となっています。（BHA社のホームページでプラグインモジュール（MP3拡張キット）を購入すると、制限を解除できます。）

シリアルナンバーについて

- B's Recorder GOLD5：ER45AA-AACI-3704-3854
- B's CLiP：ES45AA-AAAC-8177-6893

シリアルナンバーは、BHA社のホームページで、ユーザー登録、プラグインモジュールの購入、アップデートのダウンロードなどを行う場合に必要になることがあります。



音楽CDから音楽ファイルを作るには

音楽CDに収録されている曲を、MP3やWAV形式のファイルにしてハードディスクに取り込むことができます（リッピング）。

- 1 [リッピング]をクリックする。



- 2 「CD/DVDの使用許諾について」ダイアログが表示されたら、[はい]をクリックする。
- 3 音楽CDをセットする。
- 4 曲を選択し、[開始]をクリックする。

ファイル形式を変更

曲を選択



- 5 保存場所を指定し、[保存]をクリックして取り込みを開始する。

ファイル名のプリフィックスを入力




ディスクをコピーするには

音楽CDやCD-ROMを、同じ内容でブランクディスクにコピーできます。

- 1 [コピー]をクリックする。




- 2 [はい]をクリックする。

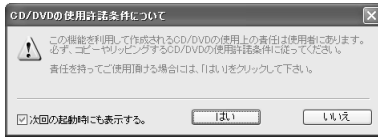

- 3 ディスクをセットする。

- ドライブが1台の場合は、コピー元ディスクをセットします。（あとで、画面の表示に従ってブランクディスクと入れ換えます。）
- ドライブが2台以上の場合は、送り側ドライブにコピー元ディスク、受け側ドライブにブランクディスクをセットします。

- 4 [開始]をクリックし、表示される内容に従って書き込みを開始する。

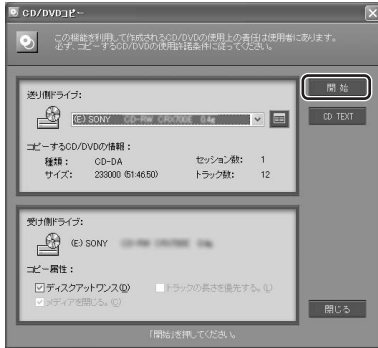

音楽ファイルから音楽CDを作るには

ハードディスクに保存したMP3やWAV形式のファイルを、ディスクに書き込んで音楽CDを作成できます。

- 1 [音楽CD]をクリックする。



- 2 コピーするファイルを選択する。

ドラッグ&ドロップで追加

右クリックのメニューから削除



- 3 ブランクディスクをセットし、[開始]をクリックして書き込みを開始する。



オリジナルCDを作るには

複数のCDからお気に入りの曲を選択し、オリジナルCDを作成できます。

- 1 [閉じる]をクリックする。



- 2 [ツール]—[ベストCD]をクリックする。



- 3 音楽CDをセットする。

- 4 収録曲を登録する。

曲を選択して登録

CD-TEXTを入力



- 5 表示される内容に従って音楽CDを入れ換え、曲を追加する。

- 6 ブランクディスクをセットして[次へ]をクリックし、表示される内容に従って書き込みを開始する。