

MUSICMATCH™ JUKEBOX

**MusicMatch™ Jukebox**–Play or create music CDs, and create music files for your computer. Also comes with MP3 radio features (MusicMatch Radio).

- To add music to the Music Library, point to **Music Library**, and click **Search and Add Track(s) from all Drives** on the **Options** menu. All the files found are added to the library.
- To play MP3, WAV or Windows Media files, double-click any track in the **Music Library**. The track begins playing automatically.
- To create WAV or Windows Media files, insert an audio CD in the DVD+RW/CD-RW drive. In the **Recorder** window, select the tracks that you want to record and click the **Rec** (Record) button.
- To play an audio CD, first place it in the DVD+RW/CD-RW drive, and click the CD tab of the MusicMatch Jukebox player. The CD starts playing automatically.
- To create a music CD, first open a play list. Select the files that you want to write to the CD. Finally, click the **CD-R** button on the **File** tab of the player.
- To use the **MusicMatch Radio**, click the **Radio Stations** tab. Click one of the **Popular Stations** or create a new station.



POWERDVD™

**PowerDVD™**–DVD-video playback software that can play DVD video, audio CDs, and video CDs. The software supports variable speed playback, multiple angles, languages, and subtitles. It also includes a variety of functions such as creating snapshots of your favorite scenes, repeat playback between two points, and digital zoom.

- To play back a DVD-Video disc, simply insert the DVD-Video disc into the DVD drive and click the **Play** button.
- To display the video image full screen, click the **Zoom** button. To return to the original size image, double-click the screen.
- To enlarge the video image, switch to the full screen display, right-click the screen, and click **4x** or **9x** for **Digital Zoom**. You can drag the enlarged image to a new position.
- To select the desired language of the audio stream or subtitles, click the **Next Audio Stream** or **Next Subtitle** button.
- To play a file stored on your hard disk, first click the **Disc Mode** button to switch to the file mode. Next, click the **Menu** button. In the dialog box that appears, select the music/video files that you want to play and add them to your playlist. When you click the **Play** button, the files are played back in the order in which they were added to your playlist.



\* Some functions may not be compatible with video CDs.

neoDVDstandard™

Before installing neoDVDstandard™, the following software must be installed on your computer:

- Windows Media Player 7.1 or later
- DirectX 8.0 or later
- DirectX 8.1, Video Capture Update for DirectX 8.0 <http://www.microsoft.com/directx/homeuser/download/default.asp>

If DirectX 8.0 is installed on your computer, you must also install the "Video Capture Update for DirectX 8.0".

If some of the required software is not installed, a warning appears when you install neoDVDstandard. If this warning appears, exit the installation of neoDVDstandard, download and install all the necessary software from the Microsoft Corporation Web sites indicated below, and then install neoDVDstandard.

- Windows Media Player 7.1 <http://www.microsoft.com/windows/windowsmedia/download/default.asp>

**neoDVDstandard™**–Authoring software that can store video in DVD format on DVD+RW/+R, and hard disks. It supports multiple input formats and simplifies the process of creating DVD videos by allowing you to easily set up chapter and menu screens, and to specify special effects for video files, such as fade in or out.

- On a computer equipped with an i.LINK (IEEE1394) interface, you can use the software to save video shot with or played by a digital video (DV) camera to disc or on a hard disk. After confirming that your DV camera is connected to your PC, start neoDVDstandard and click the **Camcorder Mode** button. Select the output video format, the TV format, and the destination drive, and then click the **Start** button.
- On a computer equipped with analog video capture functions, you can use the software to save video from an analog video camera or player to disc or on your hard disk. The procedure to perform this operation is similar to the one described above for DV cameras, but depending on your video source, you may have to perform certain manual operations.
- To load video files stored on your hard disk with neoDVDstandard, click the **Video File Mode** button. Click the "+" button to select video files displayed on the screen and add them to your video list. The video files are then stored on disc in the sequence indicated in the video list.
- To edit video files loaded from your hard disk, click the **Video** tab. After selecting the video file that you want to edit from the video list, specify effects. To trim a video file, click the "[" and "]" buttons.
- To edit a menu screen, click the **Menu** tab, then specify the background, menu title, chapter titles, the font, and the color of the titles.
- To record a video file on disc, select the output video format, the TV format, and the destination drive, then click the **Make Disc** button. The file is converted to DVD or video CD format, and recorded on the disc.
- To copy a disc created using neoDVDstandard, click the **Disc Copy Mode** button and in the screen that appears, select the type of disc that you want to copy (DVD or video CD), and specify the destination drive.



SONY®

A-B71-100-01(1)

Windows

Software Quick Start Guide

In this guide, you can find an outline of each of the software on the CD, which you can use to start using the software as quickly as possible. For more details on the operation of each of the software contained on the CD, refer to the appropriate user's guide or Help.

Installing Software

- 1 Insert the Software Disc into the drive.
- 2 Click the language of your choice in the Language Selection dialog box.
- 3 Click the software that you want to install in the Application Install dialog box.
- 4 Click Install.
- 5 Follow the instructions on the screen to perform the installation.

CAUTION


If two or more writing applications (or two or more packet writing applications) are installed on the same PC, the two applications may not always function correctly. In such cases, you may need to choose one and un-install the other from your PC. This means you may also lose the CD-R/RW writing functions of the un-installed application in other software that makes use of those functions.

Some Sony VAIO PCs include GigaPocket (video recording application) and DirectCD (packet writing software). You may need to un-install DirectCD if you choose to use B's Clip for packet writing. This means that you will lose the CD writing function of GigaPocket.

B's RECORDER GOLD

**B's Recorder Gold**–Create customized video, audio, and data CDs from various file formats, as well as backup copies of CD/DVDs.

- To create a data, audio, or video CD/DVD, click **Data CD/DVD**, **Audio CD**, or **Video CD**, then follow the instructions on the screen.
- To create backups of CD/DVDs, simply click **Disc Duplicate** and follow the instructions on the screen.
- To back up the hard disk of your computer or partitions of the disk, click **HD Backup** and follow the instructions on the screen.
- When you want to perform a diagnostic scan of a DVD+RW/CD-RW drive that appears to be marginal, click **Drive Diagnostic**.
- When a CD-R/RW or DVD+RW/+R cannot be loaded properly or when an unexpected error occurs during recording, click **Disc Rescue**.
- To record analog sound and convert it to CD-DA format, click **DirectCut** and follow the instructions on screen.
- To capture the contents of individual CD tracks and save them to your hard drive as data track images or audio tracks, click **Capture**.
- An AutoPlay CD is one that contains both a player and audio files. When you set such a CD into your DVD+RW/CD-RW drive, B's Player automatically starts from the disc and begins playing the audio. To create such a CD, click **AutoPlay CD**, then follow the instruction on the screen.

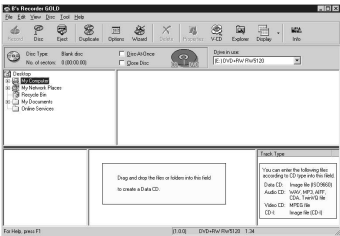


Choose the function or the disc that you want to create, and click the button on the right. Follow the instructions on the screen.

B's CLIP

**B's Clip**–An easy alternative to pre-mastering software, B's Clip makes CD/DVDs as easy to use as floppy disks. Simply drag the files onto the CD/DVDs...

- To format an unformatted disc, insert it in the DVD+RW/CD-RW drive. Right-click the B's Clip program icon in the Windows taskbar, click **Format**, then follow the instructions on the screen.
- To write or delete files on a disc, simply move, copy, or delete them from Windows Explorer.

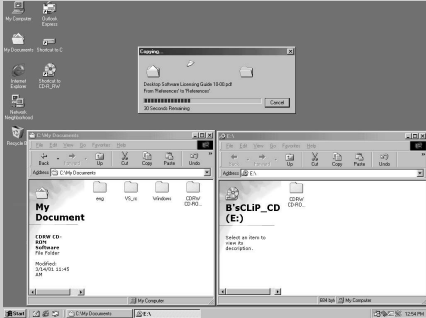


You can easily copy files and folders by dragging them to the CD-RW/DVD+RW disc.

\* B's Clip (included with this drive) does not support writing to CD-R or DVD+R discs, nor can such discs be formatted. Use B's Recorder GOLD to write to CD-R and DVD+R discs.

RETROSPECT® EXPRESS

**Retrospect® Express**–Perform immediate or automatic scheduled backups from any hard disk or desktop volume. Includes data compression and disaster recovery features.

- To back up files, click **Backup**, select a source volume, and click **OK**.
- To restore files, click **Restore**, select a restore type, and click **OK**. Then, select a backup set and click **OK** again.
- To duplicate a desktop volume or folder, click **Duplicate**, select a volume or folder, and then click **OK**.
- To archive files and remove them from your system, click **Archive**, select a source volume, and click **OK**.

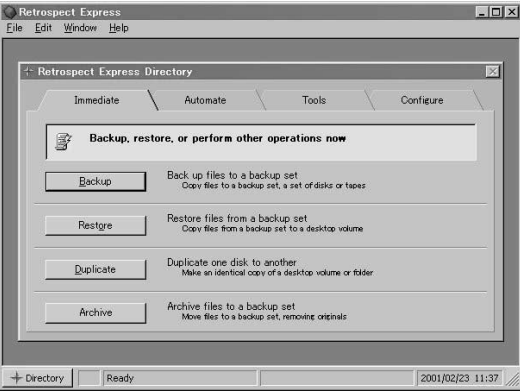

# MusicMatch™ JUKEBOX

**MusicMatch™ Jukebox**– 音楽CDの再生や製作を行ったり、MP3形式などのコンピューター用音楽ファイルを作成することができるデジタル音楽プレイヤー／エンコードソフトウェアです。MP3ラジオの機能もあります（MusicMatch Radio）。

- Music Libraryに音楽（Windows MediaファイルまたはMP3ファイル）を追加するには、[ Option ]メニューをクリックし、[ Music Library ]-[ すべてのドライブからトラックを検索して追加する ]をクリックします。コンピュータのドライブにあるファイルが検出され、Music Libraryに表示されます。
- MP3、WAVまたはWindows Mediaファイルを再生するには、Music Libraryに表示されているトラックをダブルクリックします。
- WAVまたはWindows Mediaファイルを作成するには、DVD+RW/CD-RWドライブに音楽CDをセットします。[ View ]メニューの [ Recorder ]をクリックして Recorder ウィンドウを表示させ、録音するトラックを選択してから[ 録音 ]ボタンをクリックします。
- 音楽CDを再生するには、DVD+RW/CD-RWドライブに音楽CDをセットし、MusicMatch Jukebox Playerの CD タブをクリックします。CDの再生が自動的に開始します。
- 音楽CDを作成するには、まずプレイリストに音楽ファイルを追加します。MusicMatch Jukebox Playerの ファイル タブをクリックしてから[ 開く ]ボタンをクリックし、表示される画面でCDに書き込む音楽ファイルを選択してください。プレイリストを作成してからMusicMatch Jukebox Playerの CD-R ボタンをクリックするとCDの作成を開始できます。
- MusicMatch Radioを使用するには、[ ラジオ放送局 ]タブをクリックします。[ Popular Stations ]に表示されている放送局をクリックしてください。放送局を新たに作成することもできます。



# PowerDVD

**PowerDVD™**– DVD-Video、音楽CD、ビデオCDなどを再生できるDVDビデオ再生ソフトウェアです。可変速再生、マルチアングル／マルチ言語／マルチ字幕などに対応しています。また、気に入ったシーンのスナップショットやA-B点間リビート、デジタルズームなど、多彩な機能を提供します。

- DVD-Videoを再生するには、DVDドライブにDVD-Videoをセットし、[再生]ボタンをクリックします。
- 映像をフルスクリーン表示するには、[フル画面切り替え]ボタンをクリックします。元に戻すには、画面をダブルクリックします。
- 映像を拡大表示するには、フルスクリーン表示に切り替え、画面を右クリックしてから[デジタルズーム画面表示]の[4x]または[9x]を選択します。拡大された映像はマウスでドラッグして表示位置を変更できます。
- 音声や字幕の言語を切り替えるには、[音声チャンネル切り替え]、[字幕切り替え]ボタンをクリックしてから言語を選択します。
- ハードディスクに保存されているファイルを再生するには、まず、[ディスクモードからファイルモードへ]ボタンをクリックしてファイルモードに切り替えてから[メニュー]ボタンをクリックし、表示される画面で再生する音楽／映像ファイルを選択して、プレイリストに再生するファイルを追加してください。[再生]ボタンをクリックすると、プレイリストの順にファイルが再生されます。



\* ビデオCDでは一部使用できない機能があります。

# neoDVDstandard™

neoDVDstandardをインストールする前に、コンピューターに次のソフトウェアがすべてインストールされている必要があります。

- Windows Media Player 7.1以降
- DirectX 8.0以降

また、DirectX 8.0がインストールされている場合、「Video Capture Update for DirectX 8.0」もインストールしておく必要があります。

必要なソフトウェアがインストールされていない場合、neoDVDstandardのインストール中に警告メッセージが表示されます。警告メッセージが表示された場合は、neoDVDstandardのインストールを中止し、マイクロソフト社の次のサイトから必要なソフトウェアをダウンロードしてインストールしてから、neoDVDstandardをインストールしてください。

- Windows Media Player 7.1  
<http://www.microsoft.com/japan/windows/windowsmedia/download/default.asp>
- DirectX 8.1、Video Capture Update for DirectX 8.0  
<http://www.microsoft.com/japan/directx/homeuser/downloads/default.asp>

## 必要なシステム構成

neoDVDstandardを使用するためには、下記のシステムが必要です。

- CPU：Pentium 700MHz以上
- RAM：128Mバイト以上
- ハードディスク空き容量：5Gバイト以上

**neoDVDstandard™**– DVD+RW/+Rやハードディスクに、DVDビデオフォーマットで映像を書き込みできるオーサリングソフトウェアです。多彩な入力フォーマットに対応しており、チャプターやメニュー画面の設定、映像ファイルのフェードイン／フェードアウトなどのエフェクトの指定が簡単に入行るので、手軽にDVDビデオを作成できます。

- i.LINK（IEEE1394）インターフェースを装備しているパソコンでは、DVカメラで撮影している映像や再生している映像を直接ディスクやハードディスクに書き込むことができます。パソコンとDVカメラが接続されていることを確認してneoDVDstandardを起動し、[カムコーダーモード]ボタンをクリックします。出力ビデオ形式とTVに表示するフォーマット、および書き込み先のドライブを選択し、[開始]ボタンをクリックします。
- アナログビデオキャプチャー機能を装備しているパソコンでは、アナログビデオカメラやビデオデッキからの映像を、直接ディスクやハードディスクに書き込むことができます。操作方は上記DVカメラの場合と同様ですが、映像ソース機器での再生や停止の操作を手動で行う必要があります。
- ハードディスクに保存されている映像ファイルをneoDVDstandardに取り込むには、[ビデオファイルモード]ボタンをクリックします。[+]ボタンをクリックして表示される画面で映像ファイルを選択し、ビデオリストに追加してください。映像ファイルがビデオリストの順にチャプターとしてディスクに書き込まれます。
- ハードディスクから取り込んだ映像ファイルを編集するには、[ビデオ]タブをクリックします。編集する映像ファイルをビデオリストで選択してから、エフェクトの指定を行います。また、映像ファイルのトリミングは、[ ]ボタンと[ ]ボタンをクリックして指定できます。
- メニュー画面を編集するには、[メニュー]タブをクリックしてから、バックグラウンド（背景）の選択、メニュータイトル、各チャプターのタイトル、タイトルのフォントや色の指定を行います。
- 映像ファイルをディスクに書き込むには、出力ビデオ形式とTVに表示するフォーマット、および書き込み先のドライブを選択し、[ディスクの作成]ボタンをクリックします。ファイルがDVDまたはビデオCDのフォーマットに変換され、ディスクに書き込まれます。
- neoDVDstandardで作成したディスクをコピーするには、[ディスクコピーモード]ボタンをクリックし、表示された画面でコピーするディスクの種類（DVDまたはビデオCD）を選択してから、書き込み先のドライブなどを指定します。



# SONY

## Windows

# ソフトウェアクイックスタートガイド

このガイドでは、目的に合ったソフトウェアをすぐに見つけて使い始めていただくために、ソフトウェアの概要を掲載しています。各ソフトウェアの操作方法については、各ソフトウェアのユーザーズガイドやヘルプをご覧ください。

## ソフトウェアのインストール方法

- ドライブにソフトウェアディスクをセットします。インストールウィザードが起動します。
- [ Language Selection ]ダイアログボックスで言語をクリックします。
- [ アプリケーションインストール ]ダイアログボックスでインストールするソフトウェアをクリックします。
- [ インストール ]をクリックします。
- 画面の指示に従って、インストールを行います。

### ご注意

コンピューターに、複数のライターソフトウェア（または複数のバケットライトソフトウェア）がインストールされていると、それらのソフトウェアが正常に動作しない場合があります。この場合は、どちらか一方のライターソフトウェア（またはバケットライトソフトウェア）をアンインストールすることをおすすめします。ただし、別のソフトウェアで、アンインストールするソフトウェアに依存する機能を使用できることがありますので、ご注意ください。

たとえば、ソニーVAIOシリーズのコンピュータには、Giga Pocket（テレビ録画ソフトウェア）と、DirectCD（バケットライトソフトウェア）がプレインストールされているものがあります。この場合、バケットライトソフトウェアとしてB's Clipを使用するには、DirectCDをアンインストールする必要がありますが、DirectCDをアンインストールすると、Giga Pocketの、録画したビデオをCD-R/RWに書き込む機能が使用できなくなります。

# B's RECORDER GOLD

**B's Recorder Gold**– さまざまなファイル形式のビデオCDや音楽CD、データCD/DVDをカスタマイズして製作したり、CD/DVDのバックアップを行うための、CD-R/RWおよびDVD+RW/+R用ライティングソフトウェアです。

- データCD/DVDや音楽CD、ビデオCDを作成するには、[ データCD/DVD ]ボタン、[ 音楽CD ]ボタンまたは[ ビデオCD ]ボタンをクリックし、表示される画面の指示に従います。
- CD/DVDのバックアップを作成するには、[ CD/DVDバックアップ ]ボタンをクリックし、表示される画面の指示に従います。
- コンピューターのハードディスクやディスクのパーティションをバックアップするには、[ HDDバックアップ ]ボタンをクリックし、表示される画面の指示に従います。
- 動作が不安定なDVD+RW/CD-RWドライブを診断するときは、[ ドライブの検査 ]ボタンをクリックし、表示される画面で自己診断を開始します。
- CD-R/RWやDVD+RW/+Rが正しくロードされなかったり、書き込み中に予期しないエラーが発生するときは、[ メディアの検査 ]ボタンをクリックします。表示される画面でメディアを検査したり復旧できます。
- アナログサウンドを録音してCD-DA形式に変換するには、[ ダイレクトカット ]ボタンをクリックし、表示される画面で操作を行います。
- CDの内容をトラック単位でキャプチャーし、イメージデータまたはWAVEファイルとしてハードディスクに保存するには、[ WAVE作成 ]ボタンをクリックします。
- 音楽ファイルをCDに書き込むときは、AutoPlayCDとして作成すると、CDをDVD+RW/CD-RWドライブにセットするだけで音楽の再生が開始されます。AutoPlayCDを作成するには、[ AutoPlayCD作成 ]ボタンをクリックし、画面の指示に従います。



作成するディスクの種類や使用する機能を示すボタンをクリックし、あとは画面の指示に従うだけの簡単操作です。

# B's CLIP

**B's Clip**– B's Recorder Goldなどのプレマスタリングソフトウェアと同時に使用し、データをバケット単位で簡単にすばやくCD/DVDに書き込める、CD-RWおよびDVD+RW用バケットライティングソフトウェアです。

- フォーマットされていないディスクをフォーマットするには、DVD+RW/CD-RWドライブにディスクを挿入します。タスクバーにあるB's Clipアイコンを右クリックしてから[ フォーマット ]をクリックし、画面の指示に従います。
- ファイルの書き込みや削除は、フロッピーディスクを扱うときと同じように行えます。エクスプローラなどで、ファイルをCD/DVDに直接コピーしたりファイルを削除することができます。
- ディスクを取り出すには、タスクバーにあるB's Clipアイコンを右クリックしてから[ 取り出し ]をクリックします。



\* 付属の「B's Clip」は、CD-RおよびDVD+Rディスクへの書き込みには対応していません。CD-RまたはDVD+Rディスクをフォーマットしても書き込みはできませんので、ご注意ください。

CD-RまたはDVD+Rディスクへの書き込みを行うときは、「B's Recorder Gold」を使用してください。



ファイルやフォルダをCD-RW/DVD+RWにドラッグして簡単にコピーできます。

# RETROSPECT® EXPRESS

**Retrospect® Express**– ハードディスクやボリュームのバックアップを行うためのバックアップソフトウェアです。設定したスケジュールに従って自動的にバックアップを行うこともできます。データ圧縮および障害回復機能も含まれています。

- ファイルをバックアップするには[ バックアップ ]ボタンをクリックします。表示される画面でバックアップするボリュームを選択し、[ OK ]ボタンをクリックします。
- 作成したバックアップセットを元にファイルを復元するには、[ 復元 ]ボタンをクリックし、画面の指示に従います。
- ドライブやフォルダの複製を作成するには、[ 複製 ]ボタンをクリックします。表示される画面の指示に従い、複製するドライブまたはフォルダと、複製先のドライブまたはフォルダを選択してください。
- ファイルをアーカイブするには、[ アーカイブ ]ボタンをクリックし、表示される画面で元ボリュームを選択して[ OK ]ボタンをクリックします。アーカイブされたファイルは削除されます。

