

Memory Stick Reader/Writer

Operating Instructions_____ **US**

Mode d'emploi_____ **FR**

MSAC-US1



English

Before operating the unit, please read this instructions thoroughly, and retain it for future reference.

For the customers in U.S.A.

If you have any questions about this product, you may call: Sony Customer Information Center 1-800-222-SONY(7669) or write to: Sony Customer Information Center 1 Sony Drive, Mail Drop #T1-11, Park Ridge, NJ 07656

Declaration of Conformity

Trade Name : SONY
Model : MSAC-US1
Responsible Party : Sony Electronics Inc.
Address : 1 Sony Drive, Park Ridge, NJ, 07656 USA
Telephone number : 201-930-6972

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The specified USB cable (supplied) must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

2-US

For the customers in Germany

Directive: EMC Directive 89/336/EEC.

92/31/EEC

This equipment complies with the EMC regulations when used under the following circumstances:

- Residential area
- Business district
- Light-industry district


(This equipment complies with the EMC standard regulations EN55022 Class B.)

You can connect this unit to a personal computer so that data in a “Memory Stick” can be transferred to the personal computer at high speed. You can also use a “Memory Stick” as a removable disk.

This manual describes how to connect this unit, how to install the driver, how to use and customer service.

■Notes

- We recommend backing up valuable data.
- The contents of data cannot be compensated if recording or playing back is not made due to malfunctions such as a “Memory Stick” error.
- Do not touch the terminals on the “Memory Stick” with your fingers or metal objects.
- To prevent recording or deletion of data on “Memory Stick”s set the “Memory Stick” write-protect switch to “Lock”.
- The communications state is sometimes not restored even if your personal computer is restored from a suspend state or sleep state.
- Do not optimize “Memory Stick”s.
- Do not compress the data on “Memory Stick”s.
- Operation is not guaranteed when two or more USB devices are connected to a single personal computer.
- Make sure that the specified USB cable is connected to the USB jack on the personal computer. Operations are not guaranteed when the USB cable is connected to other jacks such as on the keyboard or the hub.

“Memory Stick” and  are trademarks of Sony Corporation.

Microsoft® and Windows® are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
Macintosh, iMac and Mac OS are trademarks of Apple Computer, Inc.
MMX® and Pentium® are registered trademarks or trademarks of Intel Corporation.

All other company names and product names mentioned here may be the trademarks or registered trademarks of their respective companies.

About Formatting “Memory Stick”s

When “Memory Stick”s are shipped from the factory, they are already formatted to a special standard format. When you format “Memory Stick”s, we recommend formatting them on the device you are using so that they are compatible when used on “Memory Stick”-compatible device.

Cautions When Formatting “Memory Stick”s on a Personal Computer

Pay attention to the following points when formatting “Memory Stick”s on the personal computer, for example, that you are using.

- Operation of “Memory Stick”s formatted on Windows machines is not guaranteed on “Memory Stick”-compatible device. To use a “Memory Stick” that has been formatted on a Windows machine, the “Memory Stick” must be reformatted on “Memory Stick”-compatible device. Note, that, in this case all data stored on the “Memory Stick” will be lost.
- “Memory Stick” formatted on a Macintosh sometimes cannot be used on “Memory Stick”-compatible device. Do not format “Memory Stick” on the Macintosh.

Table of Contents

Parts identification	6
----------------------------	---

Before You Begin

Checking the accessories	7
--------------------------------	---


How to use

For Windows	8
For Macintosh	12
For users of SONY Digital Handycam and Cyber-shot	14

Additional Information

Troubleshooting	15
Specifications	16
Recommended connections	17

Parts identification

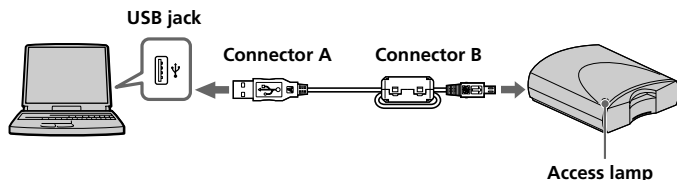

• Connector A

Insert the connector (A) on the specified USB cable into the USB jack on the personal computer (into any USB jack on the personal computer if the personal computer has more than one USB jack).

• Connector B

Insert the connector (B) on the specified USB cable into the USB jack on this unit firmly.


■/Notes

- The access lamp lights when you access data on "Memory Stick".
When the access lamp is lit, never remove the "Memory Stick", turn off the power of your personal computer or pull out the USB cable. Doing so might damage the data in "Memory Stick."
- When disconnecting this unit from the personal computer, do not hold it by its cable; hold it by its connector.


Checking the accessories

Make sure that you have all the accessories below. If some of the accessories are missing, contact the store or purchase of a Sony dealer or local authorized Sony service facility.

- **Memory Stick Reader/Writer (1)**



- **Specified USB cable (1)**



- **CD-ROM (SPVD-003 USB driver) (1)
(for Windows/Macintosh)**

- **Manual (1)**

- **WARRANTY CARD (1)**

For Windows

First, you must install the USB driver software in the package on the personal computer you are using. Follow the procedure below to install the USB driver software.

Installation

The screens shown in the following procedure are examples. Actual screens differ according to the OS.

– For Windows Me –

You can use this unit without using the USB driver (supplied).
Follow the procedure below.

Insert “Memory Stick” into the unit, and connect the USB jack on the personal computer to the USB jack on this unit using the specified USB cable (supplied).

The “Memory Stick” driver software installation starts automatically.

– For Windows 98/98SE/2000 –

If you are using Windows 2000, you must log in using administrator’s privileges.

- 1 Turn on your machine to start up Windows, and insert the USB driver software CD-ROM (supplied) into the CD-ROM drive.**
- 2 Open “My Computer.”**
- 3 Open the CD-ROM drive (Sony USB Driver (ex: [E:])).**



- 4 Start up SETUP.EXE.**



5 Click “Next.”


This starts installation of the USB driver.

Follow the on-screen instructions until the end to install the USB driver software.



6 After the USB driver software has been installed, reboot your personal computer.

Follow the on-screen instructions to reboot your personal computer.



7 After your personal computer has rebooted, remove the CD-ROM.

8 Insert “Memory Stick” (optional) into the unit, and connect the USB jack on the personal computer to the USB jack on this unit using the specified USB cable (supplied).

The “Memory Stick” driver software installation starts automatically.

9 The icon of the newly identified driver “Removable disk” (ex: [E:]) is displayed in the “My Computer” window, and installation of the “Memory Stick” driver ends.

* Note that addition of the removable disk takes a while.



Note

When you install the “Memory Stick” driver software, a message which is not described in this manual may appear on the screen. If this happens, follow the on-screen instruction.

For Windows (continued)

How to use


When you turn on your personal computer, make sure that the “Memory Stick” is not in this unit.

If the “Memory Stick” is in this unit, you may not be able to start up your personal computer.

In this case, reboot your personal computer after removing the “Memory Stick” from this unit.

Insert “Memory Stick” into the unit, and open “Explorer” or “My Computer.”

Removable disk is newly set up so that you can access data on “Memory Stick.”

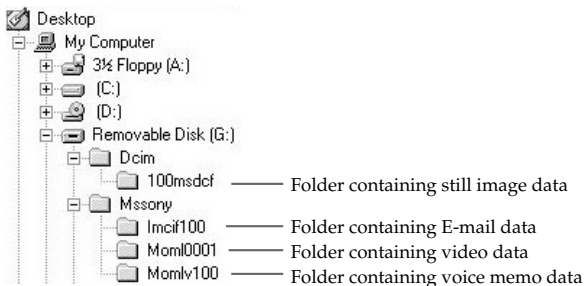

The screen shown above is an example. Actual screen may differ according to the OS.

This screen shows a window opened by Explorer.

Removing “Memory Stick” or disconnect this unit

When the access lamp is lit, never remove the “Memory Stick”, turn off the power of your personal computer or disconnect the connector. Doing so might damage the data in “Memory Stick.”

– For Windows 98/98SE –

- 1** Close softwares such as Explorer running for this unit.
- 2** Make sure that the access lamp is not lit, then remove the “Memory Stick” or disconnect this unit.

– For Windows 2000/Me –

- 1** Close softwares such as Explorer running for this unit.
- 2** Click the “Disconnect or remove hardware” icon in the task bar.



- 3** Click “Stop Sony Peripheral-Drive (ex: [E:])” or “Stop USB Disk-Drive (ex: [F:])”.


<Windows 2000>

Stop Sony Peripheral - Drive(E:)



<Windows Me>

Stop USB Disk - Drive(F:)



- 4** Click “OK”, then remove the “Memory Stick” or disconnect this unit.

<Windows 2000>



<Windows Me>



Note

If you remove the “Memory Stick” or disconnect this unit improperly, the warning messages appear on the screen.

In this case, the “Memory Stick” data may be corrupted.

Follow the procedures at all times when you remove the “Memory Stick” or disconnect this unit.

For Macintosh

First, you must install the USB driver software in the package on the personal computer you are using. Follow the procedure below to install the USB driver software.

Installation

- 1** Turn on your Macintosh to start up the Mac OS.
- 2** Insert the USB driver software CD-ROM (supplied) into the CD-ROM drive.
- 3** Connect the USB jack on the personal computer to the USB jack on this unit using the specified USB cable (supplied).
- 4** Double-click the CD-ROM drive icon.
- 5** Double-click the hard disk icon containing the System Folder to open the hard disk window.
- 6** Drag the following two Mac driver files in the window opened in step 4 onto the System Folder in the window opened in step 5. (Drag and Drop):
 - Sony Peripheral USB Driver
 - Sony Peripheral USB Shim
- 7** The message "Place files in Extensions Folder?" is displayed. Select "OK."
- 8** Restart your Macintosh.

How to use

Insert a "Memory Stick" after your Macintosh has started up.

When you insert "Memory Stick" into the unit, Memory Stick icon appears on the desktop.

You can access data on "Memory Stick."

* Note that displaying the Memory Stick icon takes a while.

Removing "Memory Stick"

- 1** Close softwares running for this unit.
- 2** Make sure that the access lamp is not lit.
- 3** Move the Memory Stick icon from the hard disk to Trash or select [Eject] from [Special] menu.
- 4** Remove the "Memory Stick."


Note

You may not be able to copy the whole of folder on "Memory Stick" at once to the hard disk on the Macintosh. In this case, open the folder first and copy the contents in the folder.

For users of SONY Digital Handycam and Cyber-shot

You can view or capture data on “Memory Stick” on a personal computer by connecting this unit to a personal computer using the specified USB cable (supplied) on which the USB driver software has been installed. For details on how to use SONY Digital Handycam or Cyber-shot, refer to the manual for your Digital Handycam or Cyber-shot.

“Memory Stick” data made on a SONY Digital Handycam or Cyber-shot is stored to the following file names in the following folders.

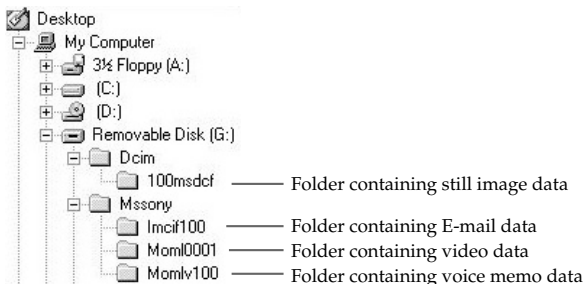

Actual screens differ according to the OS.

Recording mode	Folder name	Folder name	File name (Example)
Still picture	Dcim	100msdcf	Dsc00001.jpg
Moving picture	Mssony	Moml0001	Mov00001.mpg
VOICE	Mssony	Momlv100	Dsc00001.mpg
E-MAIL	Mssony	Imcif100	Dsc00001.jpg

Note

The folder names and file names vary according to the equipment you are using. Refer to the user's manual for the equipment you are using.

Troubleshooting

Symptom	Cause/Solution
You cannot install the USB driver software.	<ul style="list-style-type: none">• The specified USB cable is not correctly connected. → Connect correctly. (page 17)• Device other than this unit is connected to the USB jack on the personal computer. → Disconnect or turn off the USB devices except this unit.• “Memory Stick” is not in the unit. → Insert “Memory Stick” into the unit.
You cannot start up your computer. (Windows)	<ul style="list-style-type: none">• You have started up your computer with a “Memory Stick” inserted in this unit. → Remove the “Memory Stick” from the unit, and then start up your computer again.
Memory Stick icon does not appear in Explorer or My Computer. (Windows)	<ul style="list-style-type: none">• The connection between the personal computer and the unit is not correct. → Connect the cable correctly. (page 17)• “Memory Stick” is not in the unit. → Insert “Memory Stick” into the unit.
Memory Stick icon does not appear. (Macintosh)	<ul style="list-style-type: none">• The connection between the personal computer and the unit is not correct. → Connect the cable correctly. (page 17)• “Memory Stick” is not in the unit. → Insert “Memory Stick” into the unit.

Specifications

Memory Stick Reader/Writer

Interface: USB interface

Baud rate: Max. 12 Mbps

Required system

Recommended Windows environment

OS: Microsoft® Windows® 98, Windows® 98SE, Windows® Me, Windows® 2000 Professional (standard installation)

Operation after upgrading from the above OSs is not guaranteed.

CPU: MMX® Pentium® 200 MHz or more

* The USB jack must be installed as standard.

Recommended Macintosh environment

OS: Mac OS 8.5.1/8.6/9.0 (standard installation)

“iBook”, “Power Mac G4”, “CD-ROM drive slot-loading type iMac” pre-installed with Mac OS 8.6 before they leave the factory must be upgraded to Mac OS 9.0


* The USB jack must be installed as standard.

Operating voltage	5 V DC (supplied from USB cable)
Current consumption	Action Max. 100 mA
	Standby Max. 500 μ A
External dimensions	Approx. 68 × 25 × 89 mm (Approx. 2 3/4 × 1 × 3 5/8 in.) (w/h/d)
Mass	Approx. 70 g
Operating environment	0 °C to 40 °C (32 °F to 104 °F) (condensation not allowed)


Recommended connections

Operation when connected as follows has been confirmed.

- 1 When this unit is connected to the USB jack on the personal computer, and nothing is connected to the other USB jack:



- 2 When a USB keyboard is connected to the USB jack on a personal computer on which a USB keyboard and mouse are equipped as standard, and this unit is connected to the other USB jack by the specified USB cable:

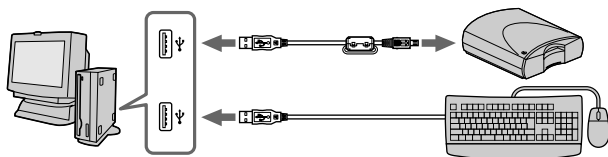

Notes

- Operation is not guaranteed when two or more USB devices are connected to a single personal computer, depending on the USB devices.
- Make sure that the specified USB cable is connected to the USB jack on the personal computer. Operations are not guaranteed when the USB cable is connected to other jacks such as on the keyboard or the hub.
- Operation on all personal computers in the recommended environment is not guaranteed.

Français


Avant la mise en service de cet appareil, prière de lire attentivement ce mode d'emploi que l'on conservera pour toute référence future.

Cet appareil peut être raccordé à un ordinateur pour transférer les données d'un "Memory Stick" rapidement sur un ordinateur. Le "Memory Stick" pourra aussi être utilisé comme disque amovible.

Ce manuel indique comment raccorder cet appareil, comment installer le pilote et comment utiliser le service clientèle.

■ Remarques

- Il est conseillé de sauvegarder toutes données jugées importantes.
- Le contenu des données ne peut pas être compensé si l'enregistrement ou la lecture n'a pas pu être effectué en raison d'un mauvais fonctionnement, par exemple une erreur de "Memory Stick".
- Ne pas toucher le connecteur du "Memory Stick" avec les doigts ou des objets métalliques.
- Pour éviter l'enregistrement ou l'effacement de données du "Memory Stick", mettez le taquet d'interdiction d'écriture sur la position de verrouillage "Lock".
- Les communications ne se rétablissent pas toujours après le rétablissement d'une mise en veille ou en attente de l'ordinateur.
- Ne pas optimiser les "Memory Stick".
- Ne pas compresser les données des "Memory Stick".
- Le fonctionnement de cet appareil n'est pas garanti si deux appareils USB ou plus sont raccordés à l'ordinateur.
- Le câble USB spécifié doit être raccordé directement à l'ordinateur par la prise USB. Le fonctionnement de l'appareil n'est pas garanti si le câble USB est raccordé au clavier ou à une boîte de connexion.

"Memory Stick" et  sont des marques de fabrique de Sony Corporation.

Microsoft® et Windows® sont des marques déposées ou des marques de fabrique de Microsoft Corporation, enregistrées aux Etats-Unis et/ou dans d'autres pays.

Macintosh, iMac et Mac OS sont des marques de fabrique de Apple Computer, Inc.

MMX® et Pentium® sont des marques déposées ou des marques de fabrique de Intel Corporation.

Tous les autres noms de sociétés et de produits mentionnés dans ce manuel sont soit des marques de fabrique soit des marques déposées de leurs détenteurs respectifs.

Table des matières

Identification des éléments	4
-----------------------------------	---

Informations préliminaires

Vérification des accessoires	5
------------------------------------	---

Fonctionnement

Windows	6
Macintosh	10
Pour les utilisateurs des SONY Digital Handycam et Cyber-shot	12

Informations complémentaires

En cas de problème	13
Spécifications	14
Raccordements conseillés	15

A propos du formatage des "Memory Stick"


Les "Memory Stick" sont formatés en usine dans un format spécial. Lorsque vous formatez des "Memory Stick", il est conseillé de les formater sur l'appareil utilisé pour qu'ils soient compatibles.

Précautions lors du formatage de "Memory Stick" sur un ordinateur

Veuillez prendre les précautions suivantes lors du formatage de "Memory Stick" sur un ordinateur.

- Le fonctionnement des "Memory Stick" formatés sur des machines Windows n'est pas garanti sur un appareil compatible avec les "Memory Stick". Pour utiliser un "Memory Stick" qui a été formaté sur une machine Windows, le "Memory Stick" devra être reformaté sur l'appareil compatible avec les "Memory Stick". Notez que dans ce cas, toutes les données du "Memory Stick" seront perdues.
- Un "Memory Stick" formaté sur un Macintosh ne peut pas toujours être utilisé sur un appareil compatible avec les "Memory Stick". Ne pas formater de "Memory Stick" sur un Macintosh.

Identification des éléments

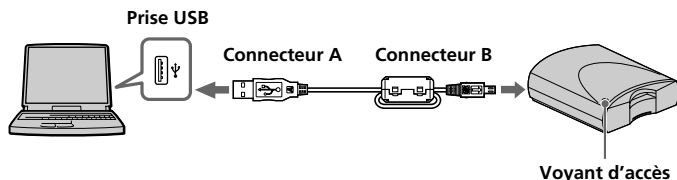

• Connecteur A

Insérez le connecteur (A) du câble USB spécifié dans la prise USB de l'ordinateur (n'importe quelle prise USB d'un ordinateur pourvu de plusieurs prises USB).

• Connecteur B

Insérez le connecteur (B) du câble USB spécifié dans la prise USB de cet appareil.


■ Remarques

- Le voyant d'accès s'allume lorsque vous accédez au "Memory Stick". Lorsque le voyant d'accès est allumé, ne jamais retirer le "Memory Stick", éteindre l'ordinateur ni débrancher le câble USB. Les données du "Memory Stick" risquent sinon d'être détruites.
- Lorsque vous débranchez l'appareil de l'ordinateur, ne tirez pas sur le câble mais sur le connecteur.


Vérification des accessoires

Assurez-vous d'être en possession de tous les accessoires indiqués ci-dessous. Si certains manquent, contactez votre revendeur Sony ou un service après-vente agréé Sony.

- **Lecteur/enregistreur de Memory Stick (1)**



- **Câble USB spécifié (1)**



- **CD-ROM (pilote USB SPVD-003) (1)**
(pour Windows/Macintosh)

- **Mode d'emploi (1)**

- **CARTE DE GARANTIE (1)**

Windows

Vous devez tout d'abord installer le pilote USB fourni sur l'ordinateur que vous utilisez. Pour ce faire suivez les instructions ci-dessous.

Installation

Les écrans mentionnés dans les procédures suivantes servent à titre d'exemple. Selon le système d'exploitation utilisé, ils peuvent être différents.

– Windows Me –

Il est inutile d'installer le pilote USB (fourni) pour utiliser l'appareil. Procédez de la façon suivante.

Insérez un "Memory Stick" dans l'appareil et raccordez la prise USB de l'ordinateur à la prise USB de cet appareil à l'aide du câble USB spécifié (fourni).

L'installation du pilote de "Memory Stick" démarre automatiquement.

– Windows 98/98SE/2000 –

Si vous utilisez Windows 2000, vous devez avoir l'autorisation de l'administrateur pour vous connecter.

1 Allumez la machine pour démarrer Windows et insérez le CD-ROM contenant le pilote USB (fourni) dans le lecteur de CD-ROM.

2 Ouvrez "My Computer".

3 Ouvrez le lecteur de CD-ROM (Pilote USB Sony (ex: [E:])).




4 Lancez SETUP.EXE.



5 Cliquez sur "Next".


L'installation du pilote USB commence.

Suivez les instructions qui apparaissent à l'écran jusqu'à la fin pour installer le logiciel du pilote USB.

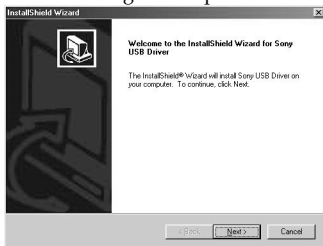

6 Lorsque le logiciel du pilote USB a été installé, redémarrez votre ordinateur.

Suivez les instructions qui apparaissent à l'écran pour redémarrer l'ordinateur.



7 Lorsque l'ordinateur a redémarré, enlevez le CD-ROM.

8 Insérez le "Memory Stick" (en option) dans l'appareil et reliez la prise USB de l'ordinateur à la prise USB de cet appareil à l'aide du câble USB spécifié (fourni).

L'installation du pilote de "Memory Stick" démarre automatiquement.

9 L'icône du pilote dernièrement identifié en tant que "Removable disk" (ex: [E:]) apparaît dans la fenêtre "My Computer", et l'installation du pilote de "Memory Stick" est terminée.

* L'ajout du disque amovible prend un certain temps.



Remarque

Lors de l'installation du pilote "Memory Stick", un message non mentionné dans ce manuel peut apparaître à l'écran. Le cas échéant, suivez les instructions qui apparaissent à l'écran.

Windows (suite)

Emploi


Lorsque vous allumez votre ordinateur, assurez-vous que le “Memory Stick” n’est pas dans cet appareil.

S’il s’y trouve, vous ne pourrez peut-être pas démarrer l’ordinateur.

Dans ce cas, redémarrez l’ordinateur après avoir retiré le “Memory Stick” de cet appareil.

Insérez un “Memory Stick” dans l’appareil et ouvrez “Explorer” ou “My Computer”.

Maintenant que le disque amovible a été installé, vous pouvez accéder aux données du “Memory Stick”.

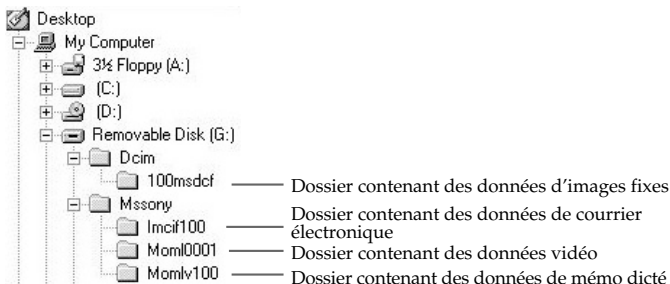

L’écran ci-dessus est un exemple. Sur votre système l’écran peut être différent. Cet écran montre une fenêtre ouverte par l’explorateur.

Retrait du "Memory Stick" ou déconnexion de l'appareil

Ne pas sortir le "Memory Stick", éteindre l'ordinateur ni débrancher le connecteur lorsque le voyant d'accès est allumé. Les données du "Memory Stick" peuvent sinon être détruites.

– Windows 98/98SE –

- 1 Fermez les logiciels ouverts, par exemple l'explorateur.
- 2 Assurez-vous que le voyant d'accès n'est pas allumé, puis retirez le "Memory Stick" ou déconnectez l'appareil.

– Windows 2000/Me –

- 1 Fermez les logiciels ouverts pour cet appareil, par exemple l'explorateur.
- 2 Cliquez sur l'icône "Disconnect ou remove hardware" dans la barre de tâches.



- 3 Cliquez sur "Stop Sony Peripheral-Drive (ex: [E:])" ou "Stop USB Disk-Drive (ex: [F:])".

<Windows 2000>

Stop Sony Peripheral - Drive(E:)



5:46 PM

<Windows Me>

Stop USB Disk - Drive(F:)



12:00 PM

- 4 Cliquez sur "OK" puis retirez le "Memory Stick" ou débranchez l'appareil.

<Windows 2000>



<Windows Me>



Remarque

Si vous retirez le "Memory Stick" ou ne débranchez pas correctement l'appareil, des messages d'avertissement apparaîtront à l'écran.

Effectuez toutes ces opérations chaque fois que vous retirez le "Memory Stick" ou débranchez l'appareil.

Macintosh

Vous devez tout d'abord installer le pilote USB fourni sur l'ordinateur que vous utilisez. Pour ce faire suivez les instructions ci-dessous.

Installation

- 1** Allumez le Macintosh pour démarrer Mac OS.
- 2** Insérez le CD-ROM (fourni) contenant le pilote USB dans le lecteur de CD-ROM.
- 3** Reliez la prise USB de l'ordinateur à la prise USB de cet appareil à l'aide du câble USB spécifié (fourni).
- 4** Double-cliquez sur l'icône du lecteur de CD-ROM.
- 5** Double-cliquez sur l'icône du disque dur contenant le dossier Système pour ouvrir la fenêtre du disque dur.
- 6** Tirez les deux dossiers pilotes Mac suivants dans la fenêtre ouverte à l'étape 4 pour les déposer dans le dossier Système ouvert à l'étape 5. (tirer-déposer):
 - Sony Peripheral USB Driver
 - Sony Peripheral USB Shim
- 7** Le message "Place files in Extensions Folder? ("Mettre les fichiers dans le dossier d'extensions")" apparaît. Sélectionnez "OK".
- 8** Redémarrez le Macintosh.

Fonctionnement

Insérez un "Memory Stick" après le démarrage du Macintosh.

Lorsque vous insérez le "Memory Stick" dans l'appareil, l'icône de Memory Stick apparaît sur le bureau.

Vous pouvez alors accéder aux données du "Memory Stick".

* L'affichage de l'icône du Memory Stick prend un certain temps.

Retrait du "Memory Stick"

- 1** Fermez les logiciels ouverts pour cet appareil.
- 2** Assurez-vous que le voyant d'accès n'est pas allumé.
- 3** Déposez l'icône de Memory Stick du disque dur dans la corbeille ou sélectionnez [Eject] dans le menu [Special].
- 4** Retirez le "Memory Stick".


Remarque

Vous ne pourrez peut-être pas copier tous les dossiers du "Memory Stick" en une seule fois sur le disque dur du Macintosh. Dans ce cas, ouvrez d'abord le dossier et copiez-en le contenu.

Pour les utilisateurs des SONY Digital Handycam et Cyber-shot

Vous pouvez voir ou saisir les données d'un "Memory Stick" sur un ordinateur en reliant cet appareil à votre ordinateur avec le câble USB spécifié (fourni) après avoir installé le pilote USB sur l'ordinateur. Pour le détail sur l'emploi d'un SONY Digital Handycam ou Cyber-shot, reportez-vous à leurs modes d'emploi.

Les données de "Memory Stick" obtenues avec un SONY Digital Handycam ou Cyber-shot sont stockées dans les fichiers et dossiers suivants.

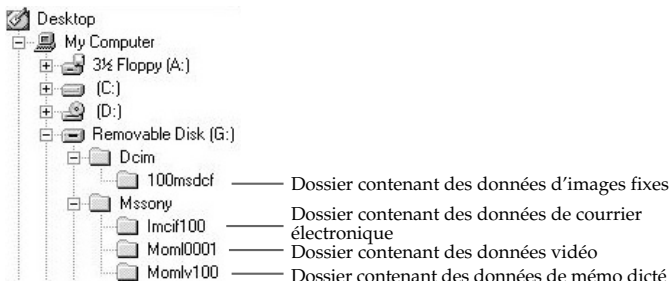

Selon le système d'exploitation utilisé les écrans peuvent être différents.

Mode d'enregistrement	Nom de dossier	Nom de dossier	Nom de fichier (Exemple)
Image fixe	Dcim	100msdcf	Dsc00001.jpg
Image animée	Mssony	Momlv100	Mov00001.mpg
VOICE	Mssony	Momlv100	Dsc00001.mpg
E-MAIL	Mssony	Imcif100	Dsc00001.jpg

■ Remarque

Les noms de dossiers et de fichiers peuvent varier selon l'appareil utilisé. Reportez-vous au mode d'emploi de l'appareil utilisé.

En cas de problème

Symptôme	Cause/Solution
Vous ne pouvez pas installer le pilote USB.	<ul style="list-style-type: none">• Le câble USB spécifié n'est pas correctement raccordé. → Raccordez-le correctement. (page 15)• Un périphérique autre que cet appareil est raccordé à la prise USB de l'ordinateur. → Débranchez les périphériques USB sauf cet appareil.• Le "Memory Stick" n'est pas dans l'appareil. → Insérez le "Memory Stick" dans l'appareil.
Impossible de démarrer l'ordinateur. (Windows)	<ul style="list-style-type: none">• Un "Memory Stick" était inséré dans cet appareil lorsque vous avez démarré l'ordinateur. → Retirez le "Memory Stick" de l'appareil et redémarrez l'ordinateur.
L'icône du Memory Stick n'apparaît pas dans l'explorateur ou le poste de travail. (Windows)	<ul style="list-style-type: none">• La connexion entre l'ordinateur et l'appareil n'est pas correcte. → Raccordez le câble correctement. (page 15)• Le "Memory Stick" n'est pas dans l'appareil. → Insérez le "Memory Stick" dans l'appareil.
L'icône du Memory Stick n'apparaît pas. (Macintosh)	<ul style="list-style-type: none">• La connexion entre l'ordinateur et l'appareil n'est pas correcte. → Raccordez le câble correctement. (page 15)• Le "Memory Stick" n'est pas dans l'appareil. → Insérez le "Memory Stick" dans l'appareil.

Spécifications

Lecteur/Enregistreur de Memory Stick

Interface: Interface USB

Vitesse de transfert: 12 Mbps max.

Configuration système requise

Environnement Windows conseillé

Système d'exploitation: Microsoft® Windows® 98, Windows® 98SE, Windows® Me, Windows® 2000 Professionnel (installation standard)

Le fonctionnement après une mise à jour de ces systèmes d'exploitation n'est pas garanti.

Processeur: MMX® Pentium® 200 MHz ou supérieur

* La prise USB doit être installée en standard.

Environnement Macintosh conseillé

Système d'exploitation: Mac OS 8.5.1/8.6/9.0 (installation standard)

Les "iBook", "Power Mac G4", "iMac avec lecteur de CD-ROM à fente", avec Mac OS 8.6 préinstallé doivent être optimisés à Mac OS 9.0.

* La prise USB doit être installée en standard.

Tension de fonctionnement	CC 5 V (fournis par la câble USB)
---------------------------	-----------------------------------

Consommation	Fonctionnement Max. 100 mA
--------------	----------------------------

	Veille Max. 500 µA
--	--------------------

Dimensions extérieures	Approx. 68 × 25 × 89 mm
------------------------	-------------------------


Poids	Approx. 70 g
-------	--------------

Environnement de fonctionnement	Approx. 0 °C à 40 °C (sans condensation)
---------------------------------	--


Raccordements conseillés

Le fonctionnement est garanti lorsque l'appareil est raccordé de la façon suivante.

- 1** Lorsque cet appareil est raccordé à la prise USB de l'ordinateur si rien n'est raccordé à l'autre prise USB:

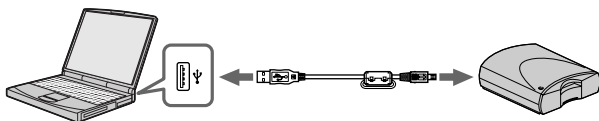

- 2** Lorsqu'un clavier USB est raccordé à la prise USB d'un ordinateur pourvu en standard d'un clavier et d'une souris USB si cet appareil est raccordé à l'autre prise USB par le câble USB spécifié:

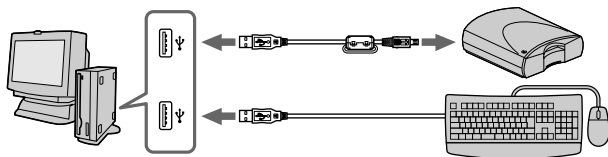

Remarques

- Le fonctionnement n'est pas garanti lorsque deux périphériques USB ou plus sont raccordés à l'ordinateur (avec certains périphériques USB).
- Assurez-vous que le câble USB spécifié est bien raccordé à la prise USB de l'ordinateur. Le fonctionnement n'est pas garanti si le câble USB est raccordé à une autre prise, par exemple celle du clavier ou d'une bête de connexion.
- Le fonctionnement sur tous les ordinateurs dans l'environnement conseillé n'est pas garanti.

Sony Electronics Inc.:

Customer Support —

If you have any questions/comments related to this product,
please visit our Customer Support website at
<http://www.sony.com/service>
(If you do not have internet access, please call 1-800-22 SONY.)

<http://www.world.sony.com/>