



**How to affix the ferrite core on the computer connecting cable**

The camcorder is supplied with the ferrite cores. Use the largest ferrite core to one end of the computer connecting cable (not supplied) as shown in the diagrams below. You must affix the ferrite cores to comply with Part 15 of the FCC Rules.

**(1)** Wind the cable round the ferrite core once.

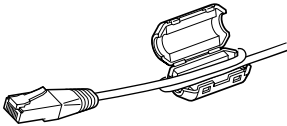

**(2)** Fasten the catch.

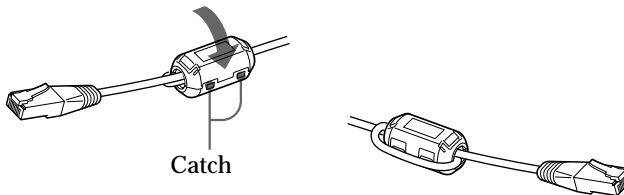**Notes**

- Attach the ferrite cores as close to the plug as possible.
- Connect the plug which the ferrite core is attached to the 10 BASE-T connecting jack of the connecting cord installed to the camcorder.