

**CDU948S**

# ***CD-R Drive Unit***

---

*User's Guide*

## Owner's Record

The model and serial numbers are located on the bottom of the drive. Record these numbers in the spaces provided below. Refer to them whenever you call upon your sales representative regarding this product.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

## Safety Regulations

### WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

### CAUTION

As the laser beam in this CDU948S is harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

The use of optical instruments with this product will increase eye hazard.

The use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation.

**DANGER**  
INVISIBLE LASER RADIATION WHEN OPEN.  
AVOID DIRECT EXPOSURE TO BEAM.  
**VORSICHT**  
UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG  
GEÖFFNET.  
NICHT DEM STRAHL AUSSETZEN.

This label is located on the drive unit's internal chassis.

Dieses Etikett befindet sich auf dem inneren Chassis des Laufwerkes.

**DANGER** INVISIBLE LASER RADIATION WHEN OPEN.  
AVOID DIRECT EXPOSURE TO BEAM.  
**DANGER** RADIATIONS INVISIBLES DU LASER EN CAS D'OUVERTURE.  
EVITER TOUTE EXPOSITION DIRECTE AU FAISCEAU.  
**VORSICHT** UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET.  
NICHT DEM STRAHL AUSSETZEN.  
**ADVARSEL** USYNLIG LASERSTRÅLING VED ÅBNING.  
UNNGÅ UDSÆTTELSE FOR STRÅLING.  
**ADVARSEL** USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES.  
UNNGÅ EKSPONERING FOR STRÅLEN.  
**VARNING** OSYNLIG LASERSTRÅLING NÅR DENNA DEL ÄR ÖPPNAD.  
STRÅLEN ÄR FARLIG.  
**VAROI** NÄKYMÄTÖN AVATTAESSA OLET ALTITIN LASERSÄTEILYLLE.  
ÄLÄ KATSO SÄTEESÄN.

This label is located on the bottom of the drive unit enclosure.

Dieses Etikett befindet sich am Boden des Laufwerksgehäuses.

이 기기는 가정용으로 전자파 적합등록을 한 기기로서  
주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

This unit uses CD-R discs with the following mark.



This unit uses CD-ROM discs with the following mark.



When you use this unit as a CD player, use compact discs with the following mark.



**WARNING — For the customers in U.S.A.**

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

**Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CLASS 1  
LASER PRODUCT  
LASER KLASSE 1  
PRODUKT

This CD-R drive unit is classified as a CLASS 1 LASER PRODUCT.

The CLASS 1 LASER PRODUCT label is located at the bottom of the enclosure.

Bei diesem CD-R-Laufwerk Serie handelt es sich um ein Laser-Produkt der Klasse 1. Dieses Etikett befindet sich am Boden des Laufwerksgehäuses.

# Contents

<b><i>Introduction</i></b>	<b><i>5</i></b>
<hr/>	
<b><i>Location and Function of Parts and Controls</i></b>	<b><i>6</i></b>
Front Panel .....	6
Rear Panel .....	7
<hr/>	
<b><i>Precautions</i></b>	<b><i>8</i></b>
<hr/>	
<b><i>Example of System Setup</i></b>	<b><i>9</i></b>
<hr/>	
<b><i>Installing the Drive Unit into the Computer</i></b>	<b><i>10</i></b>
Getting Started .....	10
Setting the Jumpers .....	10
Opening the Computer .....	12
Connecting the Drive .....	13
Mounting the Drive .....	14
Host Adapter Installation .....	16
Closing the Computer .....	17
<hr/>	
<b><i>Installing the Software Driver</i></b>	<b><i>18</i></b>
<hr/>	
<b><i>Using Discs and Caddies</i></b>	<b><i>19</i></b>
Loading a Caddy with a Disc .....	19
Storing Discs and Caddies .....	21
Care of Discs .....	21
<hr/>	
<b><i>Operating the Drive</i></b>	<b><i>22</i></b>
Starting Up .....	22
Ejecting a Caddy .....	23
<hr/>	
<b><i>Specifications</i></b>	<b><i>25</i></b>
<hr/>	

# Introduction

The CDU948S is a drive unit for CD-R discs, which stores a maximum of 650 Mbytes of digital data.

The drive unit has the following features:


- Reads and writes data in each CD-ROM, CD-ROM XA and Multi-Session standard formats.
- Reads standard CD-DA ("Red Book") encoded discs, and reads and writes CD-R discs conforming to "Orange Book Part II."
- Supports the following write modes: Disc at once, Session at once, Track at once, Variable packet, Fixed packet and Multisession.
- Outputs the audio as 16-bit digital data over the SCSI interface.
- Supports read and write operation at each standard speed, double speed and quadruple speed, and read-only operation at eightfold speed.
- Supports real time error correction at all speeds.
- 5 1/4 inch half-height drive form factor.
- SCSI bus interface embedded. (Based on SCSI-2)
- 2 MB buffer memory.
- Capable of audio CD playback provided with audio line output and headphones jack.
- Fast access time assures high-speed reading and writing operations.
- CD caddy for disc protection.
- Power loading and power eject.
- Emergency eject function which allows the caddy to be ejected manually.
- Capable of real time layered error correction.
- Employs a casing with an airtight frame.

## ■ Software requirement

Install the appropriate application software before using this unit.

# Location and Function of Parts and Controls

## Front Panel

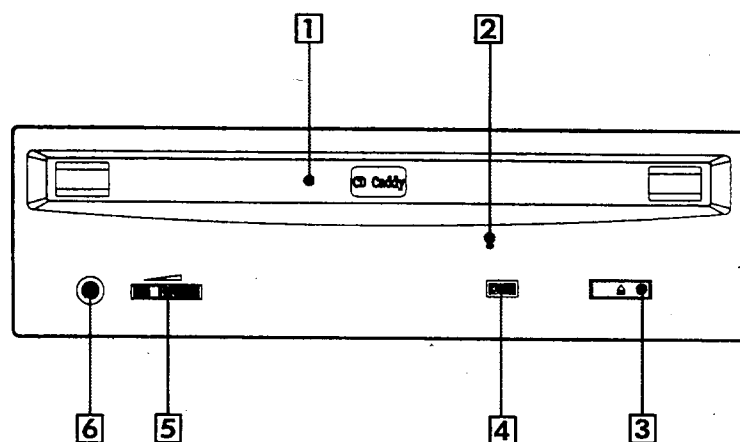

**1 Caddy insertion slot**

Accepts a caddy loaded with a CD-ROM or CD-R disc.

**2 Emergency eject hole**

Insert a fine rod into this hole to eject a caddy manually in emergencies.

**3 Eject button**

Ejects the caddy from the drive unit.

**4 Busy indicator**

This indicator shows the unit's status in various phases of operation.

\* Seek, read and write: Flashes amber

\* Error: Lights up amber and stays lit

When the power is turned on, the indicator lights up green.


**5 Volume control**

Controls the volume of the analog audio output provided via a headphones jack.

**6 Headphones jack**

Provides two channel analog audio output.

## Rear Panel

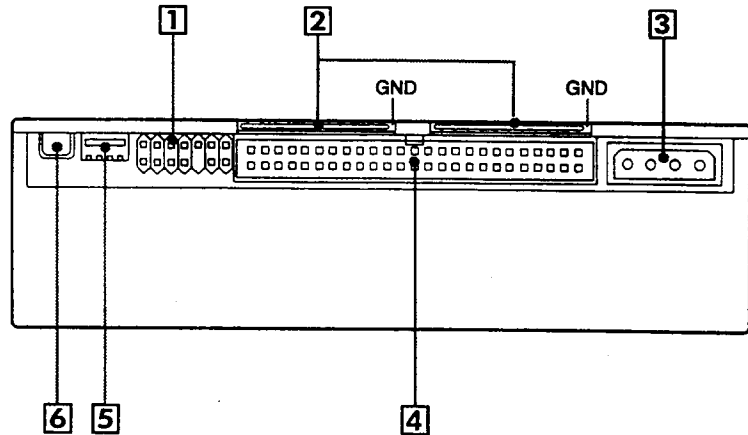

**1 Jumper block for SCSI bus**  
Specify assignment of the SCSI bus.

**2 Terminators**  
The terminator resistors are inserted into the sockets. Remove the resistors when the SCSI bus is to be terminated externally.

**Note:**

Some models are shipped without terminators.

When installing the terminators, orient them so that the GND pin (the end marked with a dot) is toward the right side of the socket.

**3 Power-in connector**  
Connect to the power supply of the host computer.

**4 SCSI bus interface connector**  
Connect to a SCSI host adapter using a connecting cable.

**5 Audio output connector**  
Outputs analog audio signals.  
See page 14 for detail.

**6 Frame ground tab**  
Connect to one of the host computer's ground cables when the drive frame is not in direct contact with the computer.

# Precautions

## ■ Installation

- Avoid placing the drive in a location subject to:
  - high humidity
  - high temperature
  - excessive dust
  - mechanical vibration
  - direct sunlight.

We recommend to use the drive in a horizontal position. Do not use it in a tilted position.

## ■ Operation

- Do not move the drive during operation. This may cause it to malfunction during reading or writing.
- Avoid exposing the drive to sudden changes in temperature as condensation may form on the lens inside the drive as a result. Should the surrounding temperature suddenly rise while the drive is on, wait at least one hour before you turn off the power. Operating the drive immediately after a sudden increase in temperature, may result in a malfunction during reading or writing.

## ■ Transportation

- Keep the original packing materials for future transport of the drive.
- Remove the caddy before moving the drive and, if you take the drive out of the computer, repack the drive as you received it.



# Example of System Setup

To use the CD-R device, the following components are required:

- Computer (IBM-PC/AT\* compatible)
- SCSI-Host adapter
- SCSI-Interface cable (50 to 50 pin flat cable)
- Software (Device driver, utilities)

---

\* IBM-PC/AT is a registered trademark of International Business Machines Corporation.

# Installing the Drive Unit into the Computer

As you go through this section, you may wish to refer to your computer's manual for a more detailed description of how to install internal drives.


## Getting Started

- Prepare the necessary parts and tools that have not been supplied:
  - Screwdriver
  - four screws 3 mm in diameter (Screws must not extend more than 4.0 mm into the side panels or the bottom plate.)
  - two mounting rails if your computer has mounting tracks.
- **Unplug the computer and disconnect the cables attached to the back for your own safety. Do not turn on the power of the computer before completing the entire installation process.**

## Setting the Jumpers

Set the jumpers on the rear panel of the drive unit in accordance with the configuration of your computer system.

The jumpers are preset, as illustrated below, at the factory.

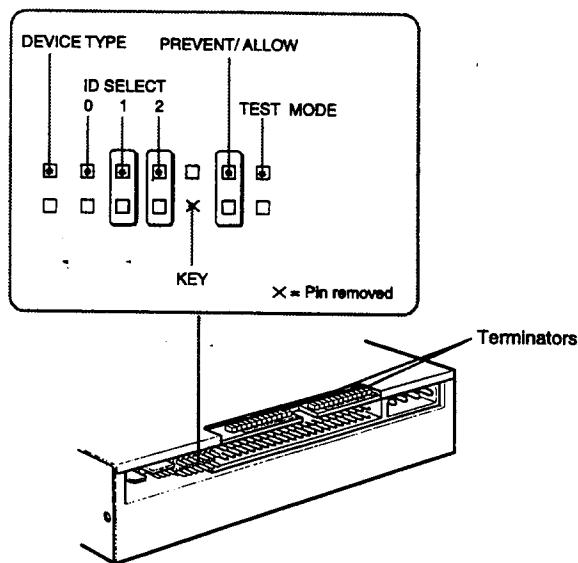

Remove the jumper to set to OFF, and install the jumper to set to ON. The recommended jumper is AMP\* Shunts (14227-1), JAE\*\* Short Socket (PS-2SH4-1) or equivalent.

The following table shows the function of each jumper.

Jumper	Function																																								
DEVICE TYPE	The setting of this jumper determines whether the SCSI device type code in the inquiry data is WO or CD-ROM. ON: WORM <b>OFF</b> CD-ROM																																								
ID SELECT	Assign the drive unit's ID number by setting these jumpers to ON or OFF. Do not assign the same number as one used for other SCSI device. <table><tr><th>ID number</th><th colspan="3">Jumper settings</th></tr><tr><td></td><th>0</th><th>1</th><th>2</th></tr><tr><td>0</td><td>OFF</td><td>OFF</td><td>OFF</td></tr><tr><td>1</td><td>ON</td><td>OFF</td><td>OFF</td></tr><tr><td>2</td><td>OFF</td><td>ON</td><td>OFF</td></tr><tr><td>3</td><td>ON</td><td>ON</td><td>OFF</td></tr><tr><td>4</td><td>OFF</td><td>OFF</td><td>ON</td></tr><tr><td>5</td><td>ON</td><td>OFF</td><td>ON</td></tr><tr><td>6</td><td>OFF</td><td>ON</td><td>ON</td></tr><tr><td>7</td><td>ON</td><td>ON</td><td>ON</td></tr></table>	ID number	Jumper settings				0	1	2	0	OFF	OFF	OFF	1	ON	OFF	OFF	2	OFF	ON	OFF	3	ON	ON	OFF	4	OFF	OFF	ON	5	ON	OFF	ON	6	OFF	ON	ON	7	ON	ON	ON
ID number	Jumper settings																																								
	0	1	2																																						
0	OFF	OFF	OFF																																						
1	ON	OFF	OFF																																						
2	OFF	ON	OFF																																						
3	ON	ON	OFF																																						
4	OFF	OFF	ON																																						
5	ON	OFF	ON																																						
6	OFF	ON	ON																																						
7	ON	ON	ON																																						
KEY	Used to prevent the SCSI bus interface connector from being plugged in upside down.																																								
PREVENT/ALLOW	<b>ON</b> Allows insert and removal of a CD caddy with the eject button and the eject command. OFF: Prevents insert and removal of a CD caddy with the eject button or an eject command.																																								
TEST MODE	ON: Enables test mode. <b>OFF</b> Enables normal operation.																																								

 Factory settings

#### Notes:


- The upper row of pins (without KEY position) is ground.
- ID SELECT, PREVENT/ALLOW, and TEST MODE are recognized when the power supply is turned on or SCSI bus is reset.
- TEST MODE is used exclusively for the factory testing. Do not set TEST MODE to ON. Doing so may cause an unexpected result.

\* AMP is a registered trademark of AMP, Inc.

\*\* JAE is a registered trademark of Japan Aviation Electronics Industry, Ltd.


## Opening the Computer

- 1 If your computer has its rear side covered by a plastic panel attached with plastic hook pad, pull it off.
- 2 Remove the cover mounting screws.
- 3 Remove the cover of the computer.

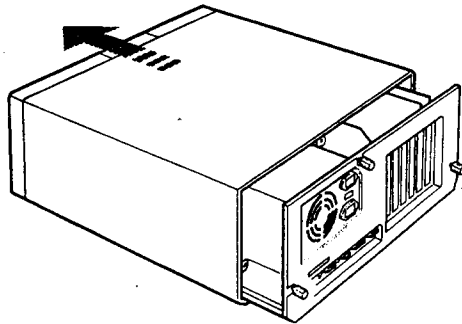


## Connecting the Drive

Attach one end of the flat cable (SCSI cable) to the connector on the rear of the CD-R drive.

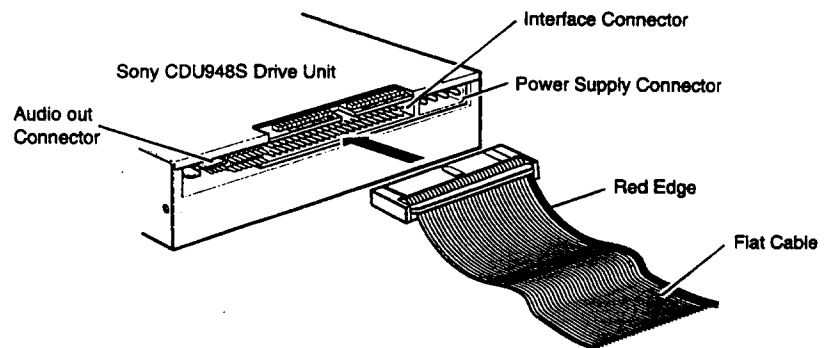

### Note:


The red edge of the flat cable should be positioned next to the power supply connector. It is important that this cable be connected firmly and correctly.

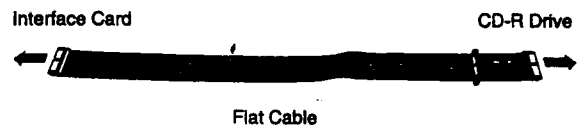

## ■ Audio output connector


The audio output connector recommended is Molex 5159PBT contacts and 5051-04 housing or 5103 PBT contacts and 5102-04 housing.

### Pin assignment

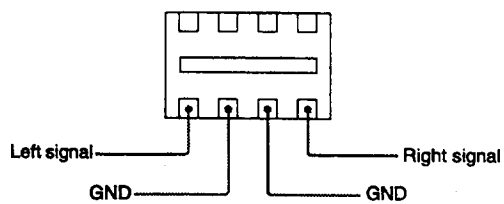

## Mounting the Drive


- 1 Route the flat cable through the drive bay from the front of the computer and insert the CD-R drive into the bay as shown. Secure the CD-R drive to the frame by using the prepared screws.

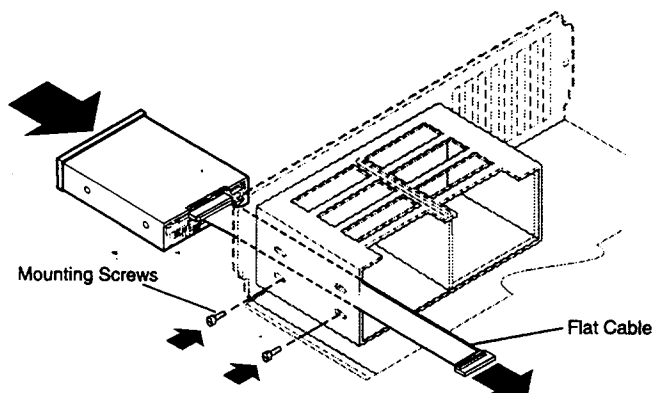

### Note:

If you cannot secure the CD-R drive to the drive bay, you may need to install slide rails (not included) to the CD-R drive. Refer to your computer user's guide for additional information.

- 2 Locate an available power supply cable inside your computer and connect it to the power supply connector on the rear of the CD-R drive as shown.

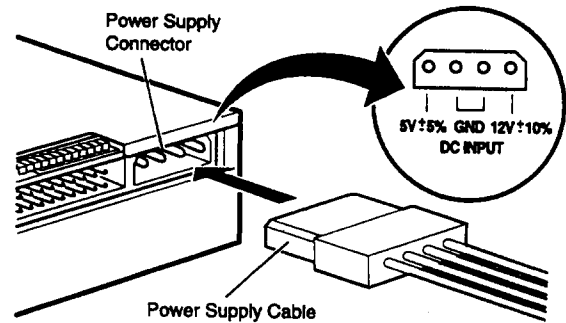


**Caution:**

Improper connection may damage the drive and void the warranty.

■ **Frame ground**


When normally installed, the drive unit is not in contact with the host computer directly and should be grounded. Connect the frame ground tab to one of the host computer's ground cables.

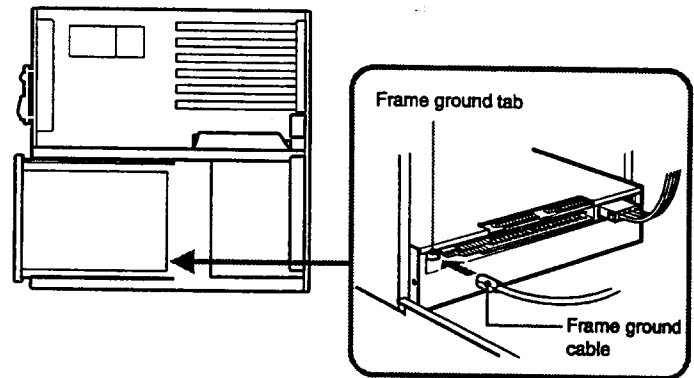

The frame ground cable recommended has a AMP 1-480435-0 housing and 170203-2 or 60711-1 contacts.


## Host Adapter Installation

Connect the free end of the flat cable to the existing SCSI host adapter card and install the host adapter in the computer by inserting it securely in a system expansion slot. Refer to the operating instructions of the host adapter for complete instructions on its installation and the assignment of its switches.

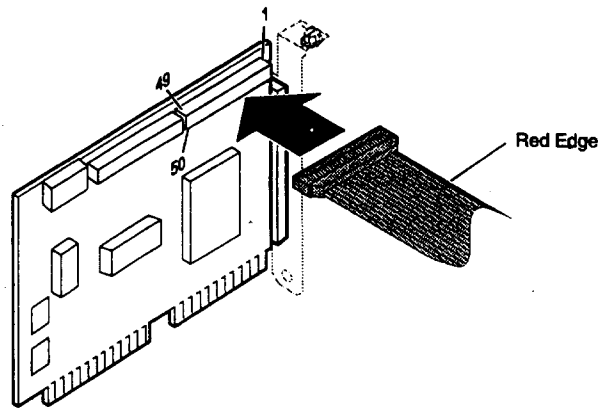

### Notes:

- The red edge of the flat cable must be closest to pin number 1 of the interface card connector.
- The following illustration is a sample system configuration of the Sony CDU948S CD-R drive installation with a SCSI card.

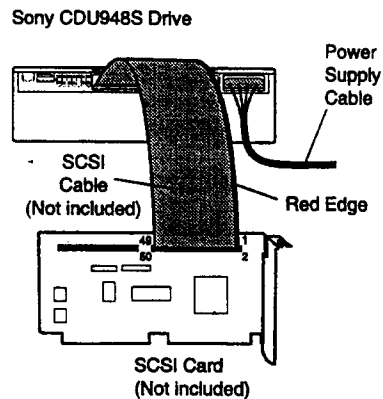




#### Termination

- If the CD-R drive is connected at the end of the SCSI chain, keep the drive terminator mounted at the drive.
- If the CD-R drive isn't the last device at the SCSI bus, remove the termination from the CD-R drive and make sure that the last device at the SCSI bus has a proper termination installed.
- Be aware that the SCSI bus needs to be terminated at each end of the SCSI bus cable.

---

## Closing the Computer

- 1 Replace the cover on the computer, being careful to reinstall all screws that were removed.

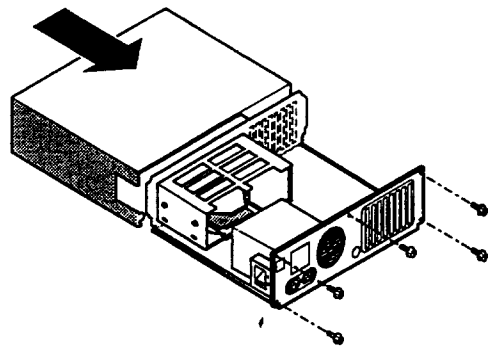

- 2 Replace the AC power cord and turn on your computer.

# Installing the Software Driver

MSCDEX and the device driver for an ordinary SCSI CD-ROM drive can be used when using the CDU948S as a SCSI CD-ROM drive.


Use the device driver for a CD-R drive when using the CDU948S as a recordable drive.

Be sure to install the device driver before operating the drive. Refer to the manual supplied with the host adapter for instructions.

# Using Discs and Caddies


## Loading a Caddy with a Disc

- 1 To open the caddy lid, press the tabs on the both sides of the caddy at the end opposite to the shutter.

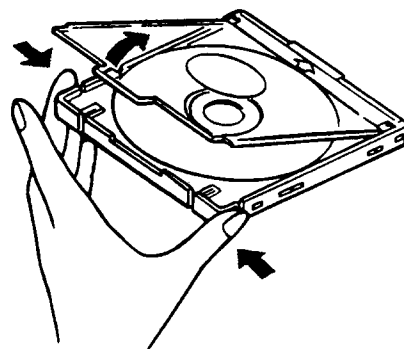


- 2 Set a disc, with its label upward, in the caddy.

Be careful not to touch the recording surface when setting a CD-R disc in the caddy. Data cannot be recorded if the recording surface is contaminated.

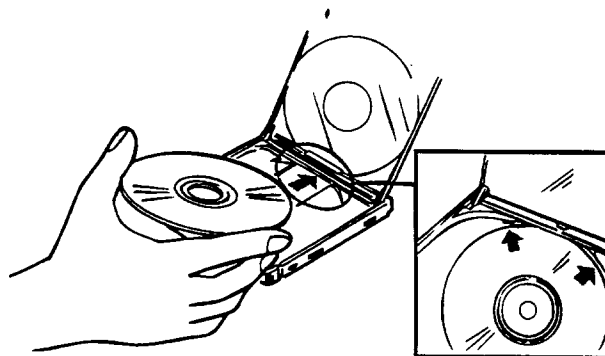


- 3** Close the lid firmly.

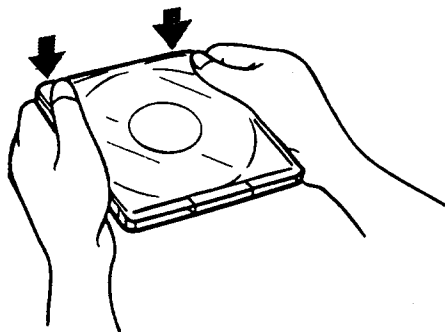

**Important:**

- Do not drop the disc or the caddy.
- The caddy is designed so that its shutter automatically opens when it is inserted into the drive unit. Do not open the shutter manually and touch the disc.
- Data cannot be recorded if the recording surface is contaminated.

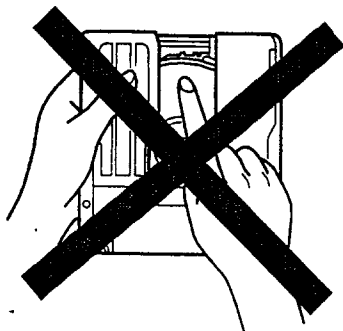

- The caddy is precisely adjusted at the factory. Do not disassemble it.

---

## Storing Discs and Caddies

- Remove the caddy from the drive unit before moving the drive.
- Do not store the disc and caddy in a location subject to:
  - high humidity
  - high temperature
  - excessive dust
  - direct sunlight

---

## Care of Discs

- Hold the disc by its edge. Do not touch the surface.
- Wipe the CD-ROM disc with the optional CD cleaner to clean it.
- Do not wipe a CD-R disc with a cleaner before recording data. To avoid scratching the recording surface, blow away dust using an air blower.

# Operating the Drive


Make sure that the application software is installed in the host computer before using the drive.

## Starting Up

- 1 Turn on the power supply.
- 2 Insert the caddy into the drive slot with the disc's label facing up, and push it partially into the drive until the automatic loading mechanism pulls the caddy in.

### Important:

When inserting the caddy, let the automatic loading mechanism pull it into the drive by itself. Do not hold onto the caddy or attempt to overpower the loading mechanism.

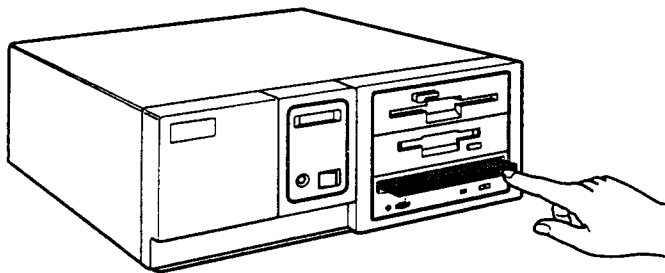

The drive begins reading the Table of Contents (TOC) data. The busy indicator lights amber while the TOC data is being read. When the busy indicator changes to green, the drive is ready to receive commands, and data may be retrieved from the disc. After loading the CD-R disc, it takes a moment for the drive to become ready while the Program Memory Area is read. From here on, follow the instructions provided with the application software.

### Notes:


- The drive unit does not allow a caddy to be inserted if:
  - PREVENT/ALLOW of the jumper block is set to OFF.
  - the host computer is set to the PREVENT mode by the software.
- The busy indicator keeps on lighting amber if:
  - the disc is not properly inserted.
  - a malfunction occurs.

In such a case, eject the caddy and re-insert it properly. If the busy indicator remains lit amber, consult your dealer or qualified service personnel. The busy indicator also lights amber during audio play. However, this is not a malfunction.

---

## Ejecting a Caddy

- 1 Turn on the power supply.
- 2 Press the eject button on the drive unit.

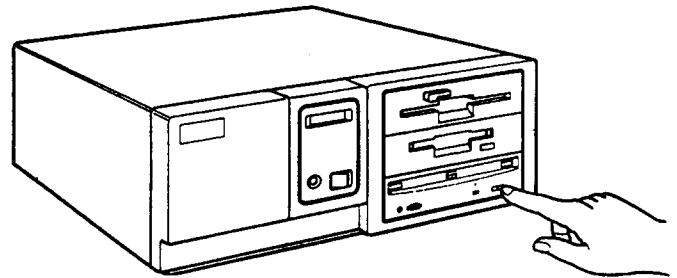


### Notes:

- The eject button does not work if it is disabled by the software.
- To eject a caddy when the eject button is disabled by the software:
  - Make sure that the jumper block's PREVENT/ALLOW is set to ON.
  - Turn the power of your computer off, and turn it on again. (Or reset the SCSI bus using a software command.)

## ■ Ejecting a caddy manually in an emergency

In the event of electrical or mechanical failure of the drive unit, a manual emergency eject is provided to allow removal of the caddy from the drive unit.

- 1 Turn off the power of your computer.
- 2 Insert a pointed object, such as a paper clip, into the emergency eject hole, and push with hand. (Typical required force is 59N {6.0kg})

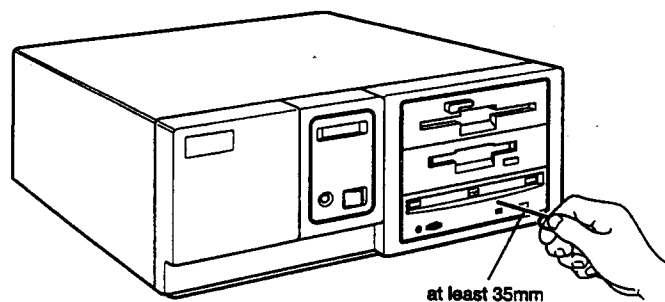

After removing the caddy from the drive unit, consult your dealer or qualified service personnel.



# Specifications

## ■ General

Host interface	SCSI-2, single ended, 50 pin
Read Function	
Acceptable discs:	CD-ROM mode-1 data discs CD-ROM XA discs CD-Audio discs Audio-combined CD-ROM discs CD-I discs CD-I Ready Discs Photo CD (Single and Multi session) Video CD CD-R discs (Conforming to "Orange Book Part II")
Write Function	
Applied Format:	CD-ROM Mode-1 CD-ROM XA CD-Audio Audio-combined CD-ROM CD-I Video CD CD-Text
Writing Method:	Disc at once Session at once Track at once Variable packet writing (Packet size : max. 2 Mbyte) Fixed packet writing (Packet size : max. 2 Mbyte) Multi-session
Cache memory(R/W)	2 Mbyte
Disc diameter:	12 cm(8cm Read Only)
Rotational speed	
Innermost track:	600 min <sup>-1</sup> (600 rpm) at CLV = 1.4 m/s (1x) 1200 min <sup>-1</sup> (1200 rpm) (2x) 2400 min <sup>-1</sup> (2400 rpm) (4x) 4240 min <sup>-1</sup> (4240 rpm) (8x)
Outermost track:	200 min <sup>-1</sup> (200 rpm) at CLV = 1.2 m/s (1x) 400 min <sup>-1</sup> (400 rpm) (2x) 800 min <sup>-1</sup> (800 rpm) (4x) 1600 min <sup>-1</sup> (1600 rpm) (8x)

## ■ Drive performance

Data transfer rate	
Sustained rate:	150 kbytes/s (1x) 300 kbytes/s (2x) 600 kbytes/s (4x) 1200 kbytes/s (8x)
SCSI Interface	
Burst rate:	5 Mbytes/s (asynchronous) 10 Mbytes/s (synchronous)
Access time	
Full stroke:	500 ms (typical/1x) 450 ms (typical/2x) 400 ms (typical/4x) 350 ms (typical/8x)
Average:	350 ms (typical/1x) 300 ms (typical/2x) 250 ms (typical/4x) 220 ms (typical/8x)

## ■ Reliability

Read error rate (includes retry, normal disc)	
L-EC on:	1 Block / $10^{12}$ bits (double)
L-EC off:	1 Block / $10^9$ bits (double)

## ■ Audio

Output level	
Line out:	0.7 V at 47 k $\Omega$
Head phone:	0.55 V at 32 $\Omega$

## ■ Environmental conditions

Temperature and humidity	
Operating	5 °C to 45 °C (41 °F to 113 °F) (no condensation)
Transportation	-40 °C to 60 °C (-40 °F to 140 °F), 10 % to 90 % (within 72 hours, no condensation)
Storage	-30 °C to 50 °C (-22 °F to 122 °F, 10 % to 90 % (within 6 months, no condensation)
Temperature and humidity gradients	10 °C/hour, 10 %/hour
Vibration	
Operating	Read: 1.96 m /s <sup>2</sup> (0.2 G o-p) at 5 Hz to 300 Hz (sweep) Write: 0.98 m /s <sup>2</sup> (0.1 G o-p) at 5Hz to 300 Hz(sweep)

Non-operating Transportation	19.6 m/s <sup>2</sup> (2 G o-p) at 7 Hz to 300 Hz 1.44 m <sup>2</sup> /s <sup>3</sup> -Hz (0.015 G <sup>2</sup> /Hz) at 5 Hz to 50 Hz
Shock Operating	Read: 49 m/s <sup>2</sup> (5 G o-p) at 11 ms half sine wave (includes 5 retries) Write: 4.9 m/s <sup>2</sup> (0.5 G o-p) at 11 ms half sine wave
Non-operating	490 m/s <sup>2</sup> (50 G o-p) at 11 ms half sine wave
Transportation	76 cm drop (with standard individual package)

#### ■ Dimensions and weight

Dimensions	146.0 x 41.4 x 203.0 mm ( w / h / d ) (5 3/4 x 1 5/8 x 8 inches)
Mass	1.0 kg

#### ■ Power requirement

Voltage	+5 V ± 5 % DC and +12V DC ± 10 %	
Ripple	+5 V: 0.05 Vp-p +12 V: 0.1 Vp-p	
Current		
Hold track state	+5 Vdc	700 mA (Typ) < 900 mA (Max)
	+12 Vdc	500 mA (Typ) < 800 mA (Max)
Seeking	+5 Vdc	760 mA (Typ) < 1000 mA (Max)
	+12 Vdc	1000 mA (Typ) < 1400 mA (Max)
Spin up/Write	+5 Vdc	760 mA (Typ) < 1000 mA (Max)
	+12 Vdc	900 mA (Typ) < 1400 mA (Max)
Stand by	+5 Vdc	500 mA (Typ) < 800 mA (Max)
	+12 Vdc	120 mA (Typ) < 200 mA (Max)

#### ■ Connectors

Power-in/Interface connector	Molex 53450-5411 or equivalent
Audio connectors	Molex 50460-4A or equivalent

## ■ Laser

Type	Semiconductor laser GaAlAs
Wave length	778 to 787nm (at 25 °C ± 2 °C)
Output power	2.5 mW (Read) 60 mW (Write)
Beam divergence	60 degree

## ■ Supplied accessory

User's Guide	(1 each)
Disc Caddy OPA-2000	(1 each)

## ■ Optional accessories

CD ROM discs:	YHDS-50 "CD-ROM Test Disc Type 1.3" (equivalent to YHDS-4) YHDS-100 "CD-ROM Test Disc Type 2.0" (audio-combined)
Additional caddies:	OPA-2000

## ■ Crystal frequency

33.8688 MHz  
34.5744 MHz


Design and specifications are subject to change without notice.

Diese Ausrüstung erfüllt die Europäischen EMC-Bestimmungen für die Verwendung in folgender / folgenden Umgebung(en):

- Wohngegenden
- Gewerbegebiete
- Leichtindustrialgebiete

(Diese Ausrüstung erfüllt die Bestimmungen der Norm EN55022, Klasse B.)

## ■ Dimension diagram

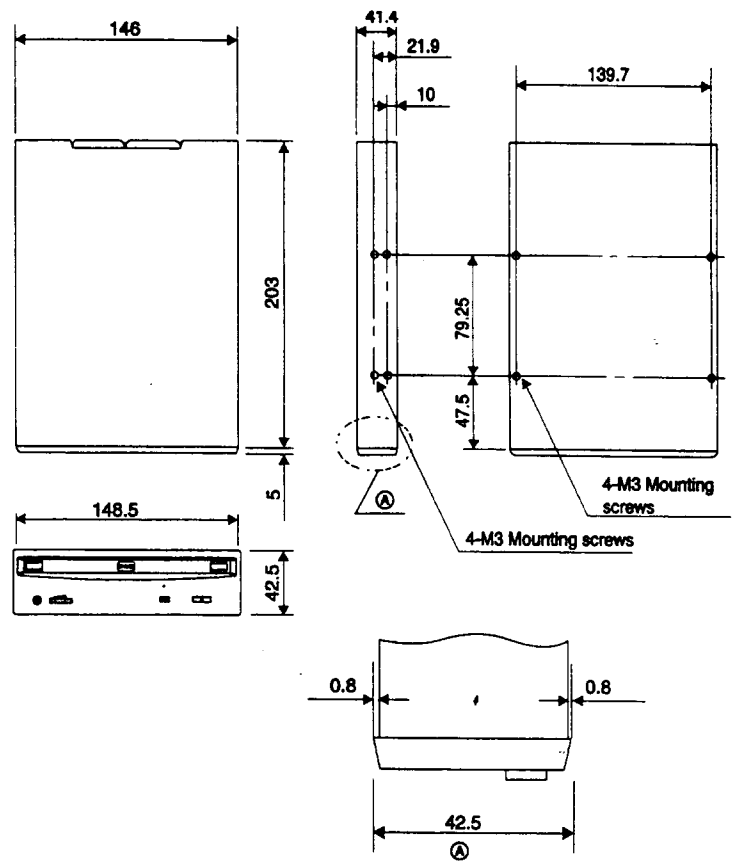

Unit : mm

### Important:

Screws must not extend more than 4.0mm into the side panels or the bottom plate.

---

CDU948S

# **CD-R Drive Unit**

User's Guide

# SONY

## 4x/8x SCSI CD-R Kit CDU948S/CH

# QUICK START

## *hardware and software install!*

To install your drive, please follow the steps below. For more detailed information concerning the installation, please refer to the included User Guides. Sony is serious about support. If you should encounter difficulty during the installation, please see the back page of this quick start card to learn how to obtain technical support.

### STEP 1

✓ *Check your computer system for the following minimum system requirements:*

- ☐ *Pentium PC with 16Mb RAM, hard disk with sub-15ms access time sustained transfer rate of at least 900 Kilobytes per second*
- ☐ *Available PCI 2.1 compliant slot on main board*
- ☐ *Open 5.25" drive bay*
- ☐ *Windows 95 or NT 4.0 Workstation*
- ☐ *1.44Mb 3.5" floppy drive*

### STEP 2

✓ *Check the contents of your box for the required software and accessories:*

- ☐ *Internal CDU948S CD-R drive*
- ☐ *PCI SCSI-2 controller*
- ☐ *Sony CD Right! Software CD-ROM*
- ☐ *1 blank CD-R disk*
- ☐ *1 CD Caddy*
- ☐ *SCSI cable*
- ☐ *Audio Cable*
- ☐ *Mounting screws*
- ☐ *User manual and warranty registration card*


# STEP 3





*Connect the CDU948S to your computer:*

- ☐ *If your computer is powered on, save your work and shutdown.*
- ☐ *Caution: Unplug the power cord and remove the power cable from your computer.*
- ☐ *Remove the cover from your computer system. Refer to your computer user's guide if you have trouble opening the case.*
- ☐ *Locate the 50-pin SCSI port on the PCI SCSI-2 Controller Card.*

Notice the different pin widths for different data cables. You will need to find the 50-pin width cable.

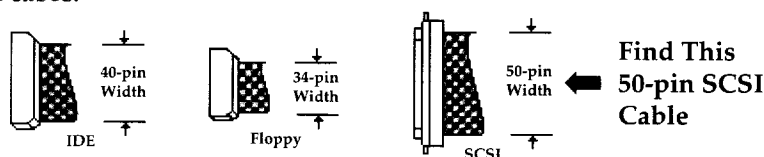


Assign a unique SCSI address by selecting a jumper setting on the rear of your CDU948S. The CDU948S comes pre-configured as ID 6, terminated and should not require any changes.

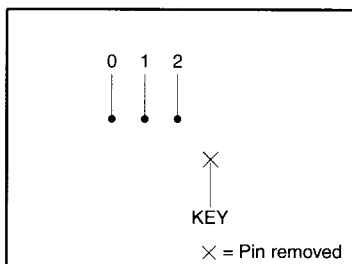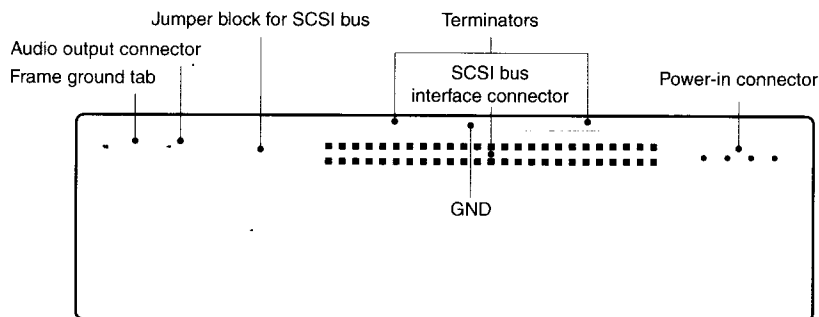

ID number	Jumper settings		
	0	1	2
0	OFF	OFF	OFF
1	ON	OFF	OFF
2	OFF	ON	OFF
3	ON	ON	OFF
4	OFF	OFF	ON
5	ON	OFF	ON
<b>6</b>	<b>OFF</b>	<b>ON</b>	<b>ON</b>
7	ON	ON	ON



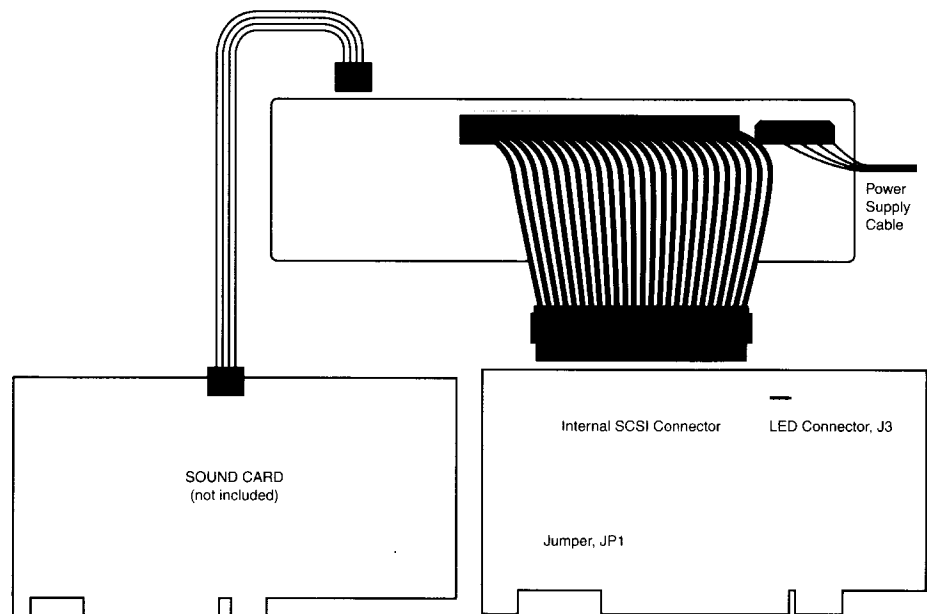

- ☐ Mount the CDU948S into your computer case by following your computer system instructions. The included screws may be necessary.
- ☐ Connect the 50-pin SCSI cable on the SCSI-2 controller card to the CDU948S. The connectors are keyed to prevent reversed installation.
- ☐ Connect one end of the included audio cable to the back of the CDU948S and the other end to the sound card.
- ☐ Connect one of the available power connectors from your computer system's power supply to the back of the CDU948S. The connector is keyed to prevent reversed installation. If it does not insert easily, do not force it.

## STEP 4



**Install your SCSI Controller driver software  
(1 floppy disk):**

- ☐ For Windows 95 or Windows NT, you will need to install the driver software for the SCSI Controller. Refer to SCSI Controller Installation Guide for the Windows version installed on your PC. Steps for driver installation vary between Windows versions.

## STEP 5



### *Install Sony CD Right! software (1 CD-ROM):*

- ☐ *Please insert the Sony CD Right! CD-ROM into any CD-ROM drive attached to your system. The "autostart" screen should come up automatically and prompt you to install the software. If the autostart is not active on your computer (e.g. the Auto Insert Notification is turned off), look in My Computer, and double click the icon of the drive that is labeled "SonyCDRight", and then double click on the setup.exe to launch the installer.*

*Your CDU948S CD-Recordable drive is installed!*

## TECHNICAL SUPPORT SERVICES

- **Sony Computer Peripherals Technical Support:** ph (800) 597-5649  
24 hours per day, 365 days per year
- **Sony FastFacts<sup>SM</sup> FAX on Demand Service:** ph (800) 883-7669  
24 hours per day, 365 days per year
- **Sony Computer Peripherals BBS** (408) 955-5107  
24 hours per day, 365 days per year
- **Sony Computer Peripherals Technical Support Web Site**  
<http://www.ita.sel.sony.com/support>

## Storage by Sony

© 1998 Sony Electronics Inc.

Reproduction in part or in whole without written permission is prohibited. All rights reserved.

Sony, Sony FastFacts and Storage by Sony are trademarks of Sony.

Pentium is a trademark of Intel Corp.


Windows and Windows NT are trademarks of Microsoft Corporation.

Features and specifications subject to change without notice.

Printed USA 2/98

CDU948S/CH-QS-0298

**initio®**

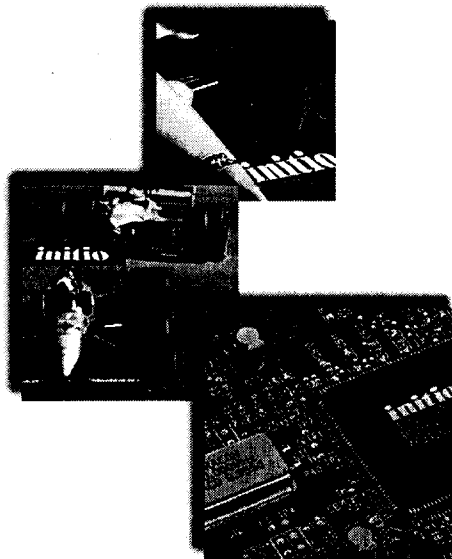

**INI-9100AS PCI-SCSI  
Bus Master Host Adapter  
Installation Guide**

[ Performance Tuned for Sony Spressta™ CD Recorders by Initio ]

**Initio Corporation • 2188-B Del Franco Street • San Jose, California • 95131-1575**  
**<http://www.initio.com>**

**Copyright**

Copyright ©1998 Initio Corporation. All rights reserved. This document may not, in whole or part, be copied, reproduced, reduced or translated by any means, either mechanical or electronic, without prior consent in writing from Initio Corporation. Initio Corporation assumes no responsibility for errors or omissions in this guide. The information contained in this manual, as well as product design, is subject to change without notice.

**Trademarks**

Initio, the Initio logo, and the "INI-" prefix are registered trademarks of Initio Corporation.

Sony® and the Sony logo are registered trademarks of Sony Corporation.

MS-DOS®, Windows®, Windows®95, and Windows NT® are trademarks or registered trademarks of Microsoft® Corporation.

Jaz™ and Zip™ are trademarks or registered trademarks of Iomega® Corporation.

Intel®, i386, i486, i486DX2, and Pentium™ are trademarks of Intel Corporation.

Other manufacturers' product names that appear in this manual are for identification purposes only and are acknowledged to be trademarks or registered trademarks of their respective companies.


**Technical Support**

If you have questions about installing or using this product, check this guide first—you will find answers to many of your questions here. If you need further assistance, please contact us. We offer the following support and information services:

**Sony Technical Response Center**

**1-800-597-5649**

(24 hours a day / 365 days a year)

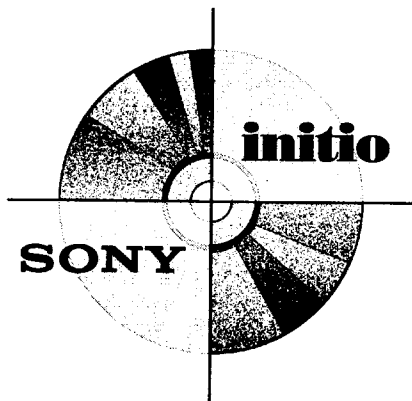

## Introduction

The Initio® INI-9100AS™ is a high-performance PCI bus master SCSI host adapter that provides the interface between the SCSI bus and the PCI local bus. INI-9100AS supports 32-bit data transfers across the PCI bus at speeds up to 133 MBytes per second. The INI-9100AS complies with plug and play applications on systems using the PCI bus standard.

The INI-9100AS FastSCSI host adapter will support synchronous transfers to a rate of 10 MBytes per second. It utilizes full support of FastSCSI standards defined by the SCSI specification.

This Installation Guide is designed to assist users with previous experience in integrating PCI Local Bus add-in boards. Users who require more in-depth installation information should contact Technical Support.

Before opening the INI-9100AS host adapter anti-static poly bag and installing the board, discharge static electricity by touching the computer chassis. FIGURE 1 (below) identifies major components pertaining to the board. You will find it helpful to refer to these illustrations while installing the host adapter and attaching its cables.

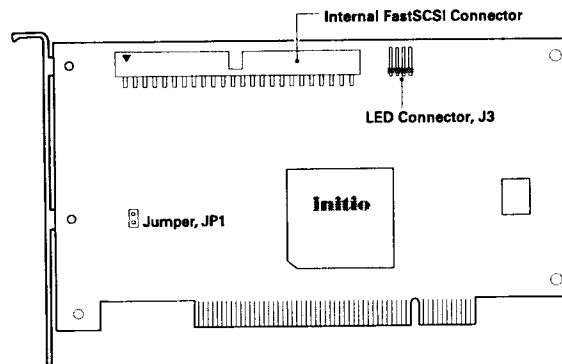


FIGURE 1 - INI-9100AS Board Layout

## Installing the Host Adapter & Cabling

*Power down the computer system and its peripherals before opening the computer cover. Refer to your computer system documentation for cover removal instructions.*

### SCSI Bus Preparation

By daisy chaining peripheral devices together, up to seven devices can be linked with the INI-9100AS. The host adapter can be placed in any standard PCI slot on the bus.

Any peripheral device attached to the SCSI bus must be an internal device. Each peripheral has a specific device ID (commonly referred to as a **SCSI ID**). Because the device ID uniquely defines the device to the SCSI bus, no two devices can have the same ID. **The INI-9100AS is preset to SCSI ID 7.** Make sure that your SCSI peripherals are set to SCSI IDs **other than SCSI ID 7**.

Please refer to your peripheral documentation to determine switch or jumper settings control SCSI ID's.

### SCSI Bus Termination

The SCSI bus structure has a length limitation as well as a requirement for termination at each end of the SCSI cable. The cable is designed to connect in a daisy chain fashion. No branching is permitted in the SCSI bus. Keep in mind that the first and last physical SCSI device on the SCSI bus must be terminated.

To increase the reliability of the cabling being used with the host adapter, it is recommended that the following guidelines be observed:

- Cable length not to exceed 6 meters (20 feet)
  - Impedance of the cable should be between 90-110 ohms
  - Use high quality shielded connectors
- Install the board by inserting it into the PCI connector on the motherboard. Refer to your PC documentation to locate a PCI bus master connector.

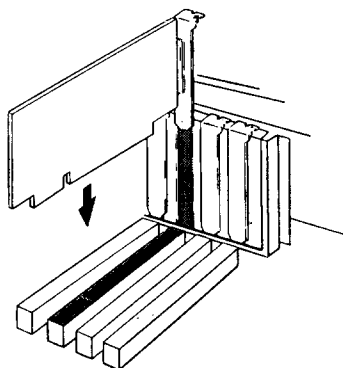


FIGURE 2: Inserting the INI-9100AS into a PCI Slot

- Attach the internal SCSI cable by matching the connector marking "▼" or cable stripe with the board connector J1, pin 1 (shown in FIGURE 3).

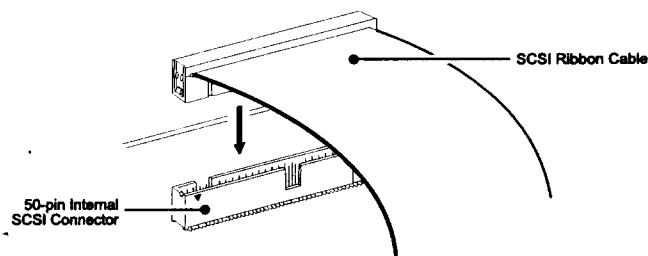


FIGURE 3- Connecting the 50-pin internal flat ribbon cable

- The SCSI Activity LED connector shown in FIGURE 1 may be connected by an optional cable and routed to the host computer front panel if needed. The SCSI Activity LED cable and connector are not included but can be purchased separately.
- Replace the cover on the computer. The hardware installation is now complete. Please turn to page 4 for software driver installation instructions.
- Host adapter termination is automatically controlled.

## Product Information

### Product Configuration

- Maximum Synchronous Transfer Rate: 10MBytes/second
- Host Adapter SCSI Bus ID: 7
- Boot Device: Not allowed
- SCSI Terminators: ON
- SCSI Parity Check: ON

### Product Specifications

- PCI 2.1 Compliant
- Plug & Play
- Windows 95, Windows NT support
- 133 MBytes per second PCI burst mode
- Compatible with CD-Rs, Optical, Tape, Scanners, Zip™/Jaz™ drives and other SCSI peripherals
- Up to 10 MB/s transfers over SCSI bus
- Auto-termination

### Power Requirements

- DC Voltage:  $5.0 \pm 0.25$  V
- Power Dissipation: 350mW Typical per channel

### Environmental Specifications

- **Operating Temperature**
  - 0 to 55° C (32 to 131° F)
  - 10% to 90% relative humidity (non-condensing)
- **Storage Temperature**
  - -40 to 75° C (-40 to 167° F)
  - 5% to 95% relative humidity (non-condensing)

## Driver Installation

INI-9100AS supports Windows 95, Windows 95B (OSR2), and Windows NT. Because this manager set contains neither a MS-DOS 16bit SCSI driver nor a 16bit ASPI manager for DOS, SCSI devices connected to the INI-9100AS will *not* be recognized by any release of MS-DOS. Therefore, all devices connected to the INI-9100AS will not be usable with any release of MS-DOS or when any release of Windows 95 is in MS-DOS only mode.

### MS Windows 95/95b (OSR2)

INI-9100AS supports Microsoft Windows 95 and Windows 95B (OSR2) with the addition of a software driver. The device driver is transferred from the **INI-9100AS DRIVER DISK** to the hard drive where it is automatically initialized during the system boot routine.

The following files are used for installation and will be found on the **INI-9100AS DRIVER DISK**:

INI910U.MPD	INI-9XXX SCSI Host Adapter Windows 95 miniport driver.
INI910U.INF	Windows 95 installation information file.

### Installation

The INI-9100AS Windows 95 driver is loaded during the system boot routine. This is accomplished by following one of the two installation procedures listed:

- Adding the Initio Windows 95 device driver to an existing Windows 95 or Windows 95B (OSR2) system.
- Updating the INI910U.MPD device driver

The procedures described to make changes to the system have distinct differences. It is strongly suggested that the selected procedure be read and understood before proceeding with the system configuration changes. Please read the instructions carefully.

**To determine which version of Windows 95 you have installed on your system, check the date of the KRNL32.DLL file located in your Windows directory. A file date of 07/11/95 belongs to Windows 95, first release; 12/31/95 belongs to Windows 95a or 95 with Service Pack 1; and 08/24/96 or later reflects Windows 95b or OSR2.**

### Adding the Initio Driver to an existing Windows 95/95a System

These instructions will guide you through the installation of the Initio host adapter to an existing Windows 95 system. Windows 95 will automatically detect the presence of new hardware in Plug and Play compliant systems. It is important that the Initio hardware has been properly installed before proceeding further.

- 1 Microsoft Windows 95 will detect the presence of new hardware upon boot-up and will display a dialog window titled NEW HARDWARE FOUND and PCI SCSI BUS CONTROLLERS will be highlighted.
  - Select: **DRIVER FROM DISK PROVIDED BY HARDWARE MANUFACTURER**, then "OK"
  - Select **SCSI CONTROLLER** from the list of available devices, then select "HAVE DISK..."
- 2 In the INSTALL FROM DISK window that is displayed, enter the Initio Driver path name: Insert **INI-9100AS DRIVER DISK** into drive A:  
Type: **A:\WIN95**, select "OK"
- 3 Select **Initio INI-9XXXU/UW PCI SCSI Host Adapter**, select "OK", then "OK" again to install the INI910U.MPD driver onto your hard disk drive. *It may be necessary to direct Windows to look for the driver in A:\win95 before the driver can be copied.*
- 4 This completes loading the Host Adapter Driver. You must now reboot your system to activate the SCSI device driver.



It is highly recommended that you verify Initio's Windows 95 device driver by selecting **MY COMPUTER** from the desktop. Then select **CONTROL PANEL**:

- Select **SYSTEM** from within the CONTROL PANEL group.
- Select **DEVICE MANAGER** from within the SYSTEM group.
- Select **SCSI CONTROLLER** from within the DEVICE MANAGER listing, and
- Select the **Initio INI-9XXXU/UW PCI SCSI Host Adapter** from within the SCSI CONTROLLER listing. If "This device is working properly" is displayed on your screen, the driver has been correctly installed.

### Updating the Initio Windows 95/95a device driver

- 1 Once a Windows 95 session is established, use your installed mouse or the appropriate key strokes to select **MY COMPUTER** from the Main Desktop. Execute the following steps:
  - Select **CONTROL PANEL** from within the MY COMPUTER group.
  - Select **SYSTEM** from within the CONTROL PANEL group.
- 2
  - Select the **DEVICE MANAGER** tab from within the SYSTEM group.
  - Select the **SCSI CONTROLLERS** category from within the DEVICE MANAGER listing.
  - Select one of the **Initio INI-9XXXU/UW PCI SCSI Host Adapter** sub-categories from within the SCSI CONTROLLERS listing (or select any other INI-9100U/UW class of drivers if you are using an older Initio board).
  - In the INI-9XXX SCSI HOST ADAPTER PROPERTIES window, select the **DRIVER** tab, then select **"CHANGE DRIVER..."**.
  - In the SELECT DEVICE window, select **"HAVE DISK..."**.
- 3 In the INSTALL FROM DISK window, enter the Initio Driver path name:
  - Insert the **INI-9100AS DRIVER DISK** into drive A:
  - Type: **A:\WIN95**, select **"OK"**
- 4 Select **Initio INI-9XXXU/UW PCI SCSI Host Adapter**, select **"OK"** to install the INI910U.MPD driver onto your hard disk drive.

*It may be necessary to direct Windows to look for the driver in A:\win95 before the driver can be copied.*

This completes updating the Host Adapter Driver. Follow the on-screen directions to restart your computer and activate the new driver.

It is highly recommended that you verify Initio's Windows 95 device driver by selecting **MY COMPUTER** from the desktop. Then select **CONTROL PANEL**:

- Select **SYSTEM** from within the CONTROL PANEL group.
- Select **DEVICE MANAGER** from within the SYSTEM group.
- Select **SCSI CONTROLLER** from within the DEVICE MANAGER listing, and
- Select the **Initio INI-9XXXU/UW PCI SCSI Host Adapter** from within the SCSI CONTROLLER listing. If "This device is working properly" is displayed on your screen, the driver has been correctly installed.

### Adding the Initio Driver to an existing Windows 95B (OSR2) System

These instructions will guide you through the installation of the Initio host adapter to an existing Windows 95 system. Windows 95 will automatically detect the presence of new hardware in Plug and Play compliant systems. It is important that the Initio hardware has been properly installed before proceeding further.

- 1 Microsoft Windows 95 will detect the presence of new hardware upon boot-up and will display a dialog window titled **"Update Device Driver Wizard"**
- 2 Insert the **INI-9100AS DRIVER DISK** into your floppy drive.:
  - Select **"NEXT"**
  - Select **"FINISH"**
  - At window "Insert Disk labeled INI-9XXXU/9XXXUW driver", select **"OK"**
  - At window titled **"Copying file"**, replace the highlighted directory path with **A:\Win95**, then select **"OK"** this will complete loading the INI910U.MPD driver onto your hard disk drive. Restart your computer.

It is highly recommended that you verify Initio's Windows 95 device driver by selecting **MY COMPUTER** from the desktop. Then select **CONTROL PANEL**:

- Select **SYSTEM** from within the CONTROL PANEL group,
- Select **DEVICE MANAGER** from within the SYSTEM group,
- Select **SCSI CONTROLLER** from within the DEVICE MANAGER listing, and
- Select the **Initio INI-9XXXU/UW PCI SCSI Host Adapter** entries from within the SCSI CONTROLLER listing. If "This device is working properly" is displayed on your screen, the driver has been correctly installed.

### Updating the Initio Windows 95B (OSR2) device driver

- 1 Once a Windows 95 session is established, select **MY COMPUTER** from your desktop. Execute the following steps:
  - Select **CONTROL PANEL** from within the MY COMPUTER group
  - Select **SYSTEM** from within the CONTROL PANEL group
  - Select the **DEVICE MANAGER** tab from within the SYSTEM group
  - Select the **SCSI CONTROLLERS** category from within the DEVICE MANAGER listing
  - Select the **Initio INI-9XXXU/UW PCI SCSI Host Adapter** sub-categories from within the SCSI CONTROLLERS listing (or any other INI-9100U/UW class of drivers if you are using an older Initio product)
- 2 In the INI-9XXXU/9XXXUW SCSI HOST ADAPTER PROPERTIES window, select the **DRIVER** tab, then select **"UPDATE DRIVER..."**
  - Select **"Next"**
  - Select **"FINISH"**
  - At prompt "Insert Disk labeled INI-9XXXU/9XXXUW driver," select **"OK"**
  - At prompt "Copying file", replace the highlighted directory path with **A:\Win95**, then select **"OK."** This will complete loading the INI910U.MPD driver onto your hard disk drive.

This completes updating the Host Adapter Driver. Follow the on-screen directions to restart you computer and activate the new driver.

It is highly recommended that you verify Initio's Windows 95 device driver by selecting **MY COMPUTER** from the desktop. Then select **CONTROL PANEL**:

- Select **SYSTEM** from within the CONTROL PANEL group,
- Select **DEVICE MANAGER** from within the SYSTEM group,
- Select **SCSI CONTROLLER** from within the DEVICE MANAGER listing, and
- Select the **Initio INI-9XXXU/UW PCI SCSI Host Adapter** entries from within the SCSI CONTROLLER listing. If "This device is working properly" is displayed on your screen, the driver has been correctly installed.

## Microsoft Windows NT Driver Installation

INI-9100AS supports Windows-NT v3.5x/4.0 with the addition of a software driver. A software driver allows the host computer the ability to transfer data over the SCSI bus. The device driver for Windows-NT is copied from the Initio driver installation diskette to your hard drive where it is loaded onto the computing system during installation.

The following files are used for installation and may be found on the **INI-9100AS DRIVER DISK**:

INI910U.SYS	INI-9XXX SCSI Host Adapter Windows-NT miniport driver.
TXTSETUP.OEM	Script file for installing INI910U.SYS during the text setup phase.
OEMSETUP.INF	Script file for installing INI910U.SYS during the windows phase.

### Installation

The INI-9100AS Windows-NT driver will be installed on the hard drive used for system initialization. This is accomplished by following one of the three installation procedures listed:

- New Windows-NT installation
- Adding or updating the INI-9XXX Host Adapter Driver to an existing Windows-NT System
- Installing a new Windows NT system and Initio driver without floppy disks

The procedures described to make changes to the system have distinct differences. It is strongly suggested that the selected procedure be read and understood before proceeding with the system configuration changes. Please read the instructions carefully.

### Adding or updating the Initio driver to an existing Windows-NT System:

For computer systems using other SCSI host adapters or an IDE drive to provide the system boot routine, these instructions will guide you through the INI-9100AS driver installation. The Windows-NT driver will be found on the **INI-9100AS DRIVER DISK**. It is important that the SCSI bus hardware and Windows-NT are installed and configured before proceeding further.

- 1 Once a Windows NT session is established, use your installed mouse or the appropriate key strokes to select **MY COMPUTER** from the Main Desktop. Execute the following steps:
  - Select **CONTROL PANEL** from within the MY COMPUTER group.
  - Select **SCSI ADAPTERS** from within the CONTROL PANEL group.
- 2 Select the **DRIVERS** tab from within the SCSI ADAPTERS group.
  - In the DRIVERS window, select **"ADD..."**
- 3 In the INSTALL DRIVER window, select **"HAVE DISK..."**.
- 4 In the INSTALL FROM DISK window that is displayed, enter the Initio Driver path name:
  - Insert **INI-9100AS DRIVER DISK** into drive A:
  - Type: **A:\WINNT**, select **"OK"**
- 5 Select **Initio INI-9XXXU/UW PCI SCSI Host Adapter**, select **"OK"** to install the INI910U.SYS driver onto your hard disk drive.
- 6 In the WINDOWS NT SETUP window that is displayed, enter the Initio Driver path name to continue:
  - Type: **A:\WINNT**, select **"CONTINUE"**
- 7 This completes updating the Host Adapter Driver. Follow the on-screen directions to restart you computer and activate the new driver

It is highly recommended that you verify Initio's Windows NT device driver by selecting **MY COMPUTER** from the desktop. Then select **CONTROL PANEL**:

- Select **SCSI ADAPTERS** from within the CONTROL PANEL group.
- Select **Initio INI-9XXXU/UW PCI SCSI Host Adapter** from within the SCSI CONTROLLER listing. If "This device is working properly" is displayed on your screen, the driver has been correctly installed.