

# D-E451/E455/E456CK/E459CK

## SERVICE MANUAL

US Model

Ver 1.0 1999.06



Photo : D-E451

Model Name Using Similar Mechanism	D-E441
CD Mechanism Type	CDM-2811EAA
Optical Pick-up Type	DAX-11E

### SPECIFICATIONS

#### CD player

##### System

Compact disc digital audio system

##### Laser diode properties

Material: GaAlAs

Wavelength :  $\lambda = 780$  nm

Emission duration: Continuous

Laser output : Less than  $44.6 \mu\text{W}$  (This output is the value measured at a distance of 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture. )

##### Error correction

Sony Super Strategy Cross Interleave Reed Solomon Code

##### D-A conversion

1-bit quartz time-axis control

##### Frequency response

20 - 20,000 Hz  $\pm 1$  dB (measured by EIAJ CP-307)

##### Output (at 4.5 V input level)

Headphones (stereo minijack)

15 mW + 15 mW at 16 ohms

Line output (stereo minijack)

Output level 0.7 V rms at 47 kilohms

Recommended load impedance over 10 kilohms

#### General

##### Power requirements

For the area code of the model you purchased, check the upper left side of the bar code on the package.

- Sony BP-DM10 Rechargeable battery:  
2.4 V DC, Ni-Cd, 650 mAh
- Sony BP-DM20 Rechargeable battery:  
2.4 V DC, Ni-MH, 1,200 mAh
- Two LR6 (size AA) batteries: 3 V DC
- AC power adaptor (DC IN 4.5 V jack):  
US model: 120 V, 60 Hz
- Sony DCC-E245 car battery cord for use on car battery : 4.5V DC

##### Dimensions (w/h/d) (without projecting parts and controls)

Approx. 129 x 28 x 146 mm  
(  $5\frac{1}{8}$  x  $1\frac{1}{8}$  x  $5\frac{3}{4}$  in. )

##### Mass (without rechargeable battery)

Approx. 220 g (7.8 oz)

##### Operating temperature

5°C - 35°C (41°F - 95°F)

#### Supplied accessories

For the area code of the model you purchased, check the upper left side of the bar code on the package.

##### D-E451

AC power adaptor (1)  
Headphones (1)

##### D-E455

AC power adaptor (1)  
Headphones with remote control (1)  
Rechargeable battery (1)

##### D-E456CK

AC power adaptor (1)  
Headphones (1)  
Car battery cord (1)  
Car connecting pack (1)  
Velcro tape (2)  
Spare fuse (1)  
Spiral tube (1)

##### D-E459CK

AC power adaptor (1)  
Rechargeable battery (1)  
Headphones with remote control (1)  
Car battery cord (1)  
Car connecting pack (1)  
Velcro tape (2)  
Spare fuse (1)  
Spiral tube (1)

Design and specifications are subject to change without notice.

## COMPACT DISC COMPACT PLAYER



# SONY®

## TABLE OF CONTENTS

Specifications .....	1
<b>1. SERVICING NOTES .....</b>	<b>3</b>
<b>2. GENERAL .....</b>	<b>4</b>
<b>3. DISASSEMBLY</b>	
3-1. Lid ASSY, Upper .....	5
3-2. Cabinet (Upper) ASSY, Cabinet (Lower) Sub ASSY, MD Assy .....	5
3-3. Main Board, LED Sub Board (E456CK, E459CK) ...	6
3-4. Turn table motor ASSY (Spindle) (M902), Optical pick-up (DAX-11E), Sled motor ASSY (M901) .....	6
<b>4. SERVICE MODE .....</b>	<b>7</b>
<b>5. ADJUSTMENTS .....</b>	<b>8</b>
<b>6. DIAGRAMS</b>	
6-1. Explanation of IC Terminals .....	11
6-2. Block Diagram .....	13
6-3. Printed Wiring Boards .....	16
6-4. Schematic Diagram .....	19
<b>7. EXPLODED VIEWS</b>	
7-1. Cabinet Section .....	29
7-2. Optical Pick-up Section .....	30
<b>8. ELECTRICAL PARTS LIST .....</b>	<b>31</b>

### DANGER

Invisible laser radiation when open and interlock failed or defeated.  
Avoid direct exposure to beam.

### CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

### SAFETY-RELATED COMPONENT WARNING!!

**COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.**

### Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

### Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

# SECTION 1

## SERVICING NOTES

### NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts. The flexible board is easily damaged and should be handled with care.

### NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30cm away from the objective lens.

### Before Replacing the Optical pick-up Block

Please be sure to check thoroughly the parameters as per the "Optical pick-up Block Checking Procedure" (Part No. : 9-960-027-11) issued separately before replacing the optical Pick-up block.

Note and specifications required to check are given below.

- FOK output : IC501 ⑫ pin  
When checking FOK, remove the lead wire to disc motor.
- S curve P-to-P value : 0.9 – 1.5Vp-p IC501 ③ pin. (Connect pin ⑫ of IC501 (TP880) and ③ of IC501 (GND) with a jumper wire).  
When checking S curve P-to-P value, remove the lead wire to disc motor.
- Adjusted part for focus gain adjustment : RV503
- RF signal P-to-P value : 0.8 – 1.2Vp-p
- Traverse signal P-to-P value : 1.0 – 2.4Vp-p
- The repairing grating holder is impossible.
- Adjusted part for tracking gain adjustment : RV502

### Laser Diode Checking Methods

During normal operation of the equipment, emission of the laser diode is prohibited unless the upper panel is closed while turning ON the S801 (push switch type).

The following two checking methods for the laser diode are operable.

### Method-1 (In the service mode or normal operation) : Emission of the laser diode is visually checked.

1. Open the upper lid.
2. Push the S801 as shown in Fig. 1-1 .
3. Check the object lens for confirming normal emission of the laser diode. If not emitting, there is a trouble in the automatic power control circuit or the optical pick-up. During normal operation, the laser diode is turned ON about 2.5 seconds for focus searching.


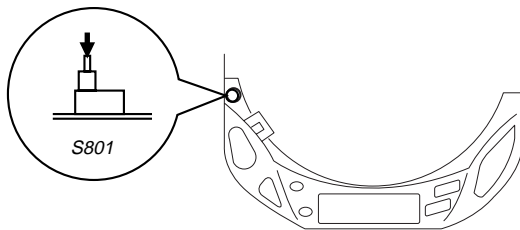


Fig.1-1 Method to push S801

### Method-2 (In the service mode or normal operation) : Check the value of current flowing in the laser diode.

1. Remove the upper panel.
2. Read the current printed on the rear side of the optical pick-up.  
(Print on the rear side of the optical pick-up)
3. Connect a level meter as shown in Fig. 1-2
4. Press the ► key.

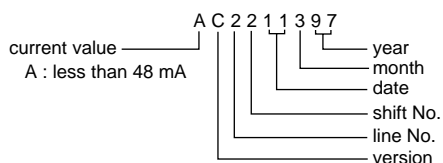


5. Calculate the current value by the reading of the digital voltmeter.  
Reading of the tester (V) ÷ 4.7 (Ω) = current value (A)  
(Example) Reading of the digital voltmeter of 0.2256 V :  
 $0.2256 \text{ V} \div 4.7 \Omega = 0.048 \text{ (A)} = 48 \text{ mA}$

6. Check that the current value is within the following range.

- Current value of the label  $^{+5}_{-11} \text{ mA}(25^{\circ}\text{C})$   
Variation by temperature : 0.4mA / °C  
Current increases with temperature increased.  
Current decreases with temperature decreased.


If the current is more than the range above, there is a trouble in the automatic power control circuit or the laser diode is in deterioration.  
If less than the range, a trouble exists in the automatic power control circuit or the optical pick-up.

### [MAIN BOARD] (Side B)

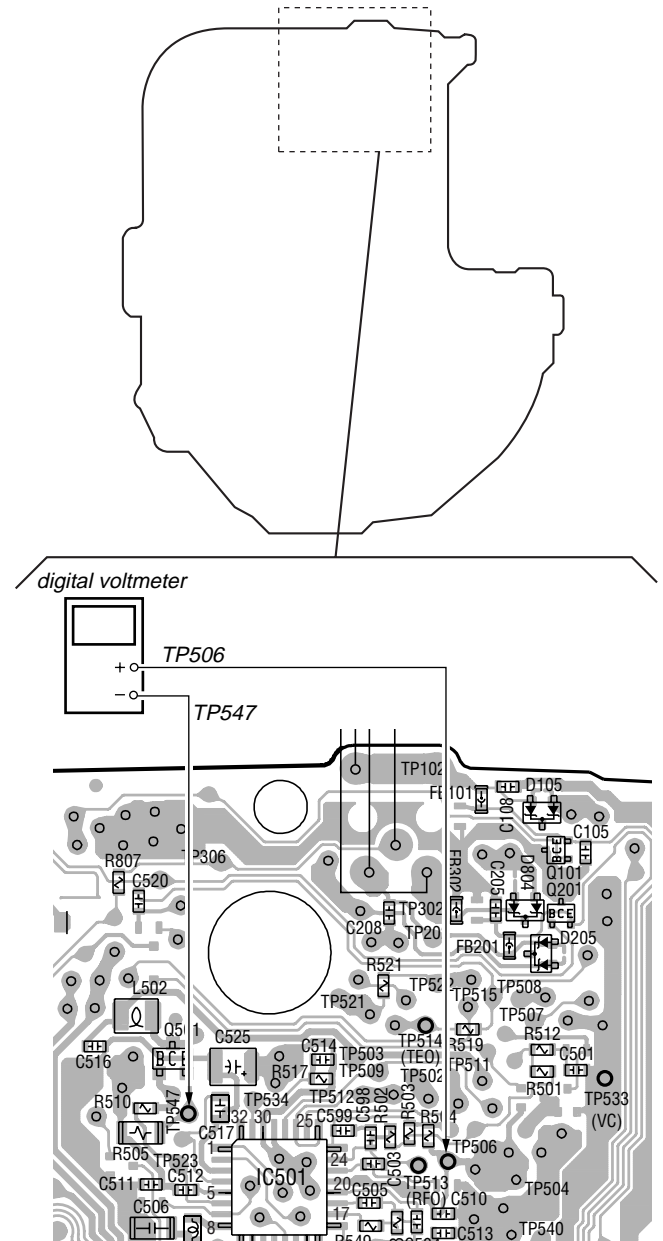


## SECTION 2 GENERAL

### LOCATION AND FUNCTION OF CONTROLS

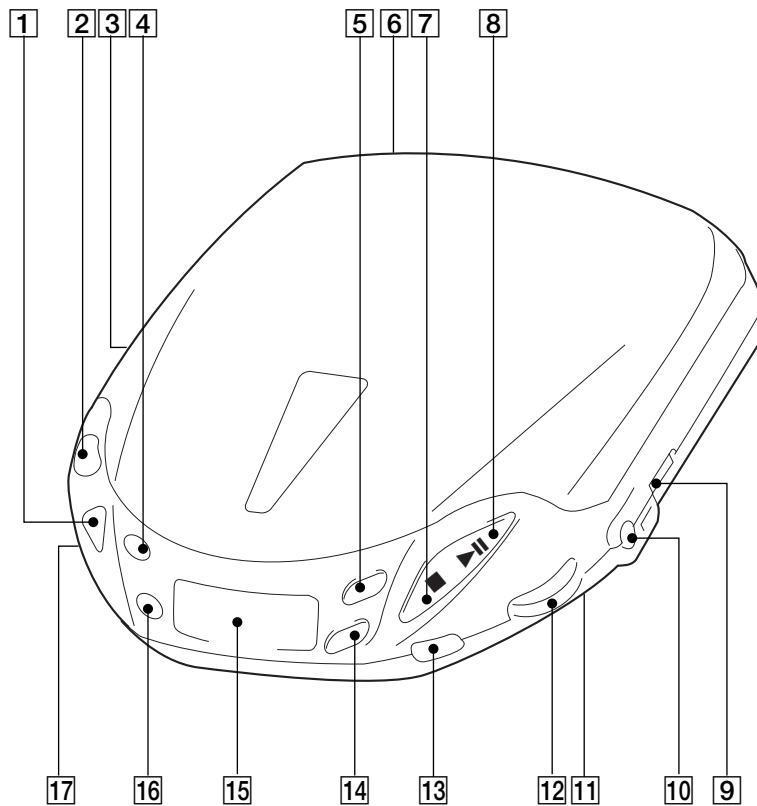

- |   |  |    |                           |
|---|--|----|---------------------------|
| 1 | ESP (Electronic Shock Protection) button | 10 | ⌚ /REMOTE jack            |
| 2 | OPEN button                              | 11 | AVLS switch               |
| 3 | DC IN 4.5V jack                          | 12 | ◀ VOLUME control          |
| 4 | PLAY MODE button                         | 13 | SOUND button              |
| 5 | ▶▶ FF button                             | 14 | ◀◀ FR button              |
| 6 | LINE OUT jack                            | 15 | Information display panel |
| 7 | ■ STOP button                            | 16 | REPEAT/ENTER button       |
| 8 | ▶   Play/pause button                    | 17 | HOLD switch               |
| 9 | OFF-RESUME-ON switch                     |    |                           |

### Remote control : (D-E455/E459CK)

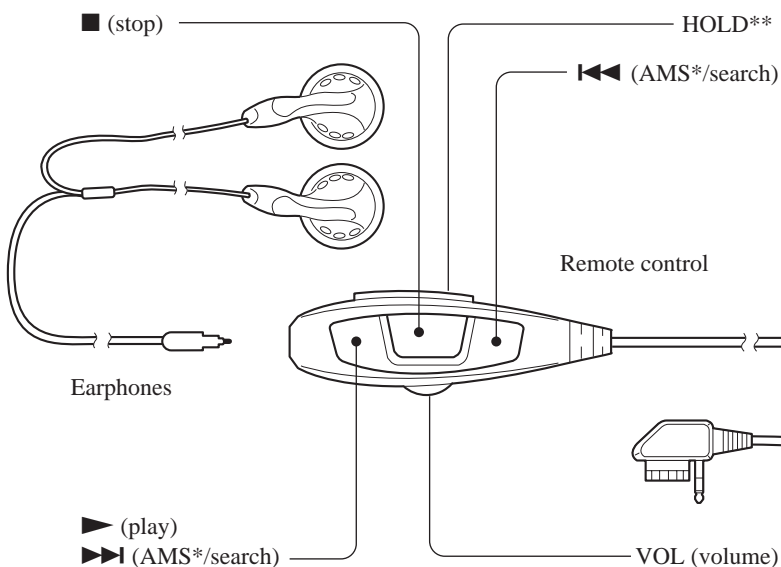

- \* Automatic Music Sensor
- \*\* When you are not using the remote control, slide **HOLD** in the direction of the arrow to prevent any accidental operation. To unlock, slide **HOLD** back.

#### Note

- Use only the supplied remote control. You cannot operate this player with the remote control supplied with other models.


## SECTION 3 DISASSEMBLY

- The equipment can be removed using the following procedure.


Set → Lid ASSY, Upper  
 → Cabinet (Upper) ASSY, Cabinet (Lower) sub ASSY, MD ASSY → Main board, LED sub board (E456CK, E459CK)  
 → Turn table motor ASSY (Spindle) (M902),  
 Optical pick-up (DAX-11E),  
 Sled motor ASSY (M901)

**Note :** Follow the disassembly procedure in the numerical order given.


### 3-1. LID ASSY, UPPER

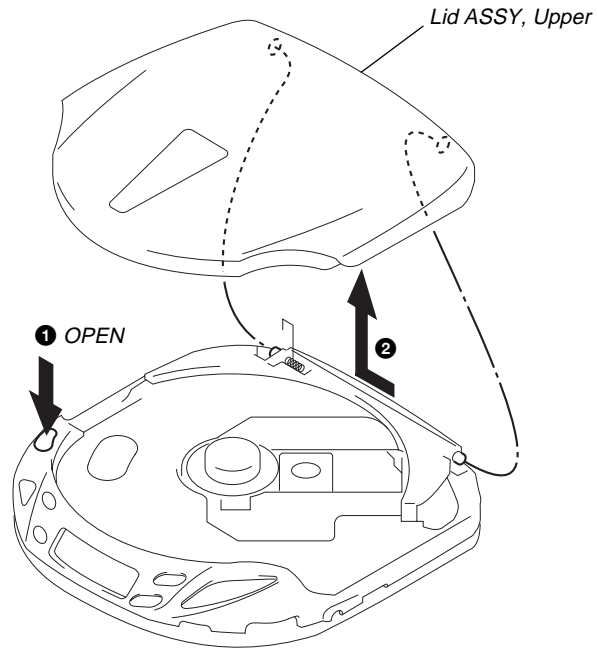


### 3-2. CABINET (UPPER) ASSY, CABINET (LOWER) SUB ASSY, MD ASSY

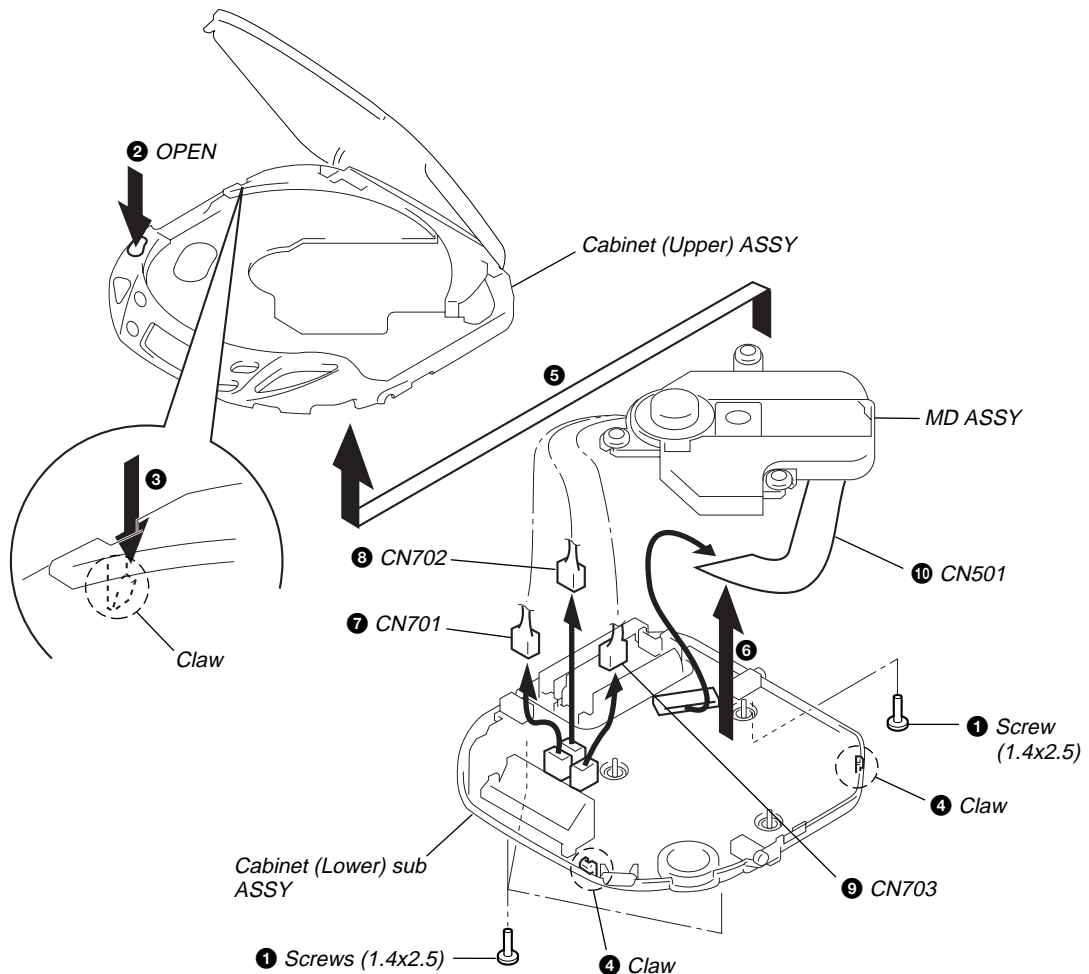

### 3-3. MAIN BOARD, LED SUB BOARD (E456CK, E459CK)

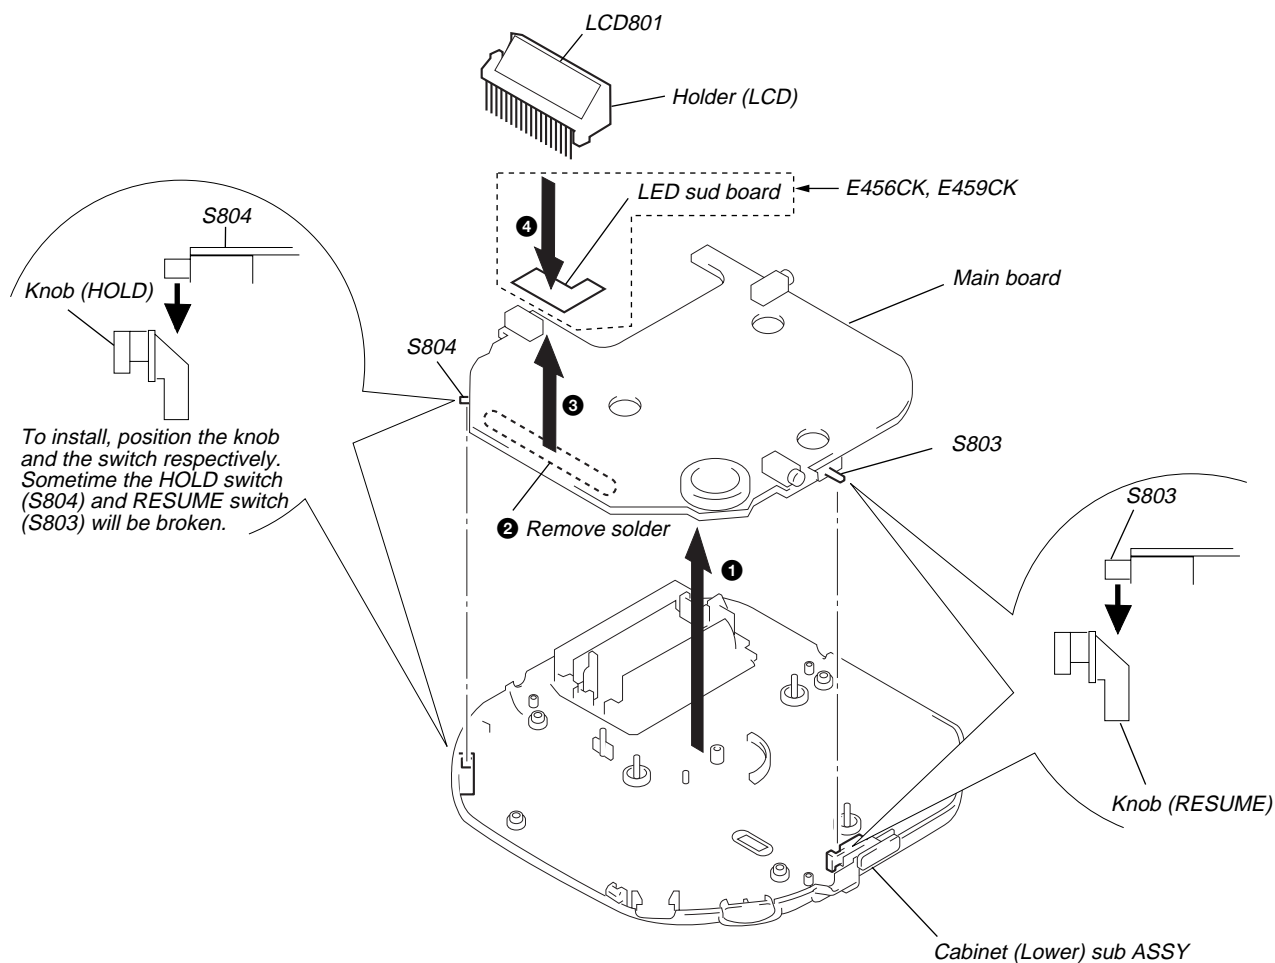

### 3-4. TURN TABLE MOTOR ASSY (SPINDLE) (M902), OPTICAL PICK UP (DAX-11E), SLED MOTOR ASSY (M901)

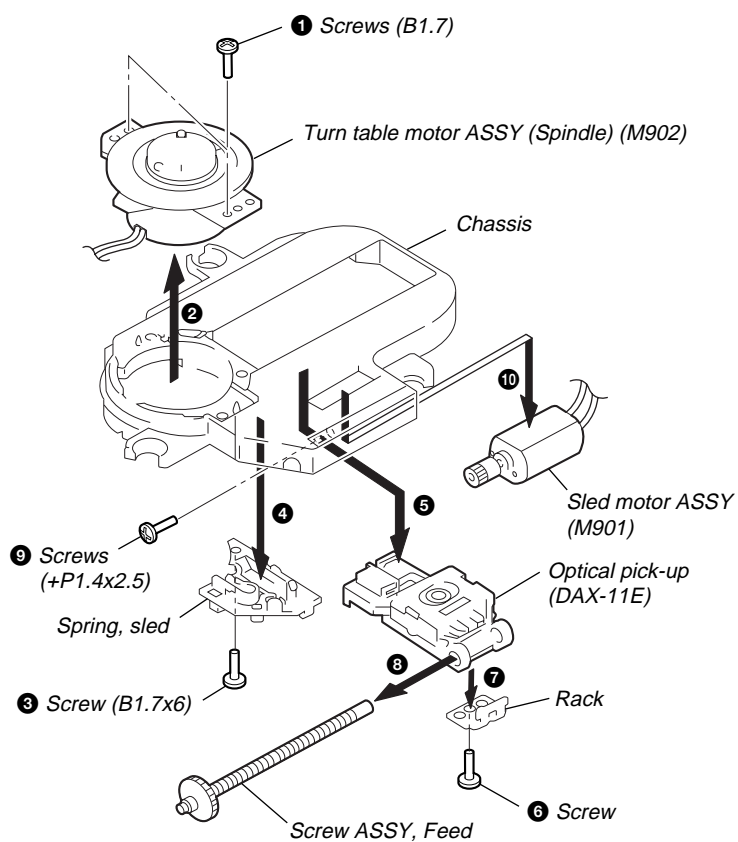

## SECTION 4 SERVICE MODE

### Service Mode (service program)

The equipment is provided with a service program built in the microcomputer, like conventional models. Service program operation methods are described in the following.

#### REPEAT/ENTER

Tracking gain-up mode while pressing

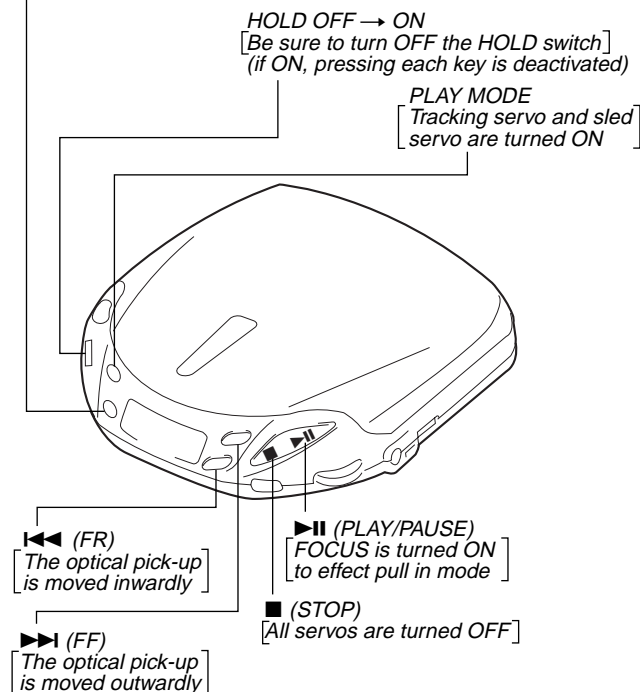


Fig. 4-1 Layout of each key

- Step 1 (Service mode setting method)
  1. Turn OFF the HOLD switch the external power supply disconnected (power is not applied to the set).
  2. Solder across the T802 (TEST) terminals (pin ②, IC801 (TEST) is grounded).
  3. Connect an external power supply.  
Thus, the set is switched to the service mode.

- Step 2 (Operation in the service mode )
  1. Once the service mode is effected, the LCD displays 5 indications each of which is repeatedly displayed.  
However, the following operations can be activated even if LCD indication is effected.
  2. By pressing the >>> or <<< key, the optical pick-up movable inwardly or outwardly. However, if this is activated, tracking servo and sled servo are turned OFF, so it can be turned ON by pressing the PLAY MODE key, if required.
  3. By pressing the REPEAT/ENTER key, the tracking gain-up mode becomes active.
  4. By pressing the >>|| key, focus is turned ON from focus searching while entering CLV-S (pull-in mode).  
Without disc, focus searching is repeated continuously.
  5. By pressing the PLAY MODE key, tracking servo, sled servo and CLV-A (servo in PLAY) are turned ON.
  6. When 4. and 5. are performed, playing begins. No muting is ON in the service mode.
  7. By pressing the ■ key, all servos (focus tracking and sled) are turned OFF. However, the disc motor revolves for a while by inertia.

- Step 3 (Resetting service mode )

1. Be sure to disconnect the external power supply and remove the solder bridge at the TEST terminals connected in setting.
2. The set thus becomes available for normal operation.

#### – MAIN BOARD – (Side A)

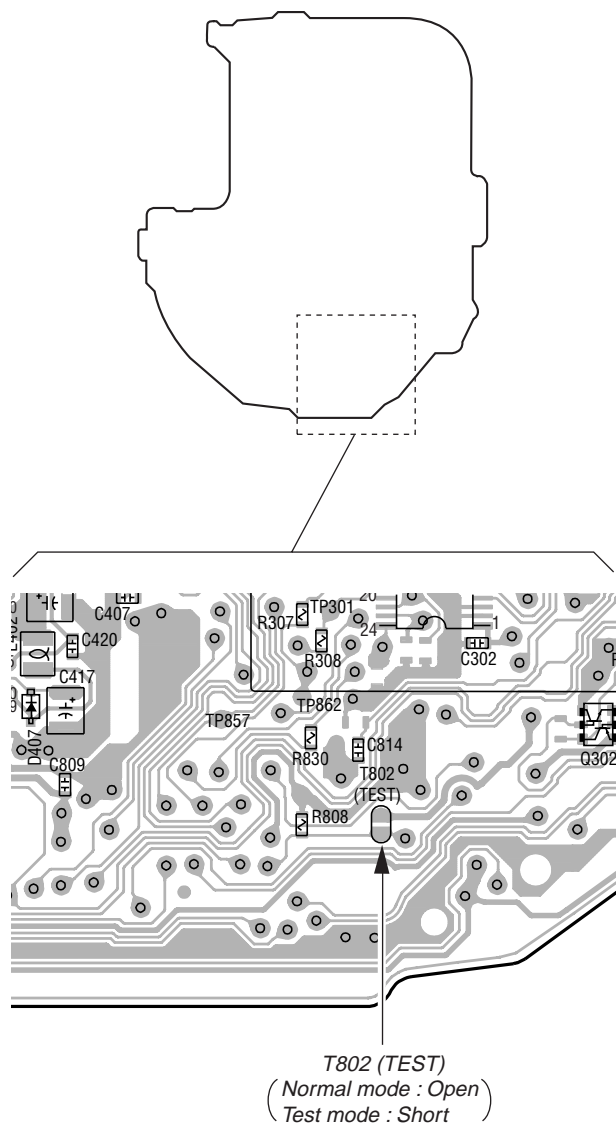


Fig. 4-2 Location of test terminal



## SECTION 5

### ADJUSTMENTS

#### CD SECTION

##### Precautions for Adjustment

- Before beginning adjustment, set the equipment to service mode.  
After the completion of adjustment, be sure to reset the service mode.  
For more information, see "Service Mode (service program)" on page 7.
- Perform adjustments in the order given.
- Use the disc (YEDS-18. Part No. 3-702-101-01) unless otherwise indicated.
- Power supply voltage requirement : DC 4.5 V  
HOLD switch : OFF  
VOLUME : Minimum  
SOUND switch : NORM  
AVLS switch : OFF

##### Before Beginning Adjustment

Set the equipment to service mode (See page 7) and check the following.

If there is an error, repair the equipment.

- Checking of the sled motor
  - Open the upper panel.
  - Press the ►► and ◄◄ keys and check that the optical pick-up can move smoothly without sluggishness or abnormal noise in innermost periphery → outermost periphery → innermost periphery.  
►► : The optical pick-up moves outwardly  
◄◄ : The optical pick-up moves inwardly
- Checking of focus searching
  - Open the upper panel.
  - Press the ►|| key. (Focus searching operation is activated continuously).
  - Check the object lens of the optical pick-up for smooth up/down motion without sluggishness or abnormal noise.
  - Press the ■ key.  
Check that focus searching operation is deactivated. If not, again press the ■ key slightly longer.


##### Focus Bias Check

###### Condition :


- Hold the set in horizontal state.

###### Procedure :

[MAIN BOARD] (Side B)

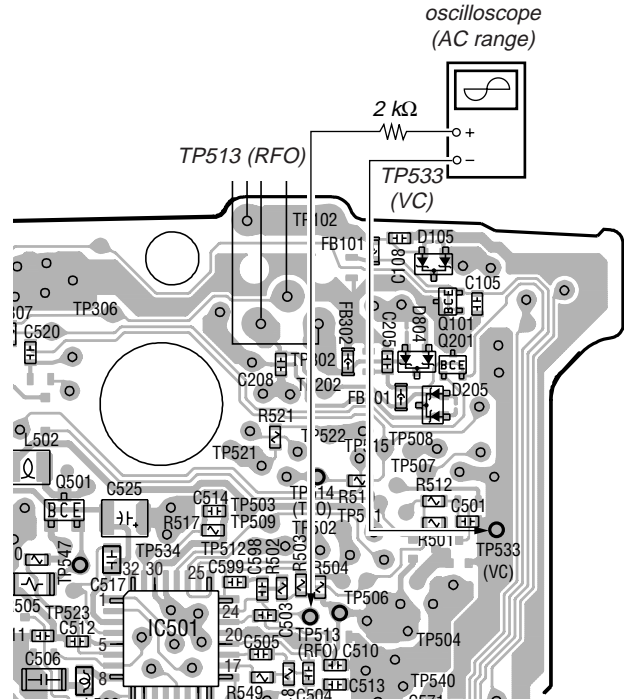

- Set the equipment to service mode stop state (See page 7).
- Connect the oscilloscope between TP513 (RFO) and TP533 (VC) on the MAIN board.
- Move the optical pick-up by Pressing the ►► and ◄◄ keys.
- Put the disc (YEDS-18).
- Press the ►|| key.  
(From focus searching, focus is turned ON while entering CLV drawing-in mode. Tracking and sled are turned OFF.)
- Press the PLAY MODE key. (Both tracking and sled are turned ON).
- Check the oscilloscope waveform is as shown below.  
A good eye pattern means that the diamond shape (◊) in the center of the waveform can be clearly distinguished.

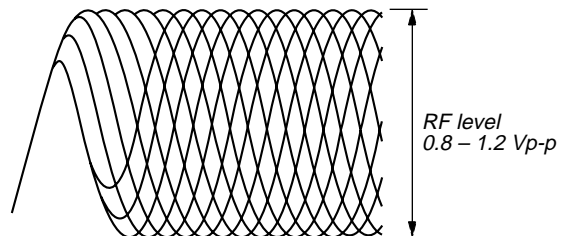

- RF Signal Reference Waveform (eye pattern)  
To watch the eye pattern, set the oscilloscope to AC range and increase the vertical sensitivity of the oscilloscope for easy watching.
- Stop removing of the motor by pressing the ■ key.
- After the completion of adjustment, reset service mode. (See page 7)



A servo analyzer is necessary in order to perform this adjustment exactly.

Focus/tracking gain determines the pick-up follow-up relative to mechanical noise and mechanical shock when the 2-axis device operate. However, as these reciprocate, the adjustment is at the point where both are satisfied.


- When gain is raised, the noise when 2-axis device operates increases.
- When gain is lowered, it is more susceptible to mechanical shock and skipping occurs more easily.

- Optical pick-up
- RV503 (Focus gain)
- RV502 (Tracking gain)

### Procedure :

(perform at normal operation)

oscilloscope  
(DC range)

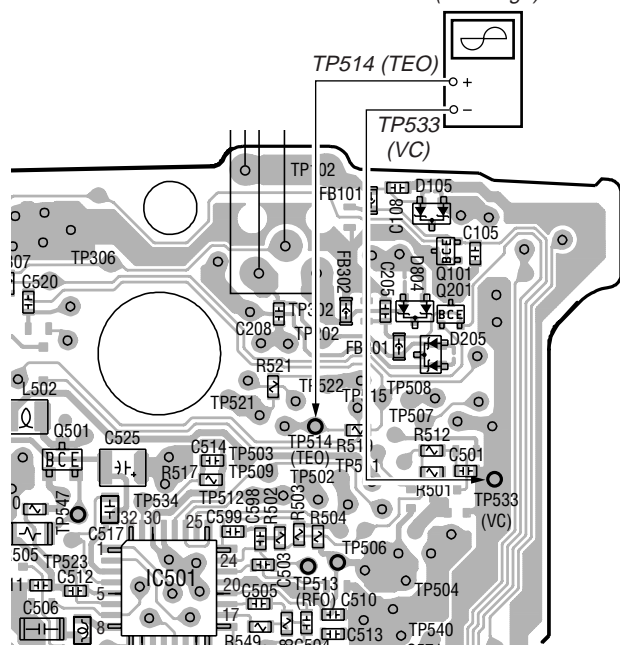

1. Place the optical pick-up level, horizontally. (If the optical pick-up is not level, the 2-axis device will be weighted and adjustment cannot be done.)
2. Connect the oscilloscope between TP514 (TEO) and TP533 (VC) on the MAIN board.
3. Set the disc (YEDS-18) and Press the ►|| (►►) key.
4. Turn RV502 slightly clockwise (tracking gain drops) and obtain a waveform with a fundamental wave (waveform has large waves) as in Figure 5-1 .
5. Turn RV502 slowly counterclockwise (tracking gain rises) until the fundamental wave disappears (no large waves) as in Figure 5-2.
6. Set RV502 to the position about 30 ° counterclockwise from the position obtained in step 5. If RV502 contact point is more than 90 ° counterclockwise from mechanical center, tracking gain is too high. In this case, readjust from step 4.
7. Press ►|| (►►) or ◄◄ (◄◄) keys and observe the 100 track jump waveform. Check that no traverse waveform appears for both ►|| (►►) or ◄◄ (◄◄) directions. (See Figures 5-3 and 5-4.) It is acceptable if the traverse waveform appears only now and then, but if it appears constantly raise tracking gain slightly and check step 7 again.
8. Check that there is no abnormal amount of operation noise (white noise) from the 2-axis device. If there is, tracking gain is too high, readjust starting with step 4.

Fundamental wave appears (large waves).



- Waveform when fundamental wave disappears (no large waves).



**Fig. 5-2**


- Waveform when no traverse waveform during 100 track jump. (Brake application is smooth because of adjustment.)



**Fig. 5-3**

100 track jump waveform


- Waveform when no traverse waveform during 100 track jump. (Brake application is poor because of adjustment.)

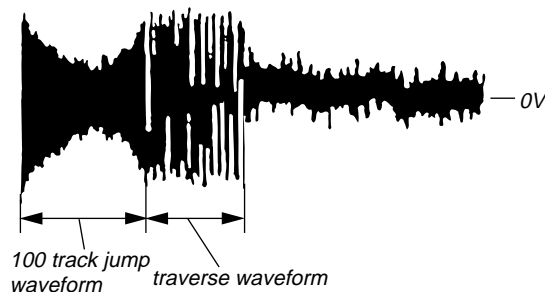

**Fig. 5-4**

**Adjustment Location :**

**MAIN BOARD]** (Side A)

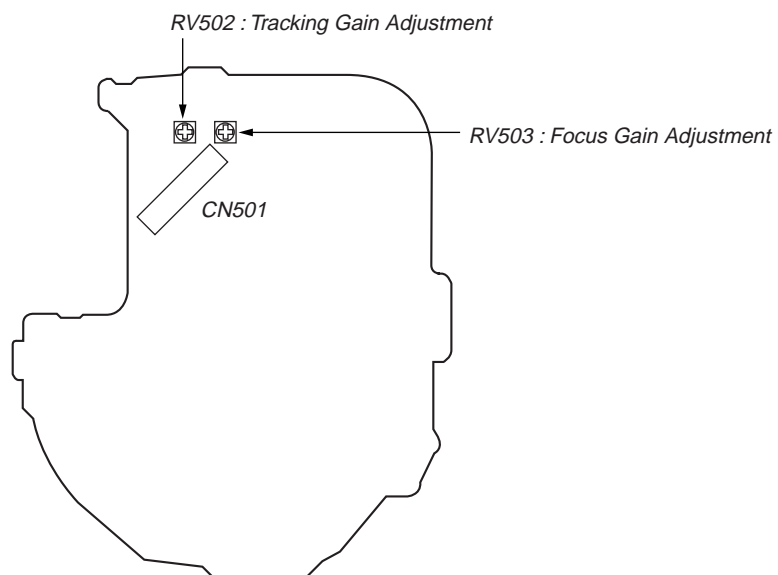


## SECTION 6 DIAGRAMS

### 6-1. EXPLANATION OF IC TERMINALS

#### IC801 MC68HC05L15SC442720CPB (SYSTEM CONTROL)

Pin No.	Pin name	I/O	Description
1 – 3	SEG 12–14	O	LCD segment signal output terminal.
4	FP26	–	Not used (Open).
5	XRST– DSP	O	Reset output terminal.
6	AMUTE – HP	O	Audio mute output terminal.
7	XOE-ESP	O	ESP POWER ON control output.
8	C2PO FILTER	–	Not used (Open).
9	DACLT–DAC	I/O	CPU serial data input, latch signal output (For DAC only).
10	C2POEN	O	C2PO signal control output. “ L ” : Stop “ H ” : Searching
11	TEOAdj – TEO	O	Tracking ADJ switch control output.
12	RMDAT–WRMT	O	Serial data output to LCD remote controller.
13	VLCD (GND)	–	Connect to ground.
14	VSS (GND)	–	Connect to ground.
15	NDLY (GND)	–	Connect to ground.
16	CHGON – PWR	O	Charge ON/OFF control output.
17	PCON–PWR	O	Power ON/OFF control output. “ L ” : ON “ H ” : OFF
18	XMCRST–PWR	I	System reset input terminal.
19	OSC 1	I	System clock oscillator input terminal (4.1943 MHz).
20	OSC 2	O	System clock oscillator output terminal (4.1943 MHz).
21	SDT–ESP	I	Serial data input from ESP control (IC601).
22	SDT–ESP	O	Serial data output to ESP control (IC601).
23	SCK–ESP	O	Serial clock output to ESP control (IC601).
24	XBBSW – DBB	O	DBB switch control output.
25	XLT–ESP	O	Latch signal output to ESP control (IC601).
26	HOLD–SW	I	Hold switch input terminal. “ L ” : HOLD ON “ H ” : HOLD OFF
27	XLMT–MD	I	Limit switch input terminal. “ L ” : Inside Track
28	XRSM–SW	I	RESUME switch input terminal. “ L ” : ON “ H ” : OFF
29	WP XDC–DT PWR	I	DC in voltage detection terminal.
30	WP XOPEN–SW	I	Door open switch input terminal. “ L ” : Close “ H ” : Open
31	WP XPLAY–SW	I	Play/pause key input terminal.
32	WP RMKEY WRMT	I	Remote control key input terminal.
33	XL/O DCT	I	LINE OUT jack detection terminal. “ L ” : Present “ H ” : No
34	XRCHG–SW	I	Rechargeable battery detection terminal. “ L ” : Present “ H ” : No
35	XAVLS–SW	I	AVLS switch input terminal.
36	R/W DSP	O	Read/Write switching signal output terminal. “ L ” : Read “ H ” : Write
37	SDT–DSP	I	SUB–Q signal input terminal.
38	SDT–DSP	O	Serial data output to DSP (IC502) and D/A C (IC301).
39	SCK–DSP	O	Clock signal to enter SUB–Q signal to DSP (IC502) and D/A C (IC301).
40	FOK–RF	I	FOK signal input terminal.
41	BUSY–DSP	I	BUSY signal input terminal from DSP (IC502).
42	BEEP–H/P	O	Beep sound output terminal.
43	INT SCOR–DSP	I	Sub code sync SO+SI input terminal.
44	INT DFCT RF	I	Wireless remote control signal input.
45	VDD (VCPU)	–	Power supply terminal.

Pin No.	Pin name	I/O	Description
46 – 49	COM 3–0	O	LCD common signal output terminal.
50	VREFH	I	Reference voltage input terminal (connect to VDD).
51	VREFL	–	Connect to ground.
52	AD ESPSL/TEST	I	Test mode terminal. “ L ” : Test mode “ H ” : Nomal mode
53	AD–KEY	I	A/D input terminal for main unit key.
54	AD–WRMT	I	A/D input terminal for remote control key.
55	AD–HI DC	I	A/D input terminal for DC IN voltage detection.
56	AD – BAT	I	Rechargeable battery/dry cell detection input.
57	AD – CHGMNT	I	A/D input terminal for charging voltage monitor.
58	AD – VCC	I	A/D input terminal for VCC voltage monitor.
59	AD – DSP OFFSET	I	A/D input terminal for DSP off-set monitor.
60	FP10	–	Not used (Open).
61 – 72	SEG 0 – 11	O	LCD segment signal output terminal.

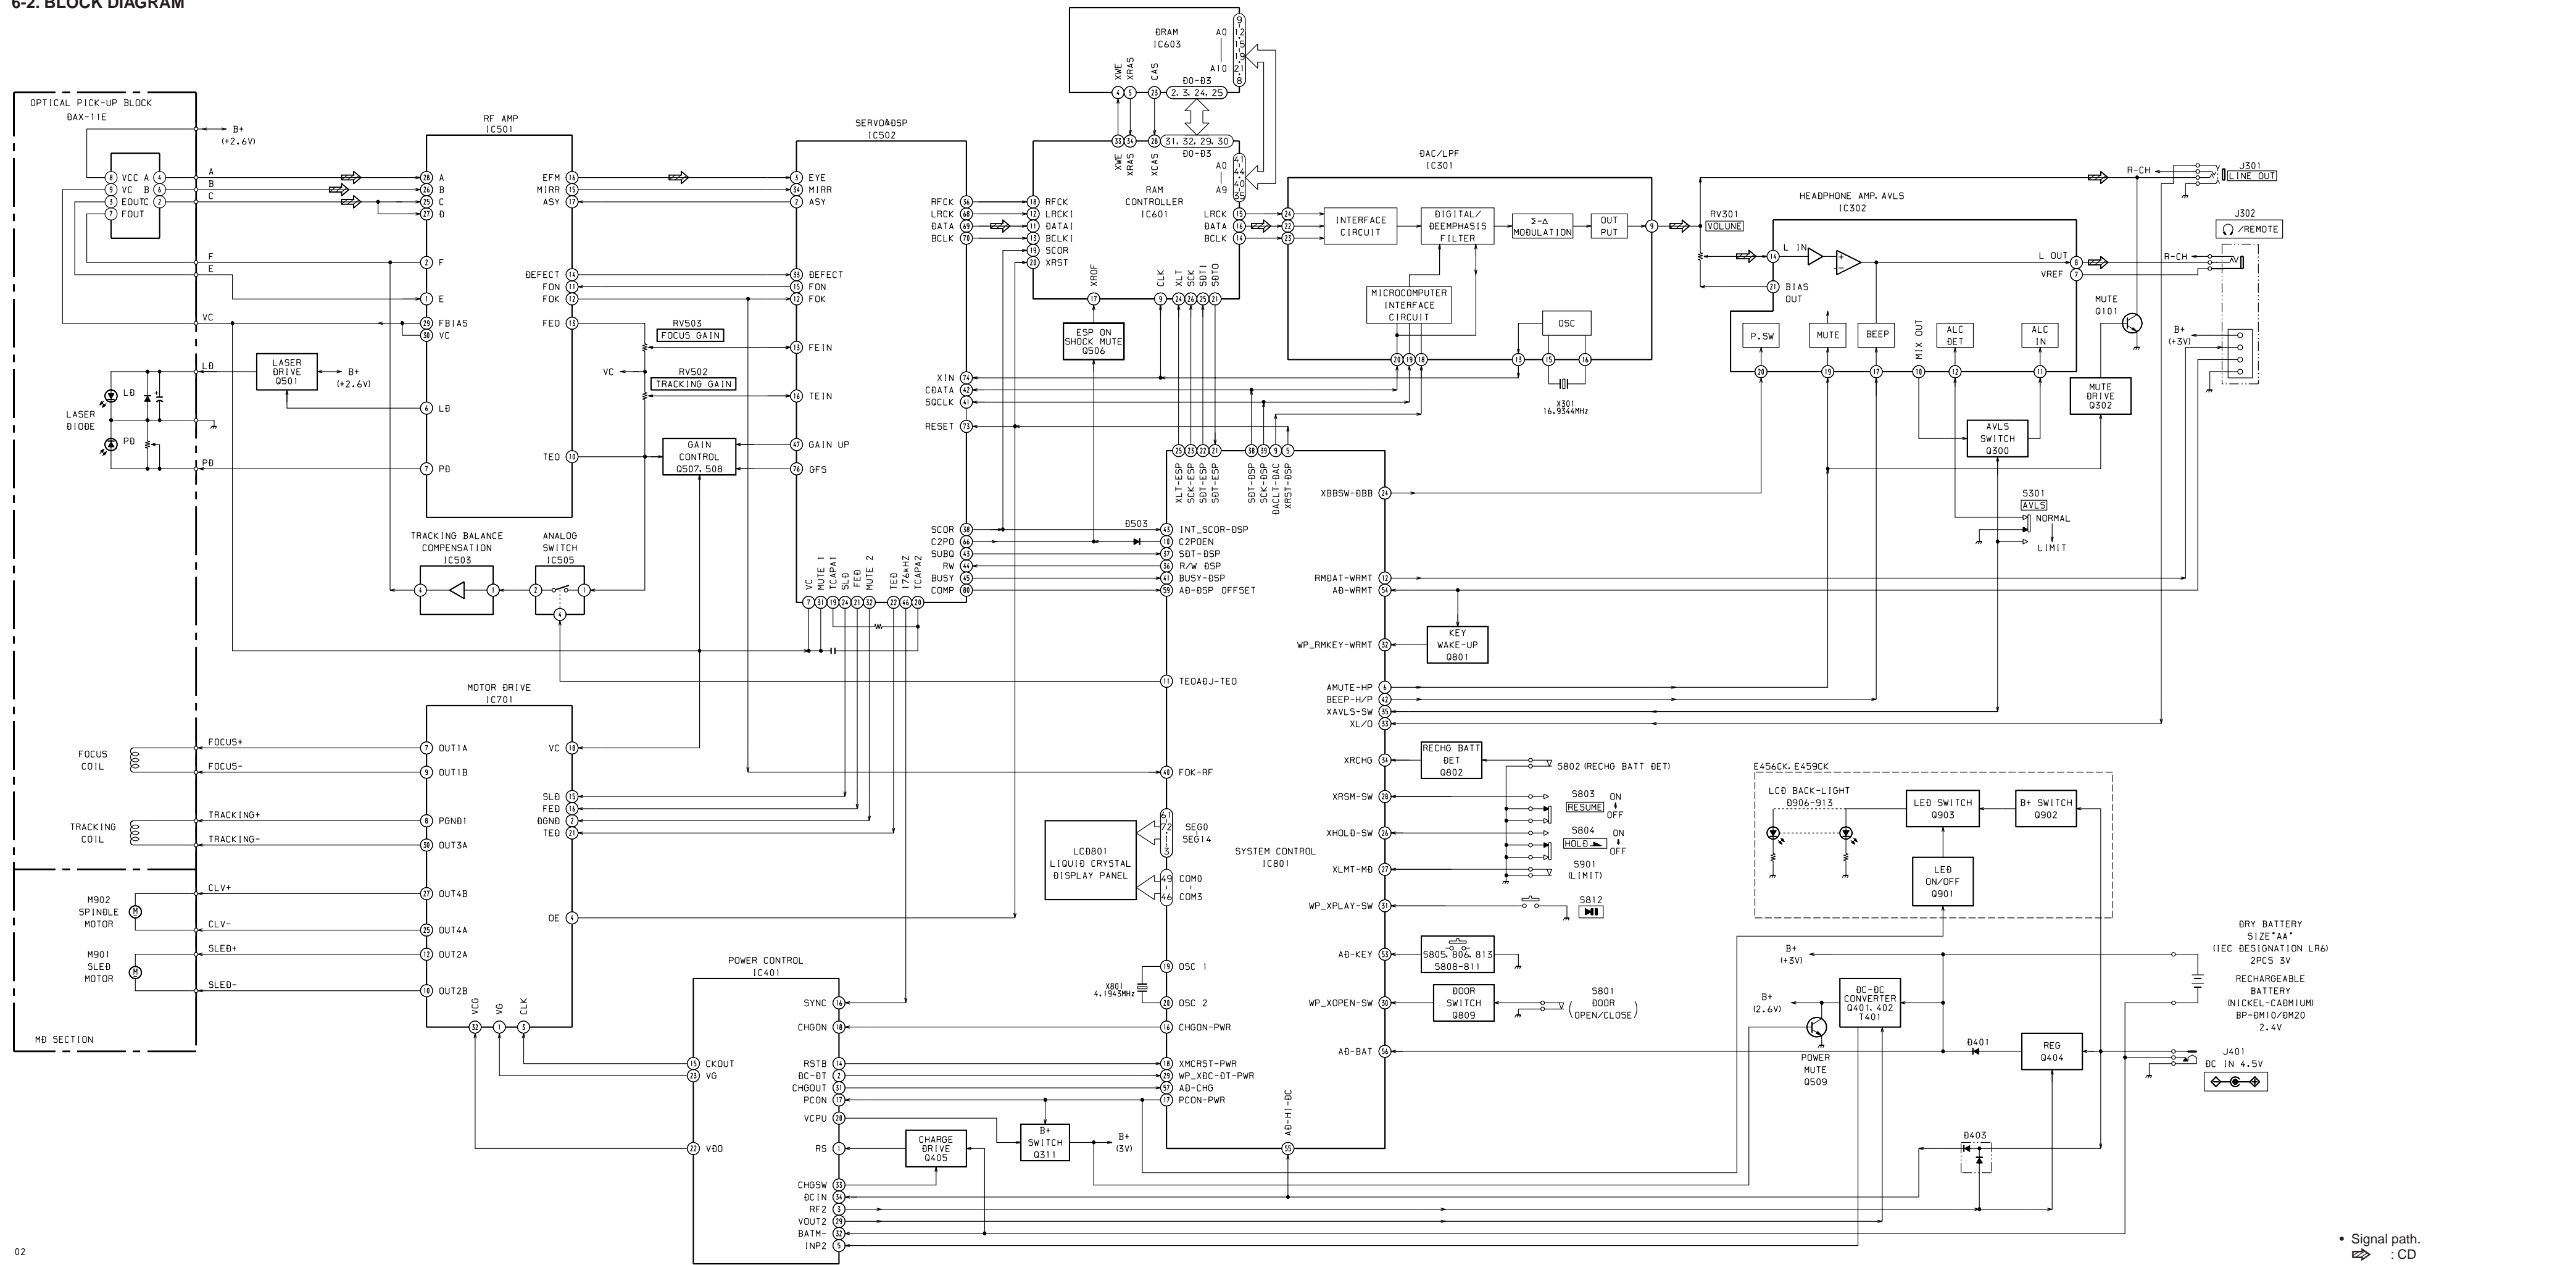





Ref. No.	Location	Ref. No.	Location
D101	F-11	IC503	D-14
D105	A-14	IC505	D-14
D201	F-10	IC601	C-10
D205	B-14	IC603	E-12
D302	G-10	IC701	E-14
D401	G-15	IC801	H-12
D402	H-14		
D403	G-15		
D407	H-4	Q101	A-14
D416	F-15	Q201	B-14
		Q300	F-6
D417	G-14	Q302	H-6
D503	D-12	Q311	H-12
D801	F-10		
D803	F-10	Q401	G-15
D804	B-14	Q402	G-15
		Q404	G-2
D805	F-9	Q405	G-2
D806	E-10	Q501	B-12
D807	F-8		
D906	I-9	Q506	C-11
D907	I-9	Q507	B-4
		Q508	B-3
D908	I-8	Q509	G-13
D909	I-9	Q801	F-10
D910	I-8		
D911	I-8	Q802	H-2
D912	I-7	Q809	H-2
		Q901	I-9
D913	I-7	Q902	I-9
		Q903	H-9
IC301	G-6		
IC302	F-7		
IC401	H-4		
IC501	C-13		
IC502	E-11		

**Caution:**

Pattern face side: (Side B)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Side A)	Parts on the parts face side seen from the parts face are indicated.

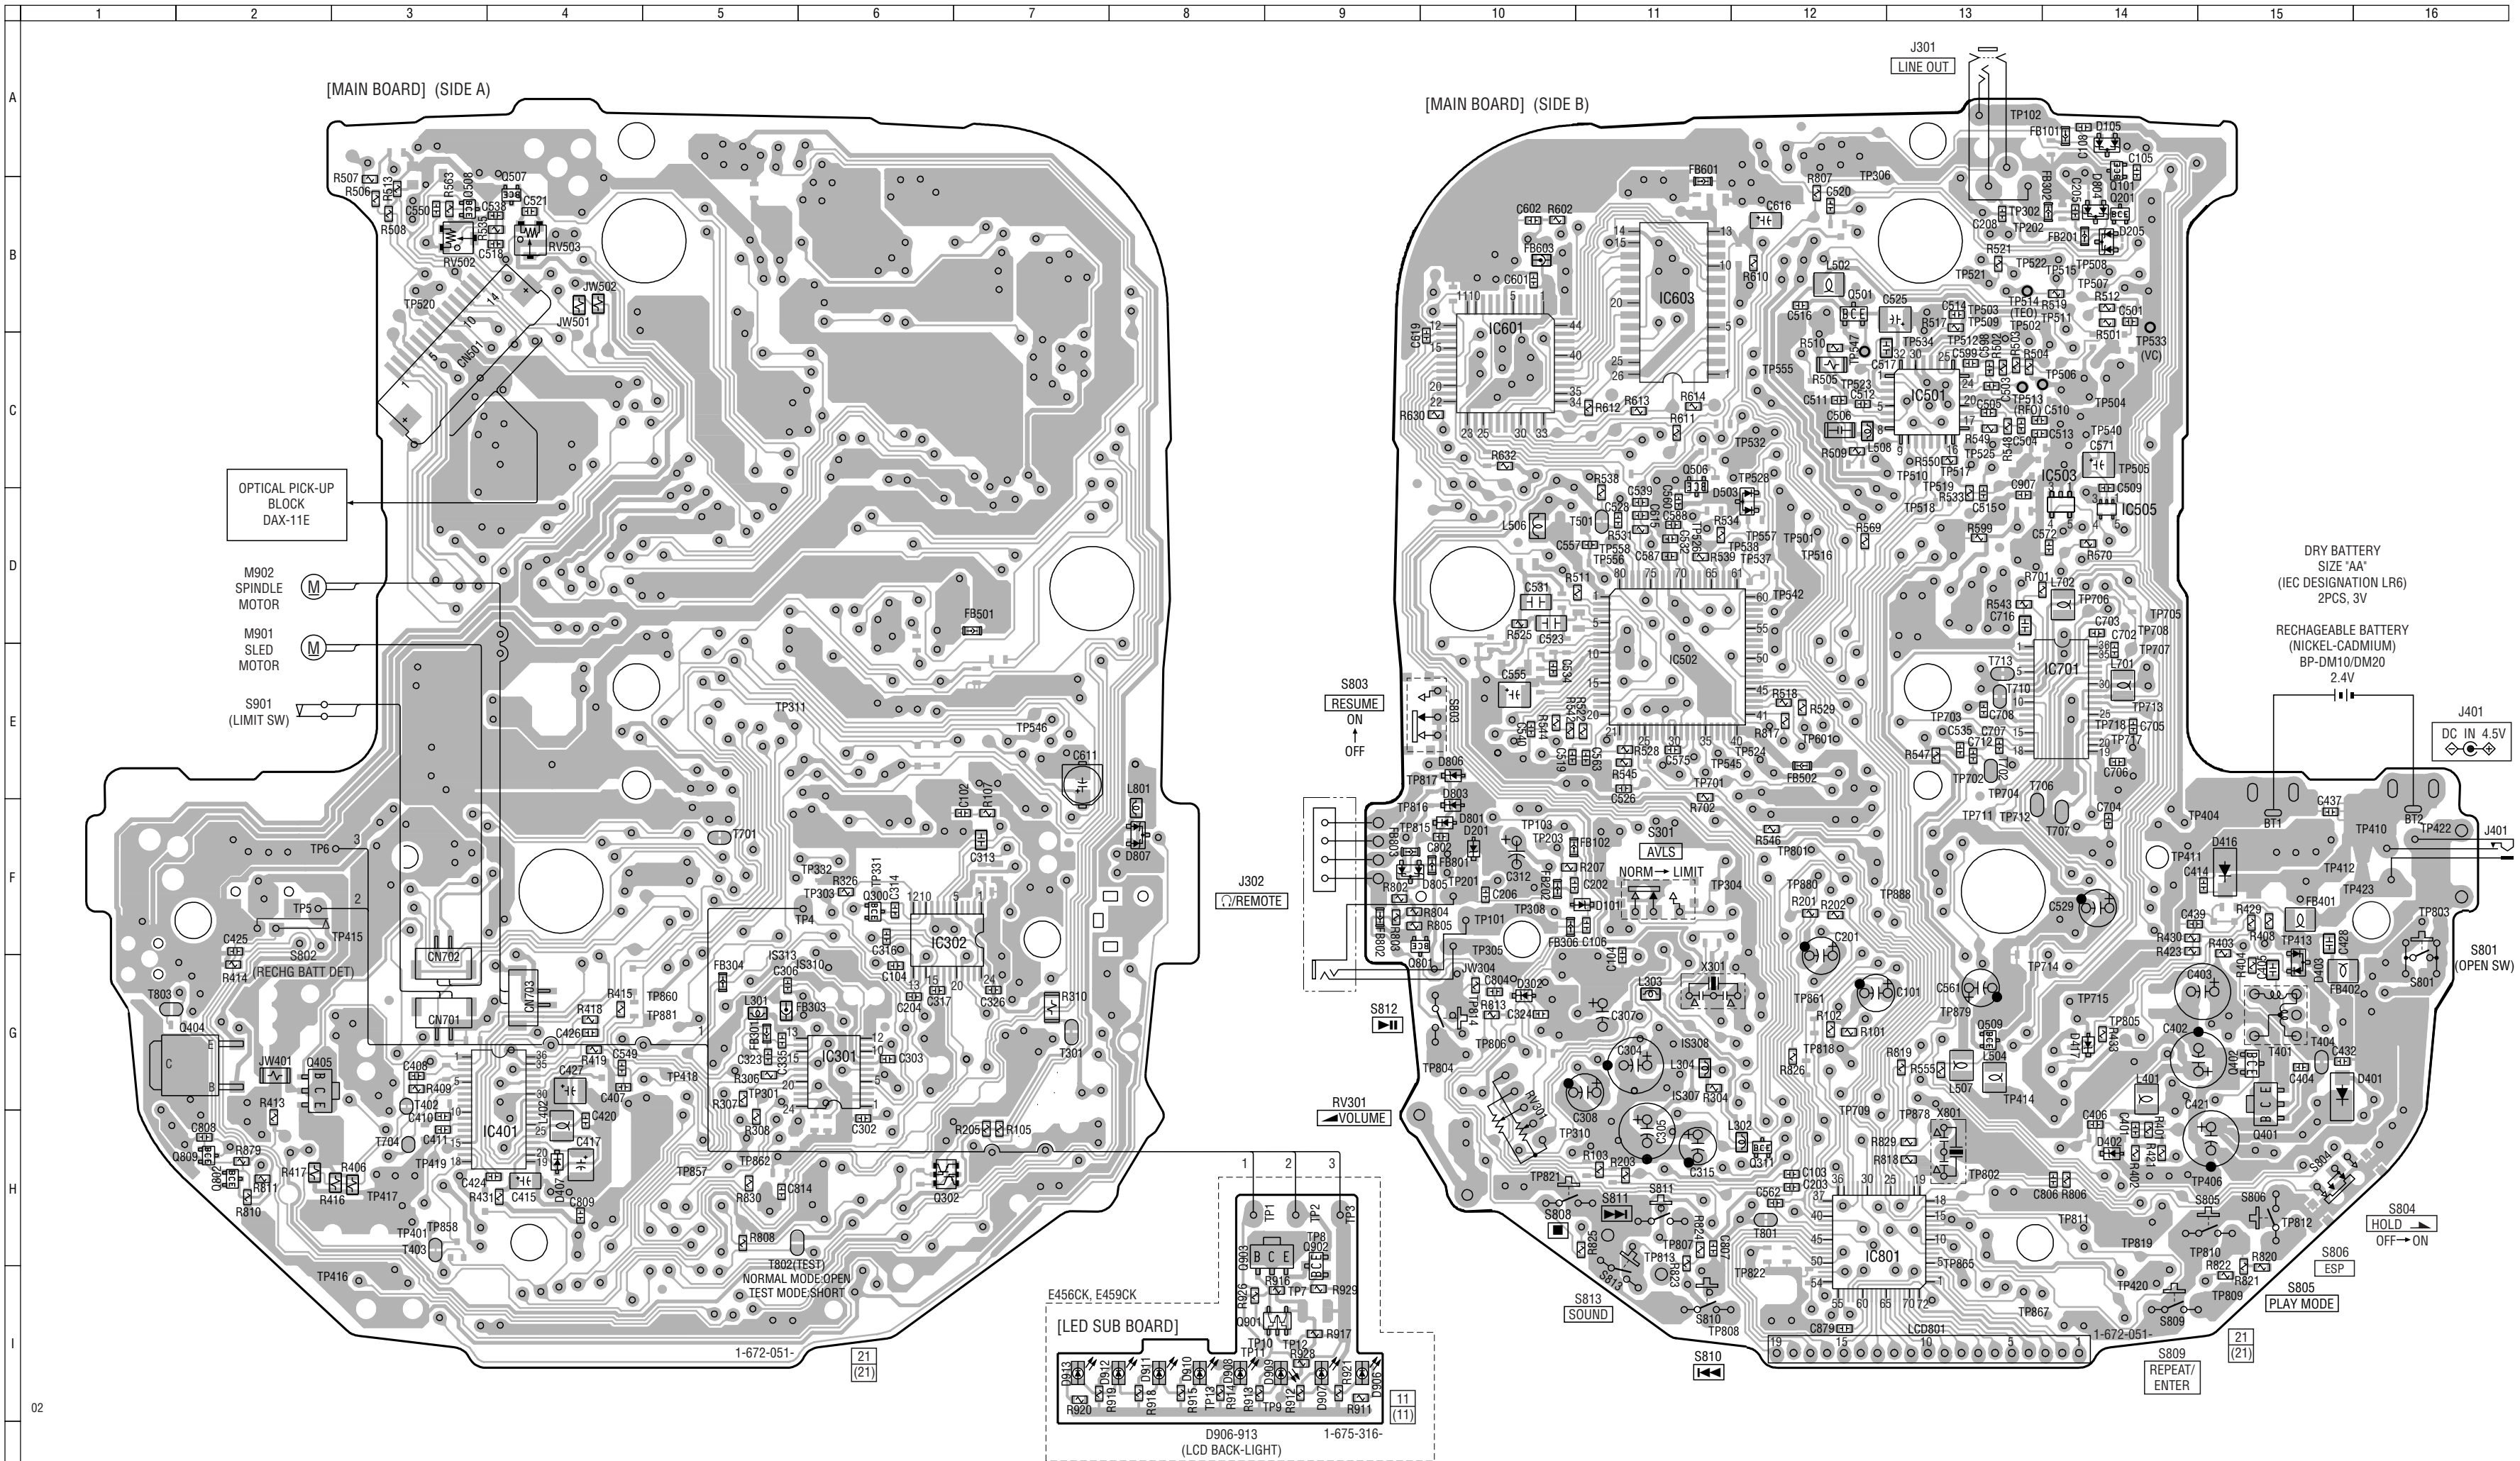




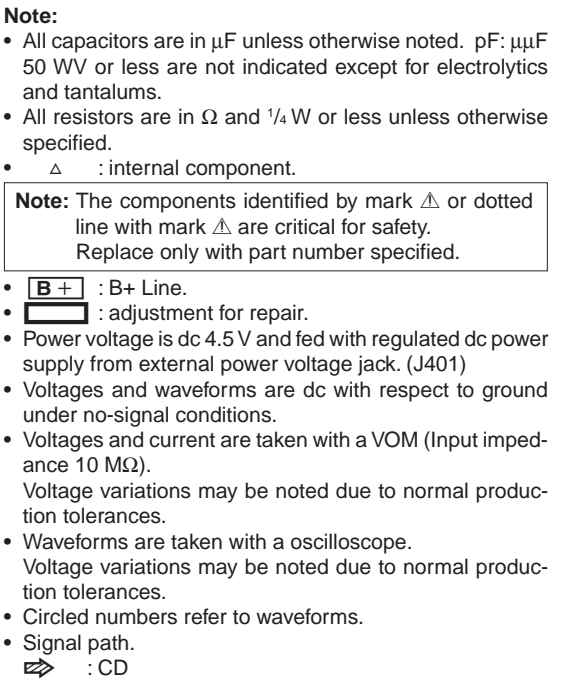




● Waveforms

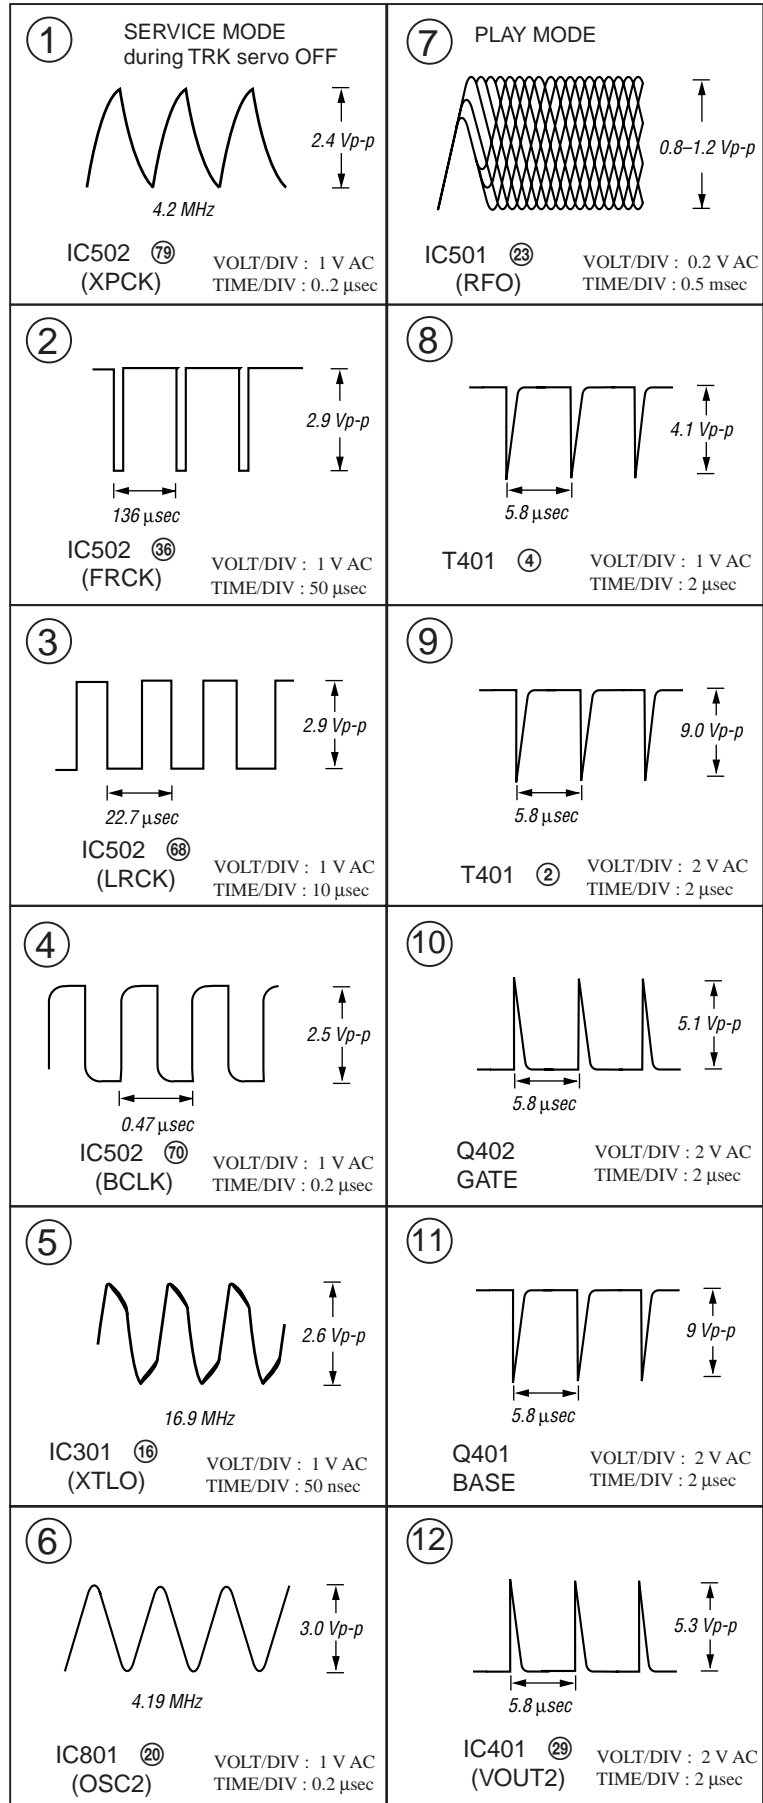


● IC Block Diagrams


IC301 TC9438FNEL

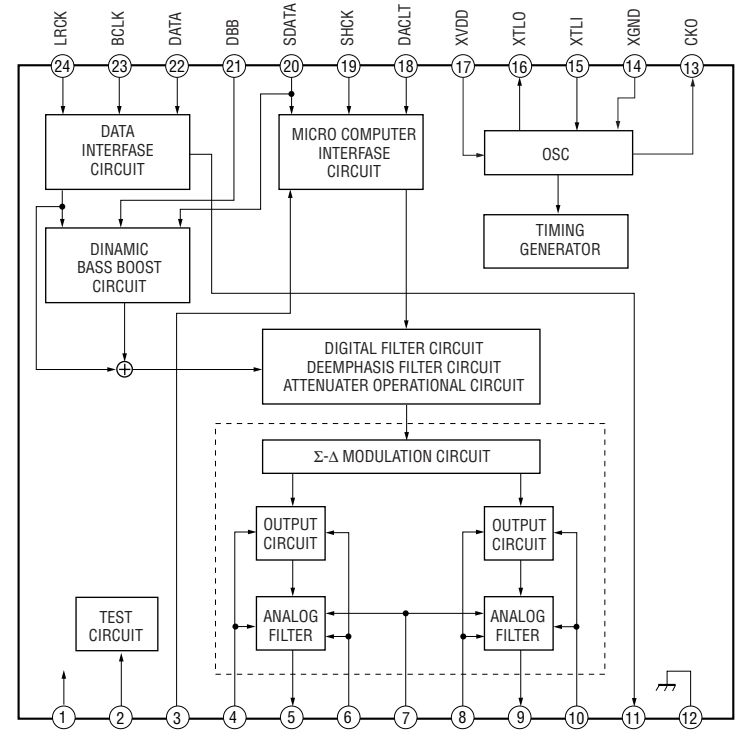


IC401 MPC18A26VMEL

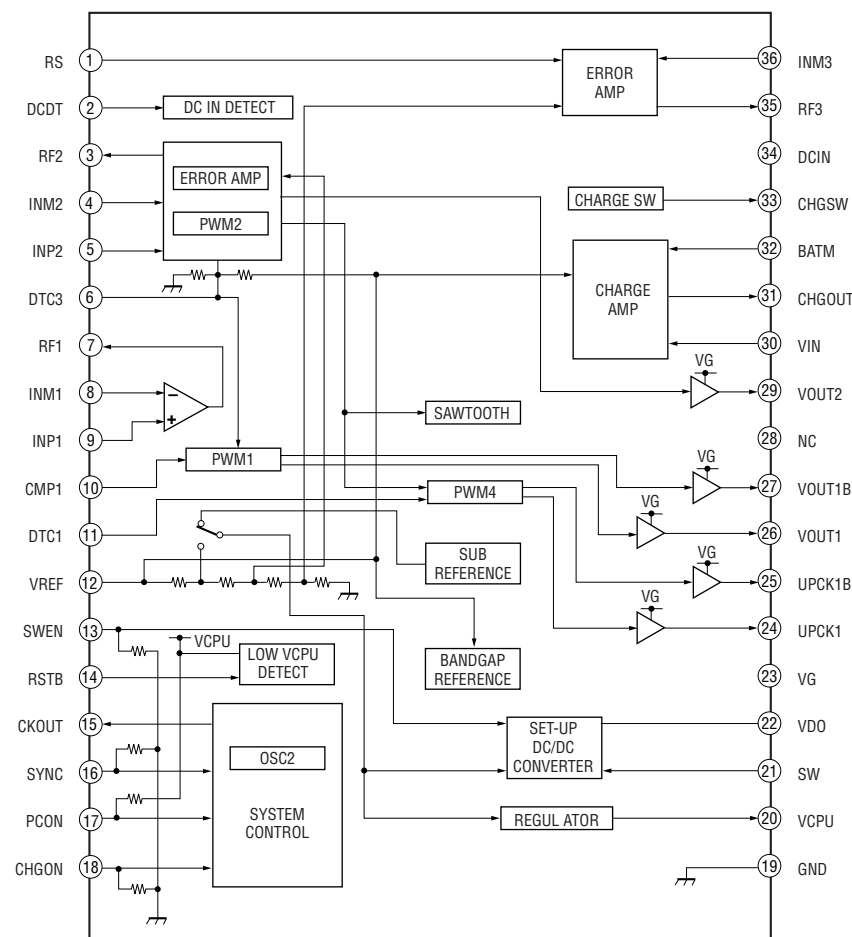


IC501 BA6386K

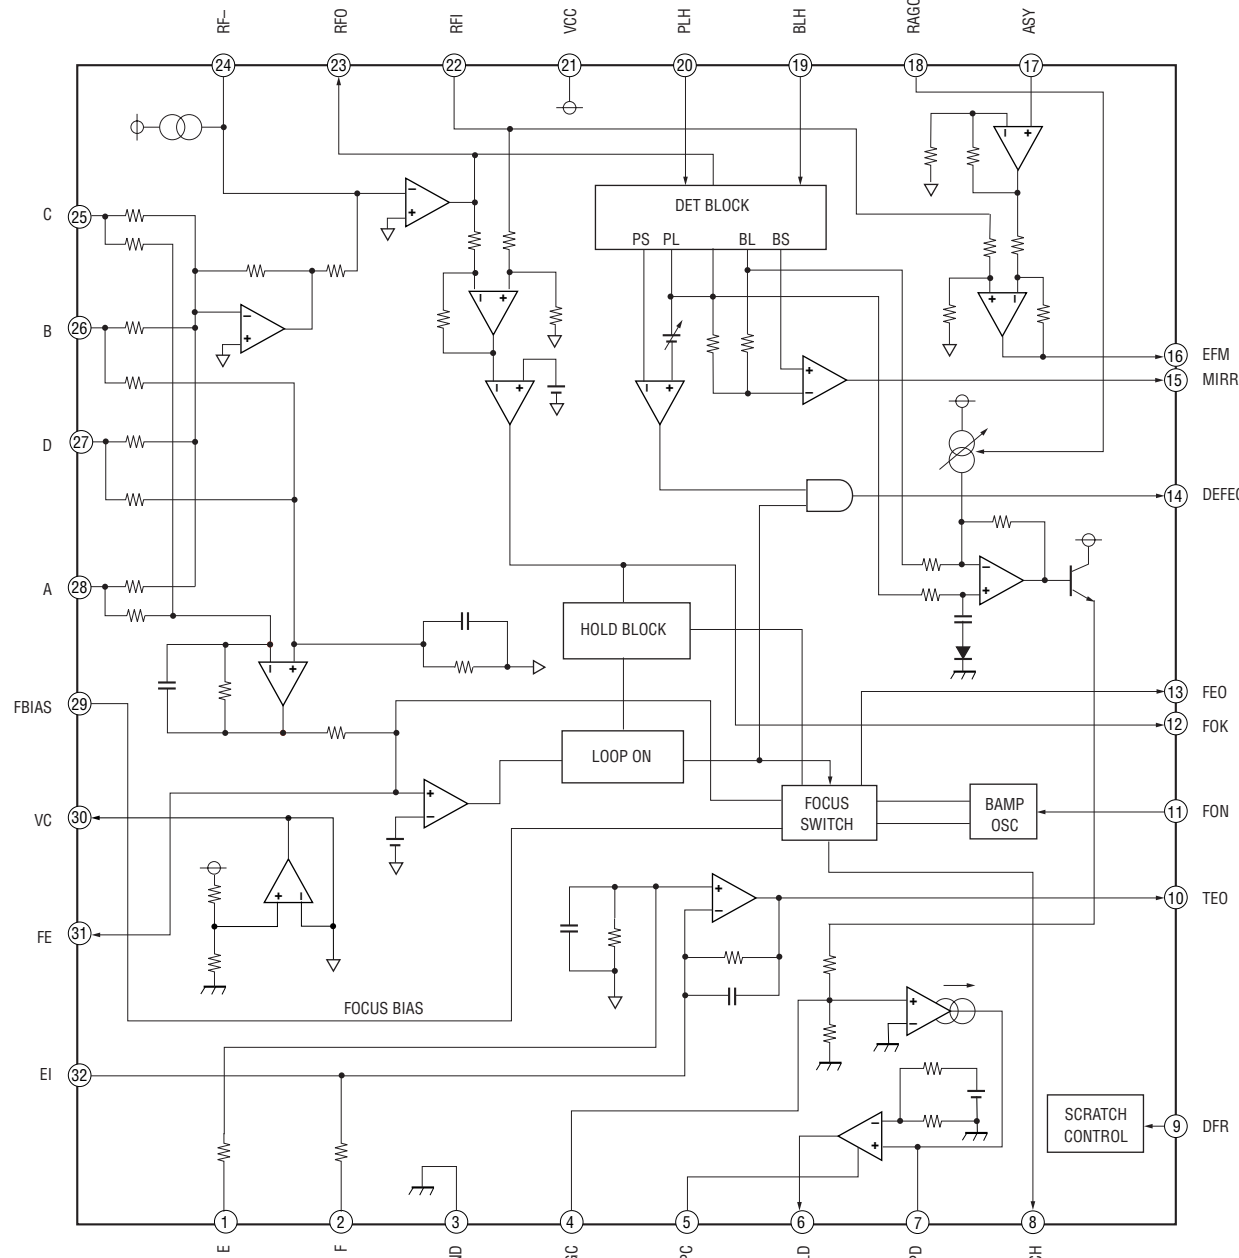


IC502 BU9326KS

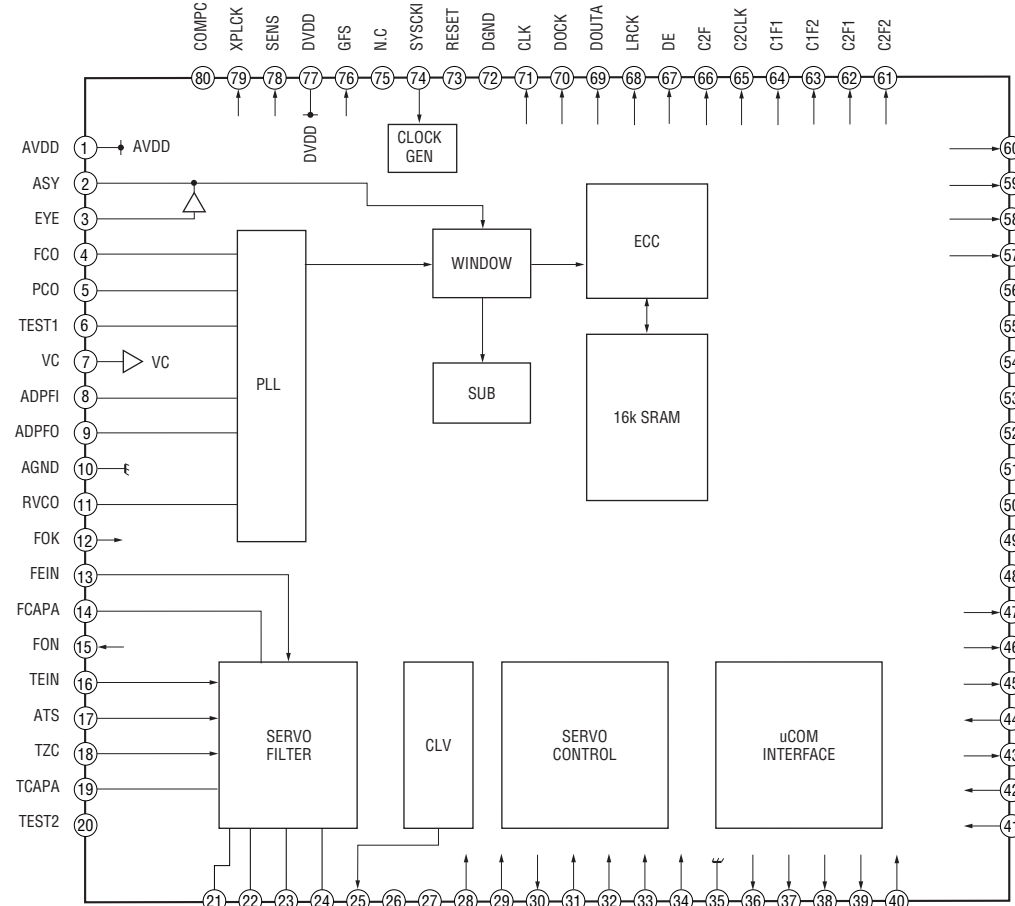

IC601 SM5902AF

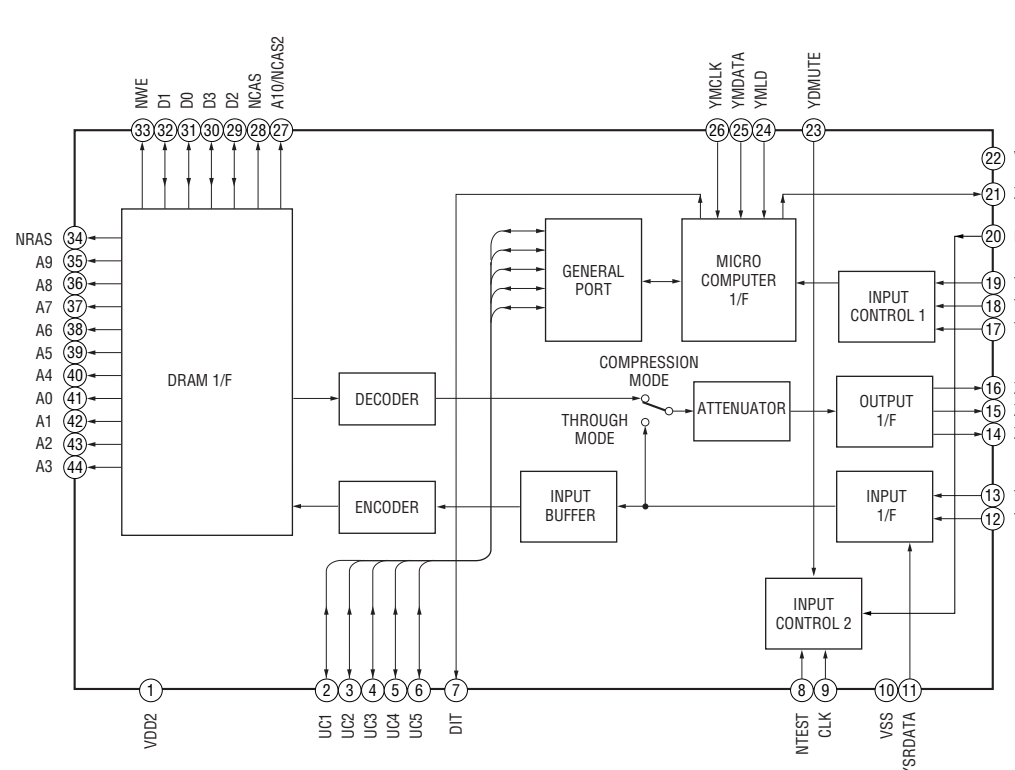

IC701 MPC17A51VMEL

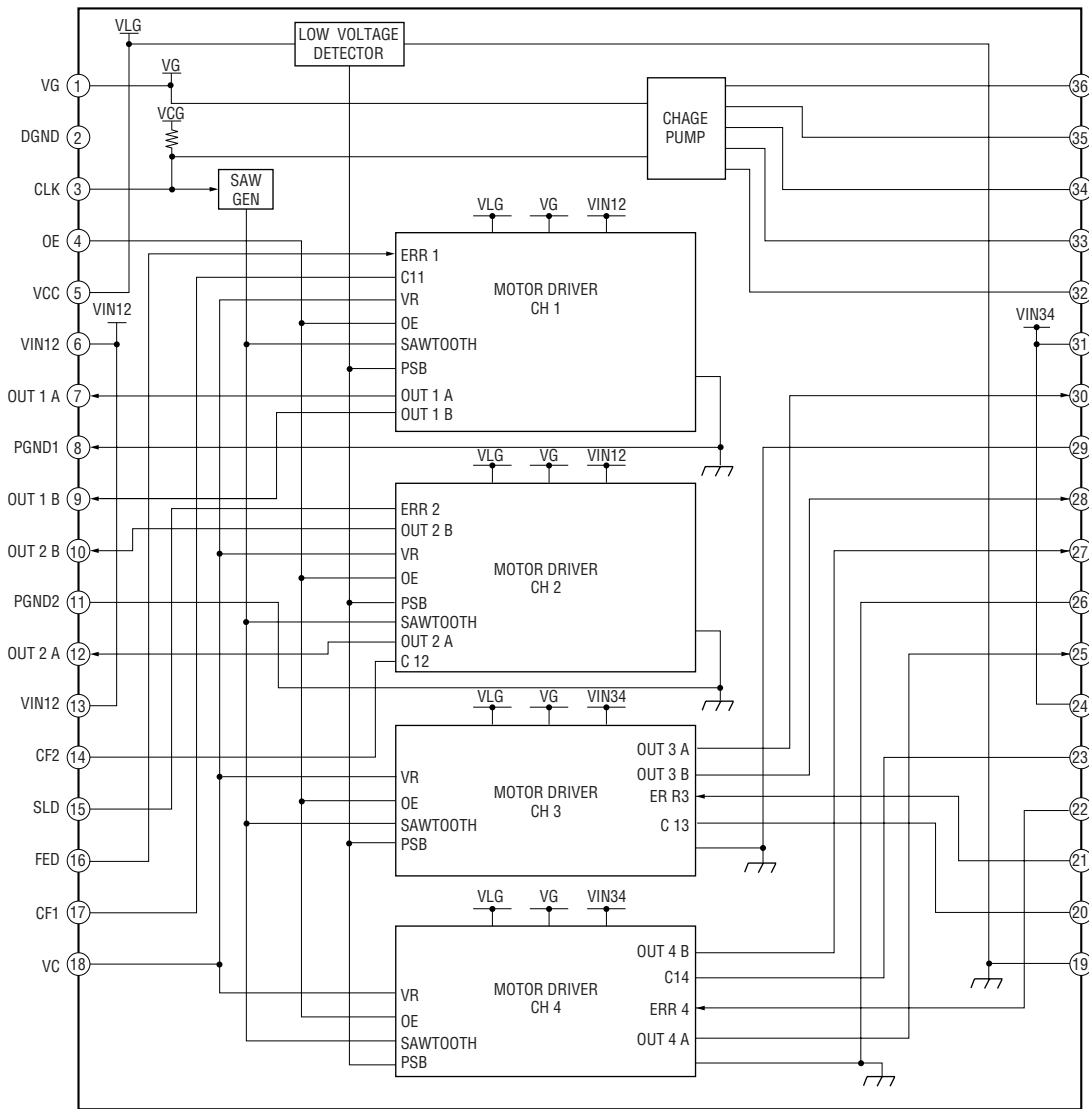

## SECTION 7

### EXPLODED VIEWS

NOTE :

- -XX, -X mean standardized parts, so they may have some difference from the original one.

- Color indication of Appearance Parts

Example :



KNOB, BALANCE (WHITE) •• (RED)

↑                      ↑  
Parts color   Cabinet's color


- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.

- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.


The components identified by mark  or dotted line with mark  are critical for safety.  
Replace only with part number specified.

## 7-1. CABINET SECTION

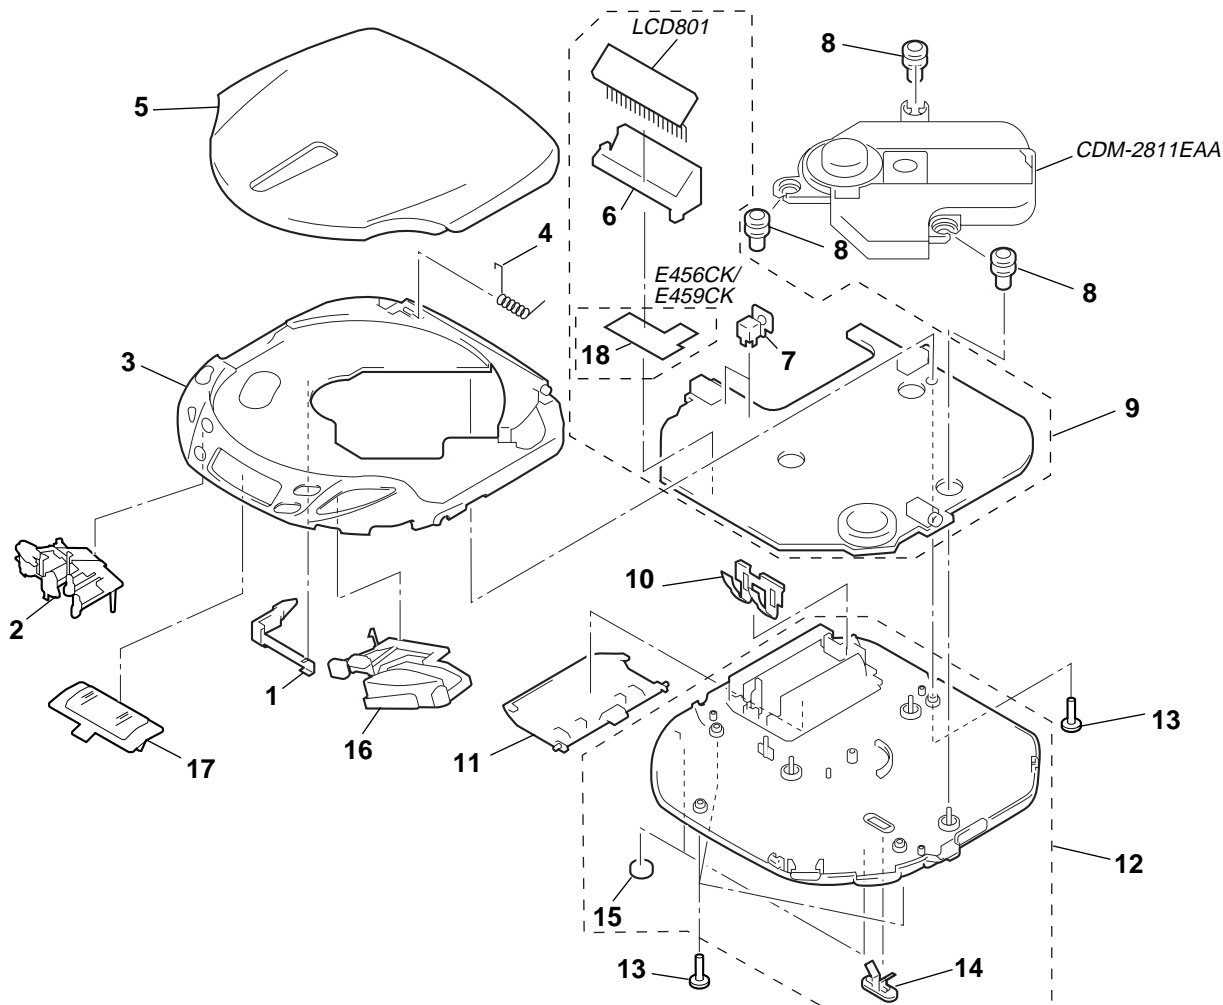

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
1	X-4950-224-1	DETECTOR ASSY		9	A-3323-281-A	MAIN BOARD, COMPLETE (E455)	
2	4-213-874-01	BUTTON (OPEN)		9	A-3323-282-A	MAIN BOARD, COMPLETE (E456CK,E459CK)	
3	4-213-871-11	CABINET (UPPER) (BLUE) (E451)		10	4-997-109-01	TERMINAL BOARD (RELAY),BATTERY	
3	4-213-871-41	CABINET (UPPER) (SILVER)		11	4-213-873-01	LID, BATTERY CASE	
4	4-994-981-01	SPRING, TORSION		12	X-4950-730-1	CABINET (LOWER) SUB ASSY	
5	X-4952-003-1	LID ASSY, UPPER (BLUE) (E451)		13	3-336-395-01	SCREW (B2X10) (G), TAPPING	
5	X-4952-004-1	LID ASSY, UPPER (SILVER) (E451)		14	4-213-879-01	KNOB (AVLS)	
5	X-4952-016-1	LID ASSY, UPPER (SILVER) (E455)		15	4-966-278-01	FOOT, RUBBER	
5	X-4952-017-1	LID ASSY, UPPER (SILVER) (E459CK)		16	4-213-875-01	BUTTON (CONTROL)	
5	X-4952-018-1	LID ASSY, UPPER (SILVER) (E456CK)		17	4-213-877-01	WINDOW (LCD)	
6	4-213-876-01	HOLDER (LCD) (E451,E455)		* 18	1-675-316-11	LED SUB BOARD (E456CK,E459CK)	
6	4-222-877-01	HOLDER (LCD) (E456CK, E459CK)		LCD801	1-803-017-11	DISPLAY PANEL, LIQUID CRYSTAL (E451, E455)	
7	4-978-695-01	PLATE, TERMINAL, BATTERY		LCD801	1-803-776-11	DISPLAY PANEL, LIQUID CRYSTAL (E456CK, E459CK)	
8	4-990-219-01	INSULATOR					
9	A-3323-270-A	MAIN BOARD, COMPLETE (E451)					

**7-2. OPTICAL PICK-UP SECTION**  
**(CDM-2811EAA)**

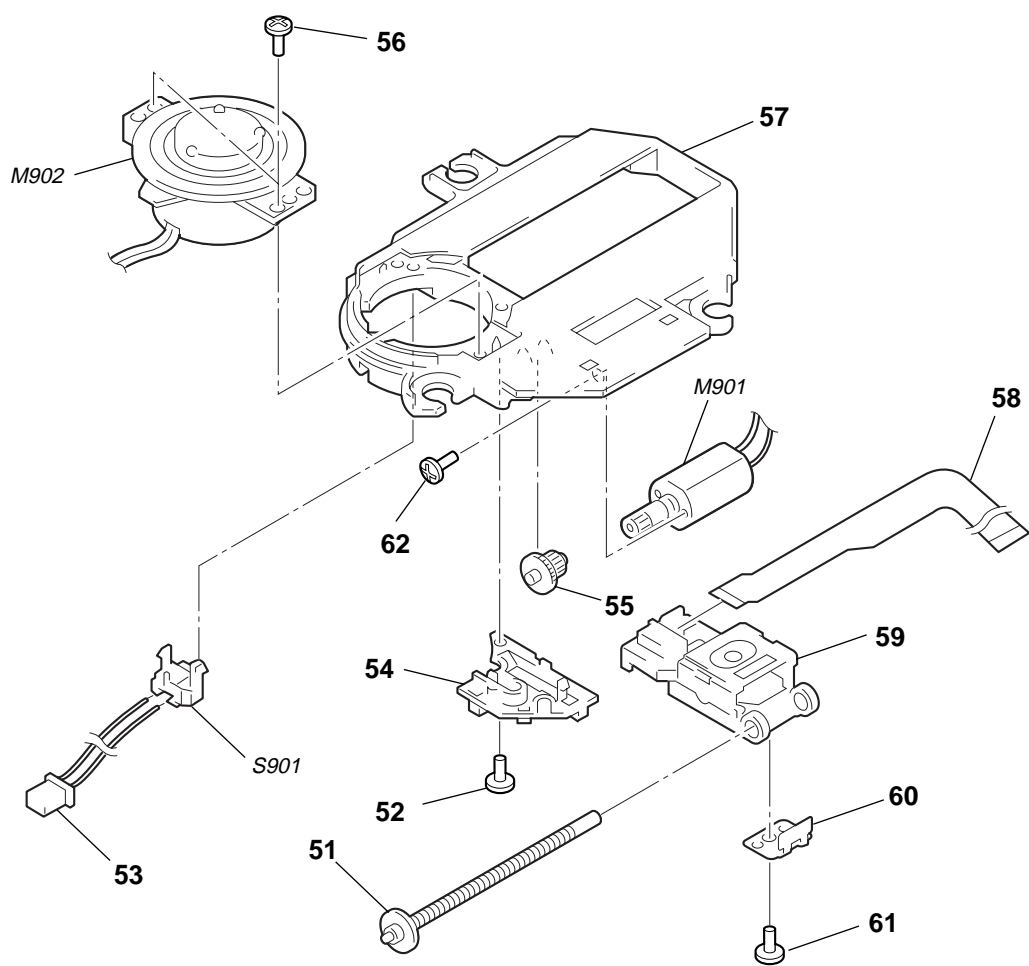

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.  
 Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	A-3303-970-A	SCREW ASSY, FEED		$\triangle$ 59	X-4950-476-1	OPTICAL PICK-UP (DAX-11E)	
52	3-318-203-11	SCREW (B1.7), TAPPING		60	4-972-165-01	RACK	
53	1-690-530-81	LEAD (WITH CONNECTOR)		61	4-973-631-01	SCREW	
54	4-972-163-04	SPRING, SLED		62	7-627-850-17	SCREW,PRECISION +P 1.4X2.5	
55	4-974-003-01	GEAR (B)		M901	A-3303-403-A	MOTOR ASSY (SLED) (INCLUDING GEAR)	
56	3-719-401-11	SCREW (B1.7), TAPPING		M902	A-3303-971-A	MOTOR ASSY, TURNTABLE (SPINDLE)	
* 57	4-984-320-01	CHASSIS		S901	1-571-099-21	SWITCH (1 KEY) (LIMIT)	
58	1-660-965-11	PC BOARD, SLIDE FLEXIBLE					

## SECTION 8 ELECTRICAL PARTS LIST

LED SUB

MAIN

### NOTE :

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms  
METAL : Metal-film resistor  
METAL OXIDE :Metal oxide-film resistor  
F : nonflammable
- Items marked “ \* ”are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- SEMICONDUCTORS  
In each case, u :  $\mu$  , for example :  
uA.... :  $\mu$  A.... , uPA.... :  $\mu$  PA....  
uPB.... :  $\mu$  PB.... , uPC.... :  $\mu$  PC....  
uPD.... :  $\mu$  PD....
- CAPACITORS  
uF :  $\mu$  F
- COILS  
uH :  $\mu$  H

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.  
Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	1-675-316-11	LED SUB BOARD (E456CK,E459CK) *****				< CAPACITOR >	
		< DIODE >		C101	1-126-794-11	ELECT 4.7uF 20%	50V
D906	8-719-061-91	LED SML-210PT (LCD BACK-LIGHT)		C102	1-164-360-11	CERAMIC CHIP 0.1uF	16V
D907	8-719-061-91	LED SML-210PT (LCD BACK-LIGHT)		C103	1-115-156-11	CERAMIC CHIP 1uF	10V
D908	8-719-061-91	LED SML-210PT (LCD BACK-LIGHT)		C104	1-162-953-11	CERAMIC CHIP 100PF 5%	50V
D909	8-719-061-91	LED SML-210PT (LCD BACK-LIGHT)		C105	1-162-953-11	CERAMIC CHIP 100PF 5%	50V
D910	8-719-061-91	LED SML-210PT (LCD BACK-LIGHT)					
		< TRANSISTOR >		C106	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
D911	8-719-061-91	LED SML-210PT (LCD BACK-LIGHT)		C108	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V
D912	8-719-061-91	LED SML-210PT (LCD BACK-LIGHT)		C201	1-126-794-11	ELECT 4.7uF 20%	50V
D913	8-719-061-91	LED SML-210PT (LCD BACK-LIGHT)		C202	1-164-360-11	CERAMIC CHIP 0.1uF	16V
		< RESISTOR >		C203	1-115-156-11	CERAMIC CHIP 1uF	10V
Q901	8-729-402-13	TRANSISTOR XN1501					
Q902	8-729-904-86	TRANSISTOR 2SB1197K-Q		C204	1-162-953-11	CERAMIC CHIP 100PF 5%	50V
Q903	8-729-807-34	TRANSISTOR 2SB1123-S		C205	1-162-953-11	CERAMIC CHIP 100PF 5%	50V
				C206	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
				C208	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V
				C302	1-164-360-11	CERAMIC CHIP 0.1uF	16V
R911	1-216-807-11	RES,CHIP 68 5% 1/16W		C303	1-164-360-11	CERAMIC CHIP 0.1uF	16V
R912	1-216-807-11	RES,CHIP 68 5% 1/16W		C304	1-124-635-00	ELECT 220uF 20%	6.3V
R913	1-216-807-11	RES,CHIP 68 5% 1/16W		C305	1-124-584-00	ELECT 100uF 20%	10V
R914	1-216-807-11	RES,CHIP 68 5% 1/16W		C306	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V
R915	1-216-807-11	RES,CHIP 68 5% 1/16W		C307	1-126-795-11	ELECT 10uF 20%	25V
R916	1-216-827-11	RES,CHIP 3.3K 5% 1/16W		C308	1-126-795-11	ELECT 10uF 20%	25V
R917	1-216-817-11	RES,CHIP 470 5% 1/16W		C312	1-128-057-11	ELECT 330uF 20%	6.3V
R918	1-216-807-11	RES,CHIP 68 5% 1/16W		C313	1-164-505-11	CERAMIC CHIP 2.2uF	16V
R919	1-216-807-11	RES,CHIP 68 5% 1/16W		C314	1-115-156-11	CERAMIC CHIP 1uF	10V
R920	1-216-807-11	RES,CHIP 68 5% 1/16W		C315	1-126-514-11	ELECT 22uF 20%	10V
R921	1-216-864-11	RES,CHIP 0 5% 1/16W		C316	1-216-864-11	METAL CHIP 0	
R926	1-216-833-91	RES,CHIP 10K 5% 1/16W		C317	1-115-156-11	CERAMIC CHIP 1uF	10V
R928	1-216-845-11	RES,CHIP 100K 5% 1/16W		C323	1-164-360-11	CERAMIC CHIP 0.1uF	16V
R929	1-216-049-91	RES,CHIP 1K 5% 1/10W		C324	1-162-953-11	CERAMIC CHIP 100PF 5%	50V
				C326	1-115-467-11	CERAMIC CHIP 0.22uF 10%	10V
				C335	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
				C401	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
				C402	1-126-785-11	ELECT 47uF 20%	10V
				C403	1-127-485-00	ELECT 33uF 20%	6.3V
				C404	1-162-923-11	CERAMIC CHIP 47PF 5%	50V
				C405	1-164-004-11	CERAMIC CHIP 0.1uF 10%	25V
				C406	1-164-360-11	CERAMIC CHIP 0.1uF	16V
				C407	1-115-156-11	CERAMIC CHIP 1uF	10V
				C408	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
				C410	1-164-360-11	CERAMIC CHIP 0.1uF	16V
				C411	1-164-360-11	CERAMIC CHIP 0.1uF	16V

A-3323-270-A MAIN BOARD, COMPLETE (E451)  
A-3323-281-A MAIN BOARD, COMPLETE (E455)  
A-3323-282-A MAIN BOARD, COMPLETE (E456CK,E459CK)  
\*\*\*\*\*

4-213-876-01 HOLDER (LCD) (E451,E455)  
4-222-877-01 HOLDER (LCD) (E456CK, E459CK)  
4-978-695-01 PLATE, TERMINAL, BATTERY

# MAIN

Ref. No.	Part No.	Description	Remark
C414	1-115-156-11	CERAMIC CHIP 1uF	10V
C415	1-135-201-11	TANTALUM CHIP 10uF	20% 4V
C417	1-104-852-11	TANTAL. CHIP 22uF	20% 6.3V
C420	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C421	1-124-635-00	ELECT 220uF	20% 6.3V
C424	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C425	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C426	1-162-953-11	CERAMIC CHIP 100PF	5% 50V
C427	1-104-852-11	TANTAL. CHIP 22uF	20% 6.3V
C428	1-164-346-11	CERAMIC CHIP 1uF	16V
C432	1-115-156-11	CERAMIC CHIP 1uF	10V
C437	1-115-156-11	CERAMIC CHIP 1uF	10V
C439	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C501	1-162-919-11	CERAMIC CHIP 22PF	5% 50V
C503	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C504	1-162-962-11	CERAMIC CHIP 470PF	10% 50V
C505	1-162-967-11	CERAMIC CHIP 0.0033uF	10% 50V
C506	1-115-565-11	CERAMIC CHIP 2.2uF	10% 10V
C509	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C510	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C511	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C512	1-115-156-11	CERAMIC CHIP 1uF	10V
C513	1-165-176-11	CERAMIC CHIP 0.047uF	10% 16V
C514	1-162-953-11	CERAMIC CHIP 100PF	5% 50V
C515	1-162-962-11	CERAMIC CHIP 470PF	10% 50V
C516	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C517	1-109-982-11	CERAMIC CHIP 1uF	10% 10V
C518	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
C519	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C520	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V
C521	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V
C523	1-115-565-11	CERAMIC CHIP 2.2uF	10% 10V
C525	1-110-569-11	TANTAL. CHIP 47uF	20% 4V
C526	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C528	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C529	1-126-513-11	ELECT 47uF	20% 4V
C531	1-115-565-11	CERAMIC CHIP 2.2uF	10% 10V
C532	1-162-953-11	CERAMIC CHIP 100PF	5% 50V
C534	1-162-921-11	CERAMIC CHIP 33PF	5% 50V
C535	1-115-156-11	CERAMIC CHIP 1uF	10V
C538	1-165-128-11	CERAMIC CHIP 0.22uF	16V
C539	1-162-919-11	CERAMIC CHIP 22PF	5% 50V
C540	1-107-826-91	CERAMIC CHIP 0.1uF	10% 16V
C549	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C550	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C555	1-110-569-11	TANTAL. CHIP 47uF	20% 4V
C557	1-115-156-11	CERAMIC CHIP 1uF	10V
C560	1-164-227-91	CERAMIC CHIP 0.022uF	10% 16V
C561	1-126-513-11	ELECT 47uF	20% 4V
C562	1-164-677-11	CERAMIC CHIP 0.033uF	10% 16V
C563	1-107-826-91	CERAMIC CHIP 0.1uF	10% 16V
C571	1-104-852-11	TANTAL. CHIP 22uF	20% 6.3V
C572	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C575	1-113-619-11	CERAMIC CHIP 0.47uF	10V
C587	1-162-959-11	CERAMIC CHIP 330PF	5% 50V
C588	1-162-953-11	CERAMIC CHIP 100PF	5% 50V
C598	1-162-915-11	CERAMIC CHIP 10PF	0.5PF 50V
C599	1-162-915-11	CERAMIC CHIP 10PF	0.5PF 50V

Ref. No.	Part No.	Description	Remark
C601	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C602	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C611	1-124-778-00	ELECT CHIP 22uF	20% 6.3V
C615	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C616	1-104-847-91	TANTALUM CHIP 22uF	20% 4V
C619	1-164-390-91	CERAMIC CHIP 330PF	5% 50V
C702	1-107-826-91	CERAMIC CHIP 0.1uF	10% 16V
C703	1-107-826-91	CERAMIC CHIP 0.1uF	10% 16V
C704	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C705	1-162-955-11	CERAMIC CHIP 150PF	5% 50V
C706	1-162-957-11	CERAMIC CHIP 220PF	5% 50V
C707	1-162-957-11	CERAMIC CHIP 220PF	5% 50V
C708	1-162-957-11	CERAMIC CHIP 220PF	5% 50V
C712	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
C716	1-164-346-11	CERAMIC CHIP 1uF	16V
C802	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C804	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
C806	1-115-156-11	CERAMIC CHIP 1uF	10V
C807	1-115-156-11	CERAMIC CHIP 1uF	10V
C808	1-115-156-11	CERAMIC CHIP 1uF	10V
C809	1-115-156-11	CERAMIC CHIP 1uF	10V
C814	1-216-864-11	METAL CHIP 0	
C879	1-115-156-11	CERAMIC CHIP 1uF	10V
C907	1-164-360-11	CERAMIC CHIP 0.1uF	16V
< CONNECTOR >			
CN501	1-566-530-11	CONNECTOR, FPC (ZIF) 14P	
* CN701	1-695-320-51	PIN, CONNECTOR (1.5MM)(SMD) 2P	
* CN702	1-695-320-31	PIN, CONNECTOR (1.5MM)(SMD) 2P	
CN703	1-695-320-21	PIN, CONNECTOR (1.5MM)(SMD) 2P	
< DIODE >			
D101	8-719-069-54	DIODE UDZS-TE17-5.1B	
D105	8-719-039-99	DIODE UMZ8.2T	
D201	8-719-069-54	DIODE UDZS-TE17-5.1B	
D205	8-719-039-99	DIODE UMZ8.2T	
D302	8-719-069-54	DIODE UDZS-TE17-5.1B	
D401	8-719-048-98	DIODE RB160L-40TE25	
D402	8-719-072-70	DIODE MA2ZD14001S0	
D403	8-719-049-10	DIODE 1SS374-TE85L	
D407	8-719-058-24	DIODE RB501V-40TE-17	
D416	8-719-048-98	DIODE RB160L-40TE25	
D417	8-719-017-58	DIODE MA8068	
D503	8-719-059-50	DIODE MA3J142D0LSO	
D801	8-719-058-24	DIODE RB501V-40TE-17	
D803	8-719-069-54	DIODE UDZS-TE17-5.1B	
D804	8-719-039-99	DIODE UMZ8.2T	
D805	8-719-039-99	DIODE UMZ8.2T	
D806	8-719-069-54	DIODE UDZS-TE17-5.1B	
D807	8-719-039-99	DIODE UMZ8.2T	
< FERRITE BEAD >			
FB101	1-500-234-22	FERRITE	
FB102	1-500-234-22	FERRITE	
FB201	1-500-234-22	FERRITE	
FB202	1-500-234-22	FERRITE	
FB301	1-500-234-22	FERRITE	



Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
FB302	1-500-234-22	FERRITE				LCD801	1-803-776-11	DISPLAY PANEL, LIQUID CRYSTAL (E456CK, E459CK)			
FB303	1-216-295-00	METAL CHIP	0								
FB304	1-500-234-22	FERRITE									
FB306	1-500-234-22	FERRITE						< TRANSISTOR >			
FB401	1-419-256-21	INDUCTOR CHIP	2.2uH								
FB402	1-419-256-21	INDUCTOR CHIP	2.2uH			Q101	8-729-209-06	TRANSISTOR	2SC4213-A		
FB501	1-500-234-22	FERRITE				Q201	8-729-209-06	TRANSISTOR	2SC4213-A		
FB502	1-500-234-22	FERRITE				Q300	8-729-028-74	TRANSISTOR	DTA114TUA-T106		
FB601	1-500-234-22	FERRITE				Q302	8-729-907-39	TRANSISTOR	IMD2		
FB603	1-216-295-00	METAL CHIP	0			Q311	8-729-422-51	TRANSISTOR	UN5110-QRS		
FB801	1-500-234-22	FERRITE				Q401	8-729-044-09	TRANSISTOR	2SD2153T100V		
FB802	1-216-864-11	METAL CHIP	0			Q402	8-729-044-10	TRANSISTOR	MMBF0201NLT1		
FB803	1-500-234-22	FERRITE				Q404	8-729-921-93	TRANSISTOR	2SB1182F5-QR		
		< IC >				Q405	8-729-920-85	TRANSISTOR	2SD1664-QR		
IC301	8-759-483-60	IC	TC9438FNEL			Q501	8-729-216-22	TRANSISTOR	2SA1162-G		
IC302	8-759-522-87	IC	TA2120FN(EL)			Q506	8-729-029-06	TRANSISTOR	DTC124EUA-T106		
IC401	8-759-483-61	IC	MPC18A26VMEL			Q507	8-729-028-74	TRANSISTOR	DTA114TUA-T106		
IC501	8-759-432-83	IC	BA6386K			Q508	8-729-028-74	TRANSISTOR	DTA114TUA-T106		
IC502	8-759-563-54	IC	BU9326KS			Q509	8-729-420-29	TRANSISTOR	2SD1819A		
IC503	8-759-528-79	IC	NJU7012F-TE2			Q801	8-729-420-29	TRANSISTOR	2SD1819A		
IC505	8-759-082-60	IC	TC7S66FU			Q802	8-729-420-29	TRANSISTOR	2SD1819A		
IC601	8-759-484-37	IC	SM5902AF					< RESISTOR >			
IC603	8-759-538-44	IC	MSM51V17400D-10TK-FS			R101	1-216-813-11	RES,CHIP	220	5%	1/16W
IC701	8-759-483-62	IC	MPC17A51VMEL			R102	1-216-845-11	RES,CHIP	100K	5%	1/16W
IC801	8-759-639-93	IC	MC68HC05L15SC442720CPB			R103	1-216-841-11	RES,CHIP	47K	5%	1/16W
		< JACK >				R105	1-216-821-11	RES,CHIP	1K	5%	1/16W
J301	1-778-696-11	JACK (LINE OUT)				R107	1-216-793-11	RES,CHIP	4.7	5%	1/16W
J302	1-580-680-11	JACK (□ / REMOTE)				R201	1-216-813-11	RES,CHIP	220	5%	1/16W
J401	1-778-153-21	JACK,DC(POLARITY UNIFIED TYPE)				R202	1-216-845-11	RES,CHIP	100K	5%	1/16W
		(DC IN 4.5V)				R203	1-216-841-11	RES,CHIP	47K	5%	1/16W
		< JUMPER RESISTOR >				R205	1-216-821-11	RES,CHIP	1K	5%	1/16W
JW304	1-216-864-11	METAL CHIP	0	5%	1/16W	R207	1-216-793-11	RES,CHIP	4.7	5%	1/16W
JW401	1-216-296-00	METAL CHIP	0	5%	1/8W	R304	1-216-803-11	RES,CHIP	33	5%	1/16W
JW501	1-216-295-00	METAL CHIP	0	5%	1/10W	R306	1-216-864-11	RES,CHIP	0	5%	1/16W
JW502	1-216-295-00	METAL CHIP	0	5%	1/10W	R307	1-216-821-11	RES,CHIP	1K	5%	1/16W
		< COIL >				R308	1-216-864-11	RES,CHIP	0	5%	1/16W
L301	1-469-034-11	INDUCTOR	4.7uH			R310	1-216-142-00	RES,CHIP	4.7	5%	1/8W
L302	1-414-821-11	INDUCTOR	4.7uH			R312	1-216-815-11	RES,CHIP	330	5%	1/16W
L303	1-414-821-11	INDUCTOR	4.7uH			R326	1-216-853-11	RES,CHIP	470K	5%	1/16W
L304	1-414-821-11	INDUCTOR	4.7uH			R401	1-218-911-11	METAL CHIP	470K	0.50%	1/16W
L401	1-414-267-11	INDUCTOR	10uH			R402	1-218-899-11	METAL CHIP	150K	0.50%	1/16W
L402	1-414-404-11	INDUCTOR	100uH			R403	1-216-825-11	RES,CHIP	2.2K	5%	1/16W
L502	1-414-267-11	INDUCTOR	10uH			R404	1-216-799-11	RES,CHIP	15	5%	1/16W
L504	1-414-267-11	INDUCTOR	10uH			R406	1-216-304-11	RES,CHIP	3.3	5%	1/10W
L506	1-414-267-11	INDUCTOR	10uH			R408	1-216-809-11	RES,CHIP	100	5%	1/16W
L507	1-414-267-11	INDUCTOR	10uH			R409	1-216-837-11	RES,CHIP	22K	5%	1/16W
L508	1-216-295-00	METAL CHIP	0			R413	1-216-845-11	RES,CHIP	100K	5%	1/16W
L701	1-414-402-11	INDUCTOR	47uH			R414	1-216-845-11	RES,CHIP	100K	5%	1/16W
L702	1-414-402-11	INDUCTOR	47uH			R415	1-216-815-11	RES,CHIP	330	5%	1/16W
L801	1-414-916-11	FERRITE	0uH			R416	1-216-298-00	RES,CHIP	2.2	5%	1/10W
		< LIQUID CRYSTAL DISPLAY >				R417	1-216-298-00	RES,CHIP	2.2	5%	1/10W
LCD801	1-803-017-11	DISPLAY PANEL, LIQUID CRYSTAL (E451, E455)				R418	1-216-864-11	RES,CHIP	0	5%	1/16W
						R419	1-216-849-11	RES,CHIP	220K	5%	1/16W
						R421	1-216-833-91	RES,CHIP	10K	5%	1/16W
						R423	1-216-853-11	RES,CHIP	470K	5%	1/16W
						R429	1-218-895-11	METAL CHIP	100K	0.50%	1/16W
						R430	1-218-883-11	METAL CHIP	33K	0.50%	1/16W

# MAIN

Ref. No.	Part No.	Description			Remark
R431	1-216-864-11	RES,CHIP	0	5%	1/16W
R433	1-216-821-11	RES,CHIP	1K	5%	1/16W
R501	1-216-825-11	RES,CHIP	2.2K	5%	1/16W
R502	1-216-827-11	RES,CHIP	3.3K	5%	1/16W
R503	1-216-829-11	RES,CHIP	4.7K	5%	1/16W
R504	1-216-839-11	RES,CHIP	33K	5%	1/16W
R505	1-216-142-00	RES,CHIP	4.7	5%	1/8W
R506	1-216-833-91	RES,CHIP	10K	5%	1/16W
R507	1-216-829-11	RES,CHIP	4.7K	5%	1/16W
R508	1-216-833-91	RES,CHIP	10K	5%	1/16W
R509	1-216-835-11	RES,CHIP	15K	5%	1/16W
R510	1-216-829-11	RES,CHIP	4.7K	5%	1/16W
R511	1-216-833-91	RES,CHIP	10K	5%	1/16W
R512	1-216-833-91	RES,CHIP	10K	5%	1/16W
R513	1-216-829-11	RES,CHIP	4.7K	5%	1/16W
R517	1-216-838-11	RES,CHIP	27K	5%	1/16W
R518	1-216-864-11	RES,CHIP	0	5%	1/16W
R519	1-216-831-11	RES,CHIP	6.8K	5%	1/16W
R521	1-216-827-11	RES,CHIP	3.3K	5%	1/16W
R522	1-216-833-91	RES,CHIP	10K	5%	1/16W
R525	1-216-821-11	RES,CHIP	1K	5%	1/16W
R528	1-216-829-11	RES,CHIP	4.7K	5%	1/16W
R529	1-216-864-11	RES,CHIP	0	5%	1/16W
R531	1-216-833-91	RES,CHIP	10K	5%	1/16W
R533	1-216-841-11	RES,CHIP	47K	5%	1/16W
R534	1-216-833-91	RES,CHIP	10K	5%	1/16W
R535	1-216-829-11	RES,CHIP	4.7K	5%	1/16W
R538	1-216-833-91	RES,CHIP	10K	5%	1/16W
R539	1-216-864-11	RES,CHIP	0	5%	1/16W
R542	1-216-851-11	RES,CHIP	330K	5%	1/16W
R543	1-216-864-11	RES,CHIP	0	5%	1/16W
R544	1-216-849-11	RES,CHIP	220K	5%	1/16W
R545	1-216-849-11	RES,CHIP	220K	5%	1/16W
R546	1-216-825-11	RES,CHIP	2.2K	5%	1/16W
R547	1-216-843-11	RES,CHIP	68K	5%	1/16W
R548	1-216-825-11	RES,CHIP	2.2K	5%	1/16W
R549	1-216-833-91	RES,CHIP	10K	5%	1/16W
R550	1-216-864-11	RES,CHIP	0	5%	1/16W
R555	1-216-845-11	RES,CHIP	100K	5%	1/16W
R563	1-216-845-11	RES,CHIP	100K	5%	1/16W
R569	1-216-843-11	RES,CHIP	68K	5%	1/16W
R570	1-216-841-11	RES,CHIP	47K	5%	1/16W
R599	1-216-851-11	RES,CHIP	330K	5%	1/16W
R602	1-216-833-91	RES,CHIP	10K	5%	1/16W
R610	1-216-864-11	RES,CHIP	0	5%	1/16W
R611	1-216-821-11	RES,CHIP	1K	5%	1/16W
R612	1-216-821-11	RES,CHIP	1K	5%	1/16W
R613	1-216-821-11	RES,CHIP	1K	5%	1/16W
R614	1-216-821-11	RES,CHIP	1K	5%	1/16W
R630	1-216-864-11	RES,CHIP	0	5%	1/16W
R632	1-216-864-11	RES,CHIP	0	5%	1/16W
R701	1-216-864-11	RES,CHIP	0	5%	1/16W
R702	1-216-825-11	RES,CHIP	2.2K	5%	1/16W
R802	1-216-833-91	RES,CHIP	10K	5%	1/16W
R803	1-216-821-11	RES,CHIP	1K	5%	1/16W
R804	1-216-853-11	RES,CHIP	470K	5%	1/16W
R805	1-216-861-11	RES,CHIP	2.2M	5%	1/16W
R806	1-216-821-11	RES,CHIP	1K	5%	1/16W

Ref. No.	Part No.	Description			Remark
R807	1-216-821-11	RES,CHIP	1K	5%	1/16W
R808	1-216-851-11	RES,CHIP	330K	5%	1/16W
R810	1-216-857-11	RES,CHIP	1M	5%	1/16W
R811	1-216-857-11	RES,CHIP	1M	5%	1/16W
R813	1-216-833-91	RES,CHIP	10K	5%	1/16W
R817	1-216-821-11	RES,CHIP	1K	5%	1/16W
R818	1-216-857-11	RES,CHIP	1M	5%	1/16W
R819	1-216-821-11	RES,CHIP	1K	5%	1/16W
R820	1-216-831-11	RES,CHIP	6.8K	5%	1/16W
R821	1-216-829-11	RES,CHIP	4.7K	5%	1/16W
R822	1-216-827-11	RES,CHIP	3.3K	5%	1/16W
R823	1-216-825-11	RES,CHIP	2.2K	5%	1/16W
R824	1-216-823-11	RES,CHIP	1.5K	5%	1/16W
R825	1-216-821-11	RES,CHIP	1K	5%	1/16W
R826	1-216-821-11	RES,CHIP	1K	5%	1/16W
R829	1-216-864-11	RES,CHIP	0	5%	1/16W
R830	1-216-864-11	RES,CHIP	0	5%	1/16W
R879	1-216-857-11	RES,CHIP	1M	5%	1/16W
< VARIABLE RESISTOR >					
RV301	1-223-609-21	RES, VAR, CARBON 10K/10K (▲ VOLUME)			
RV502	1-223-587-11	RES, ADJ, CARBON 22K (TRACKING GAIN)			
RV503	1-223-587-11	RES, ADJ, CARBON 22K (FOCUS GAIN)			
< SWITCH >					
S301	1-762-078-11	SWITCH, SLIDE (AVLS)			
S801	1-762-822-11	SWITCH, PUSH (1 KEY) (OPEN SW)			
S802	1-571-754-31	SWITCH, PUSH (1 KEY) (RECHG BAT DET)			
S803	1-762-078-11	SWITCH, SLIDE (RESUME)			
S804	1-762-078-11	SWITCH, SLIDE (HOLD ➡)			
S805	1-571-760-11	SWITCH, KEYBOARD (PLAY MODE)			
S806	1-571-760-11	SWITCH, KEYBOARD (ESP)			
S808	1-571-760-11	SWITCH, KEYBOARD (■)			
S809	1-571-760-11	SWITCH, KEYBOARD (REPEAT/ENTER)			
S810	1-571-760-11	SWITCH, KEYBOARD (⏮)			
S811	1-571-760-11	SWITCH, KEYBOARD (⏭)			
S812	1-571-760-11	SWITCH, KEYBOARD (⏮)			
S813	1-554-088-00	SWITCH, KEY BOARD (SOUND)			
< TRANSFORMER >					
T401	1-475-573-11	TRANSFORMER, DC-DC CONVERTER			
< VIBRATOR >					
X301	1-760-307-11	VIBRATOR, CERAMIC (16.9MHz)			
X801	1-577-101-11	VIBRATOR, CERAMIC (4.1943MHz)			
*****					
MISCELLANEOUS					
*****					
53	1-690-530-81	LEAD (WITH CONNECTOR)			
58	1-660-965-11	PC BOARD, SLIDE FLEXIBLE			
△ 59	X-4950-476-1	OPTICAL PICK-UP (DAX-11E)			
LCD801	1-803-017-11	DISPLAY PANEL, LIQUID CRYSTAL (E451, E455)			

The components identified by mark △ or dotted line with mark △ are critical for safety.  
Replace only with part number specified.



Ref. No.	Part No.	Description	Remark
LCD801	1-803-776-11	DISPLAY PANEL, LIQUID CRYSTAL (E456CK, E459CK)	
M901	A-3303-403-A	MOTOR ASSY (SLED) (INCLUDING GEAR)	
M902	A-3303-971-A	MOTOR ASSY, TURNTABLE (SPINDLE)	
S901	1-571-099-21	SWITCH (1 KEY) (LIMIT)	

\*\*\*\*\*

#### ACCESSORIES & PACKING MATERIALS

\*\*\*\*\*

	1-251-696-11	CONNECTING PACK, CAR (E456CK,E459CK)
△	1-467-009-21	ADAPTOR, AC (AC-E455)
	1-475-603-11	REMOTE CONTROL UNIT (E455,E459CK)
	1-528-444-74	BATTERY PACK (BP-DM10) (E455,E459CK)
△	1-532-433-11	FUSE, GLASS TUBE (1A) (E456CK,E459CK)
△	1-533-689-11	FUSE, GLASS CYLINDRICAL(DIA.5) (1A) (E456CK,E459CK)
	1-784-619-11	CORD DCC-E2455//M SET (E456CK,E459CK)
	1-784-619-11	CORD, CAR BATTERY (E459CK)
	3-856-479-21	MANUAL, INSTRUCTION (ENGLISH) (E456CK,E459CK)
	3-867-525-11	MANUAL, INSTRUCTION (ENGLISH)
	8-953-276-90	HEADPHONE MDR-24SP SET (E455,E459CK)
	8-953-342-93	HEADPHONE MDR-24/1 SET (E451,E456CK)

The components identified by mark △ or dotted line with mark △ are critical for safety.  
Replace only with part number specified.

